


ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

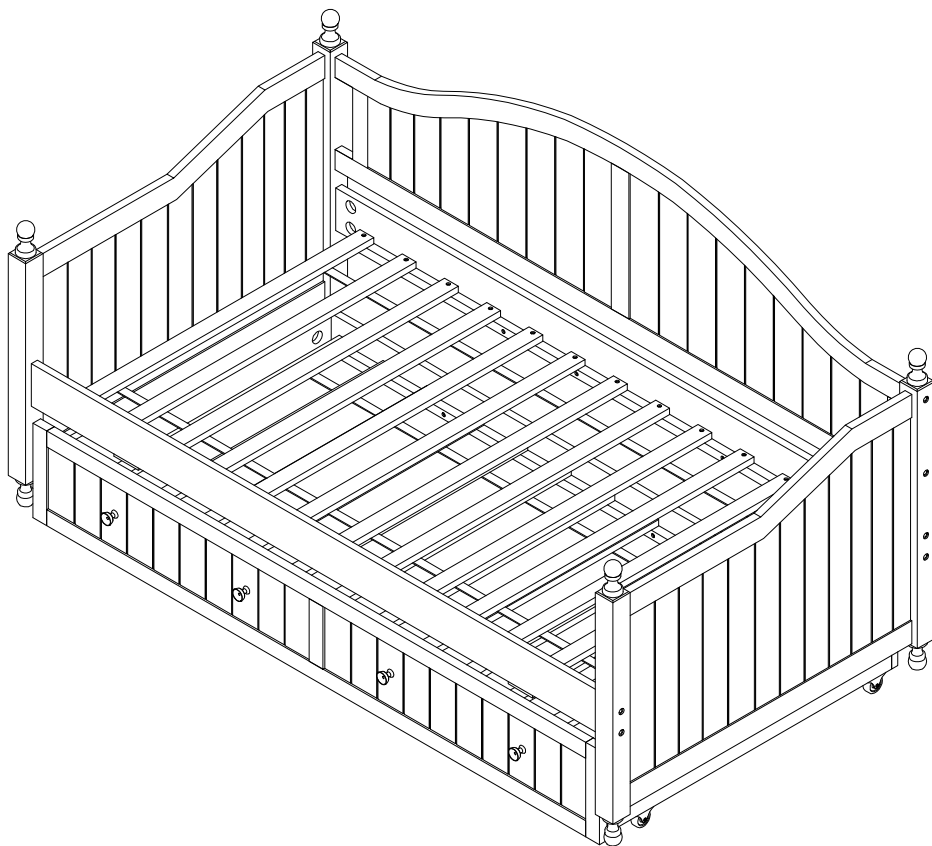

Fine Furniture for every stage of life

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

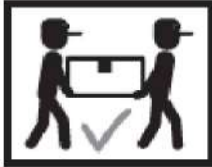

ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A RIGHT SIDE PANEL



1PC

B LEFT SIDE PANEL



1PC

C FINIAL




4PCS

D BUN FOOT



4PCS


E ROLL SLAT (13PCS)



1 SET

B2 (BOX 2)

F BACK PANEL

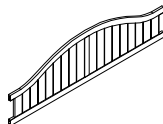

1PC

G FRONT RAIL



1PC


H BACK RAIL



1PC

B3 (BOX 3)

I TRUNDLE ROLL SLAT (13PCS)



1 SET

J TRUNDLE FRONT PANEL



1PC

K TRUNDLE BACK PANEL



1PC

L TRUNDLE RIGHT SIDE PANEL WITH CASTER



1PC

M TRUNDLE LEFT SIDE PANEL WITH CASTER



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

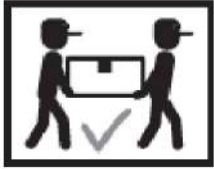






ASSEMBLY TIME









30 MINUTES

HARDWARE IDENTIFICATION

Z-B2 (BOX2) - HARDWARE PACK IS LOCATED IN (B2)

1	BOLT (1/4 x 110mm Φ 15L4 - RBW)		12PCS	4	WOOD DOWEL (10 x 40mm)		8PCS
2	HALF ROUND NUT (1/4 x 22mm - RBW)		12PCS	5	ALLEN WRENCH (4 x 57MM - RBW)		1PC
3	FLAT HEAD SCREW (4 x 30mm - RBW)		26PCS				

Z-B3 (BOX3) - HARDWARE PACK IS LOCATED IN (B3)


6	LONG BOLT (1/4 x 50mm Φ 12L4 - RBW)		2PCS	10	WOOD DOWEL (10 x 40mm)		4PCS
7	HALF ROUND NUT (1/4 x 22mm - RBW)		2PCS	11	KNOB (5/32mm - RBW)		4PCS
8	SHORT BOLT (1/4 x 35mm Φ 12L4 - RBW)		4PCS	12	BOLT WITH WASHER (1/4 x 35mm Φ 12L4 - RBW)		4PCS
9	FLAT HEAD SCREW (4 x 30mm - RBW)		26PCS	13	ALLEN WRENCH (4 x 57MM - RBW)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

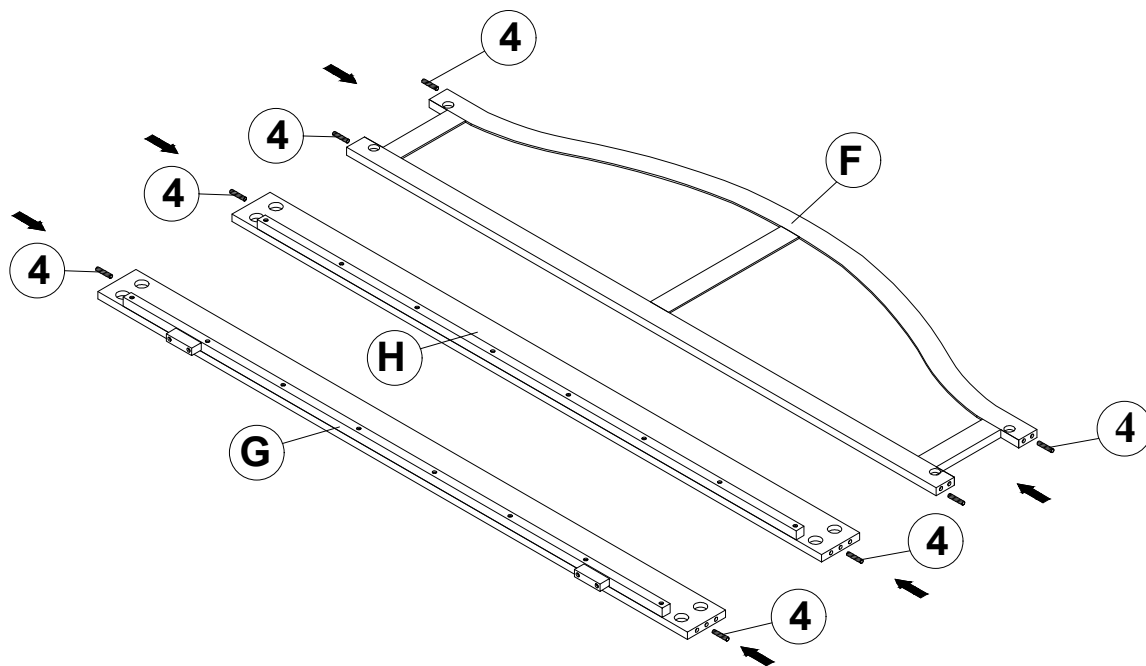


STEP 2

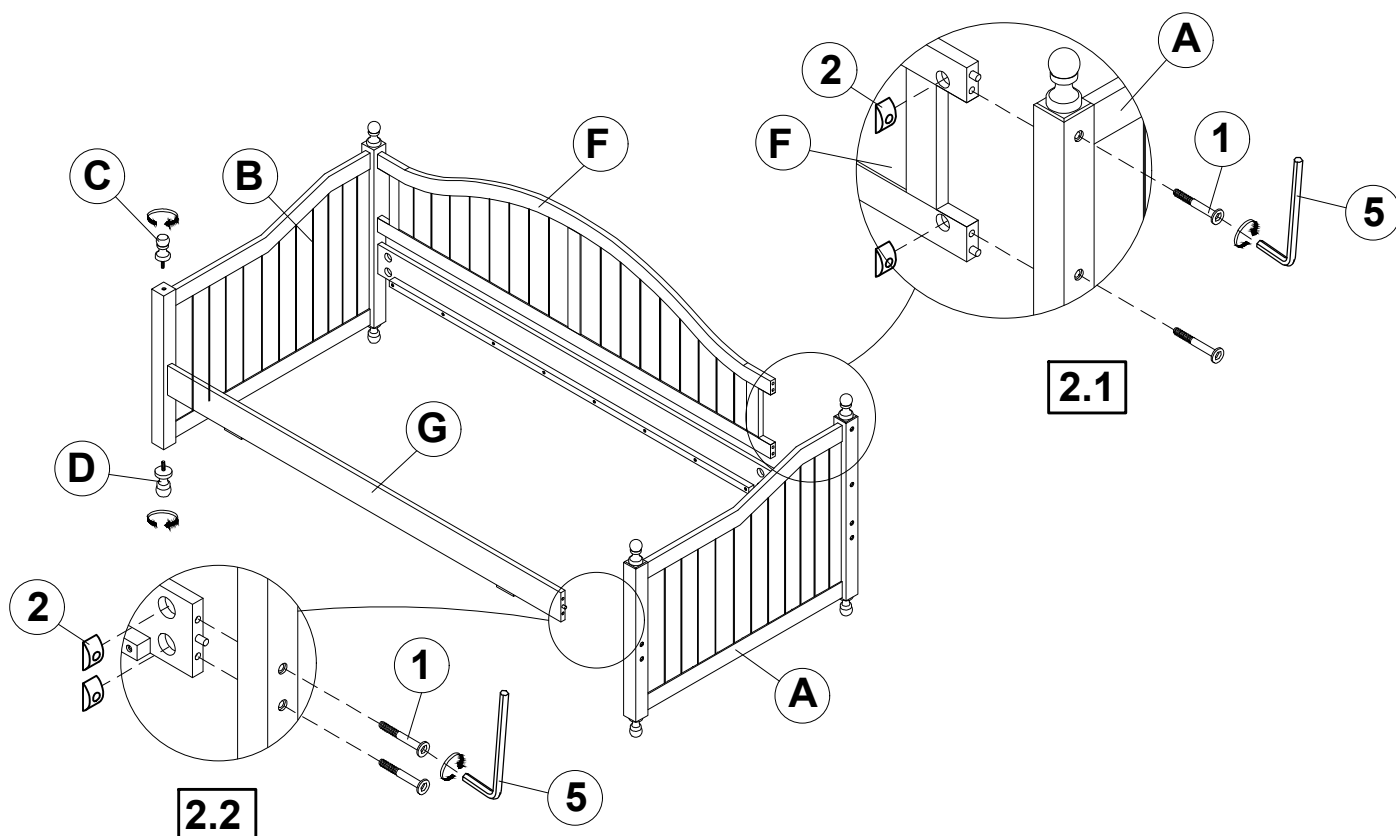


ASSEMBLY INSTRUCTIONS

STEP 3

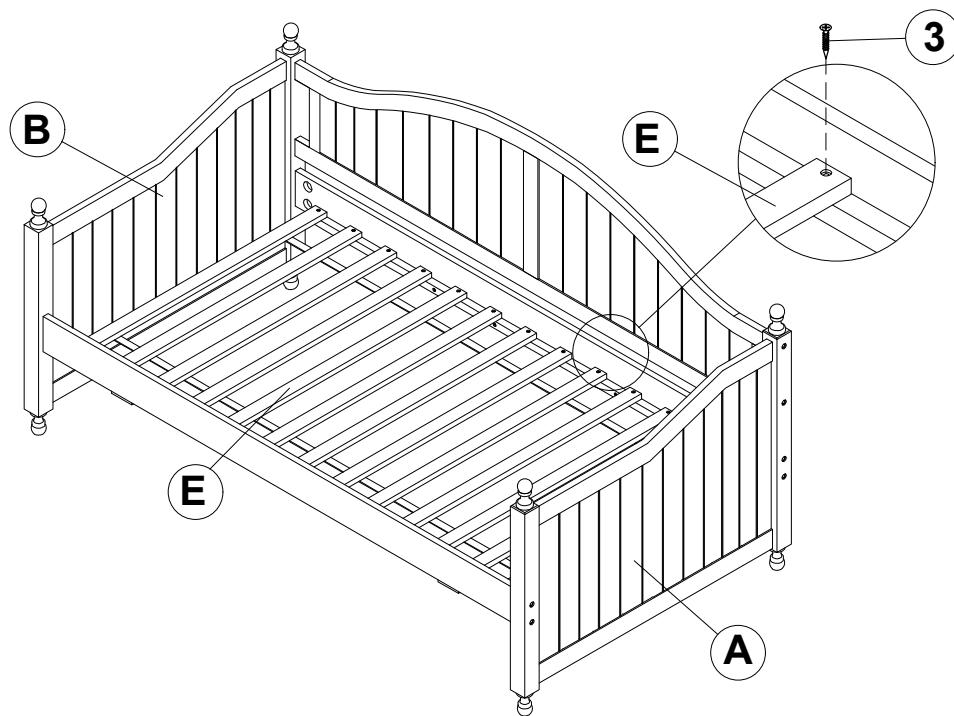


STEP 4

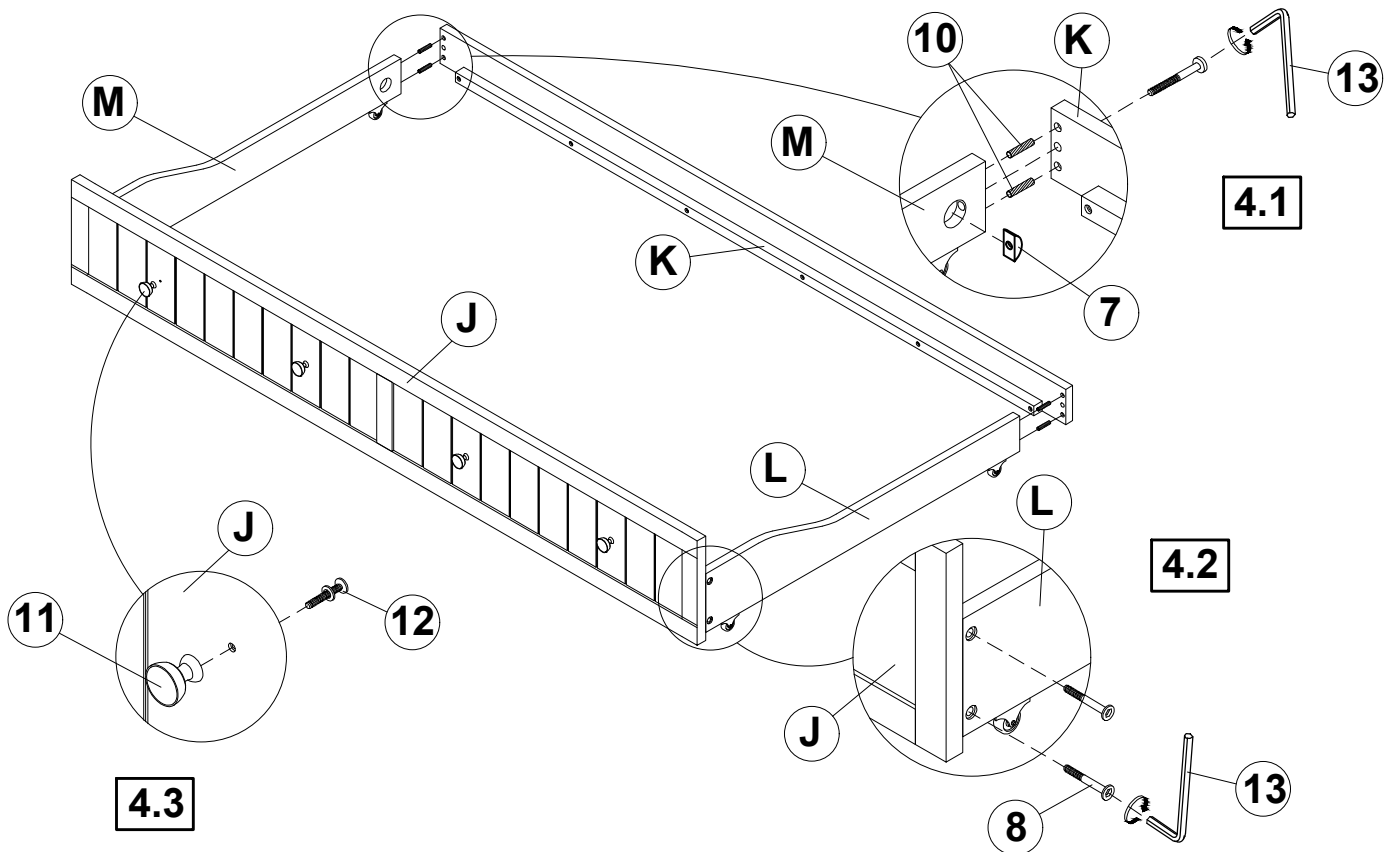


ASSEMBLY INSTRUCTIONS

STEP 5

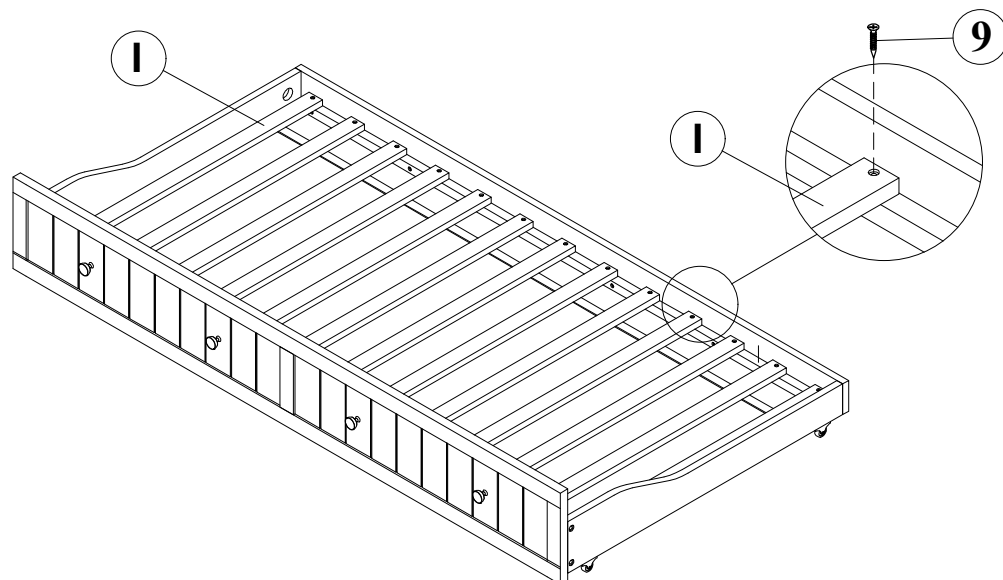


STEP 6 COMPLETE

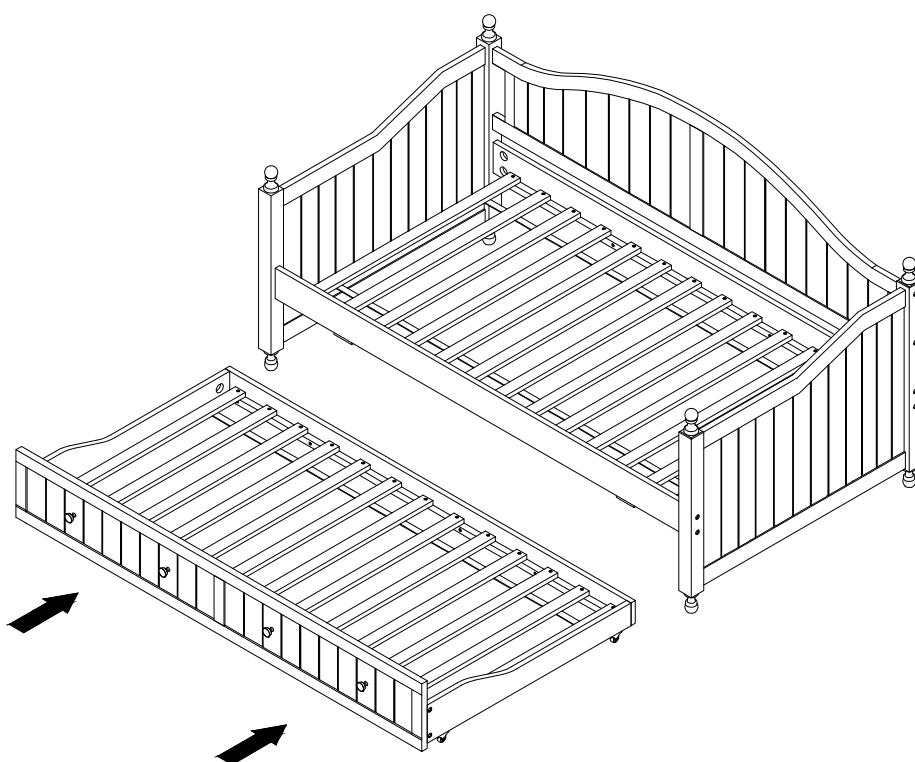

ASSEMBLY INSTRUCTIONS

INNER SIZE: 79.97" X 39.96"

TRUNDLE INNER SIZE: 75.20" X 39.96"

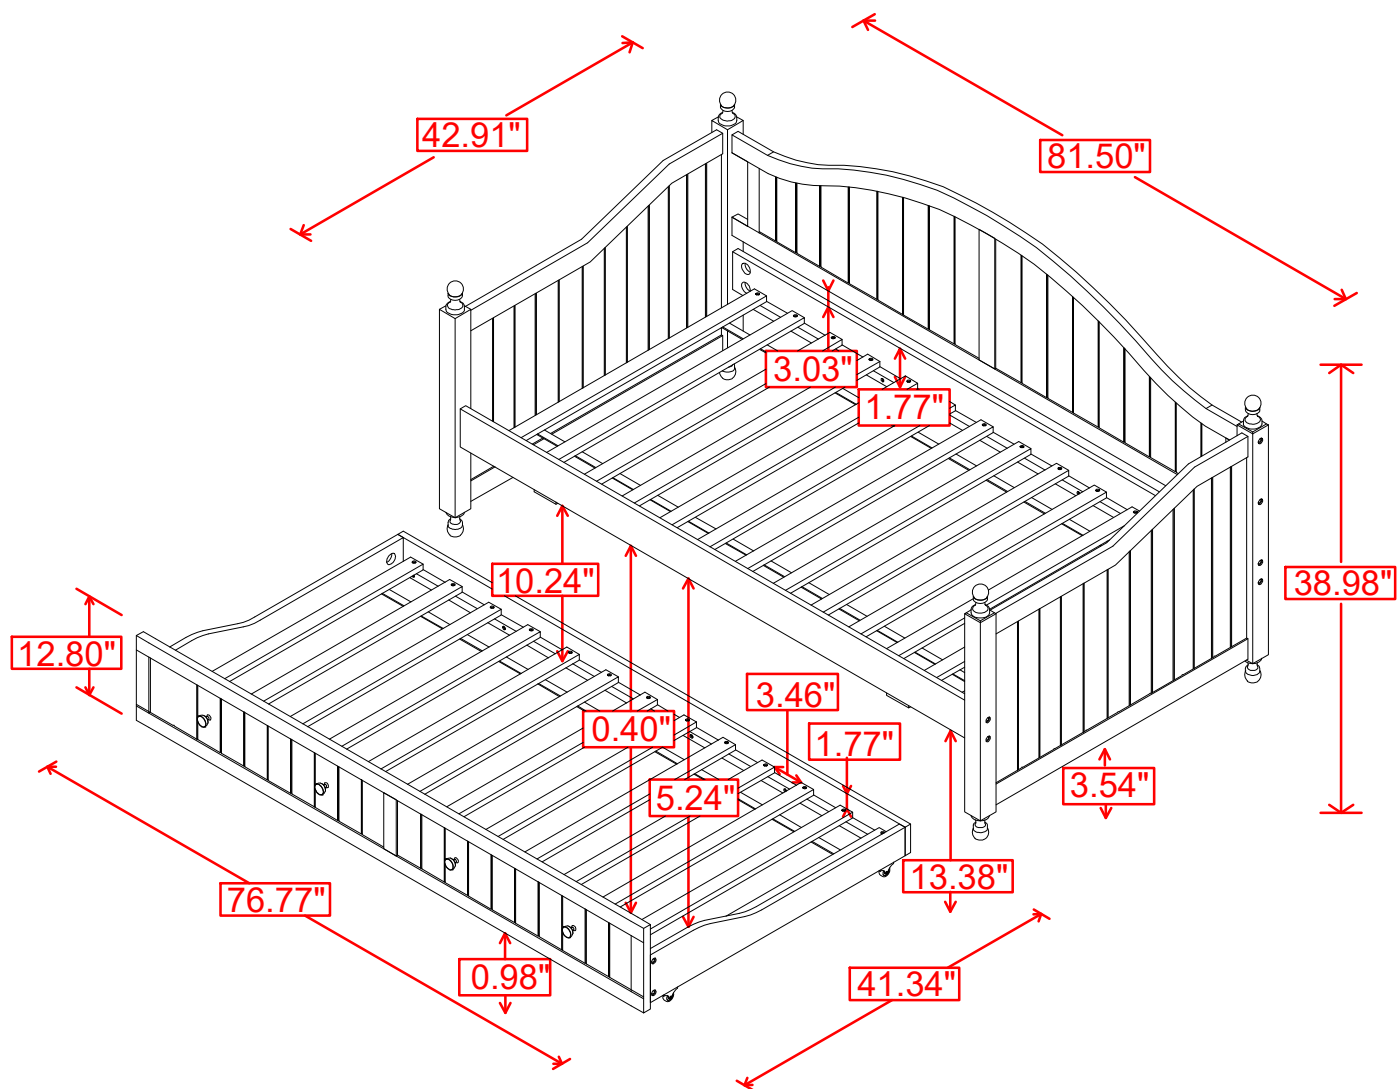

Note: Dimension tolerance $\pm 5\%$