
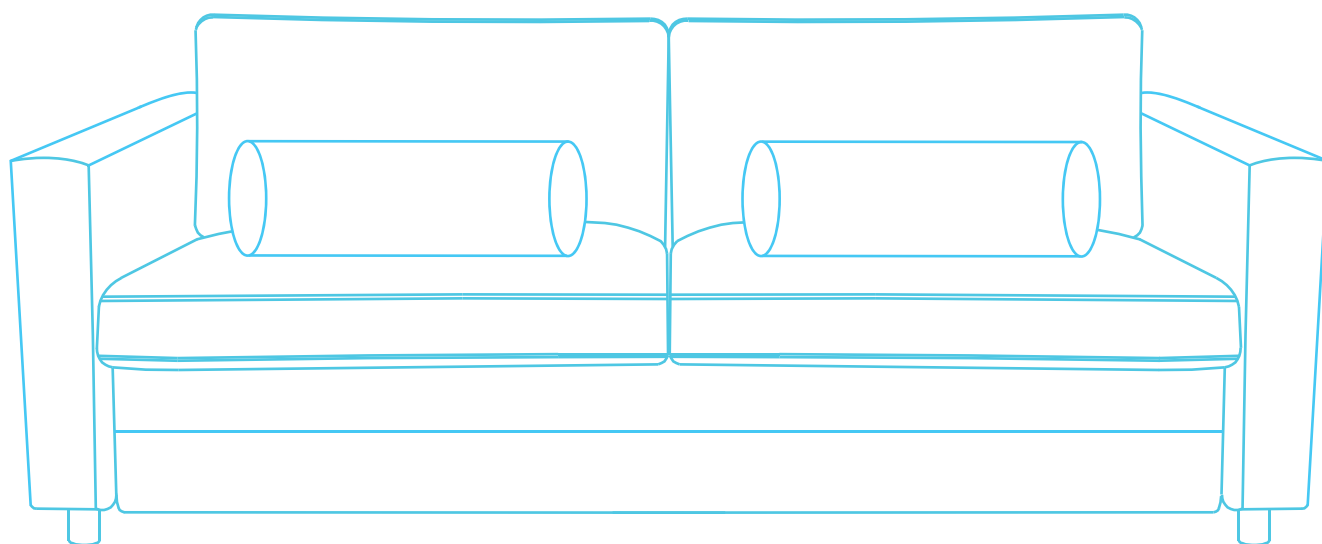
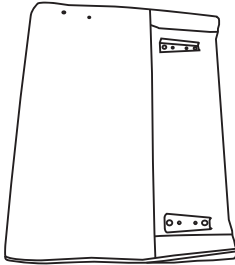
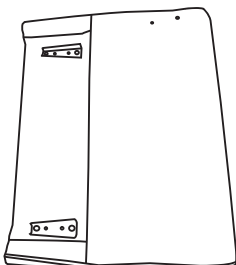
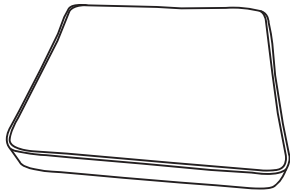
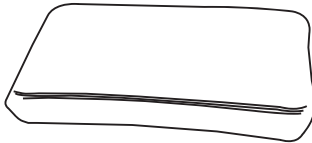
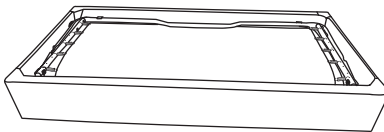
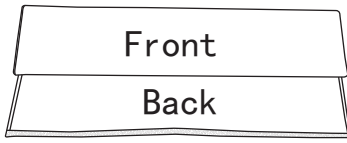
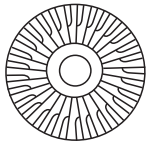


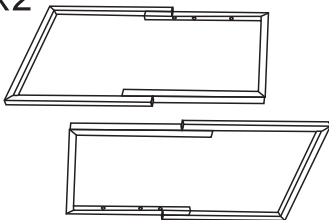



INSTALLATION GUIDE




SOFA

A Right Armrest 	B Left Armrest 	C Pillow X2 	D Seat X2 	
E Backrest X2 	F Base 	G Back Base Front Back 	J Allenkey 	
K Washer X4 	M Feet X4 	N Insert X 6 	O Screw X 16  M6x16mm	P Insert X 2 
R x2 	S x2 	T x6 	U Screw X 8  M6x40mm	


STEP 1

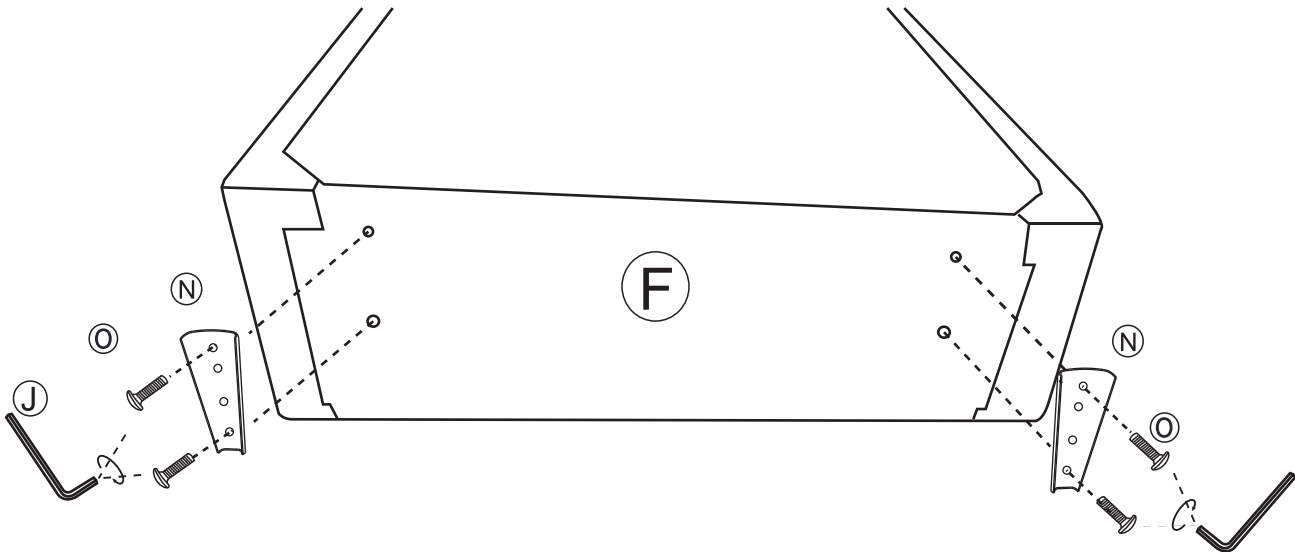


STEP 2

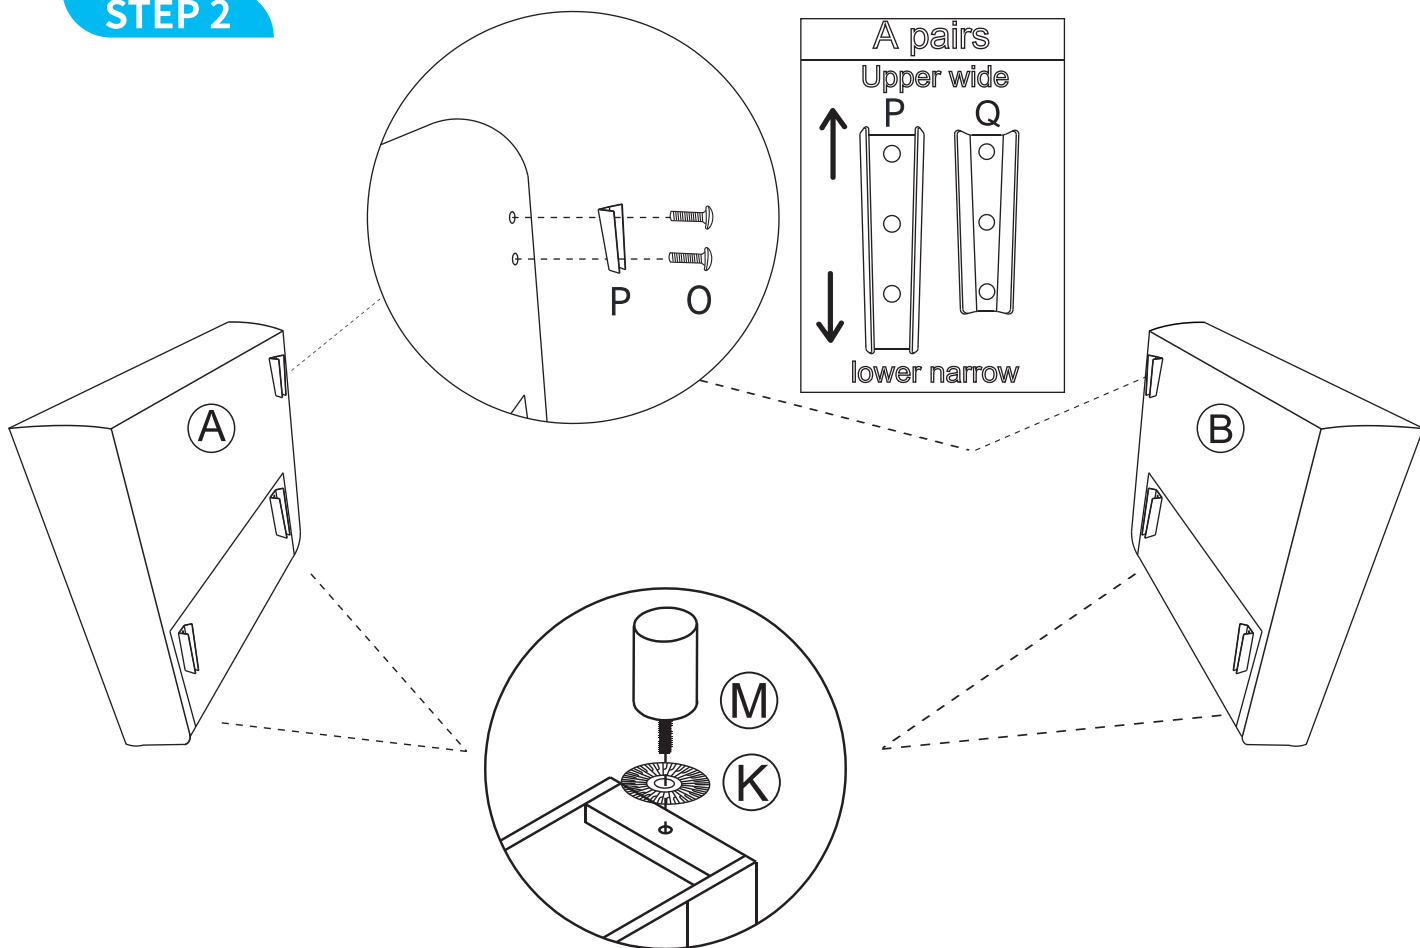


STEP 3

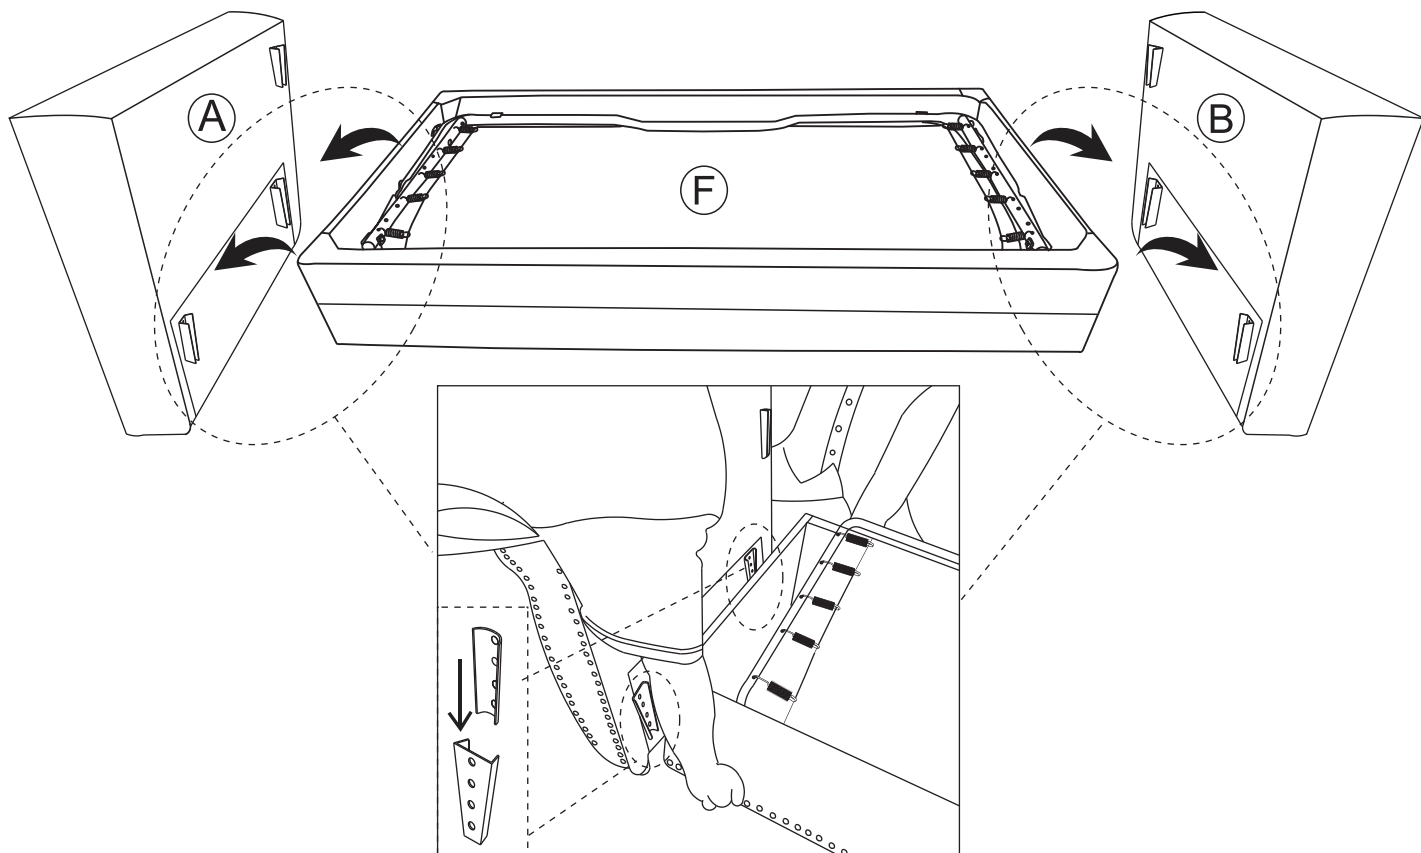


STEP 4

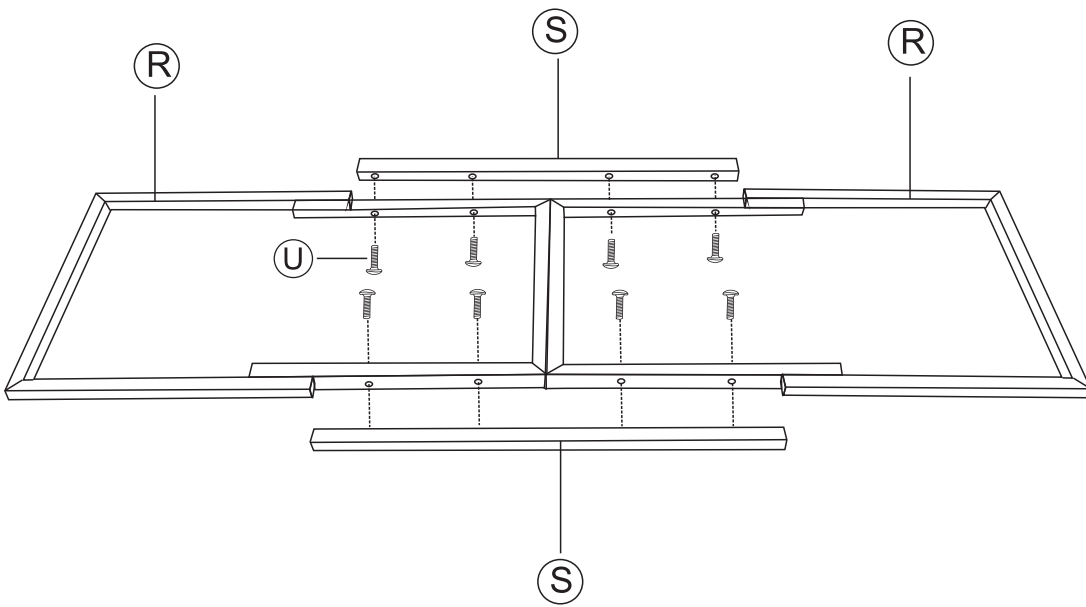


STEP 5

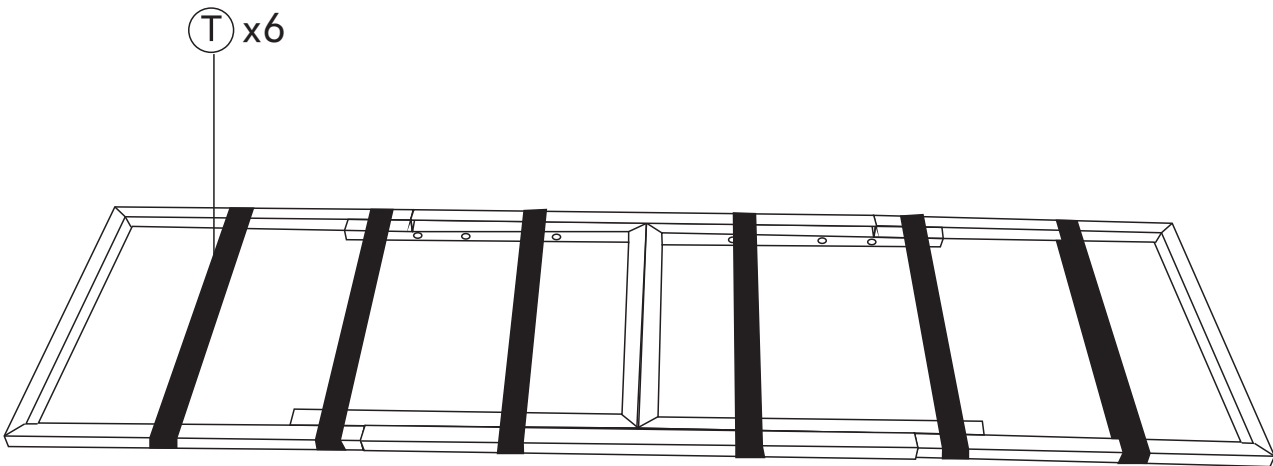


STEP 6

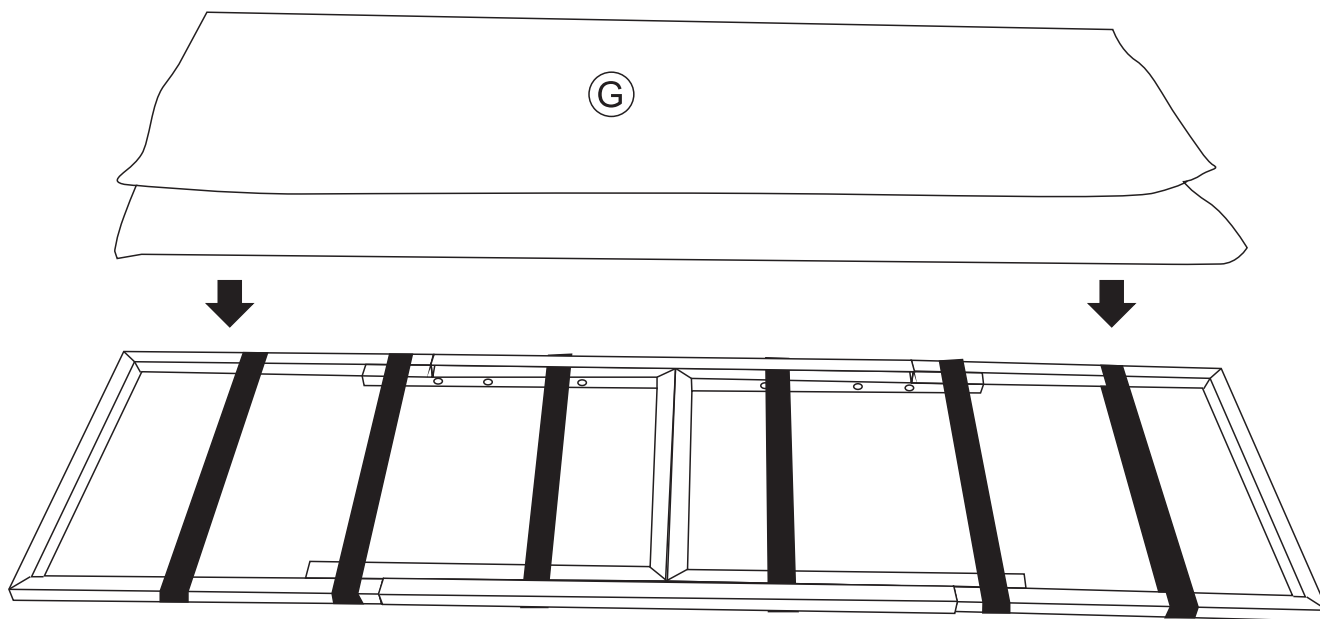


STEP 7

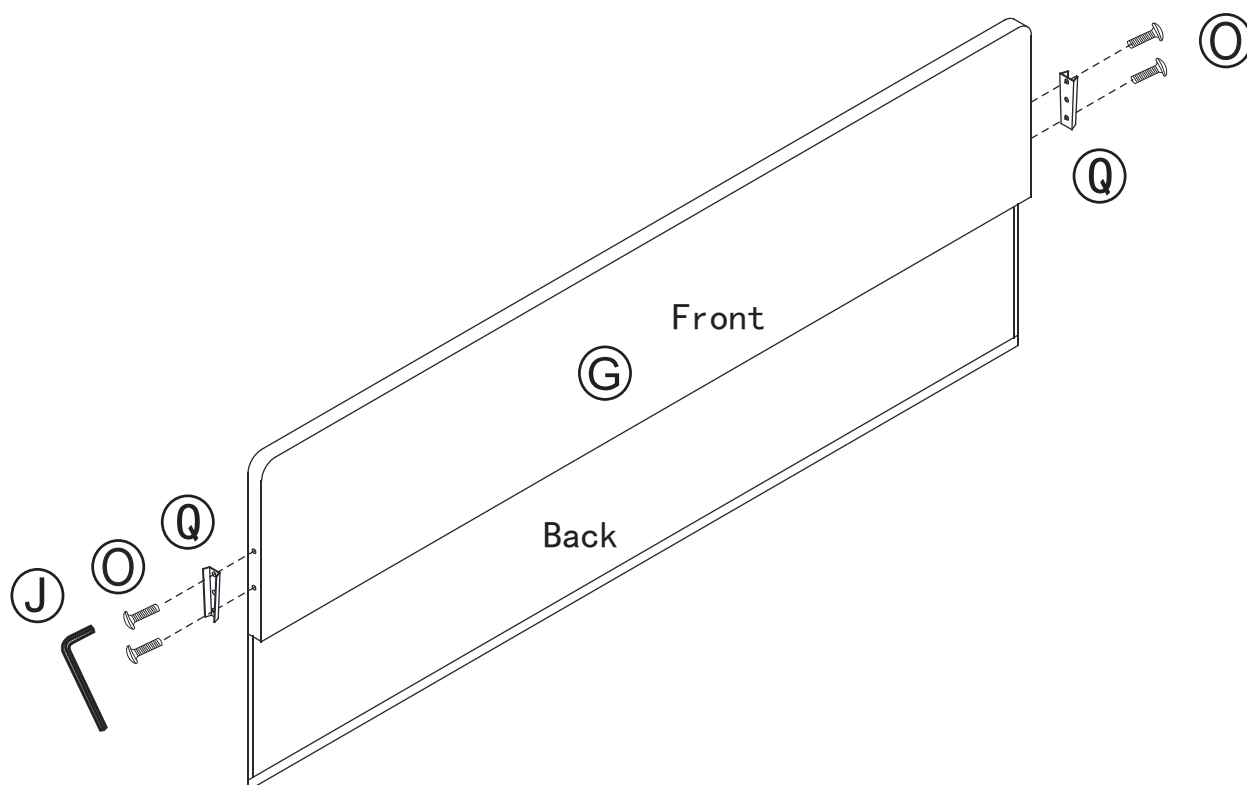


STEP 8

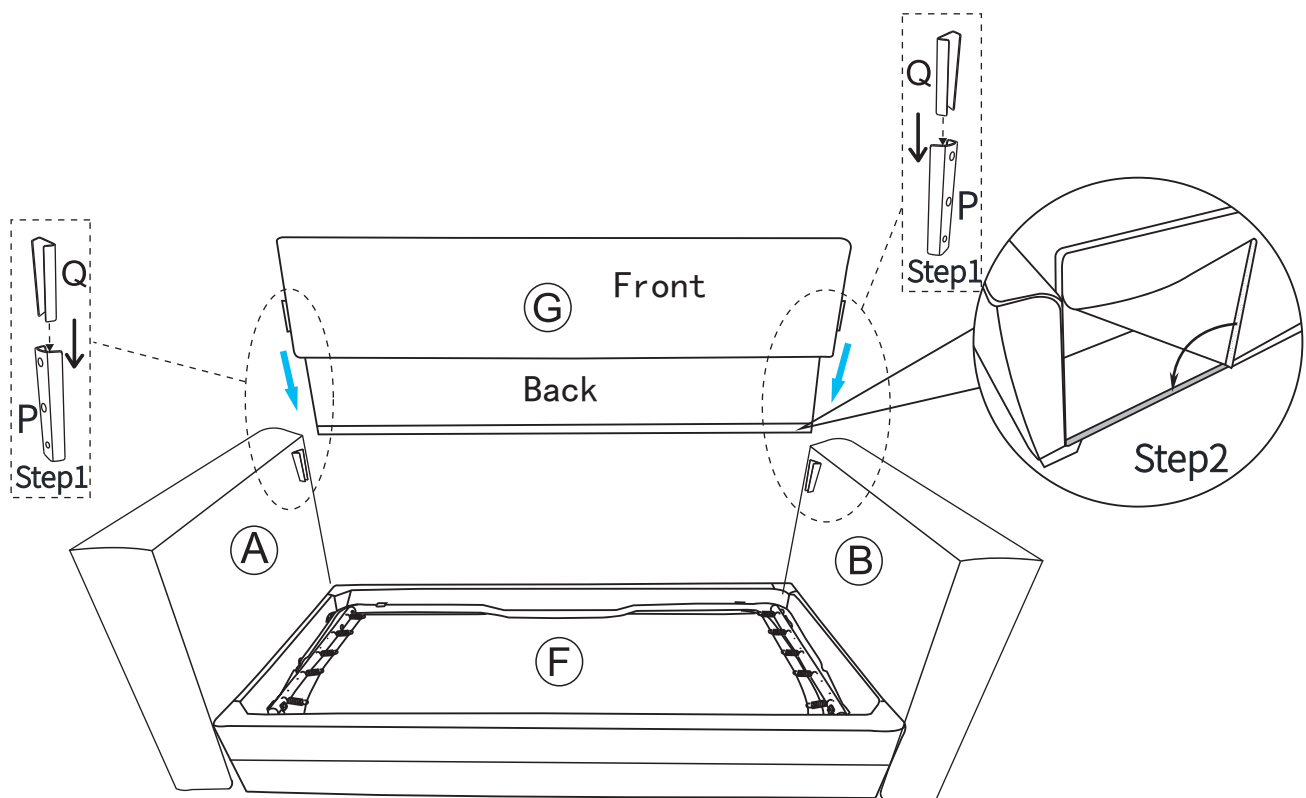


STEP 9

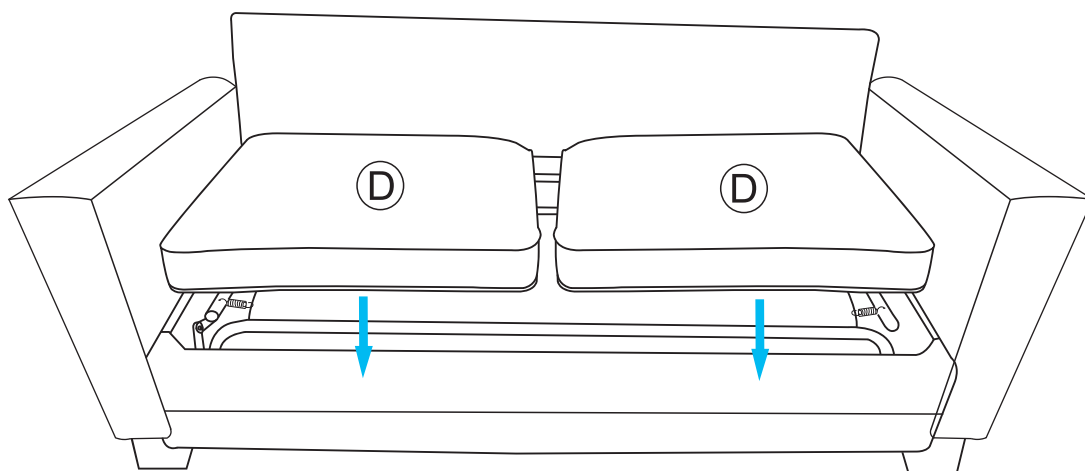

STEP 10

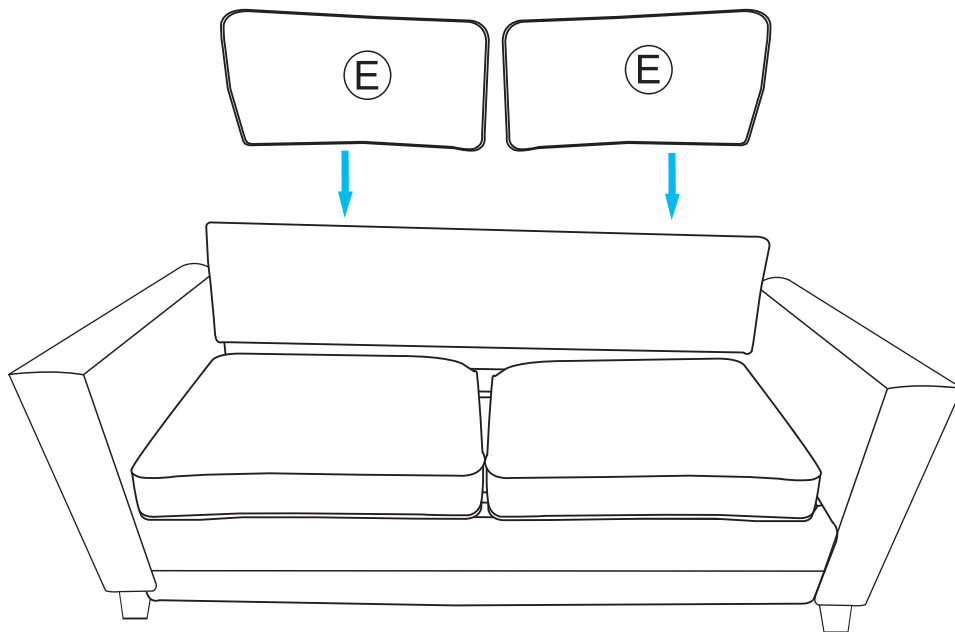


COMPLETE

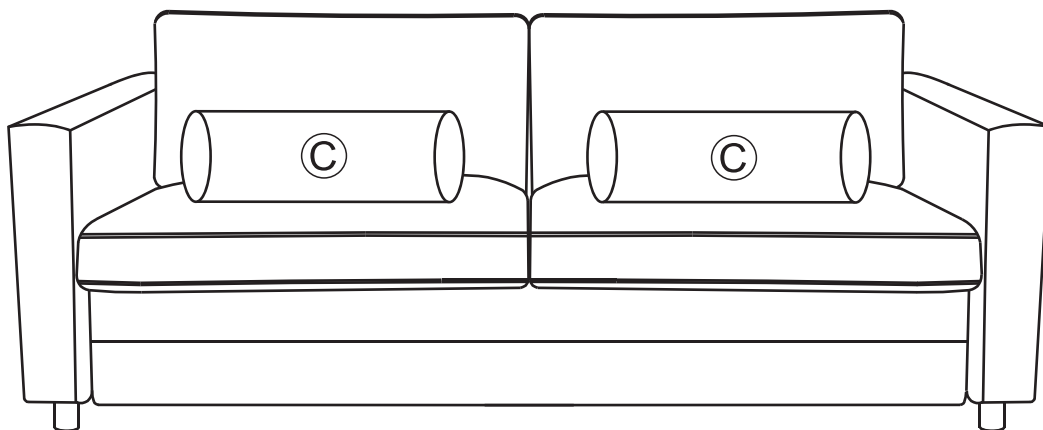



Product Instruction Manual

STEP 1



TRANSFORM

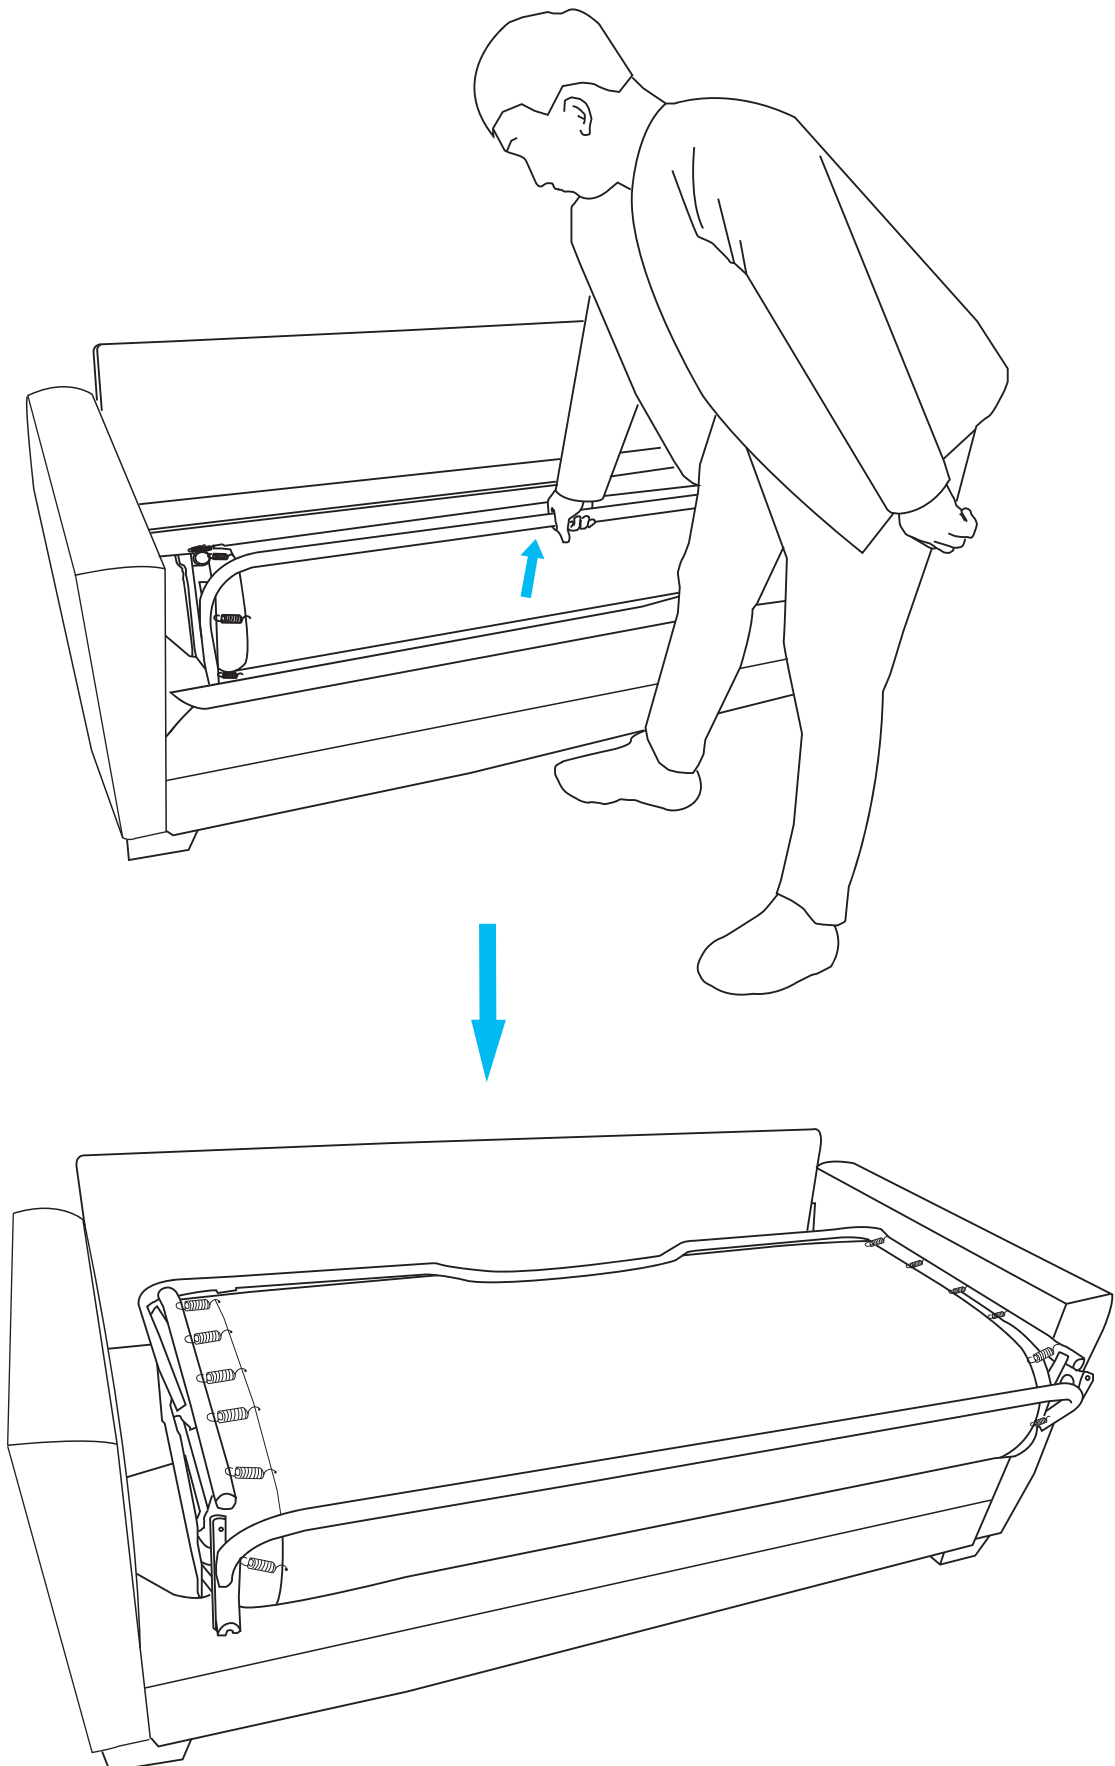

STEP 2

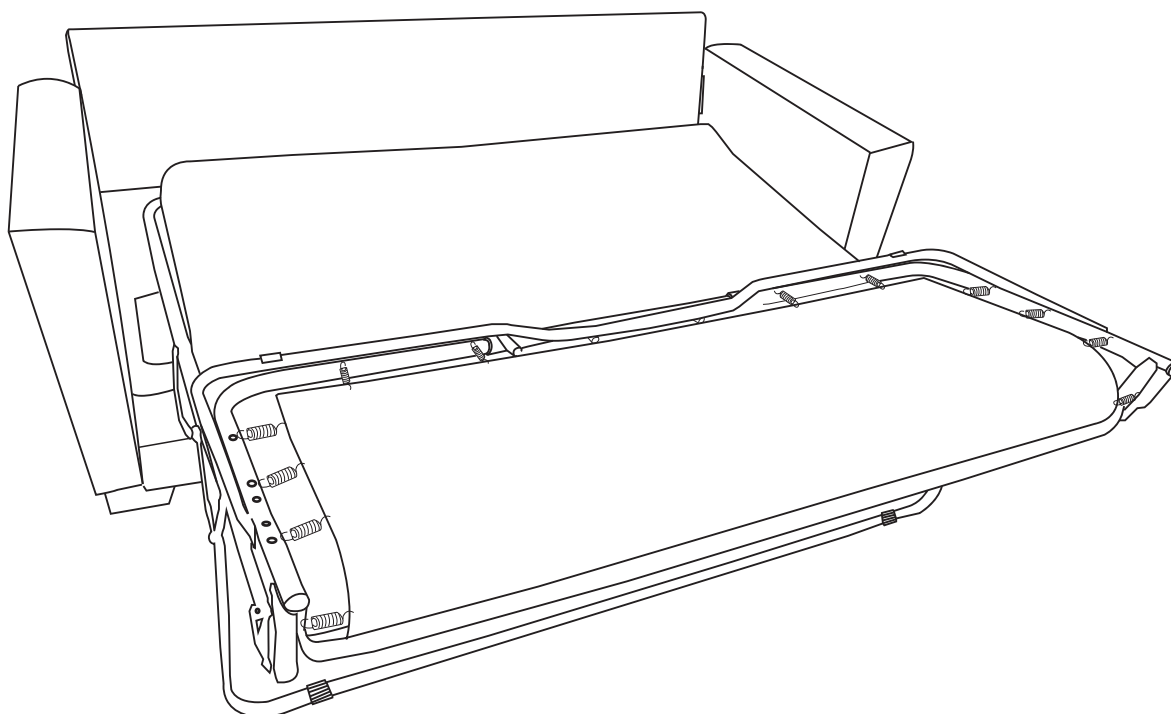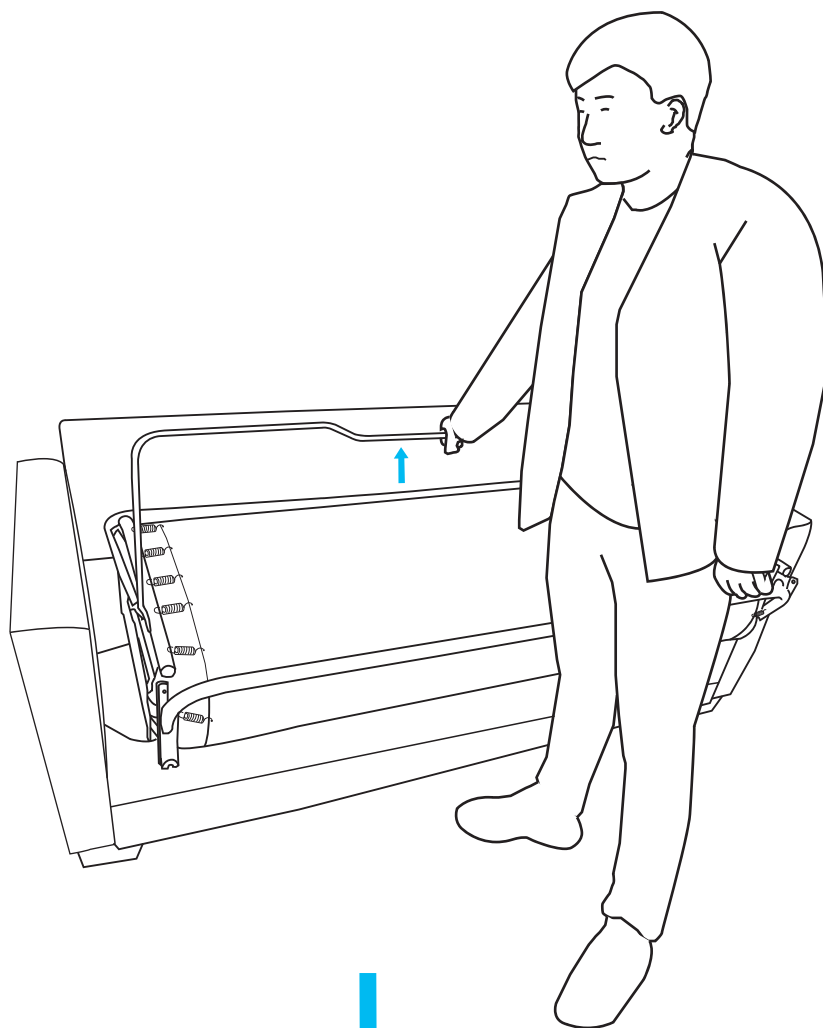

STEP 3

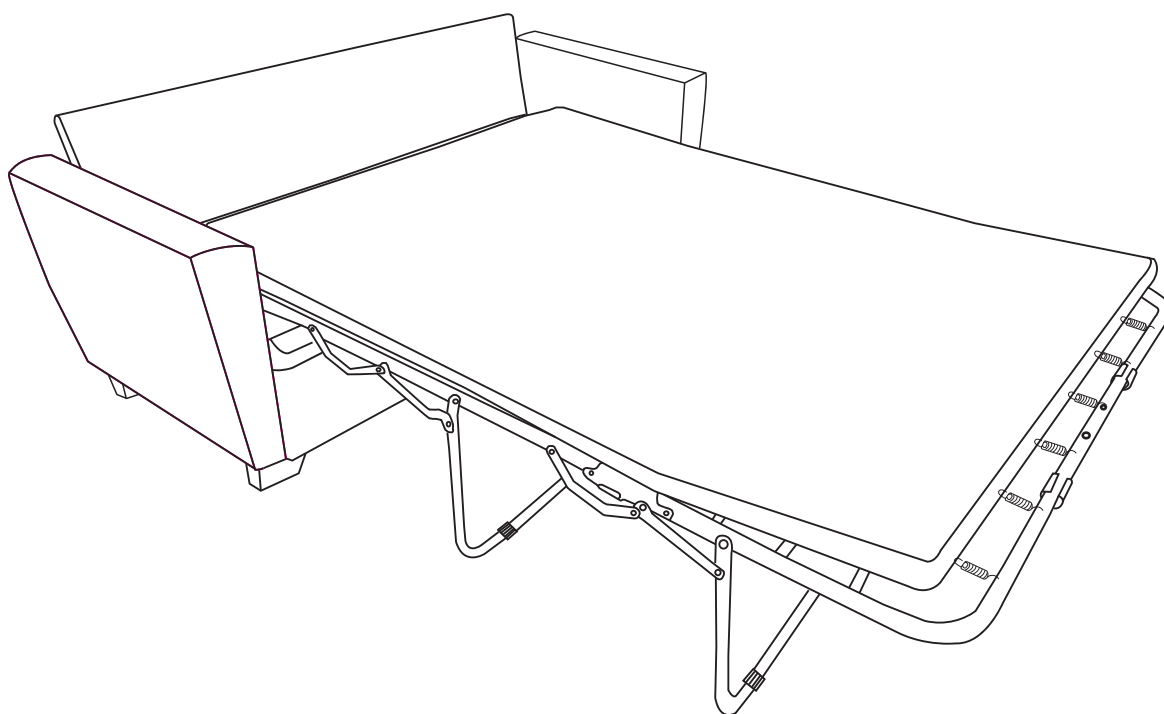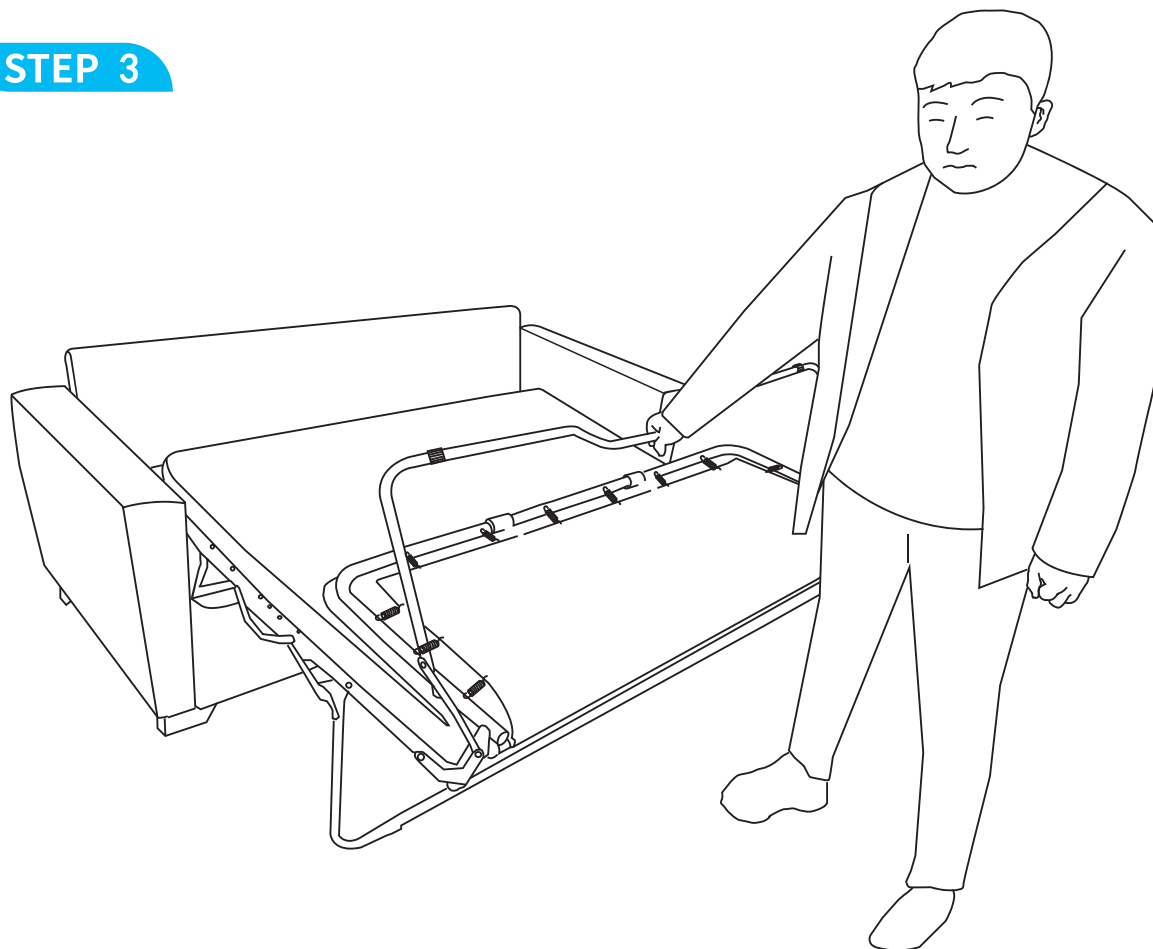

STEP 4

