


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start


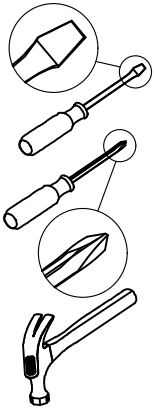


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY:1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

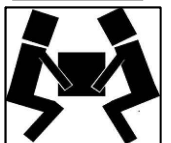


Board Identification

Not actual size

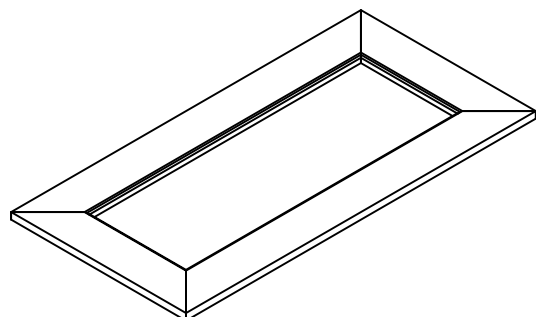


Ⓐ

TOP
Qty:1

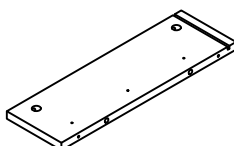


Ⓑ

LEFT SIDE PANEL
Qty:1

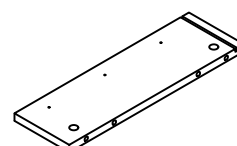


Ⓒ

RIGHT SIDE PANEL
Qty:1

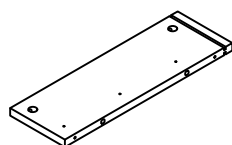


Ⓓ

MIDDLE SIDE PANEL
Qty:1

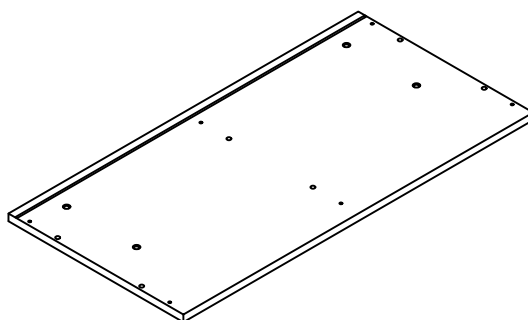


Ⓔ

BOTTOM
Qty:1

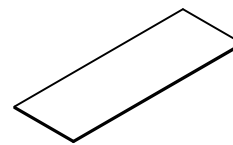


Ⓕ

DESK BACK PANEL
Qty:2

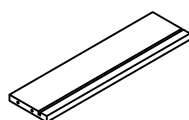

Ⓖ

DRAWER BACK PANEL
Qty:2

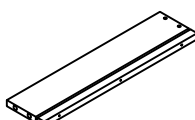

Ⓗ

DRAWER LEFT SIDE
Qty:2




Ⓘ

DRAWER RIGHT SIDE
Qty:2


Board Identification

Not actual size

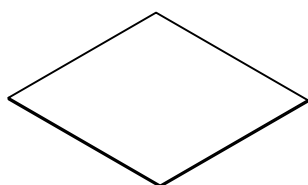


ⓐ

DRAWER BOTTOM
Qty:2




ⓑ

DRAWER VERTICAL
Qty:2




ⓒ

DRAWER HORIZONTAL
Qty:2

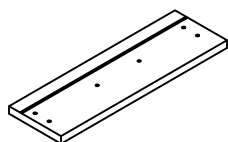


ⓓ

LEFT DRAWER FRONT
Qty:1

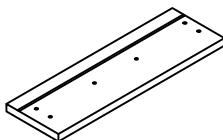

ⓔ


RIGHT DRAWER FRONT
Qty:1

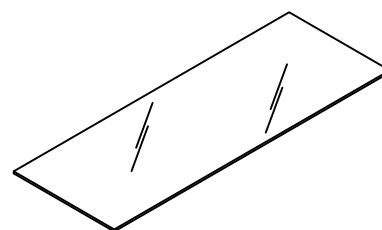


ⓕ

GLASS
Qty:1


Part List

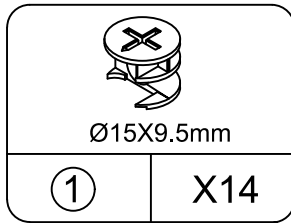


CAM LOCK
spare:1

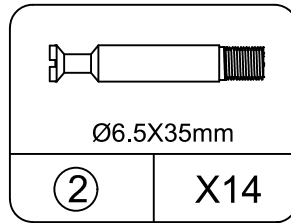


CAM BOLT
spare:1

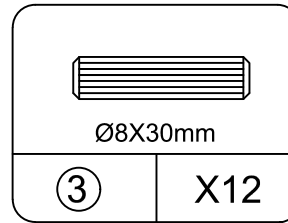


WOOD DOWEL
spare:1

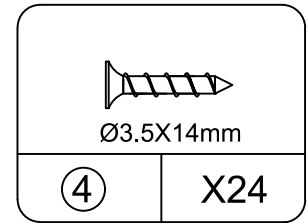


SCREW
spare:2

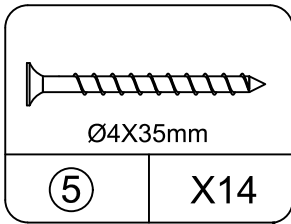


SCREW
spare:1

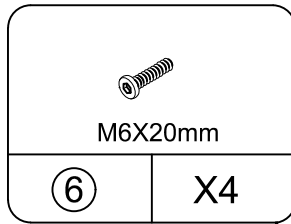


SCREW
spare:1

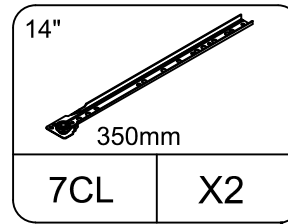


LEFT CABINET MEMBER

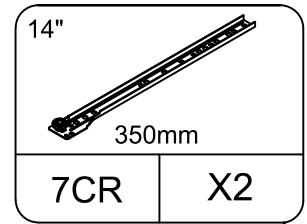


RIGHT CABINET MEMBER

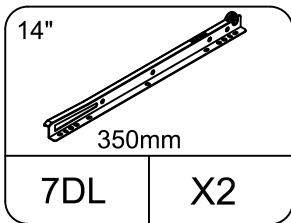


LEFT DRAWER RUNNER

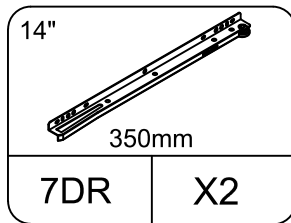


RIGHT DRAWER RUNNER

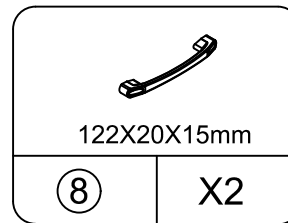


HANDLE

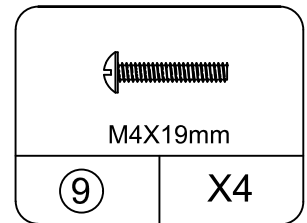


SCREW
spare:1

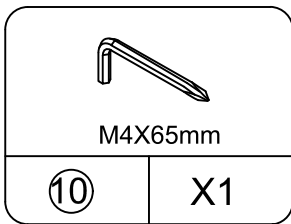


HEX KEY

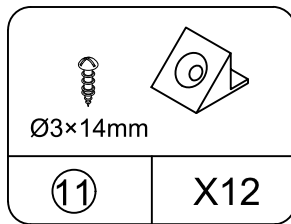

BACK PANEL BUCKLE
spare:1

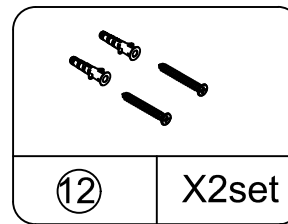


HIPPING RESTRAINT
HARDWARE KIT

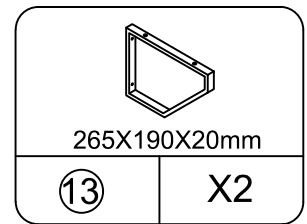

IRON SHEET


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

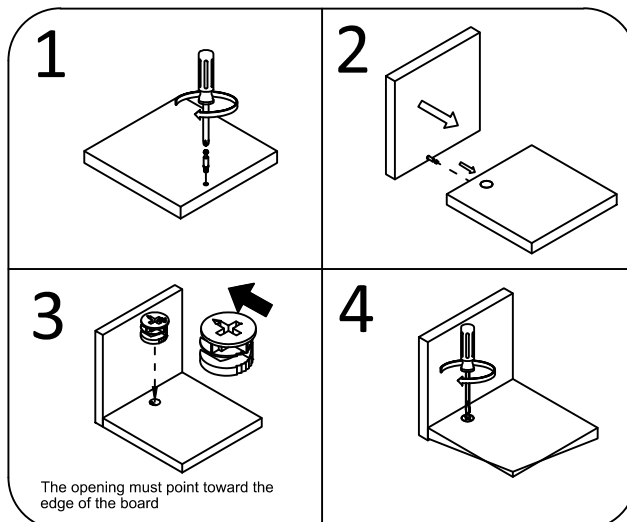






Board Identification

Not actual size





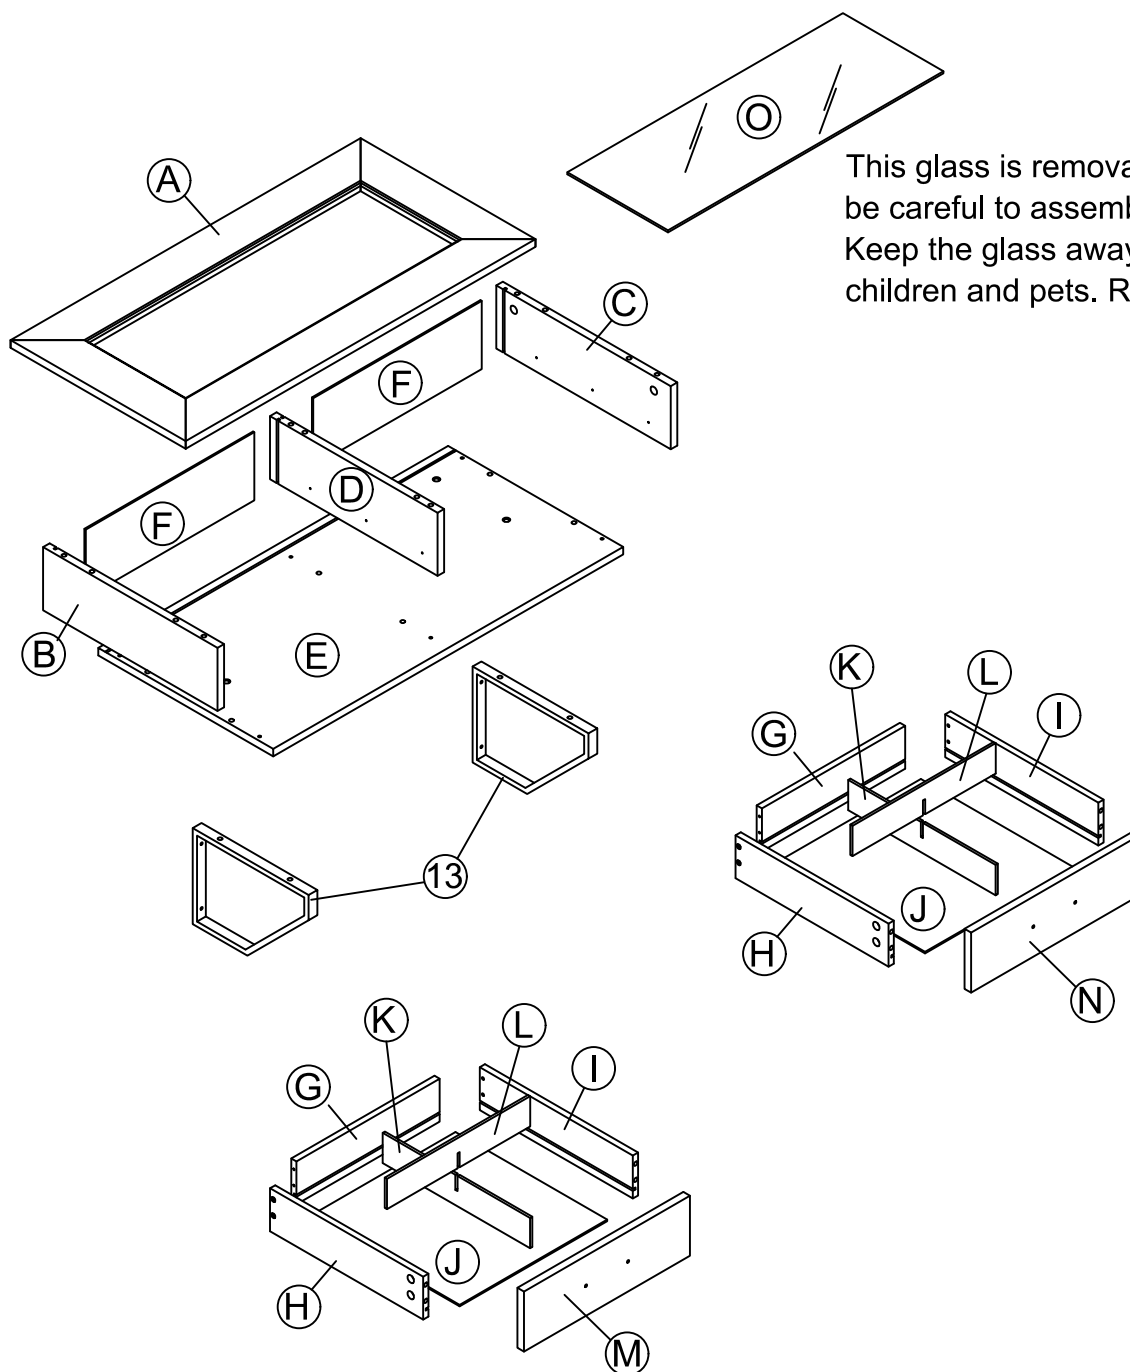


This glass is removable, please be careful to assemble. Keep the glass away from the children and pets. Risk of injury!







STEP1

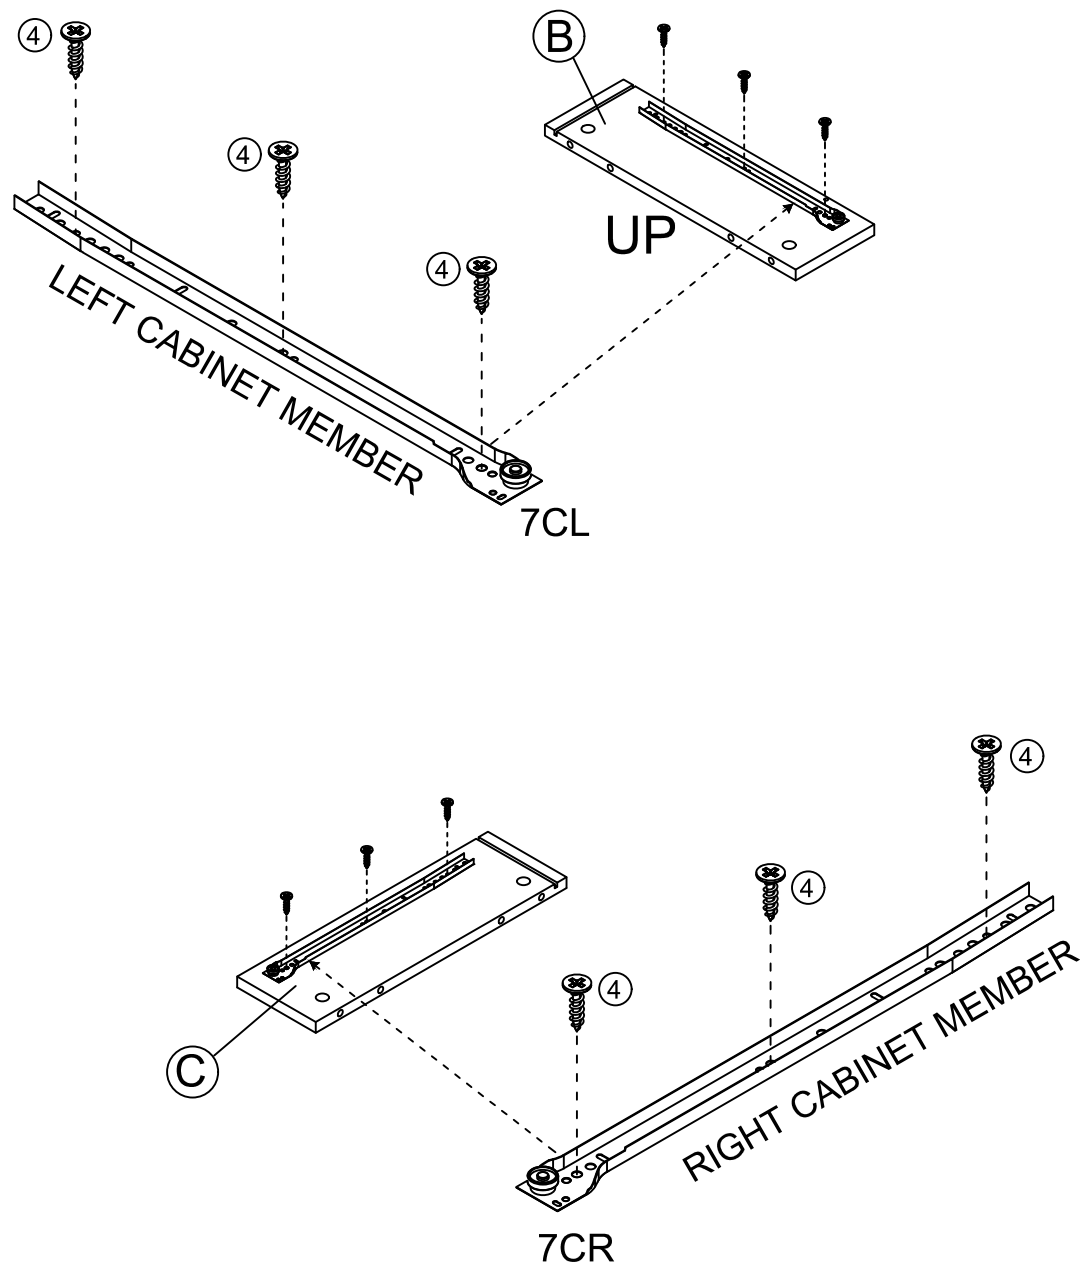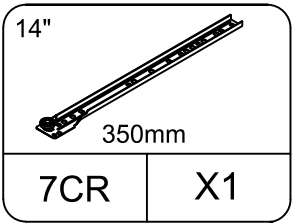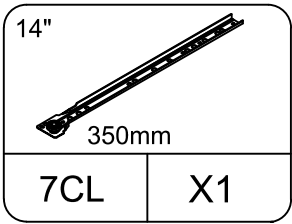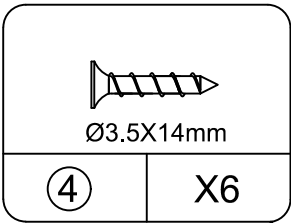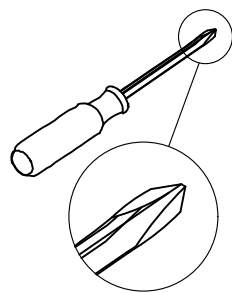


STEP2

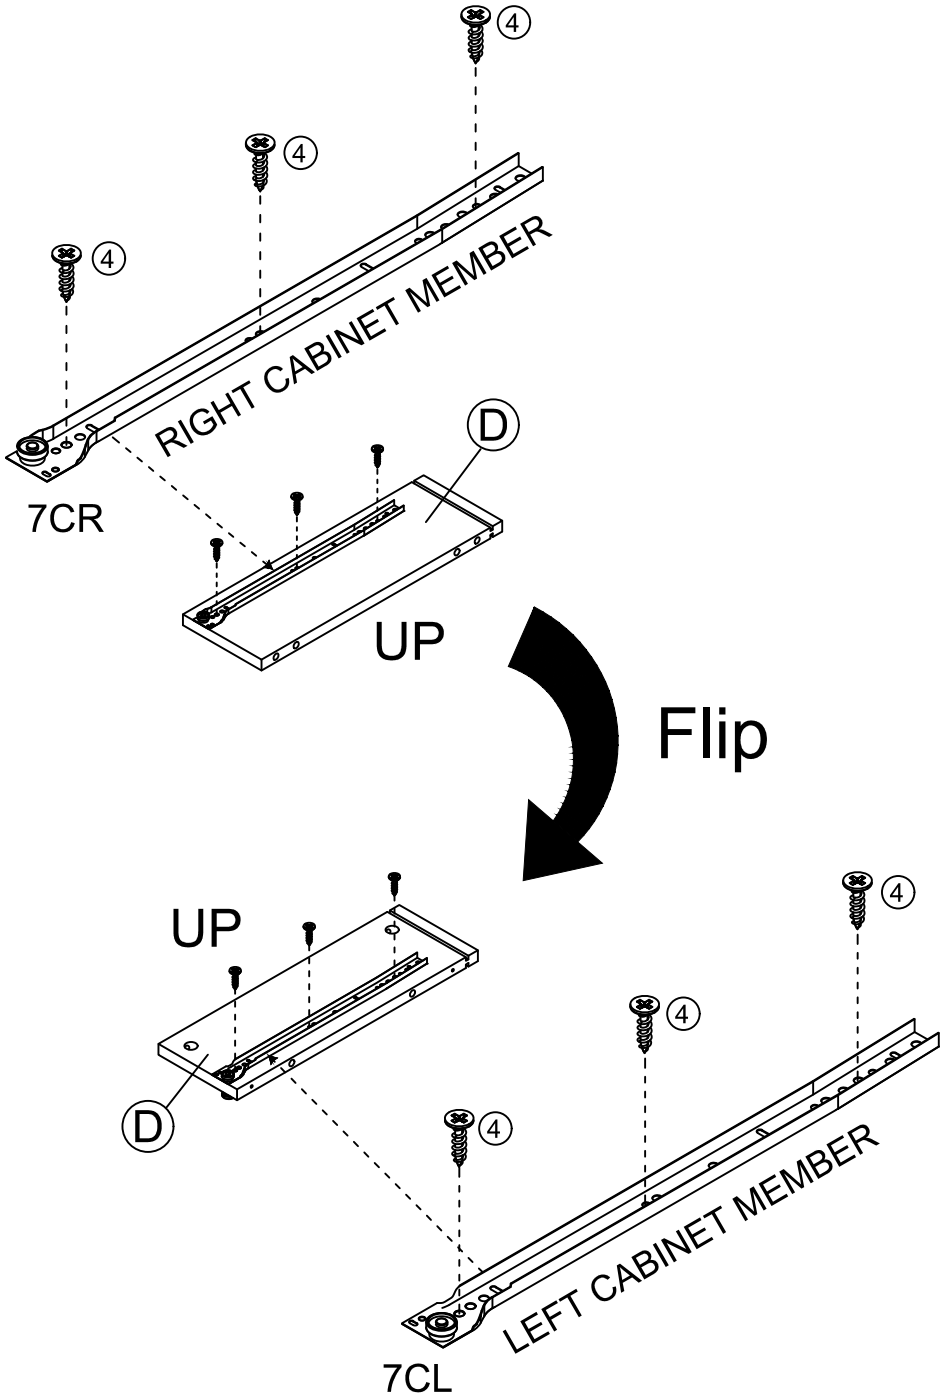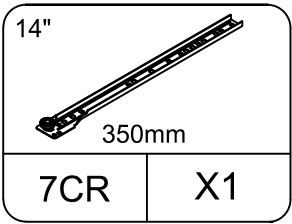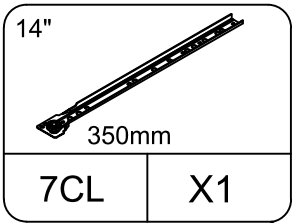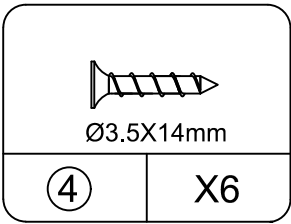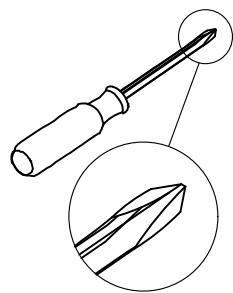


STEP3

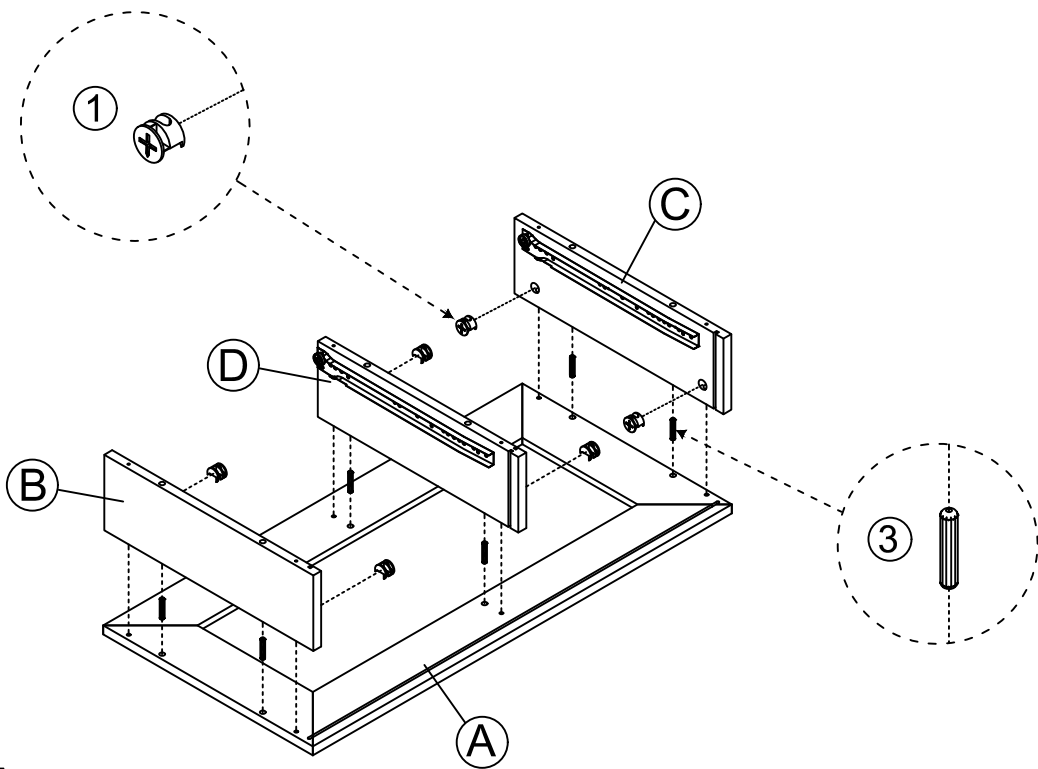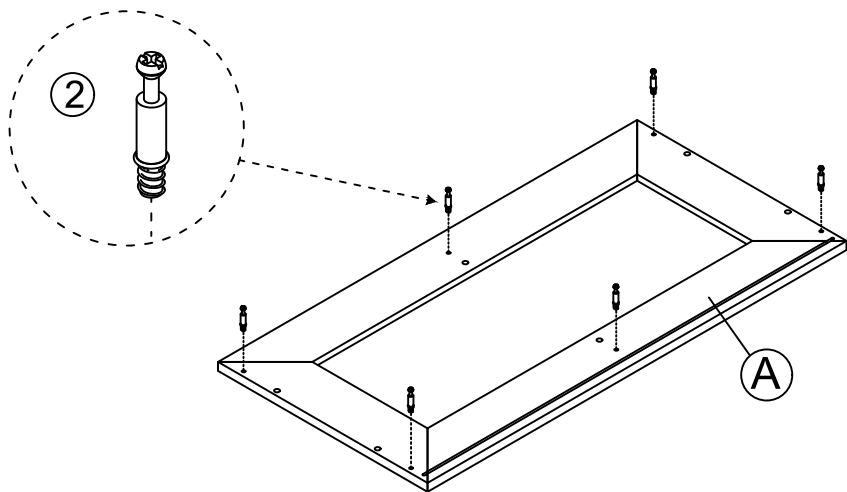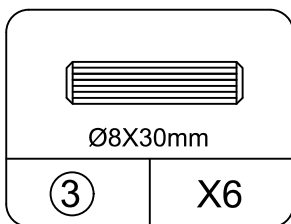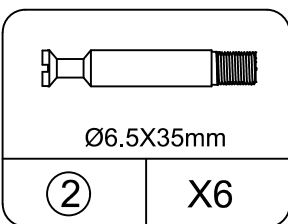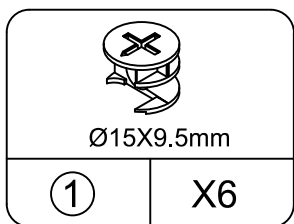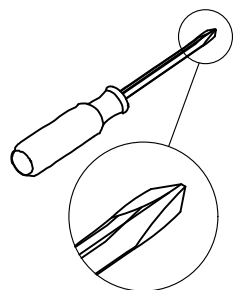






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

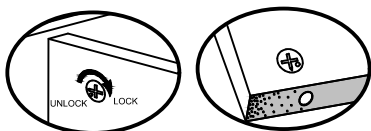


Proper orientation of CAM LOCK

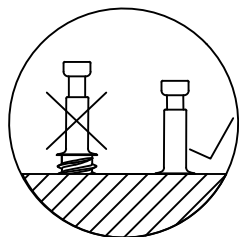

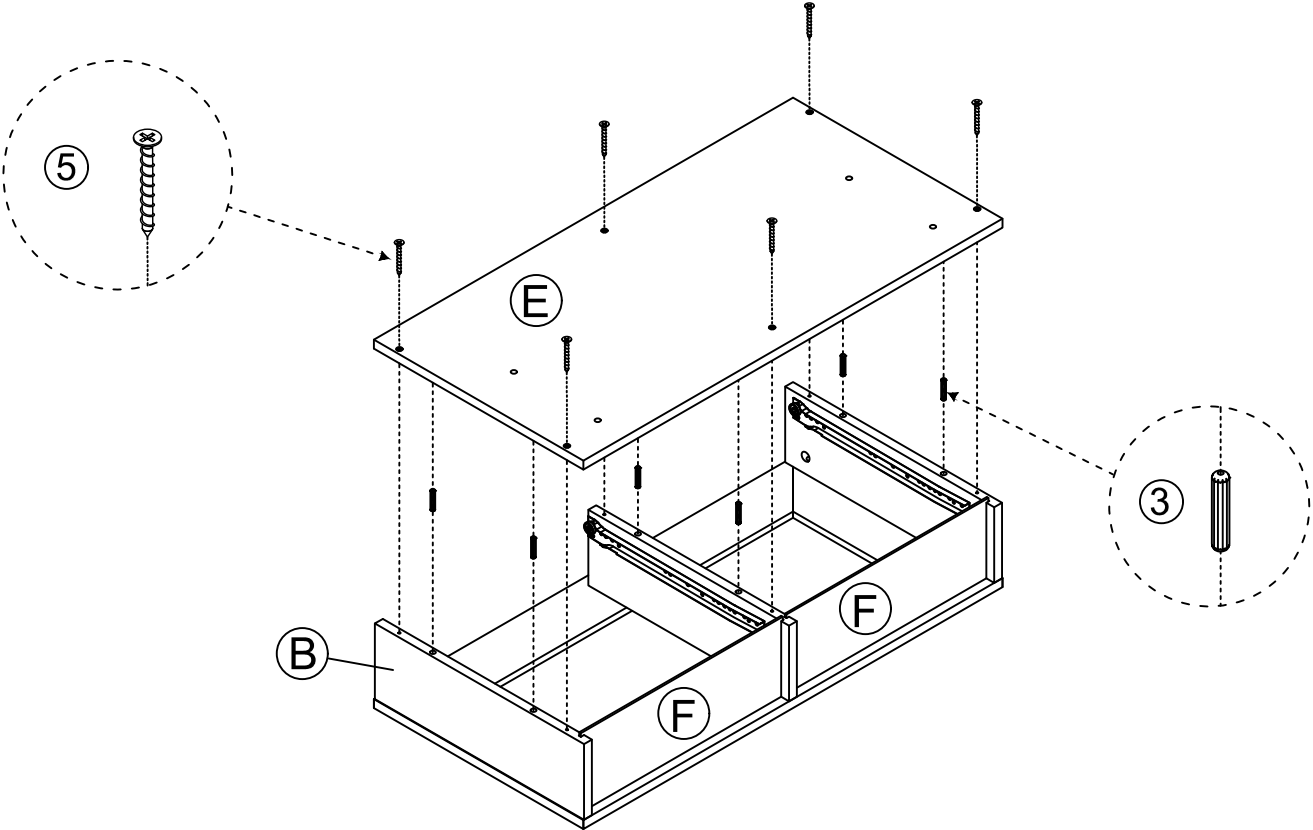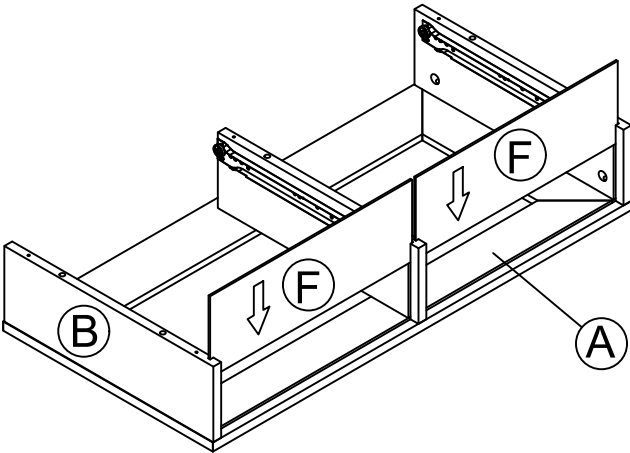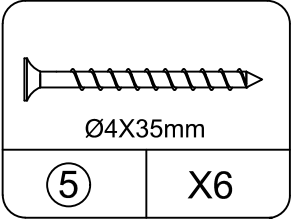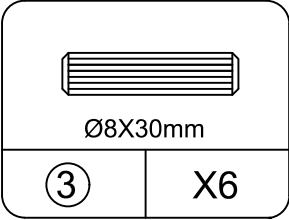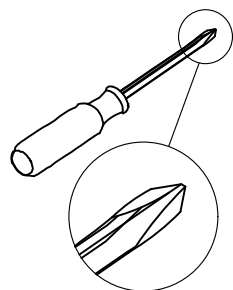

STEP4

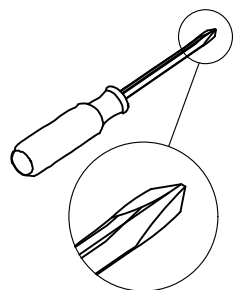




STEP5




 M6X20mm	
⑥	X4

 M4X65mm	
⑩	X1





 265X190X20mm	
⑬	X2

 Ø3×14mm	
⑪	X12

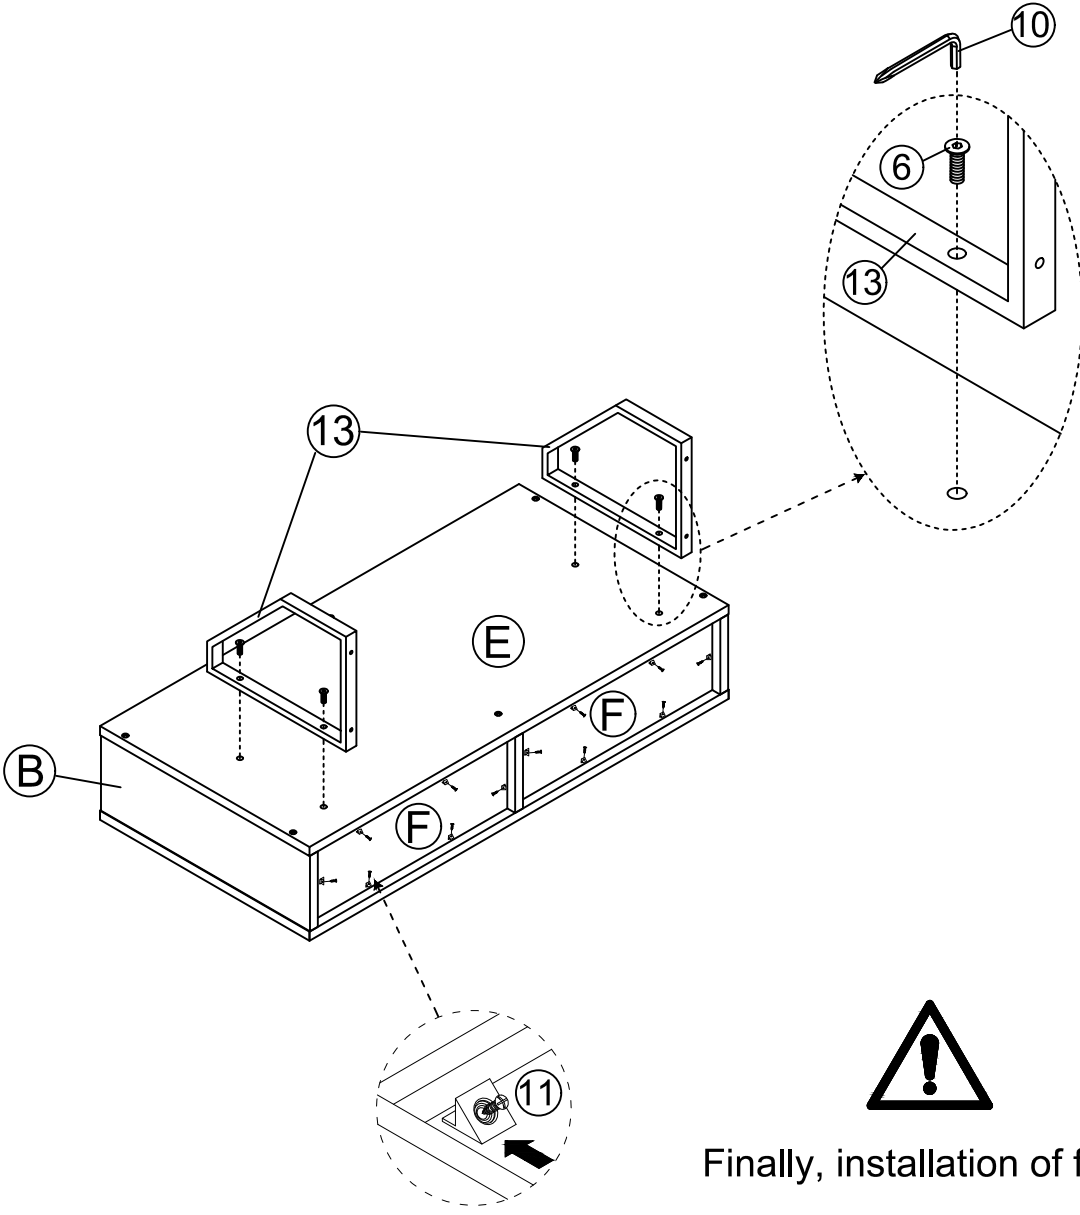


Finally, installation of fitting 11.


STEP6

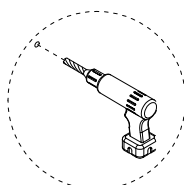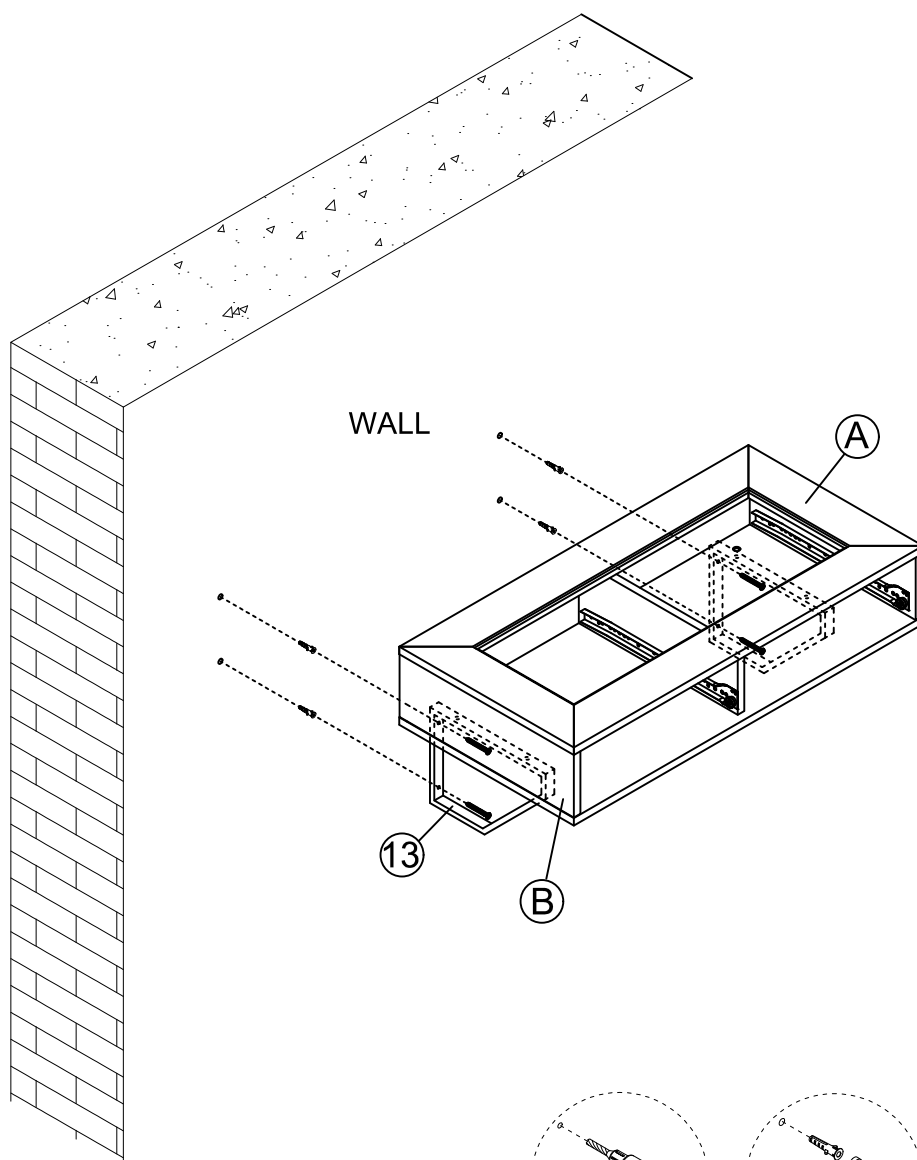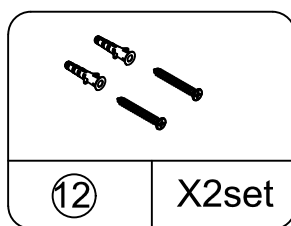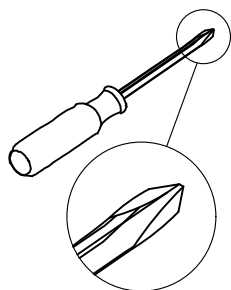

STEP1
drill four Ø6
holes on the wall




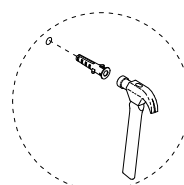


STEP2
put four anchors
in the holes


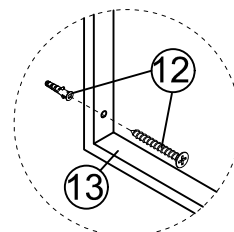


STEP3
fix the device on the
wall by the long
screws

STEP7

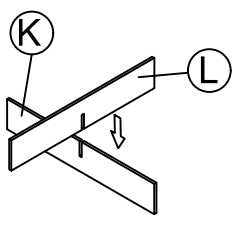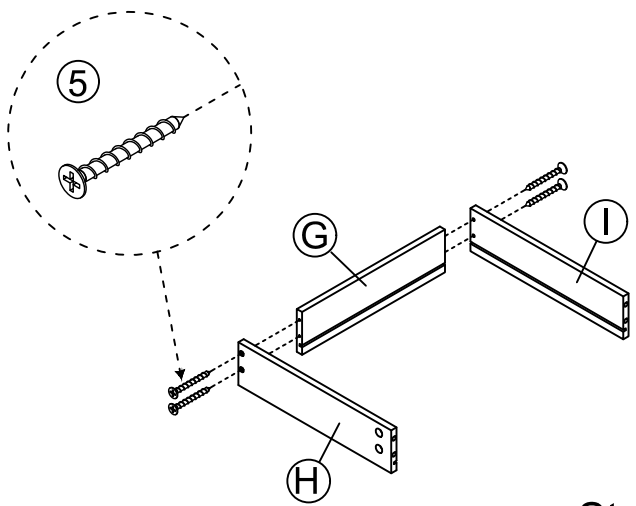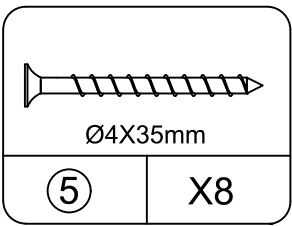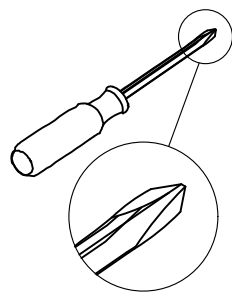






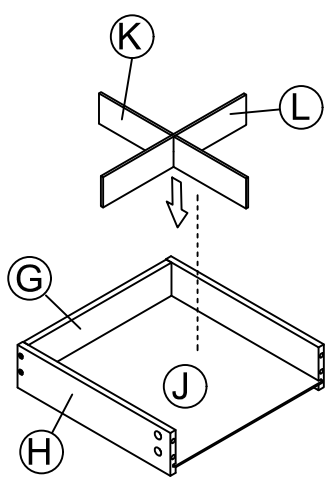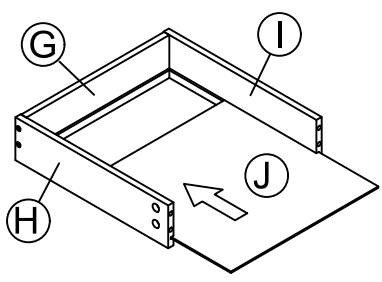Step 1 Step 3
Step 2 Step 4




X2

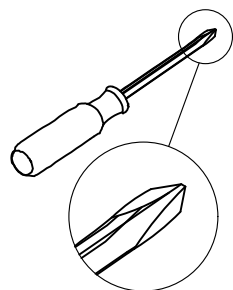STEP8




 Ø15X9.5mm		 Ø6.5X35mm		 122X20X15mm		 M4X19mm	
①	X8	②	X8	⑧	X2	⑨	X4

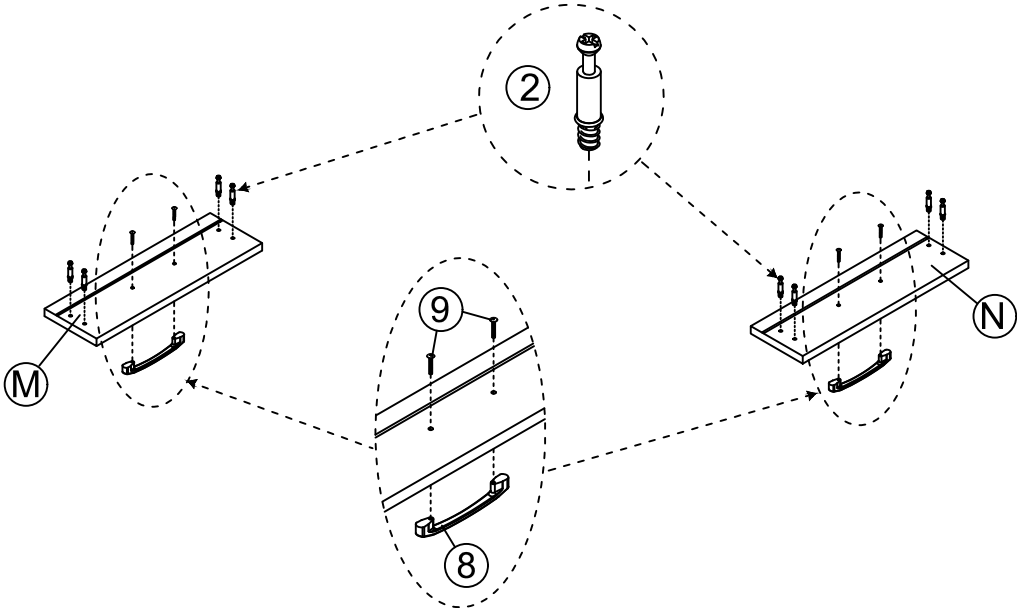


Step 1


Step 2

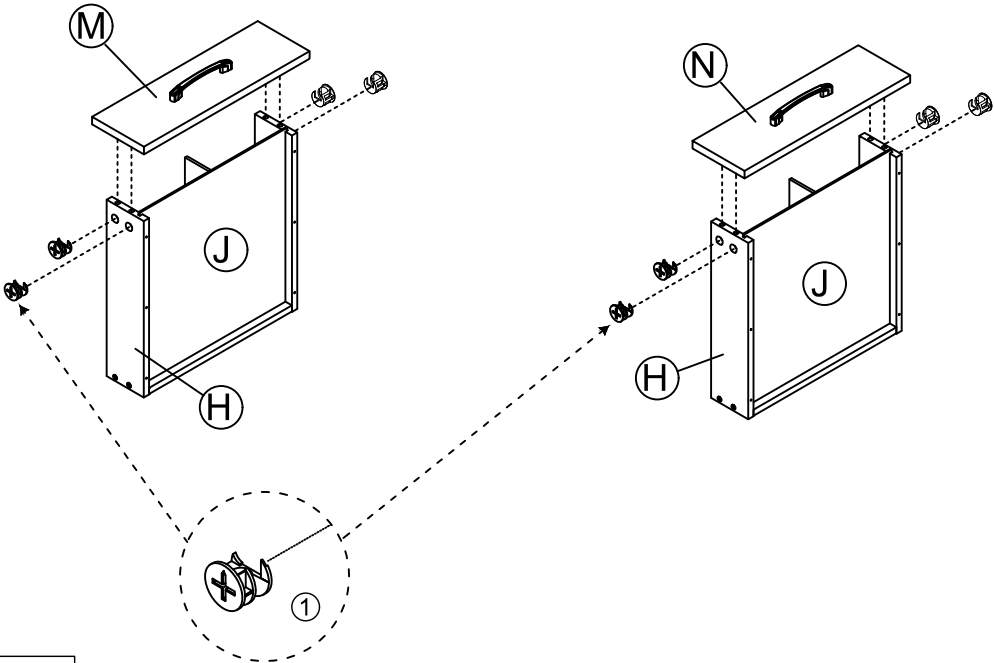


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

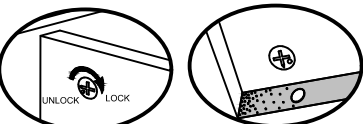



Proper orientation of CAM LOCK

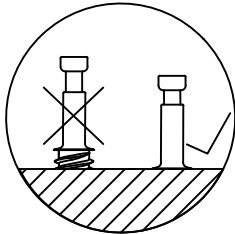



STEP9

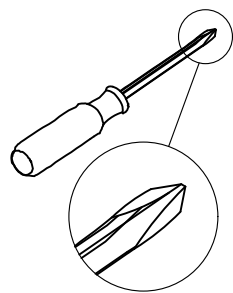

 Ø3.5X14mm	
④	X12



14"  350mm	
7DL	X2

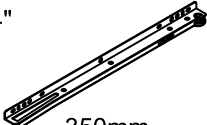14"  350mm	
7DR	X2

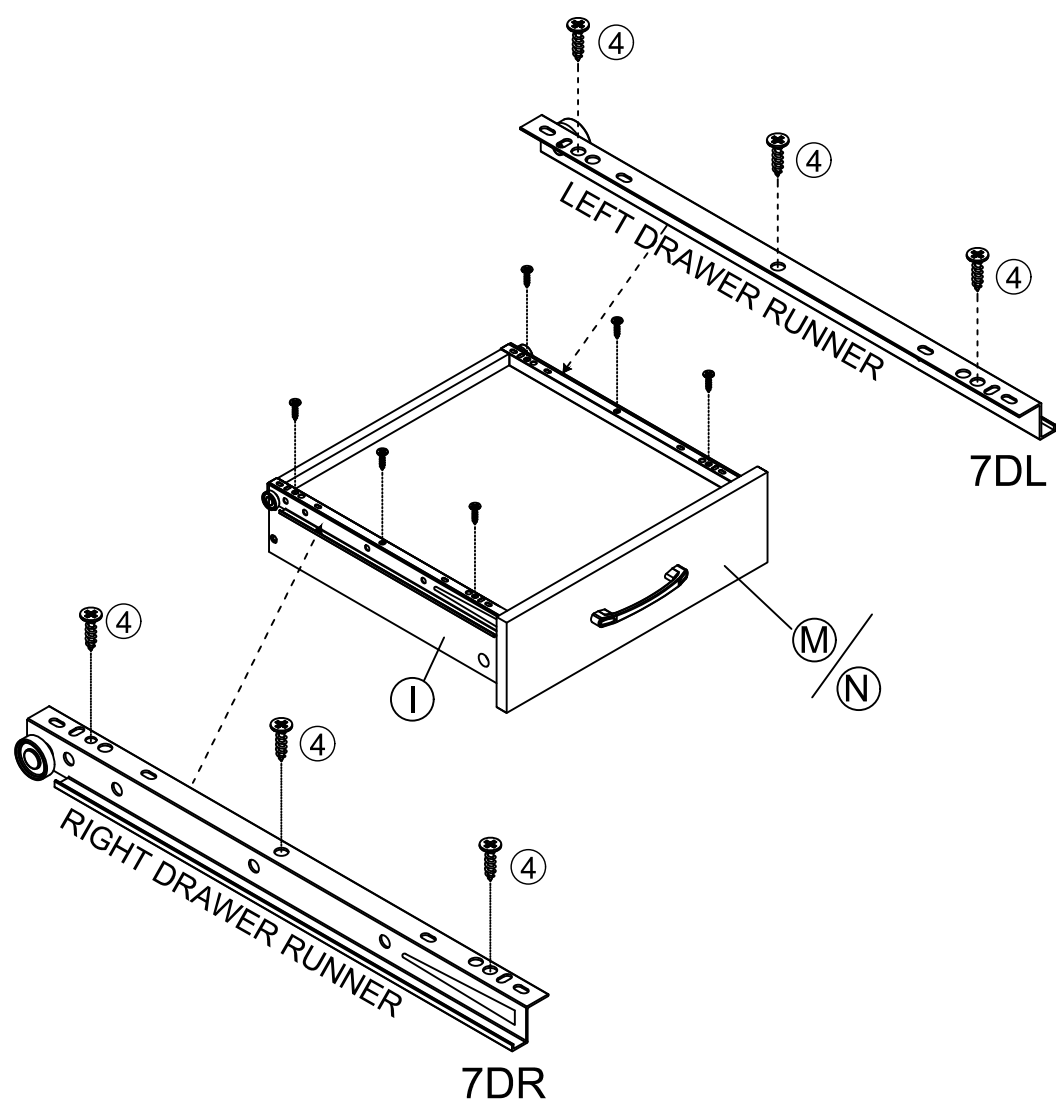

X2

STEP10

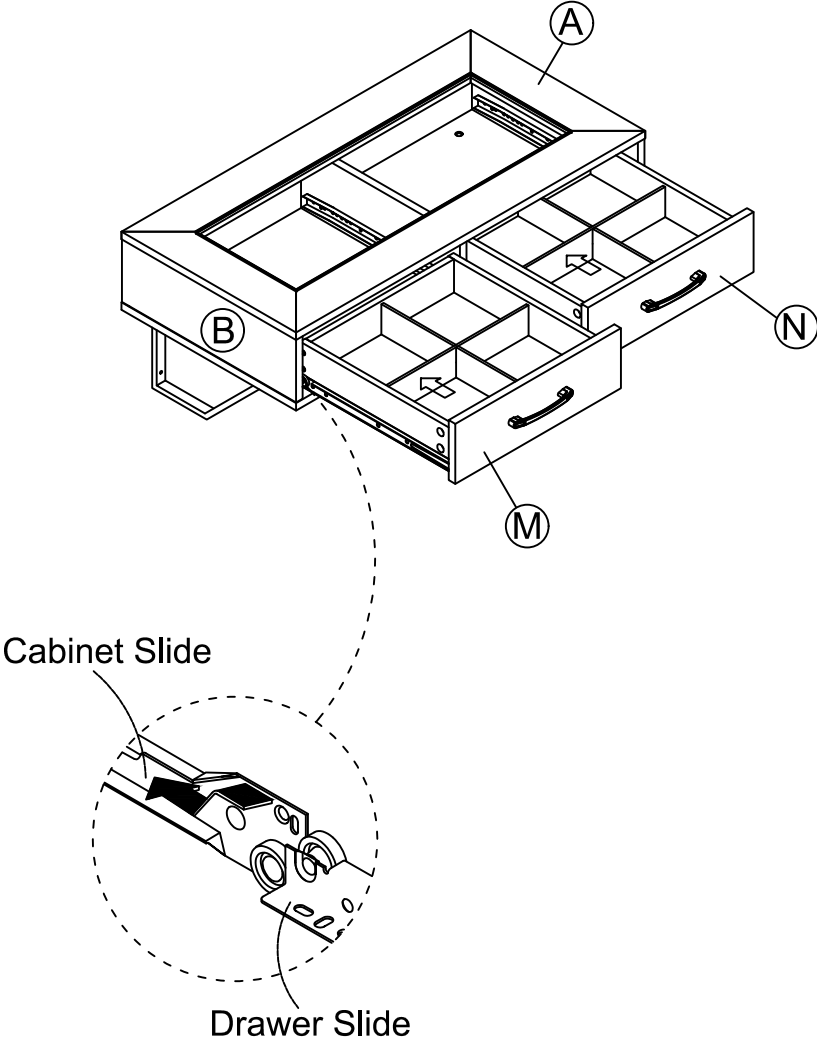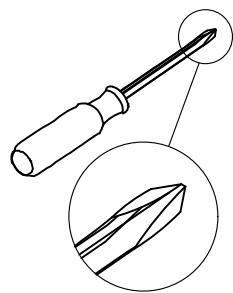

STEP11

