




Product Installation Instructions

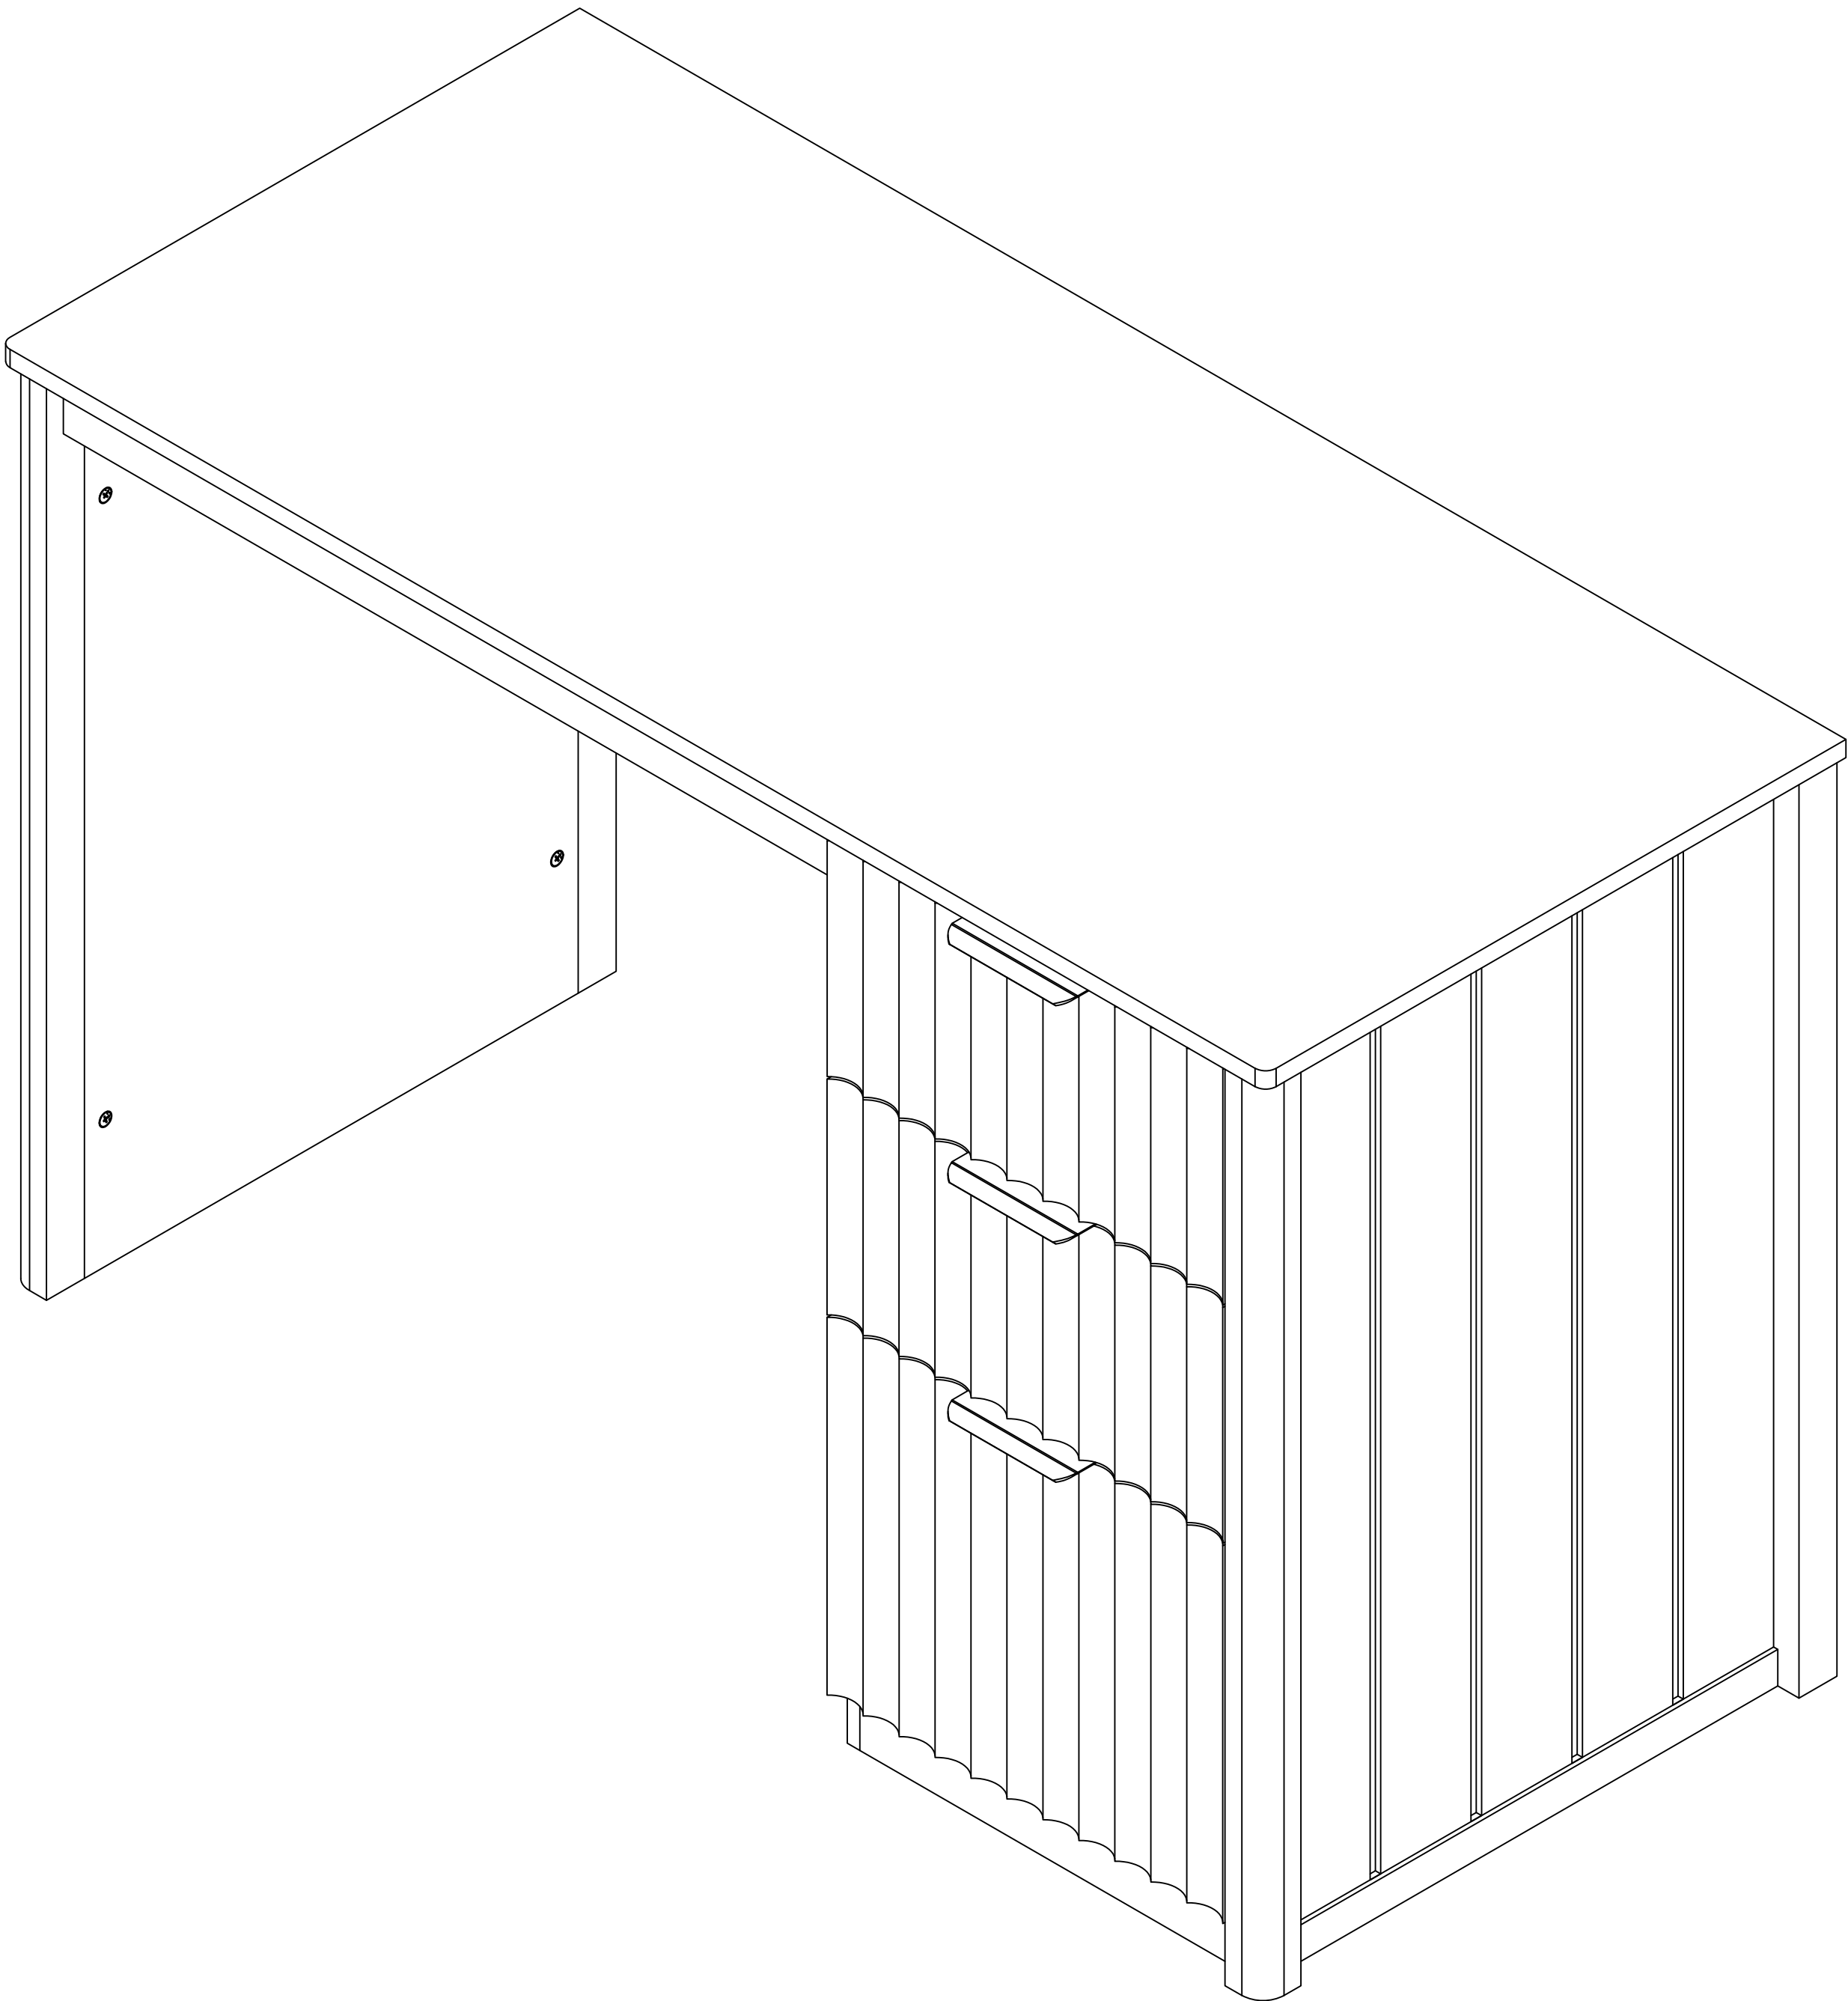


Product Explosion diagram

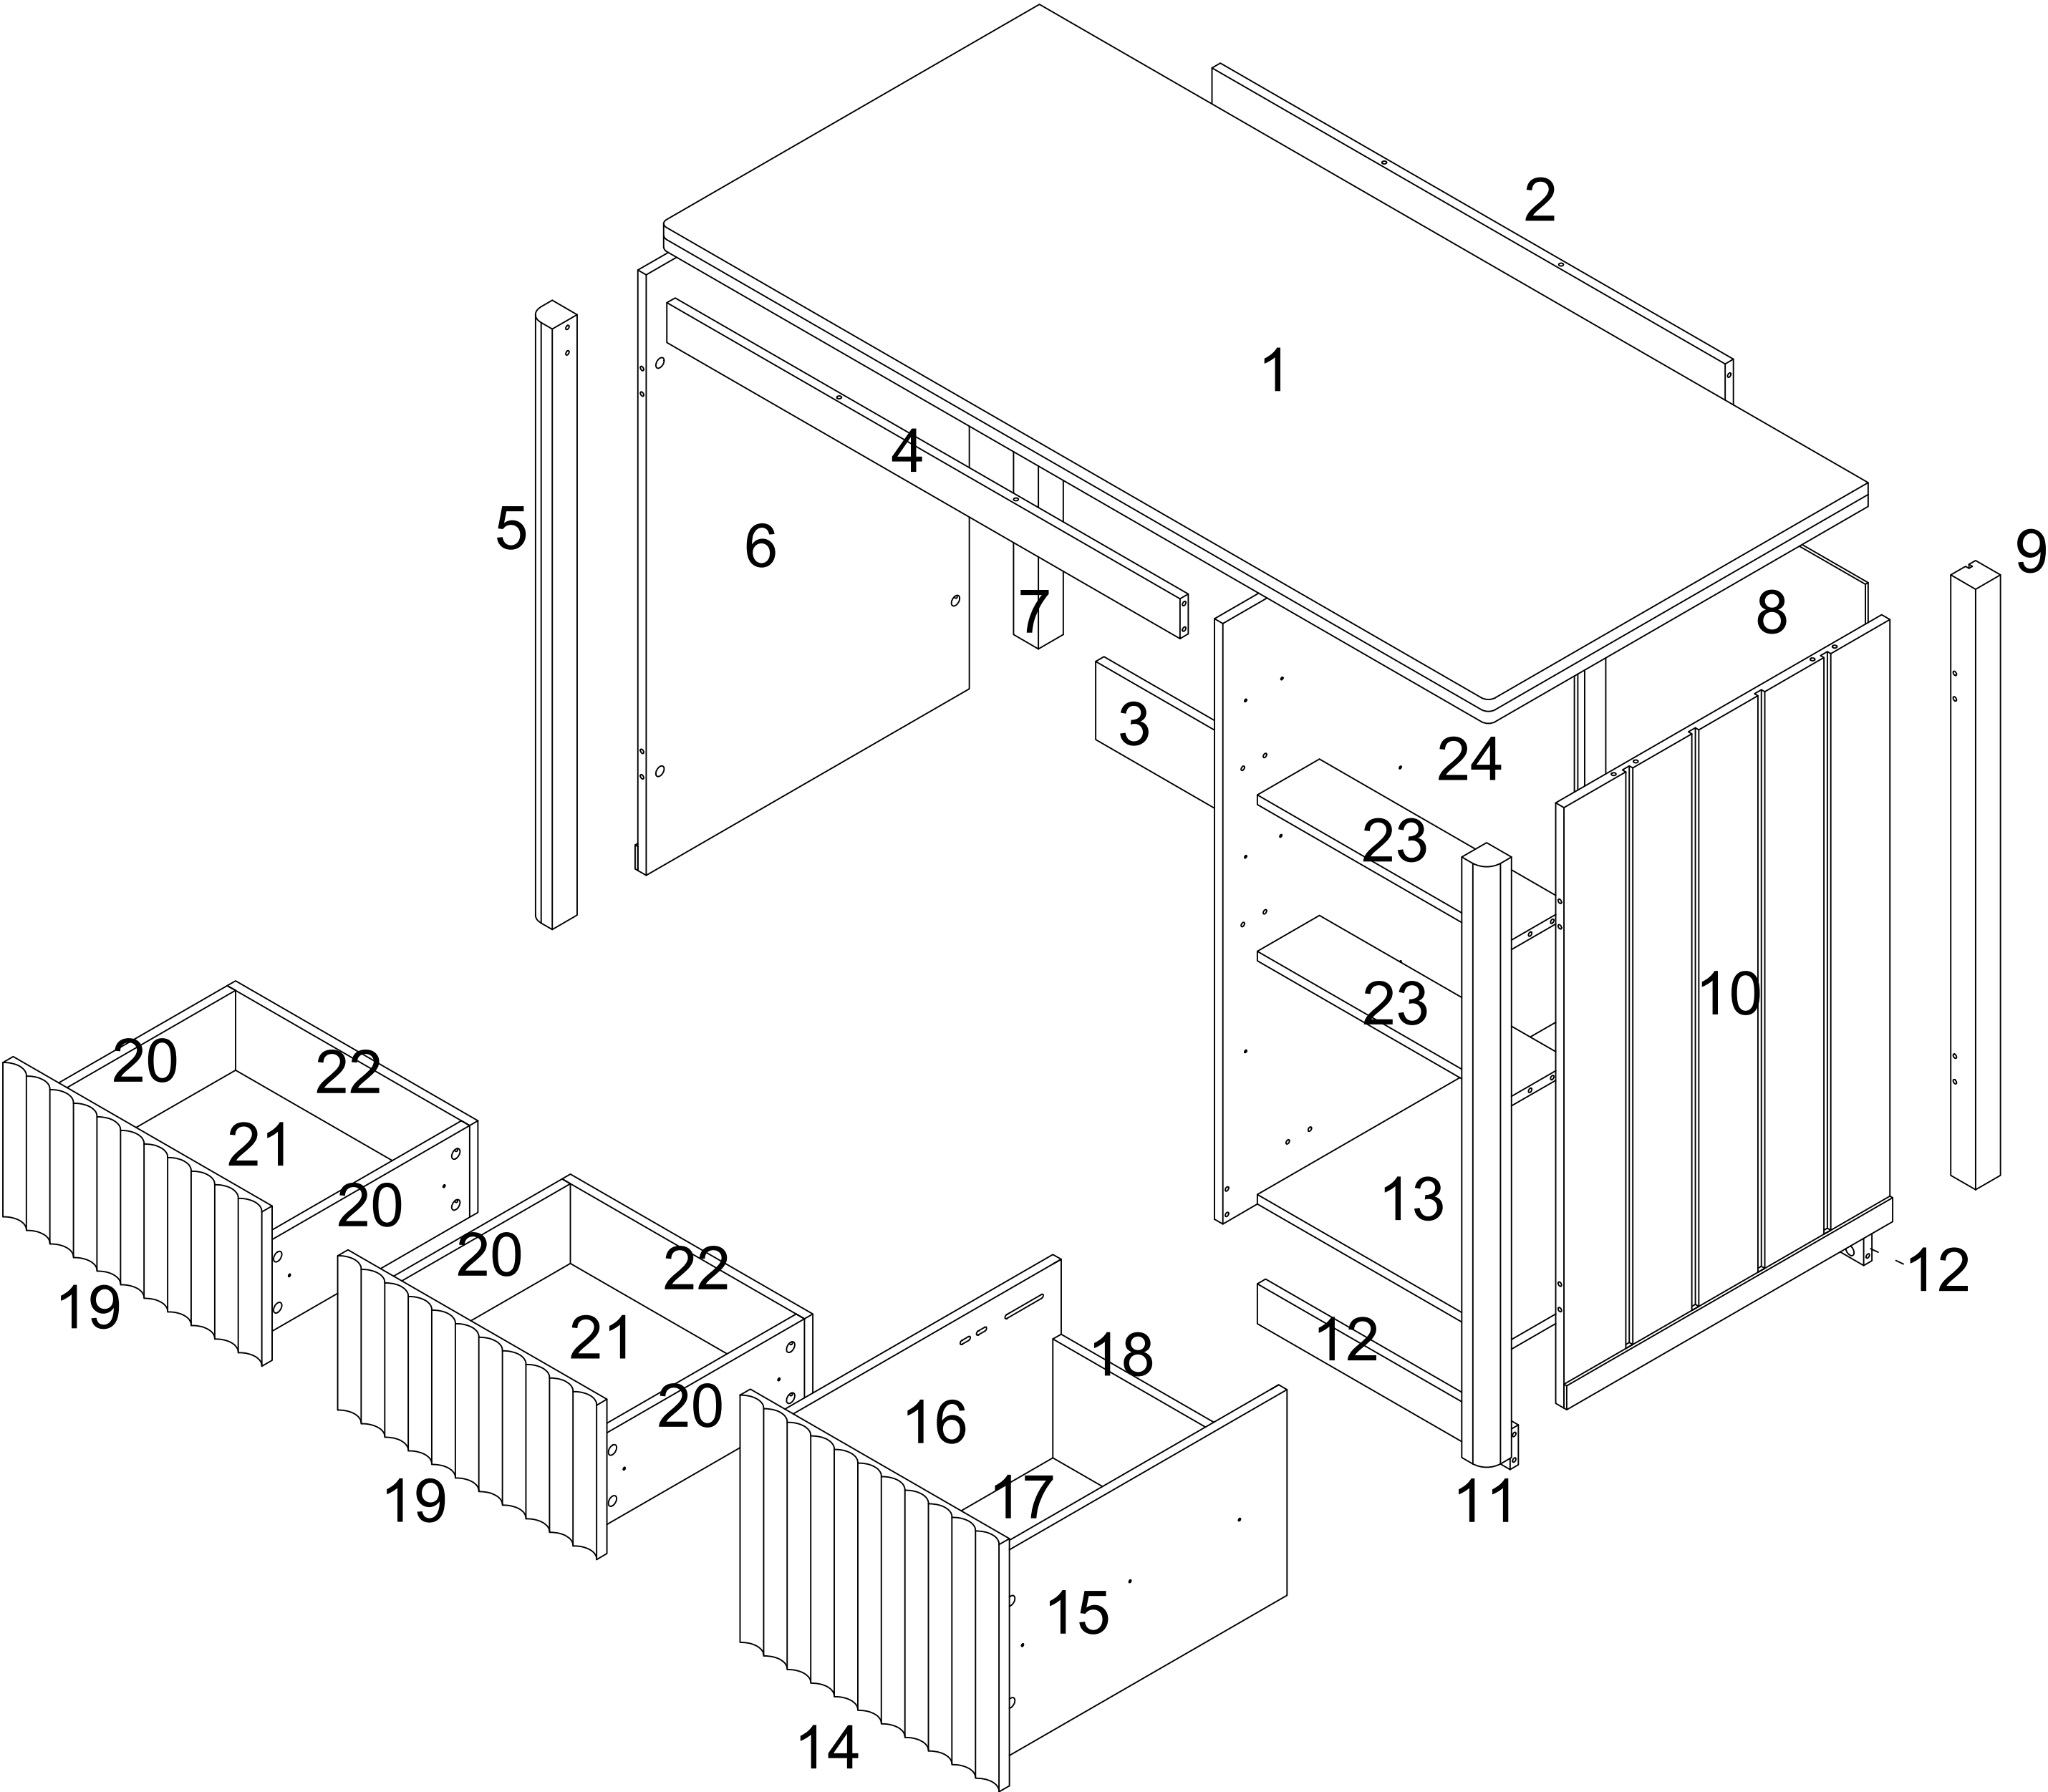


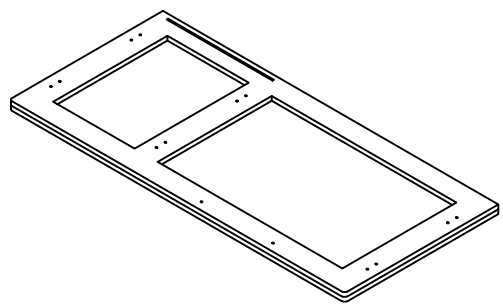


1x1

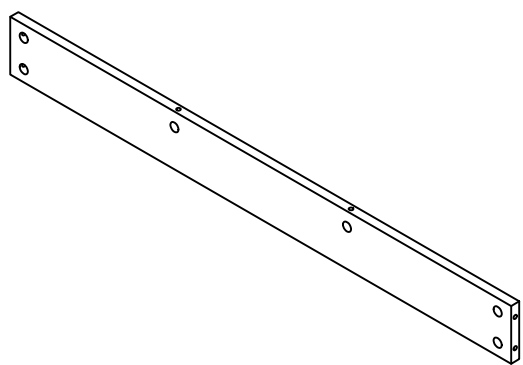

2x1

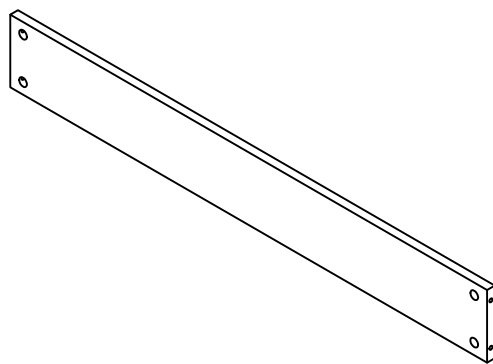


3x1

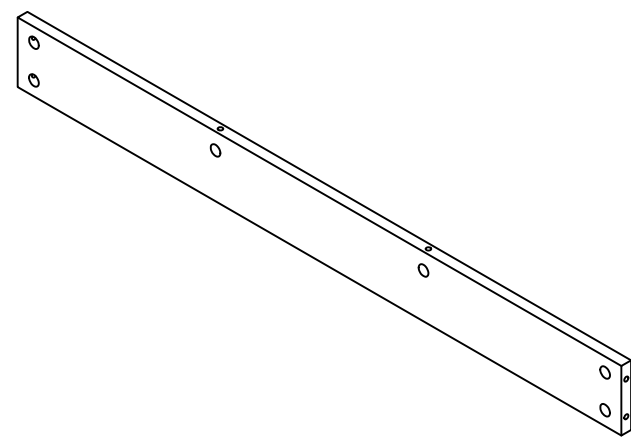

4x1



5x1

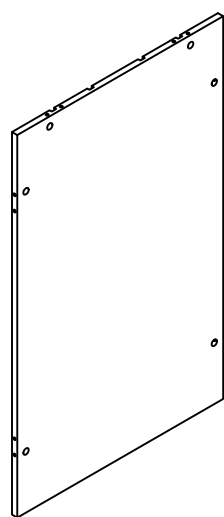


6x1




7x1



8x1




9x1

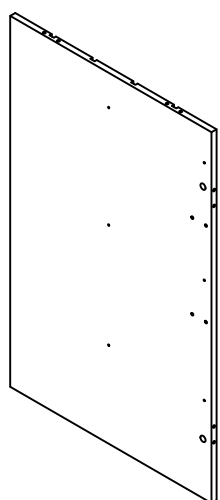


10x1




11x1

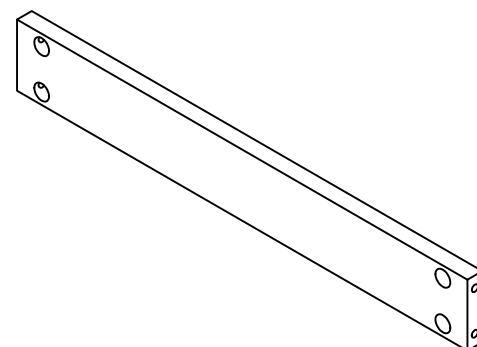


12x2

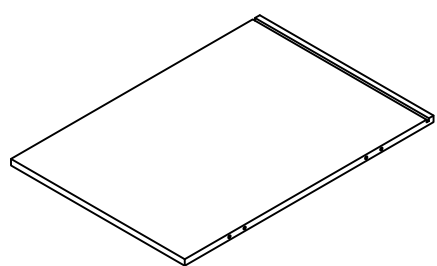


13x1

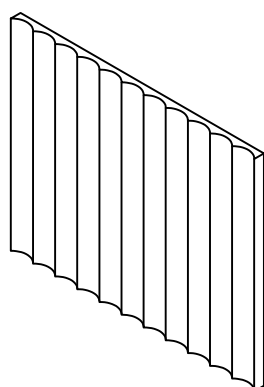


14x1

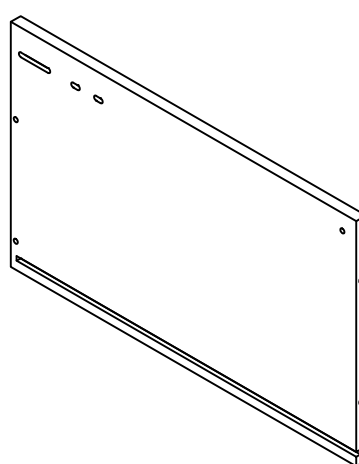


15x1

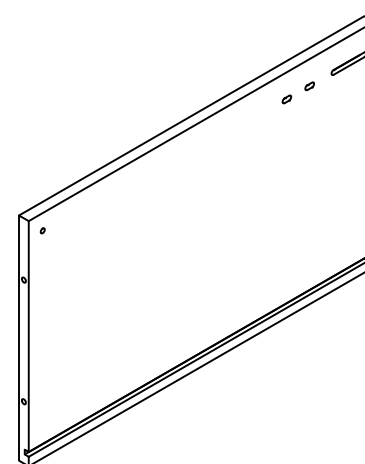


16x1

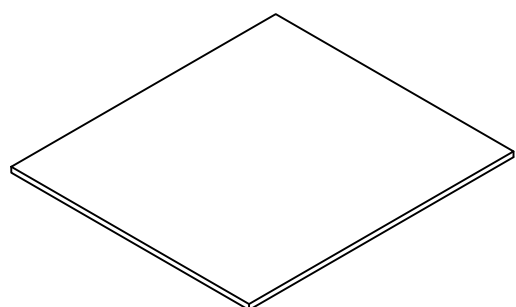


17x1

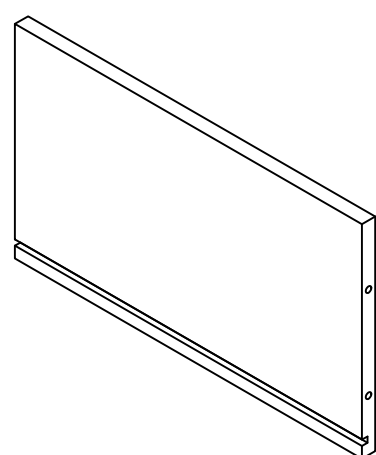


18x1

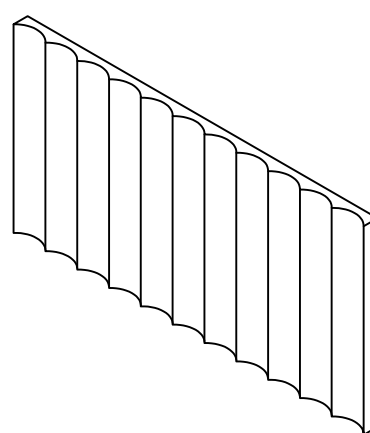


19x2

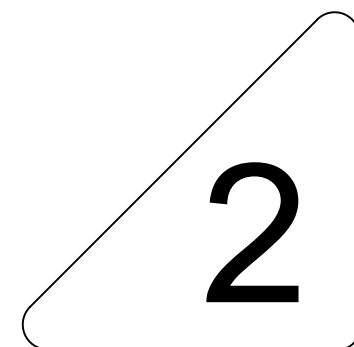


2

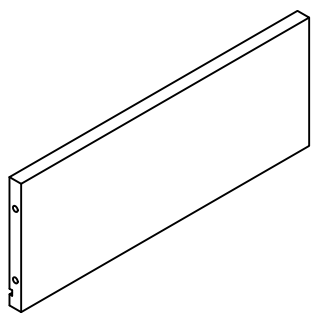


20x4

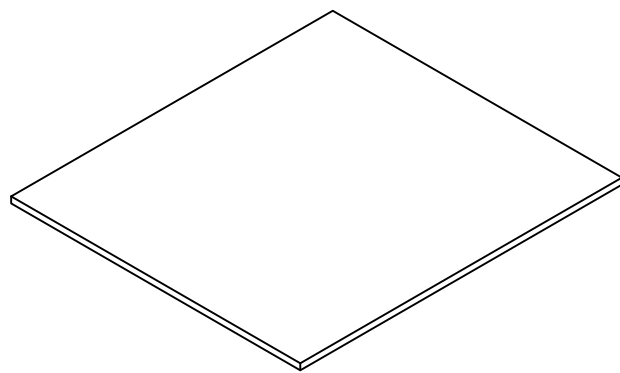


21x2

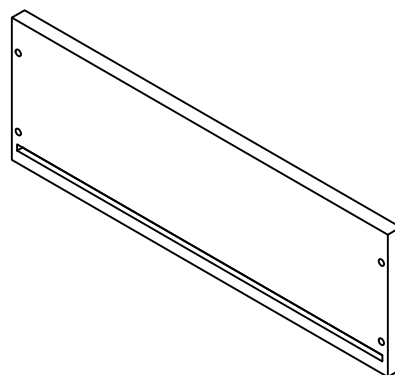

22x2












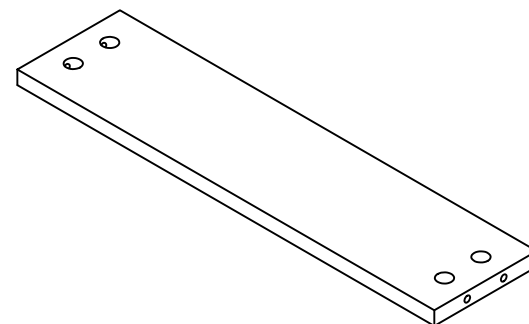



23x2

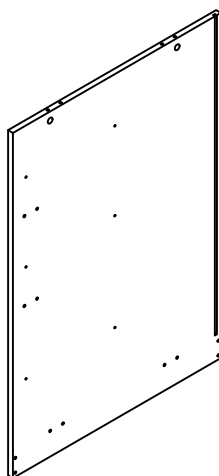


24x1

Accessories list

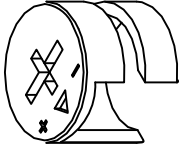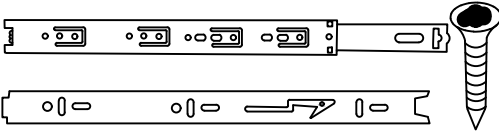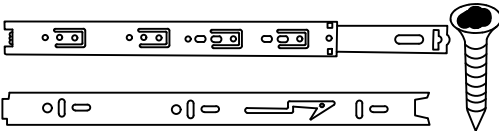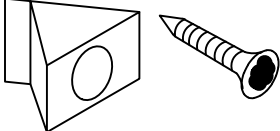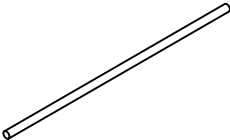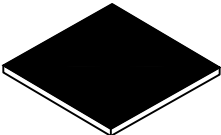A		Two In One Screw (6x33mm)	56pcs +3pcs
B		Two In One Nut (15x10mm)	74pcs +3pcs
C		Wood Chipping (6x30mm)	18pcs +1pcs
D		Handle & Screw (3.5x12mm)	3pcs / 6pcs +1pcs
E		Screw & Guide 12 inches (3x12mm)	4pcs / 20pcs +2pcs
F		Screw & Guide 16 inches (3x12mm)	2pcs / 12pcs +1pcs
G		Fixing clip & screw (3x17mm)	6pcs +1pcs
H		Anti-tipping tape	1pcs
		Screw (3.5x12mm) Gasket	1pcs
		Countersunk head tapping Screw (4x45mm)	1pcs
I		Iron wire	2pcs
J		Foot pads 36*36x2mm-R18	2pcs
K		Foot pads 36*36x2mm	2pcs
L		Foot pads	2pcs
M		Two In One Screw (6x35mm)	18pcs +2pcs

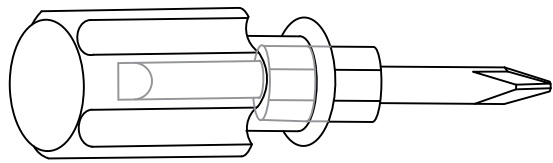


1pcs

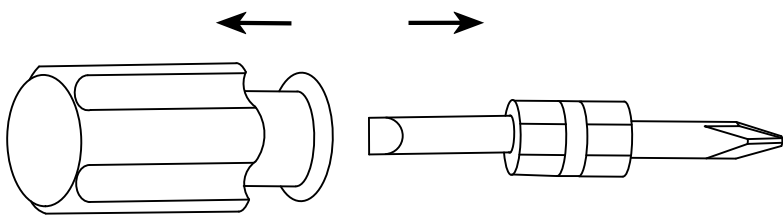


Double-head screwdriver, use as required

Product Explosion diagram

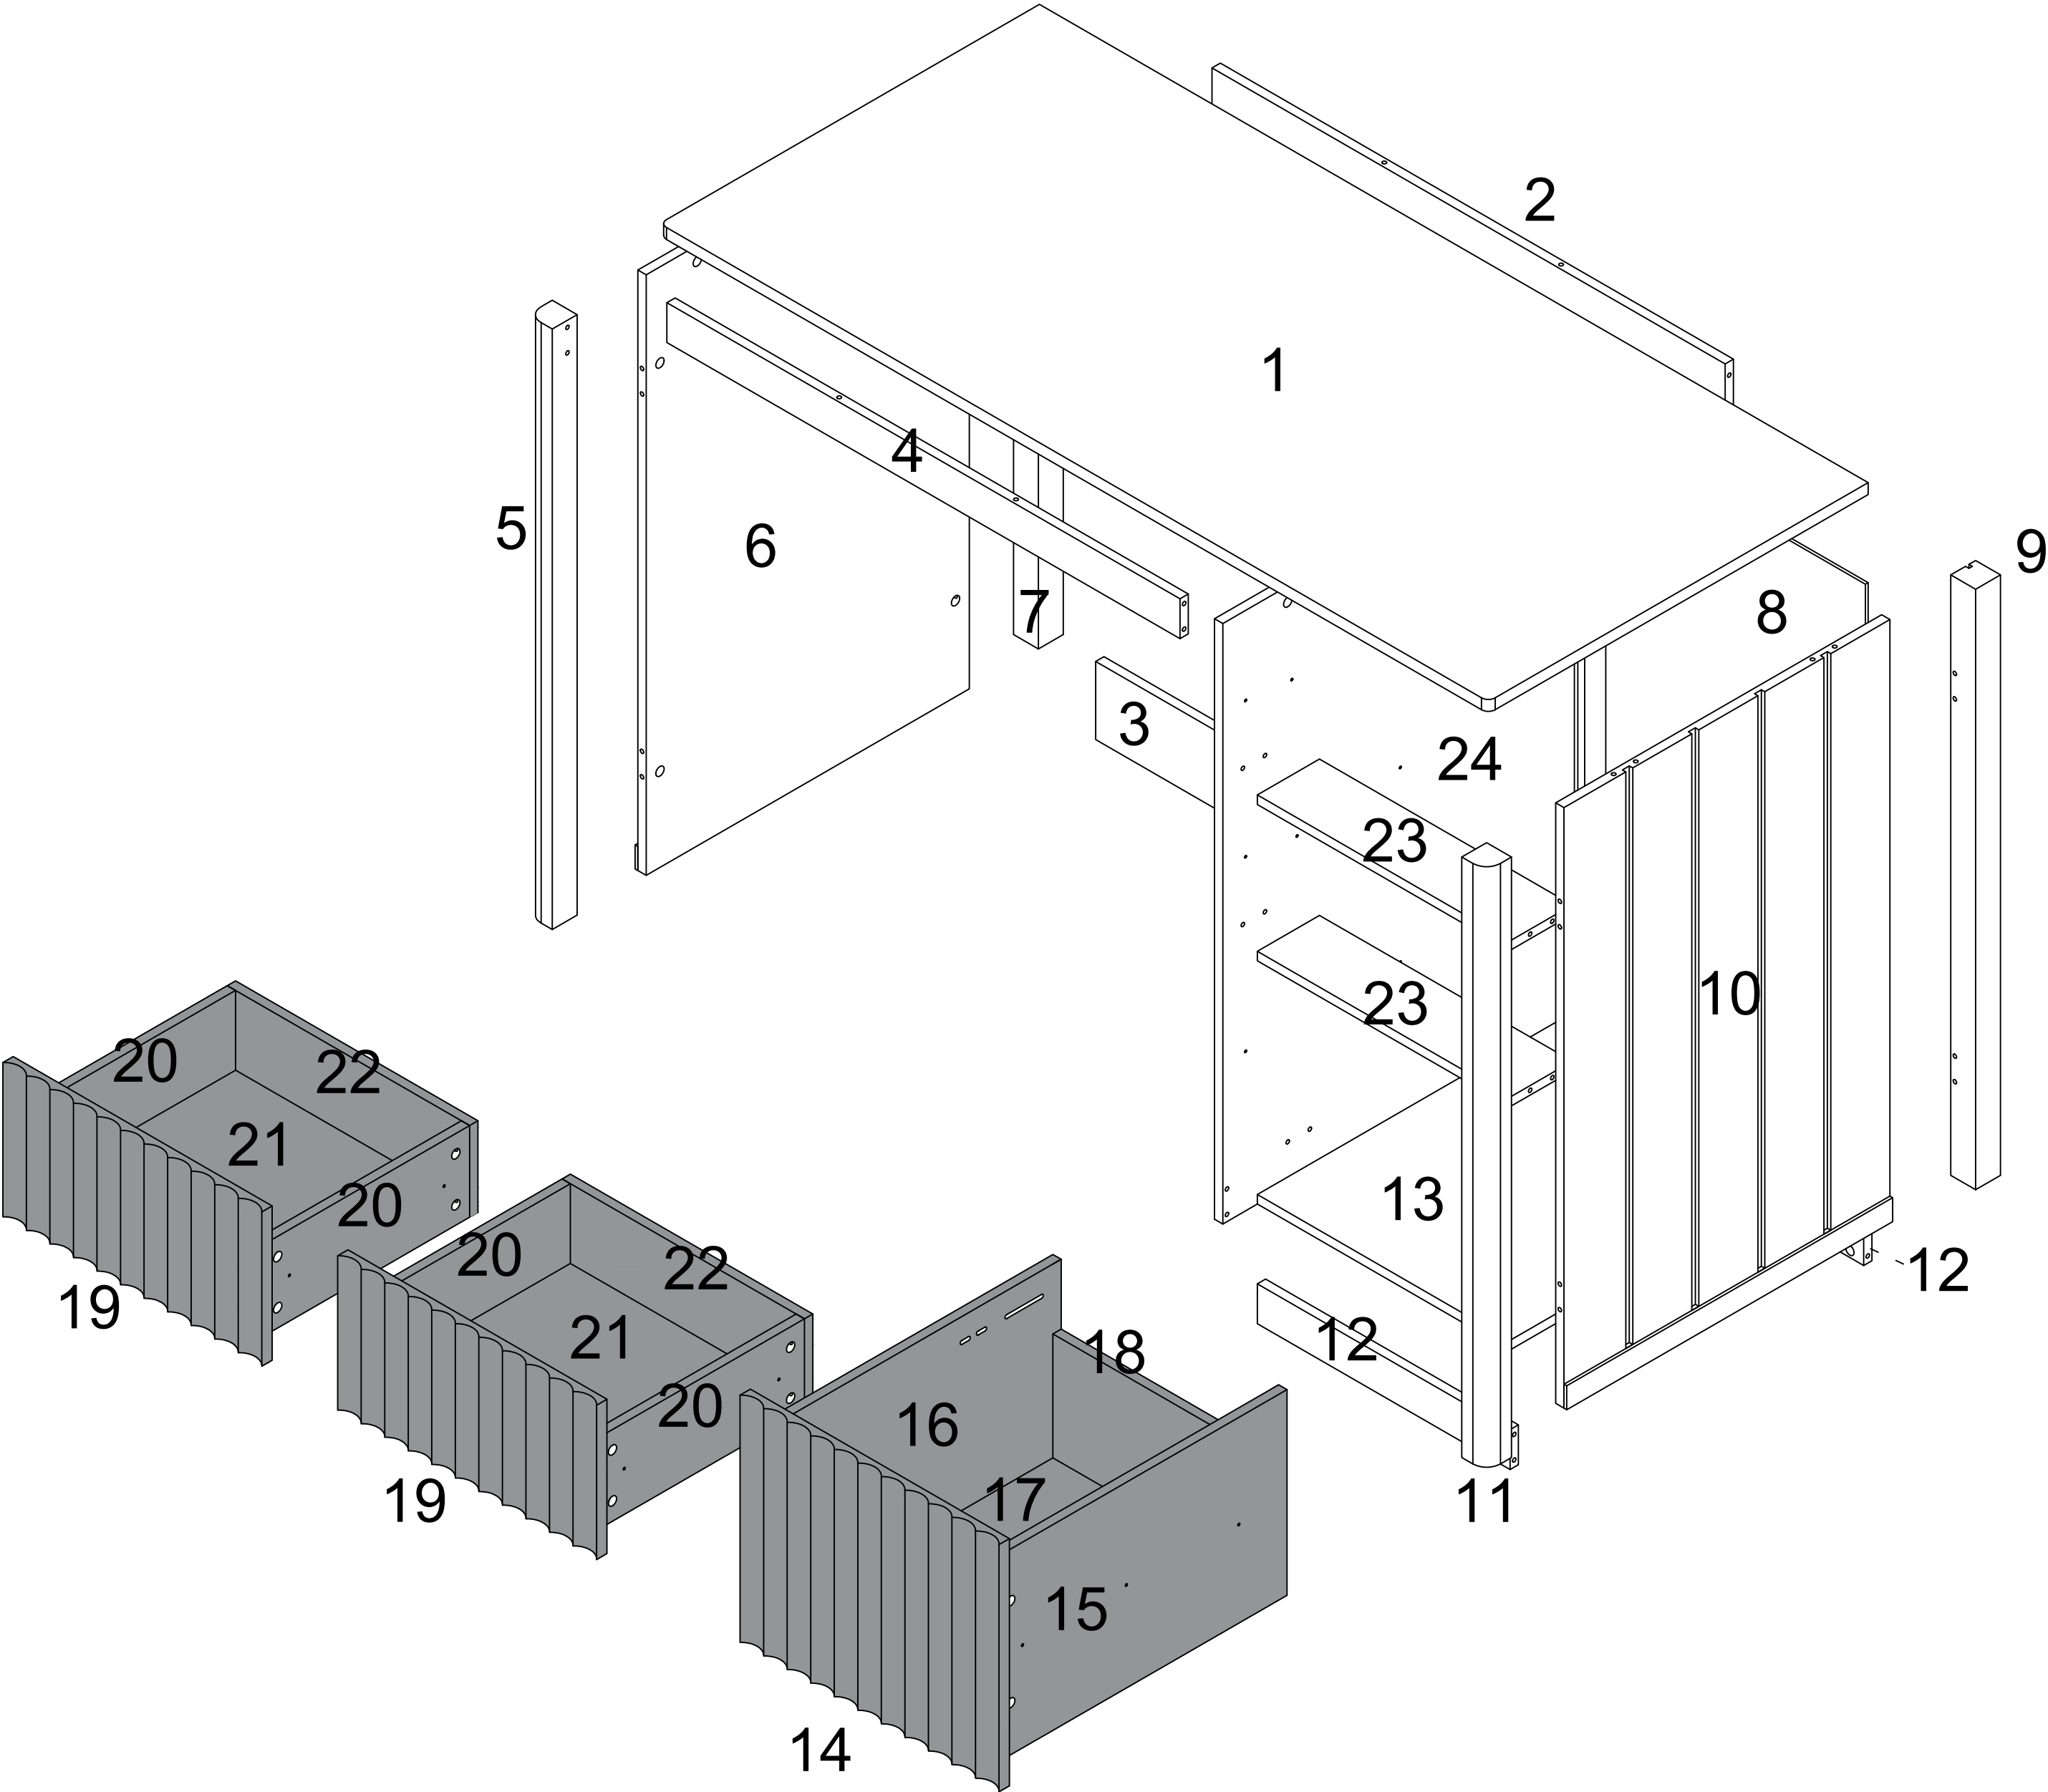


Use parts A and B




Step1

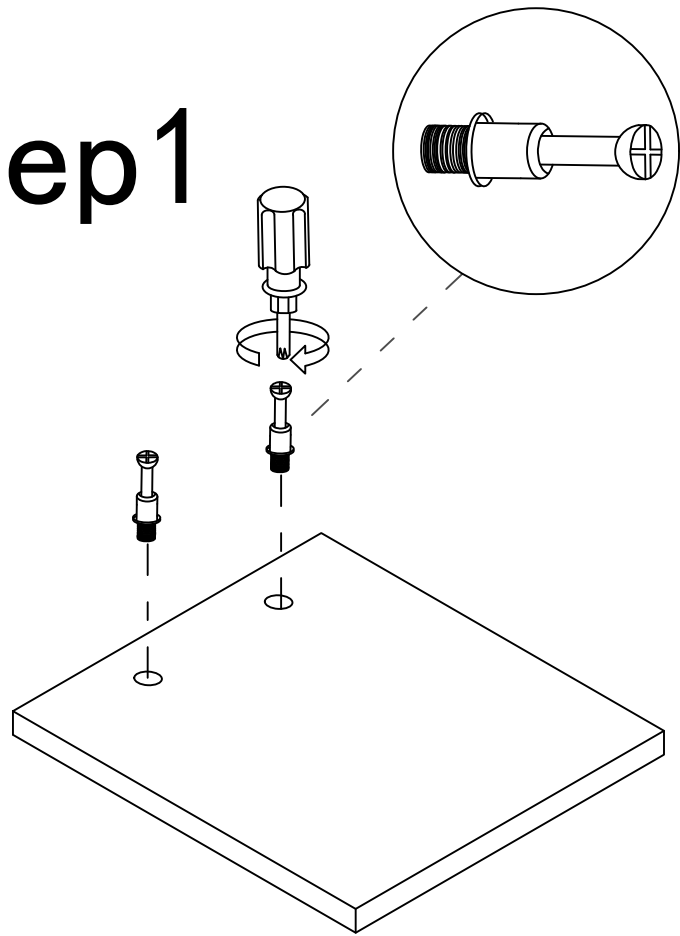

Step2

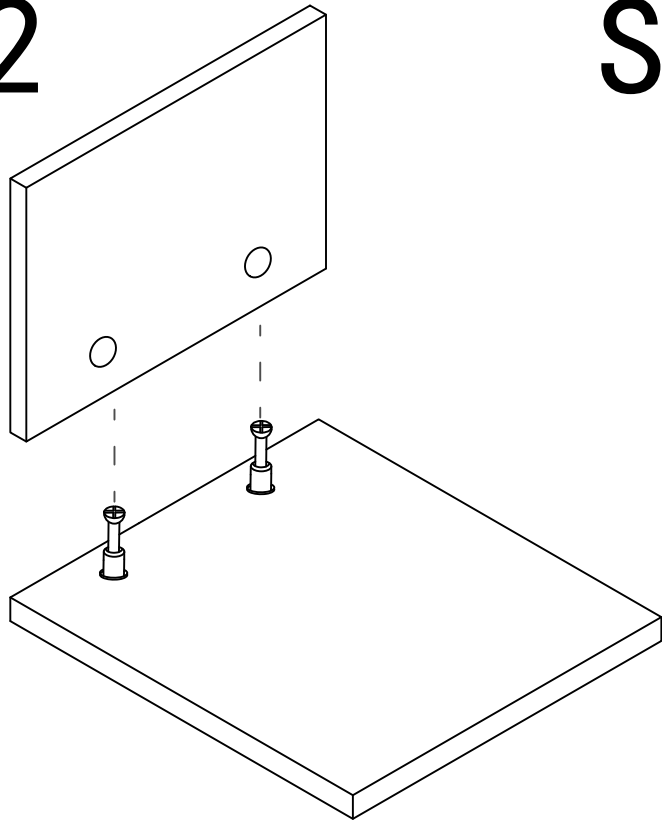


Step3

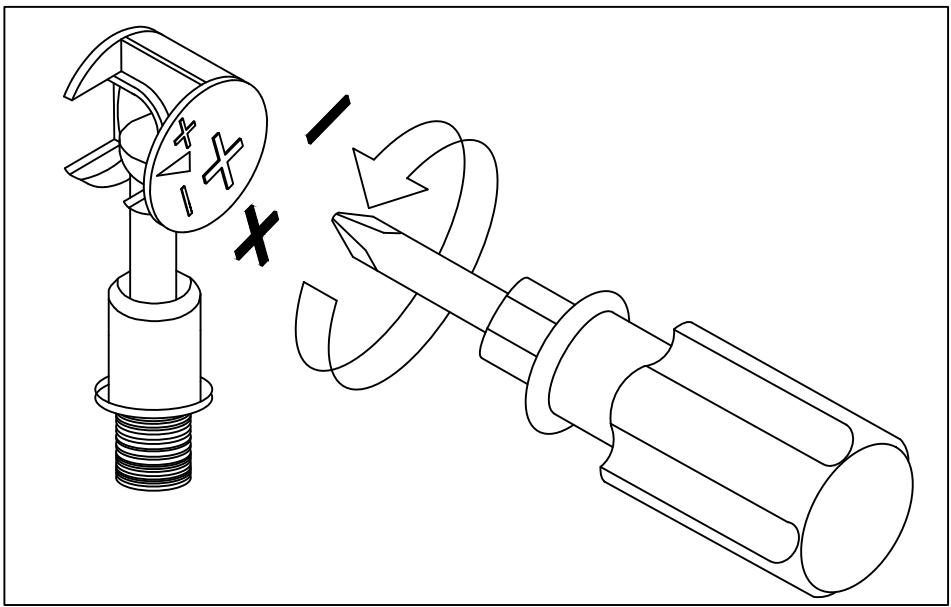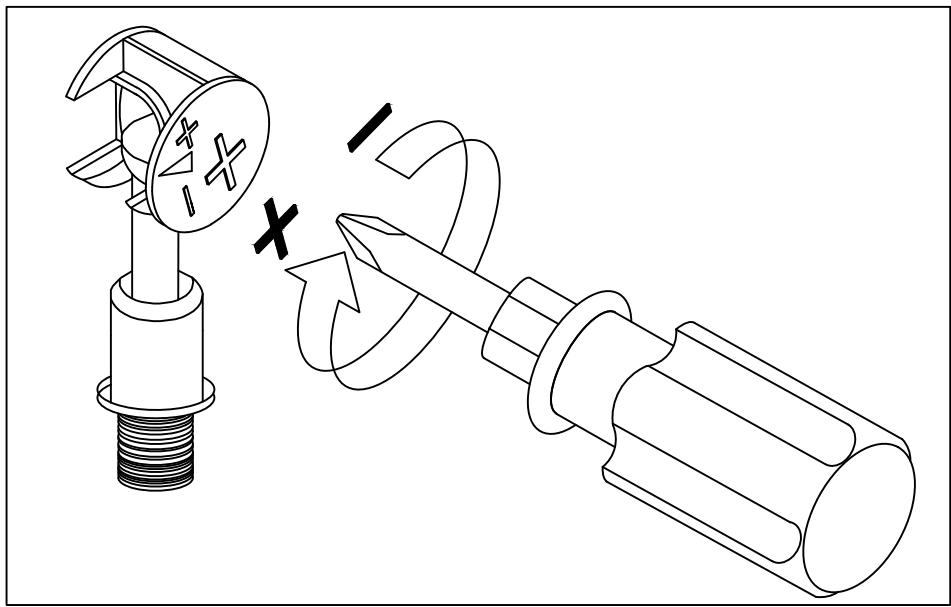
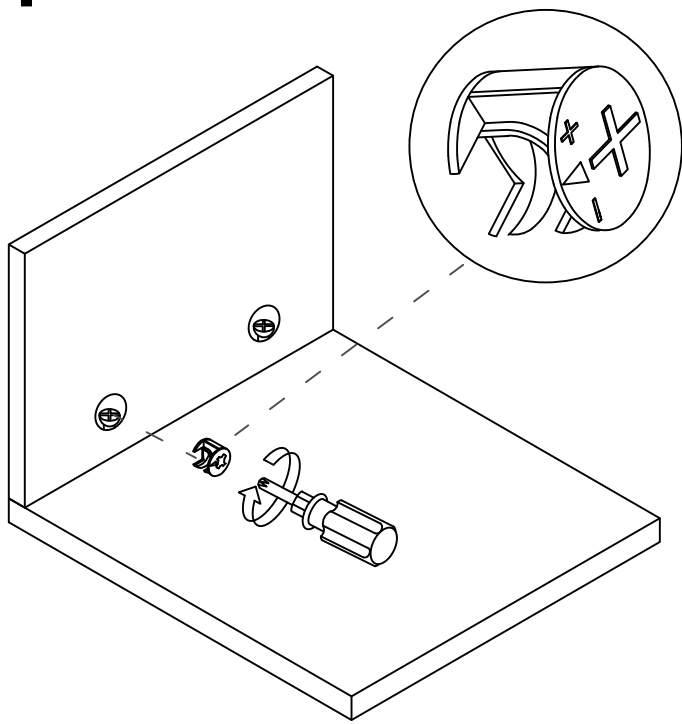


Use a screwdriver to lock in the direction of the "+" sign Disassemble along the direction of "-" sign


Step 1

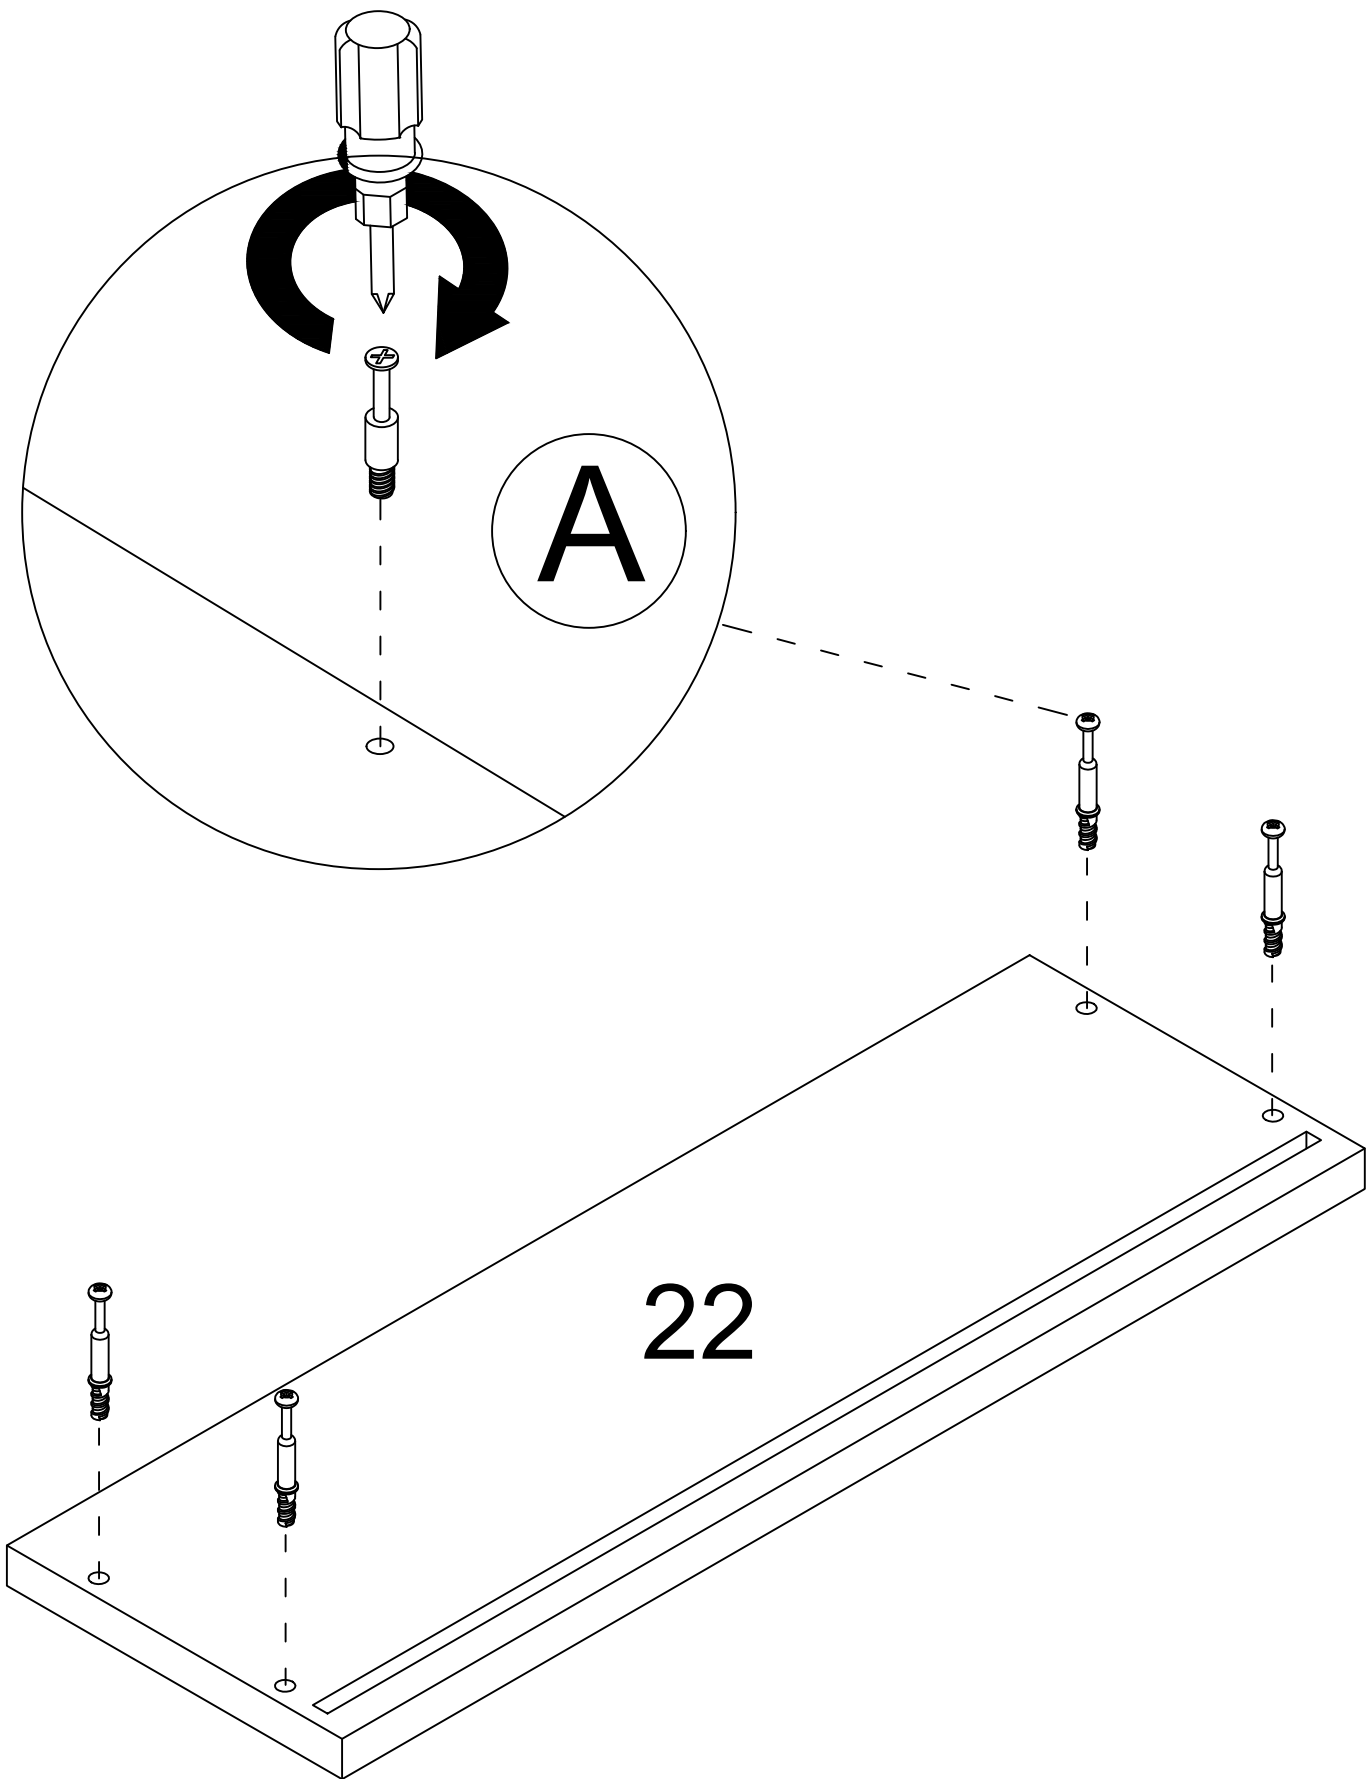

A

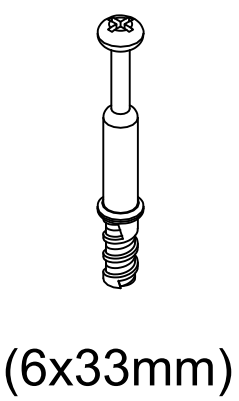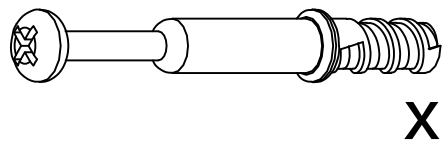


A

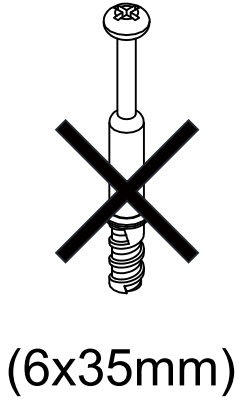


M

Step 2


B

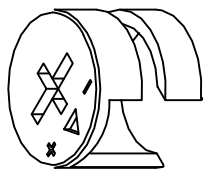




x4

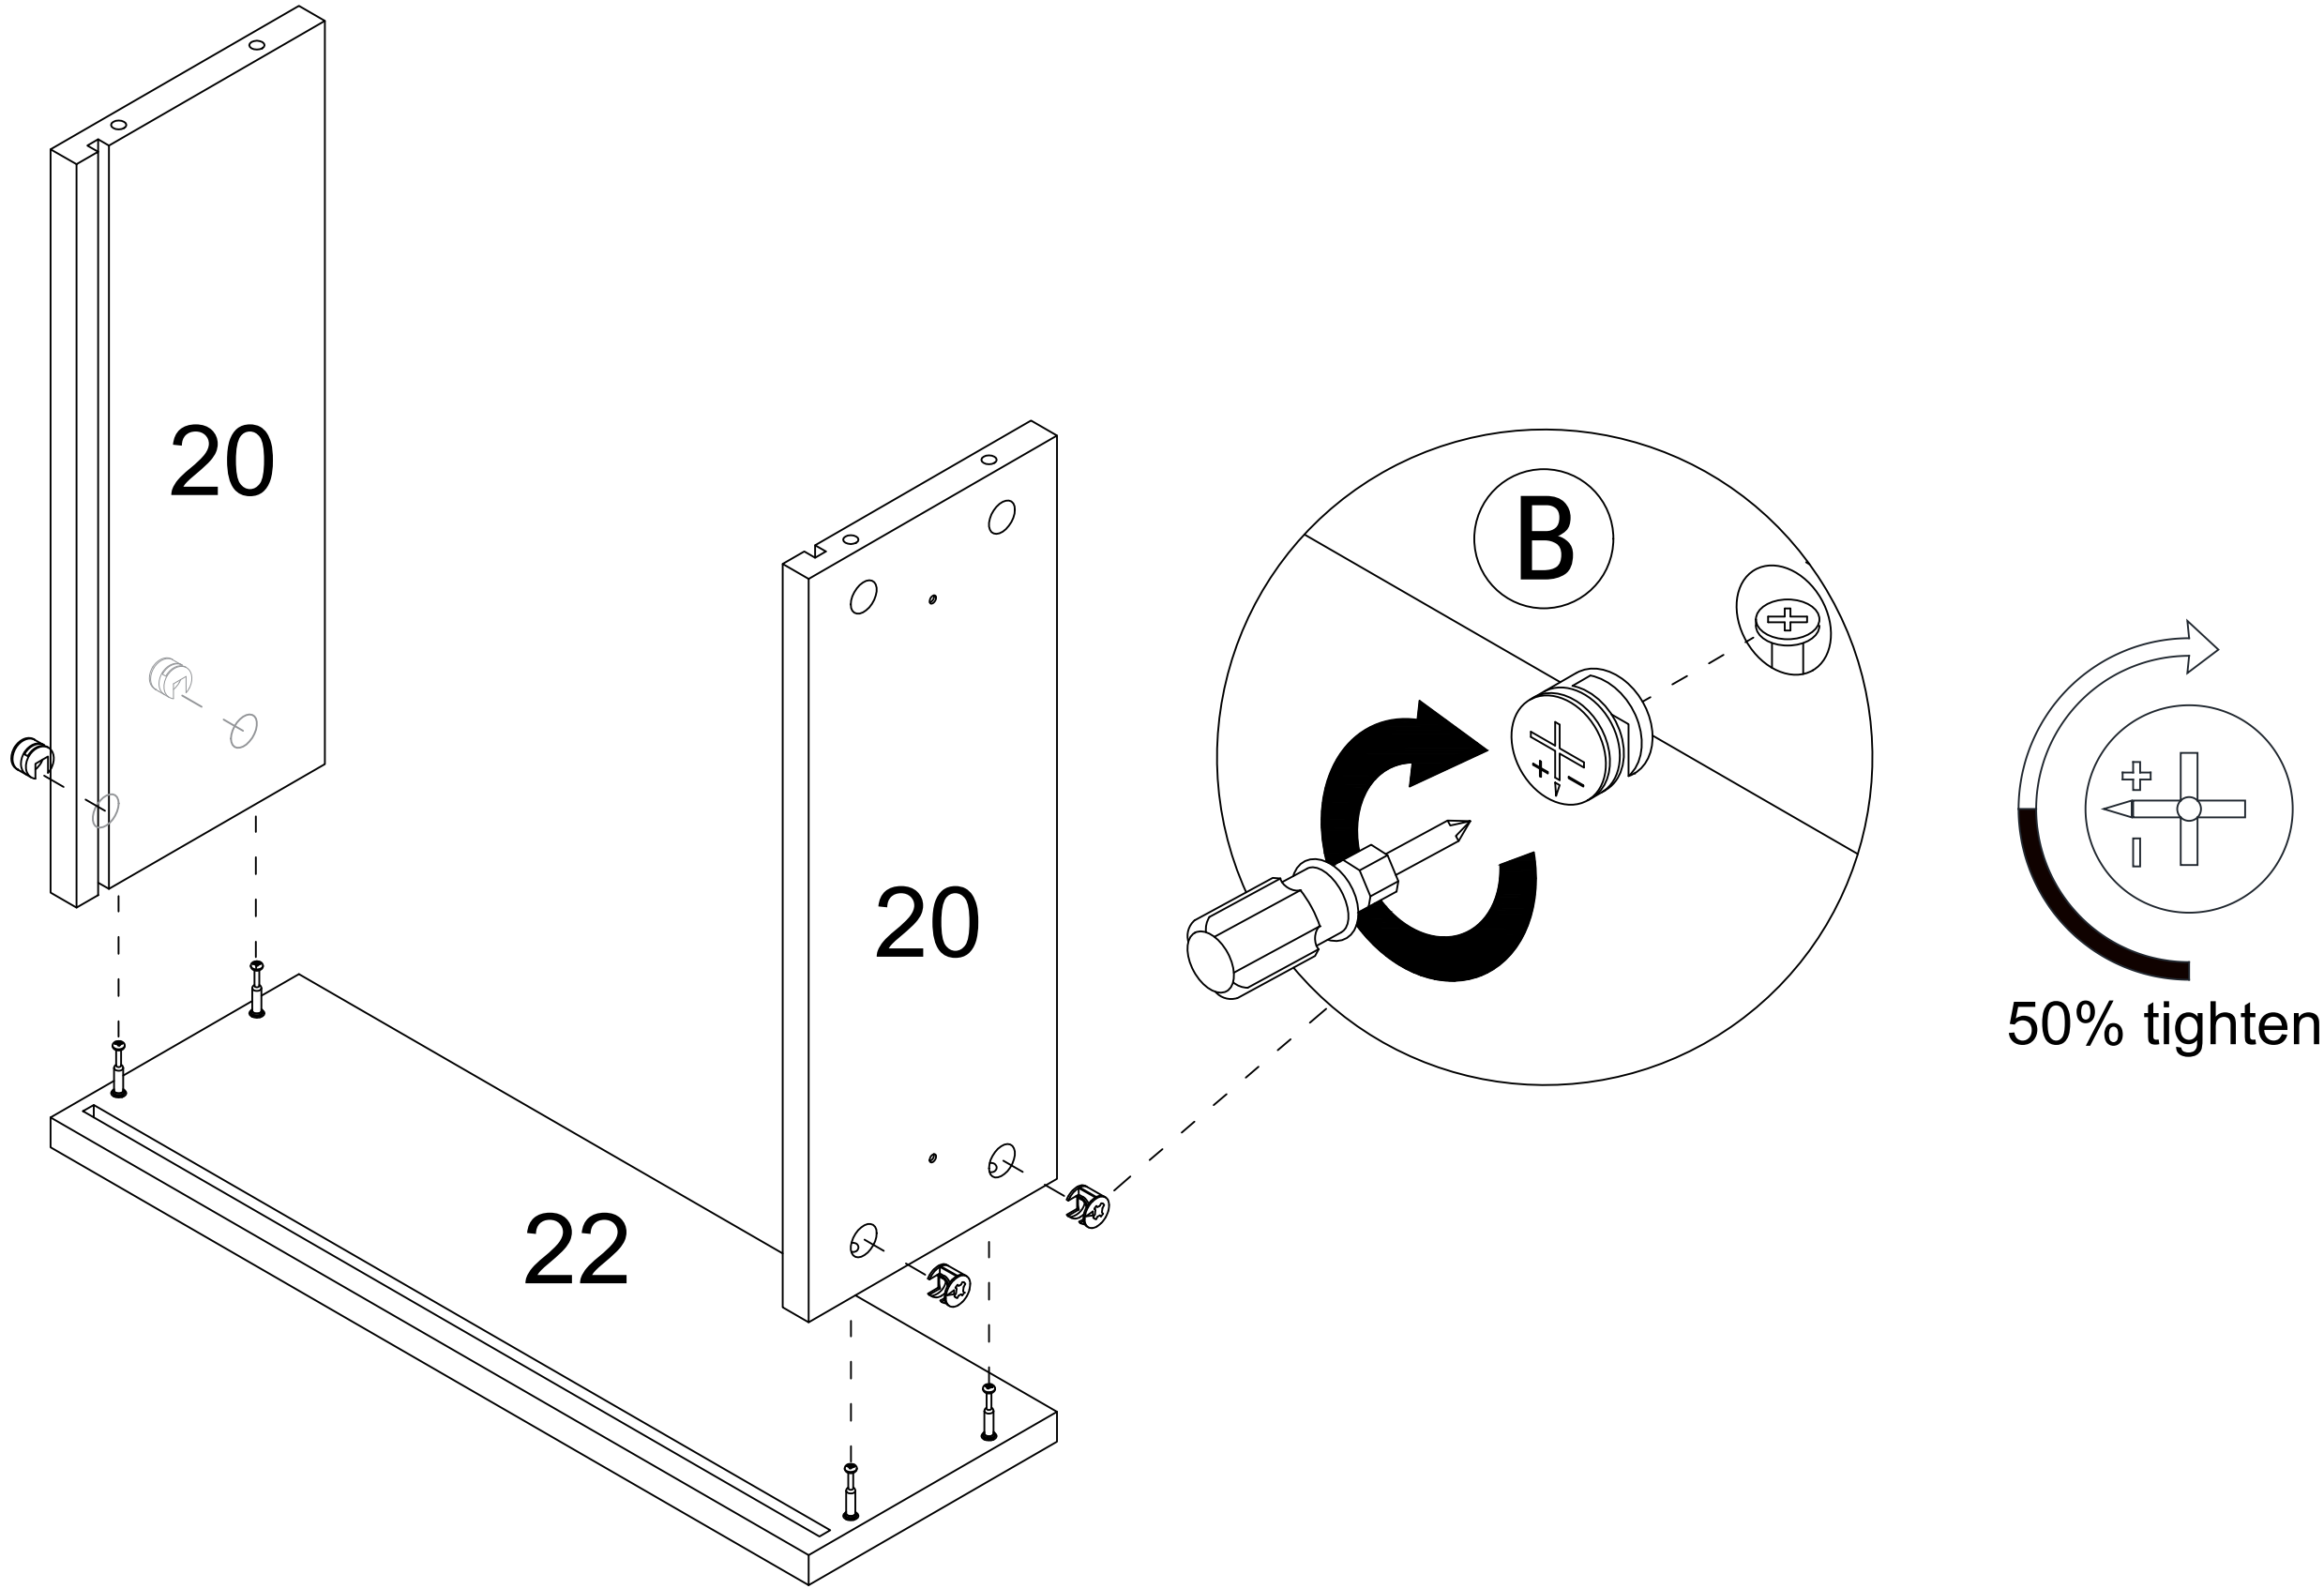




Step 3

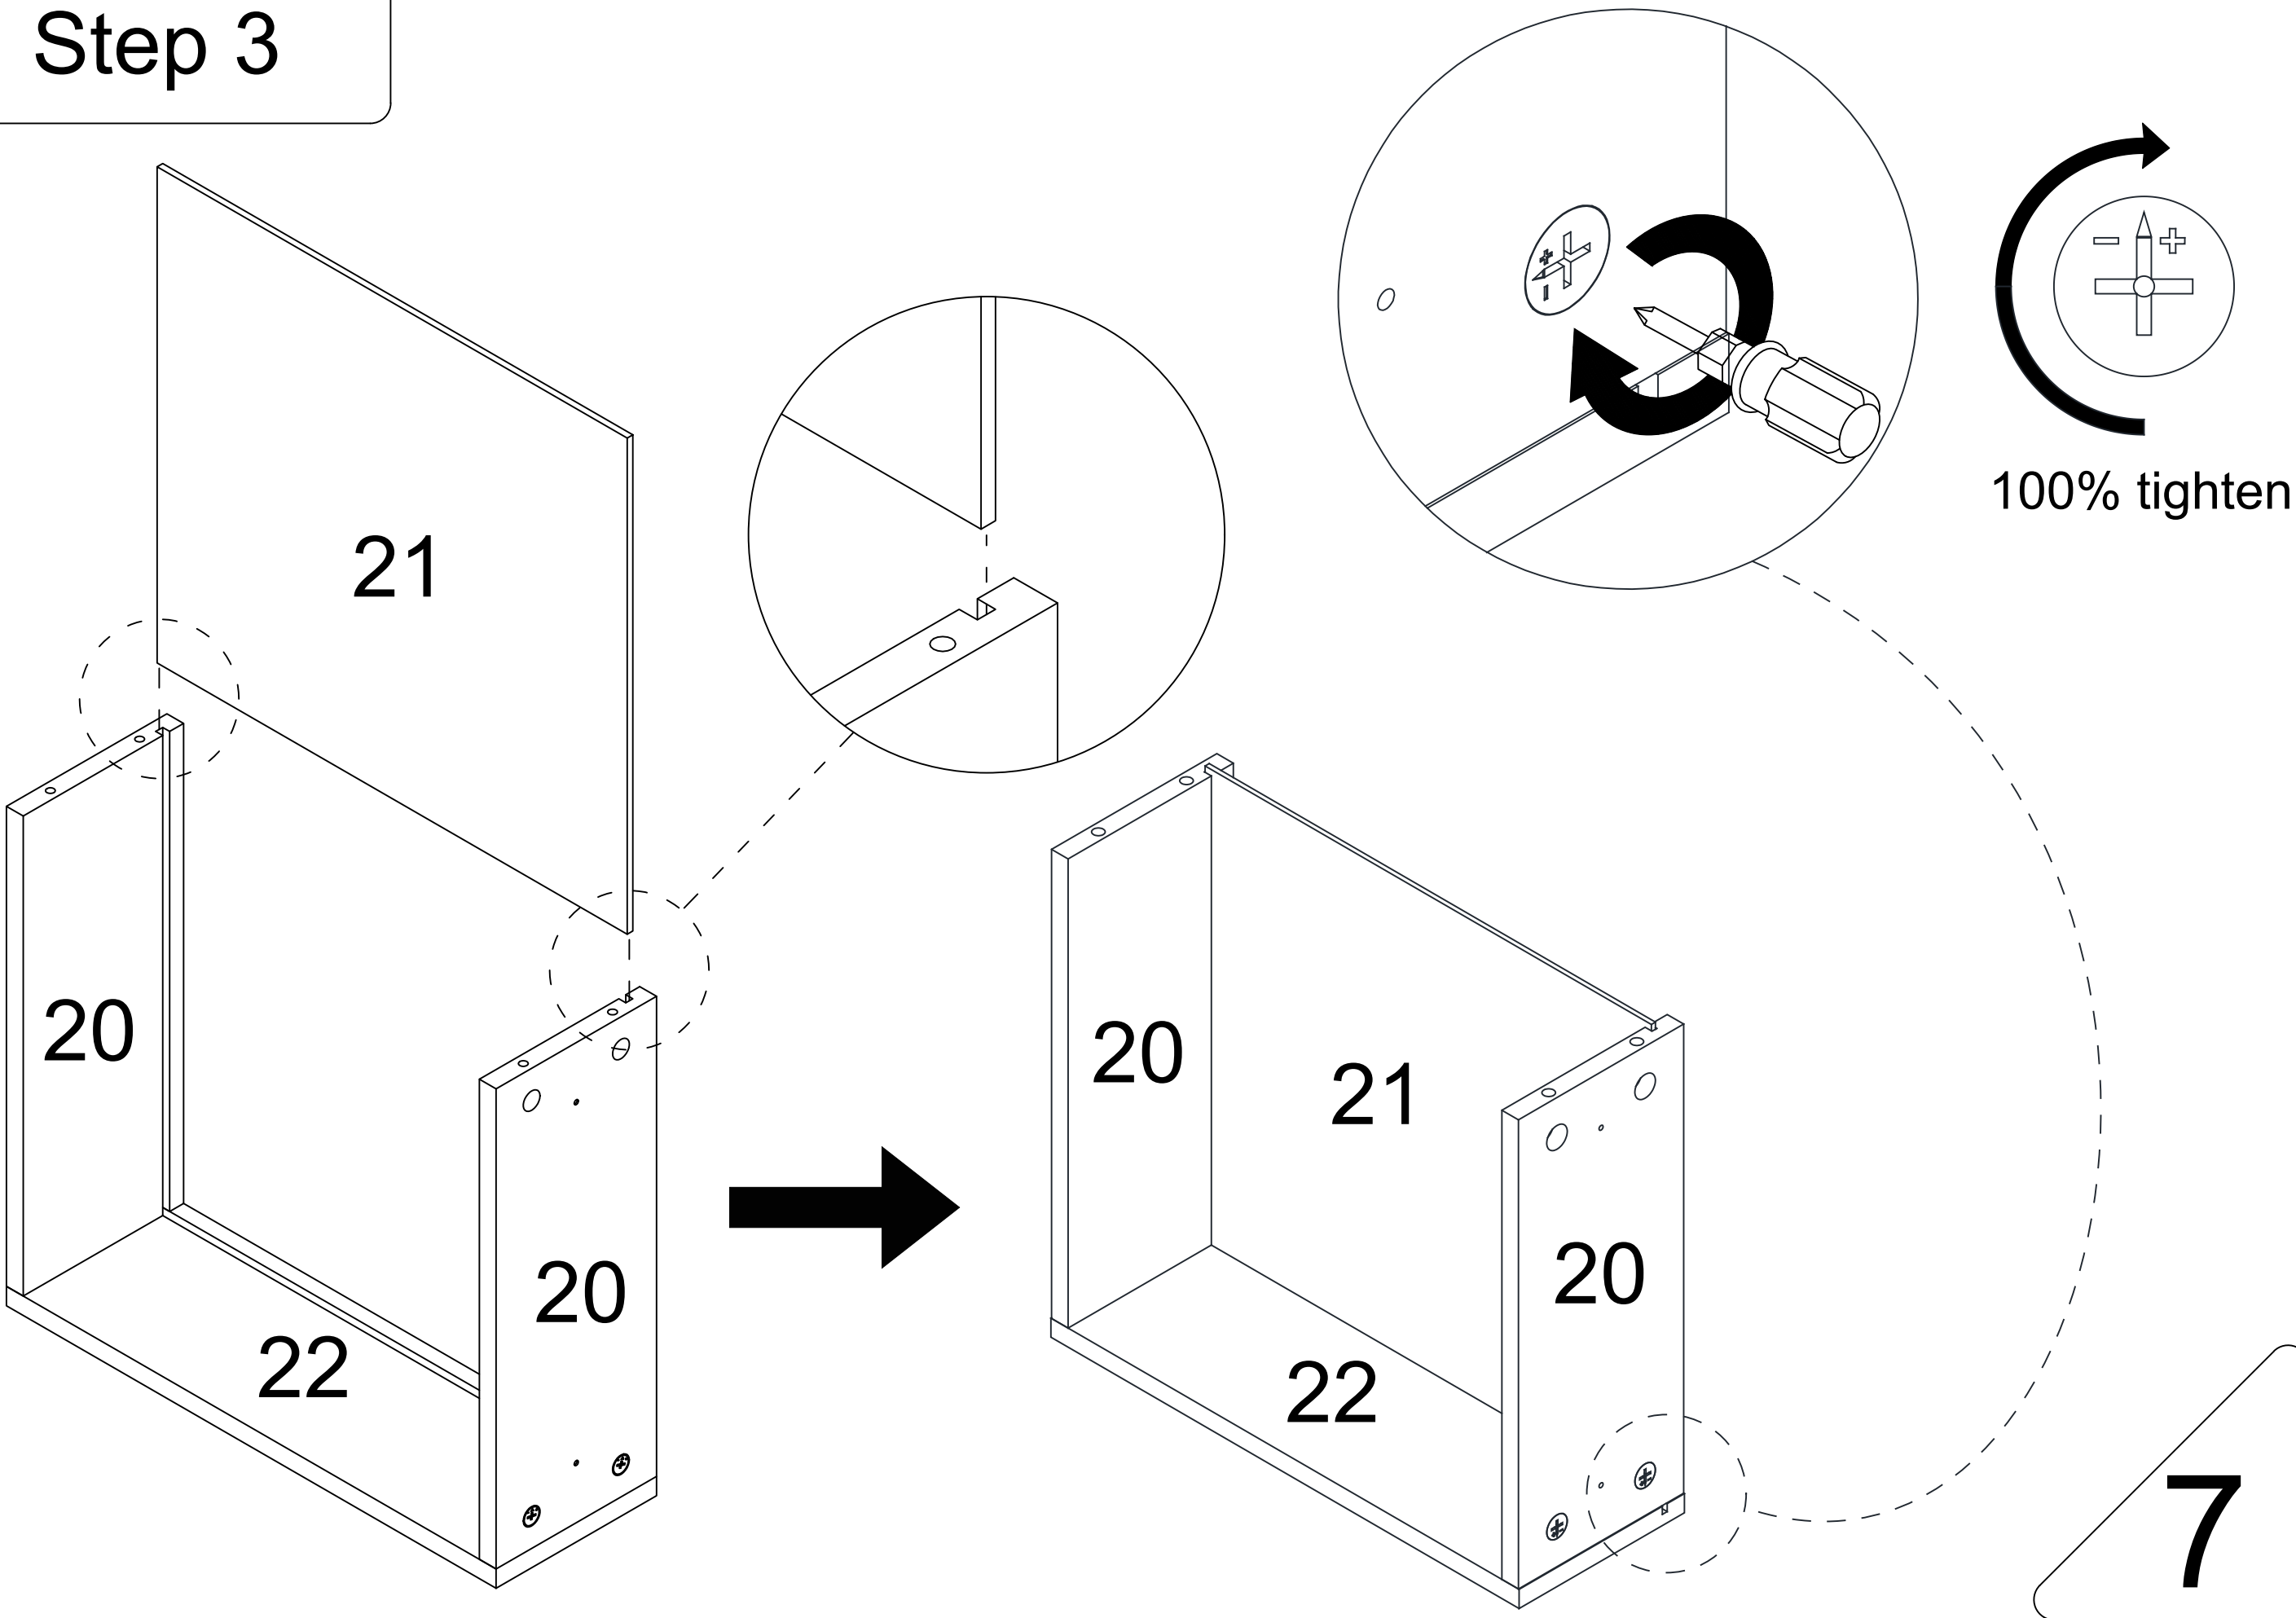


Step 4

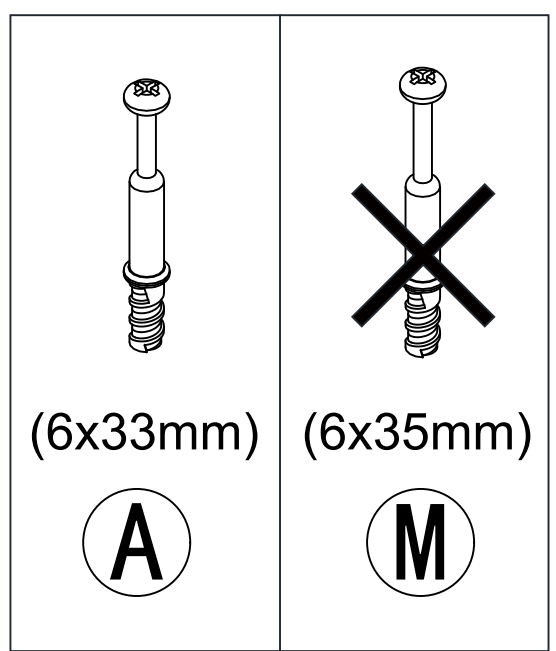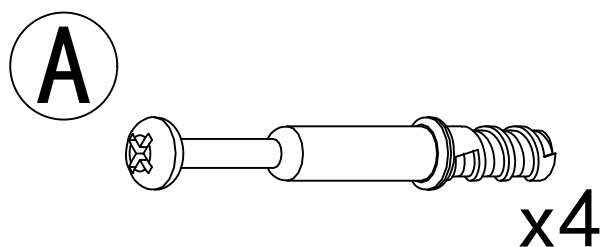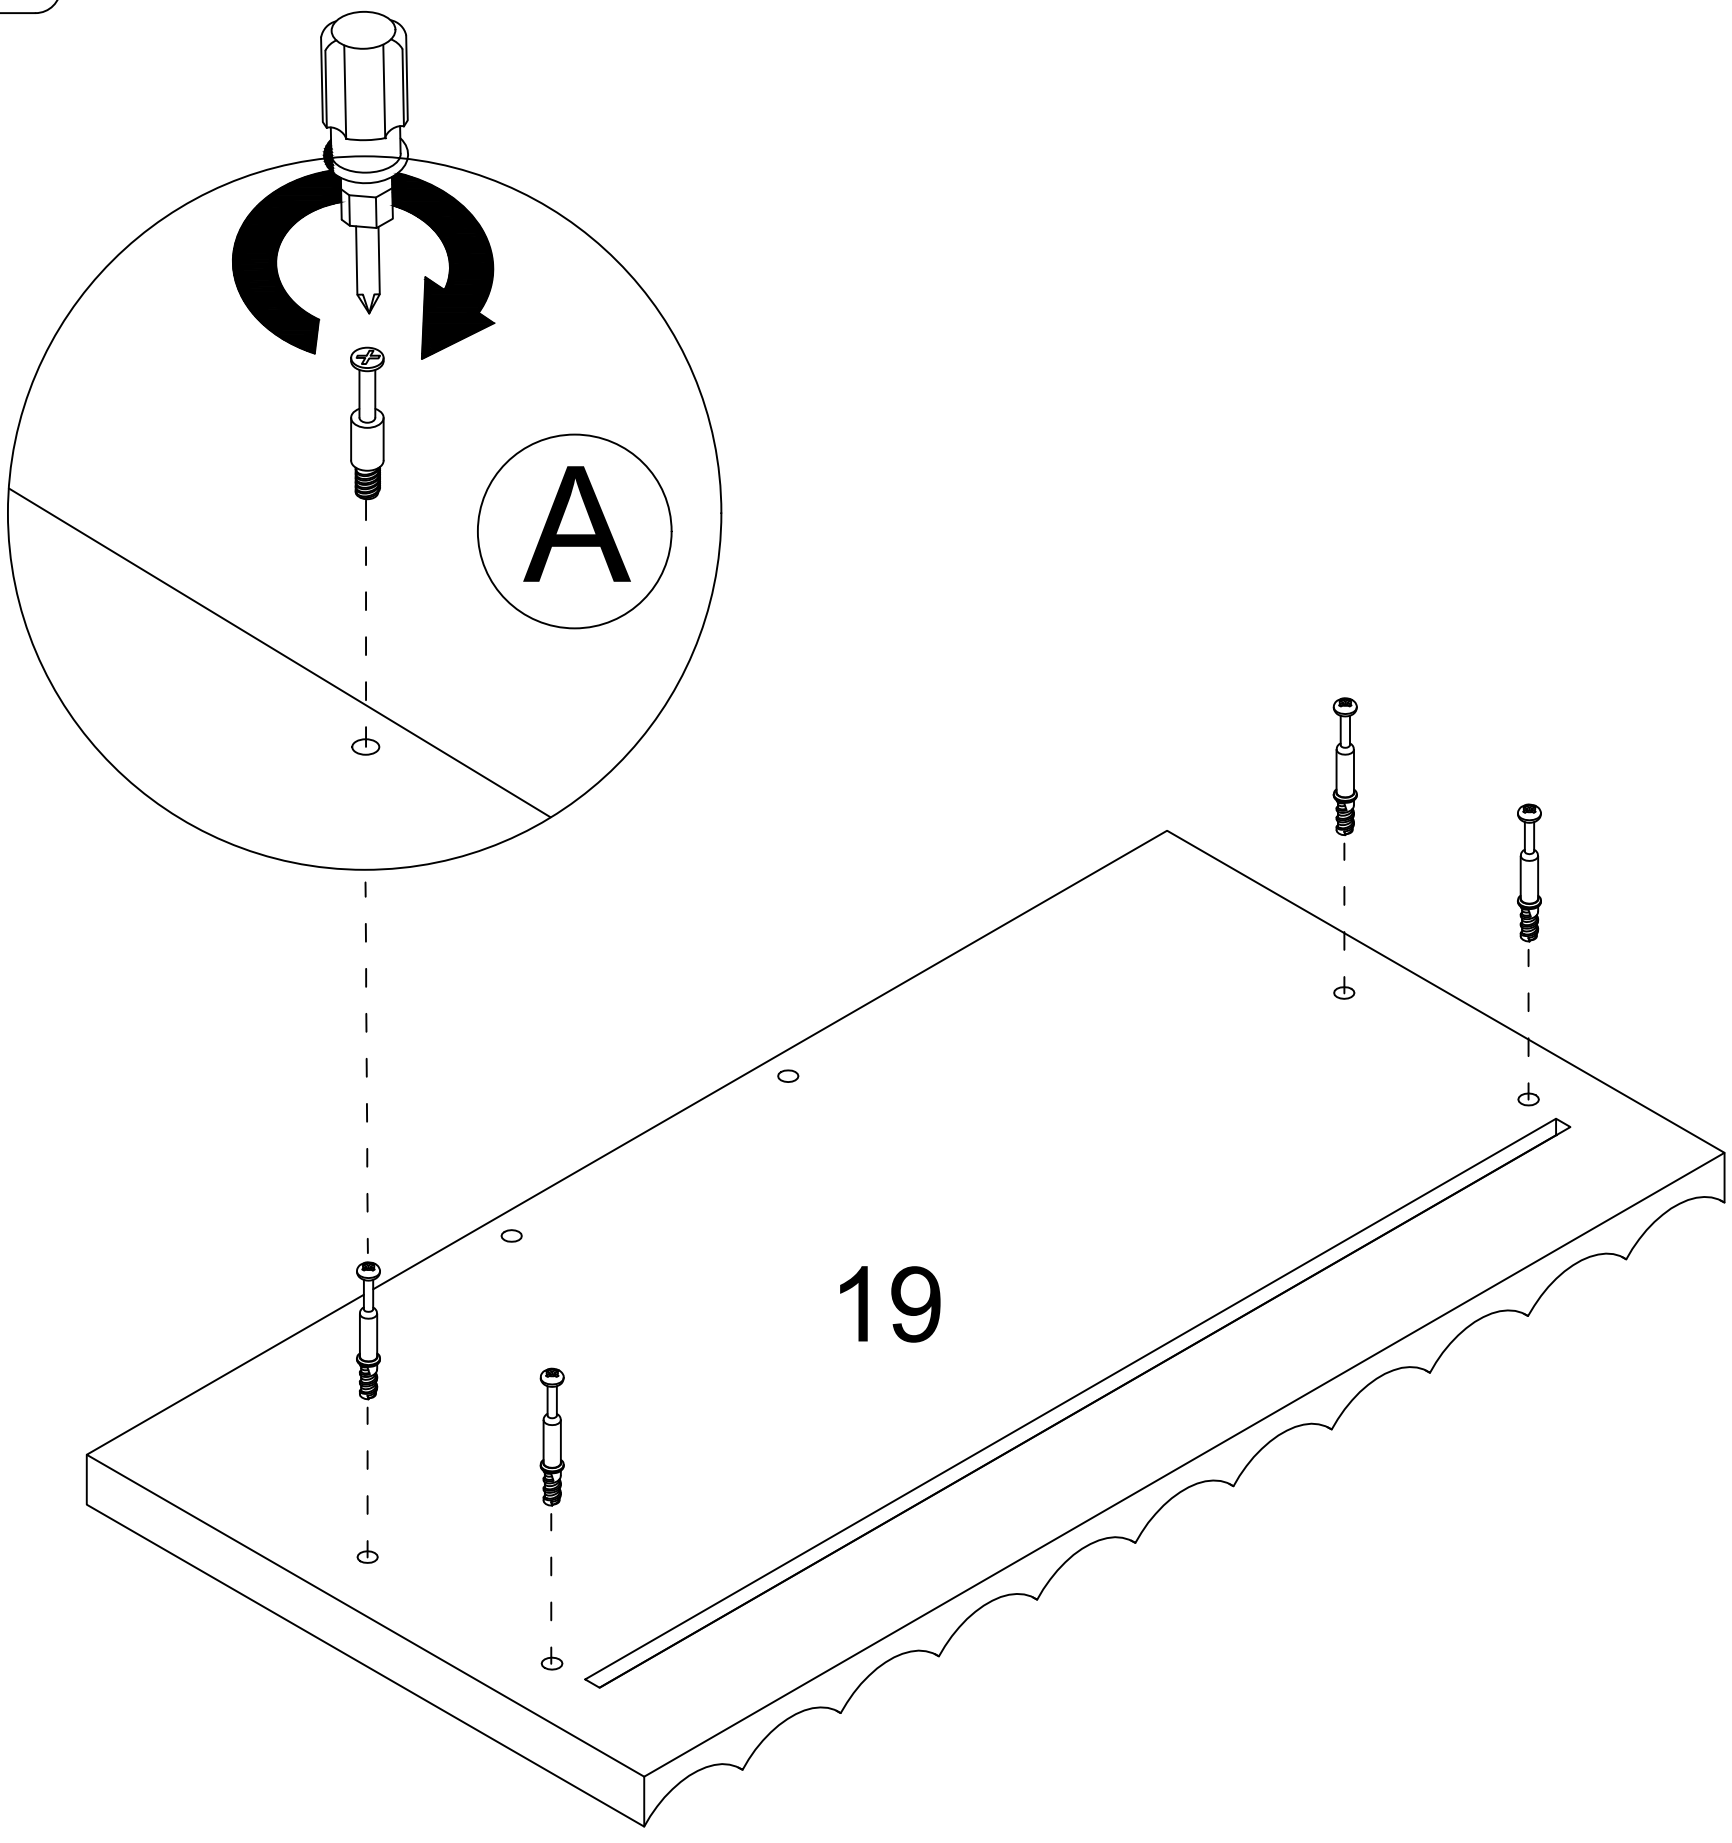

Step 5

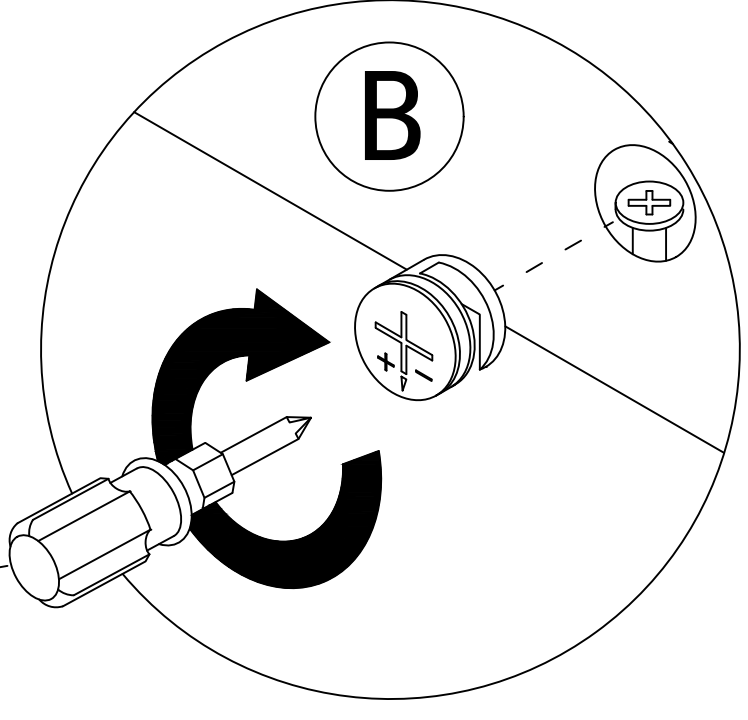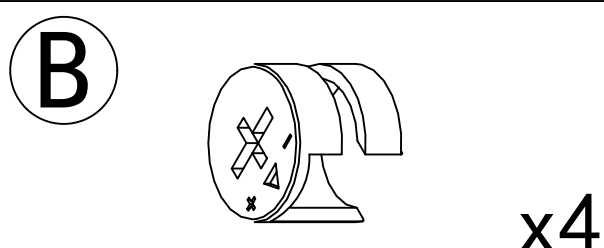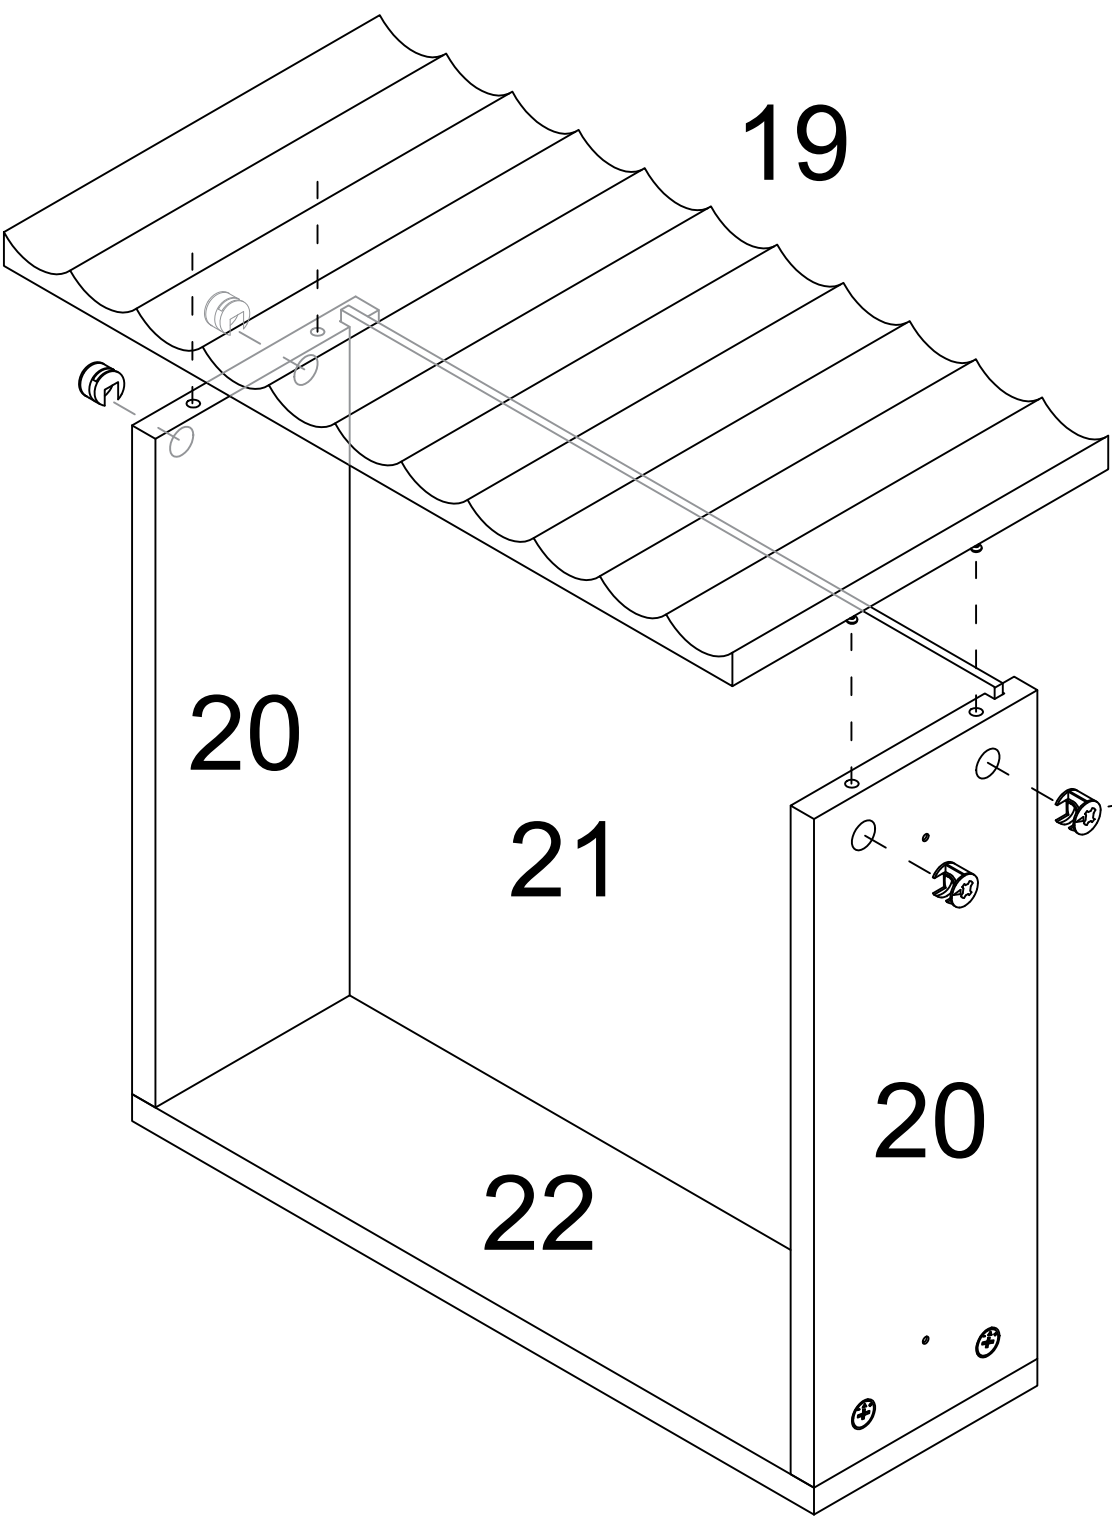


Drawer rail breakdown diagram

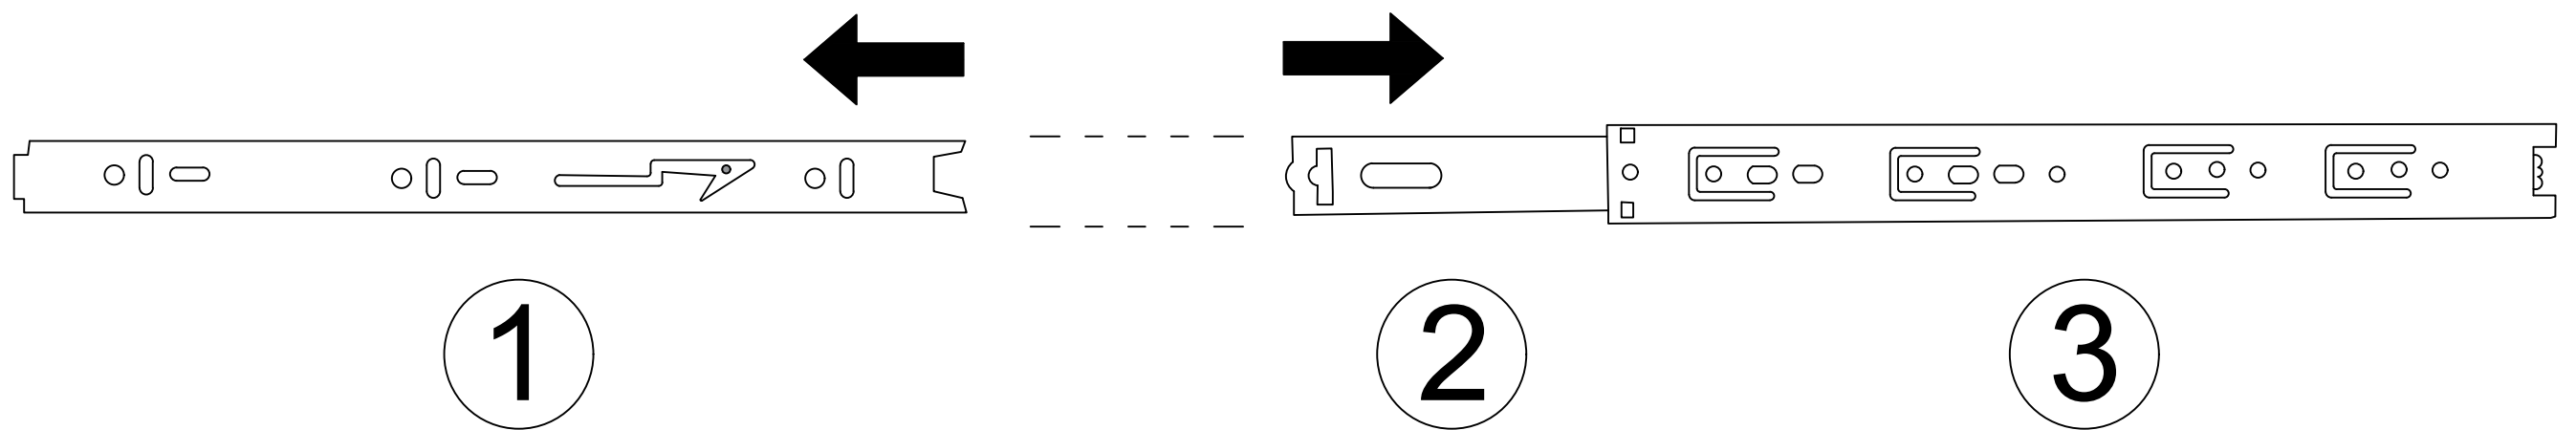


① Dismantle the schematic diagram

Step 1 : Pull the rails apart

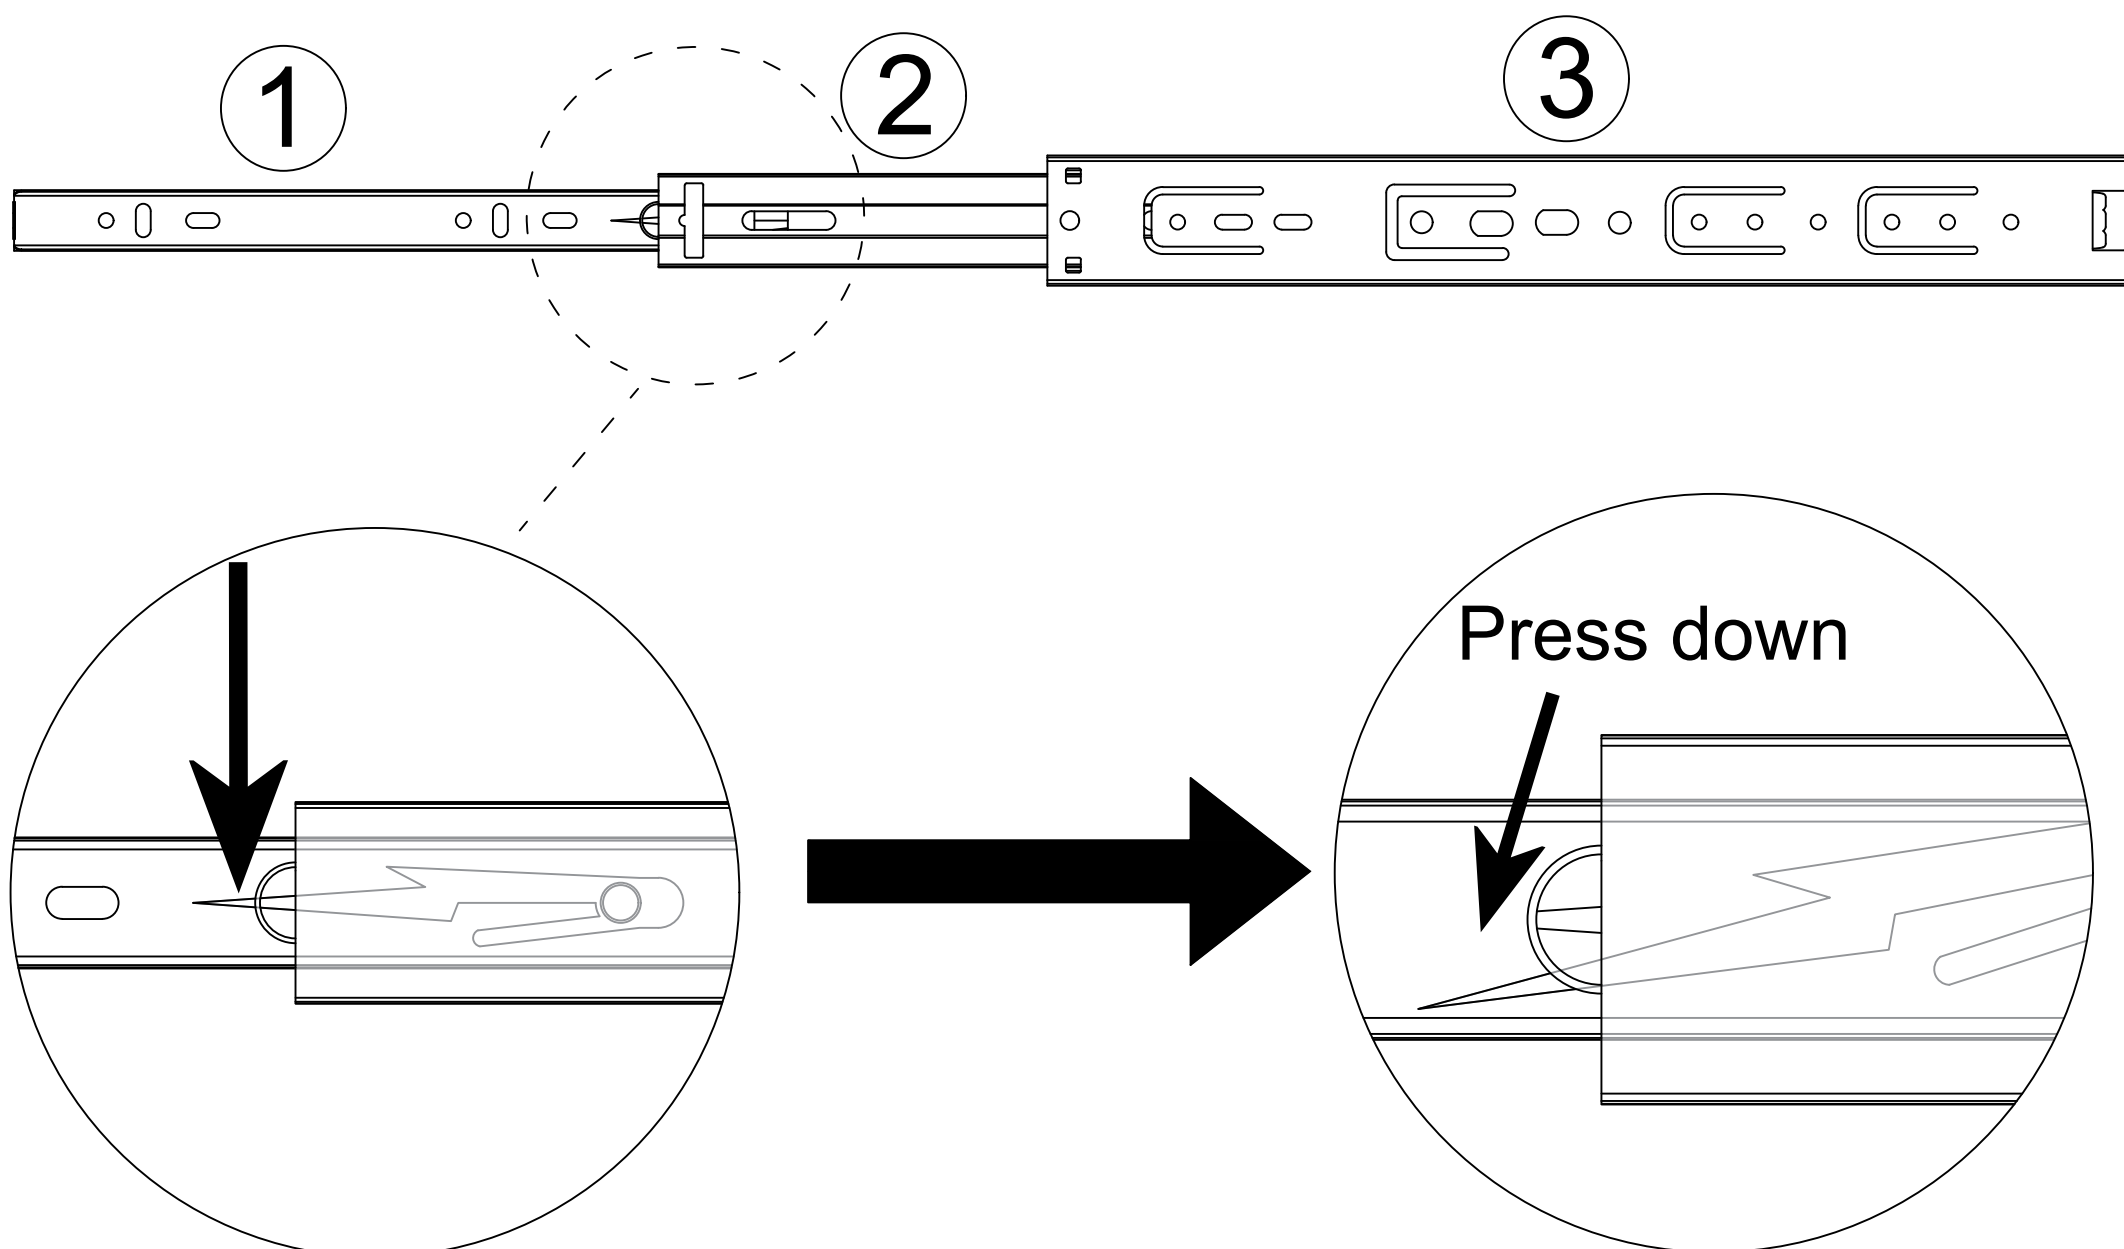


Step 2 : Press the nylon button and pull out ①.


Drawer rail decomposition completed schematic diagram

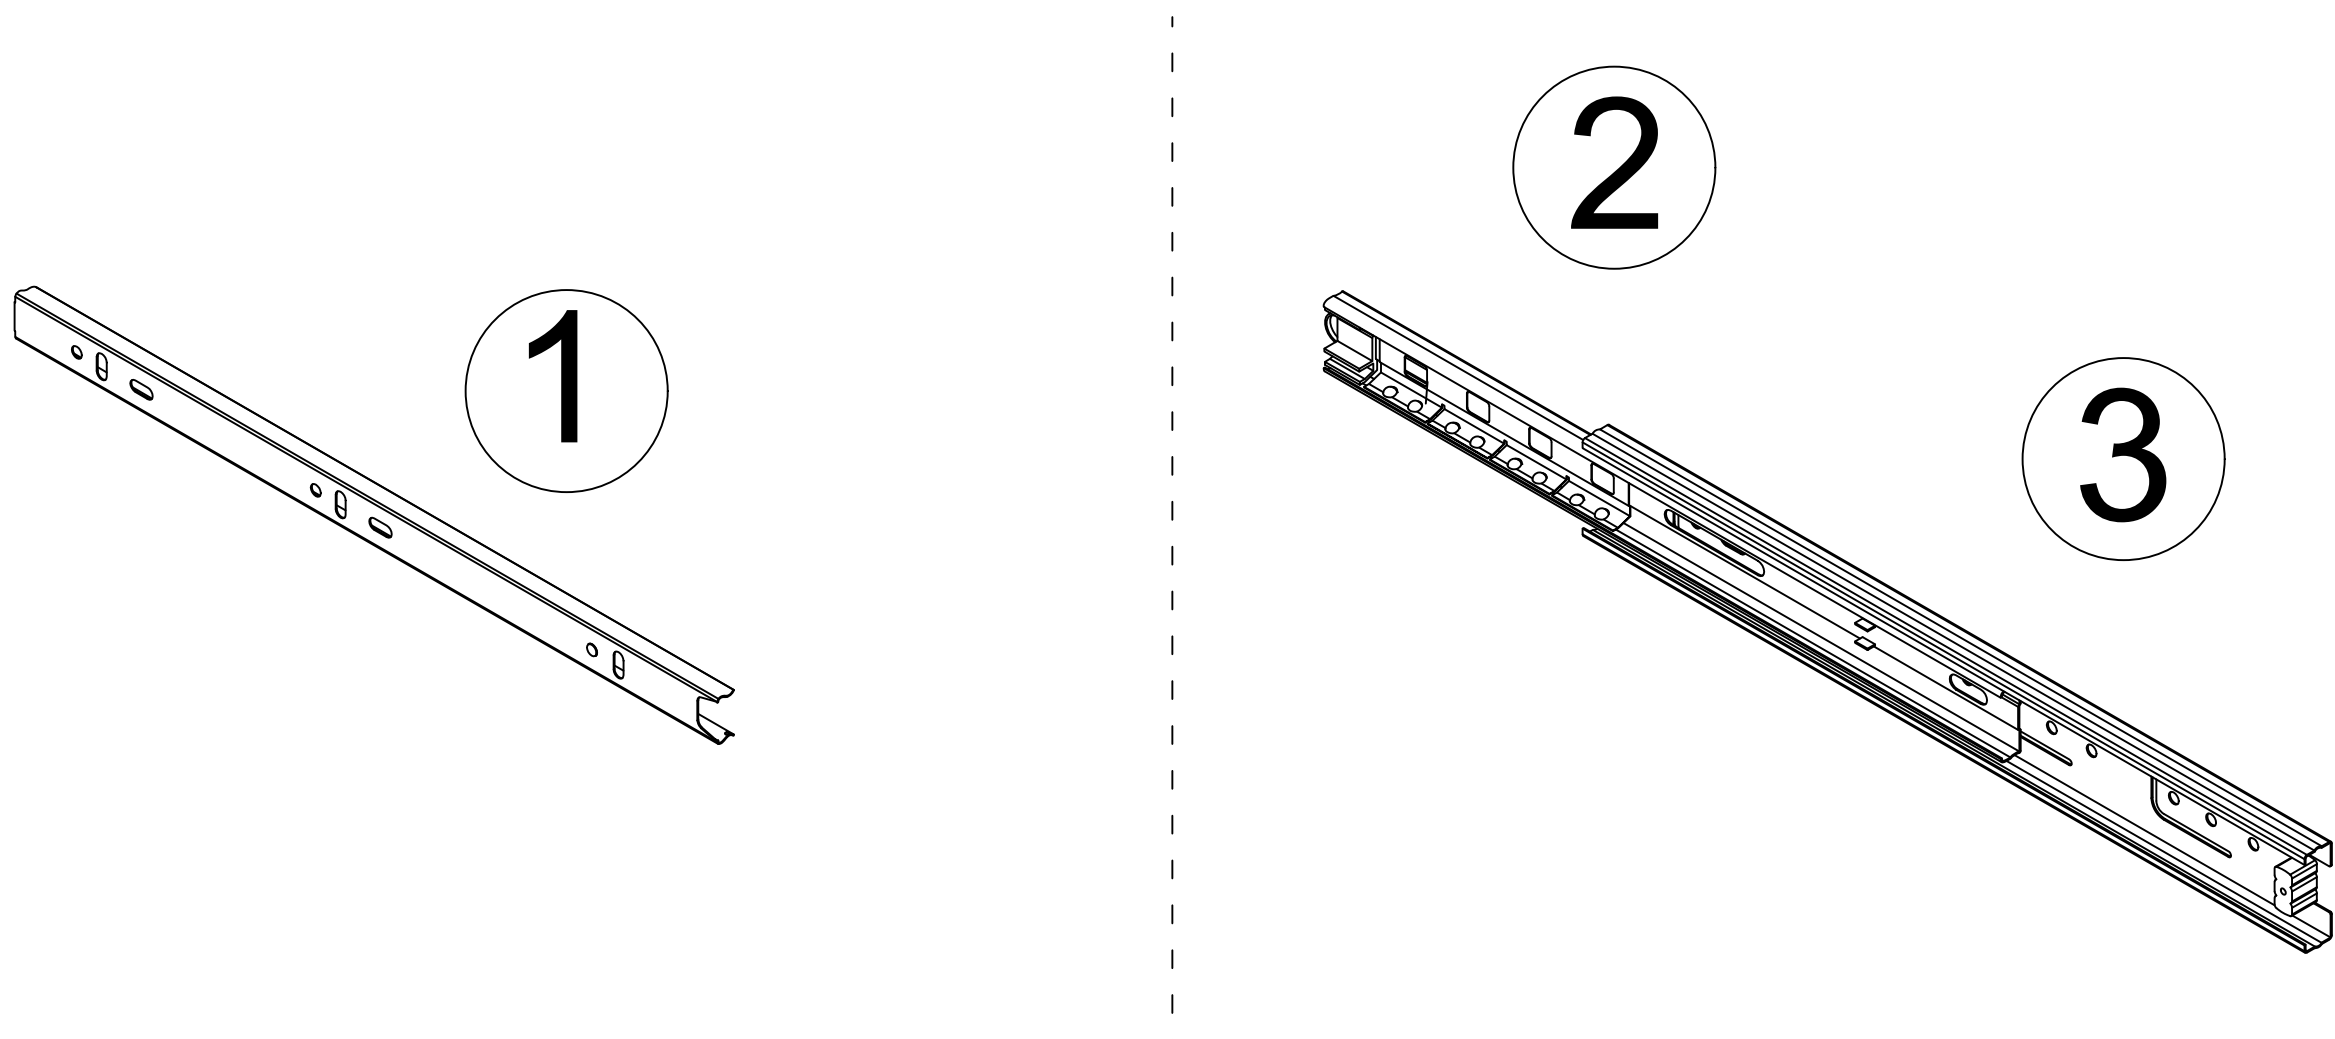

Step 6

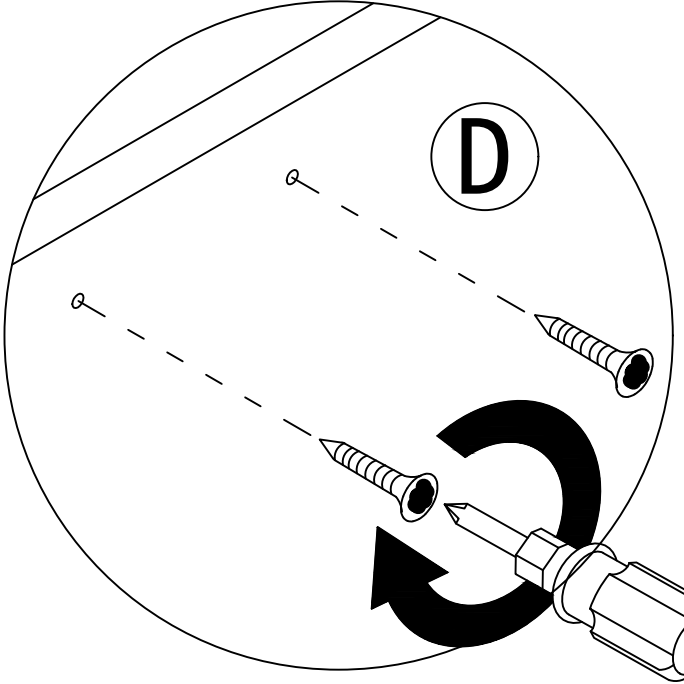


- D




x1
- 


x2

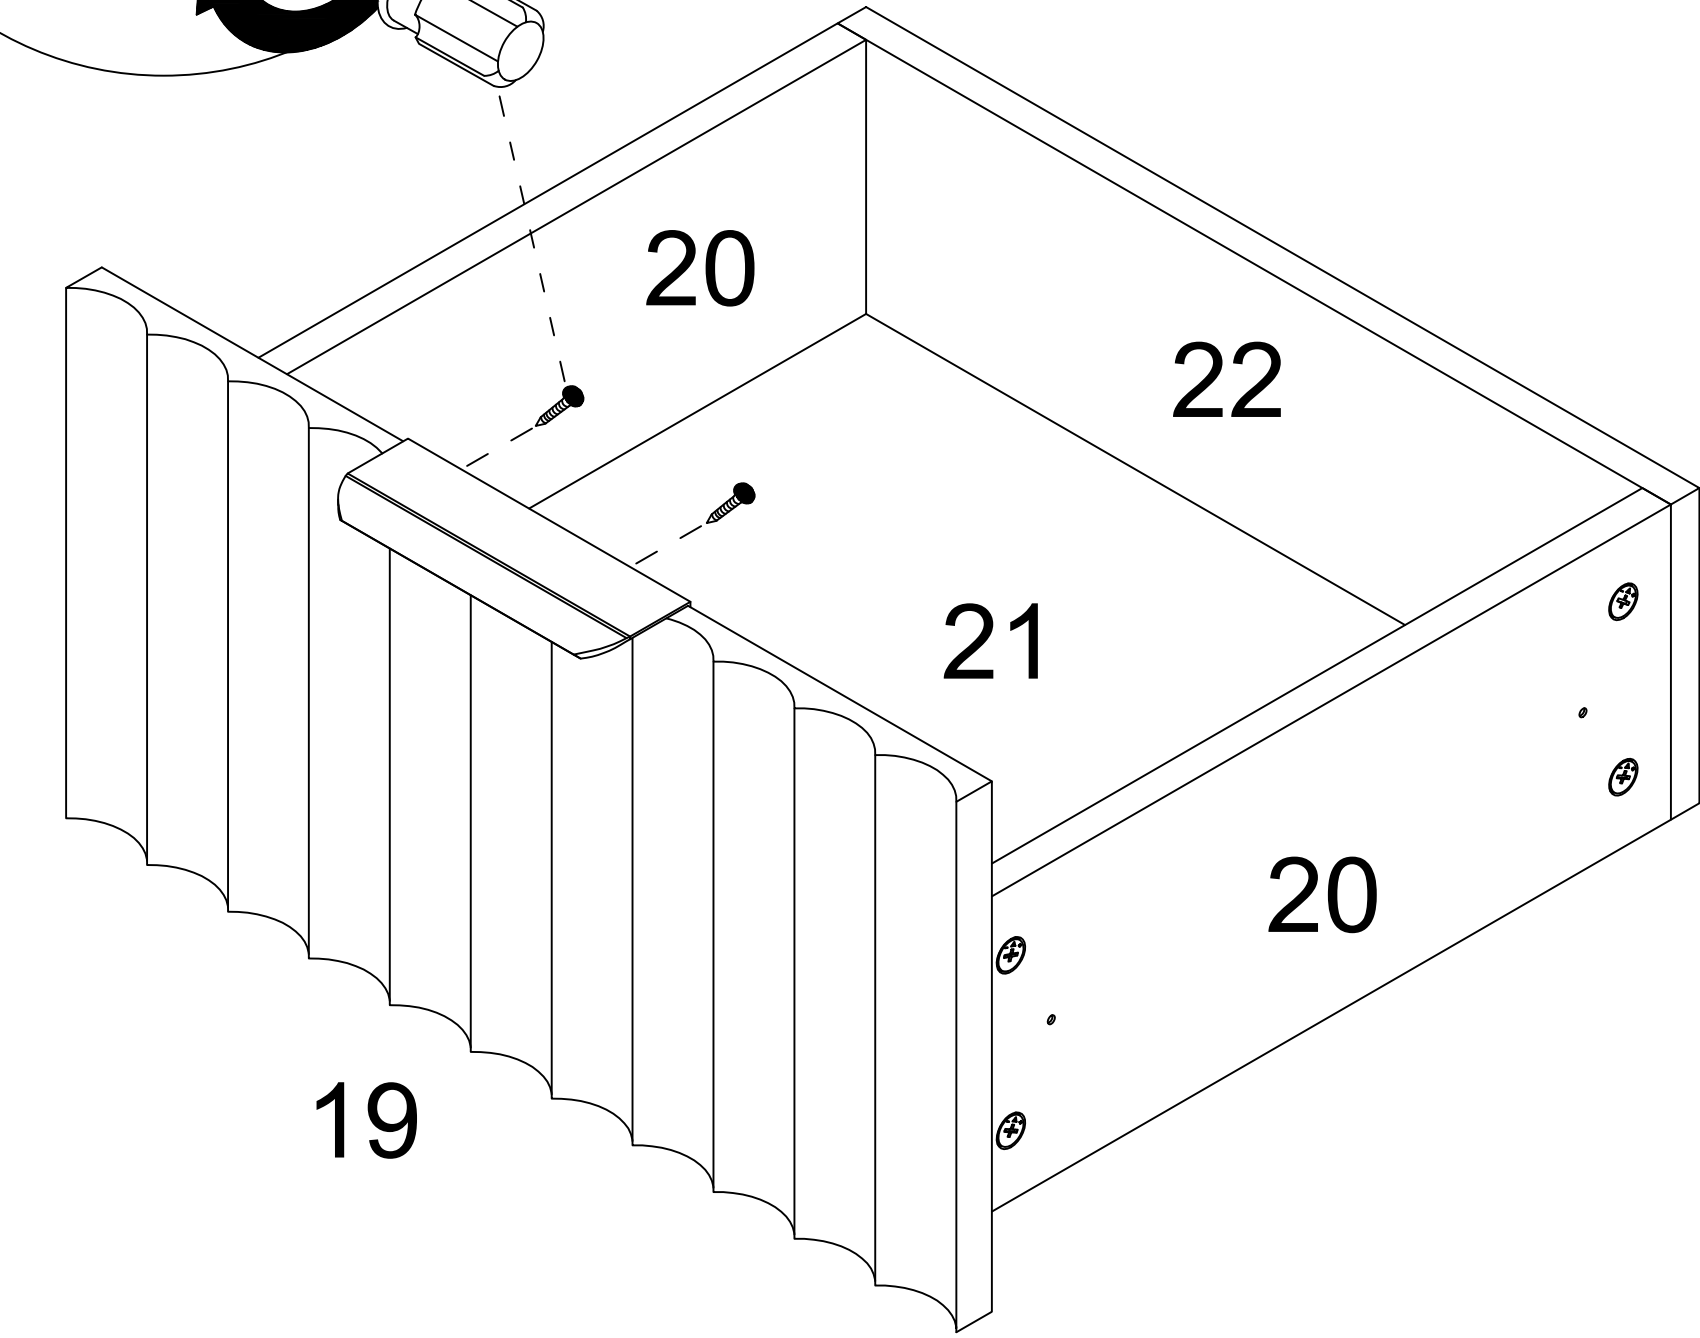

Step 7


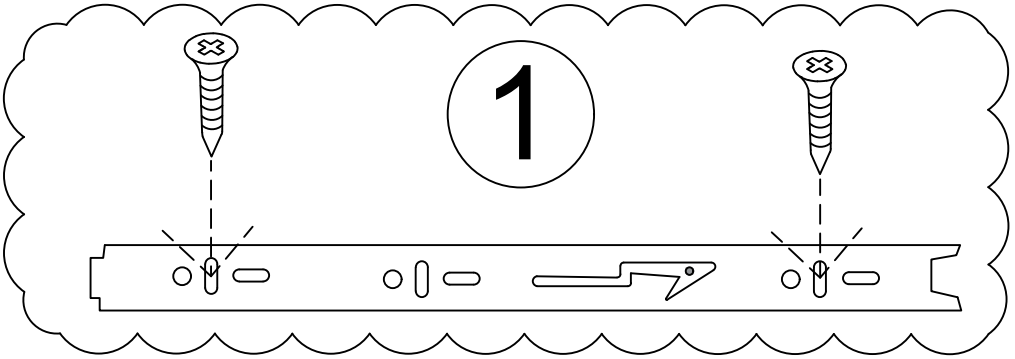


- E






x2
- 

x4

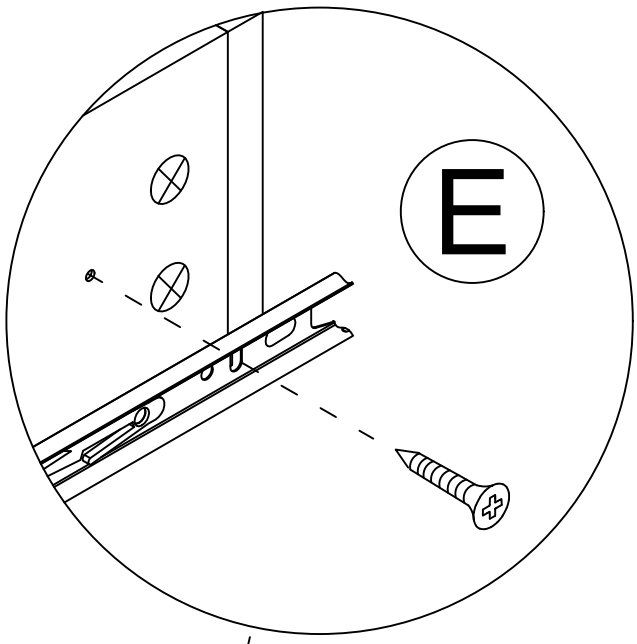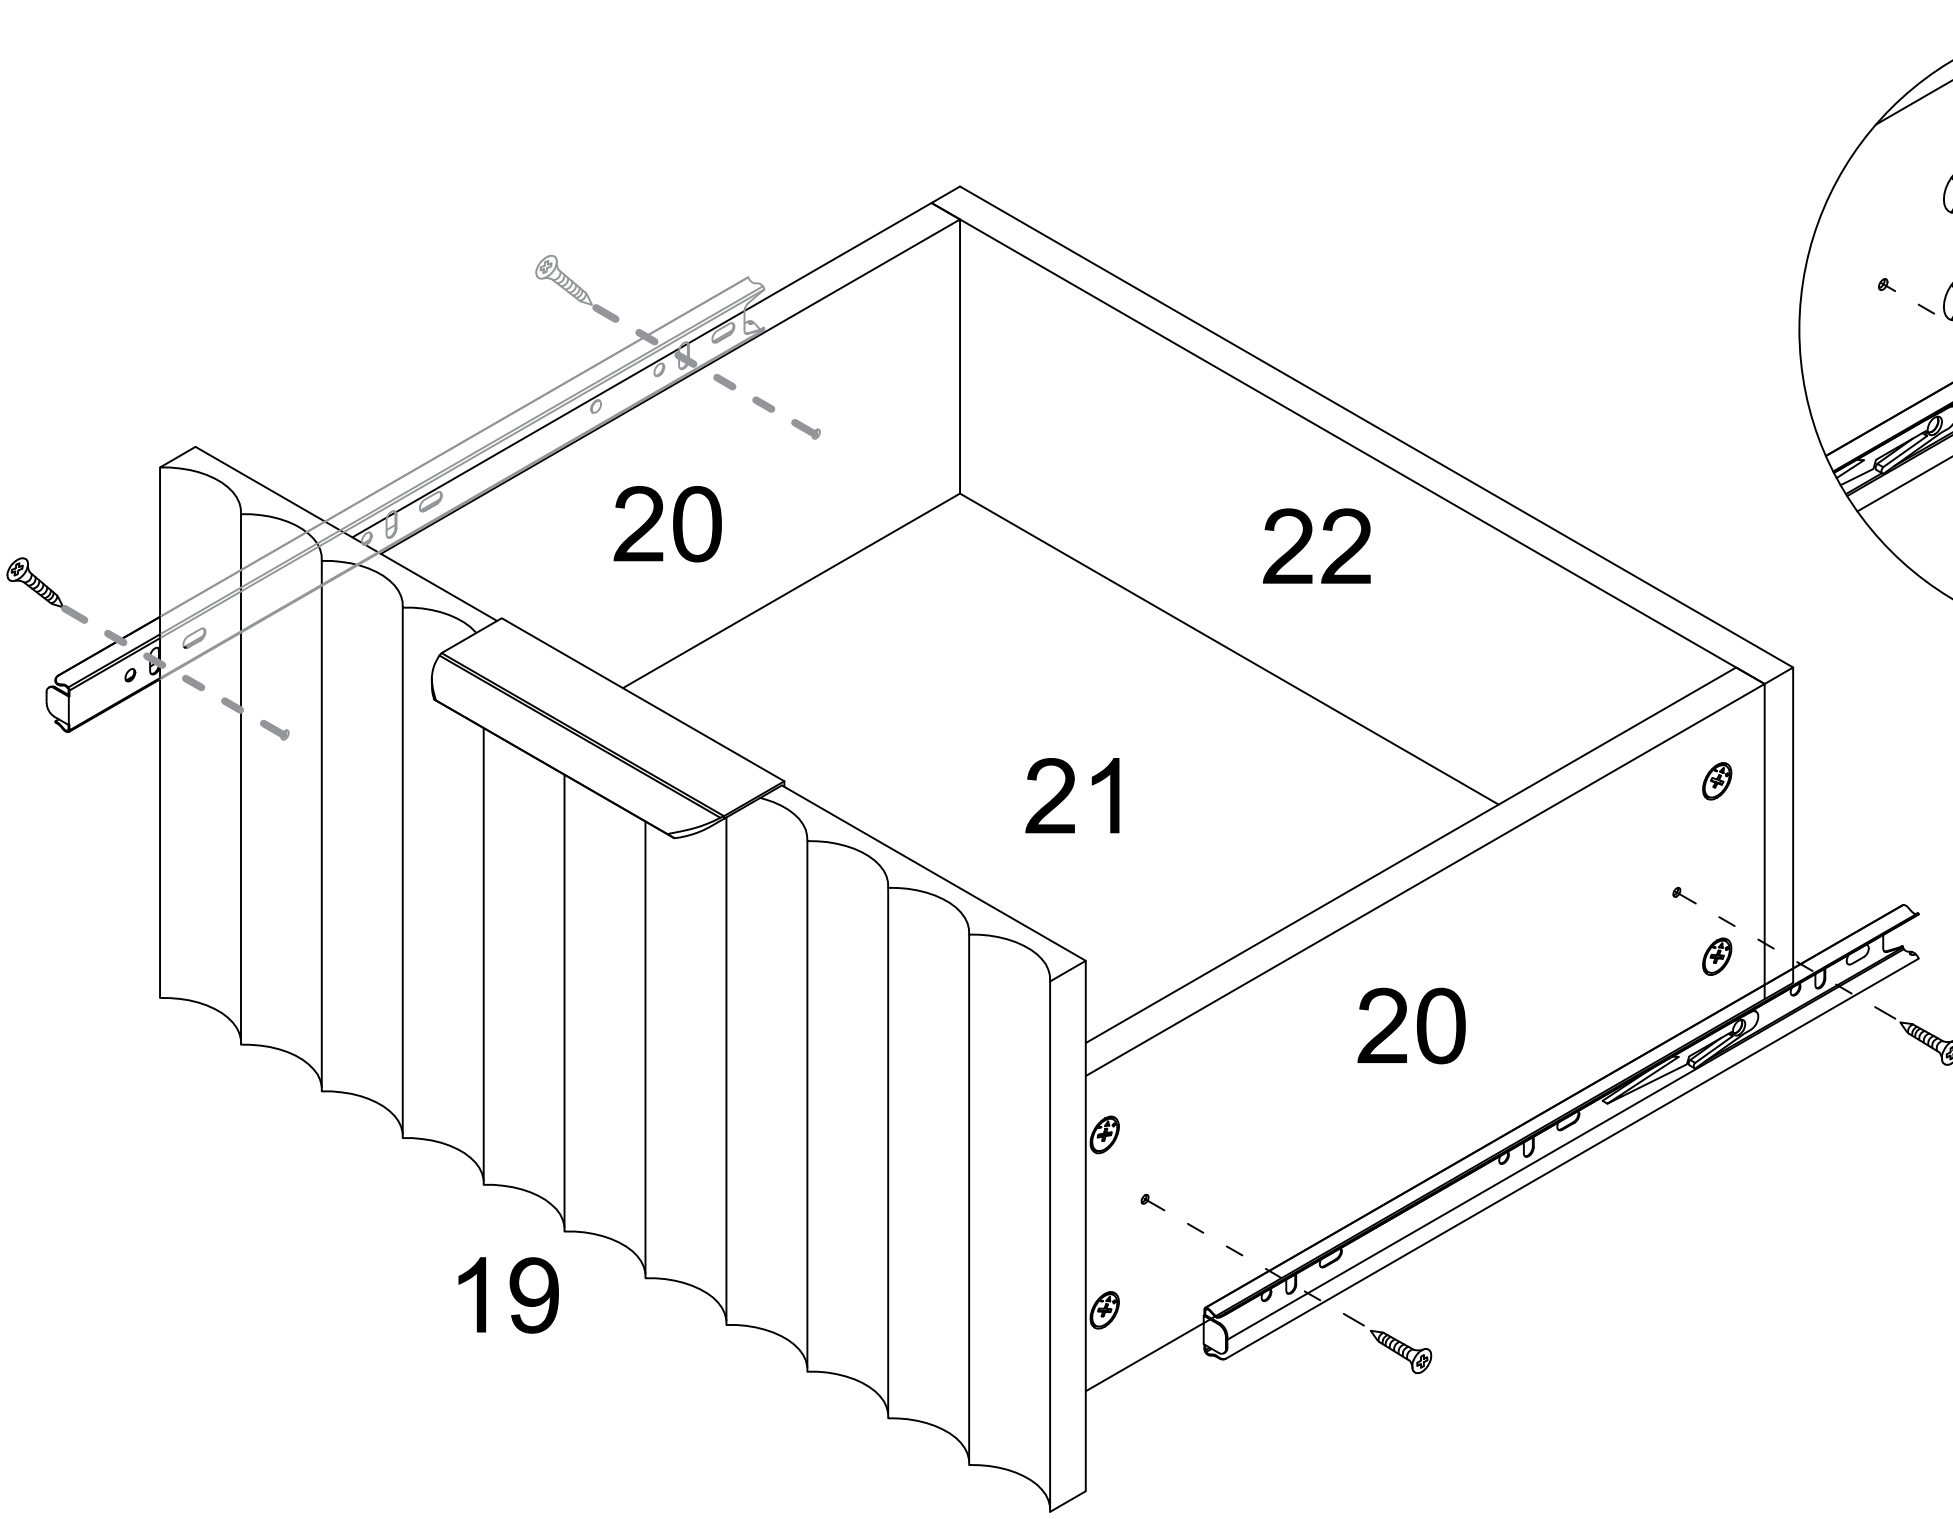


Step 8

A  x16	B  x16
E  x4  x8	D  x2  x4

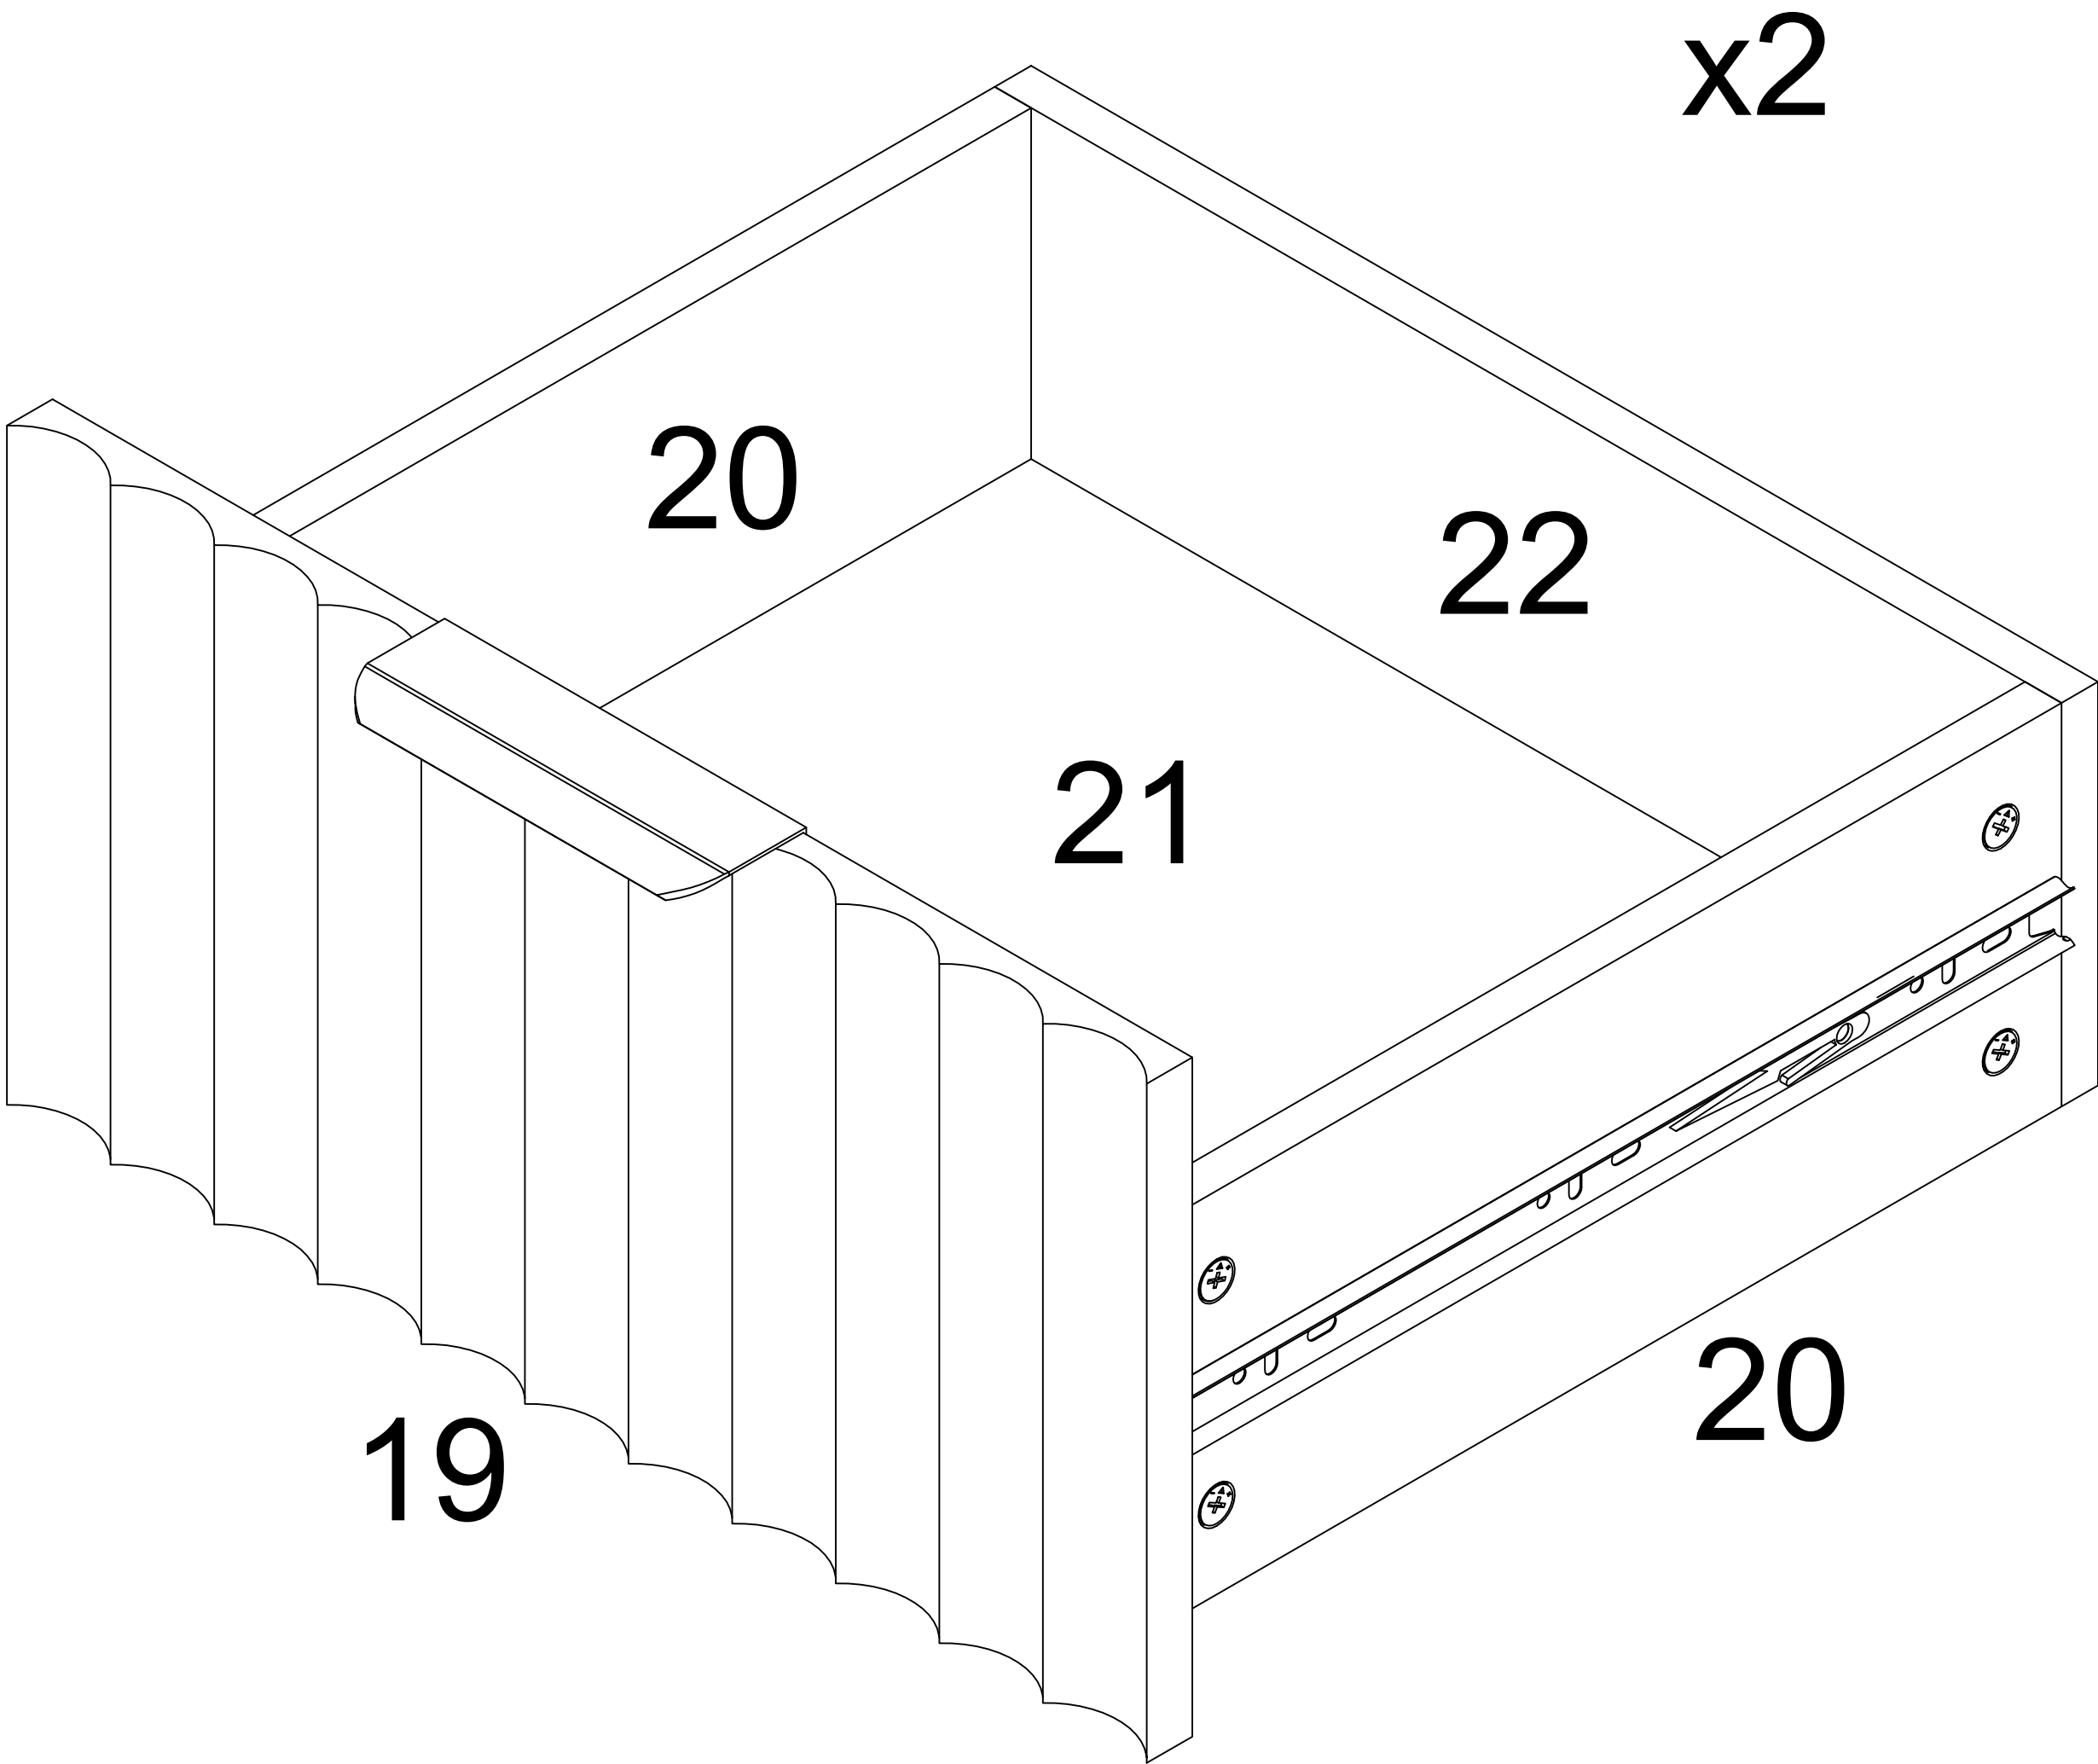


Repeat the drawer installation steps


Step 9

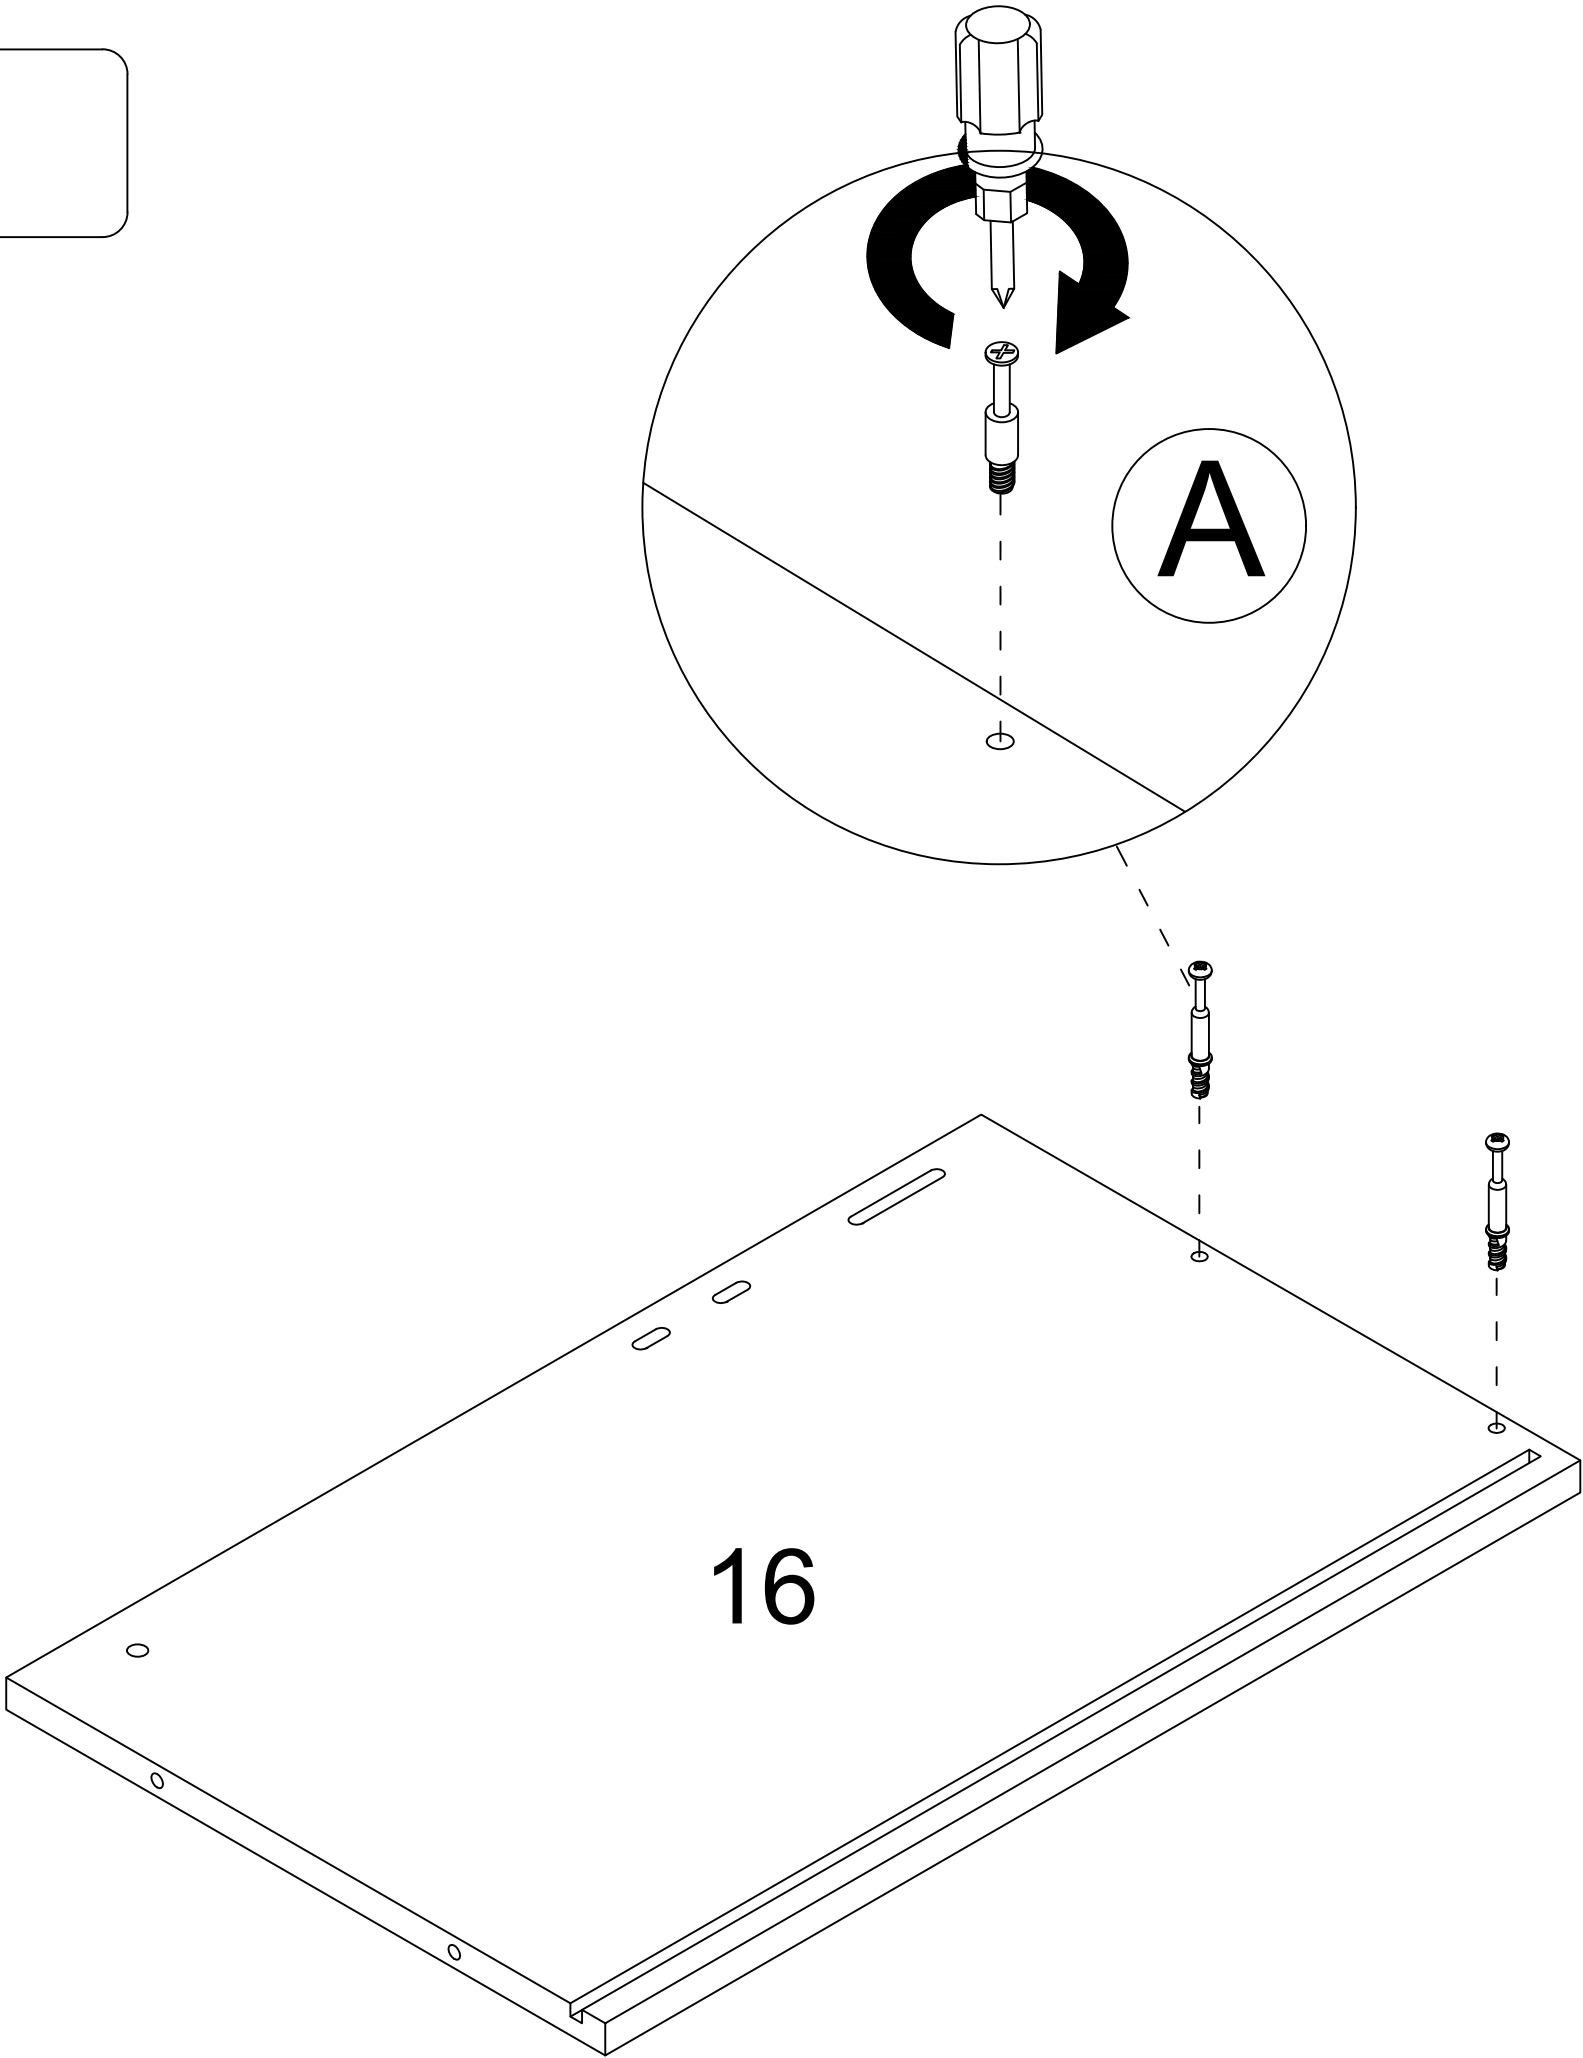

A



x2



(6x33mm)


A




(6x35mm)

M


Step 10

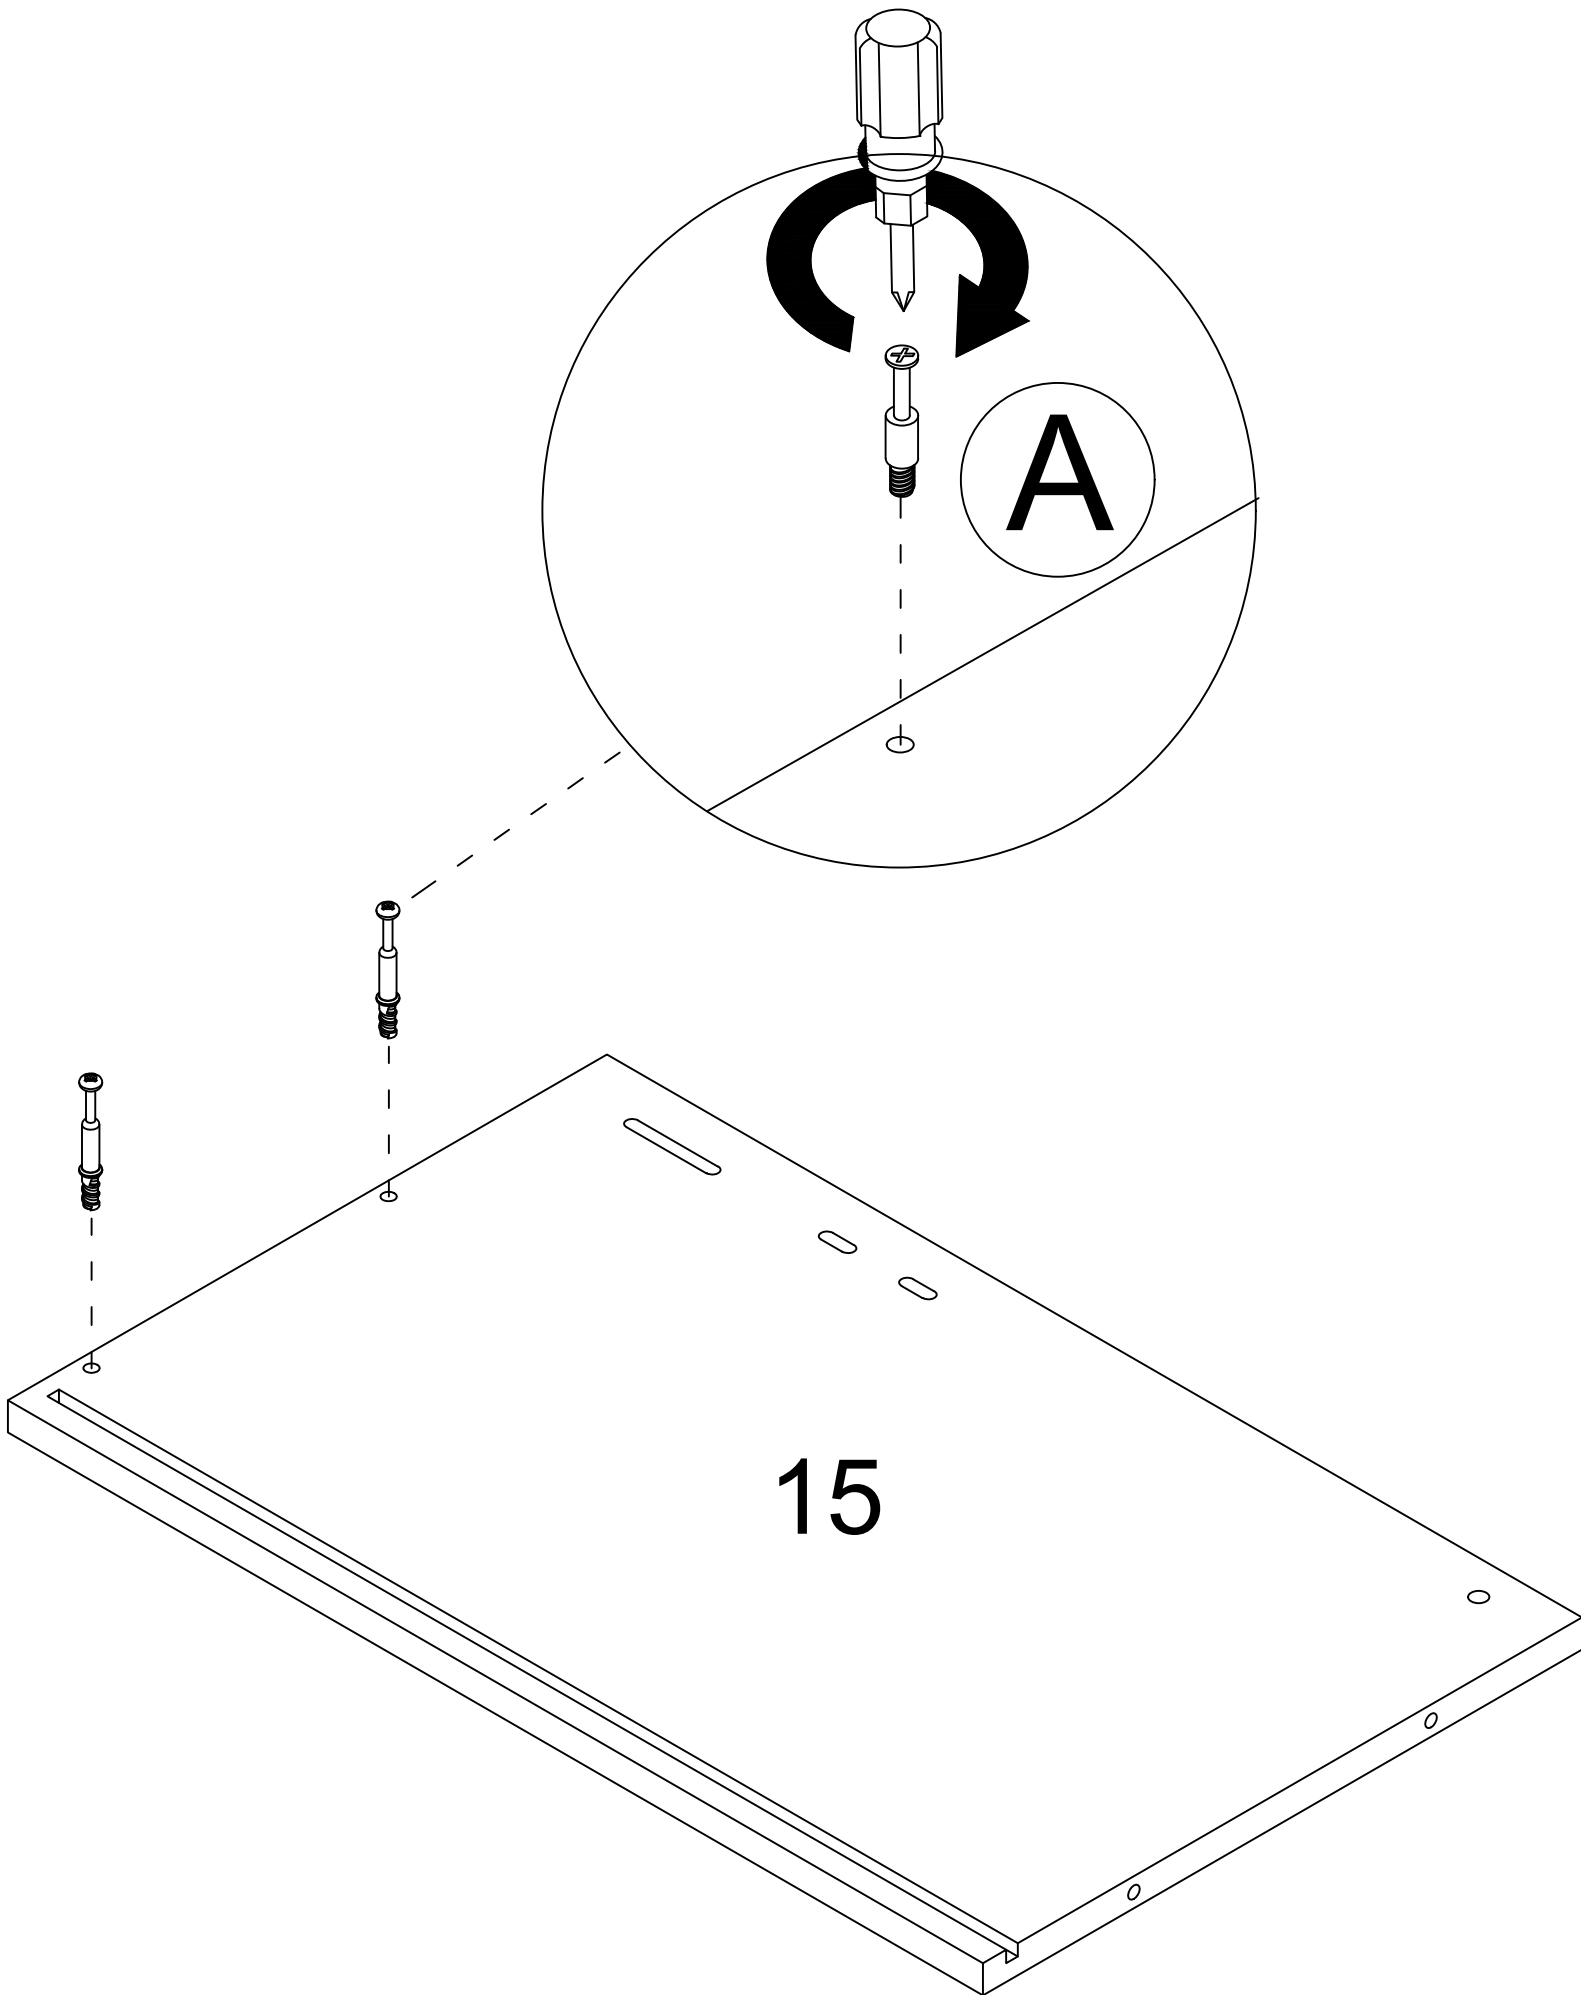

A



x2



(6x33mm)

A




(6x35mm)




M

Step 11

B

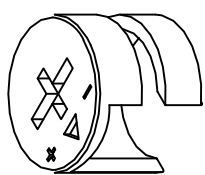


x2

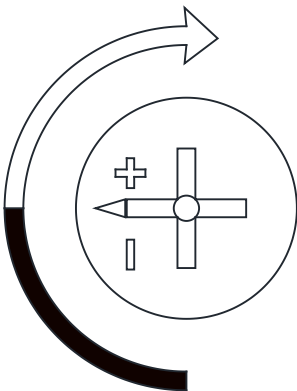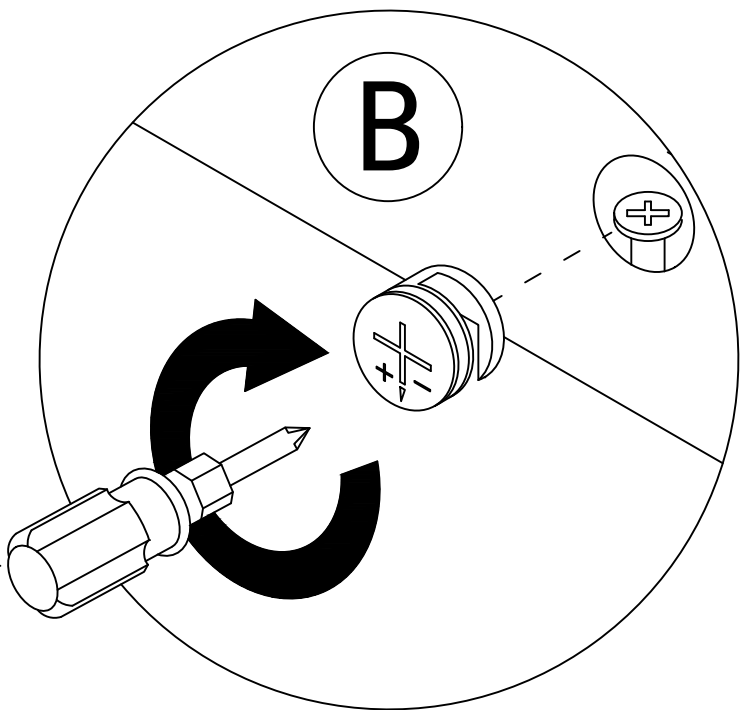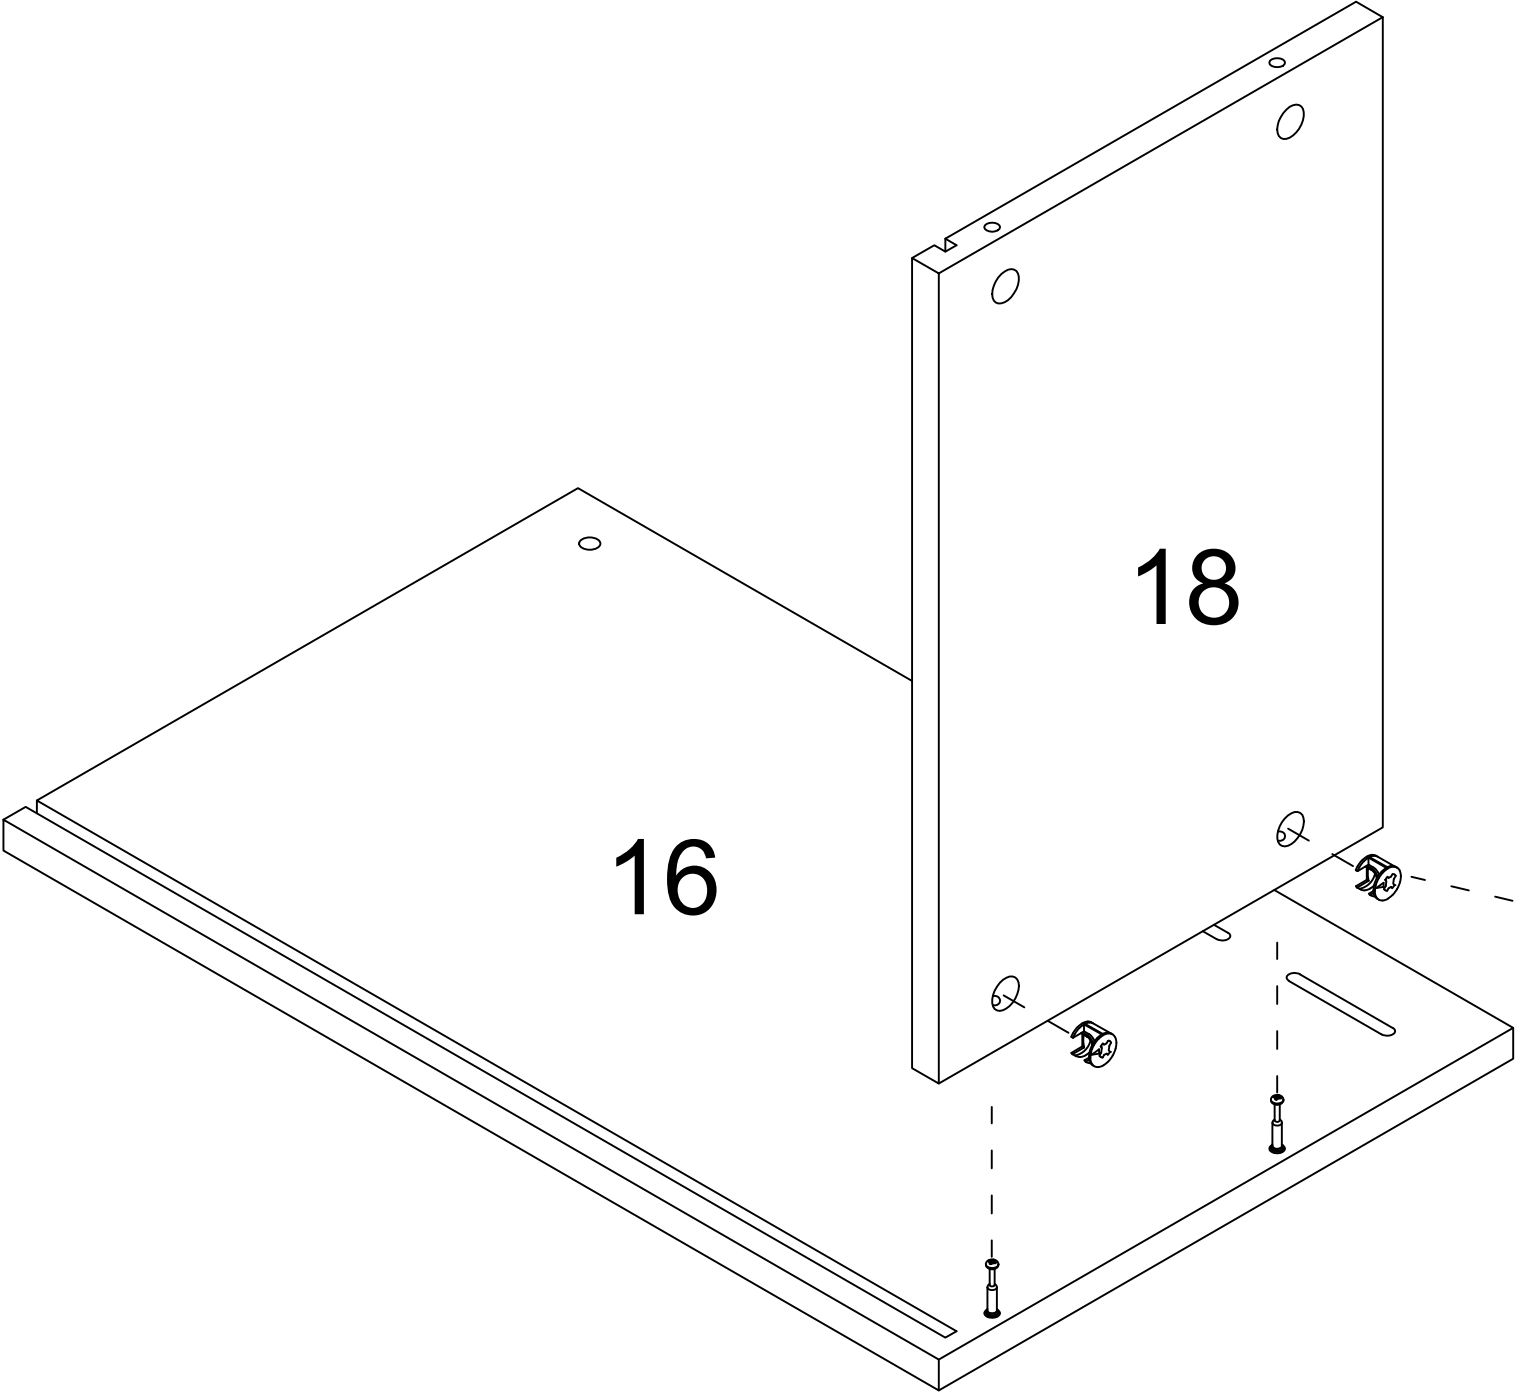

50% tighten


Step 12

B

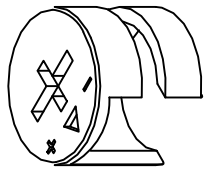




x2

I

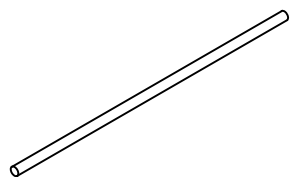


x2

Select the hole position to install the I accessories according to your needs

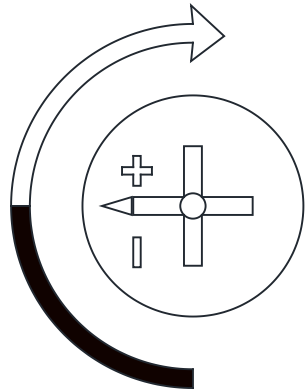
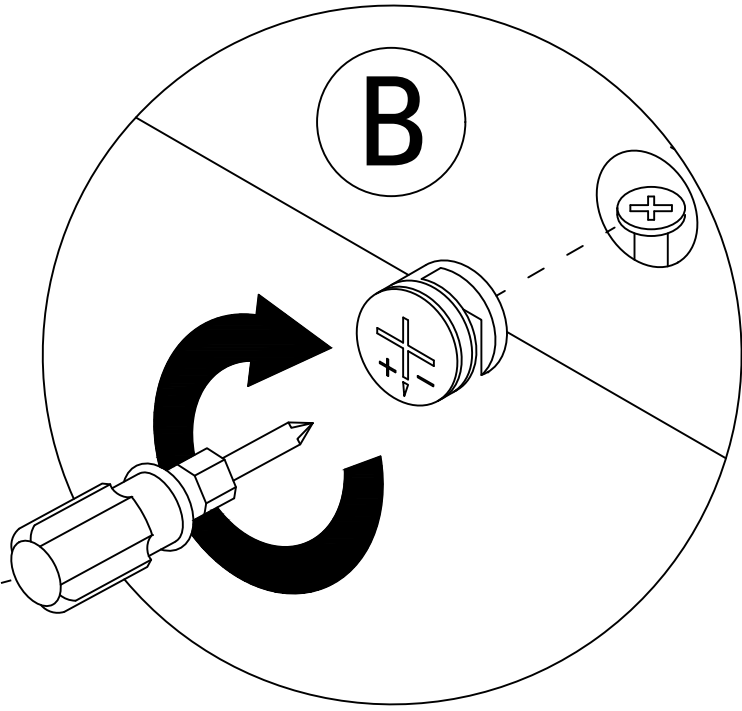
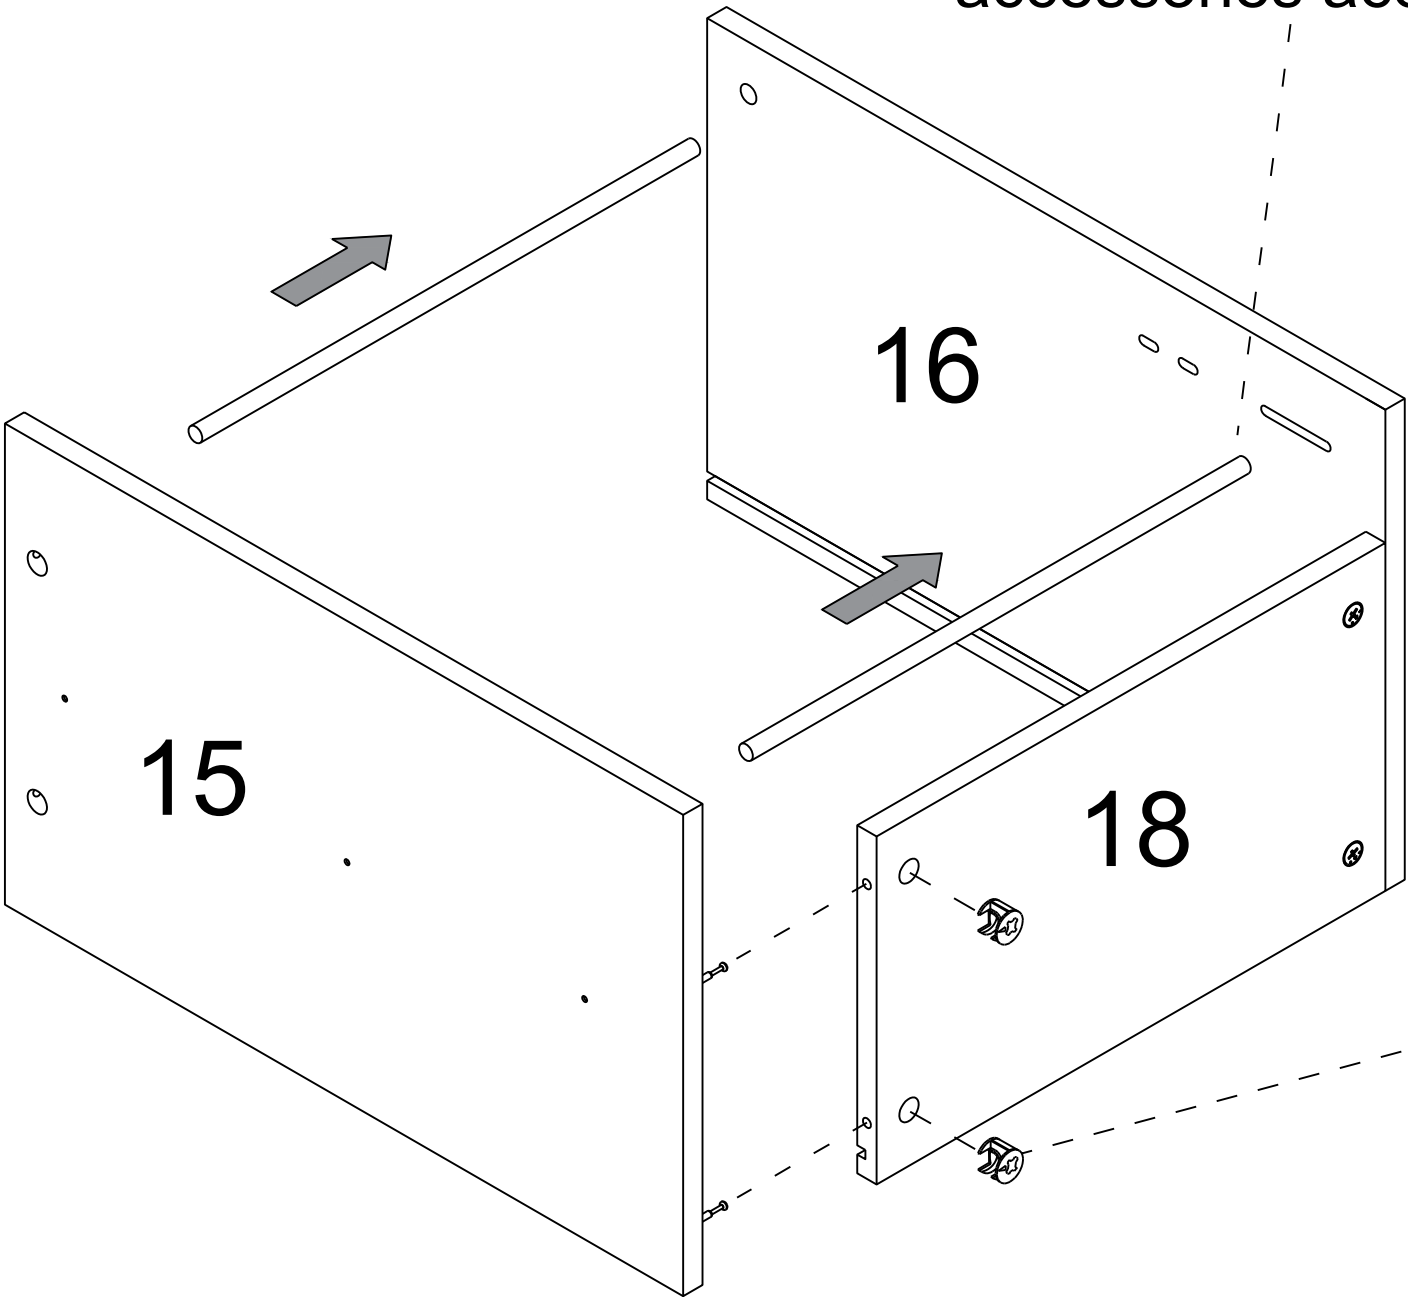


50% tighten

Step 13

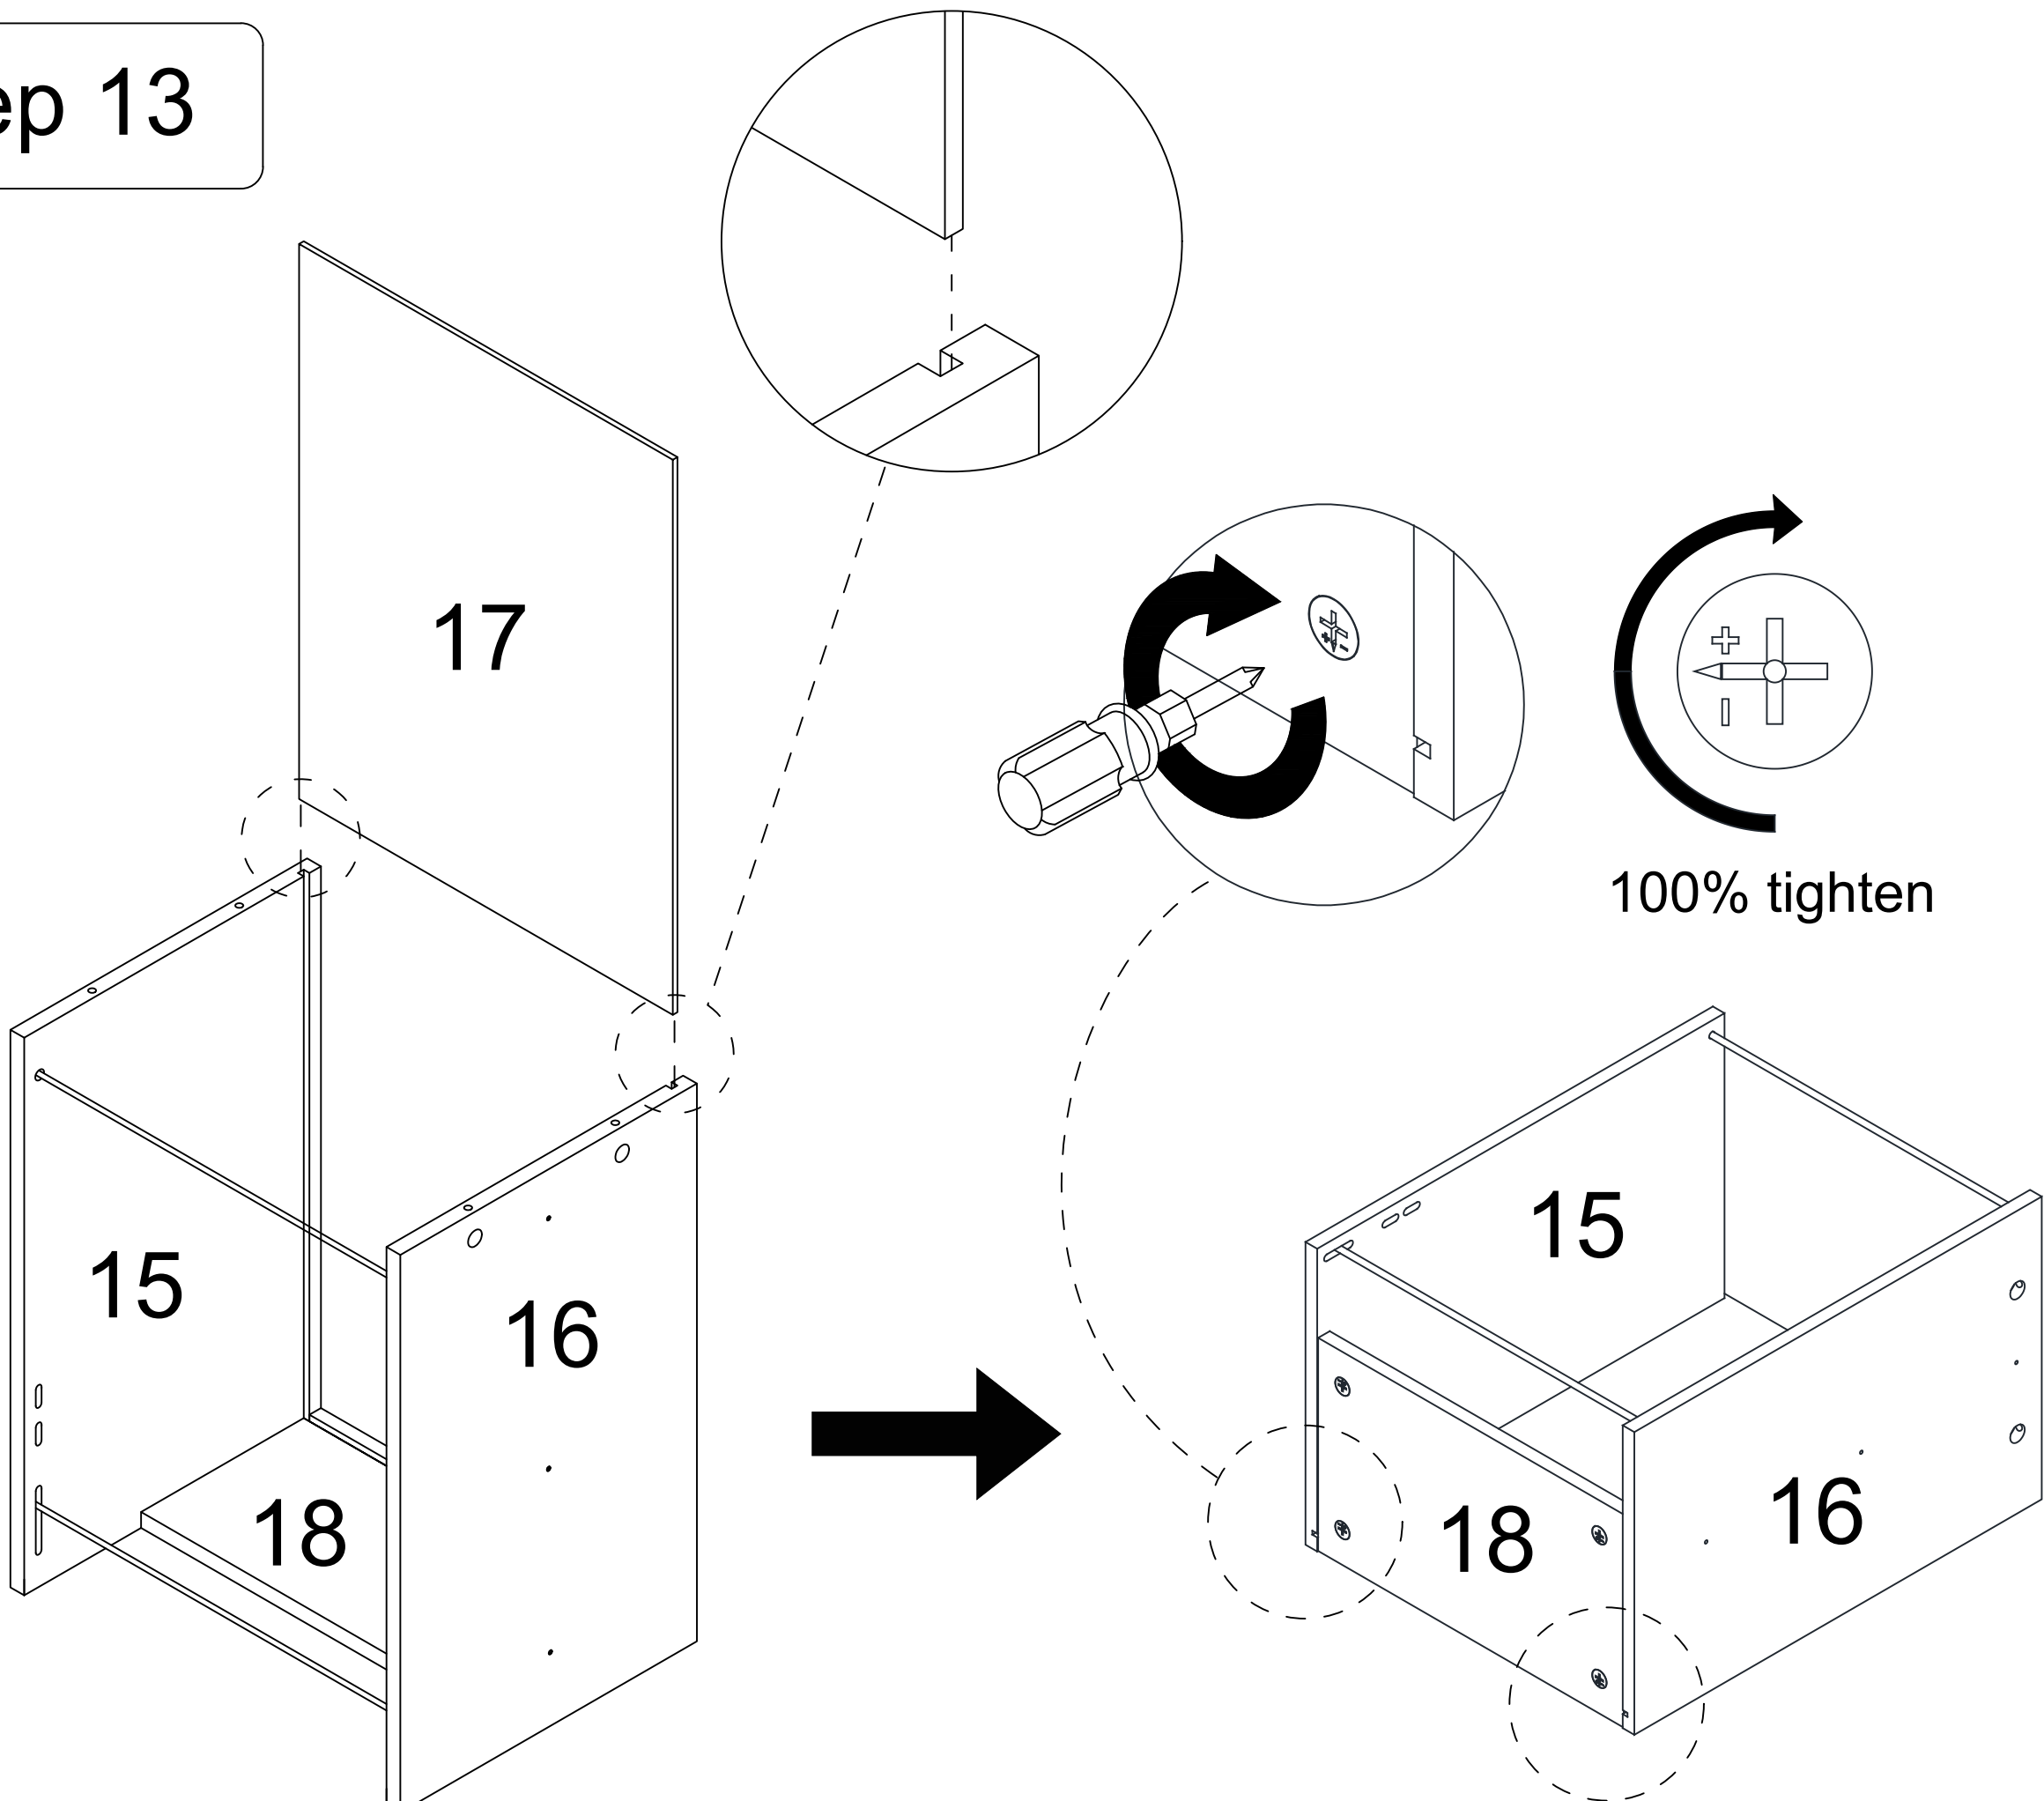


Step 14

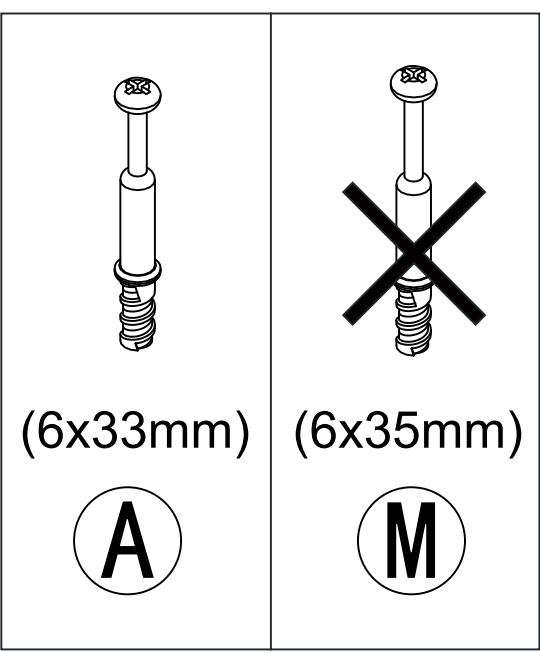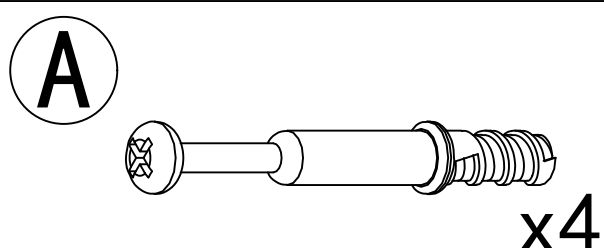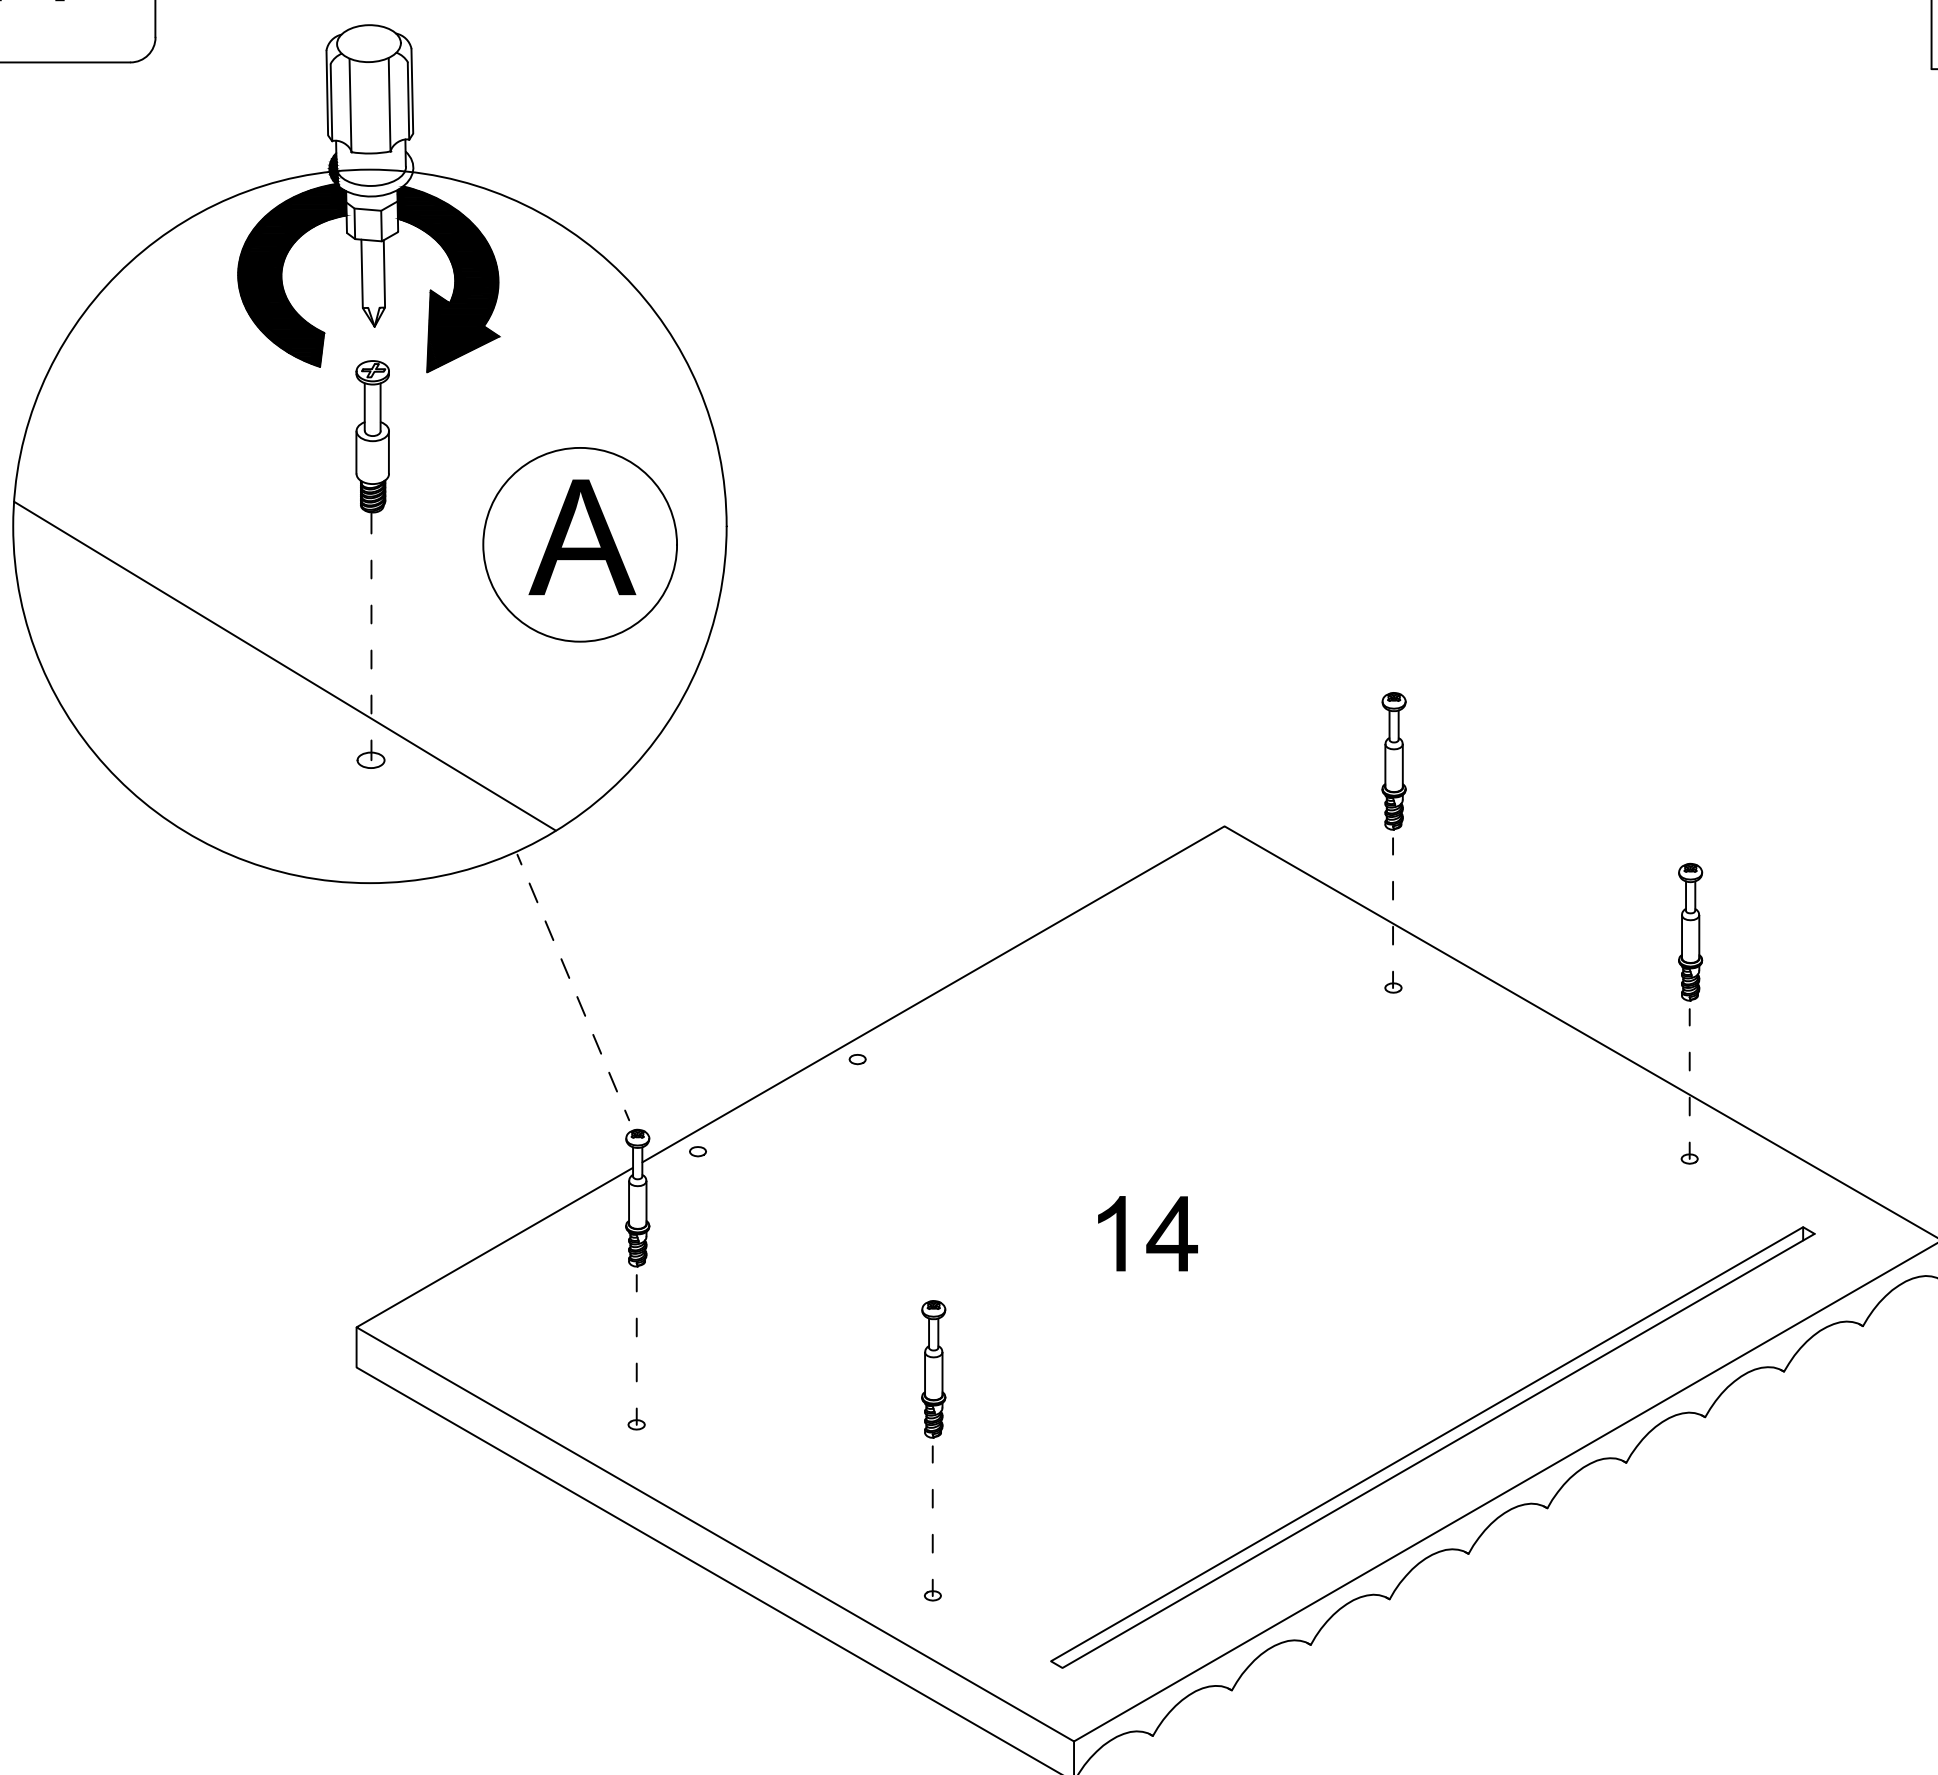


Step 15

B

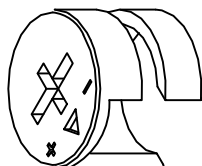


x4

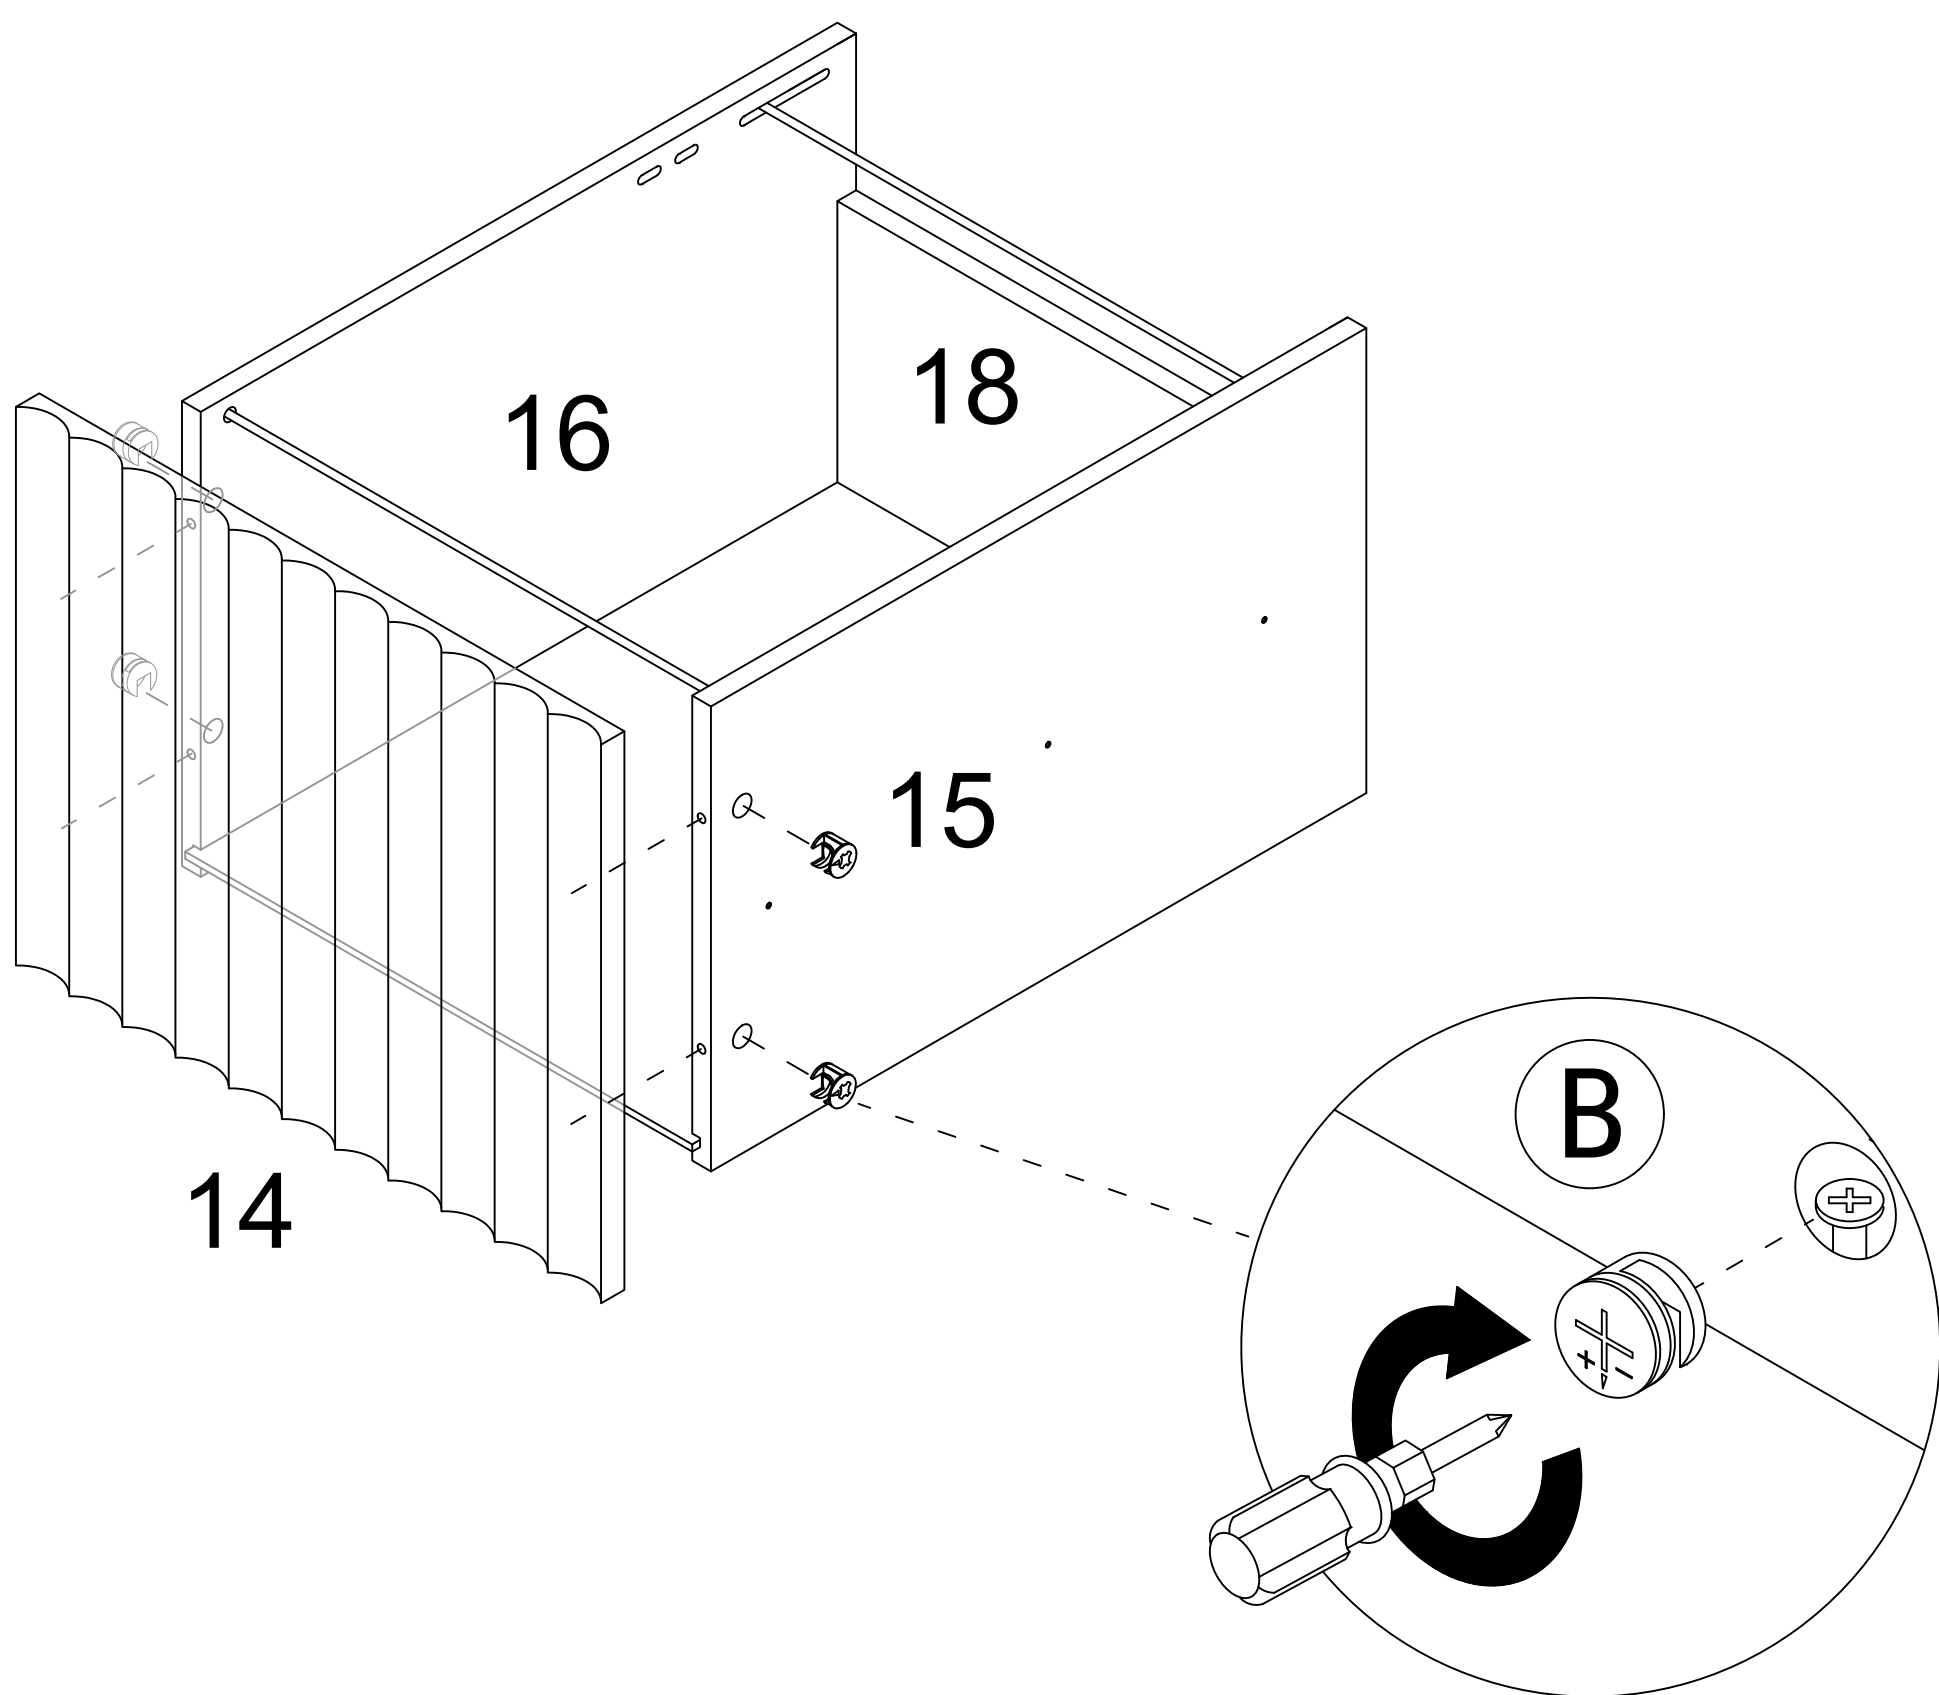

Step 16


D




x1



x2

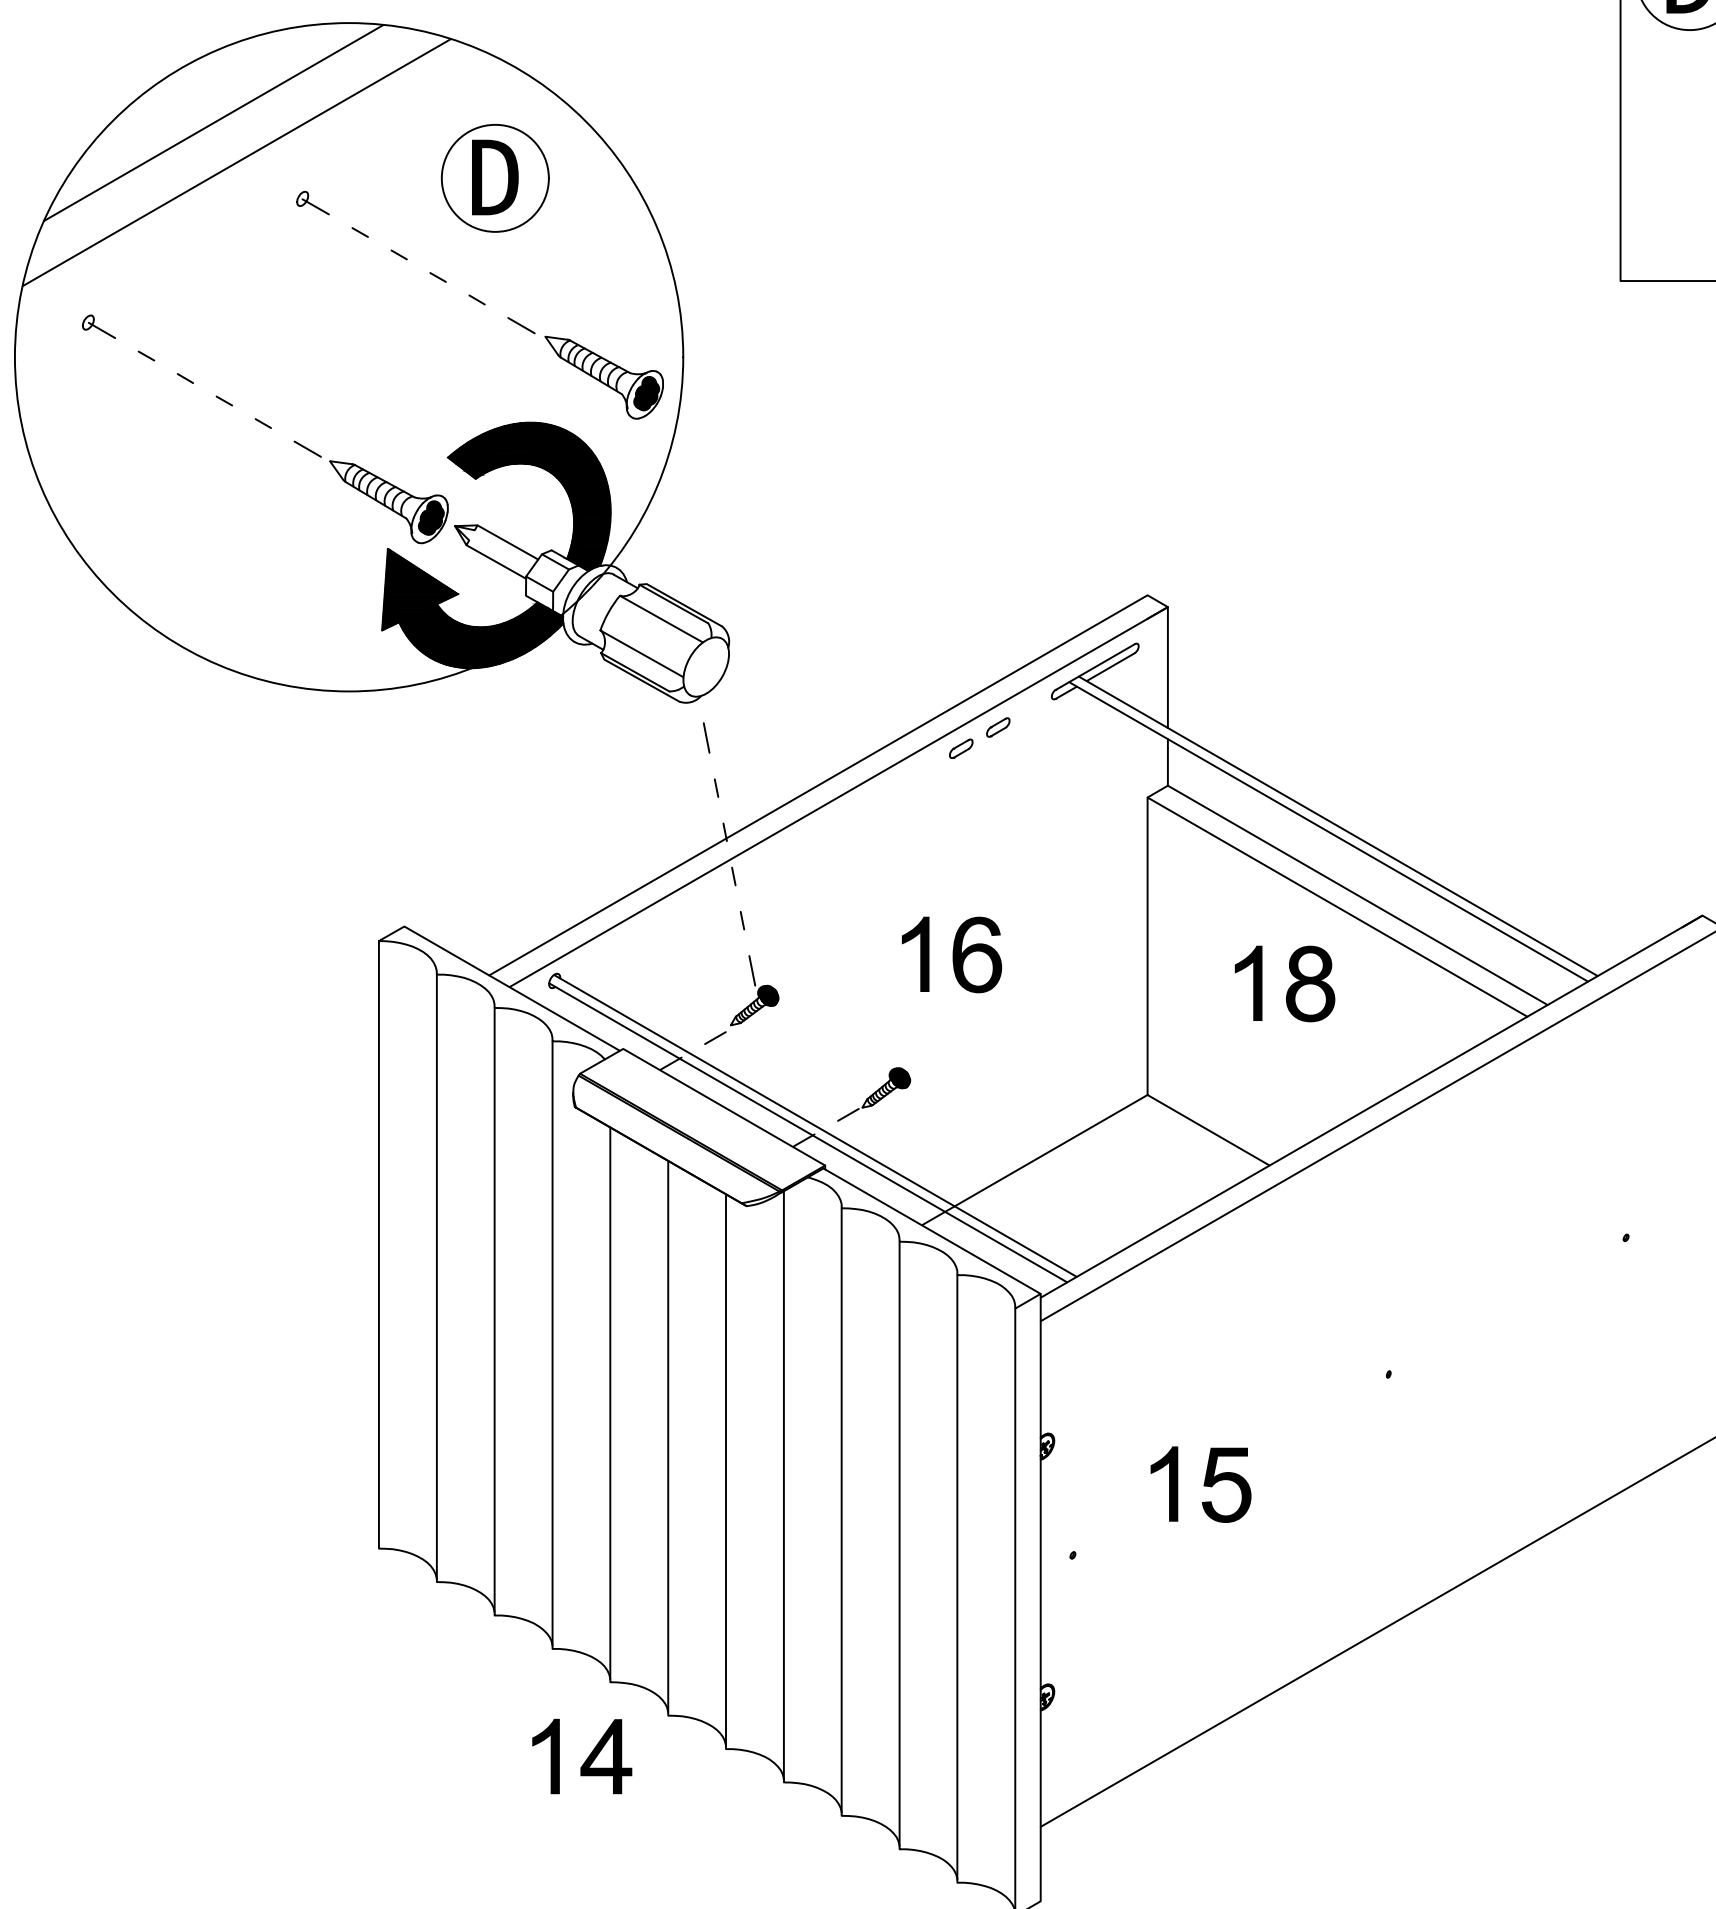


Step 17


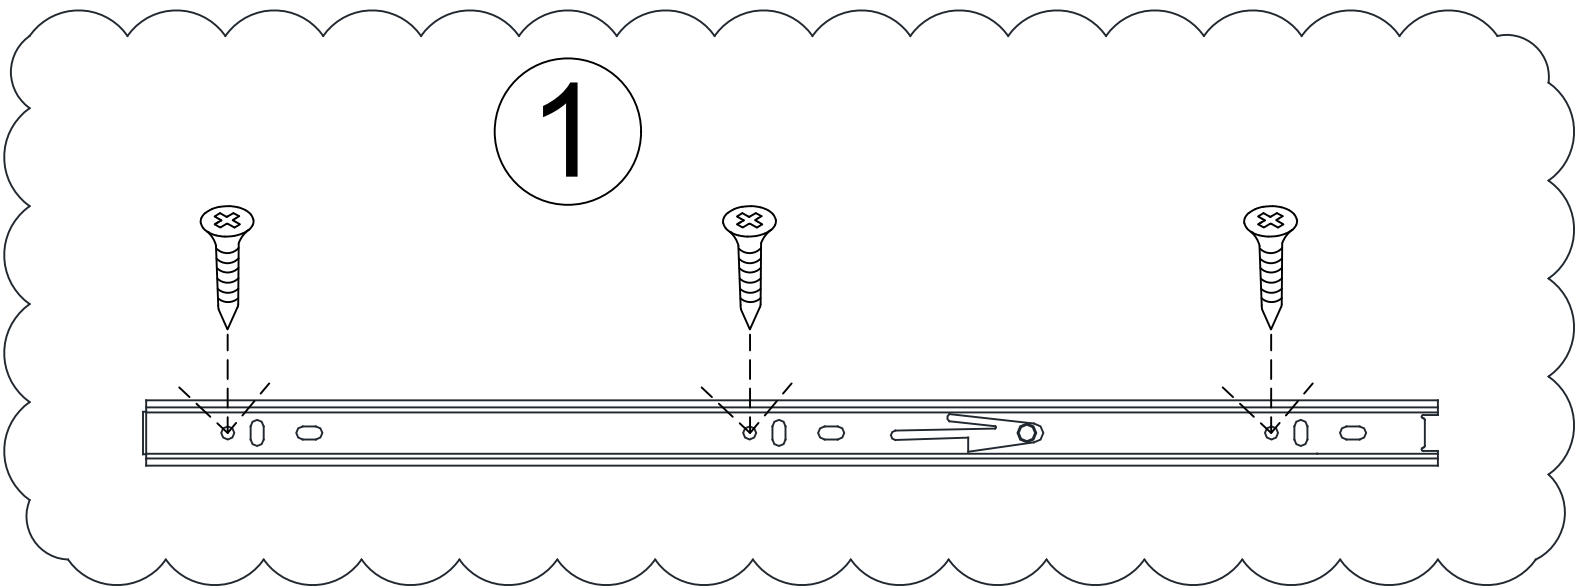


F


x2




x6

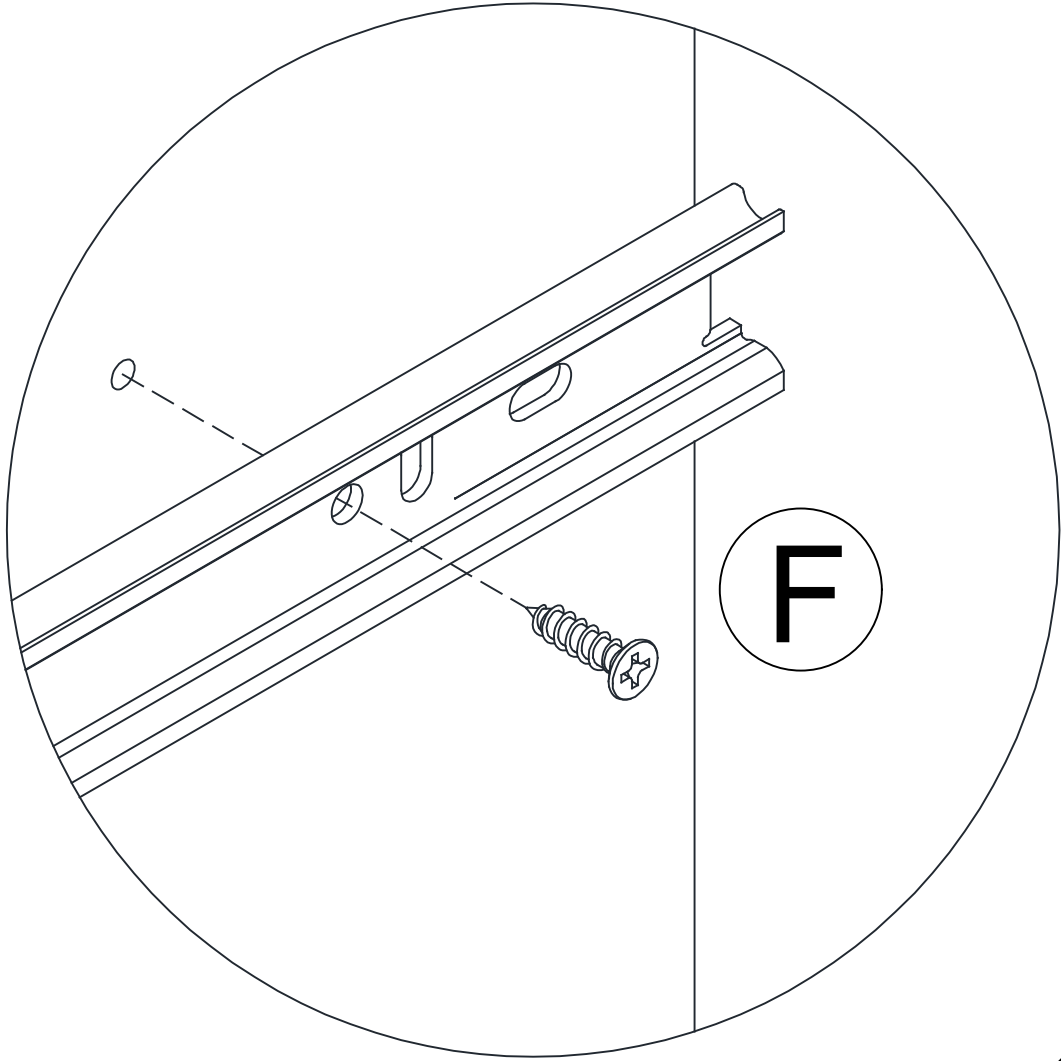
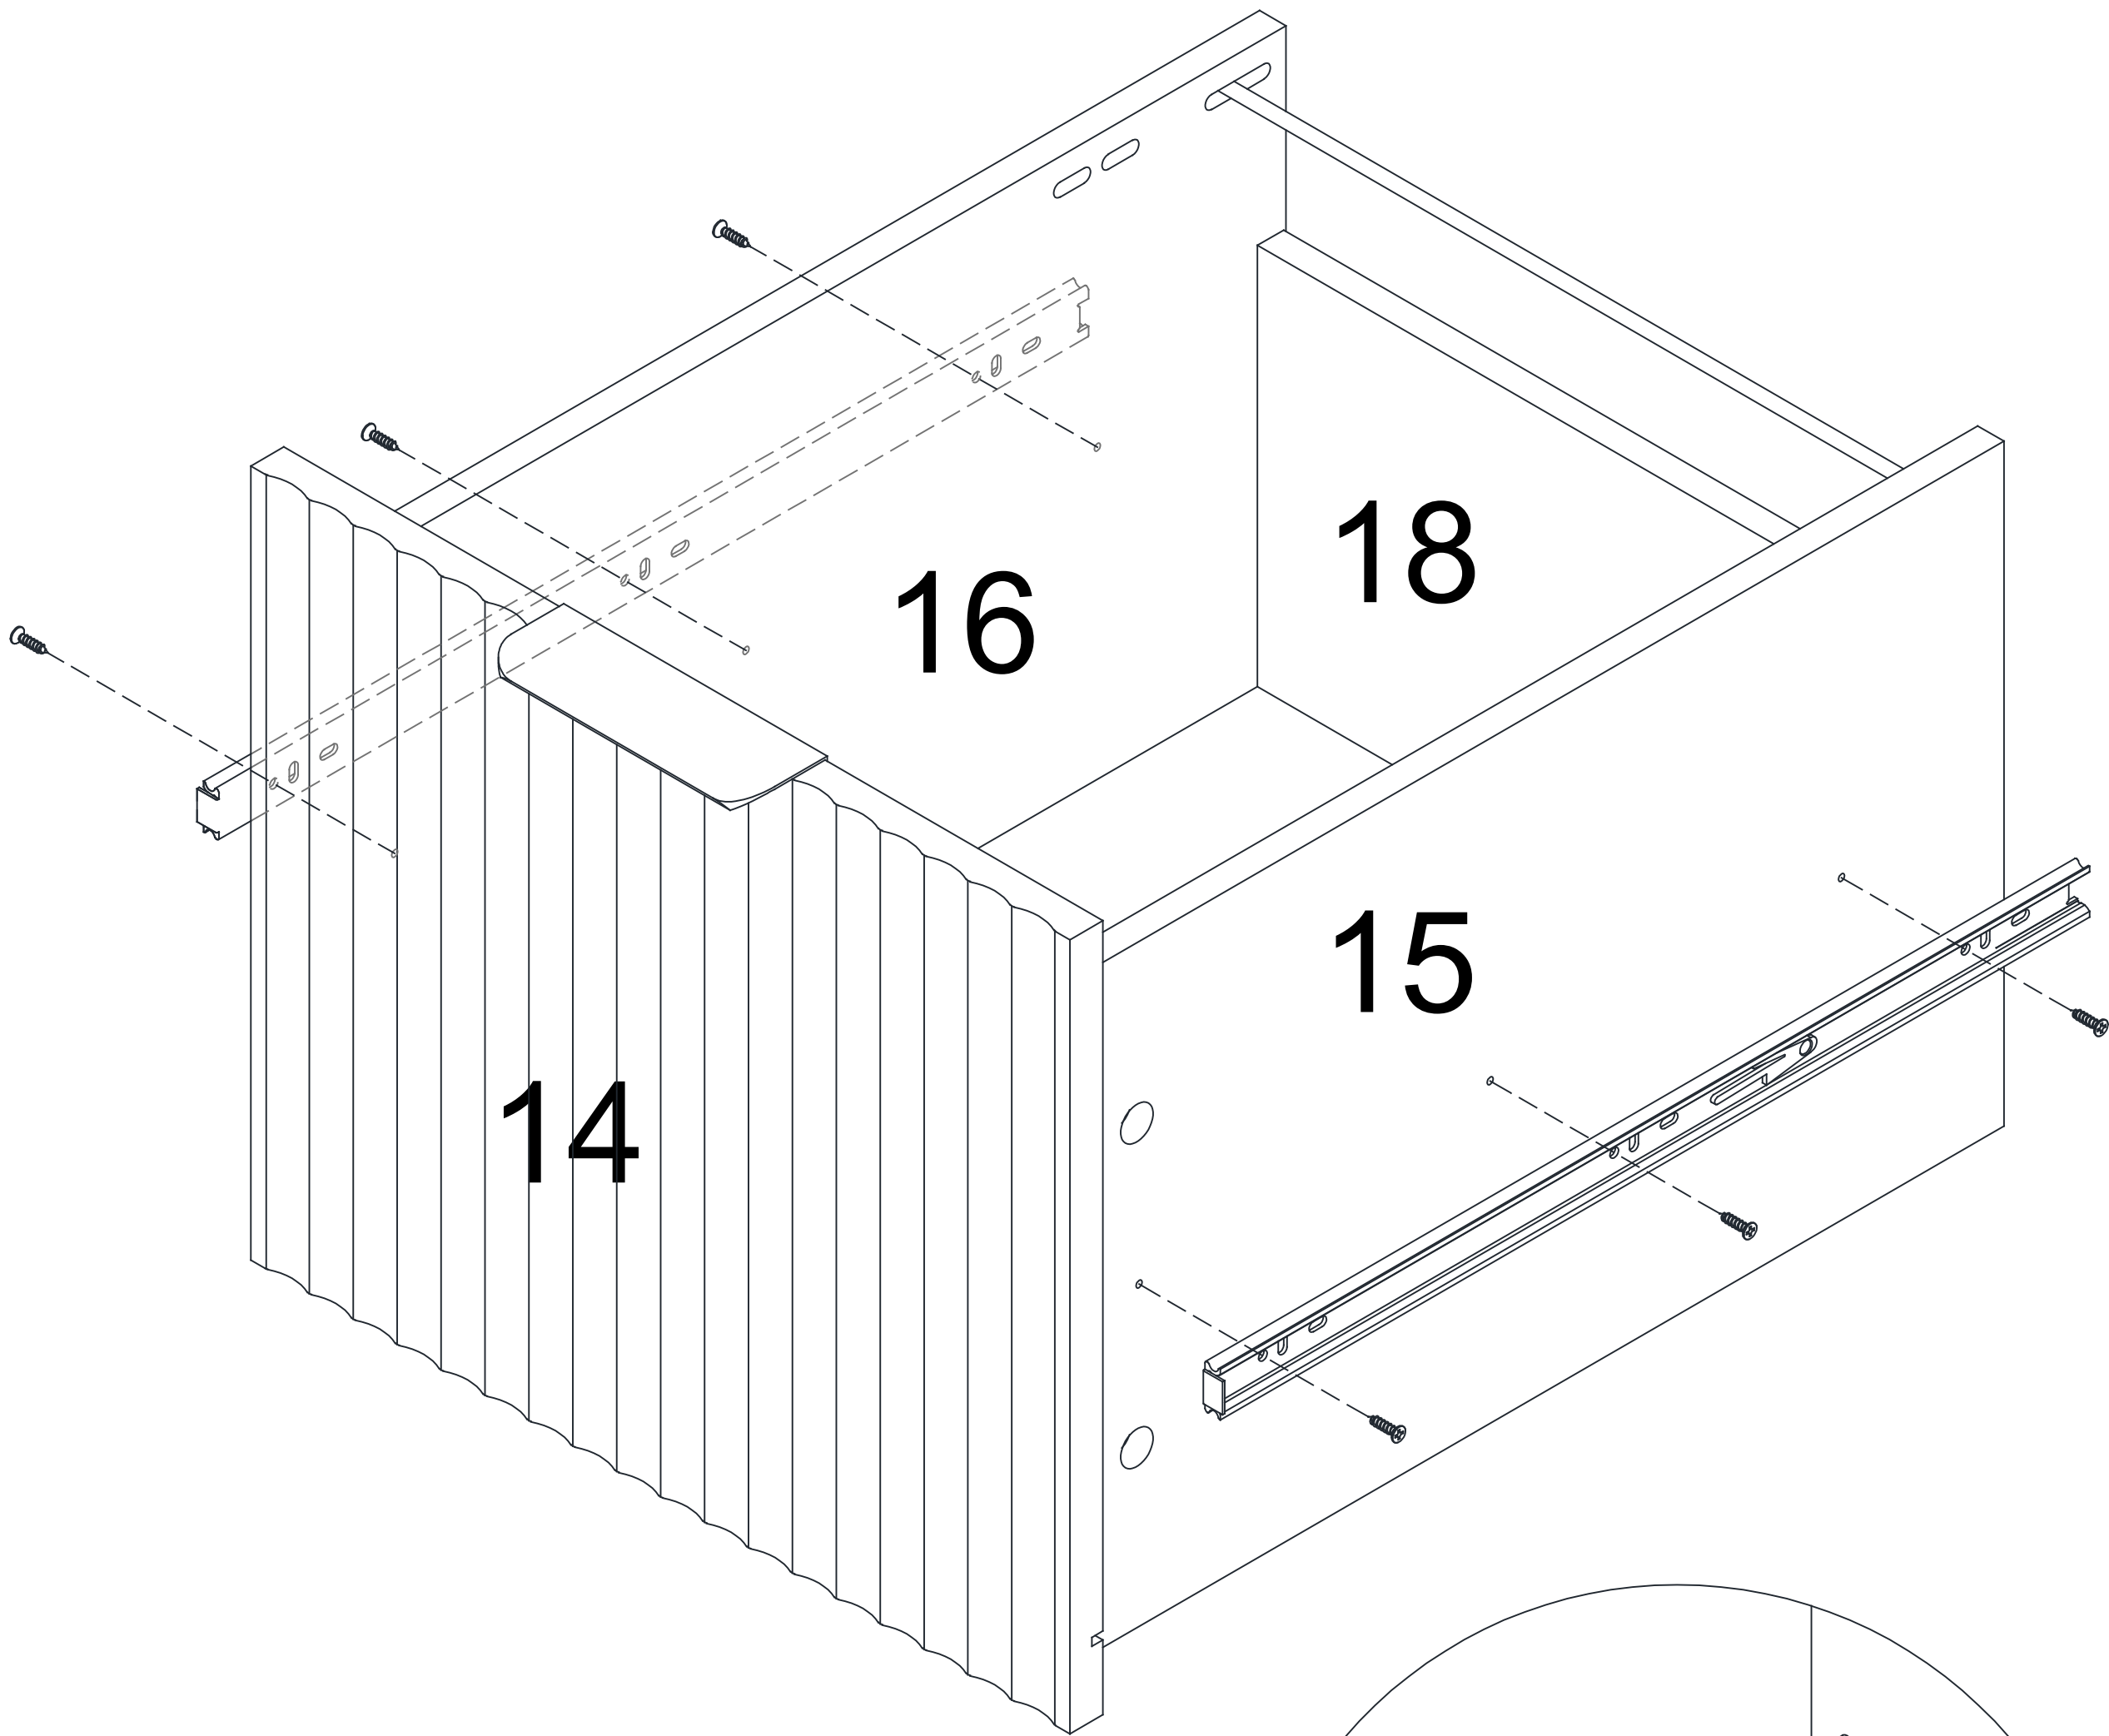



Product Explosion diagram

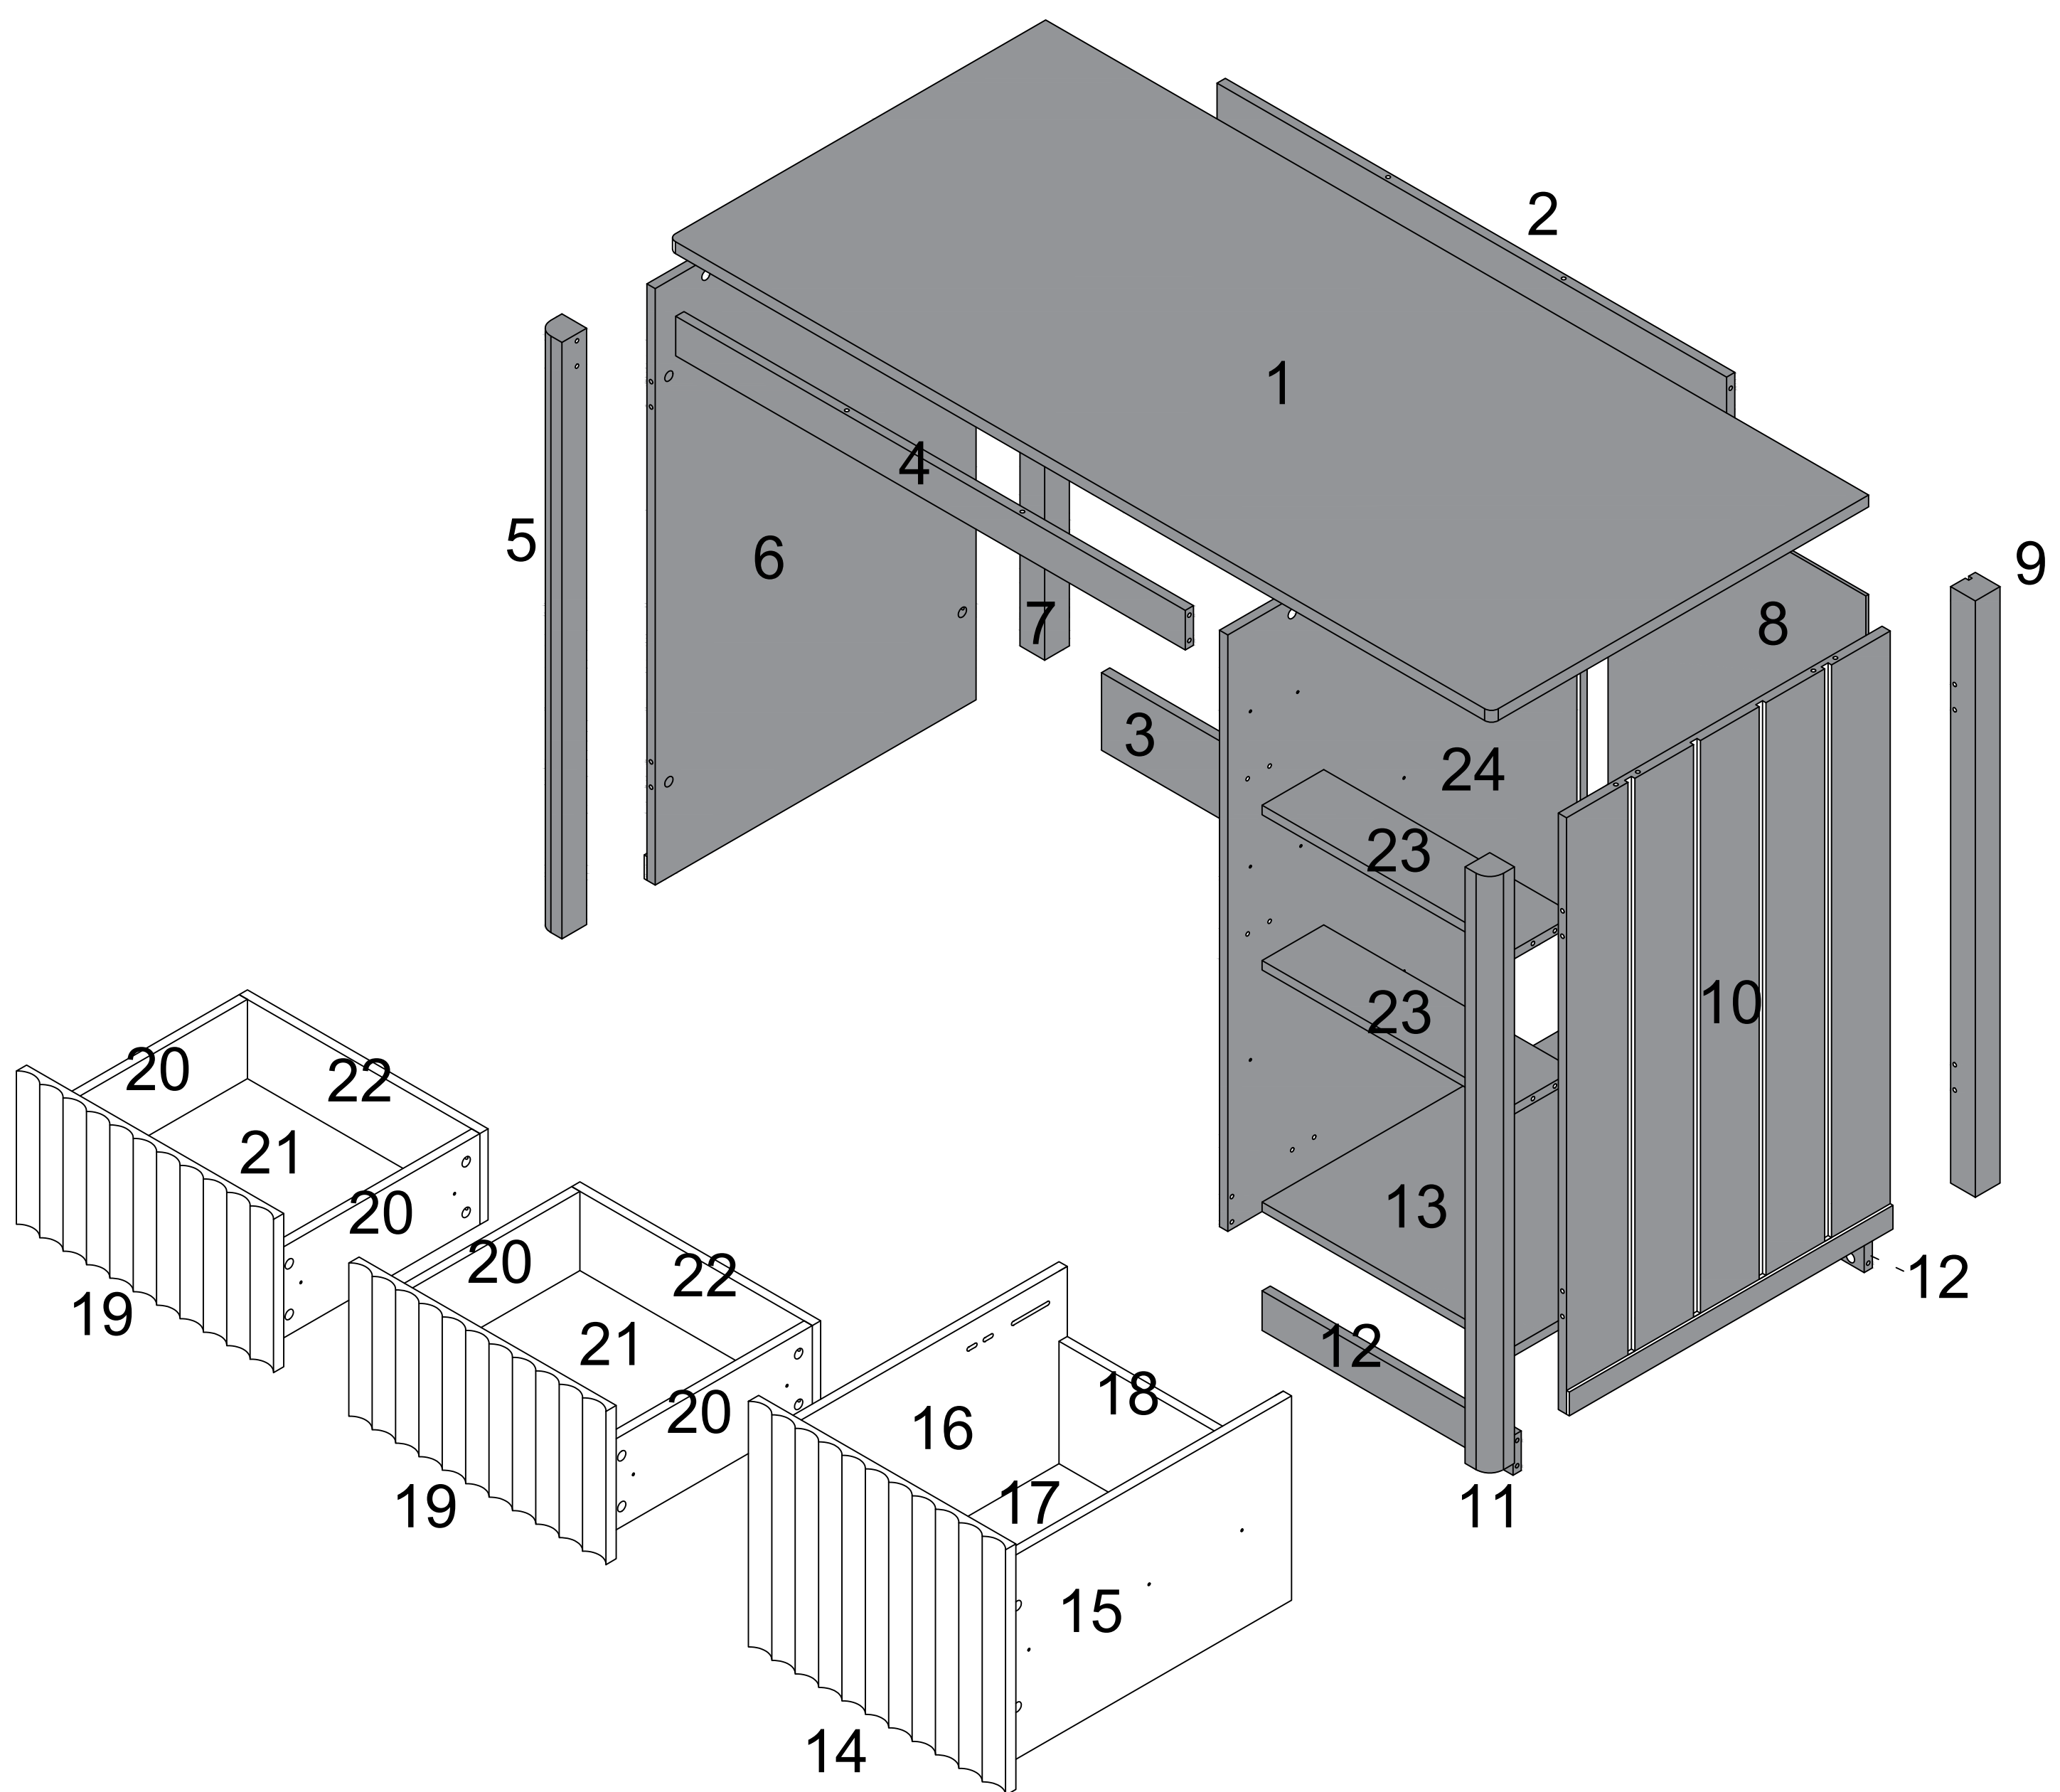


Step 18

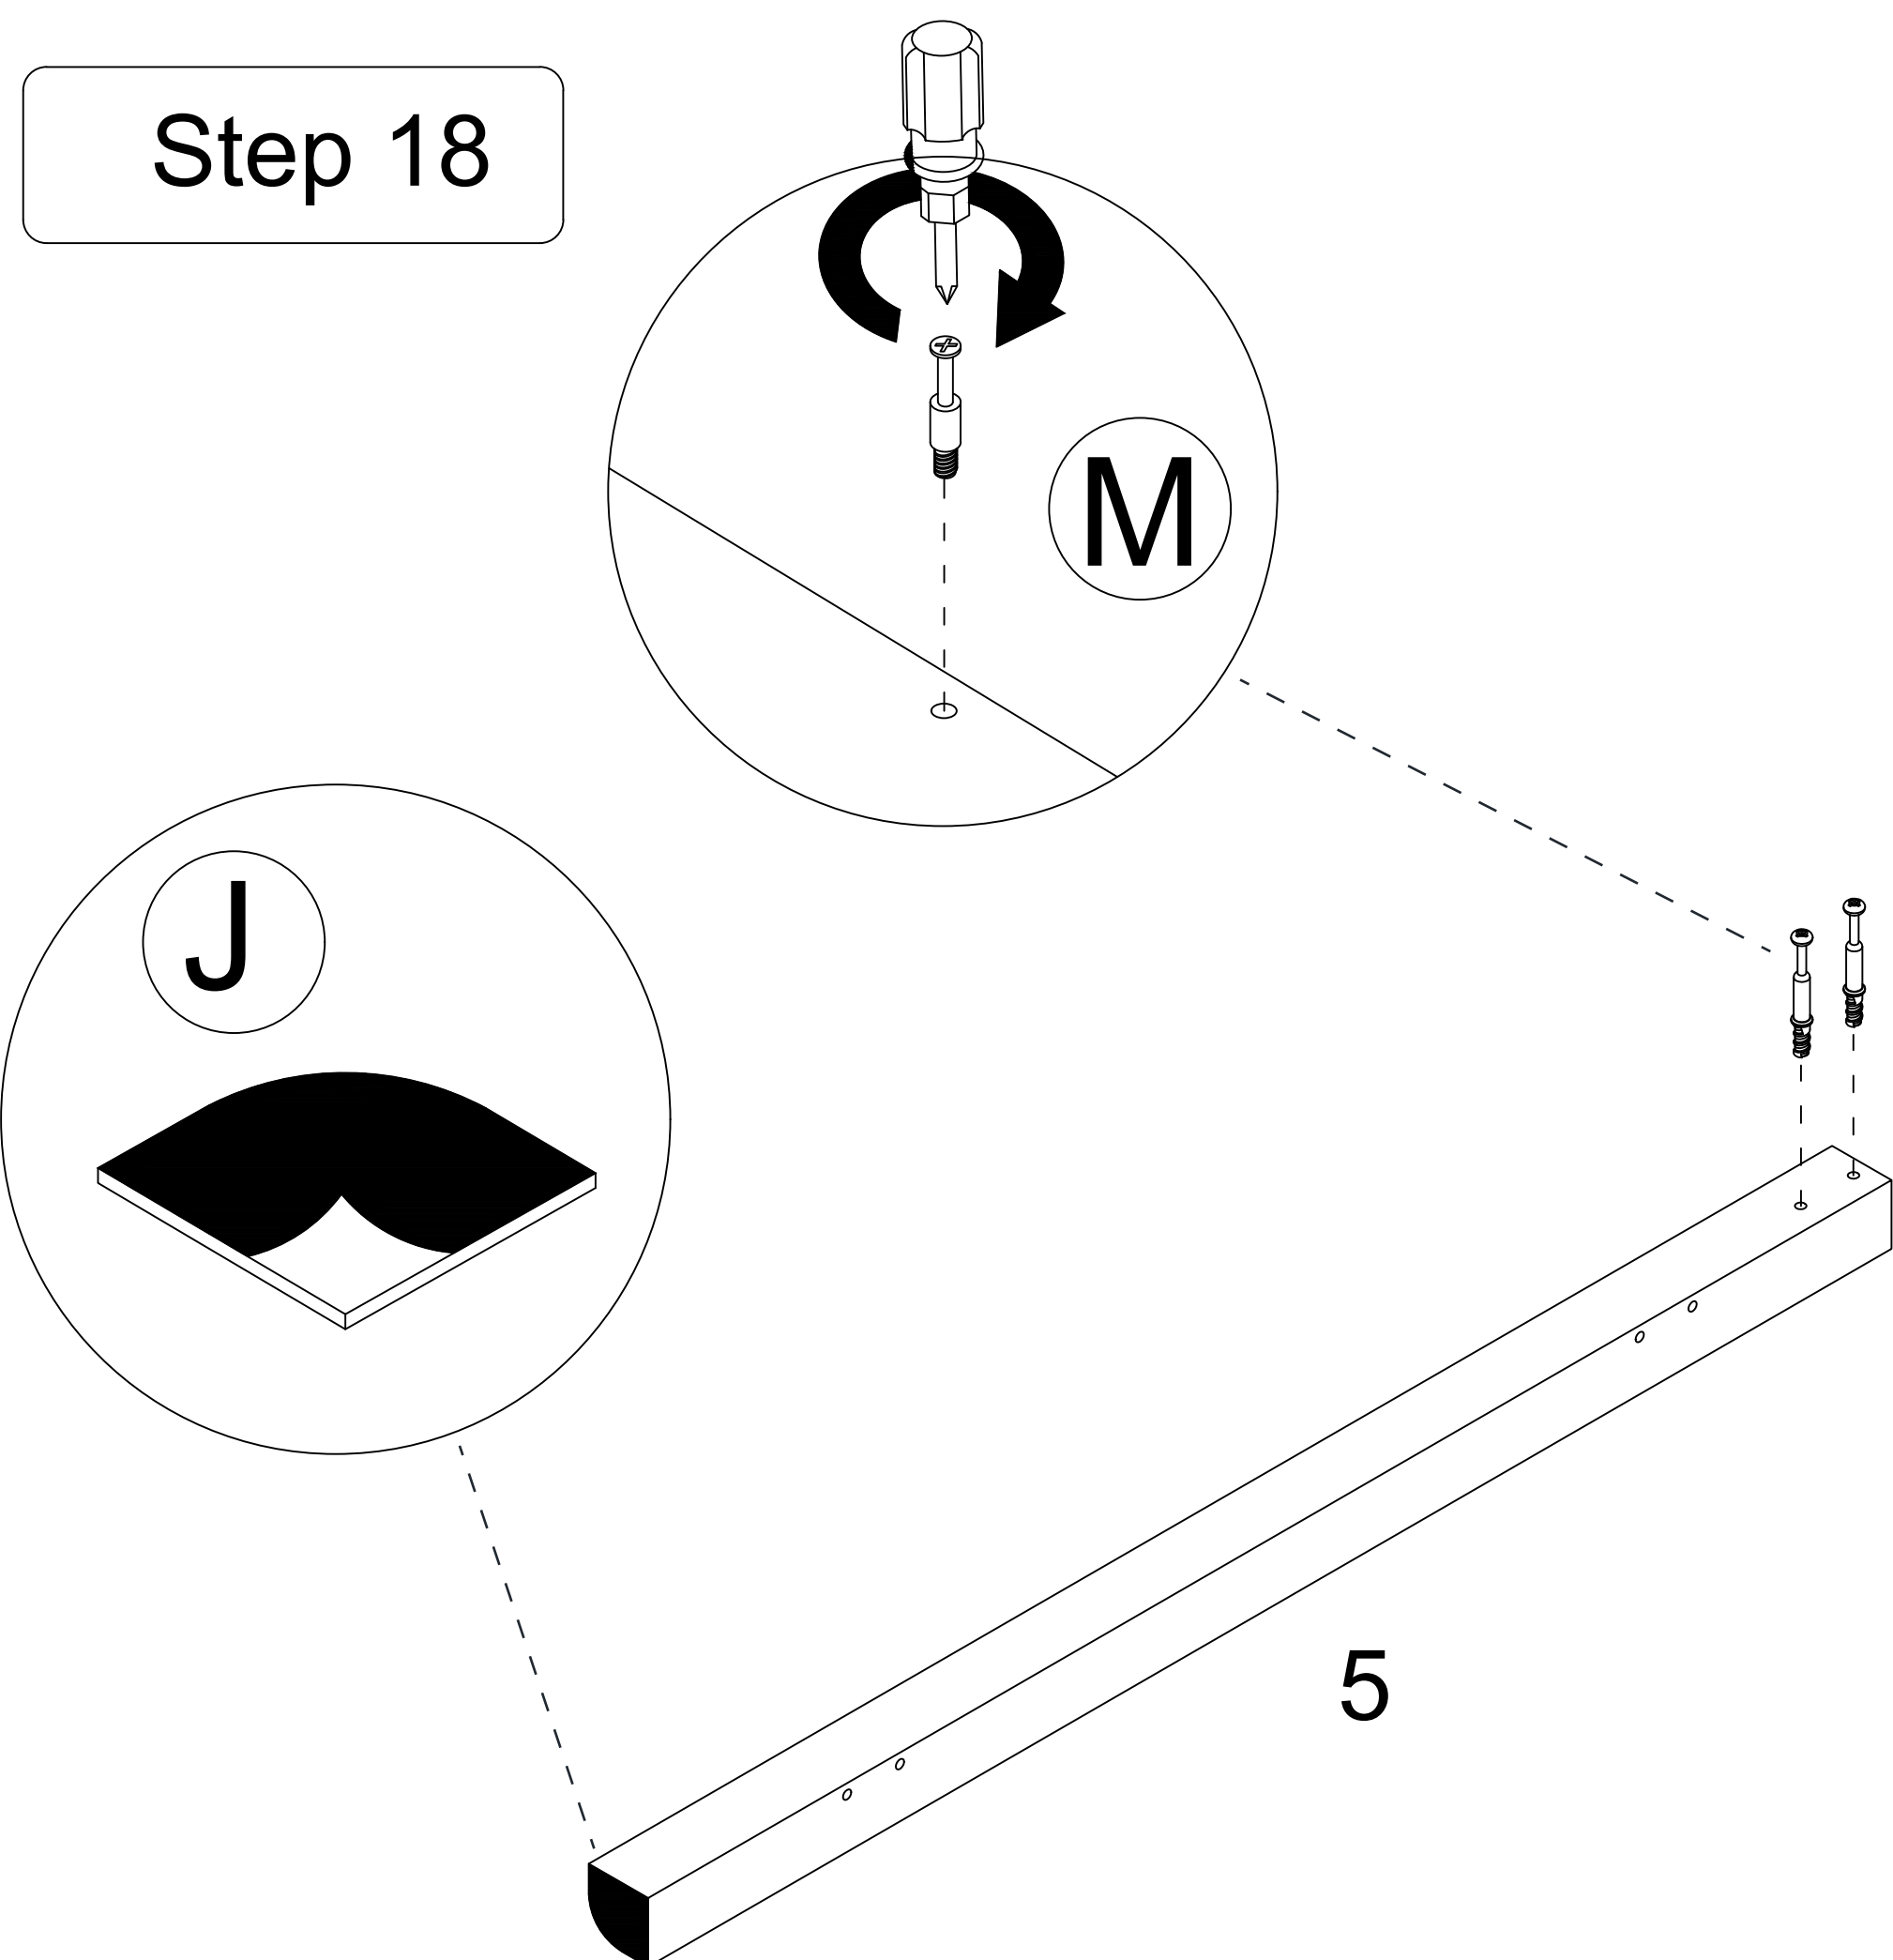


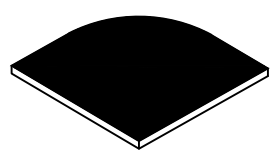
- M**  x2
- J**  x1

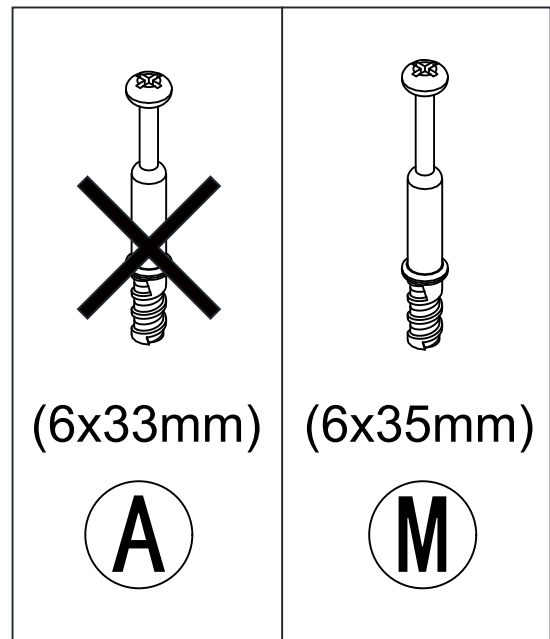


Step 19

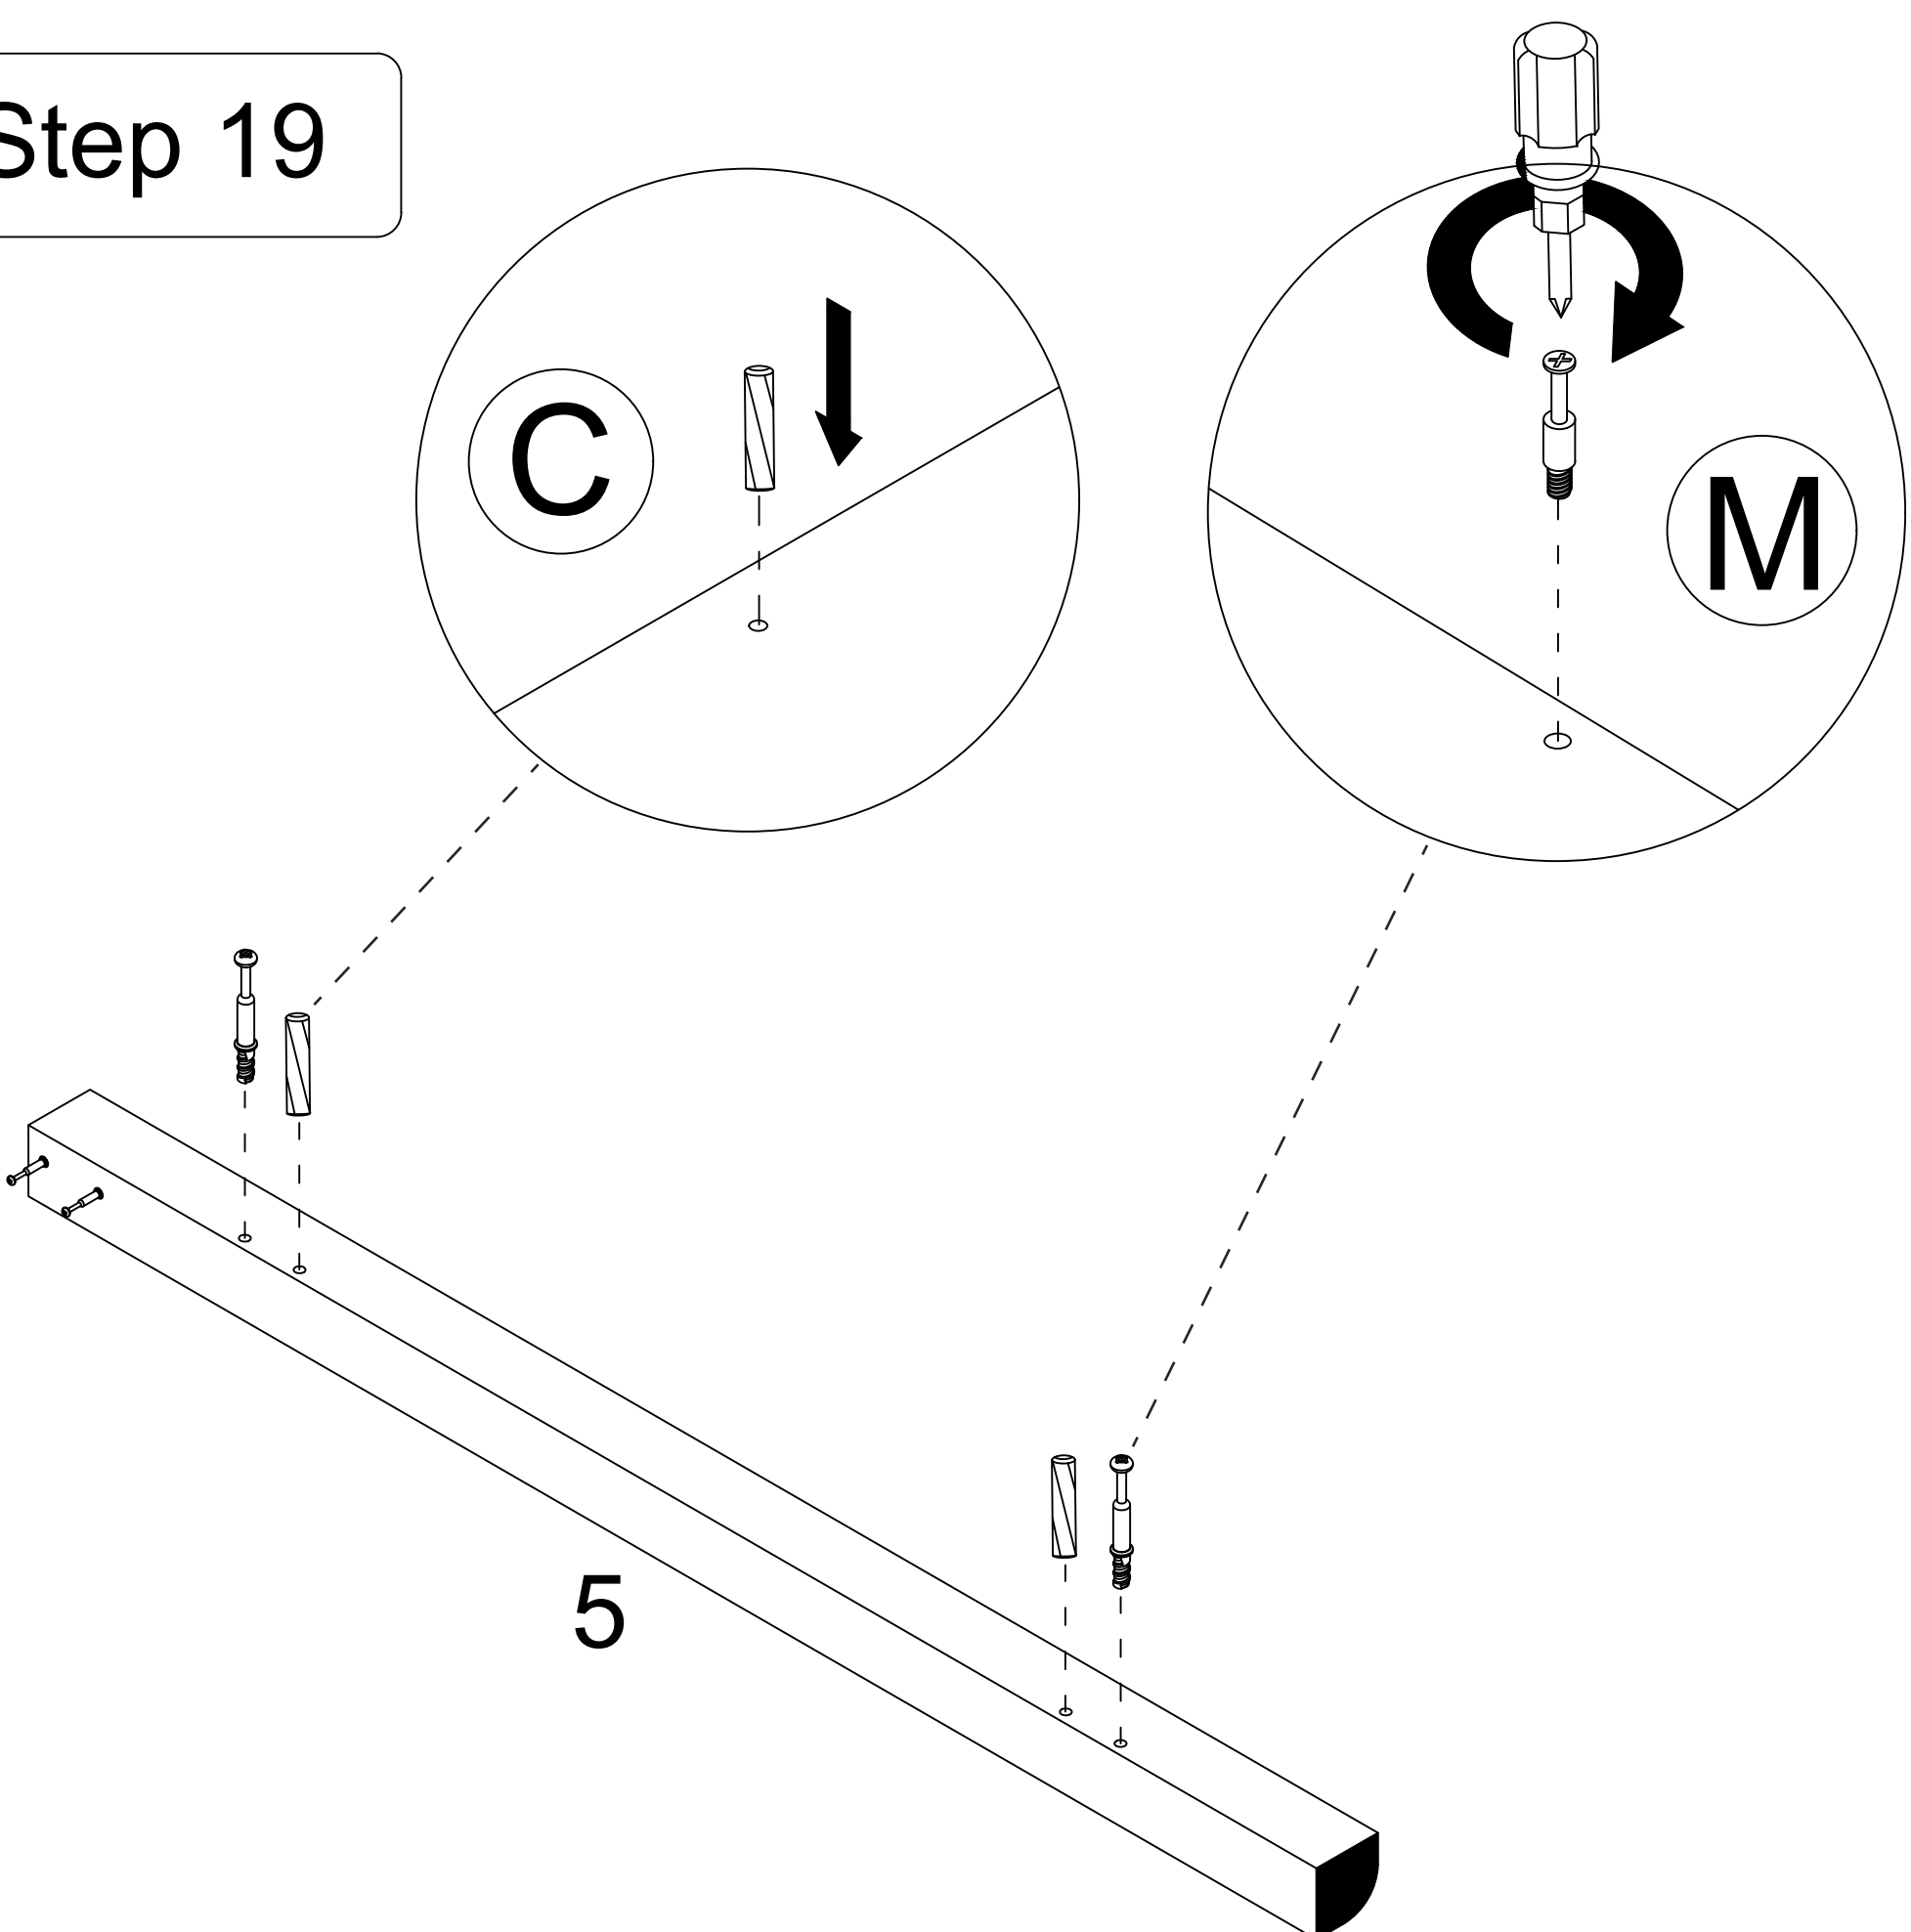


- M**  x2
- C**  x2

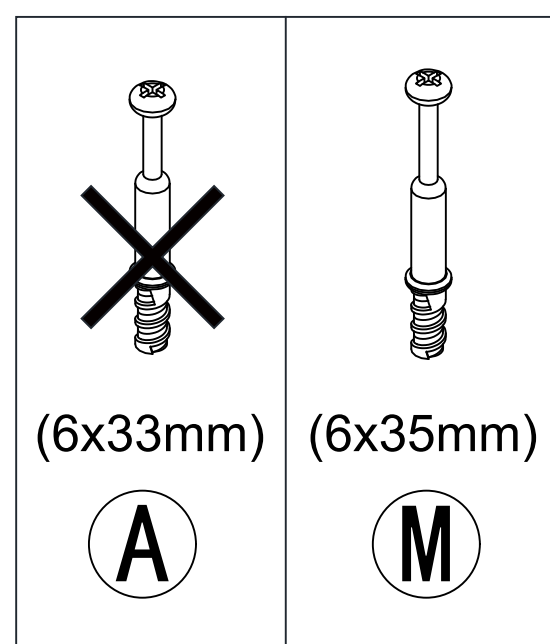


Step 20

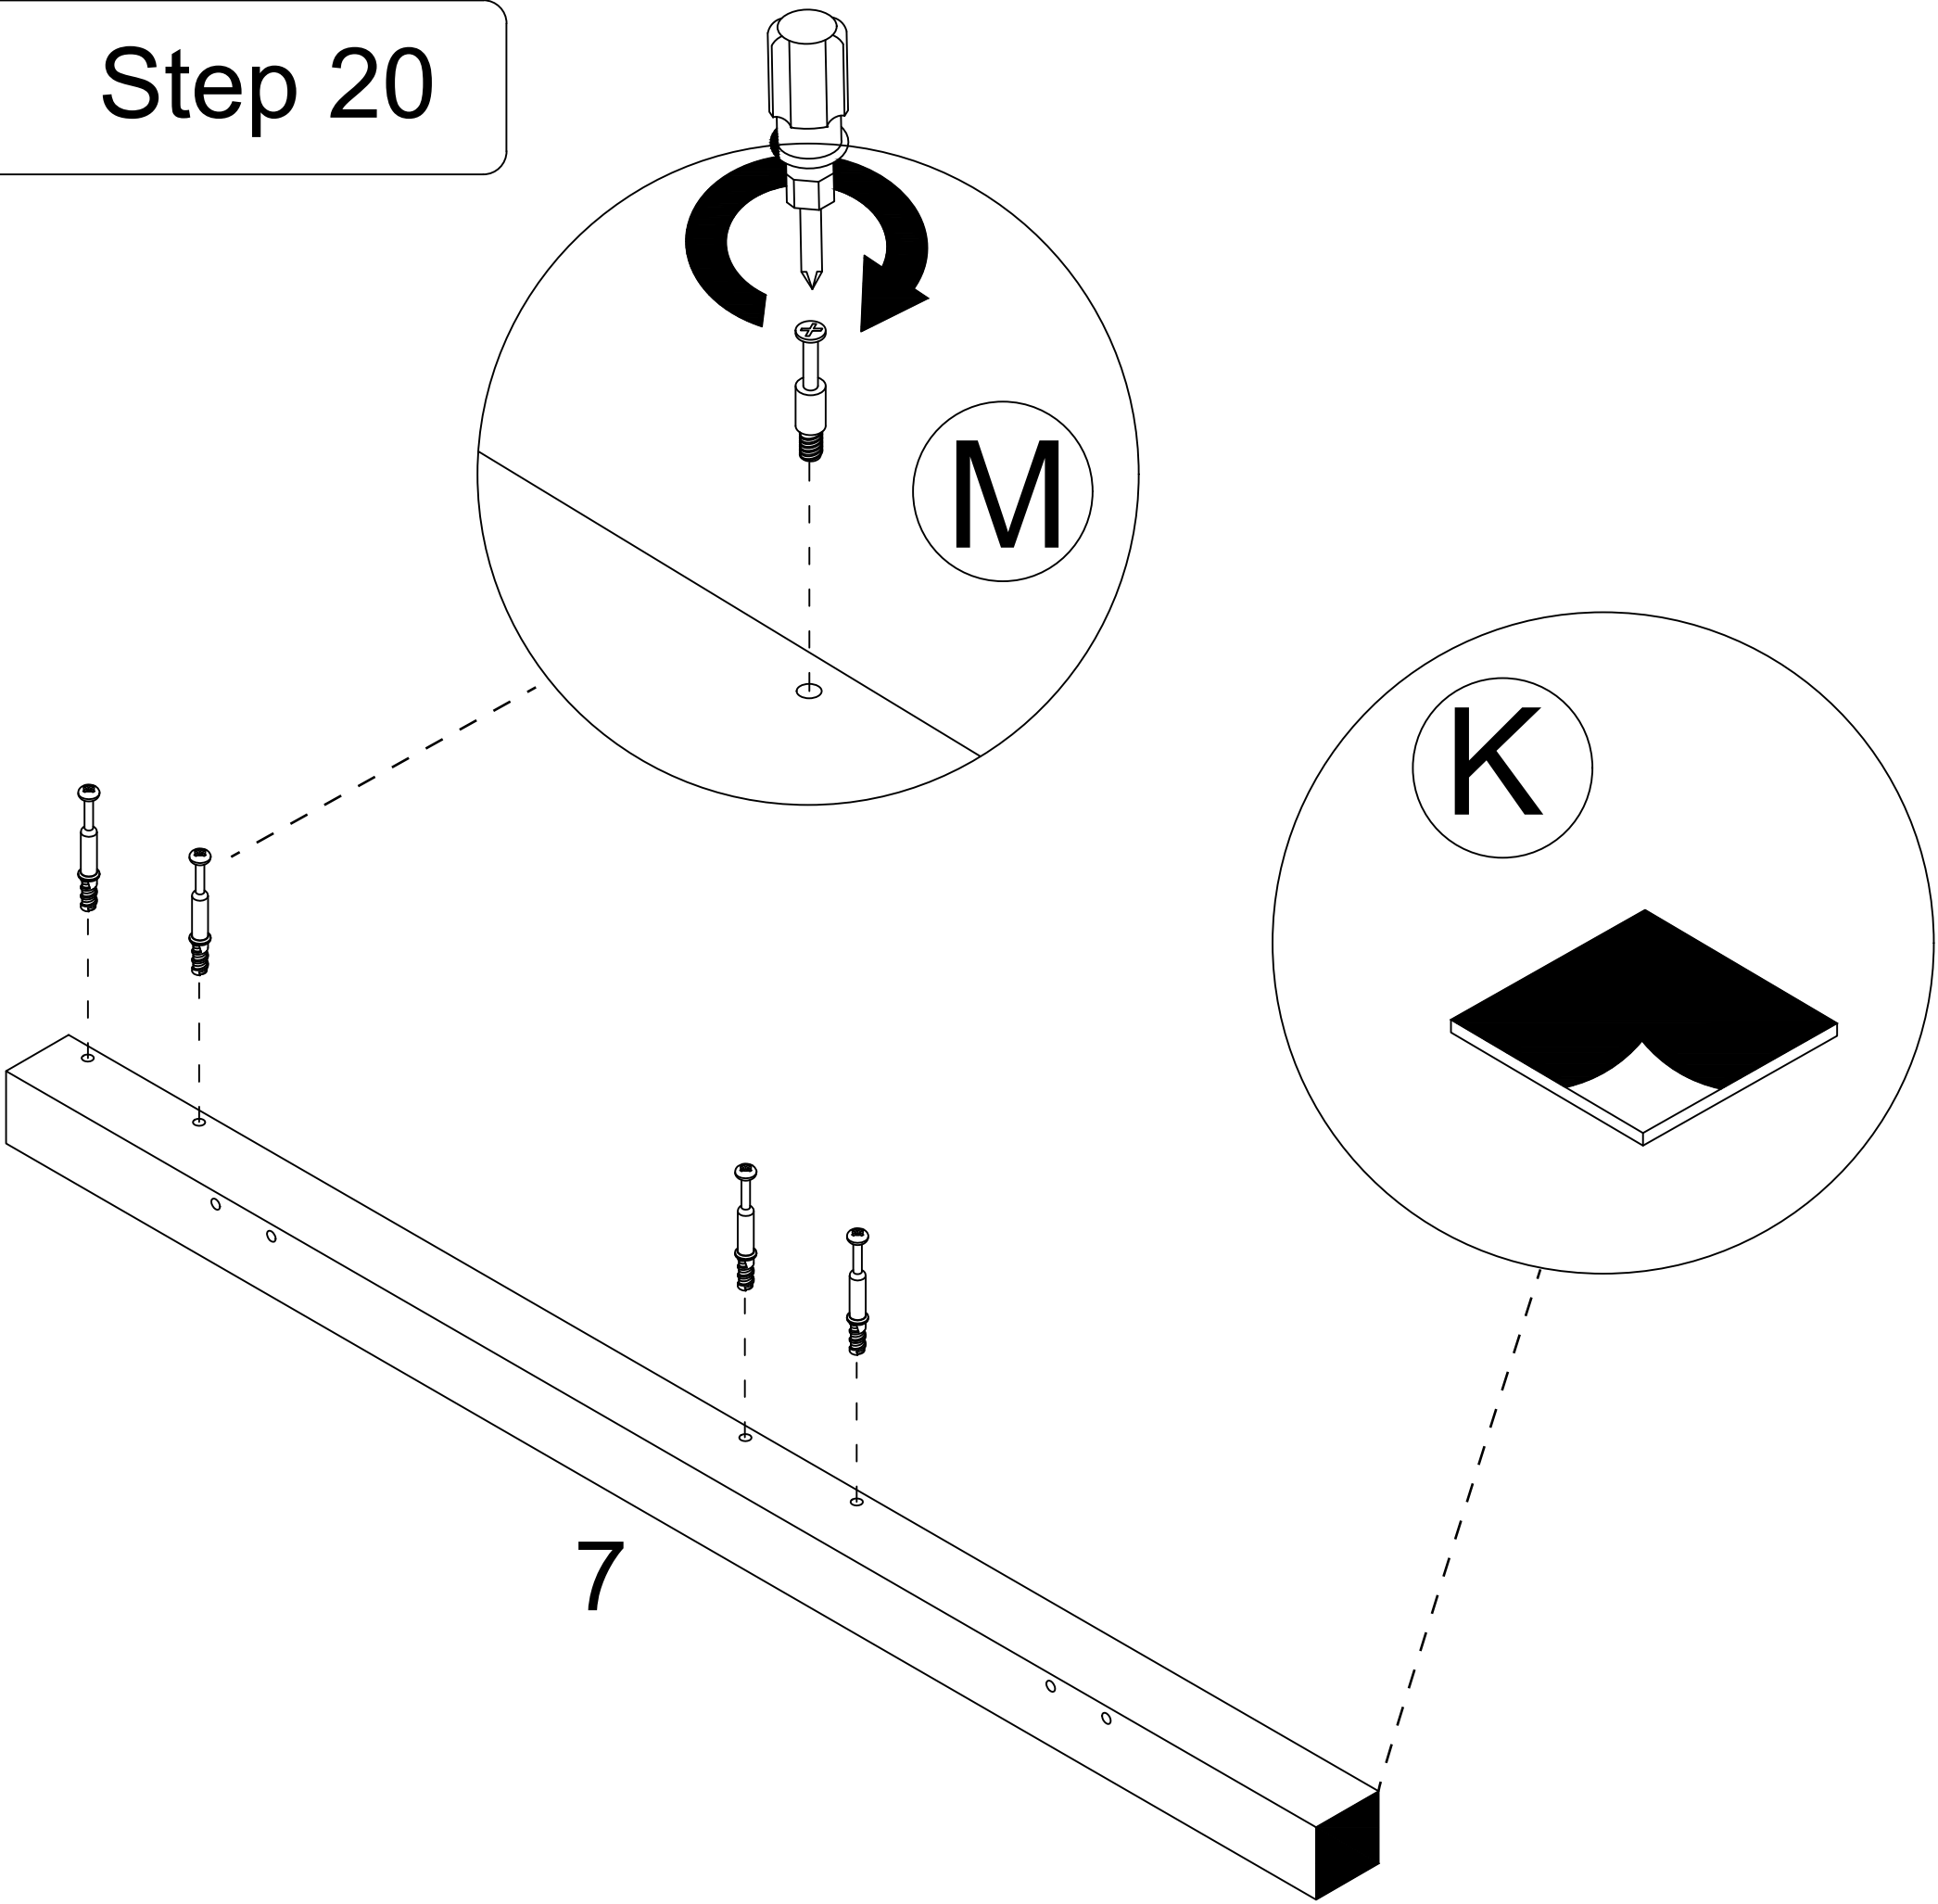


- M




x4
- K

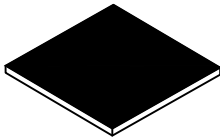


x1

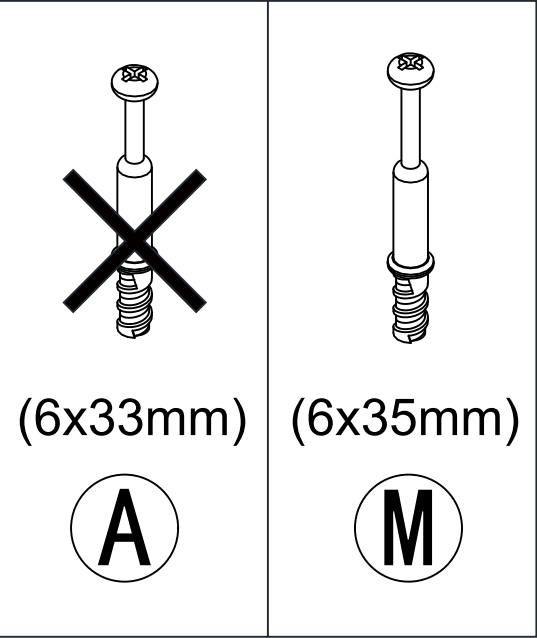

Step 21

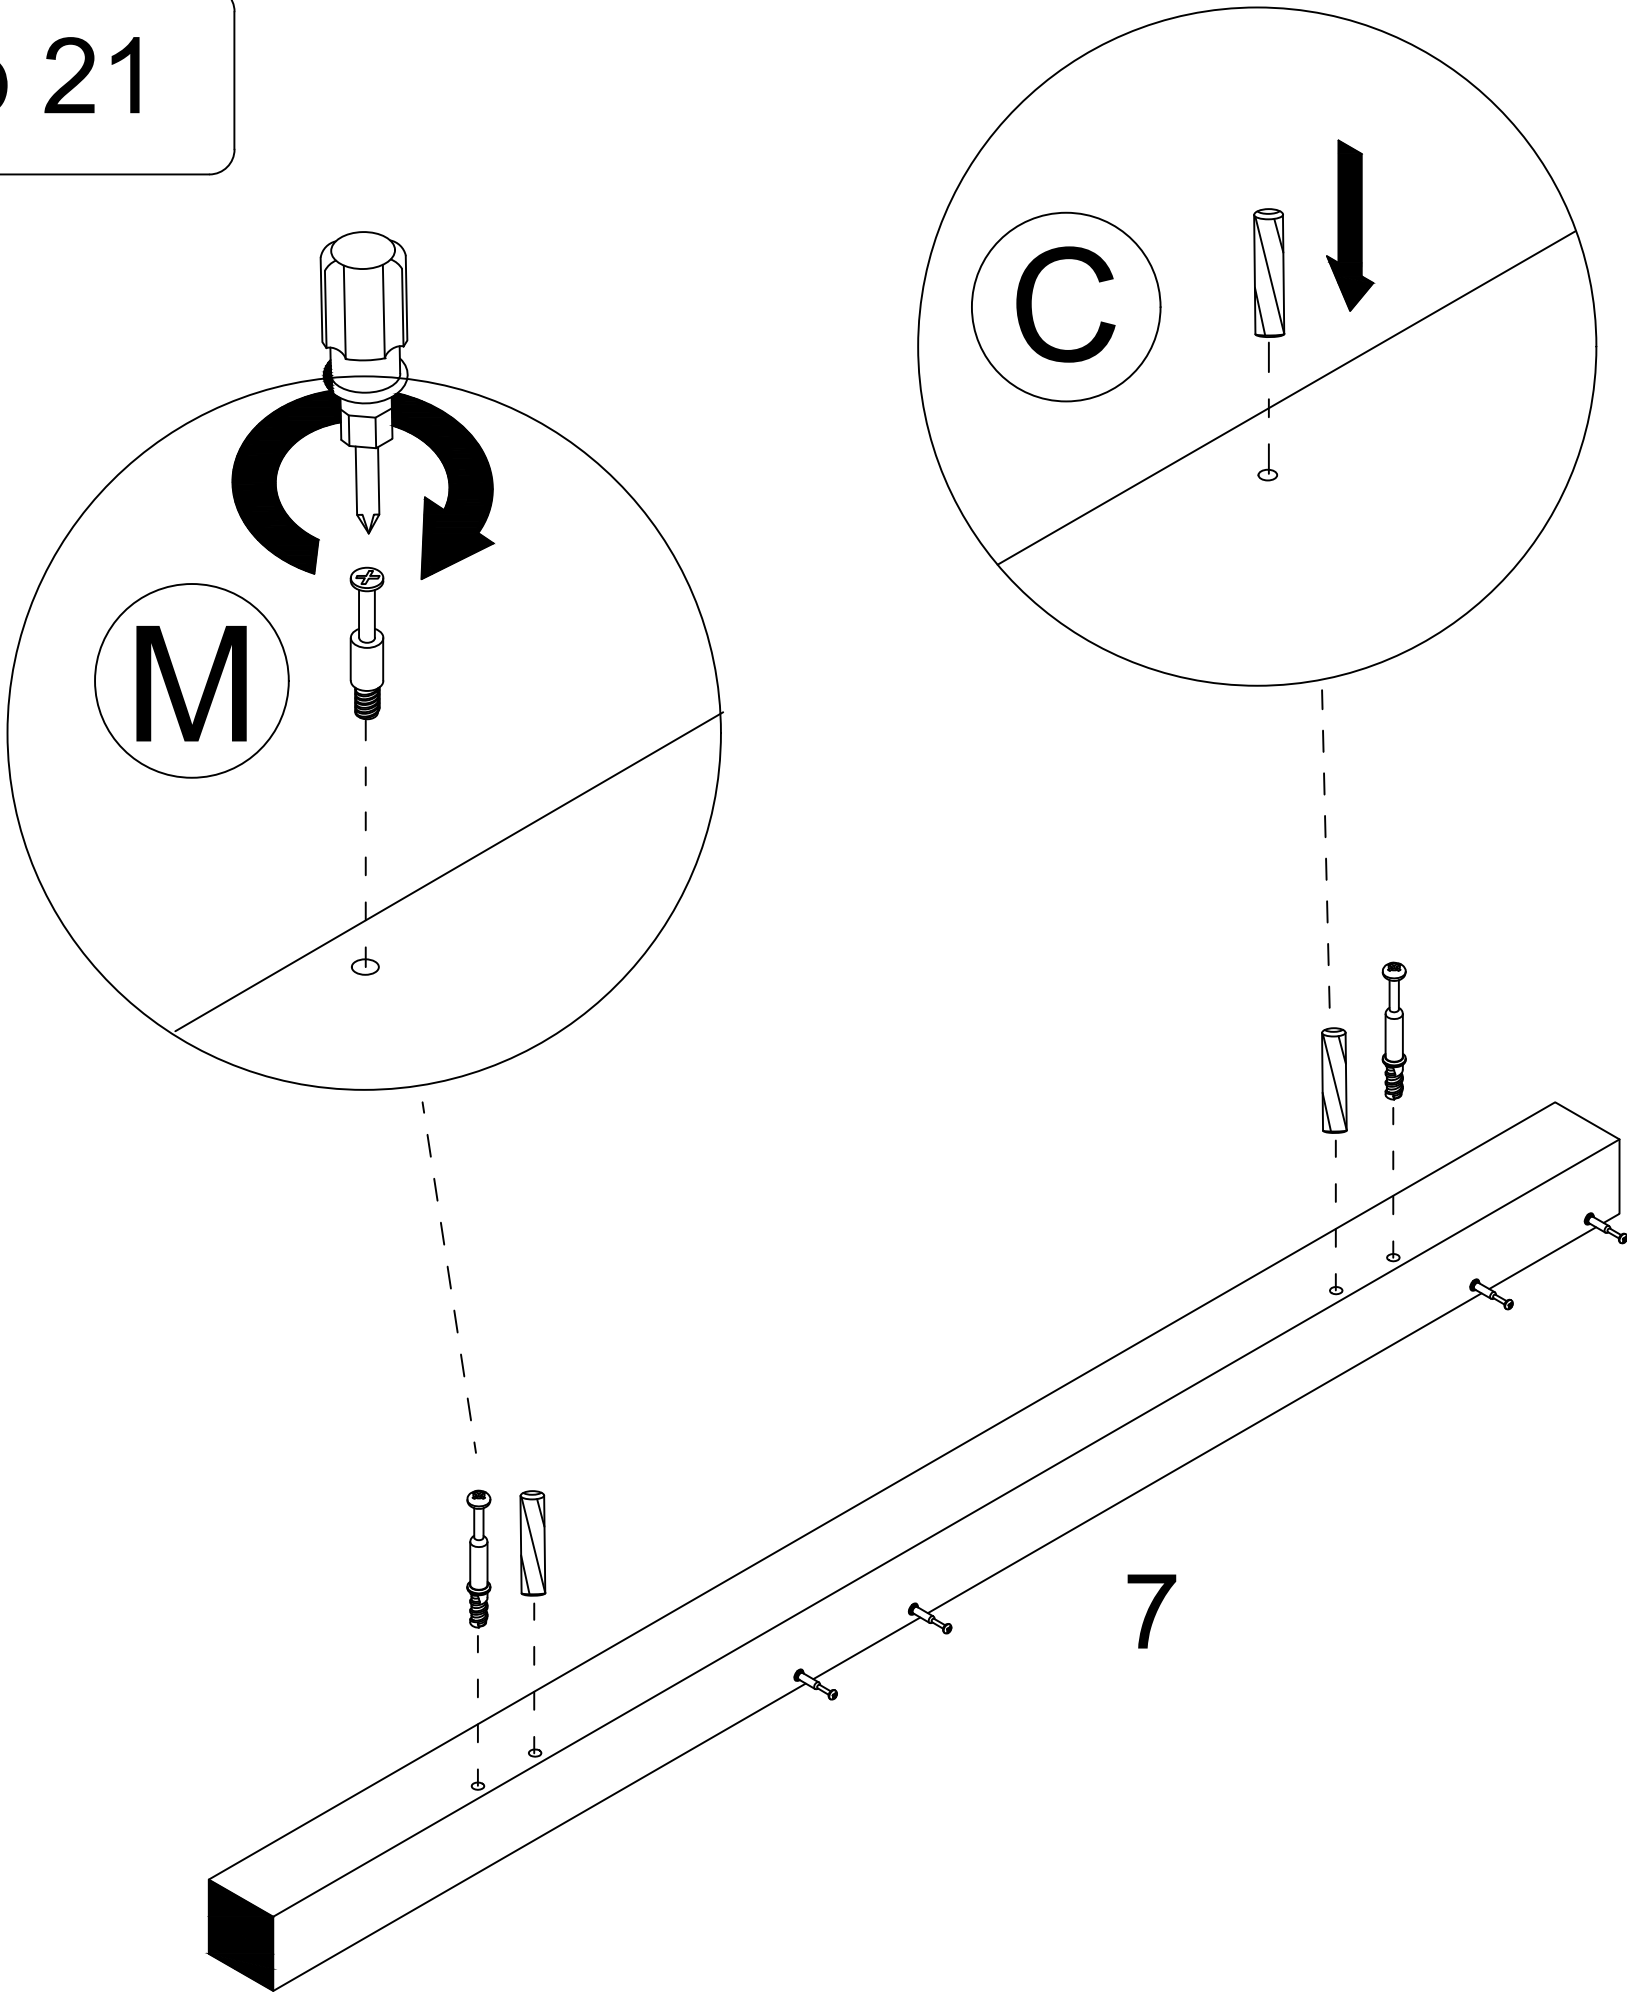


- M



x2
- C




x2

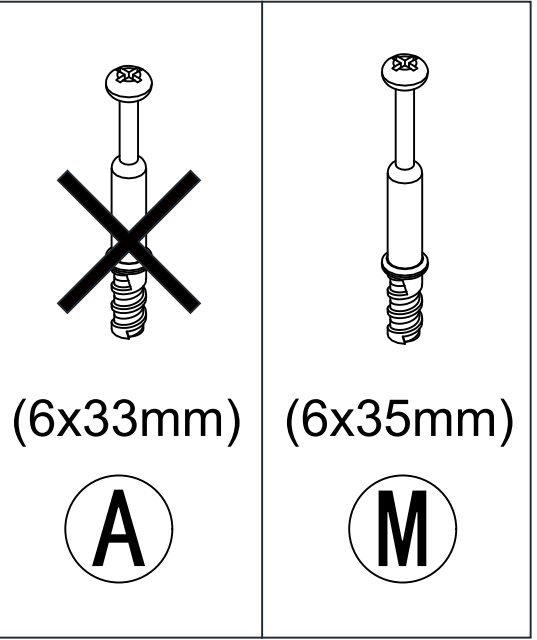


Step 22

B

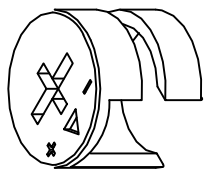


x2

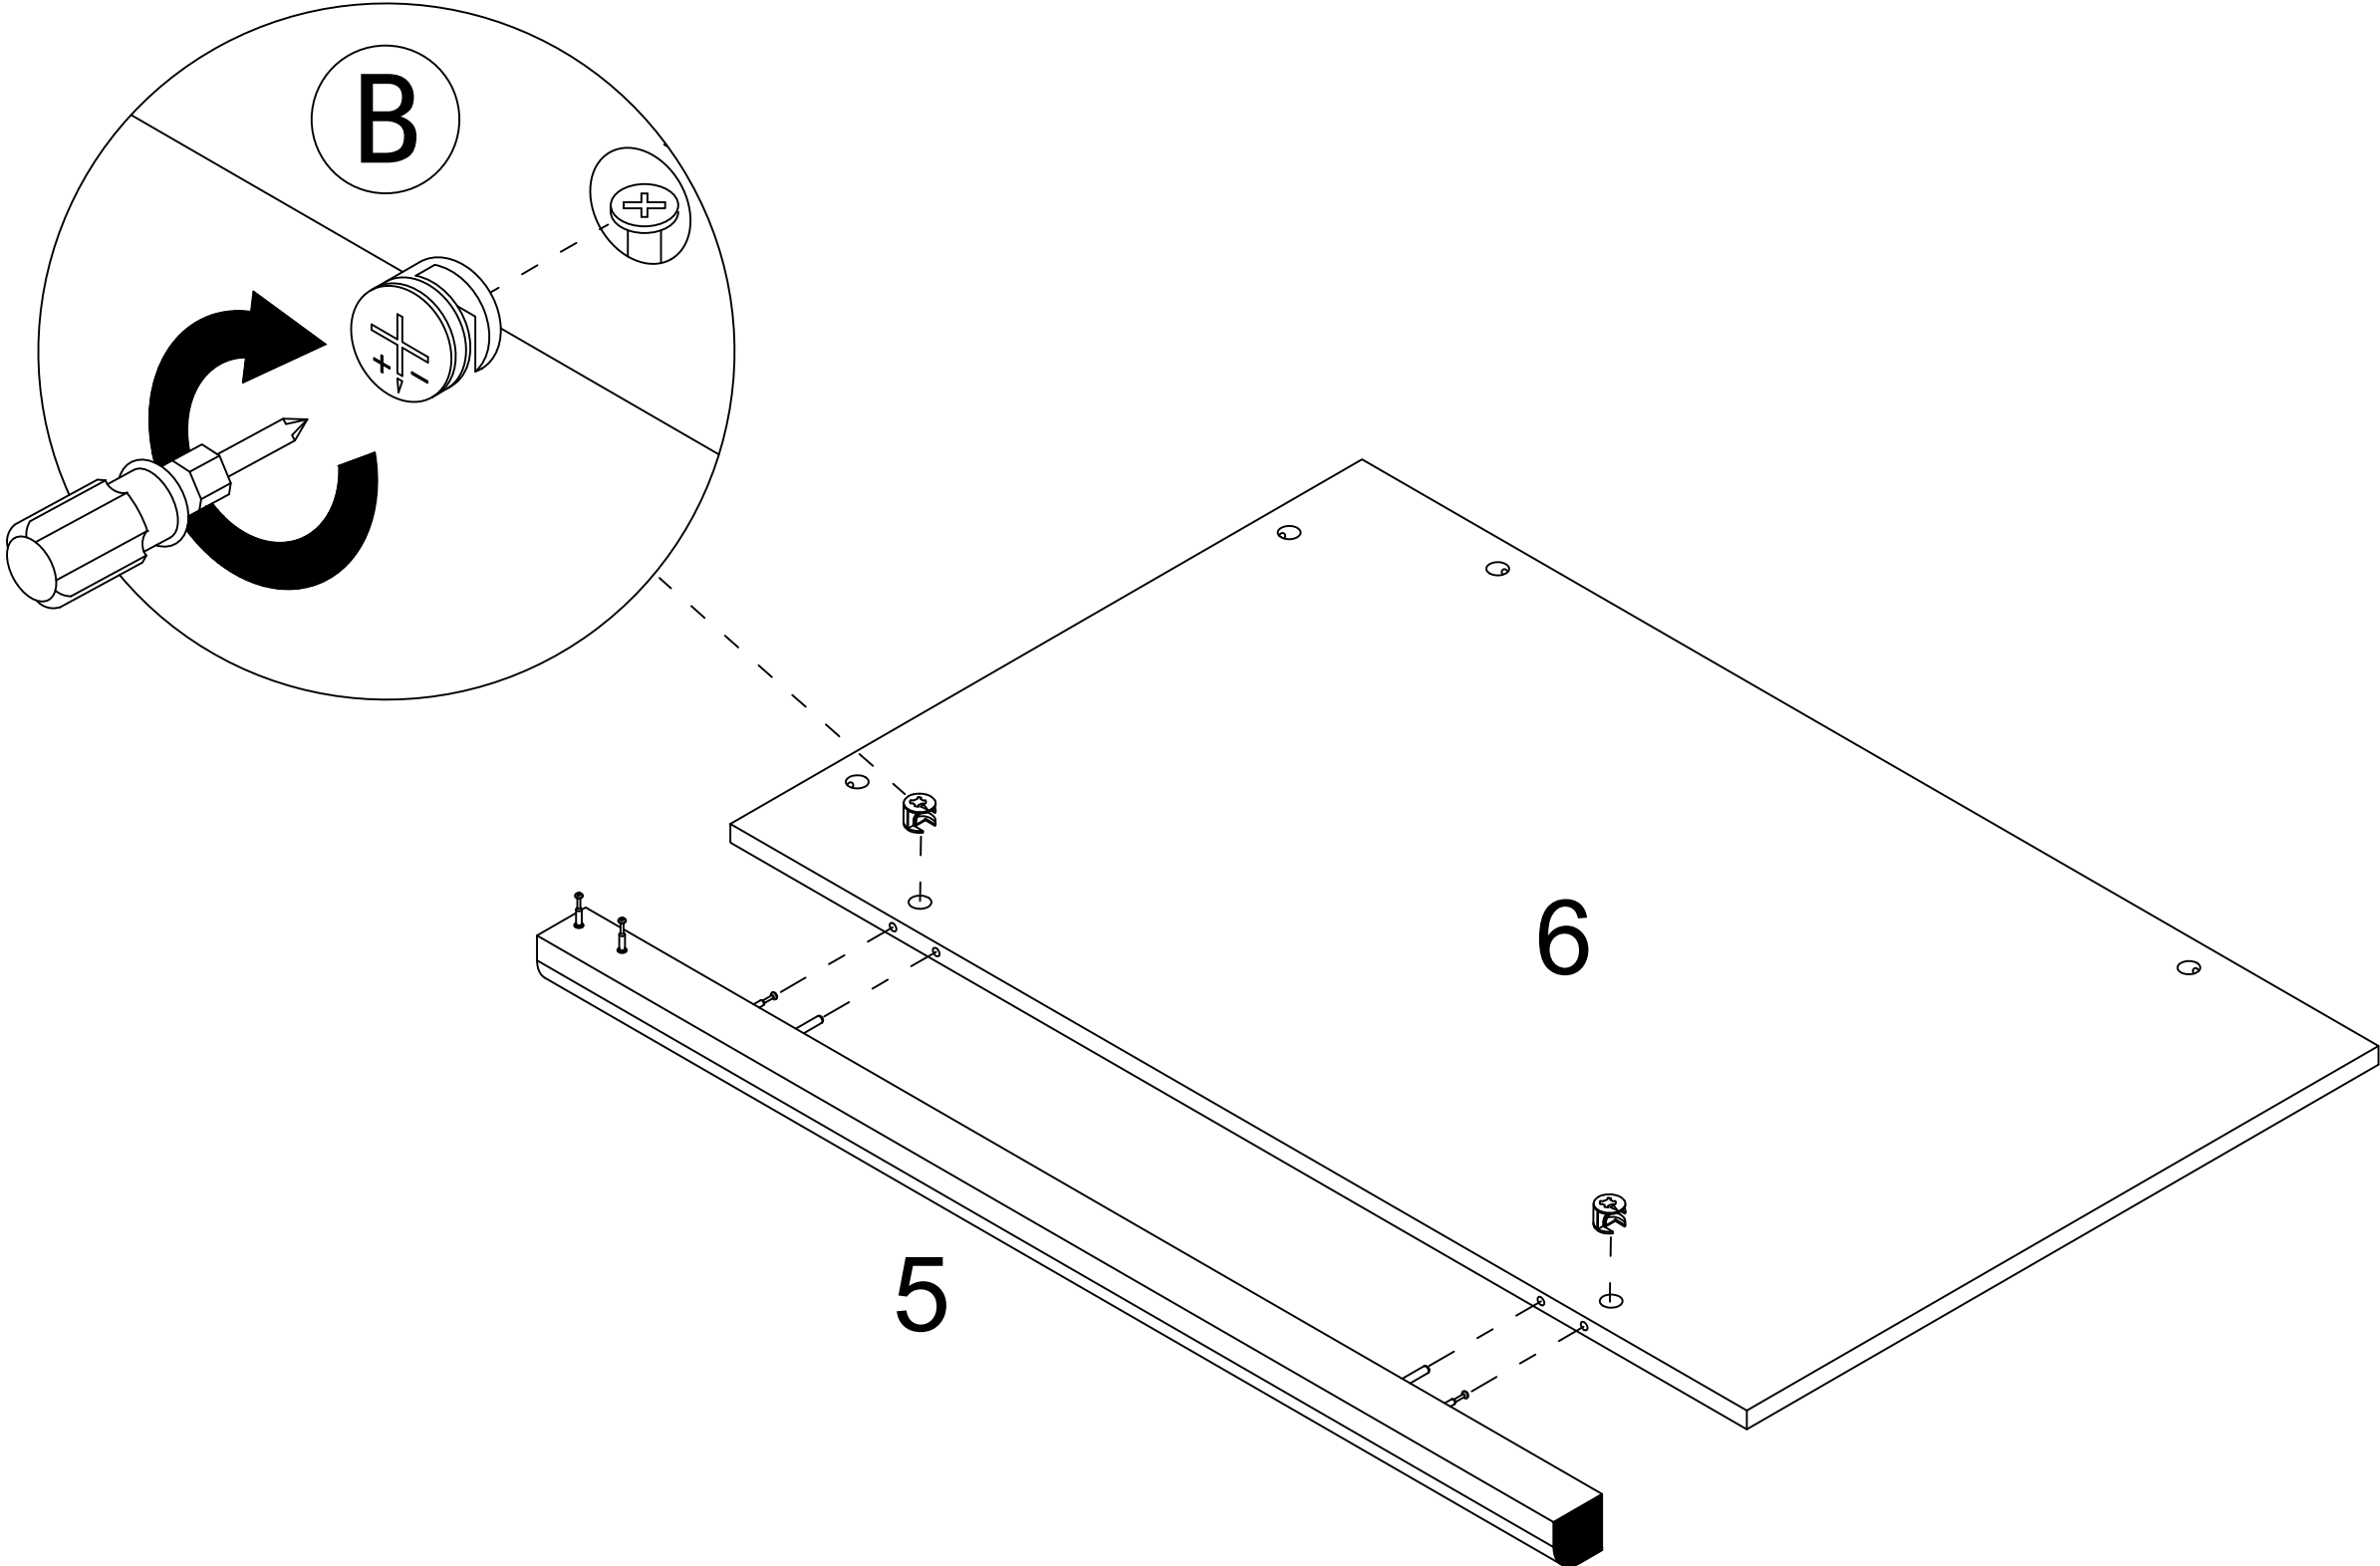


Step 23

B

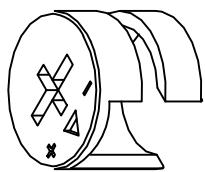

x2

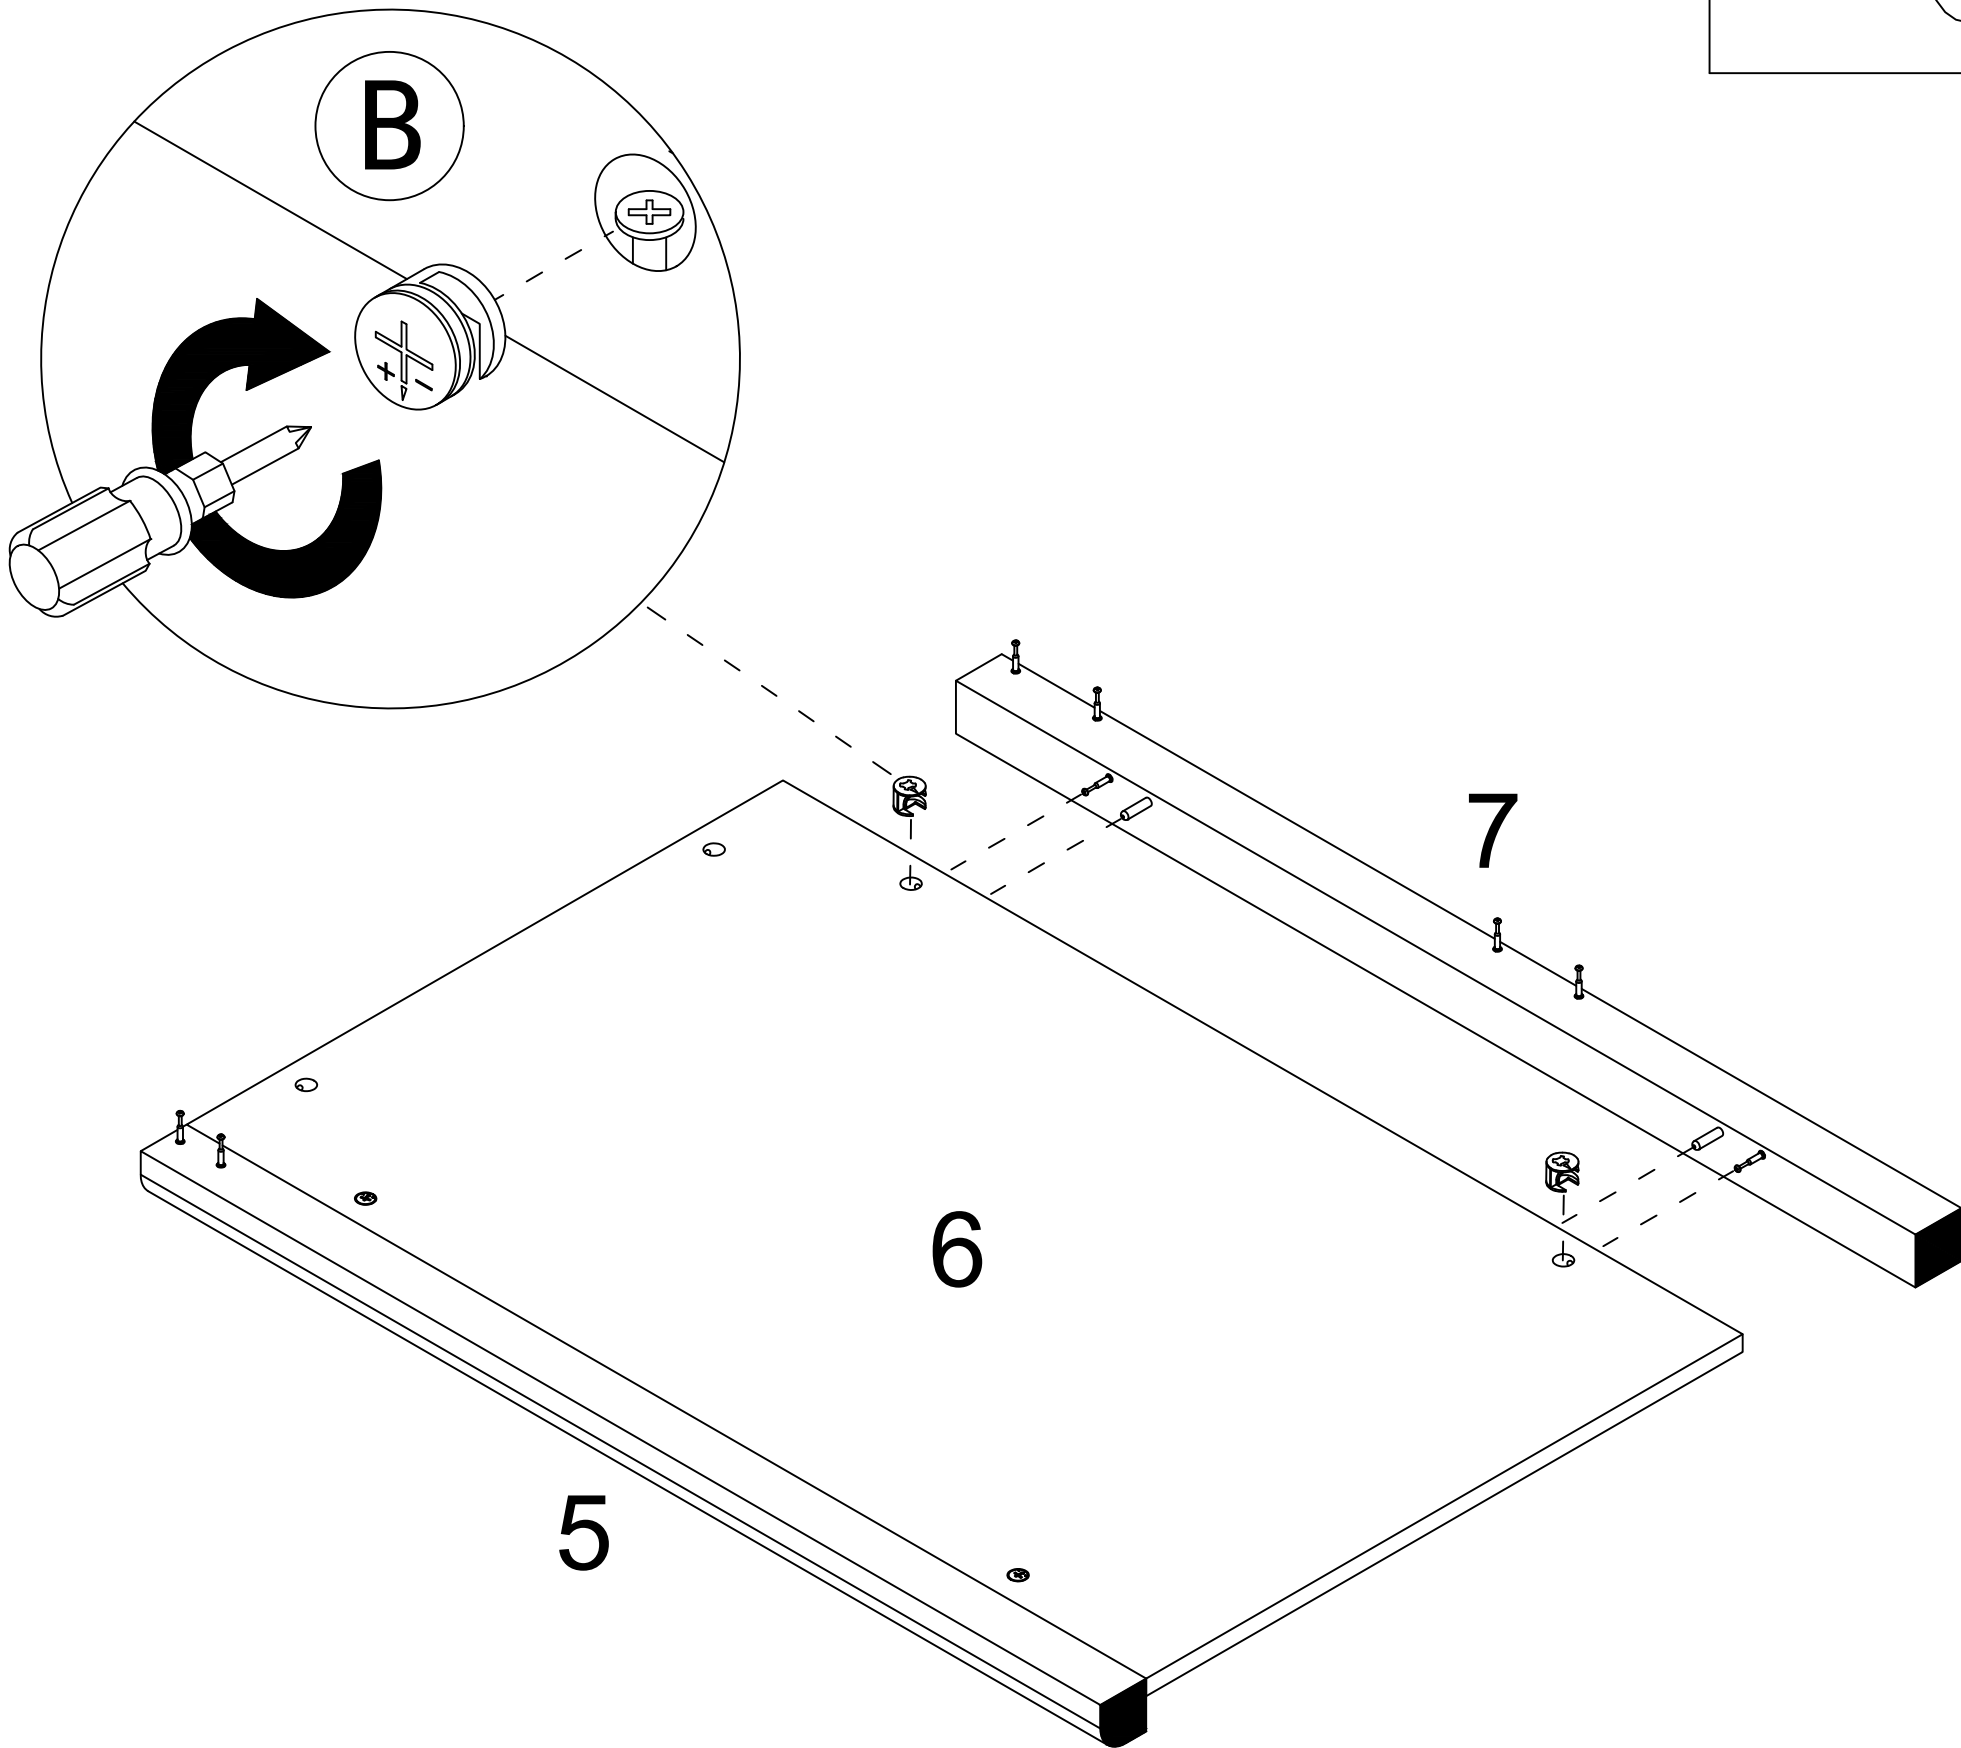


Step 24

B




x6

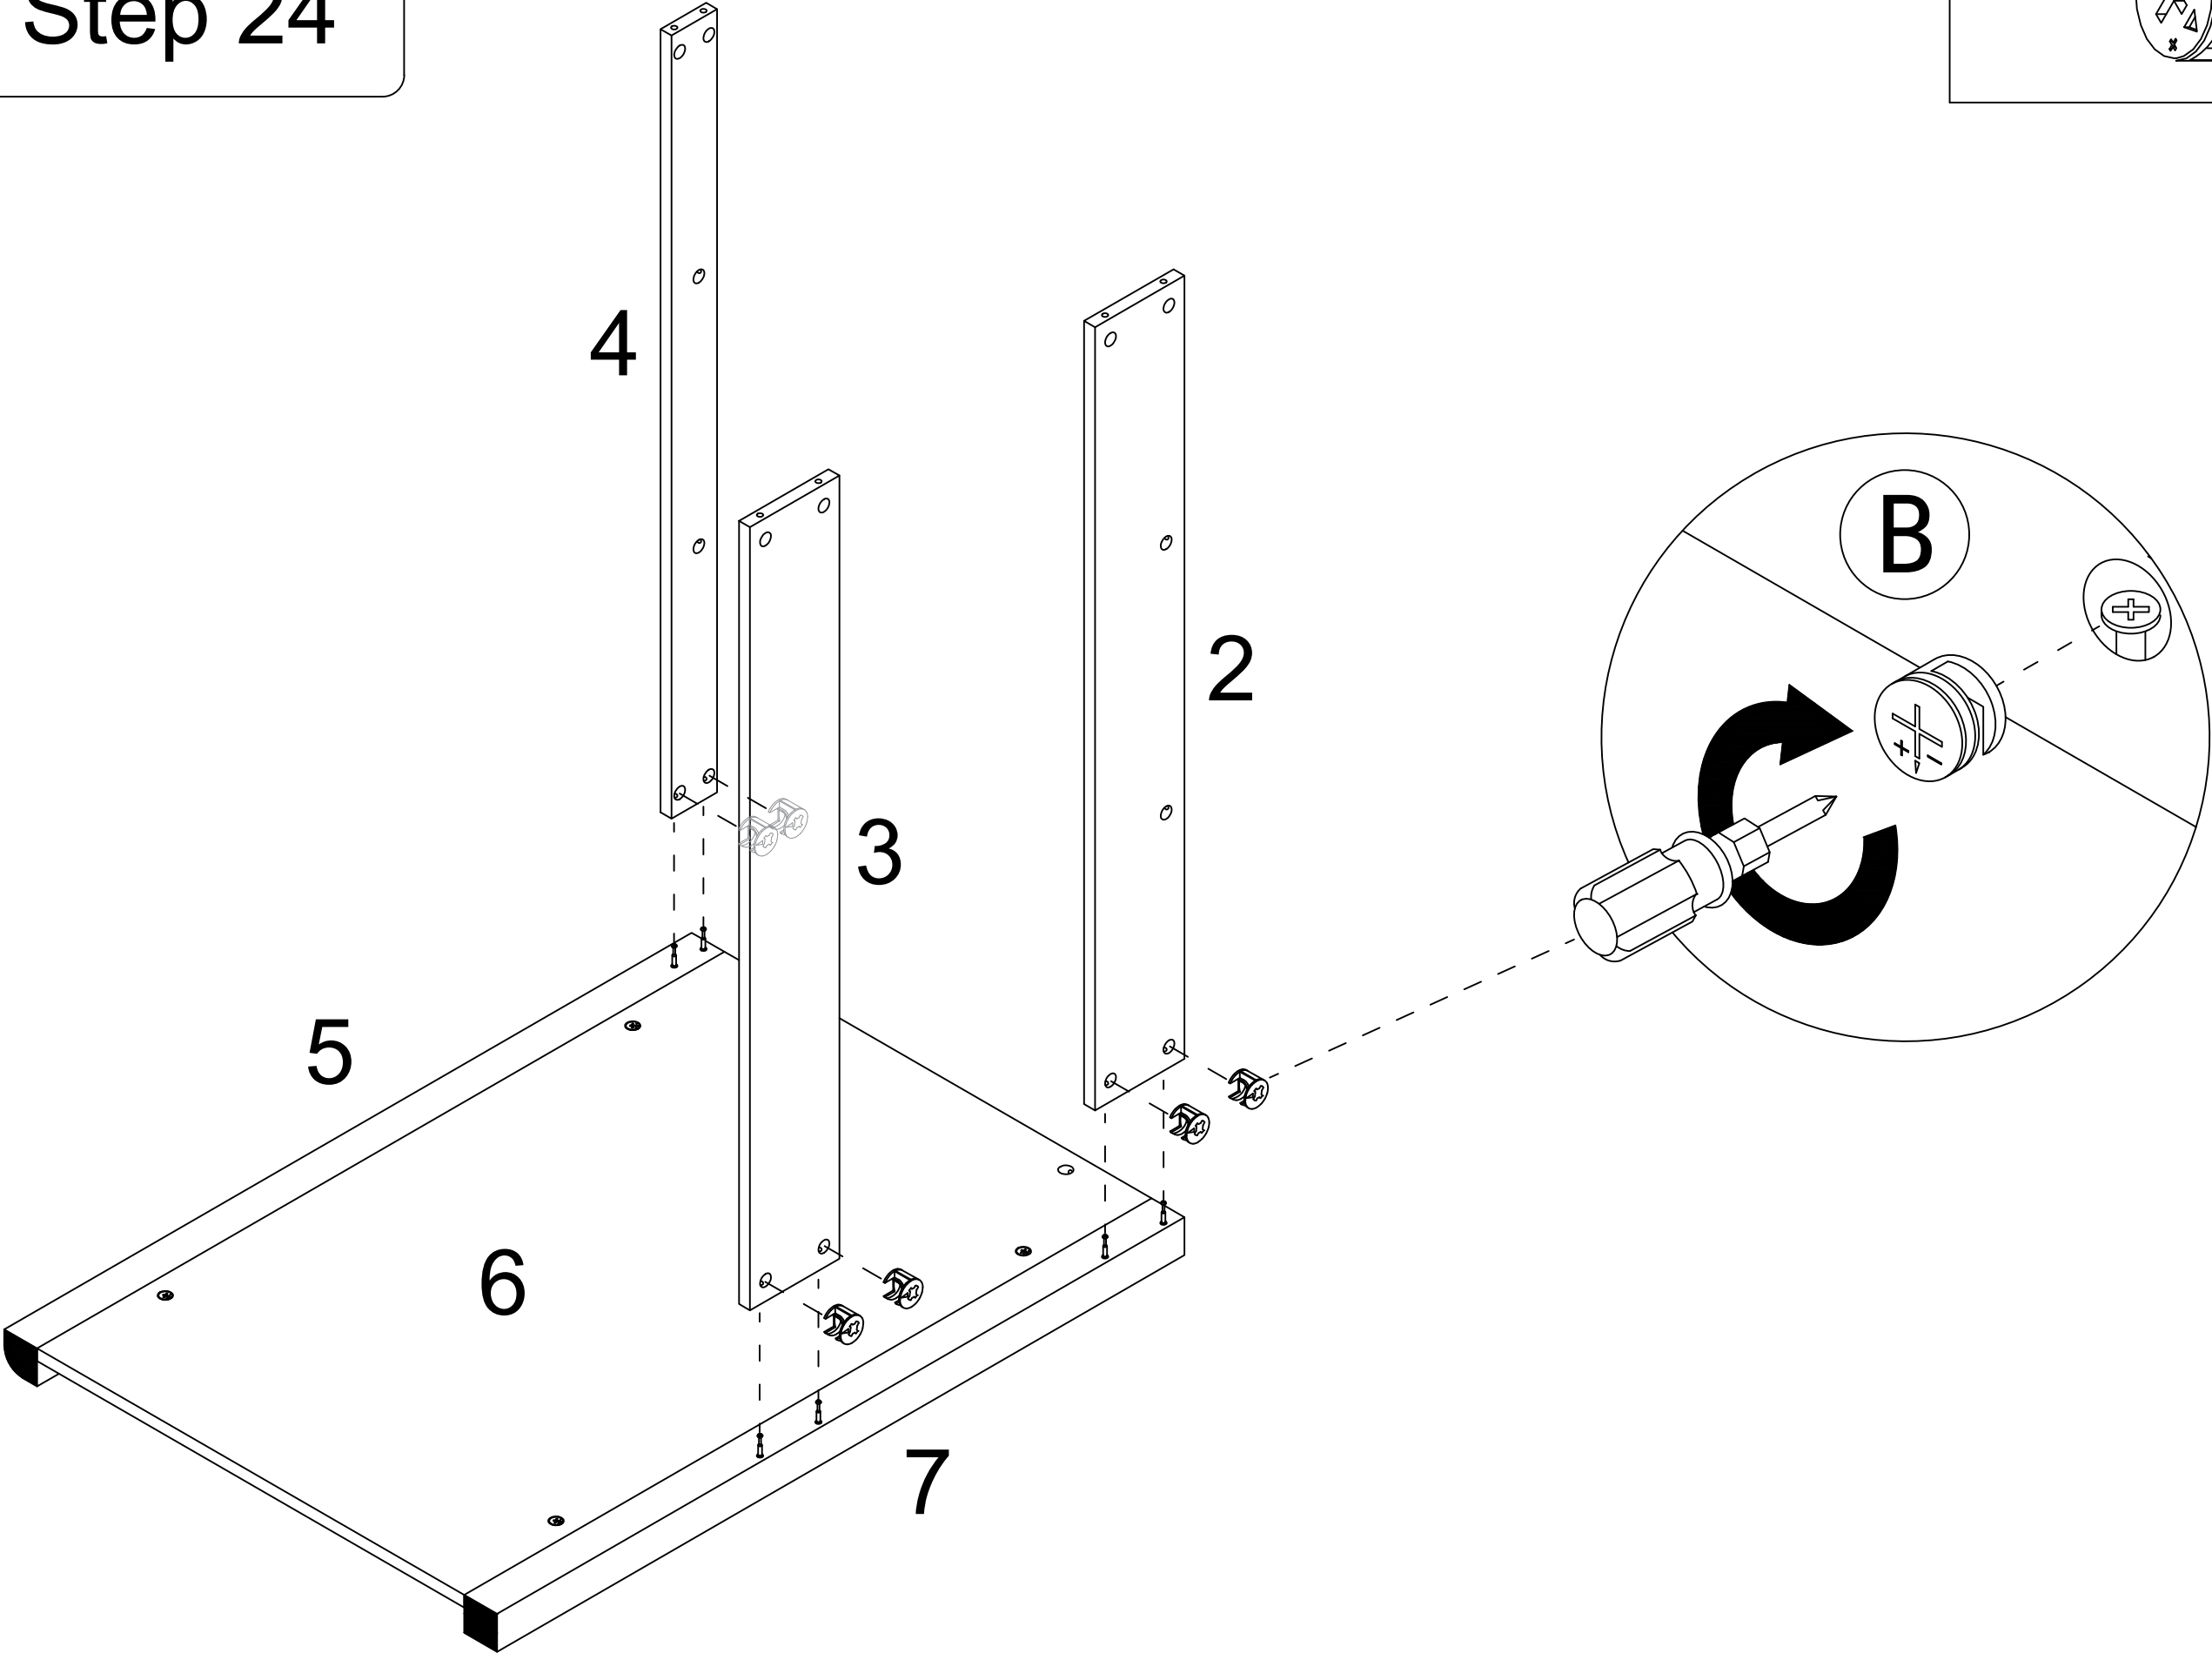

Step 25

M




x2

C




x2

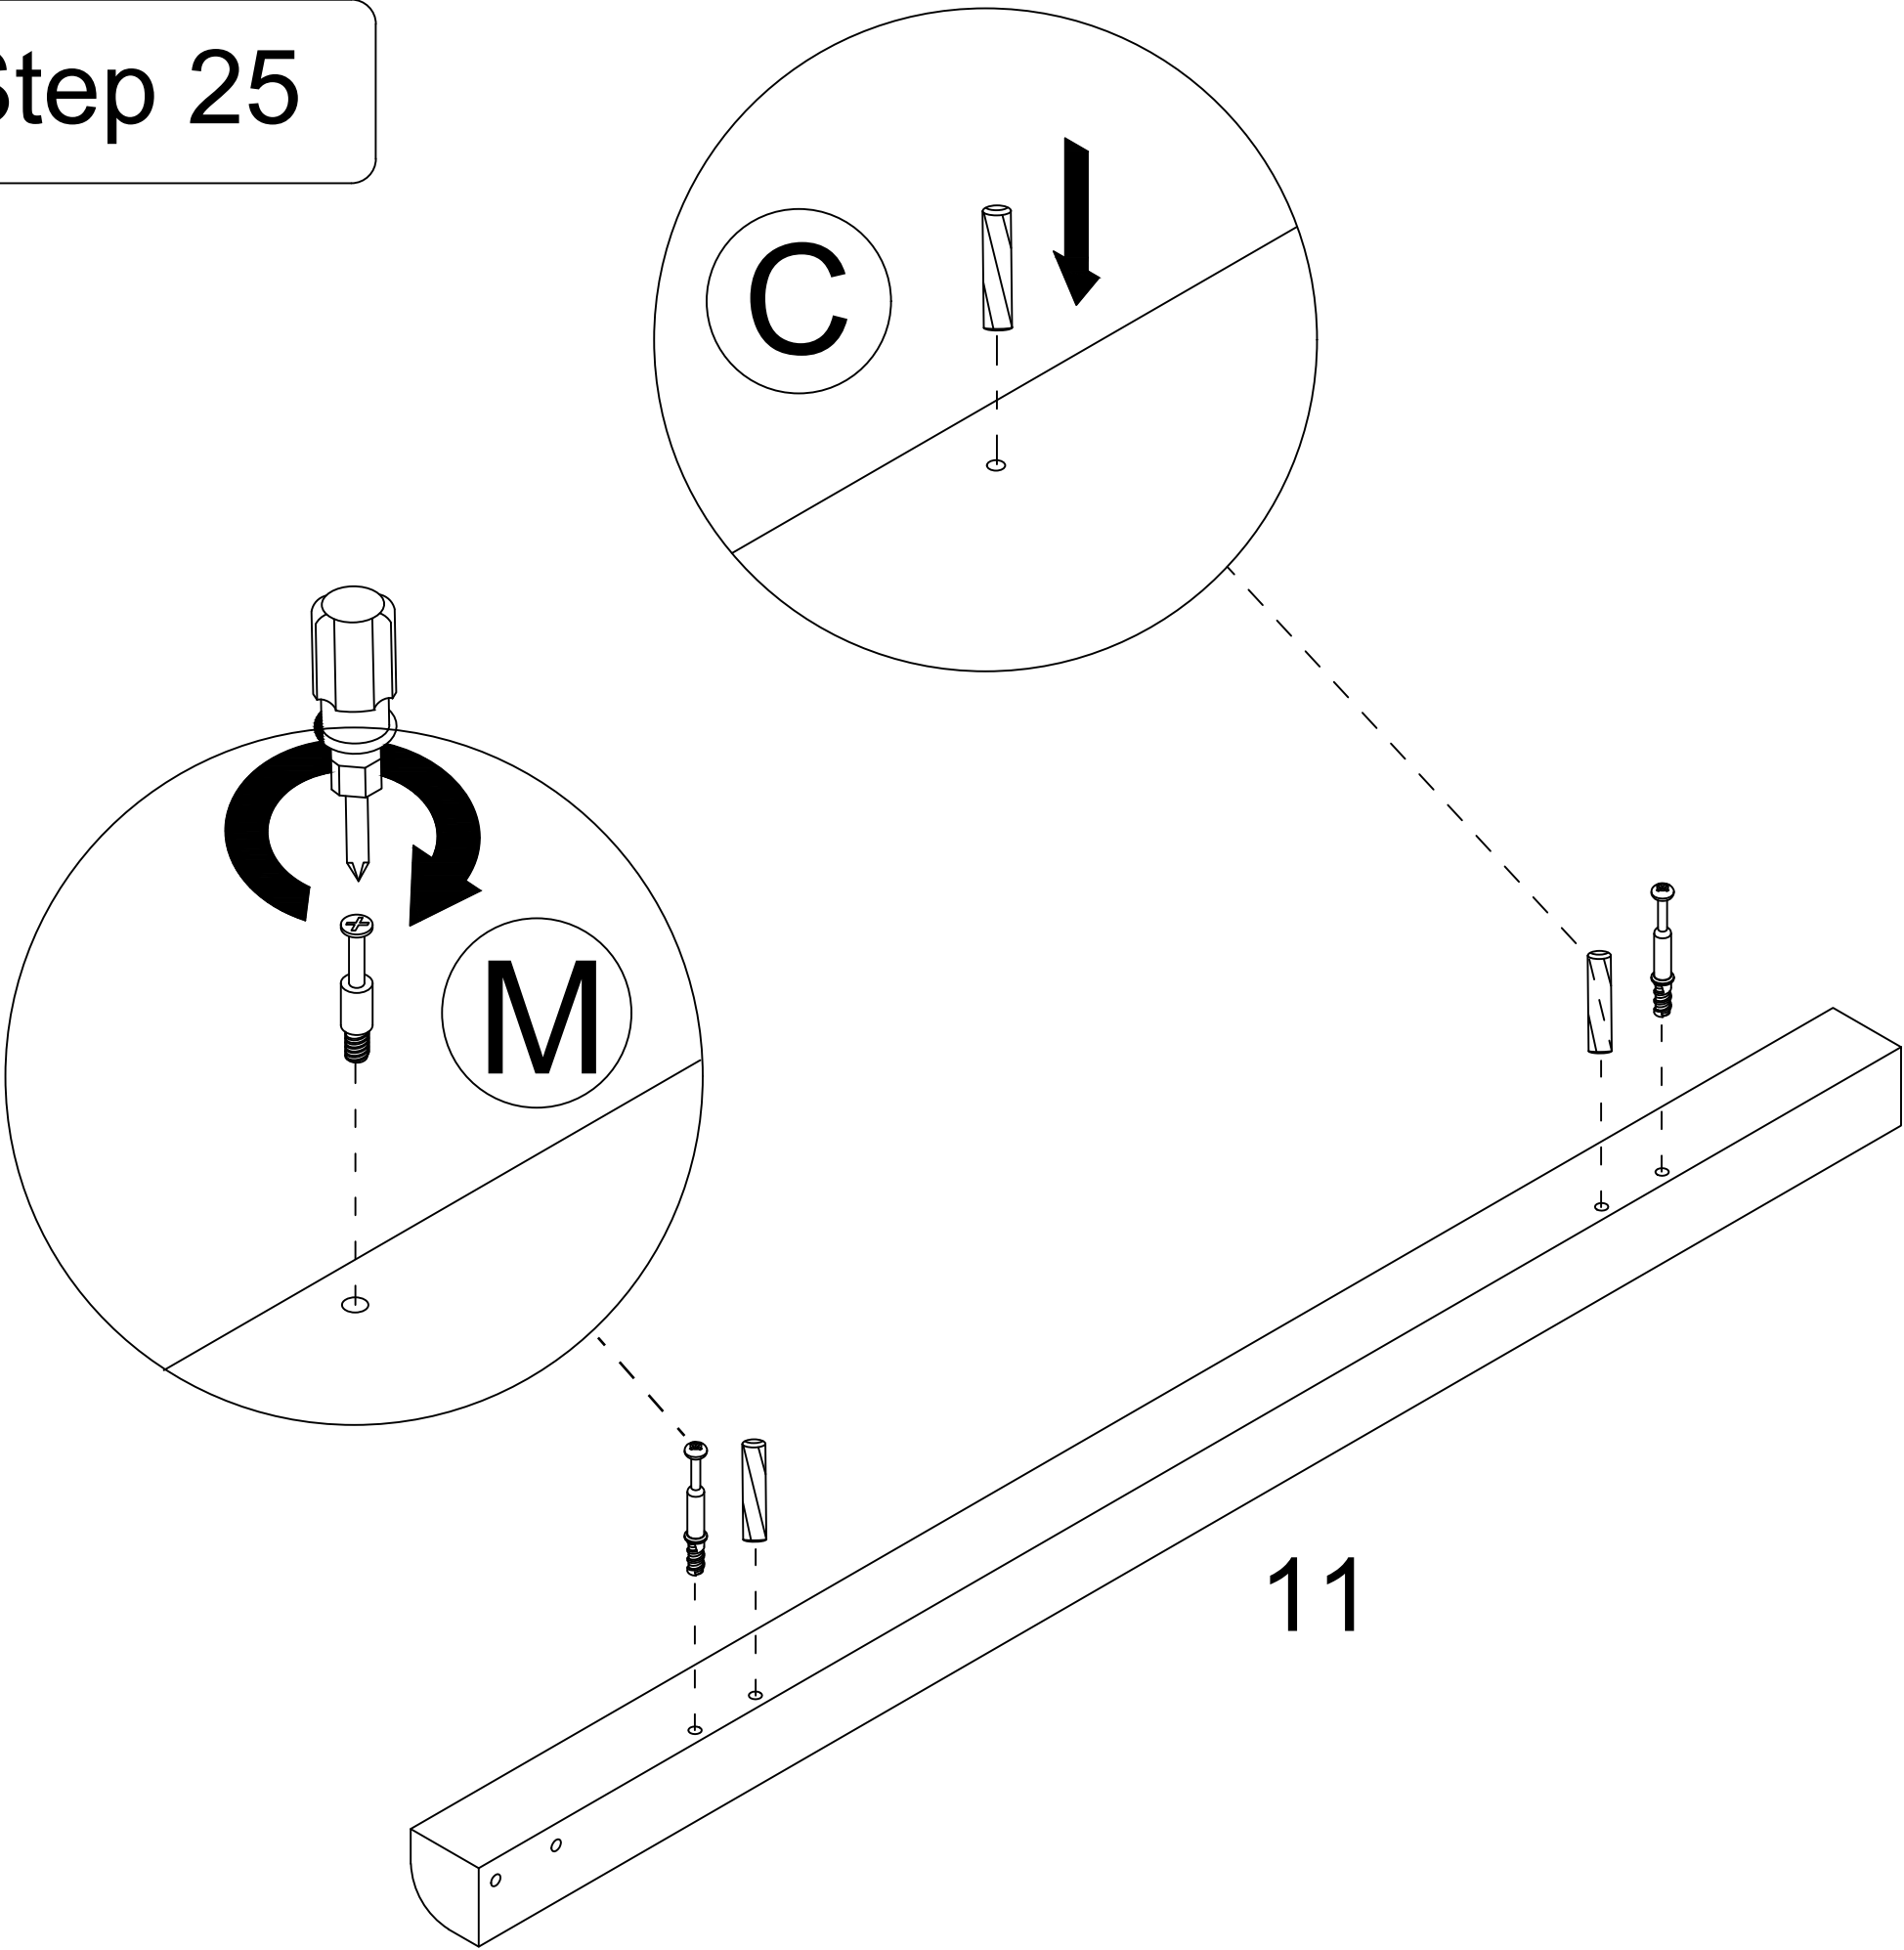



(6x33mm)


A




(6x35mm)

M

Step 26

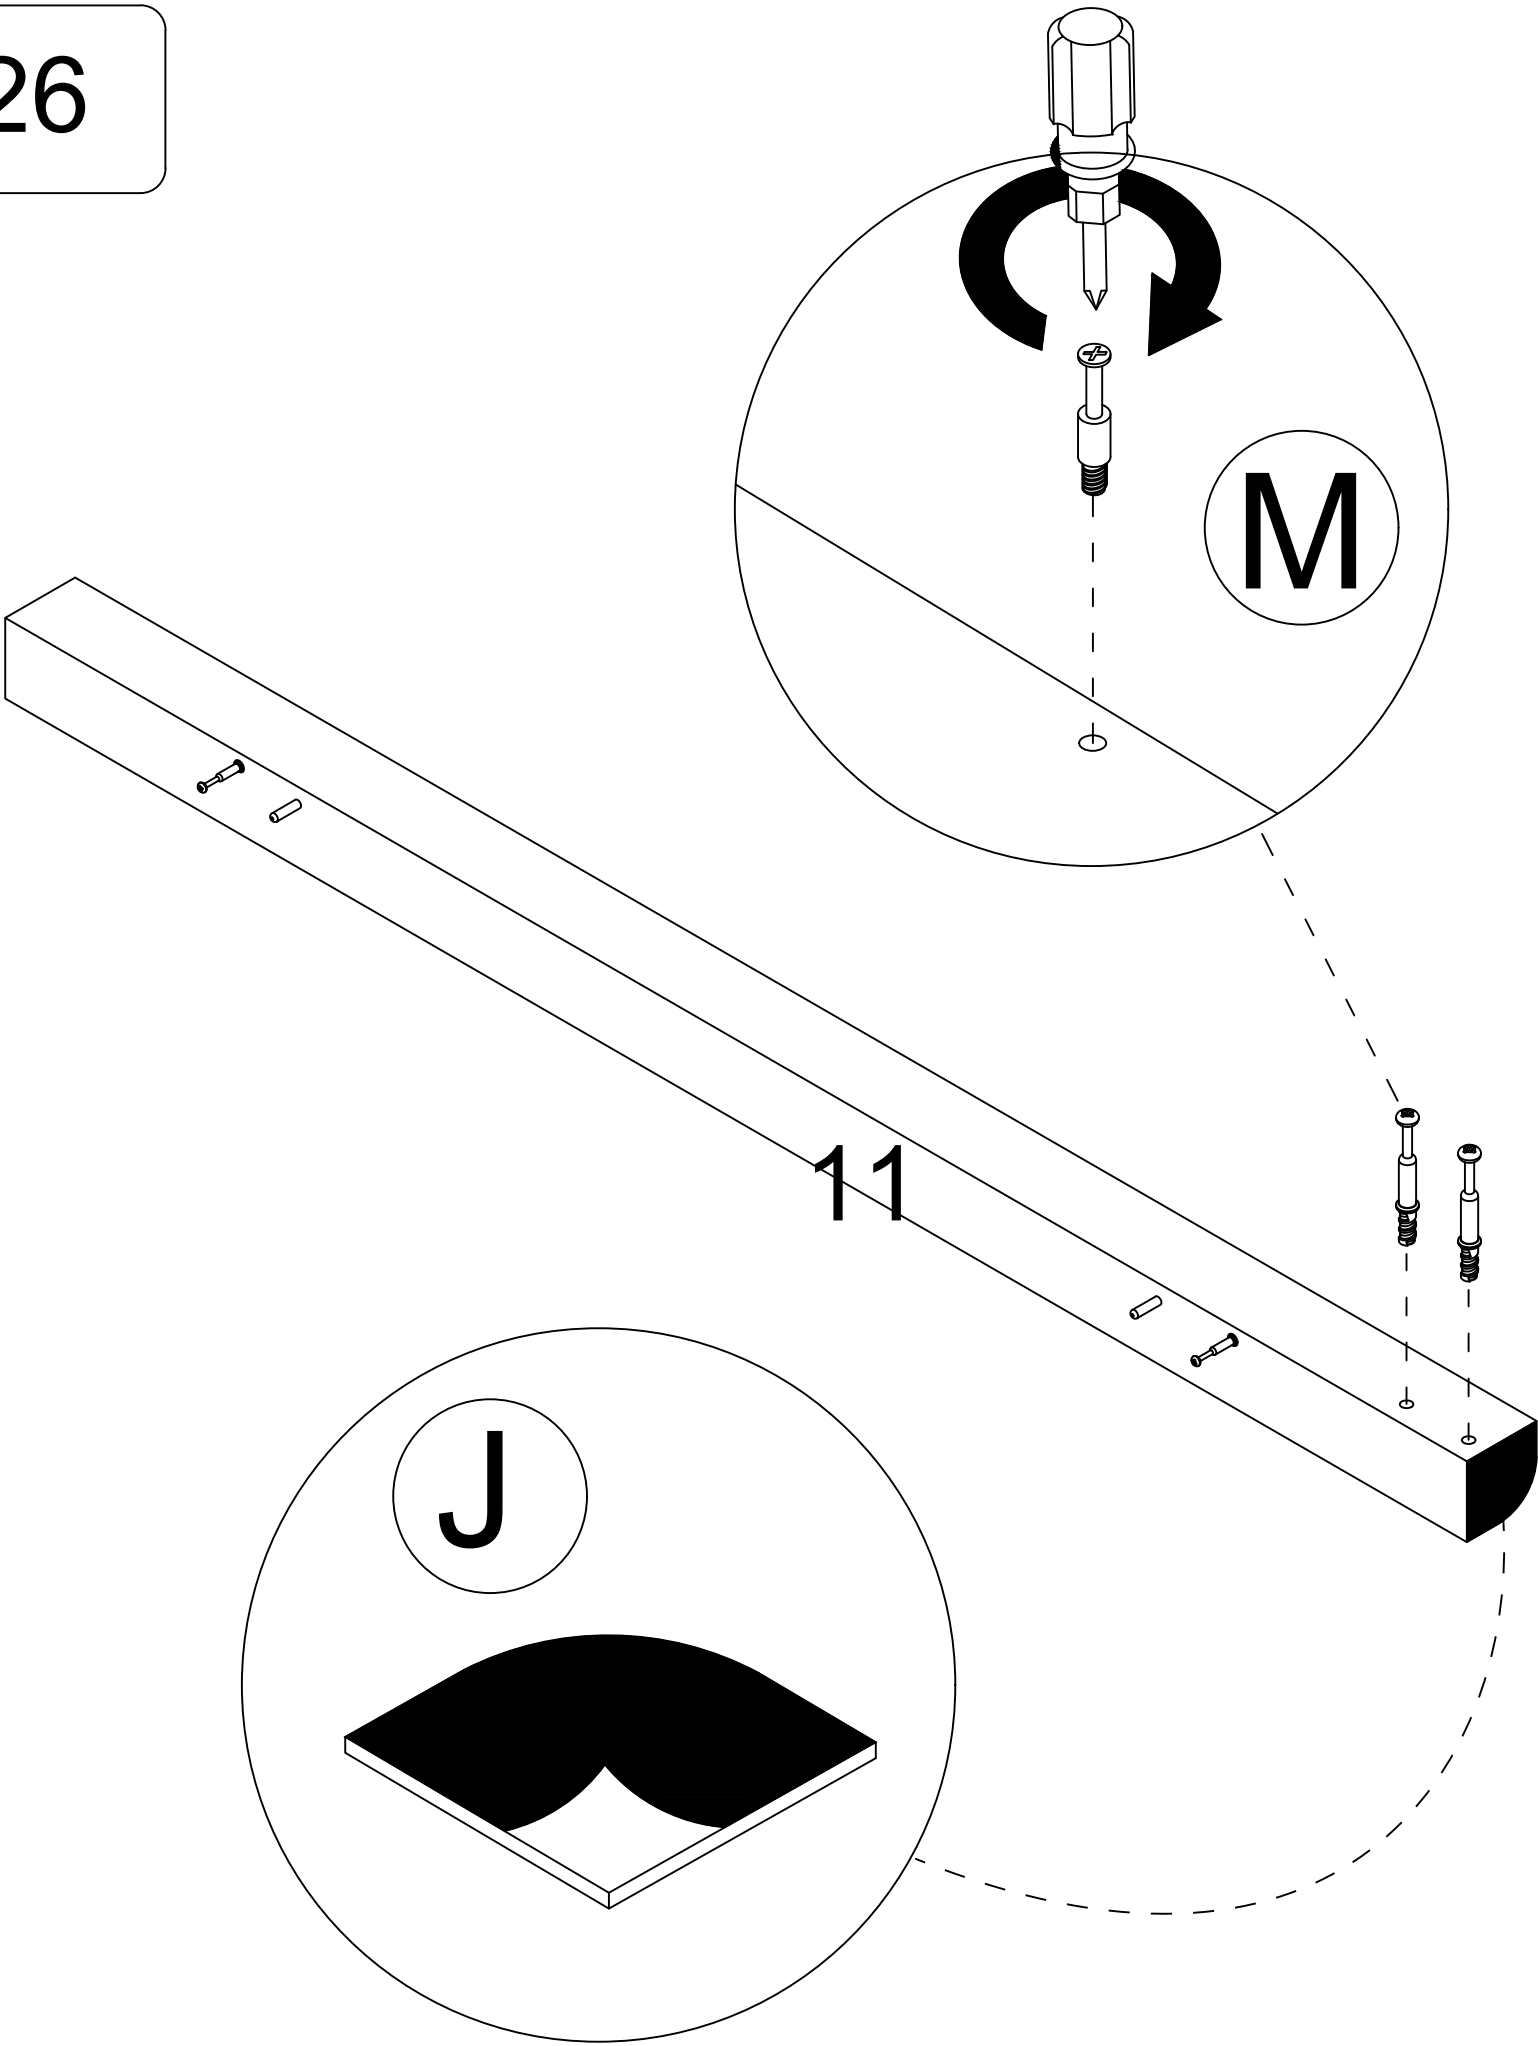


M




x2

J

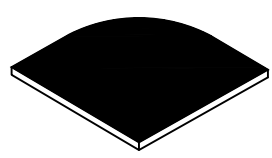


x1

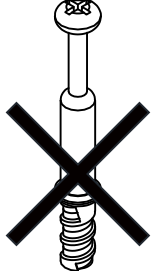

(6x33mm)


A




(6x35mm)

M


Step 27

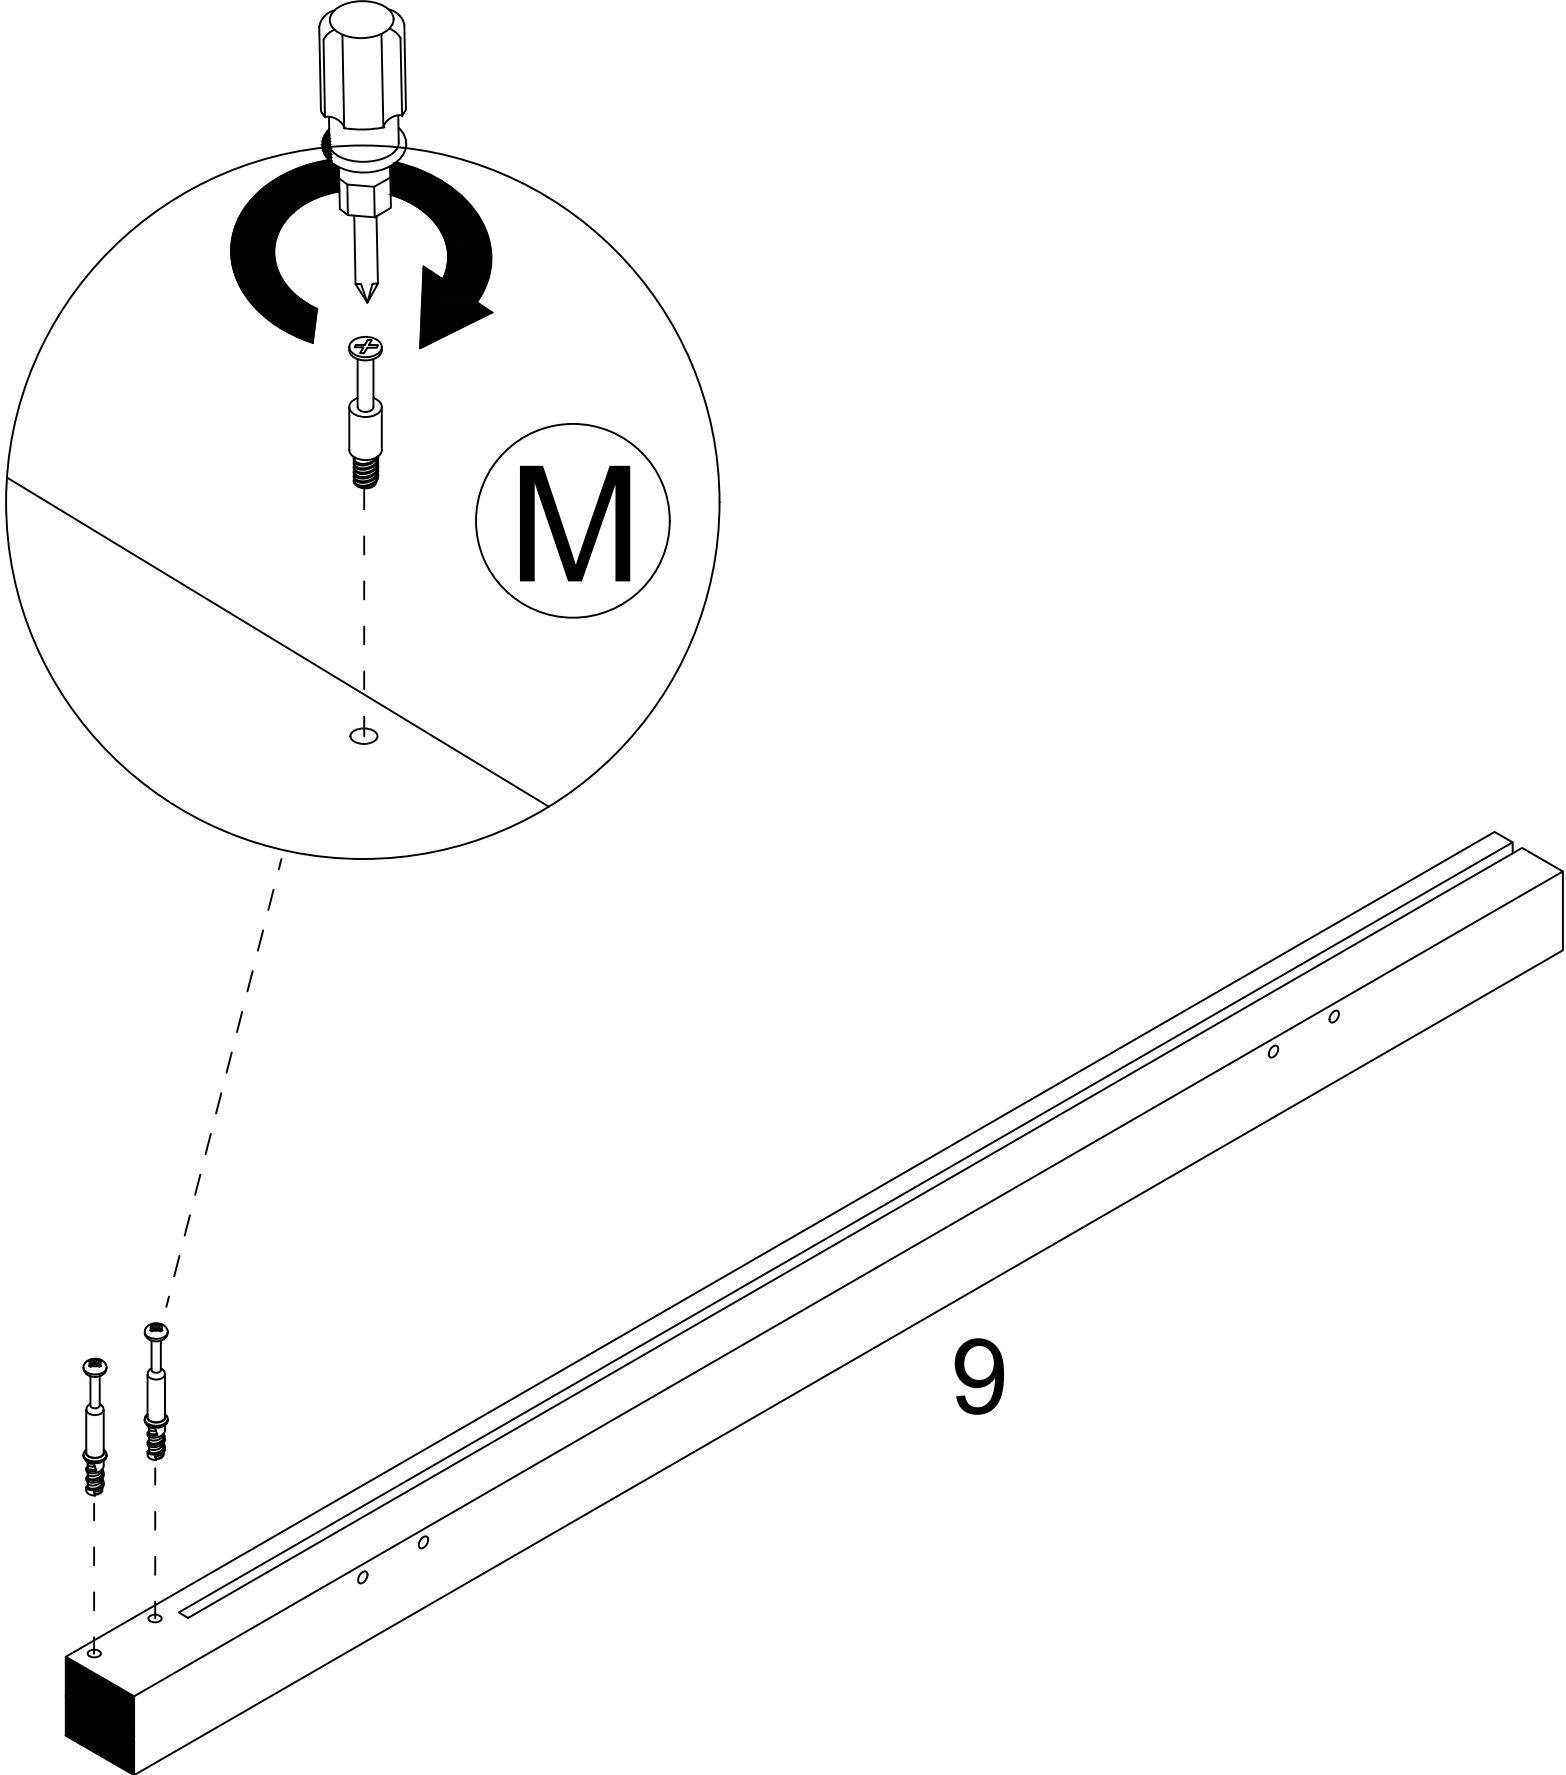

M



x2

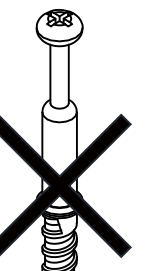

(6x33mm)

A




(6x35mm)

M


Step 28

K

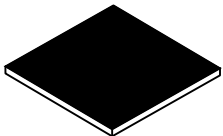

x1

M




x2

C




x2

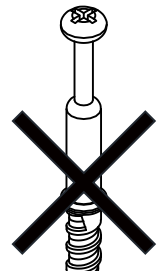


(6x33mm)

A




(6x35mm)

M

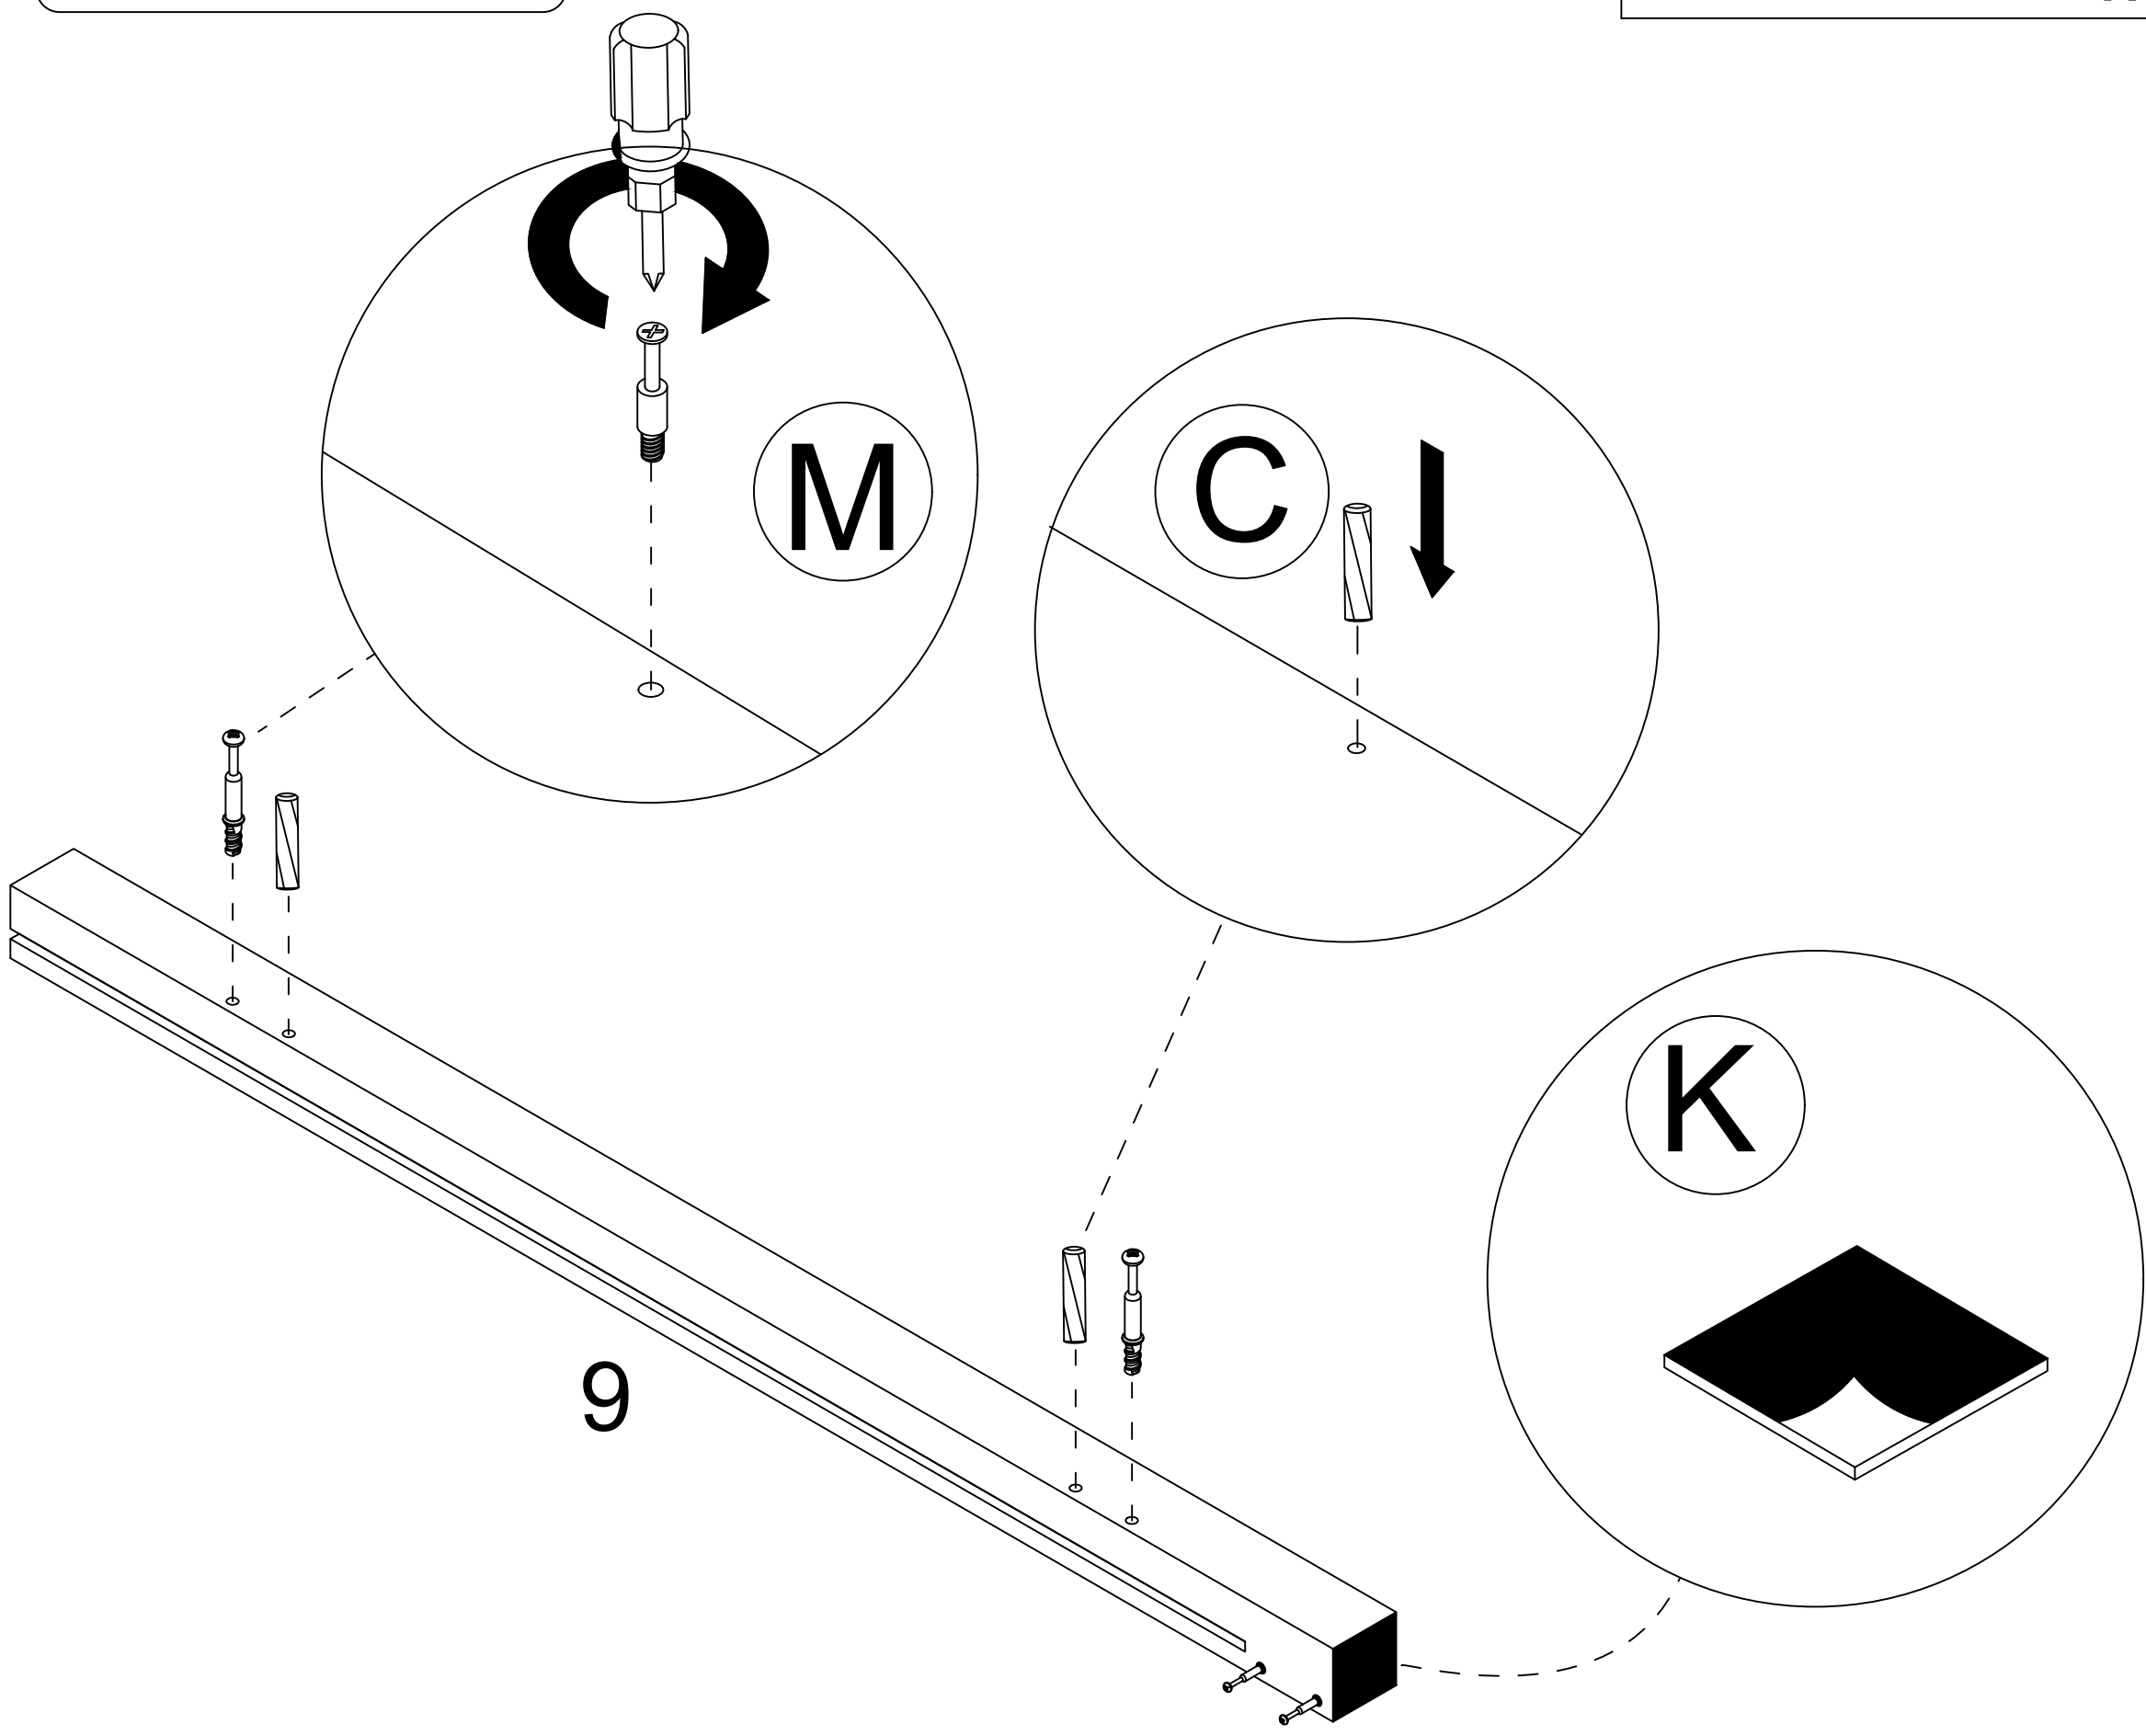


Step 29

B

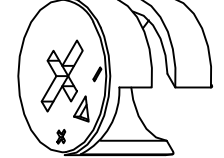


x2

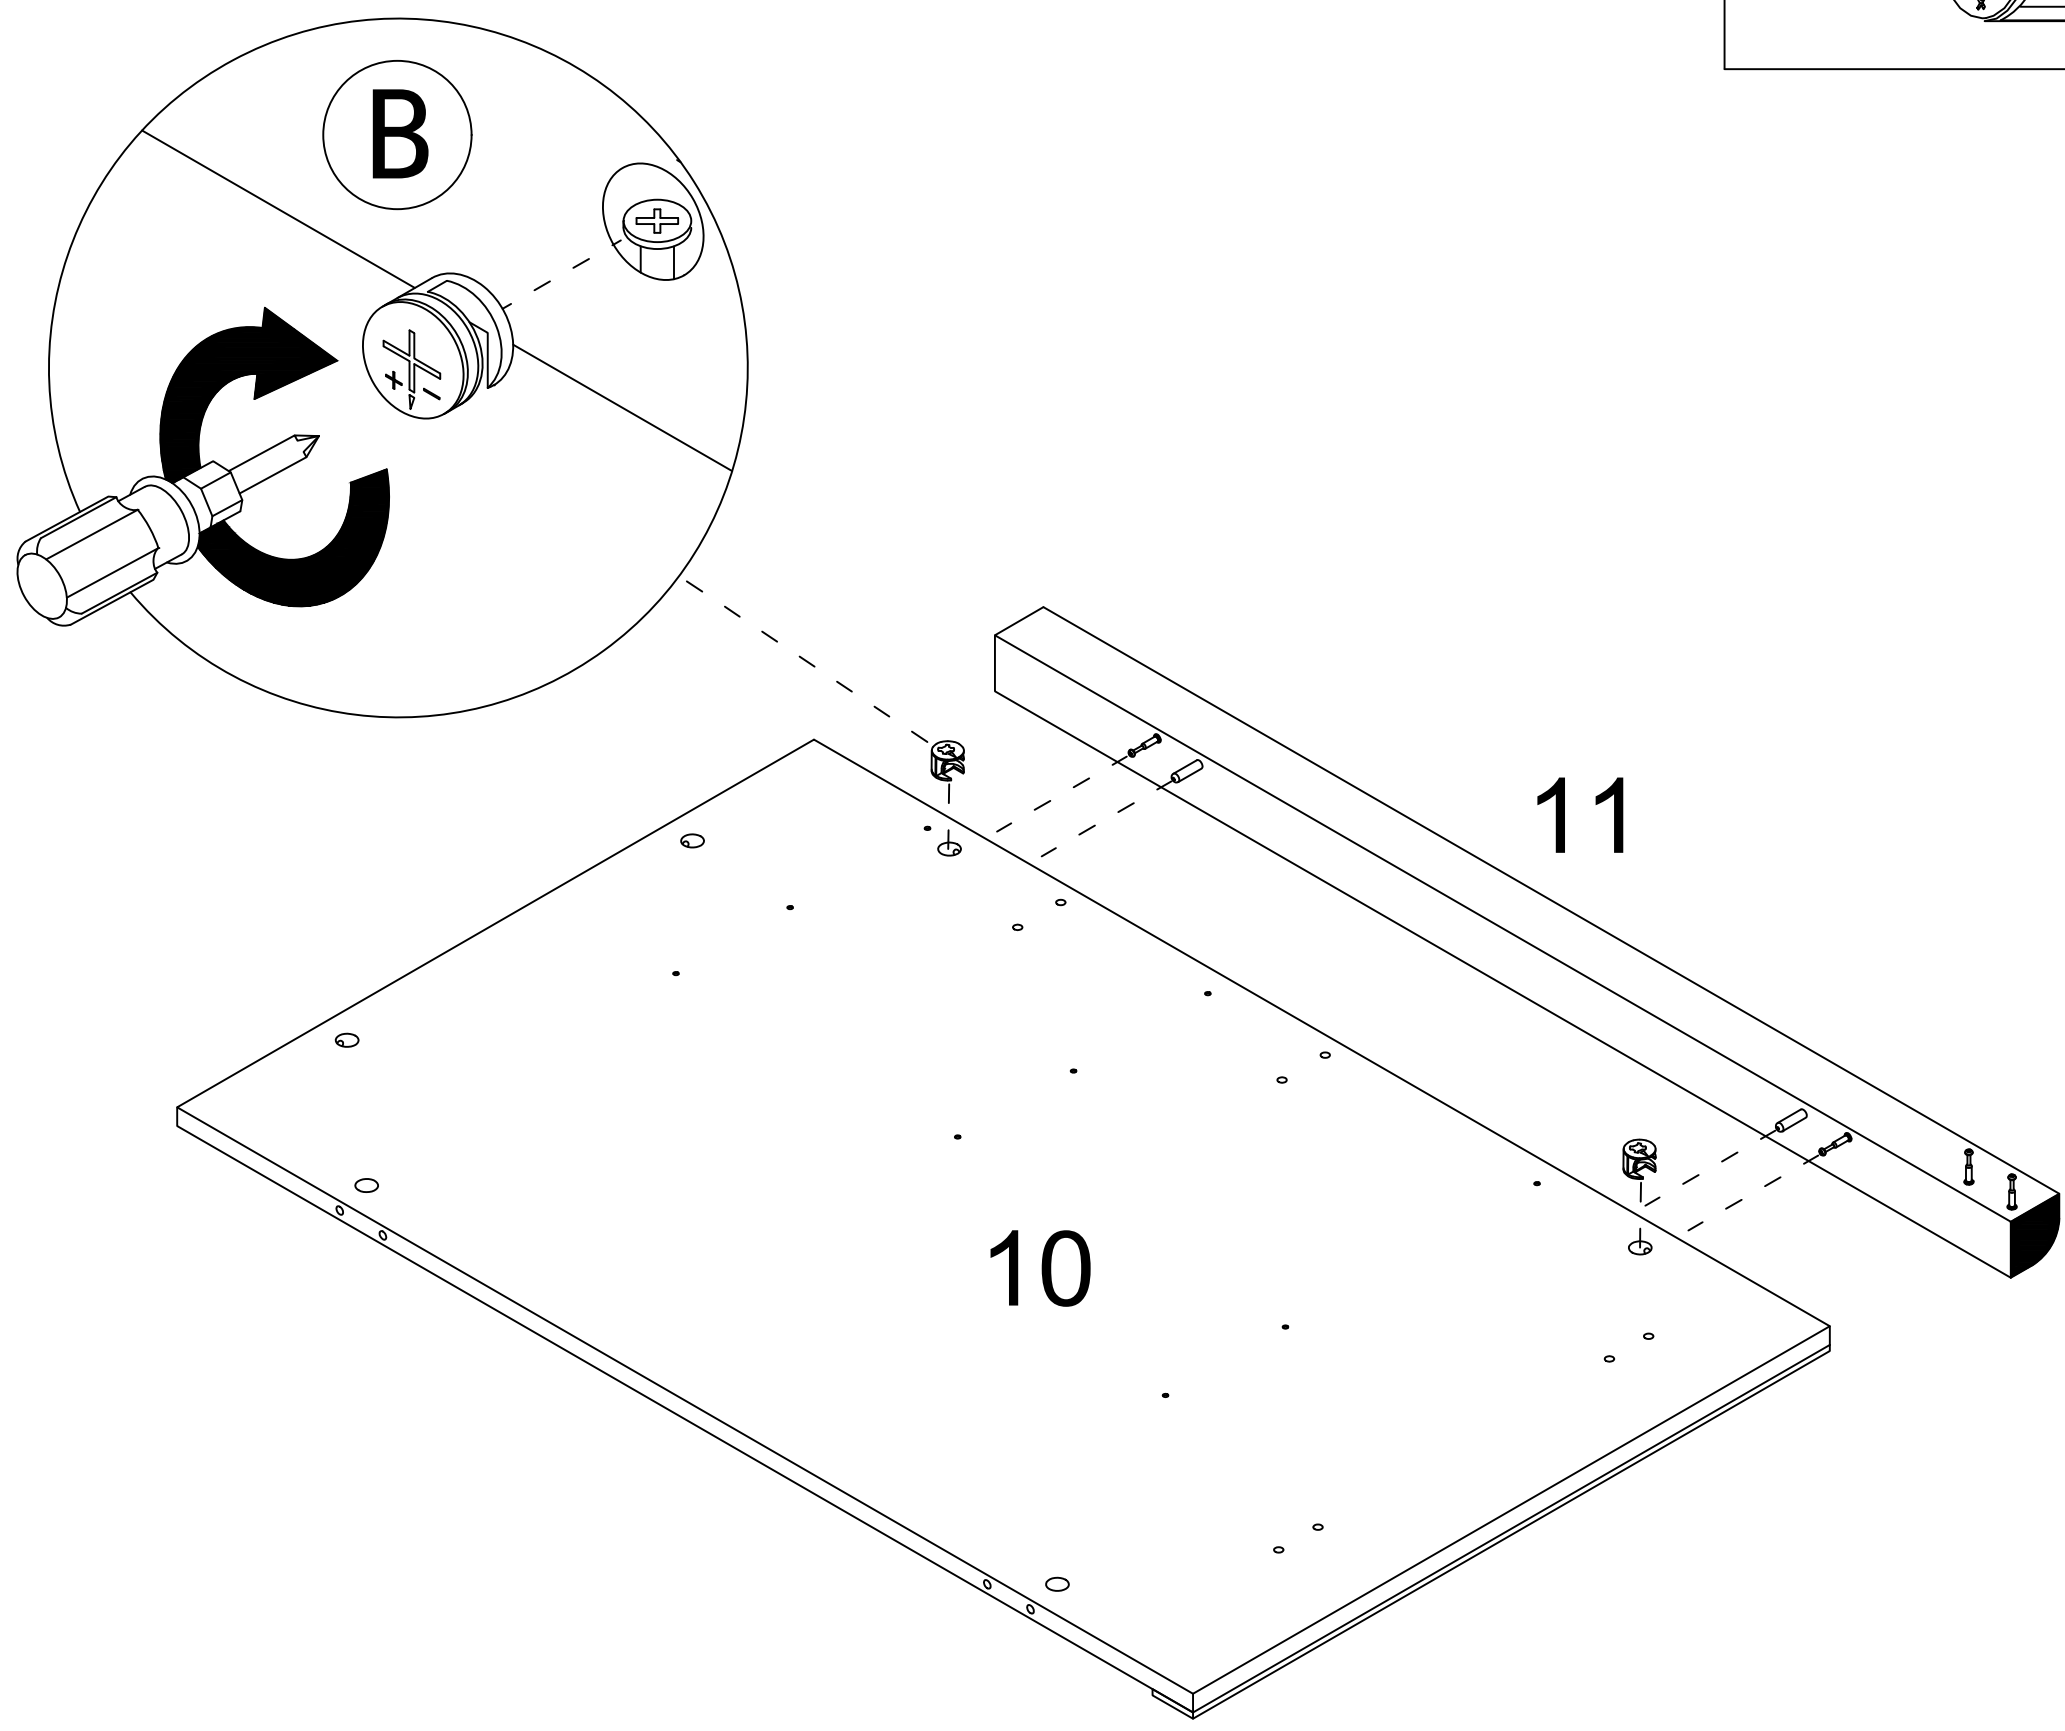


22

Step 30

B

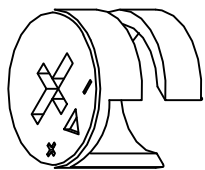


x2

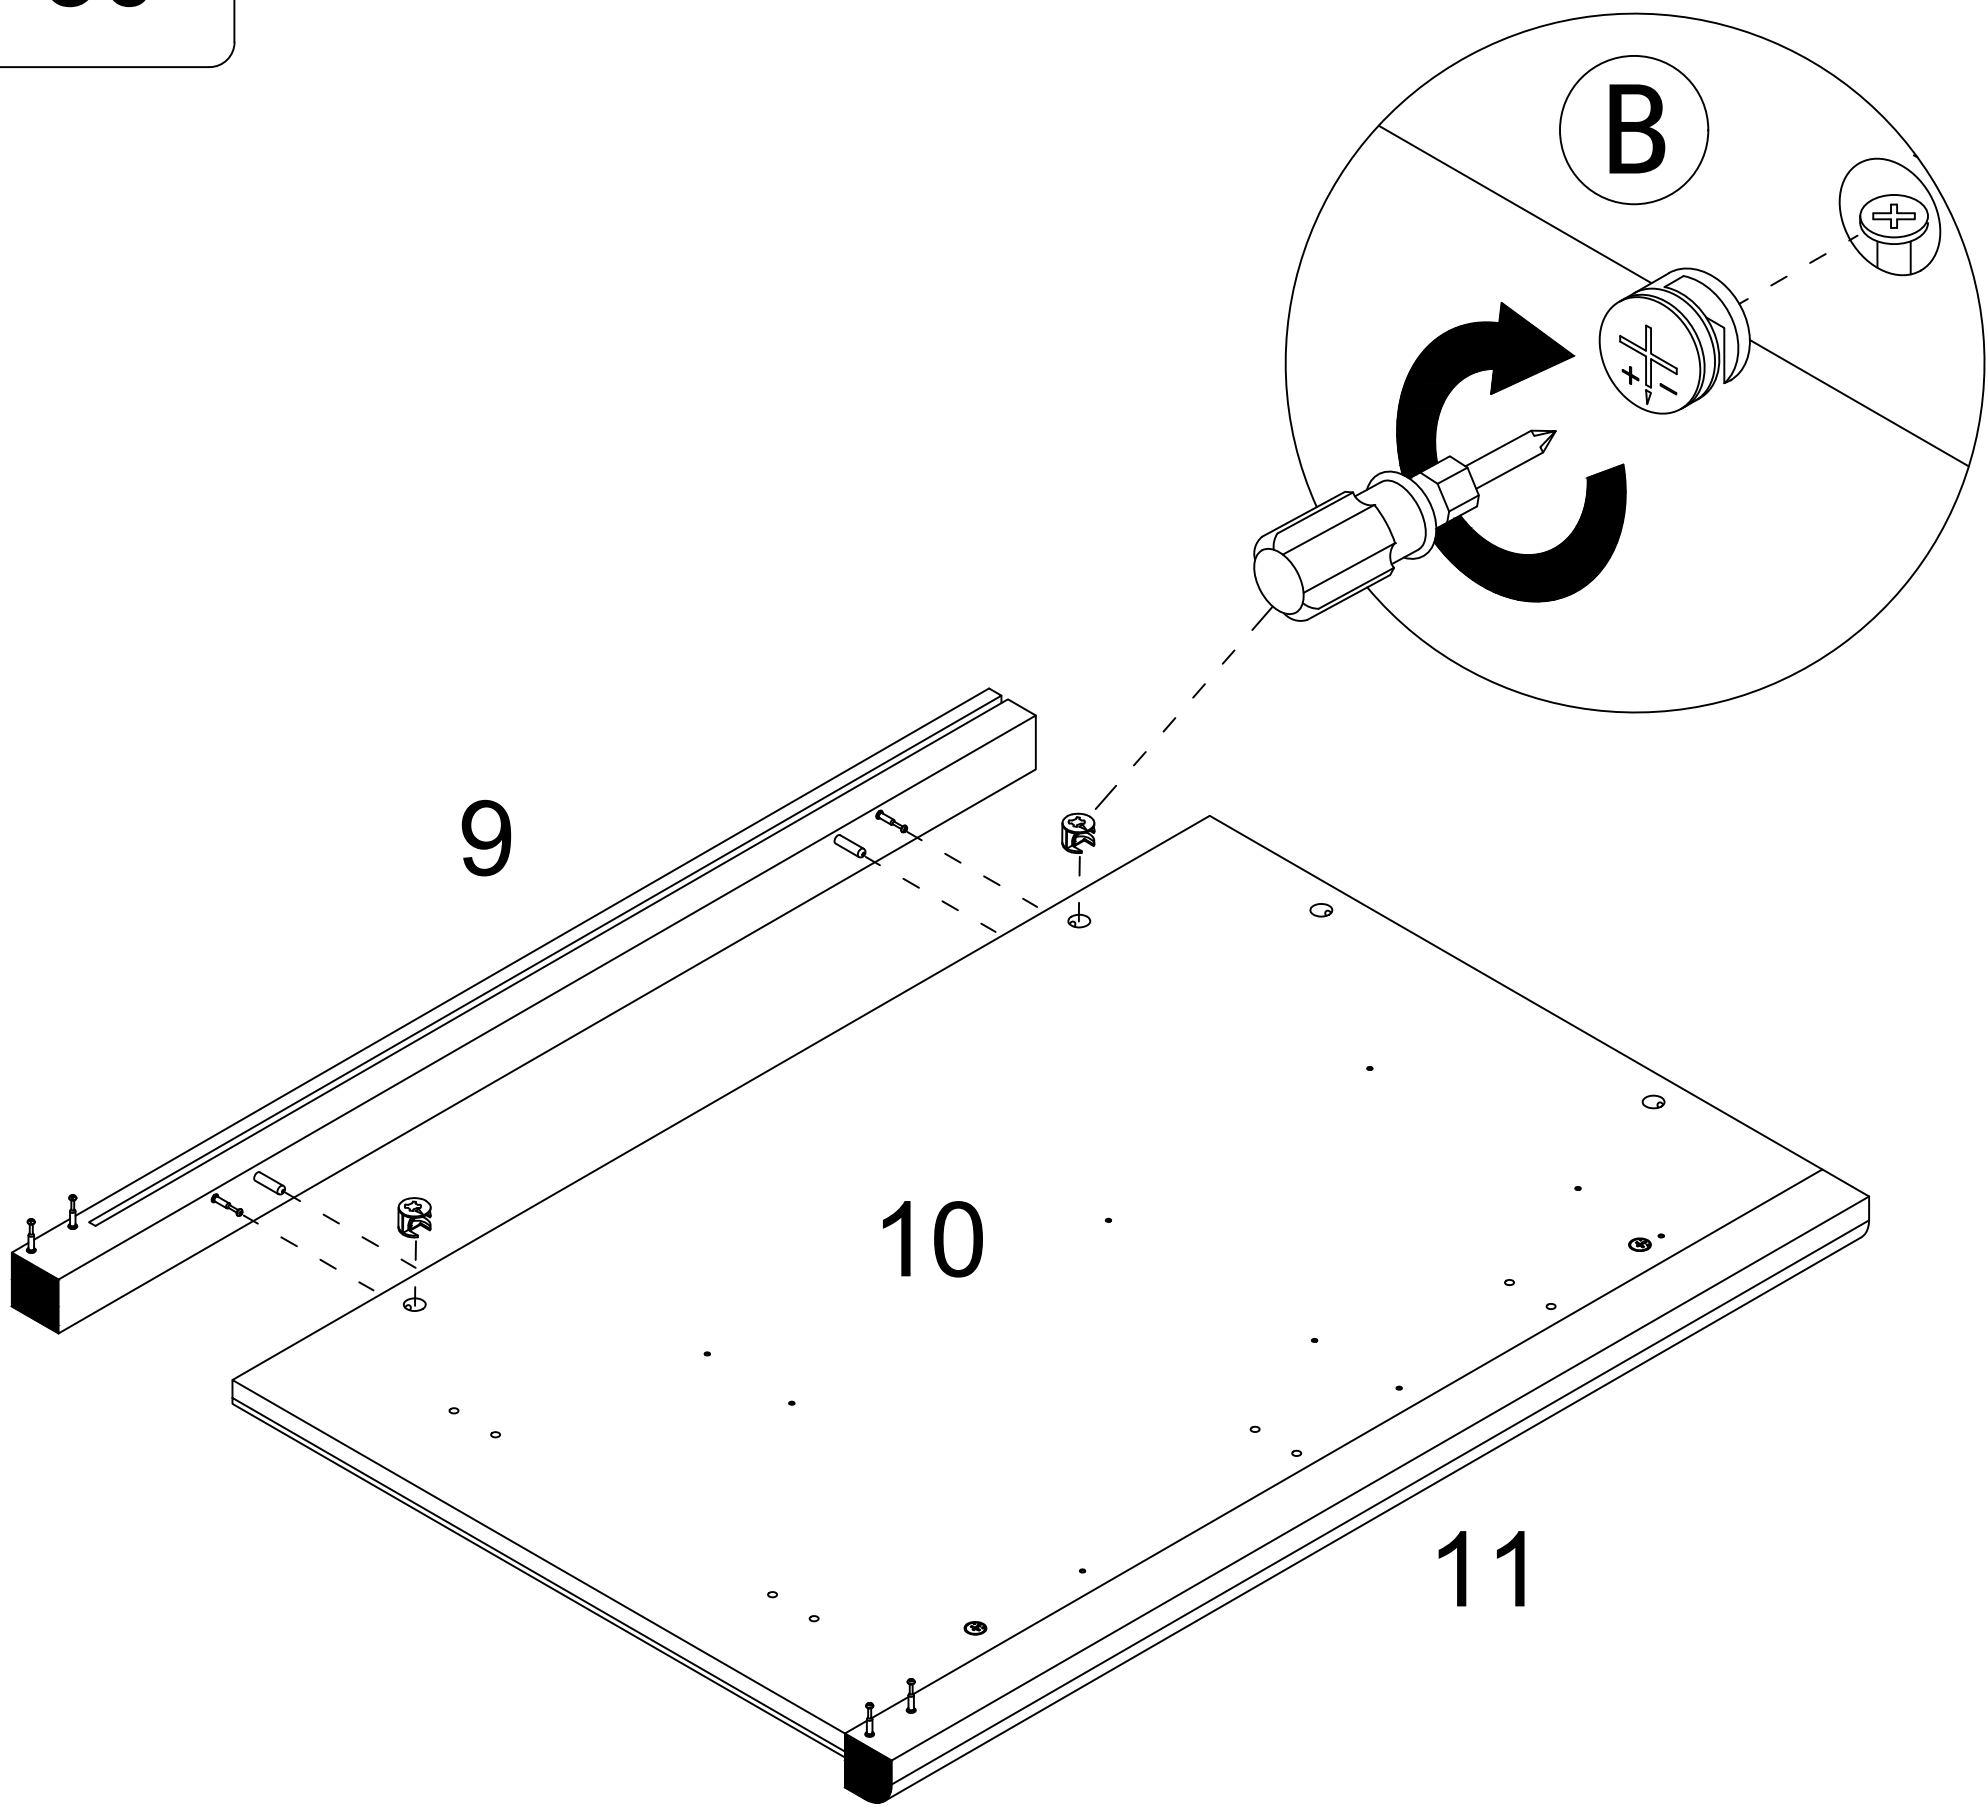



Step 31

A







x6

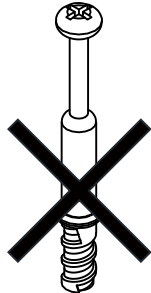	
(6x33mm)	(6x35mm)
A	M

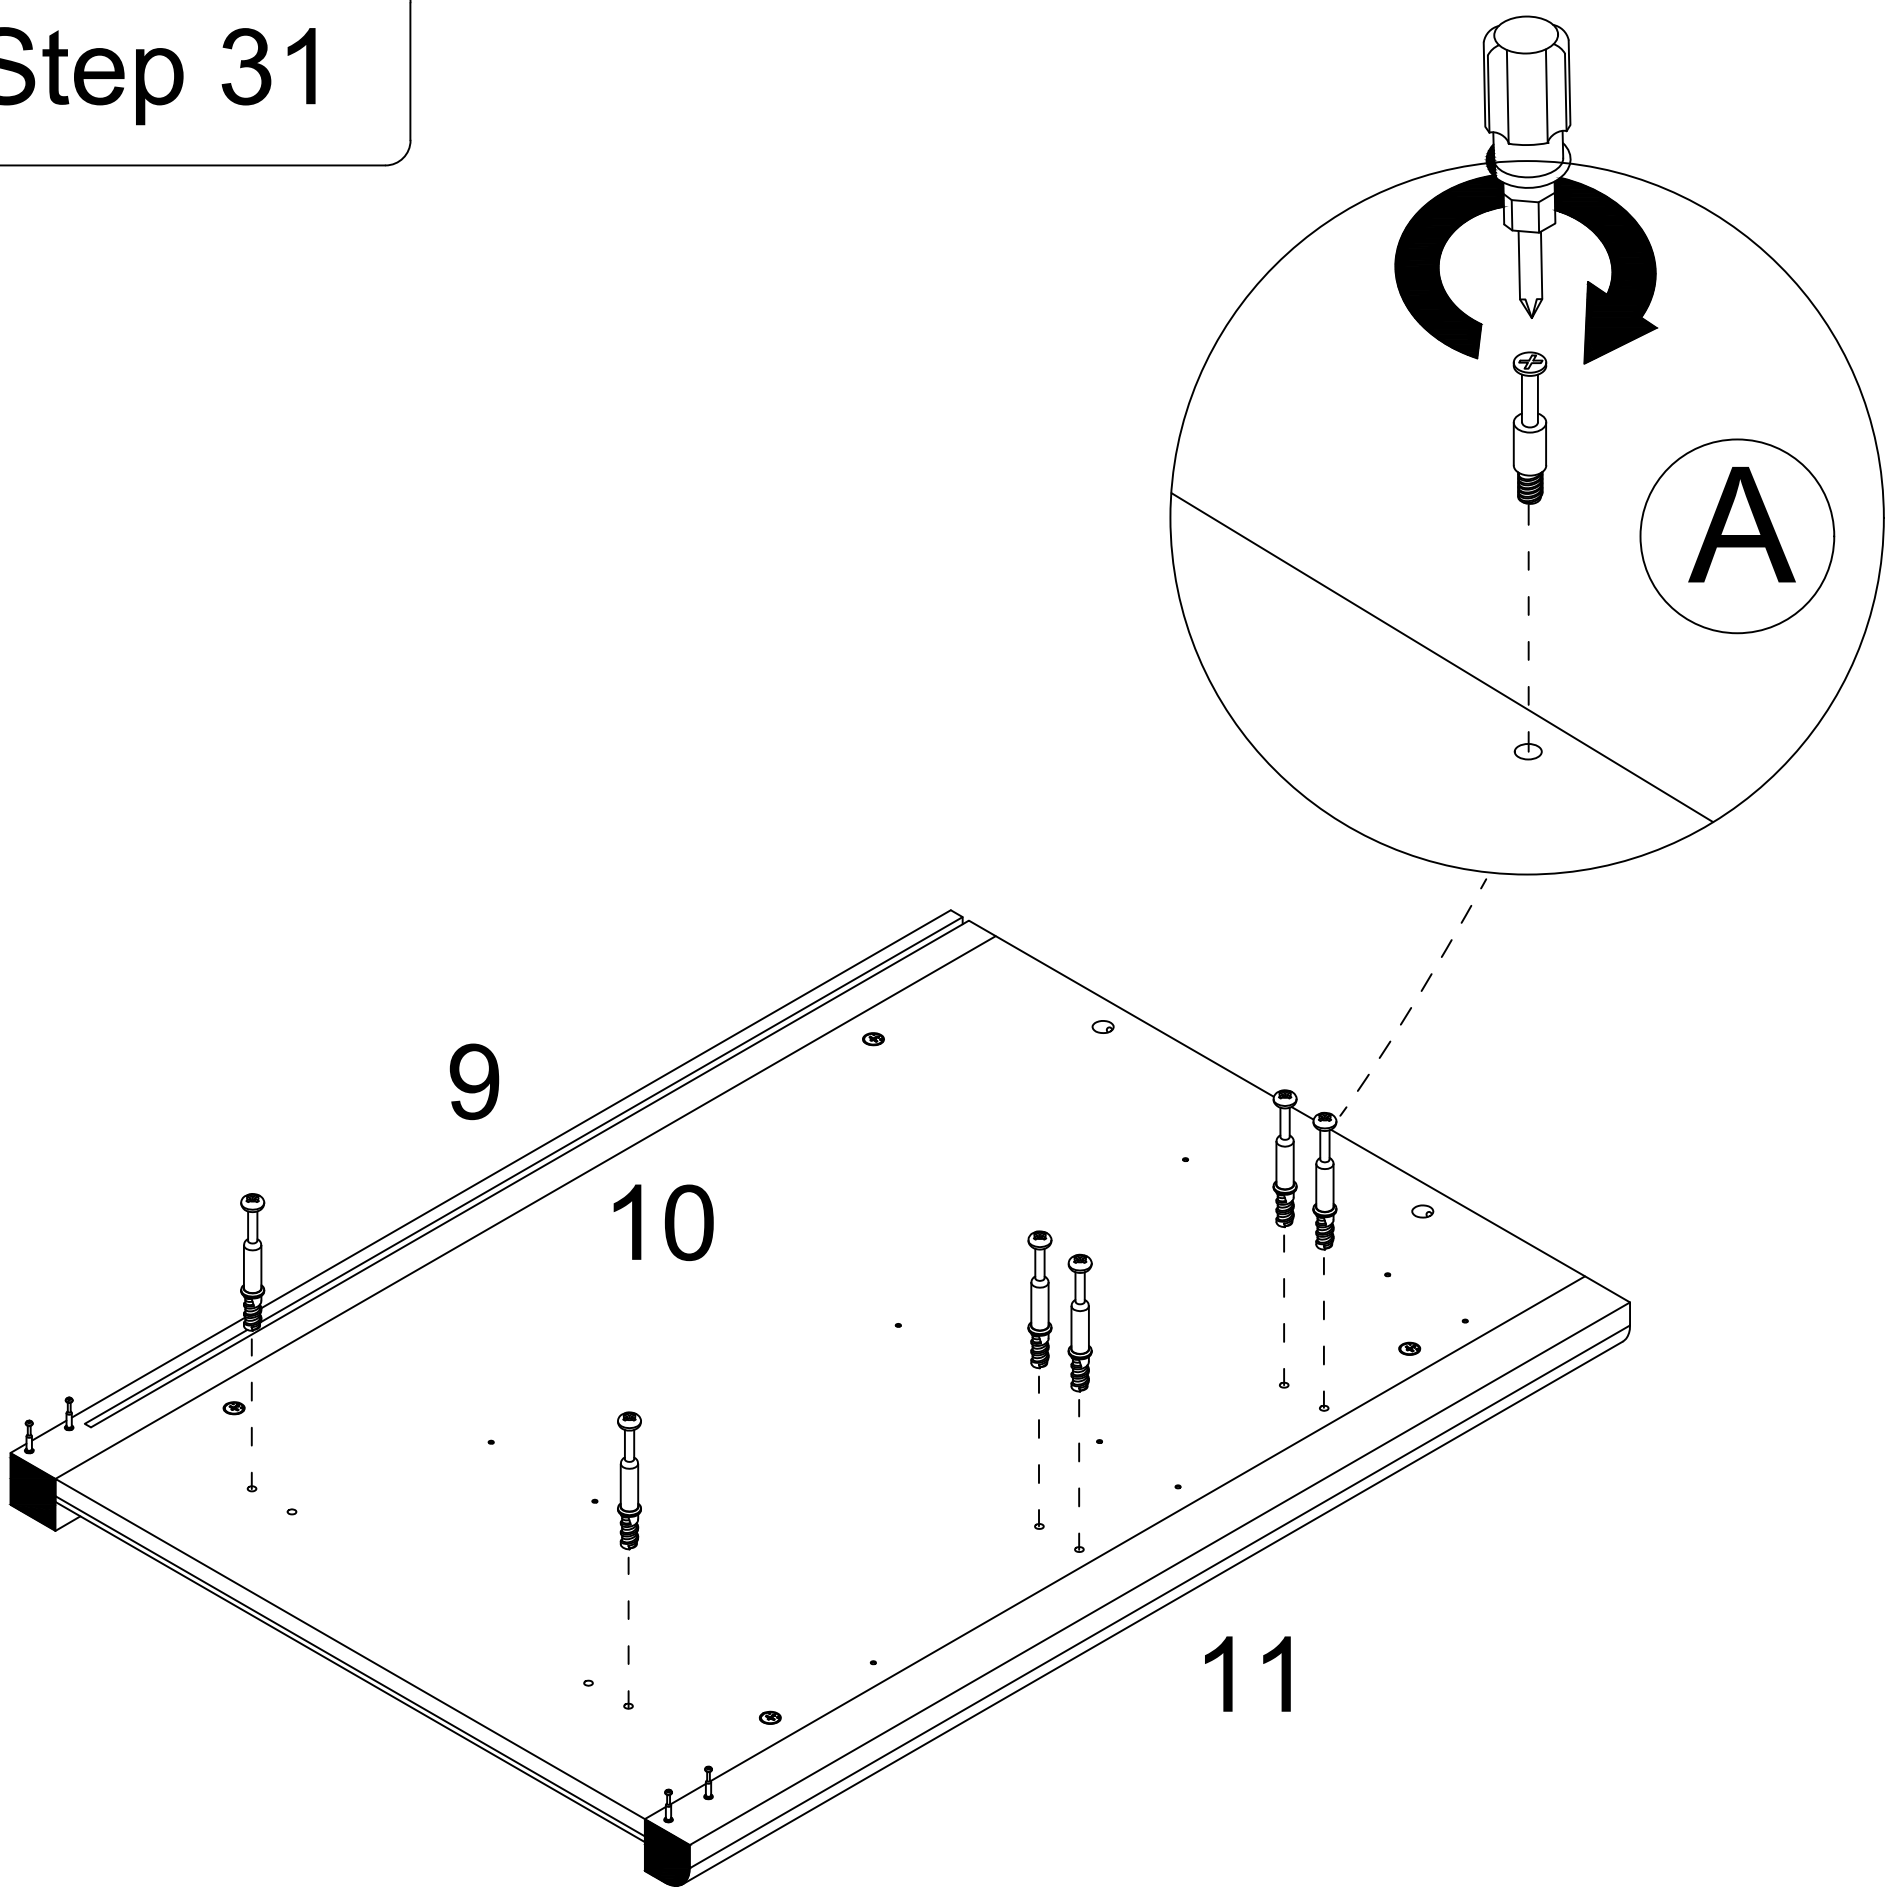




Step 32

E  x2
 x4

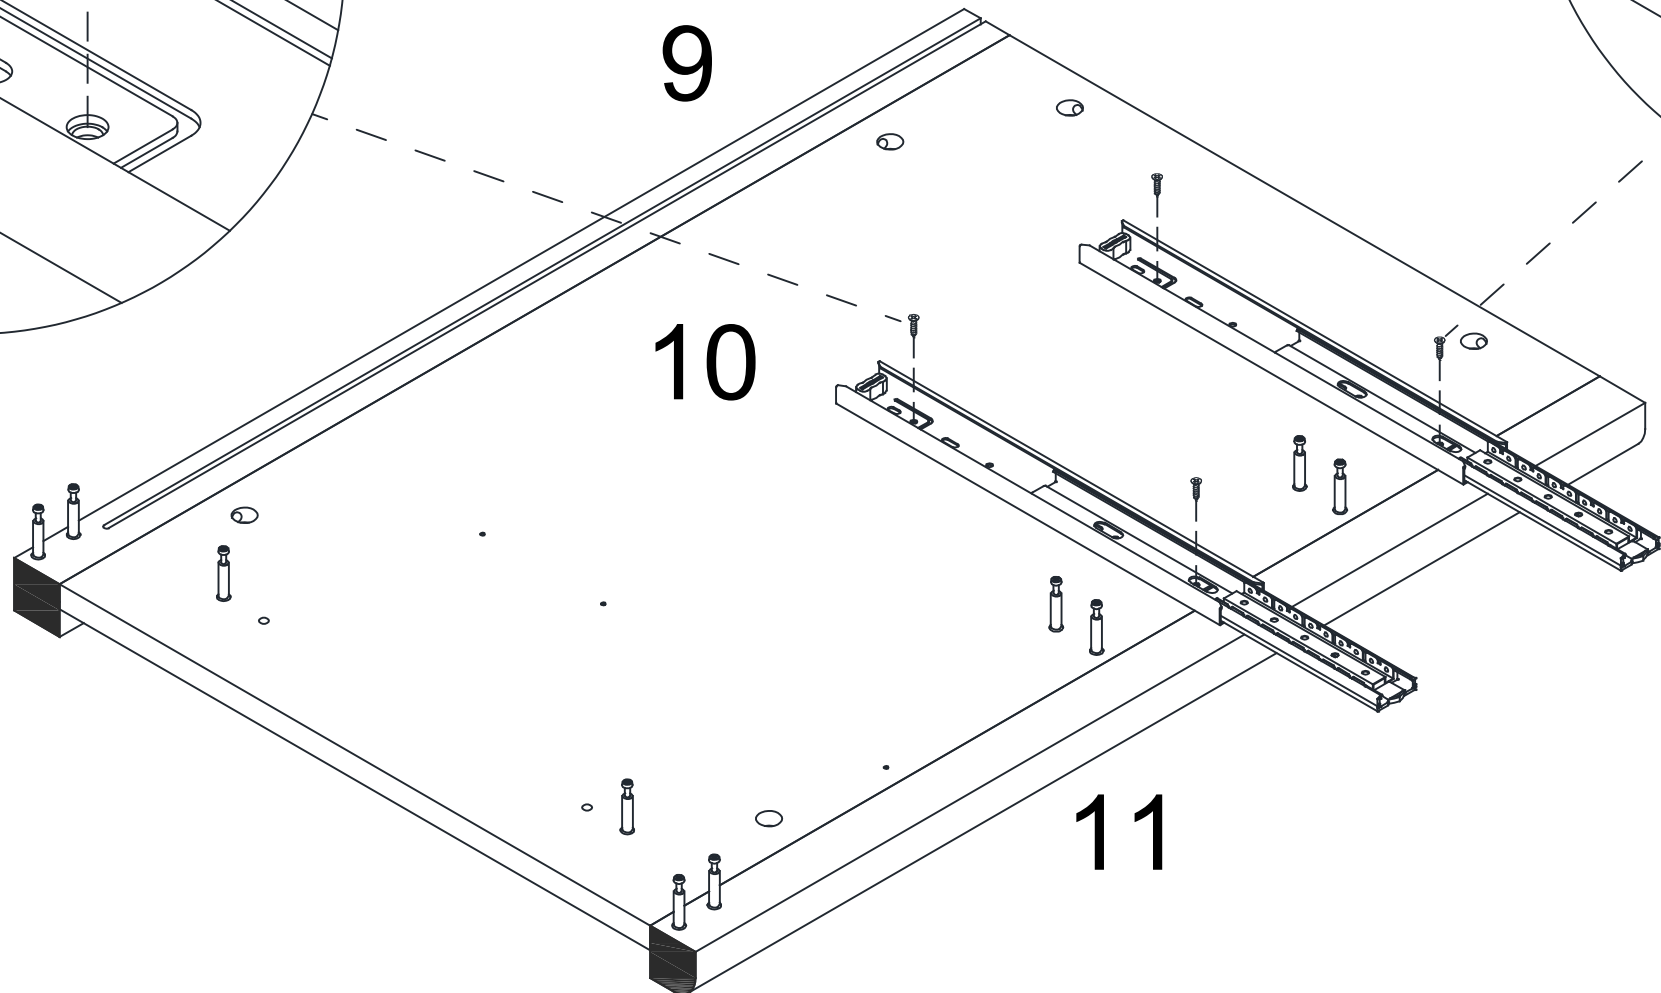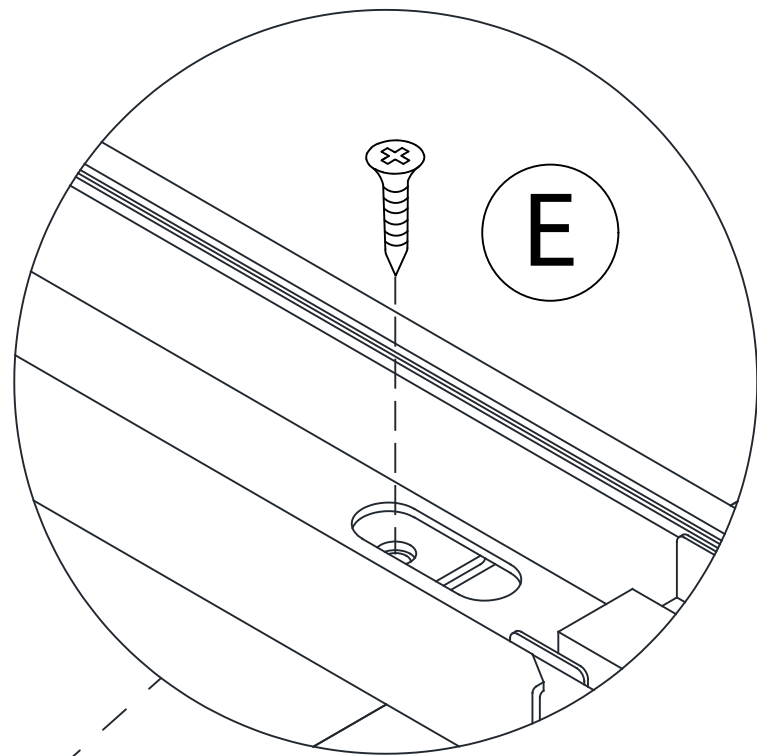
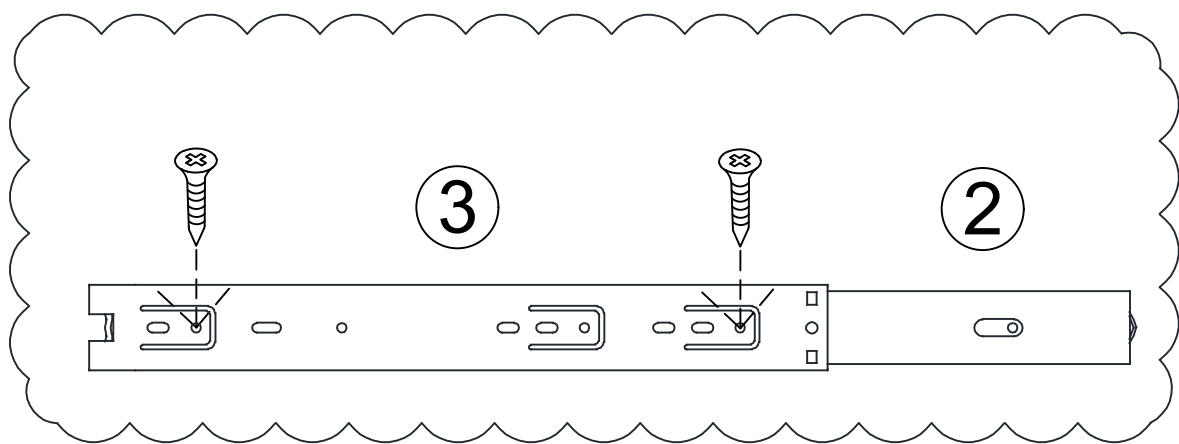
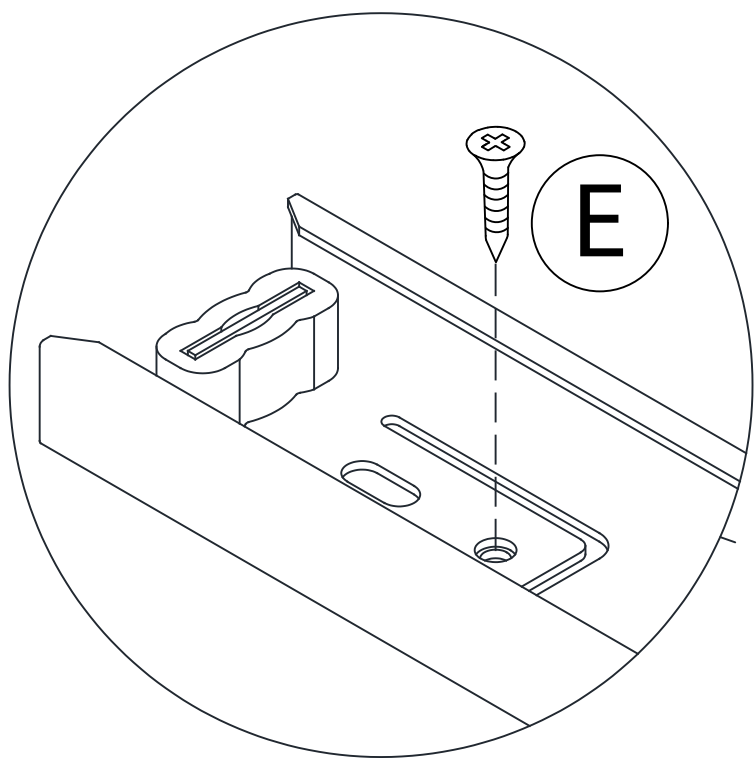


Step 33




E  x2

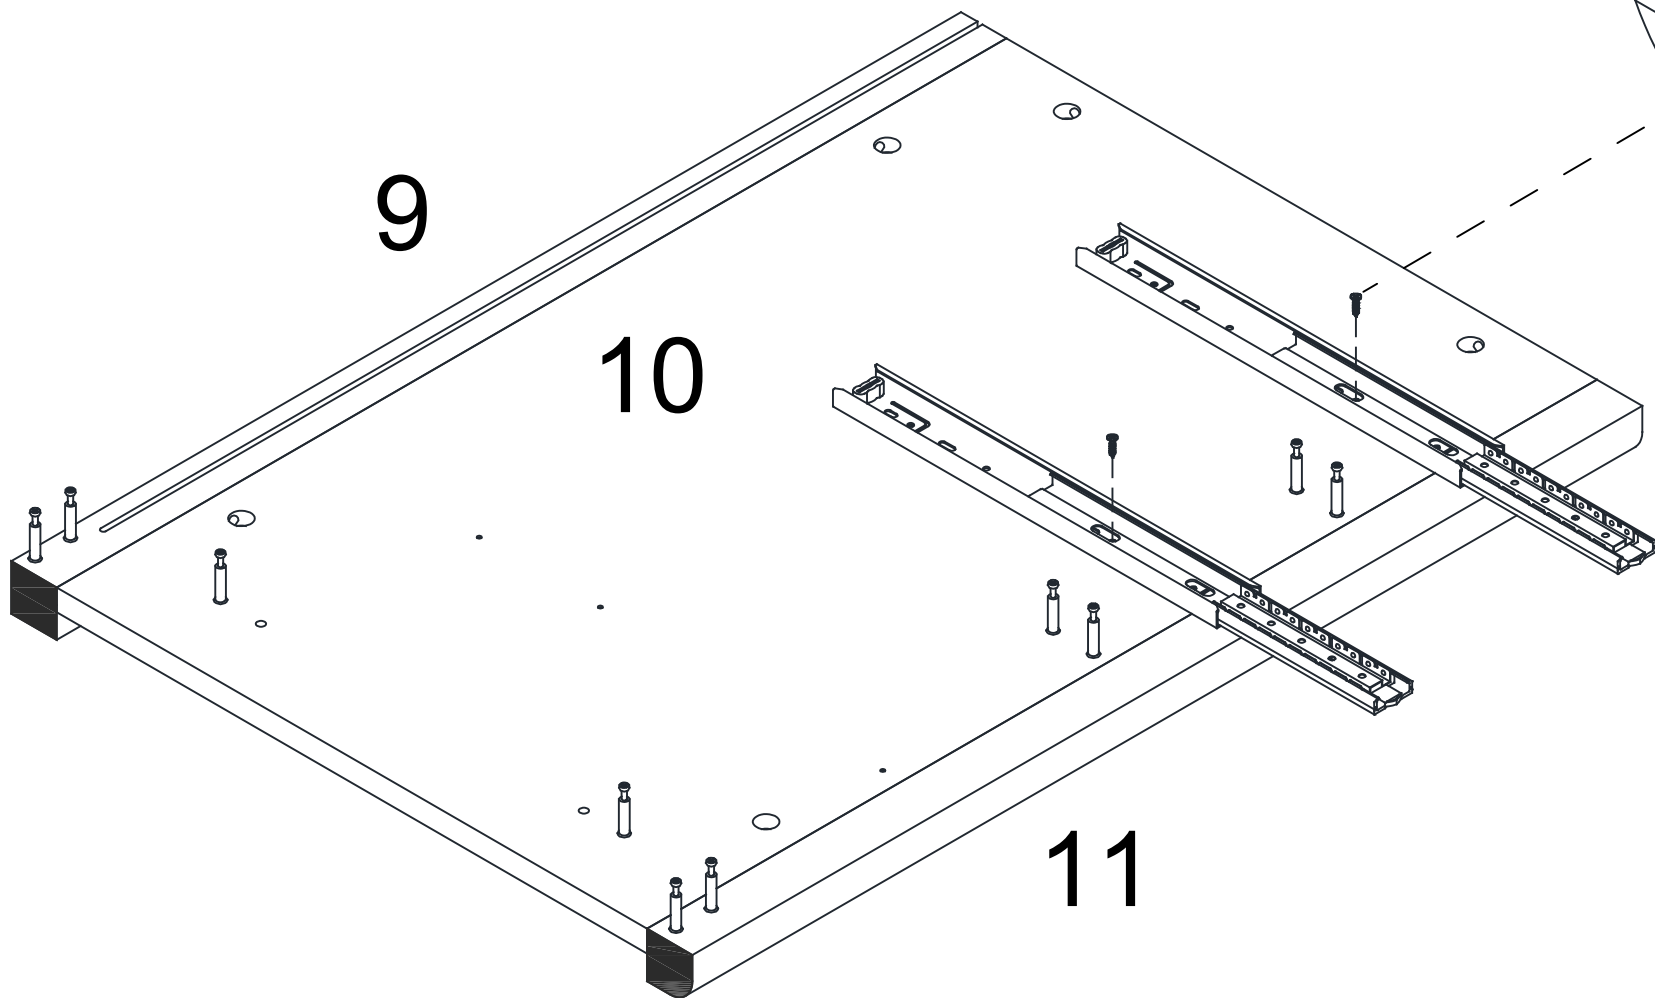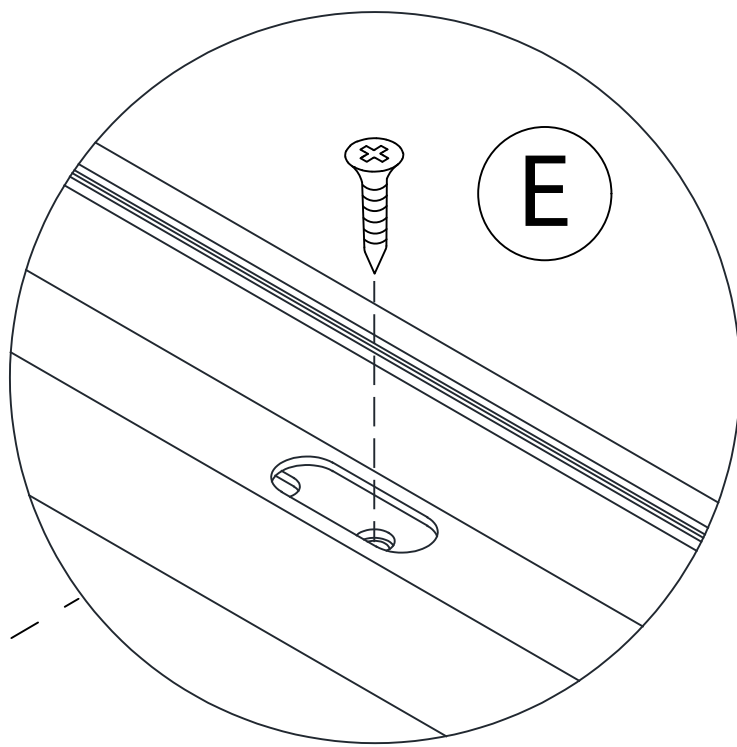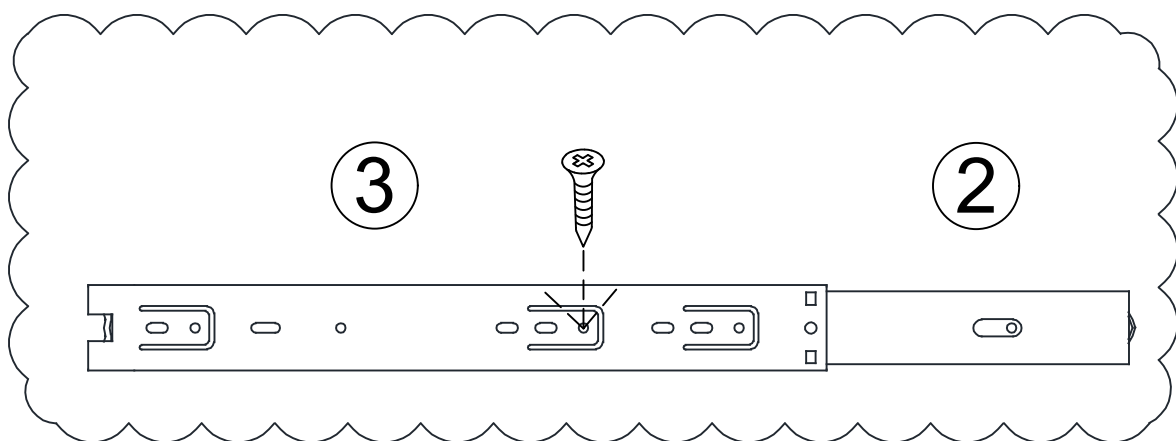


Step 34

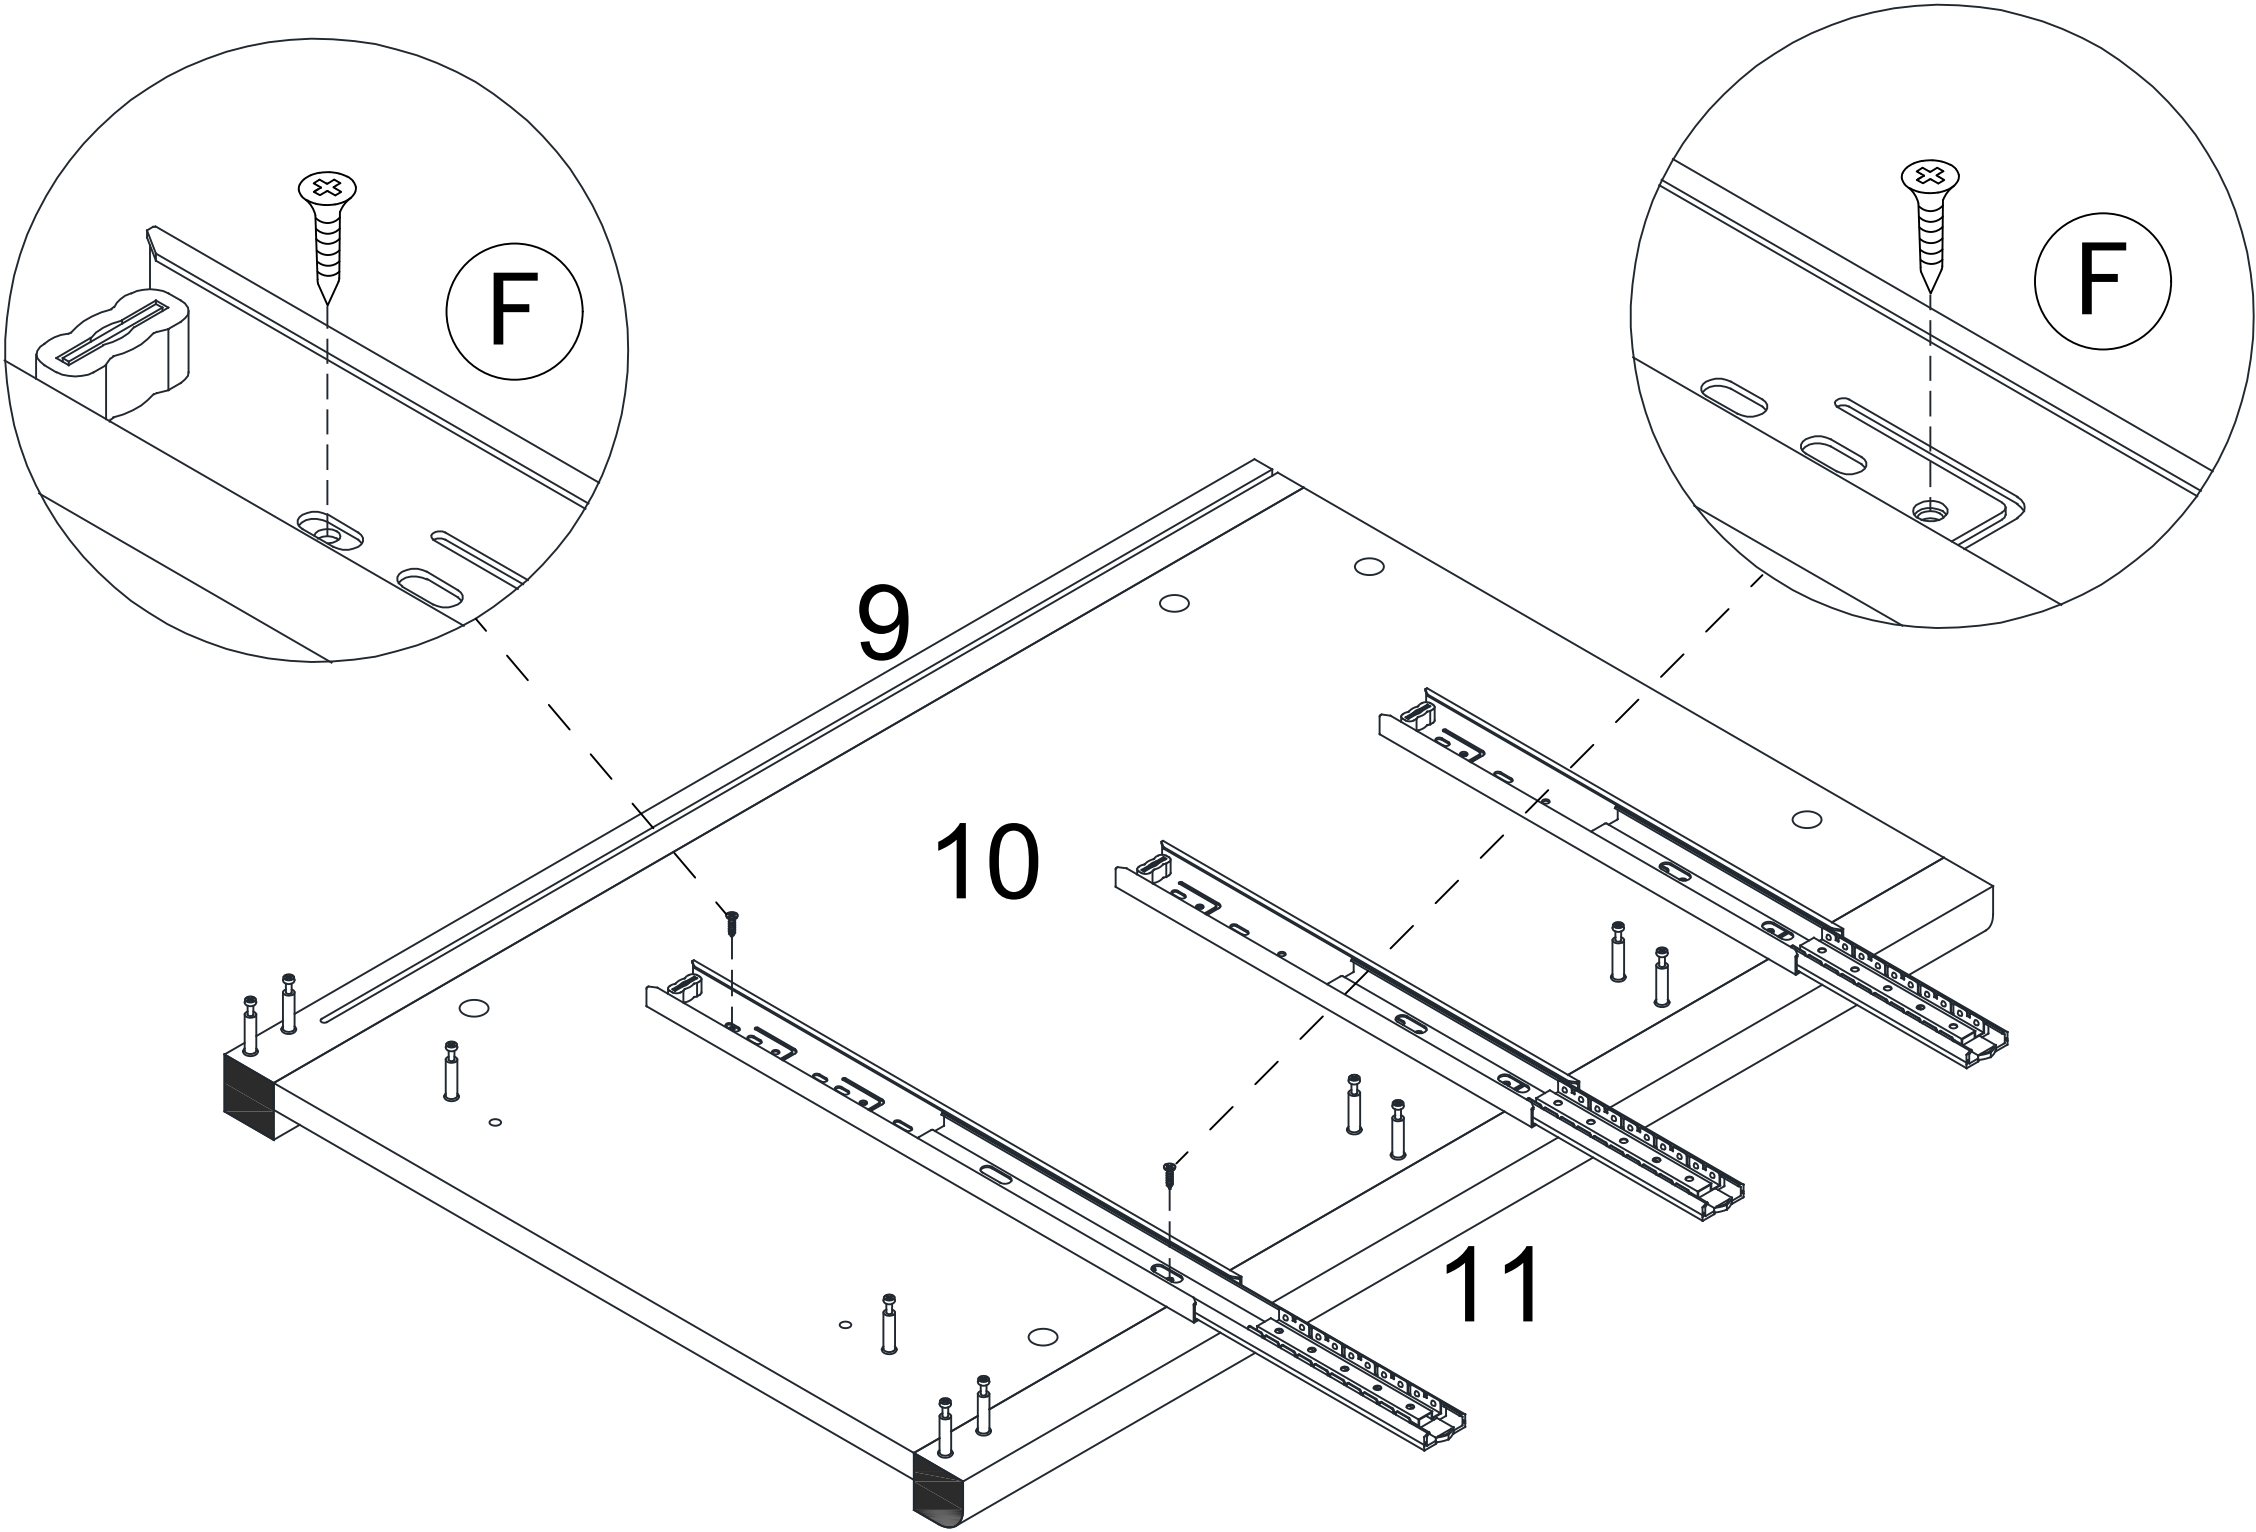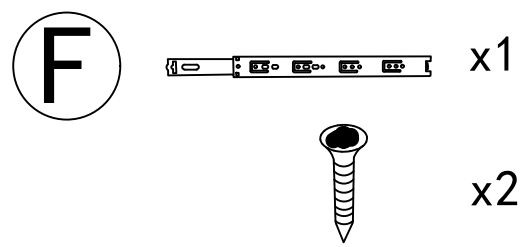
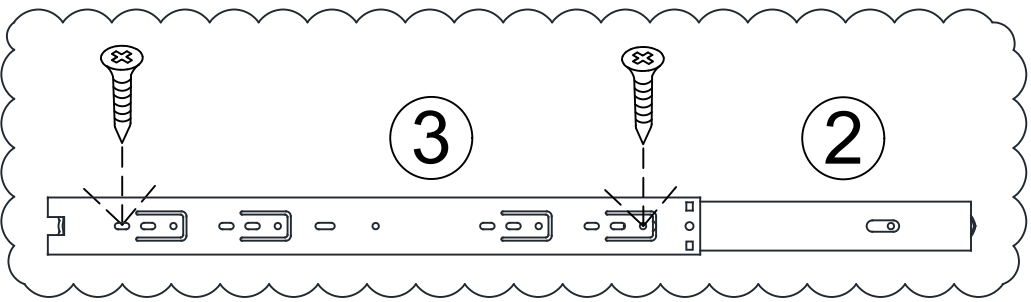



Step 35

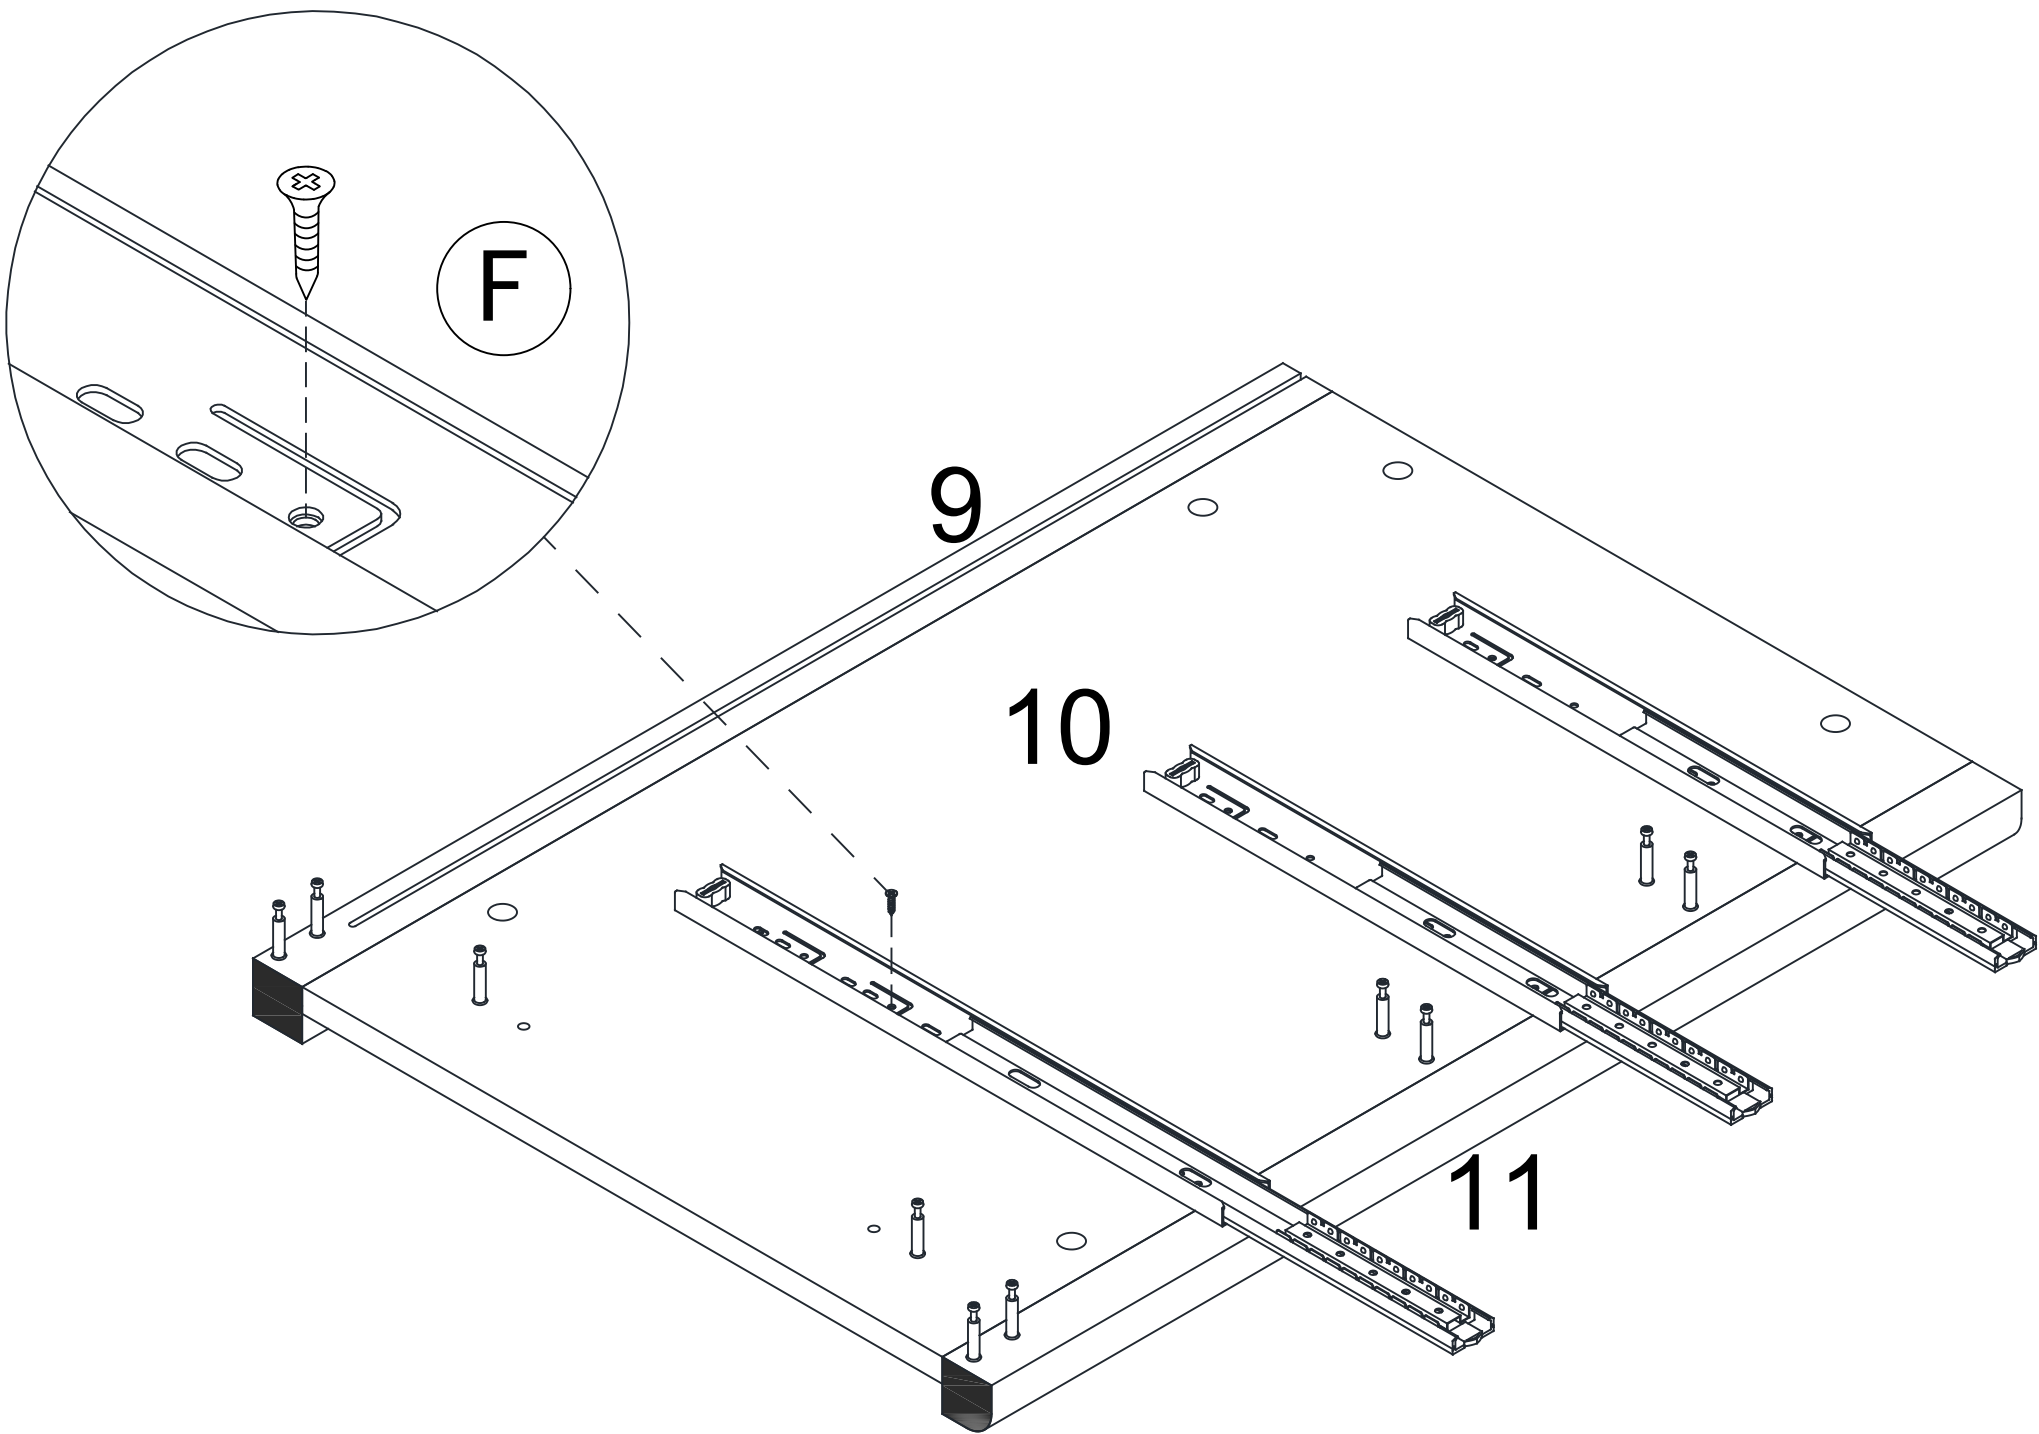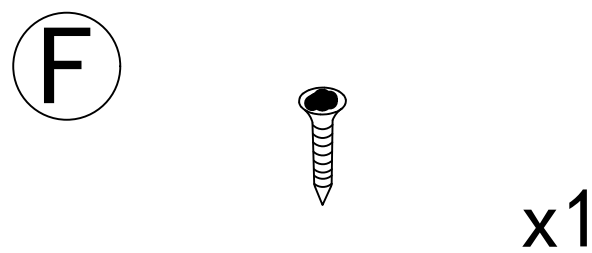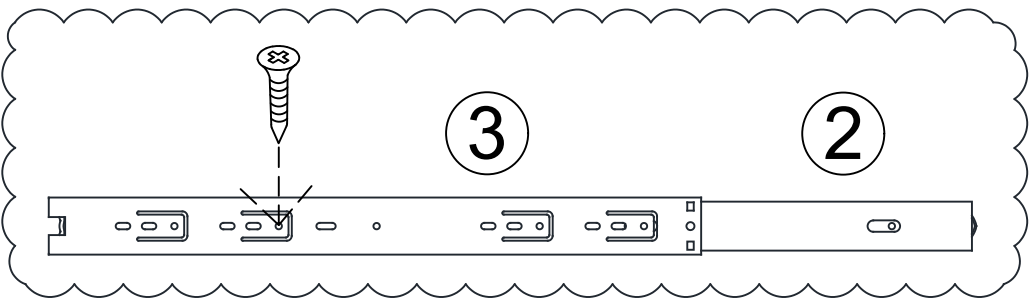


Step 36

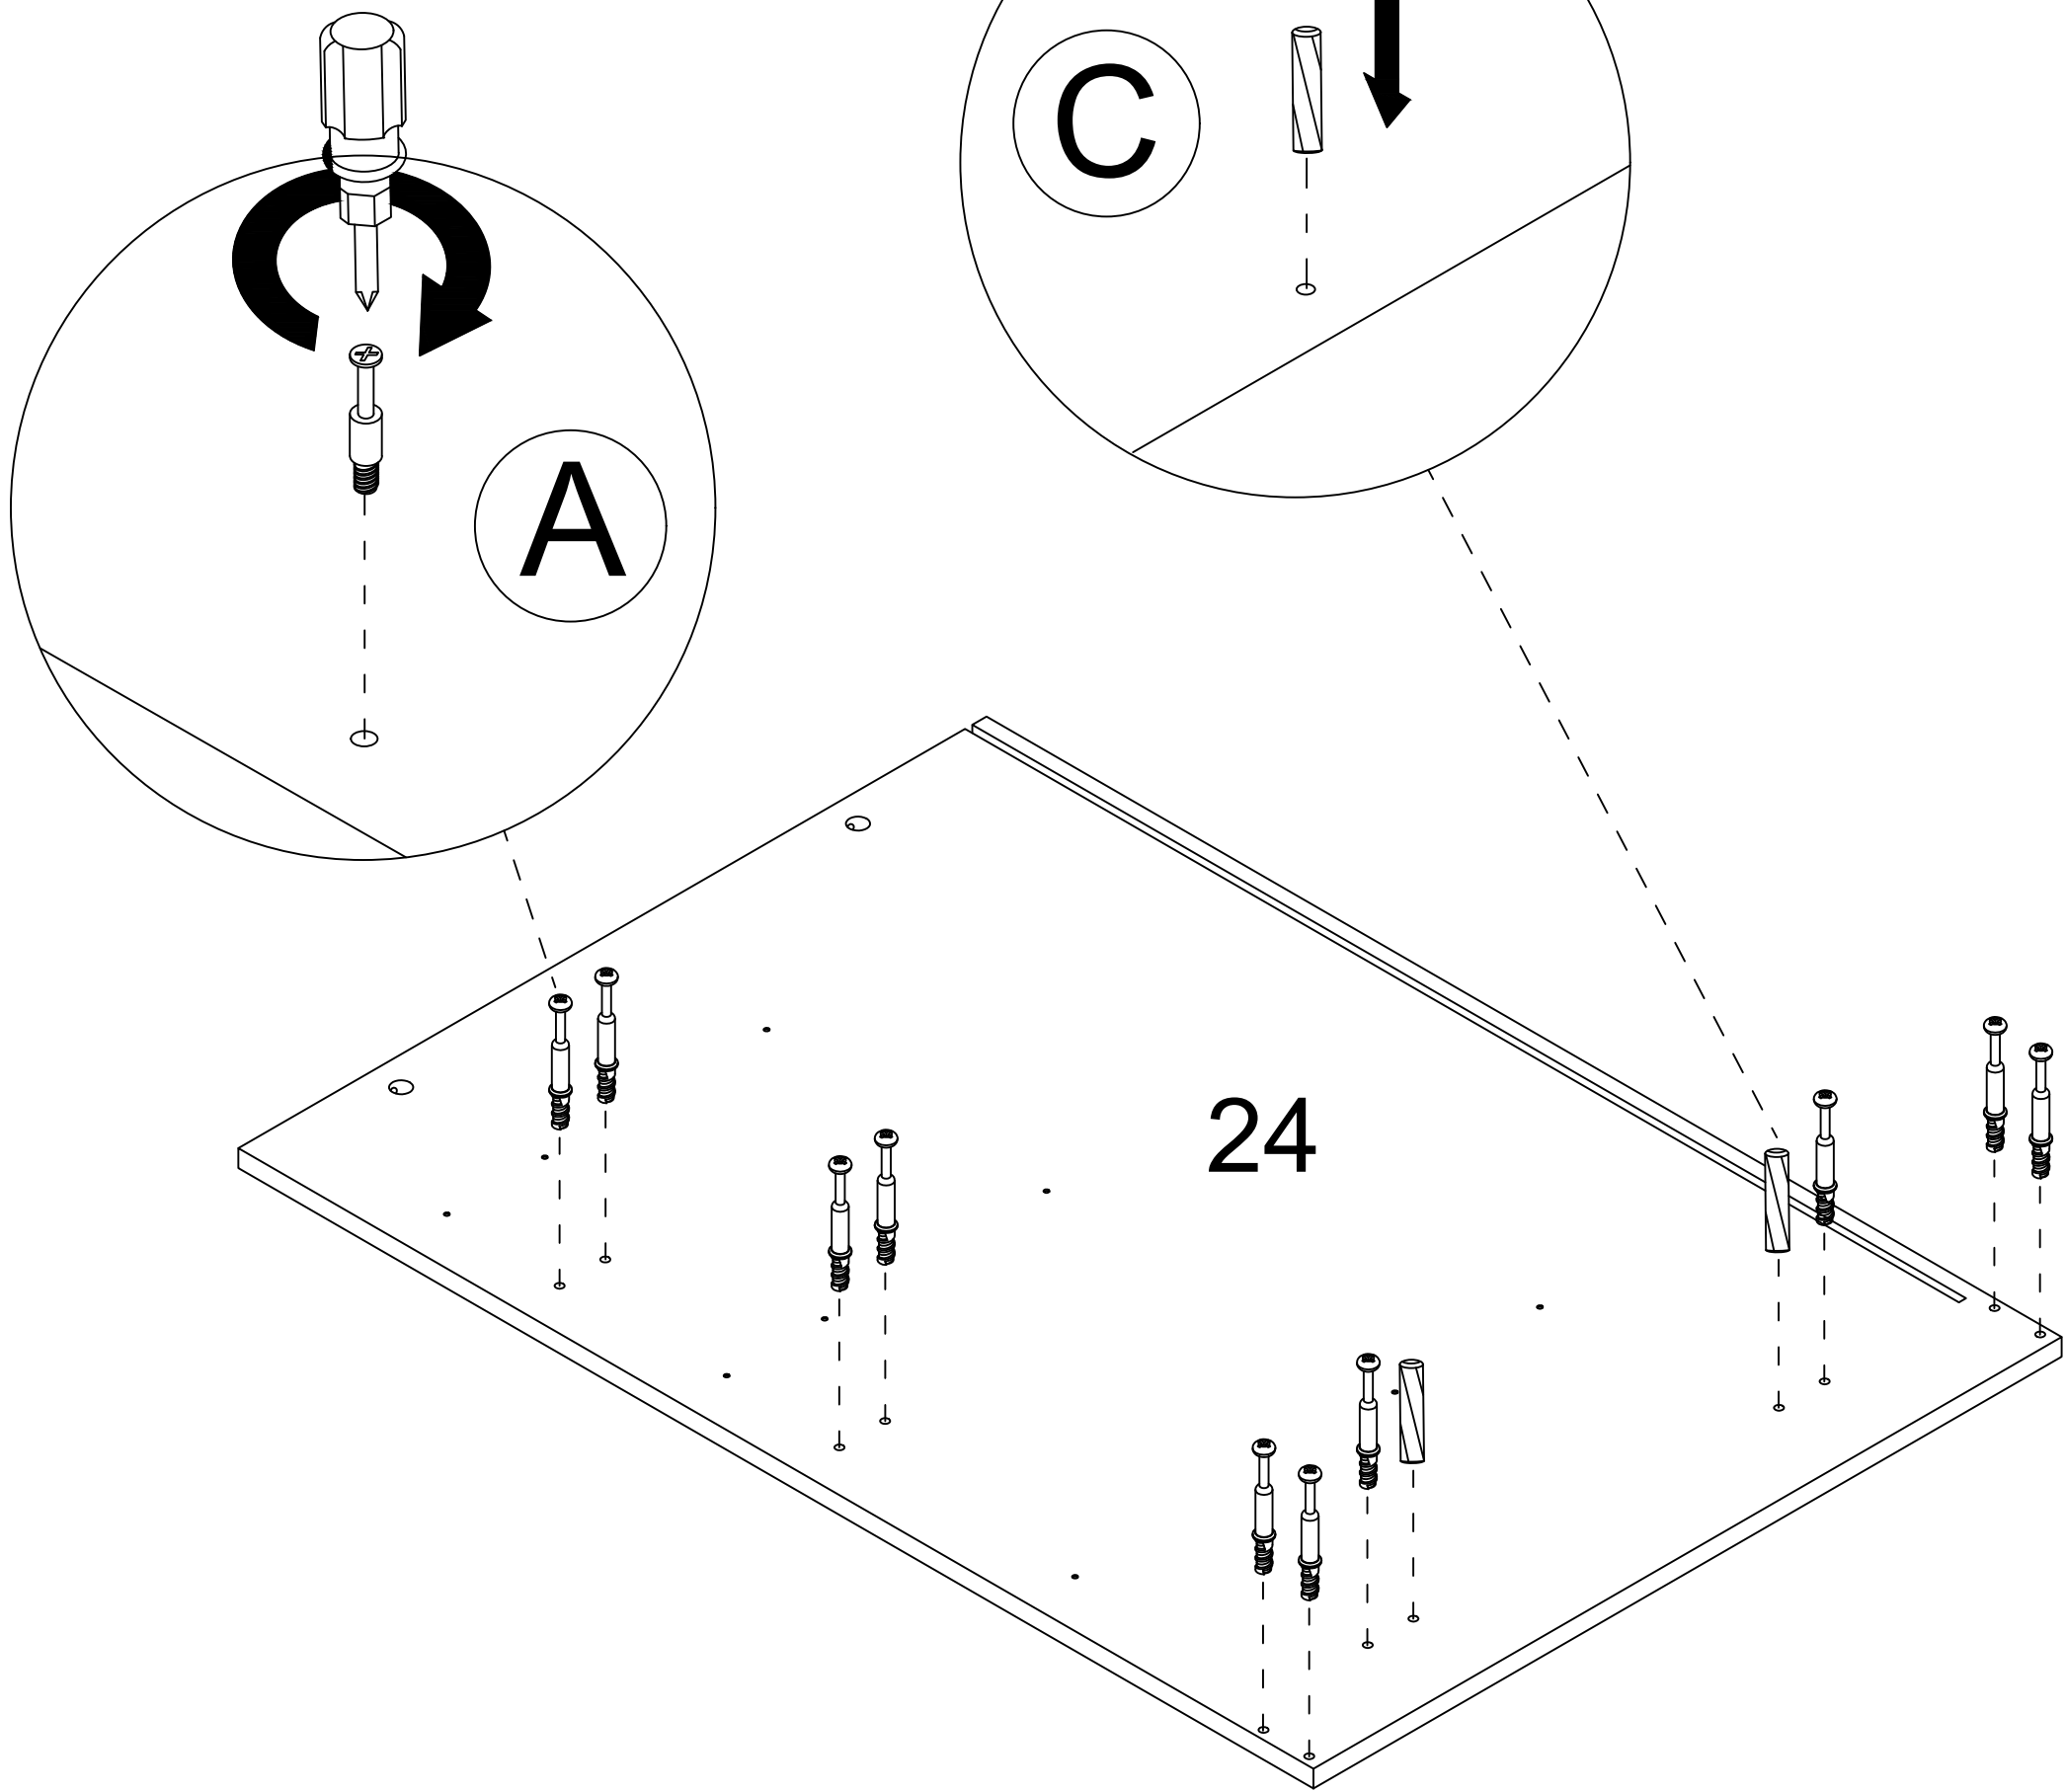

- A**  x10
- C**  x2

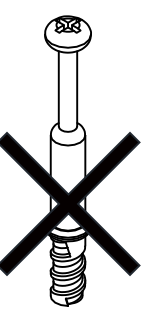- | | |
|---|---|
| 
(6x33mm)
A | 
(6x35mm)
M |
|---|---|

Step 37

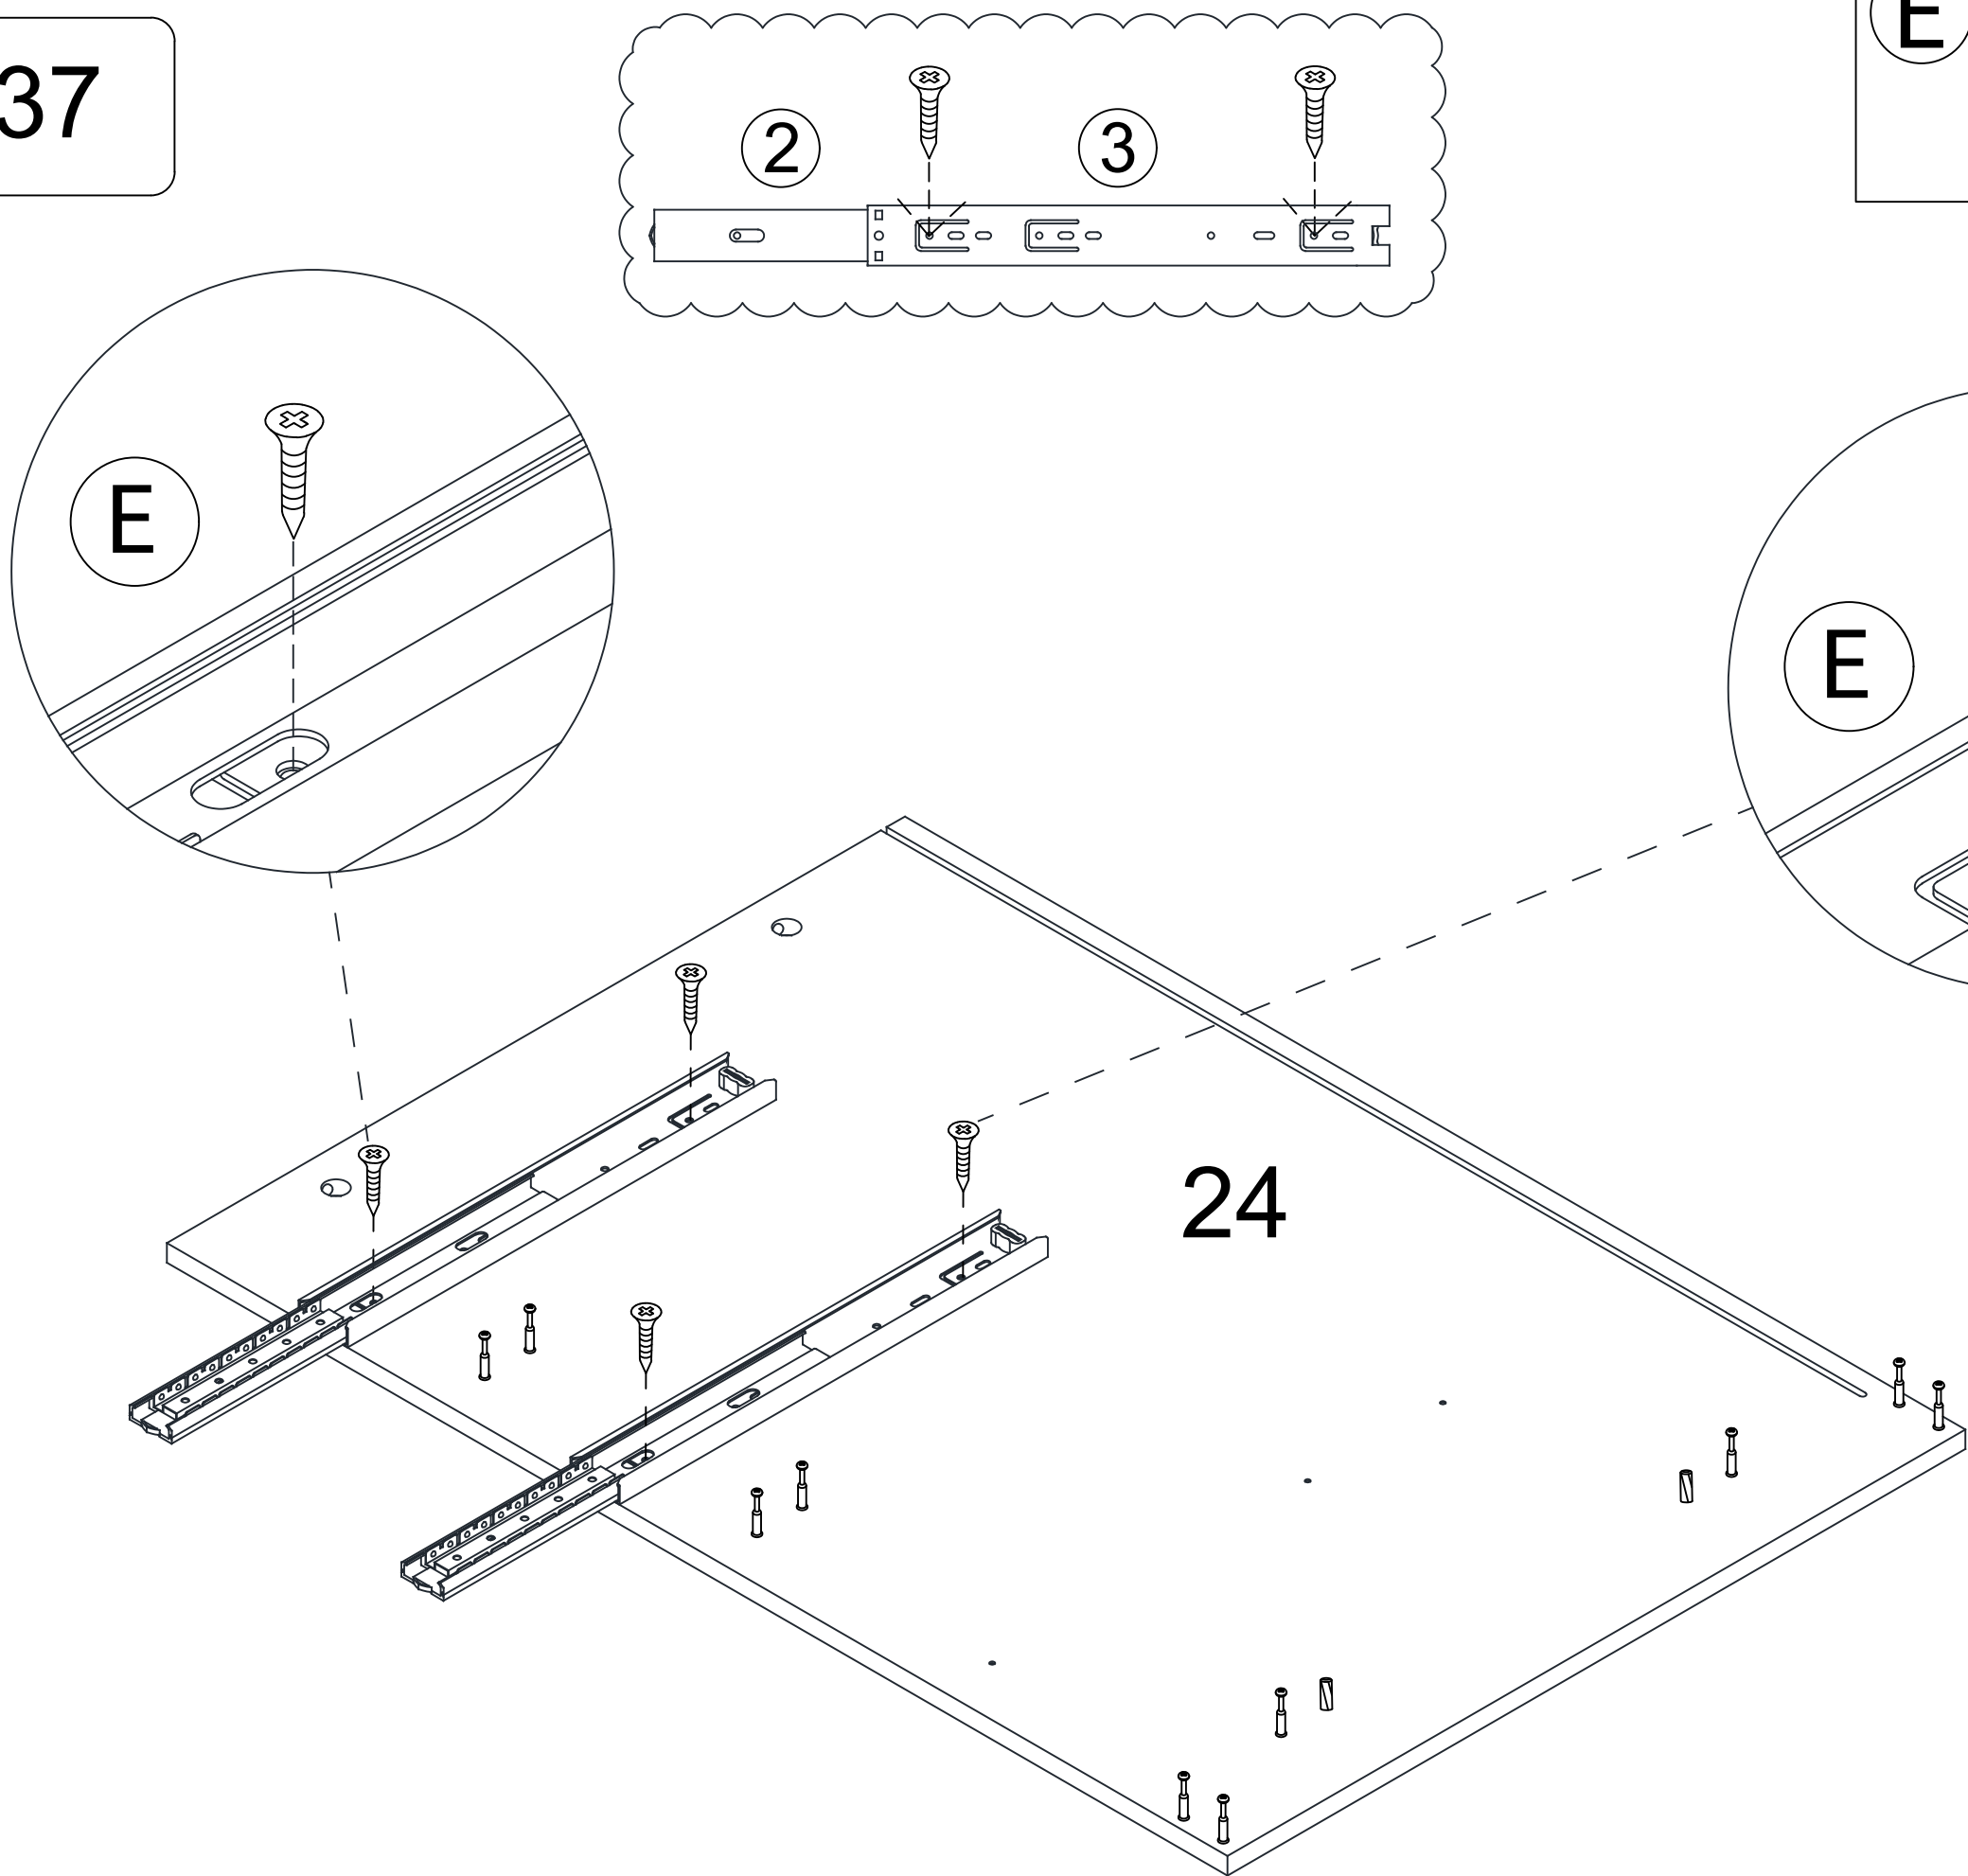


- E**  x2
-  x4

Step 38

E



x2

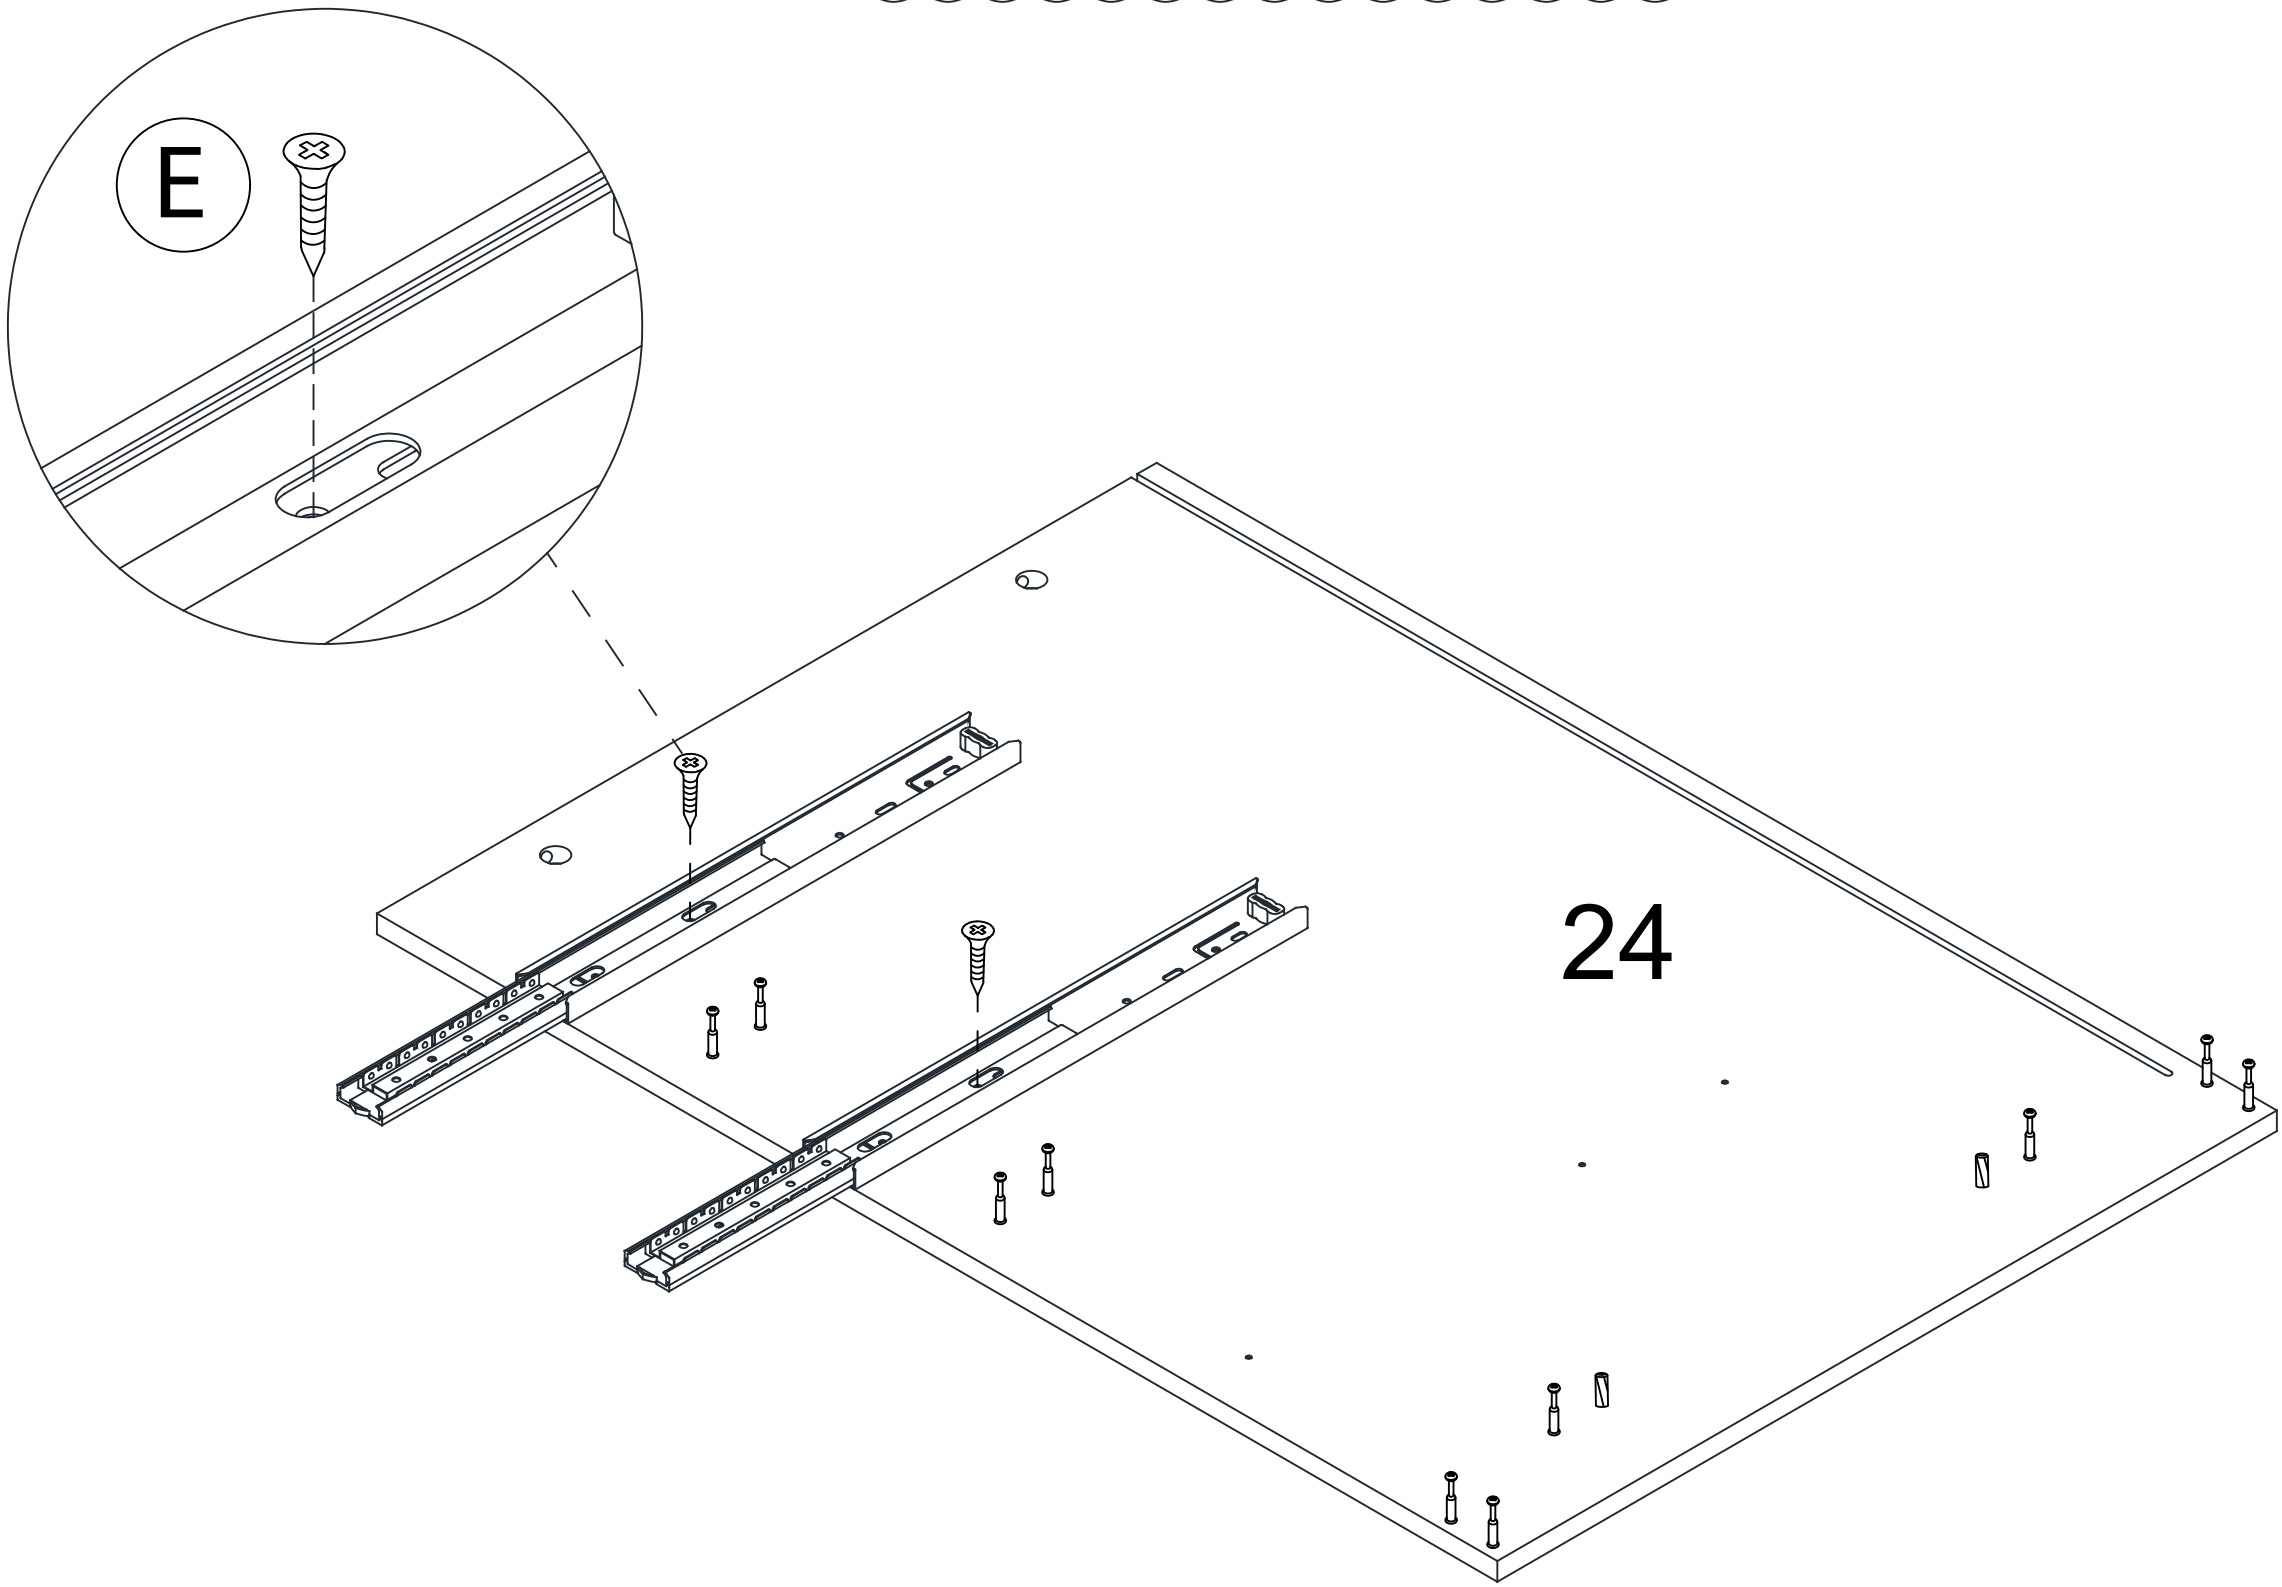


Step 39


F




x1




x2

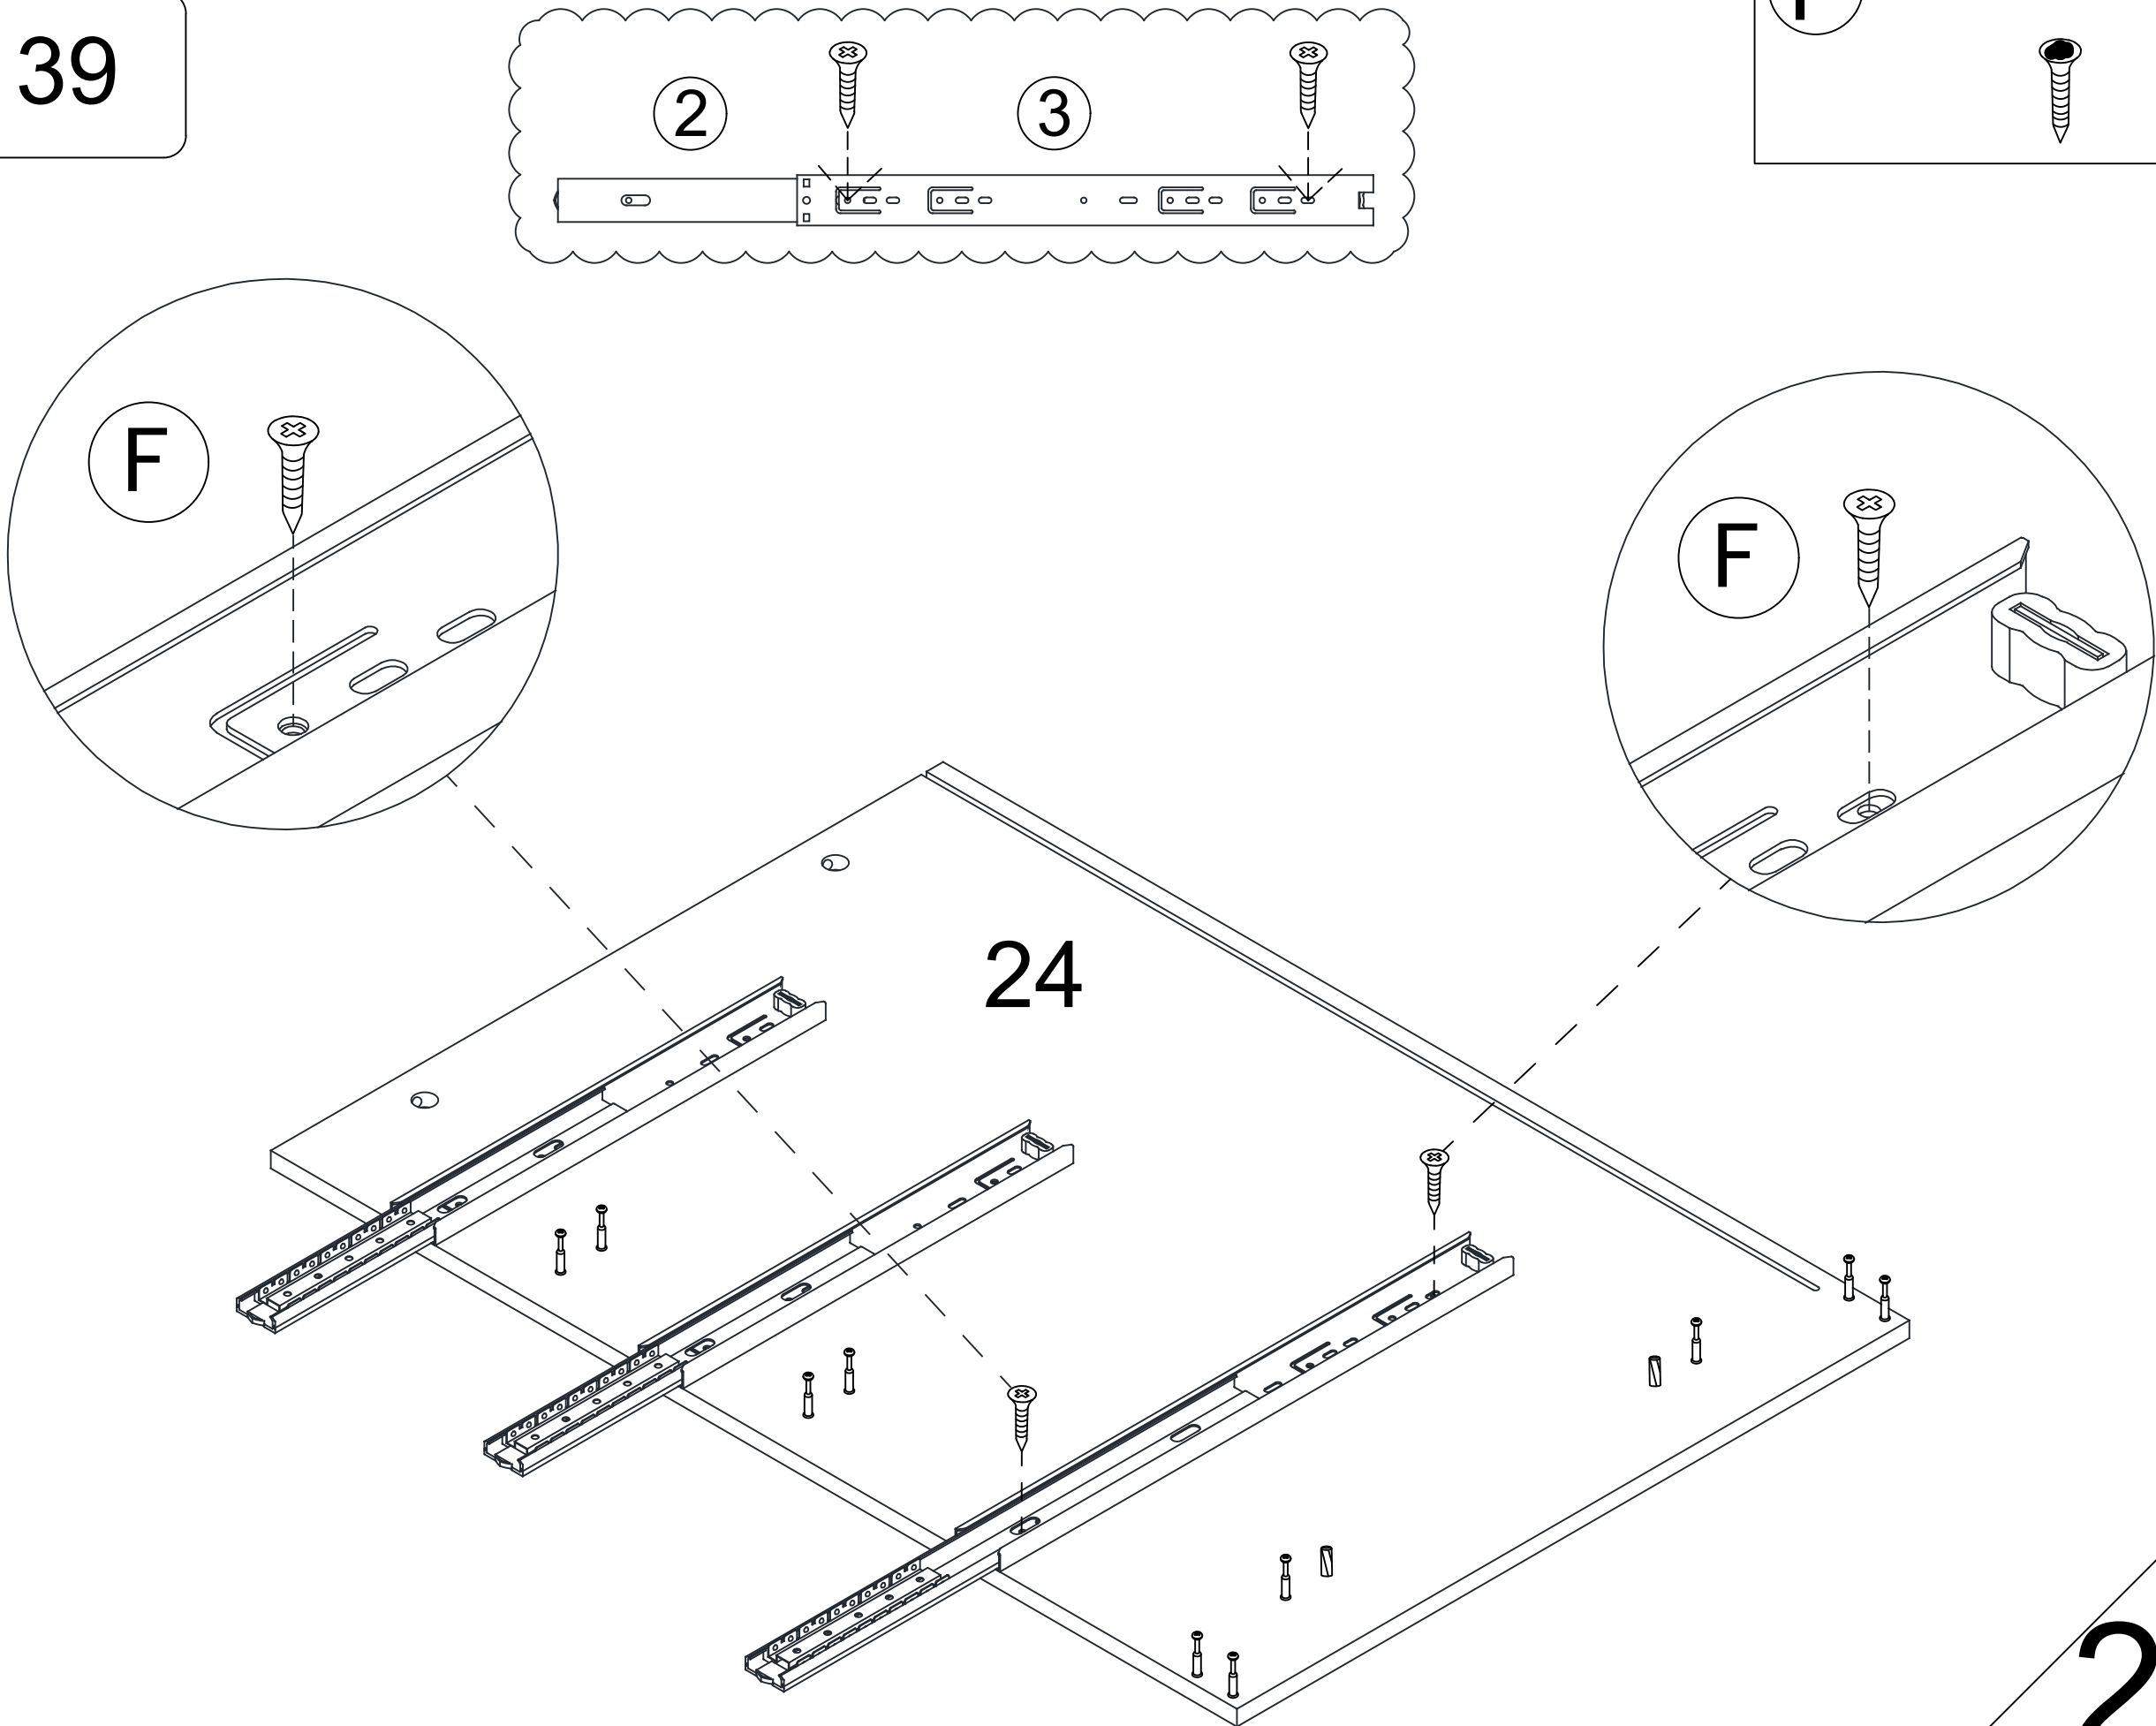


Step 40

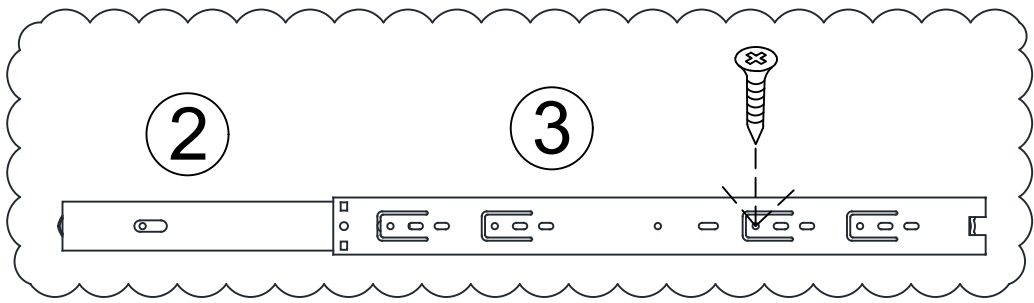

F




x1

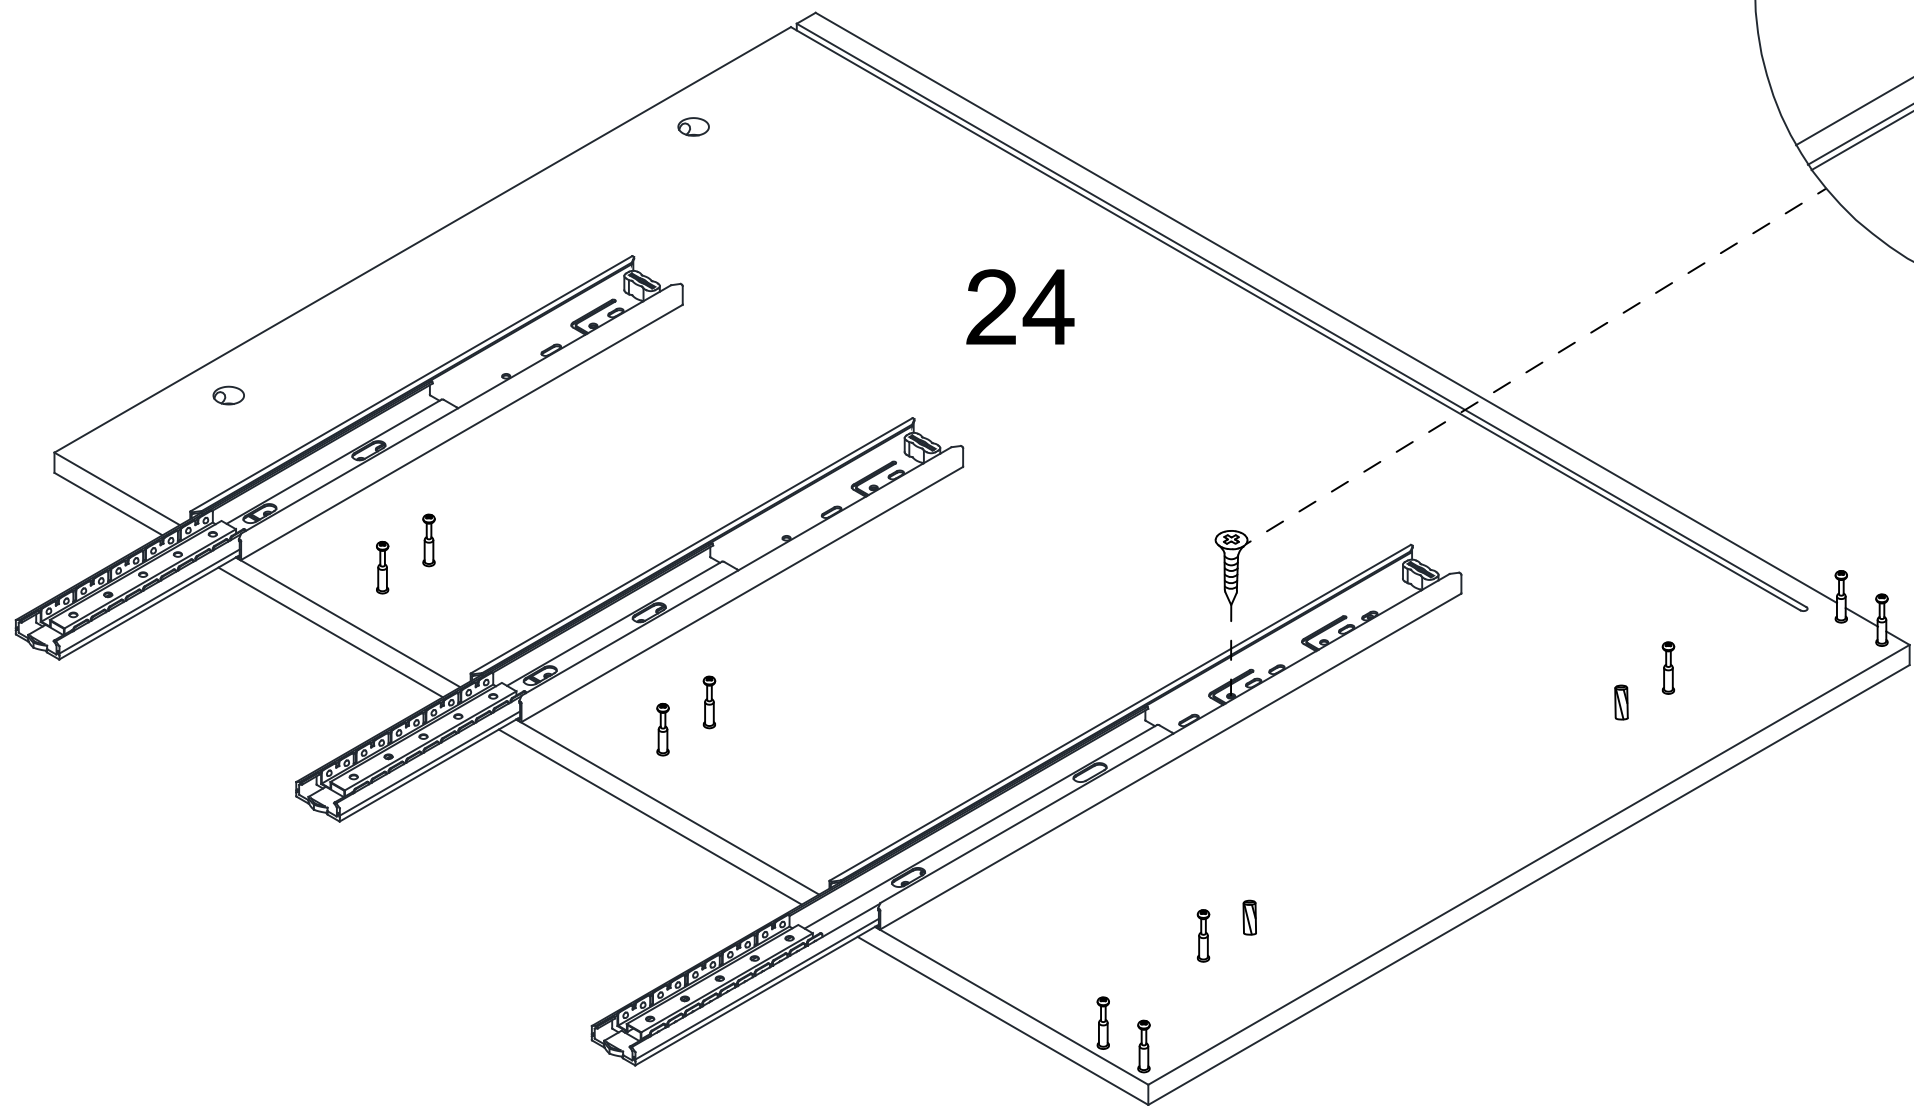


Step 41

B

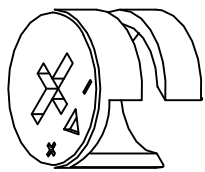


x4

L

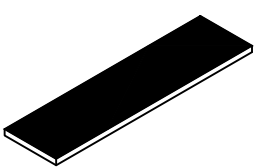


x2


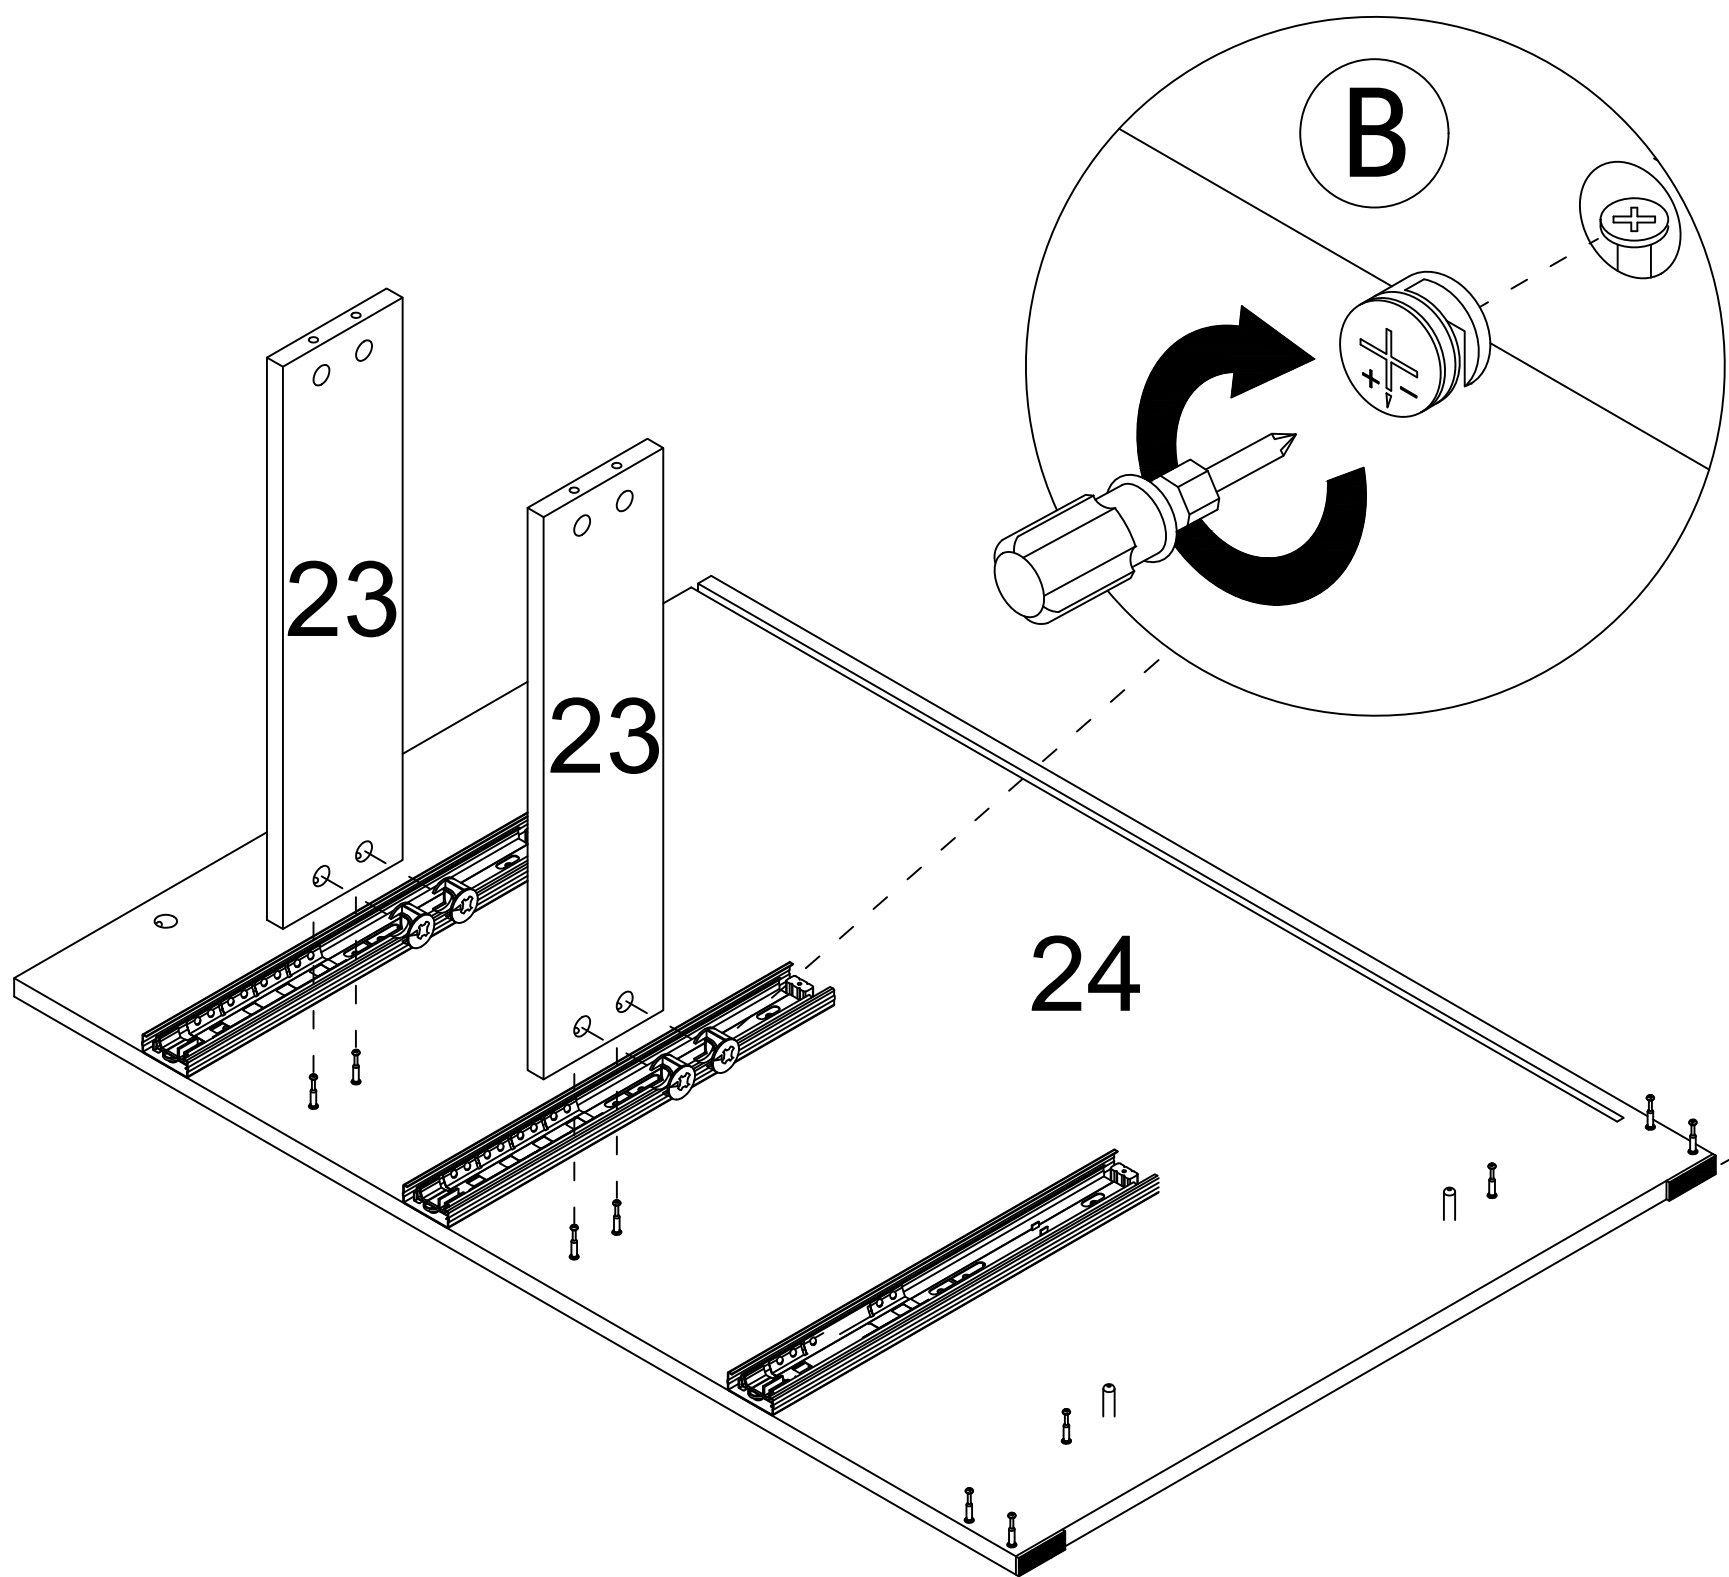


Step 42

B

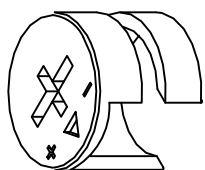


x2

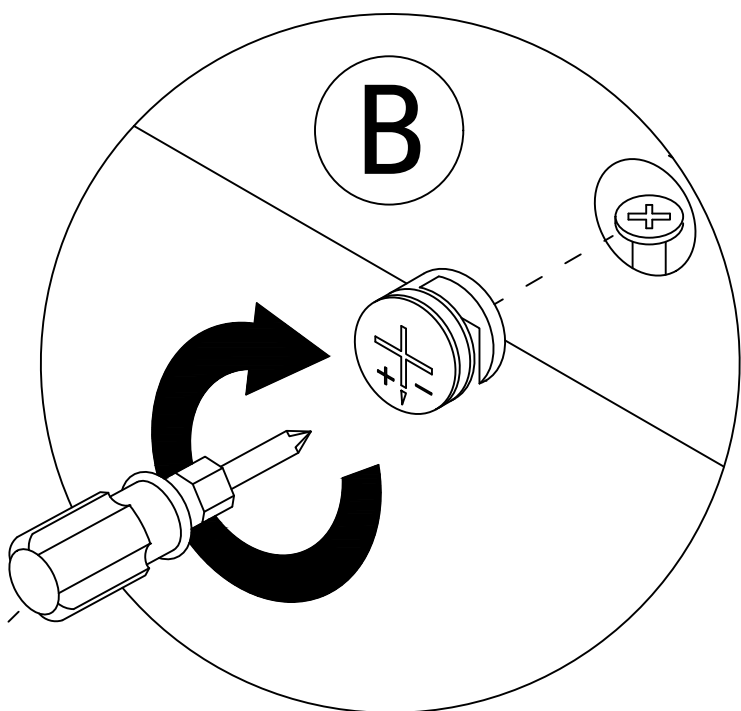
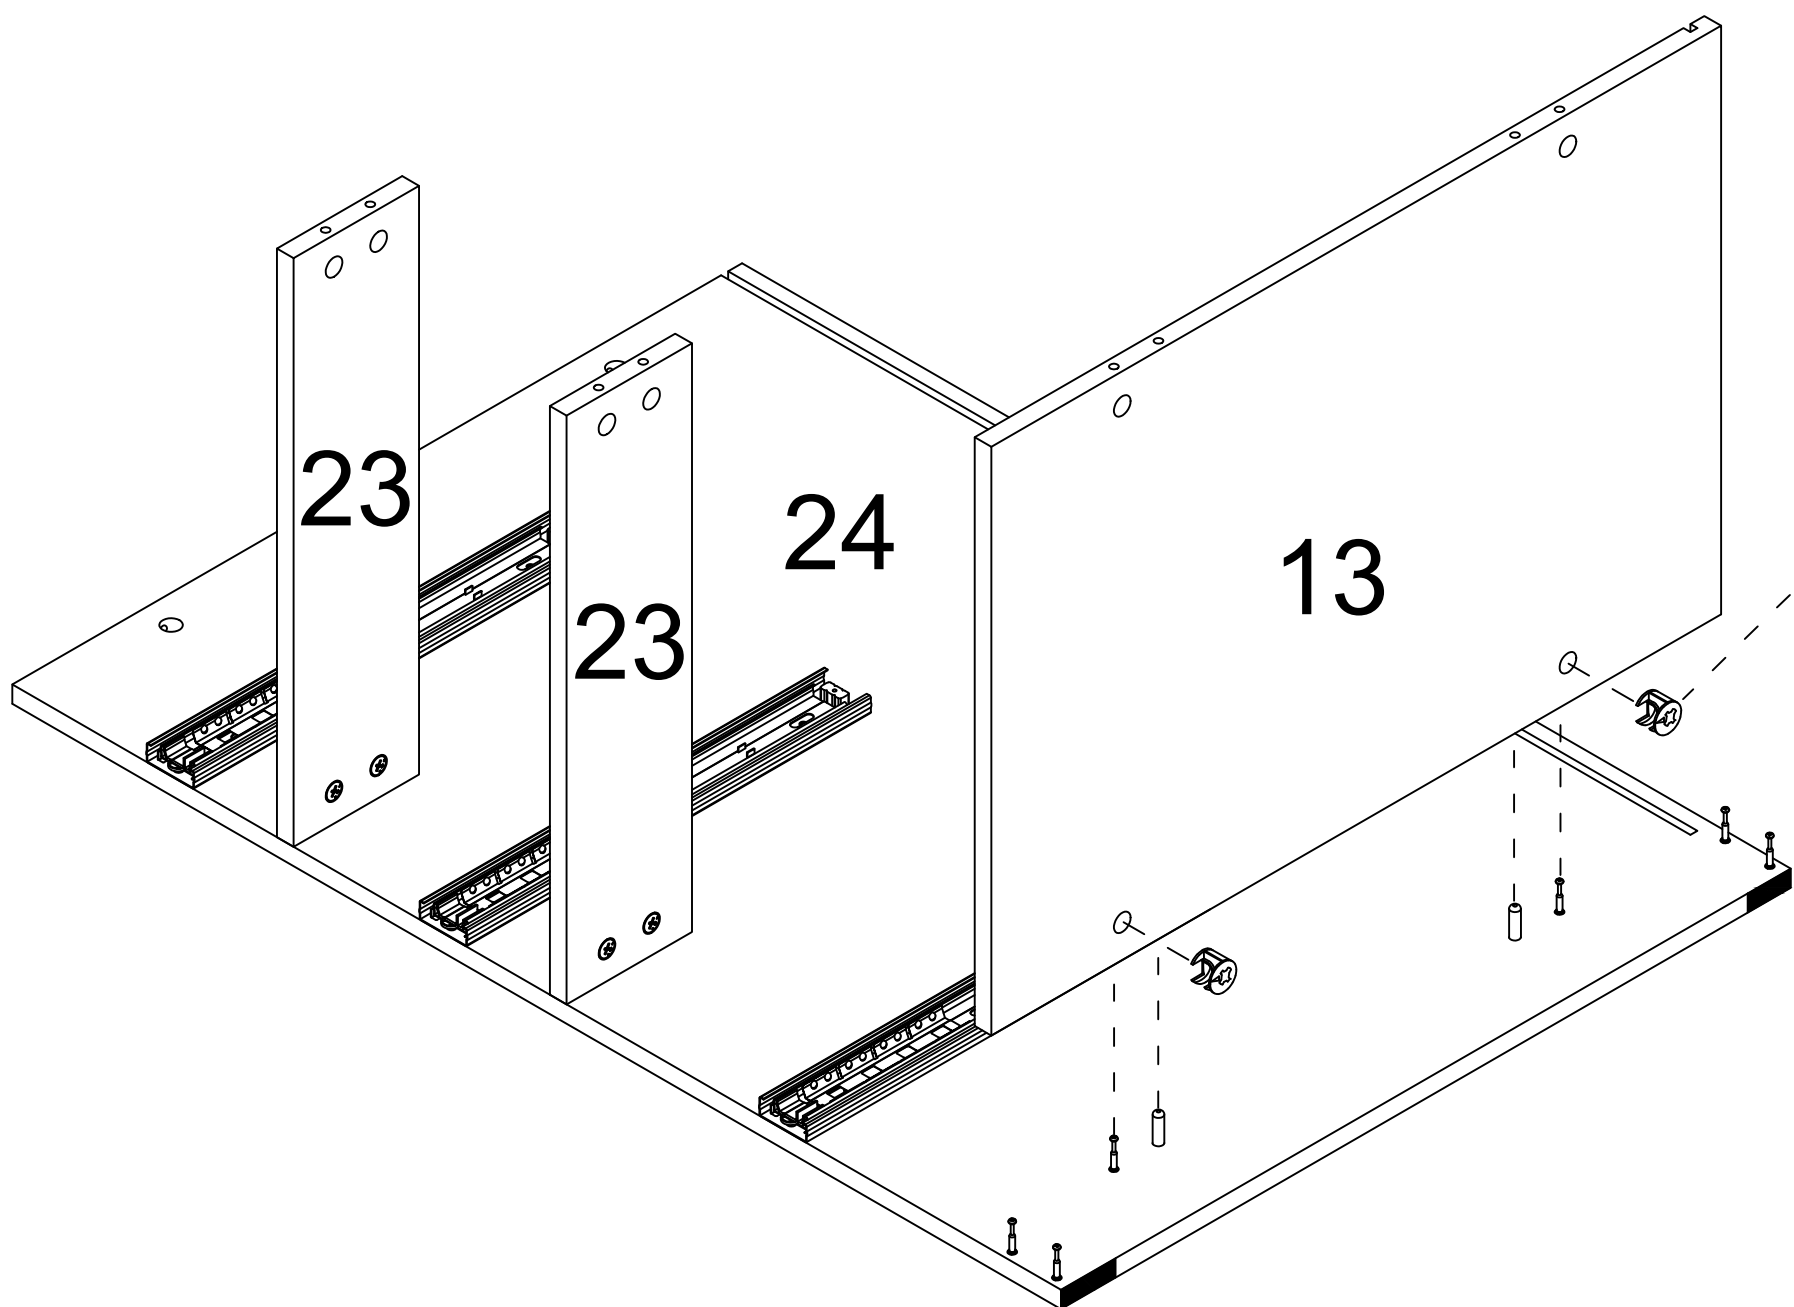


Step 43

B

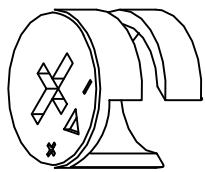

x4

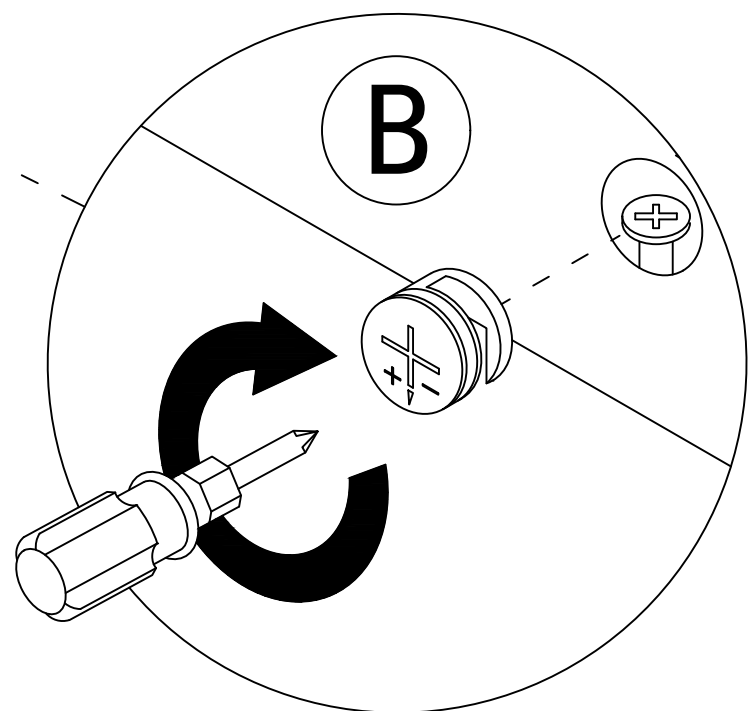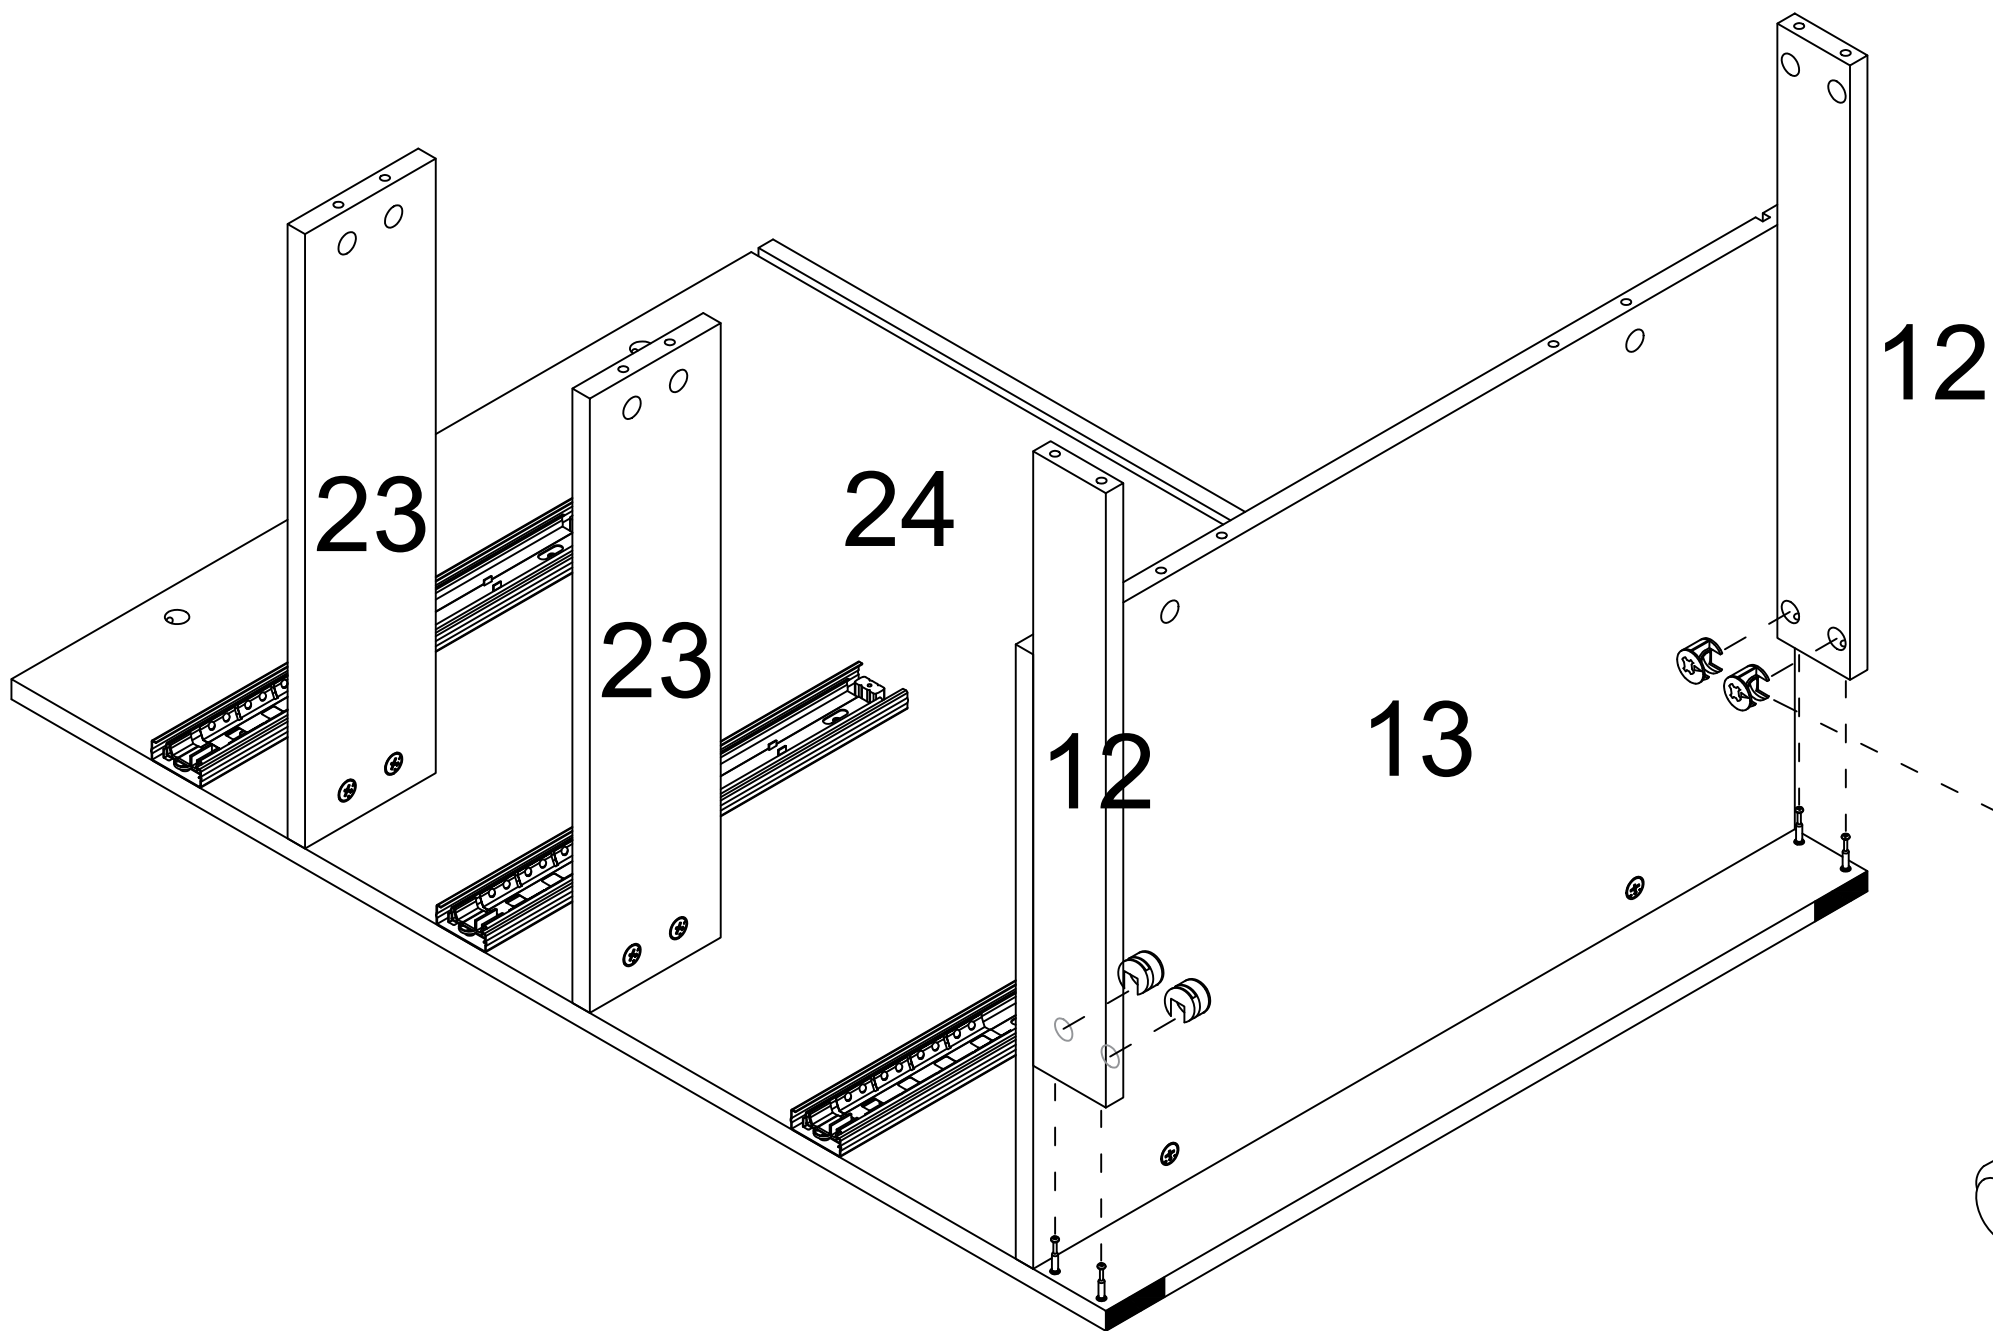


Step 44

C




x2

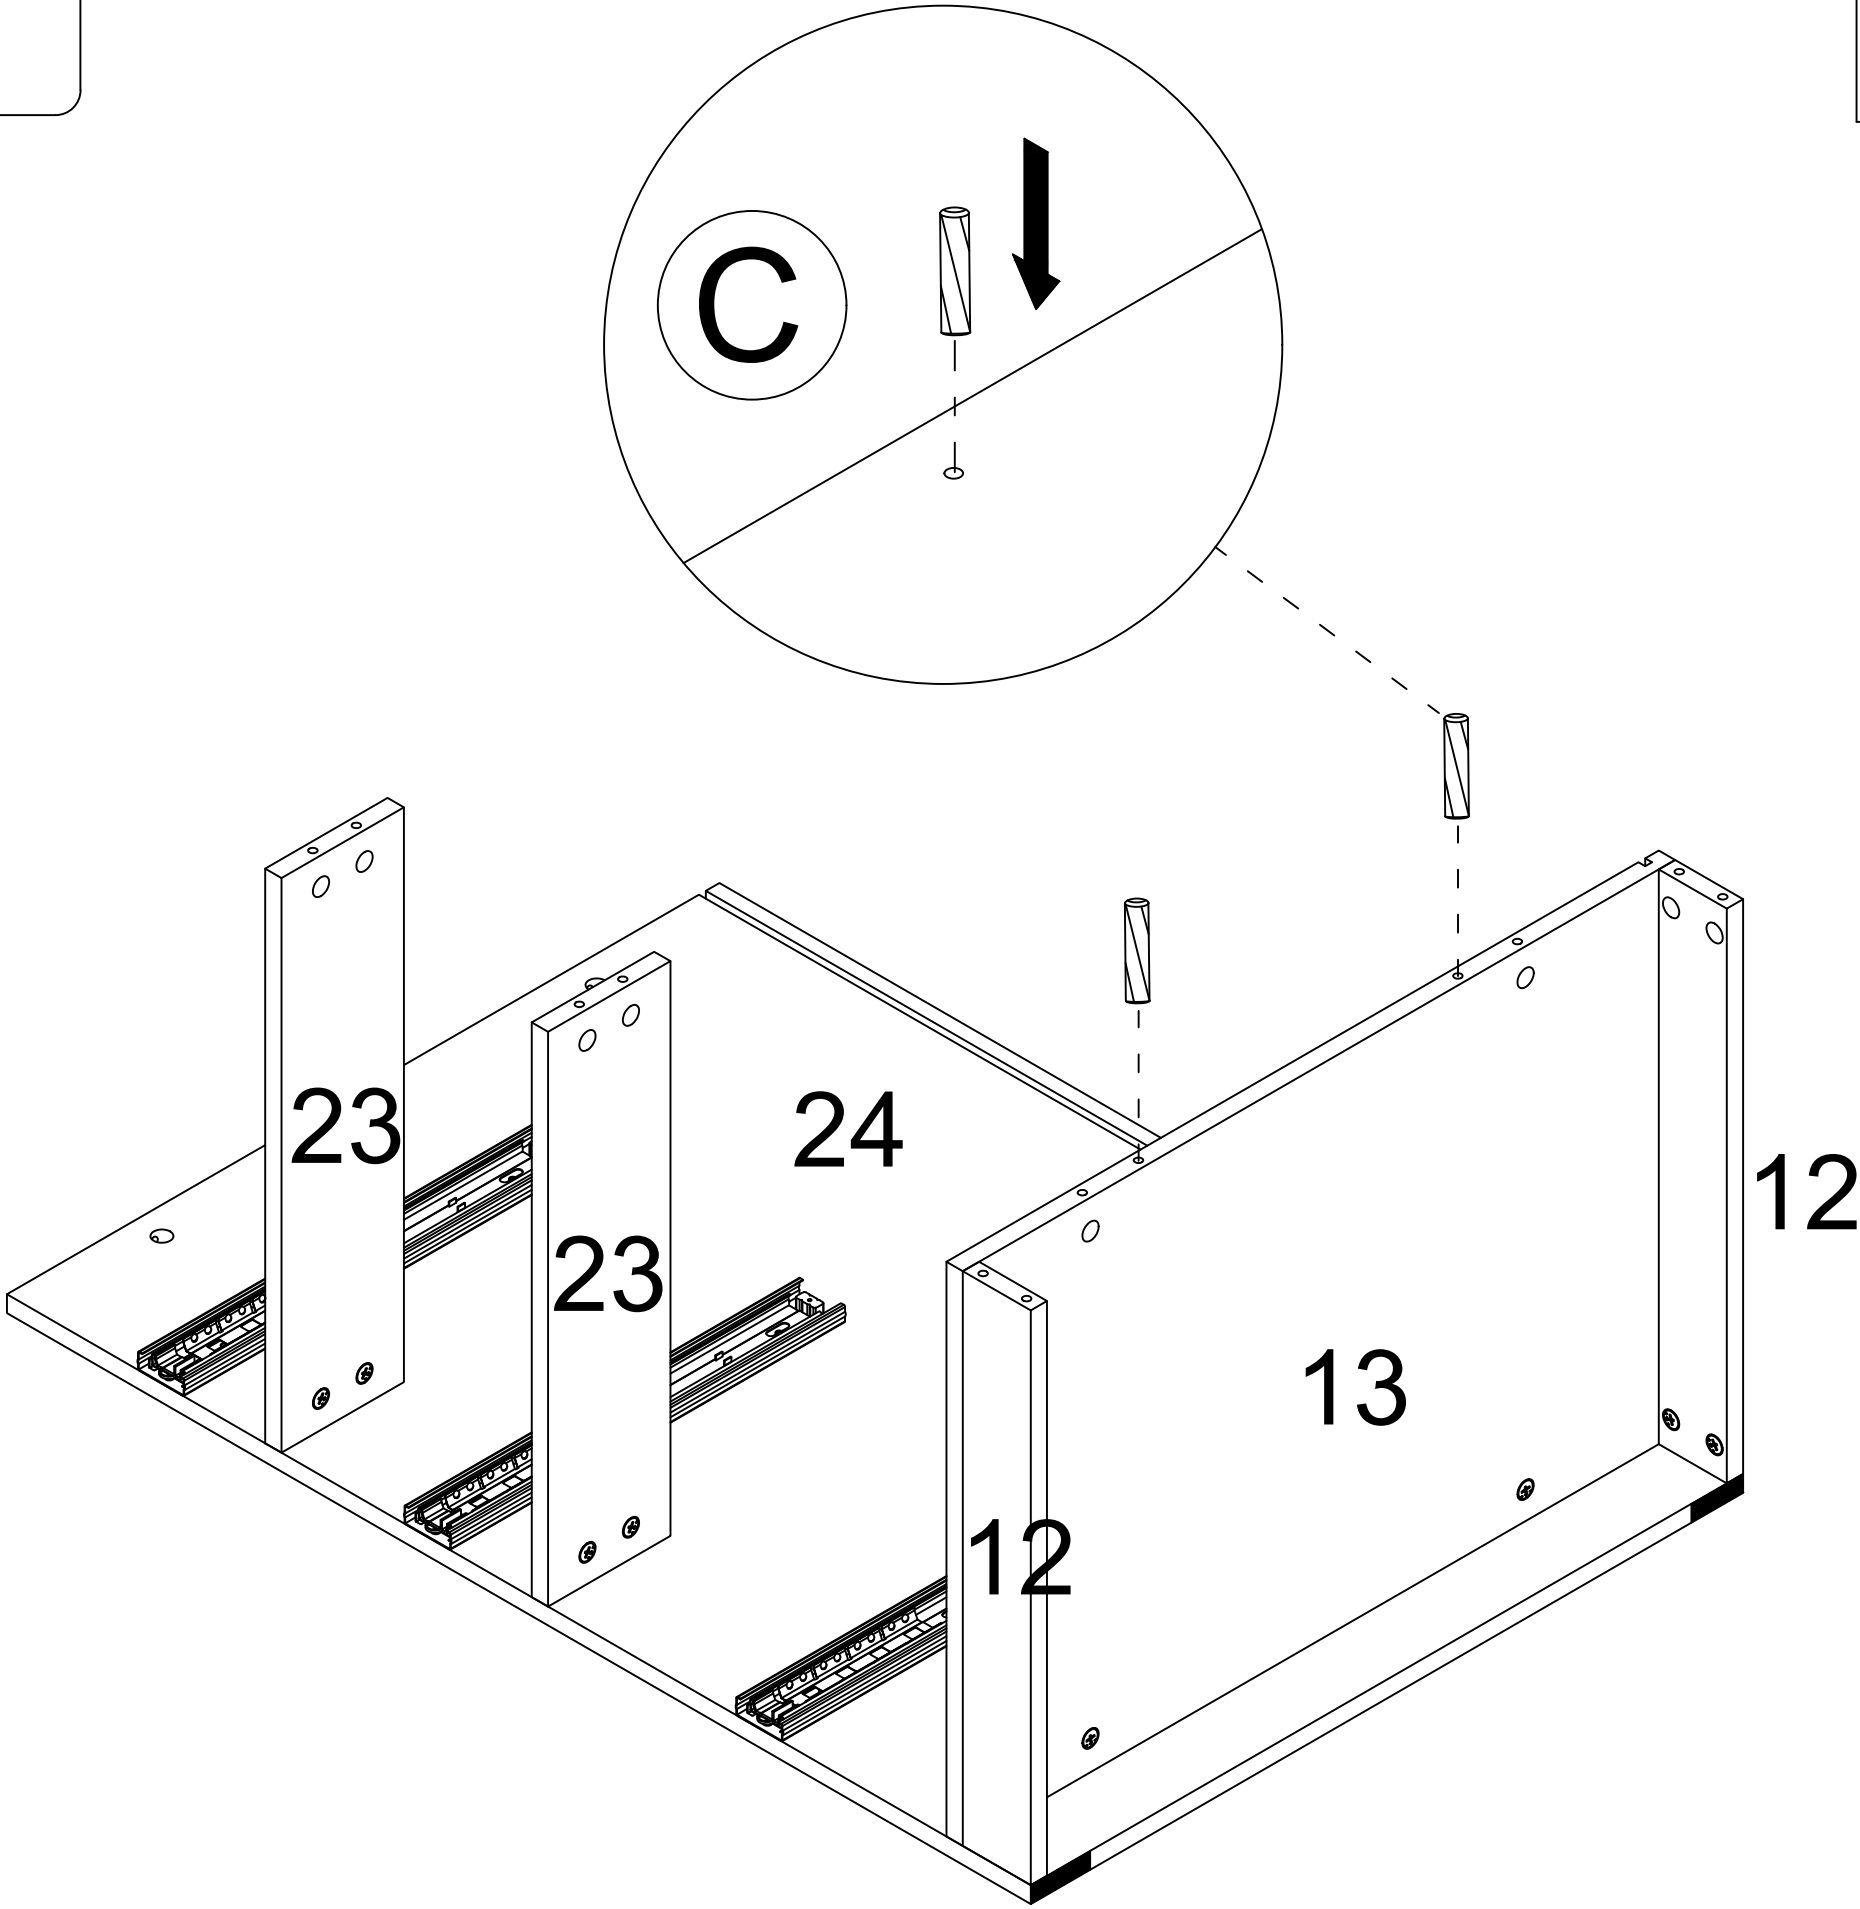


Step 45


B

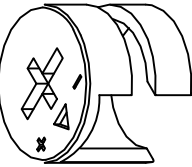





x10

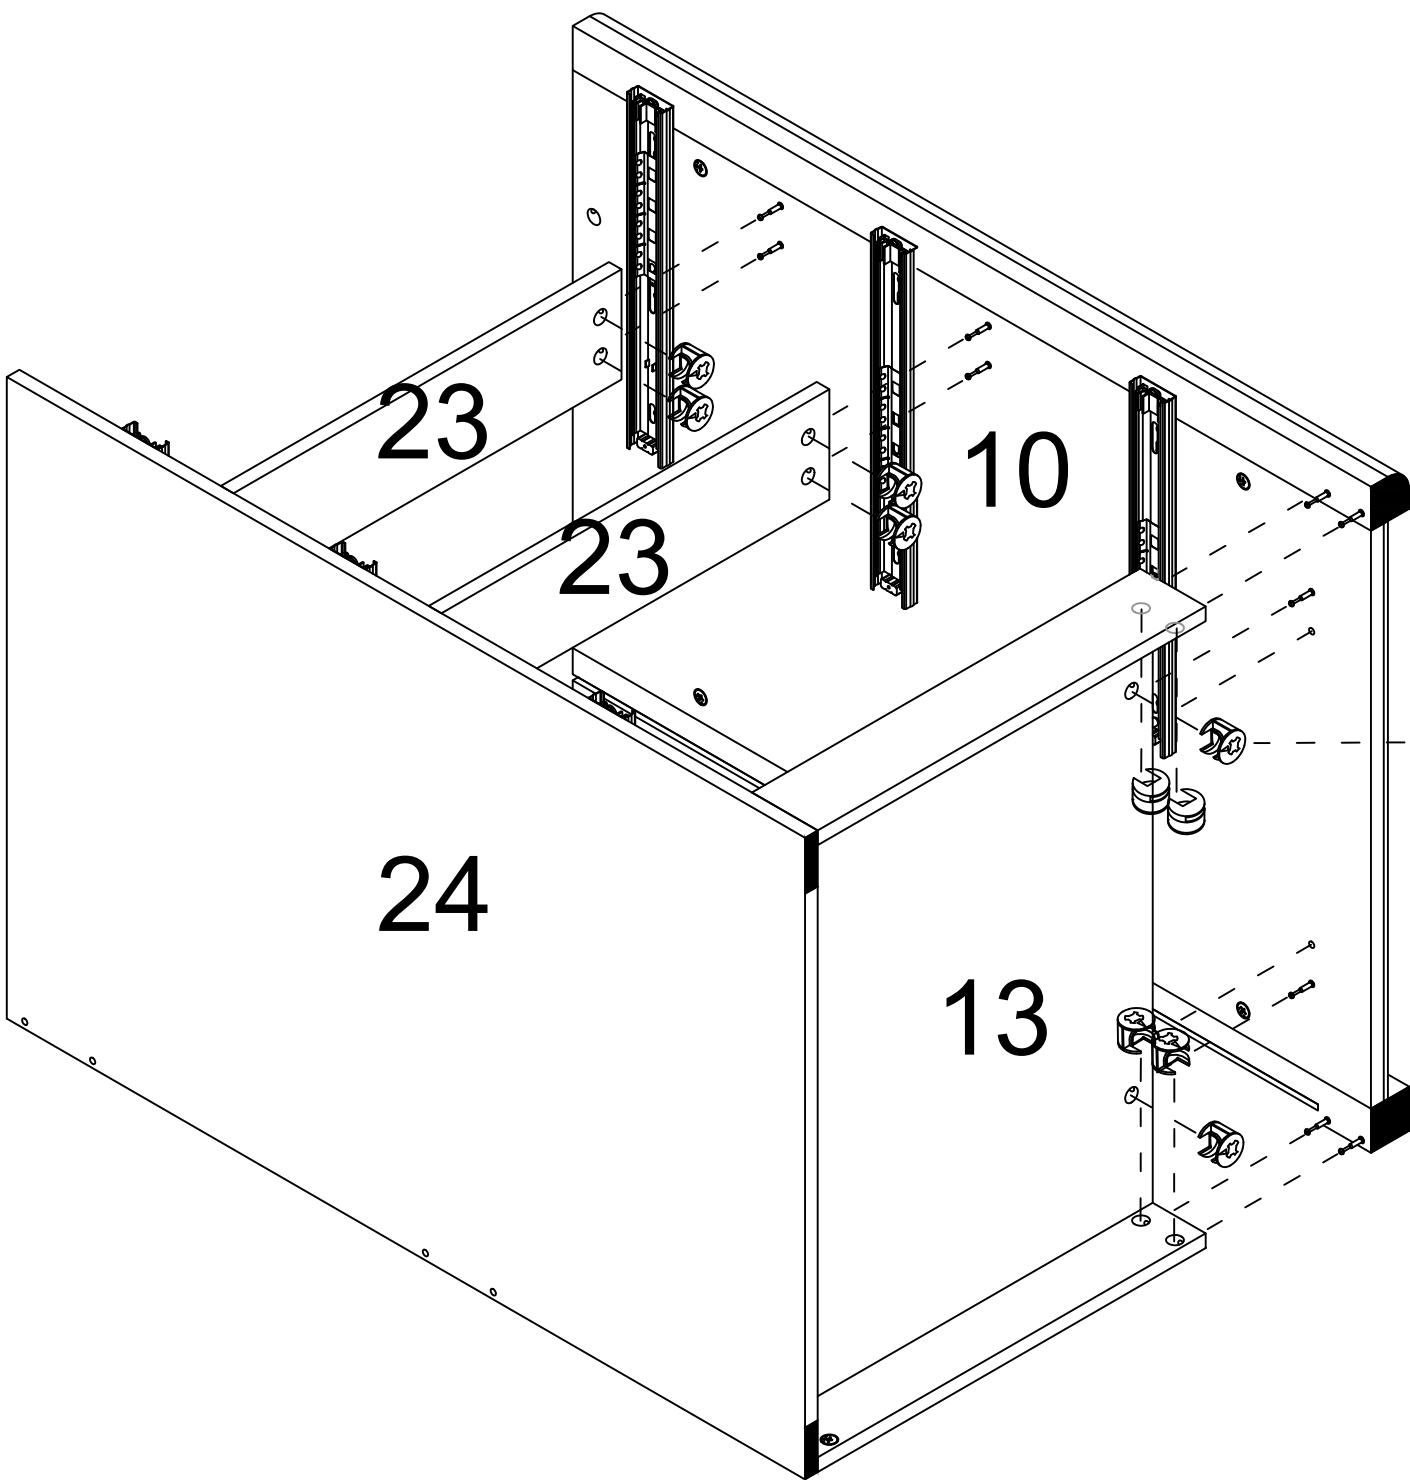

Step 46

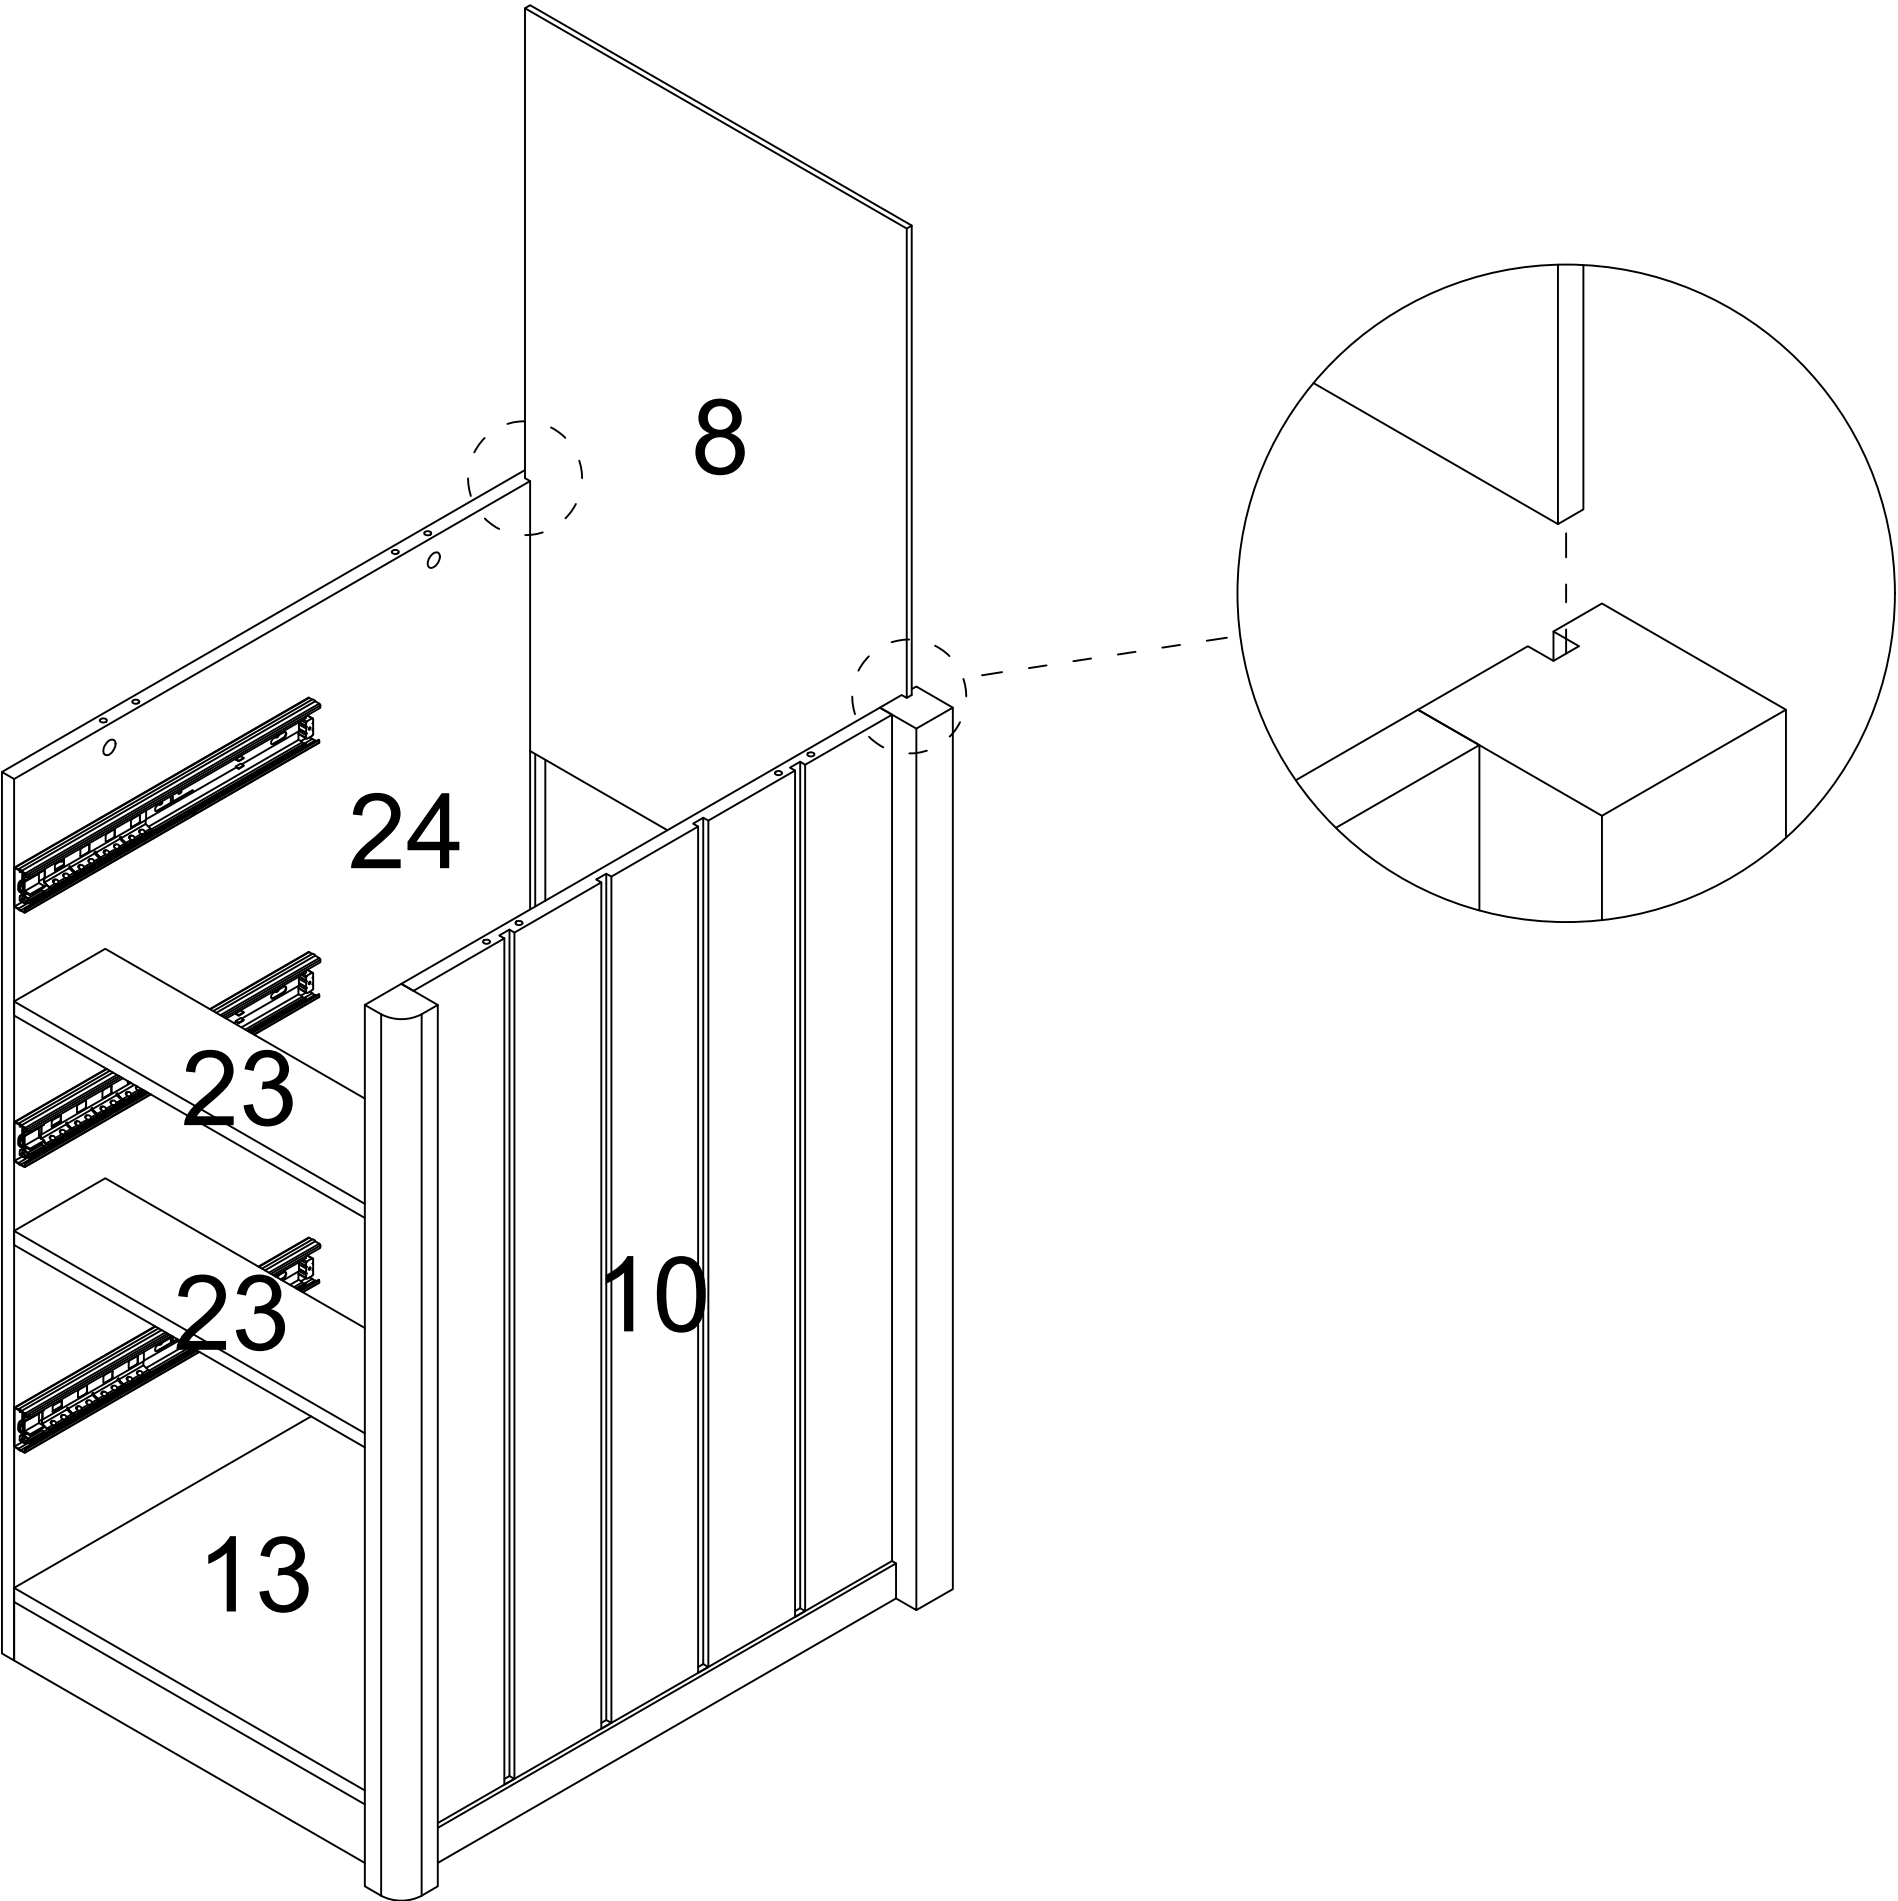

Step 47

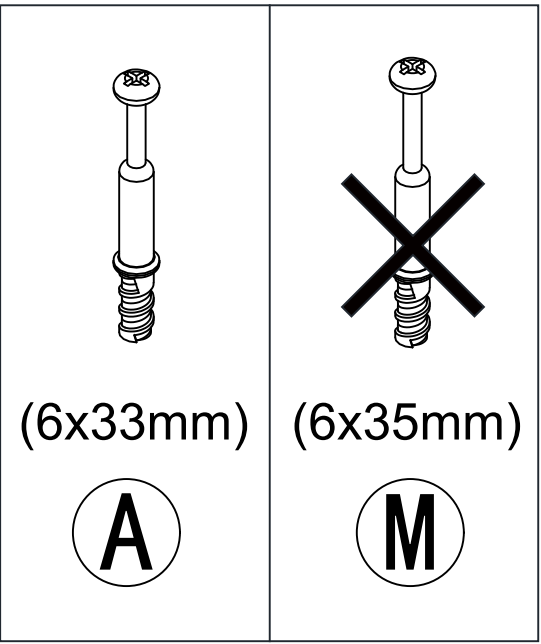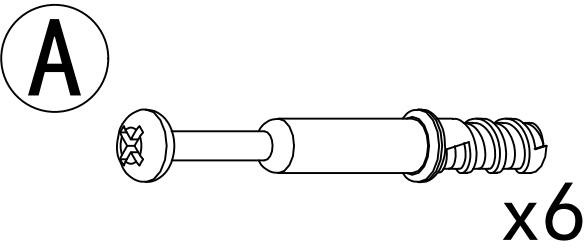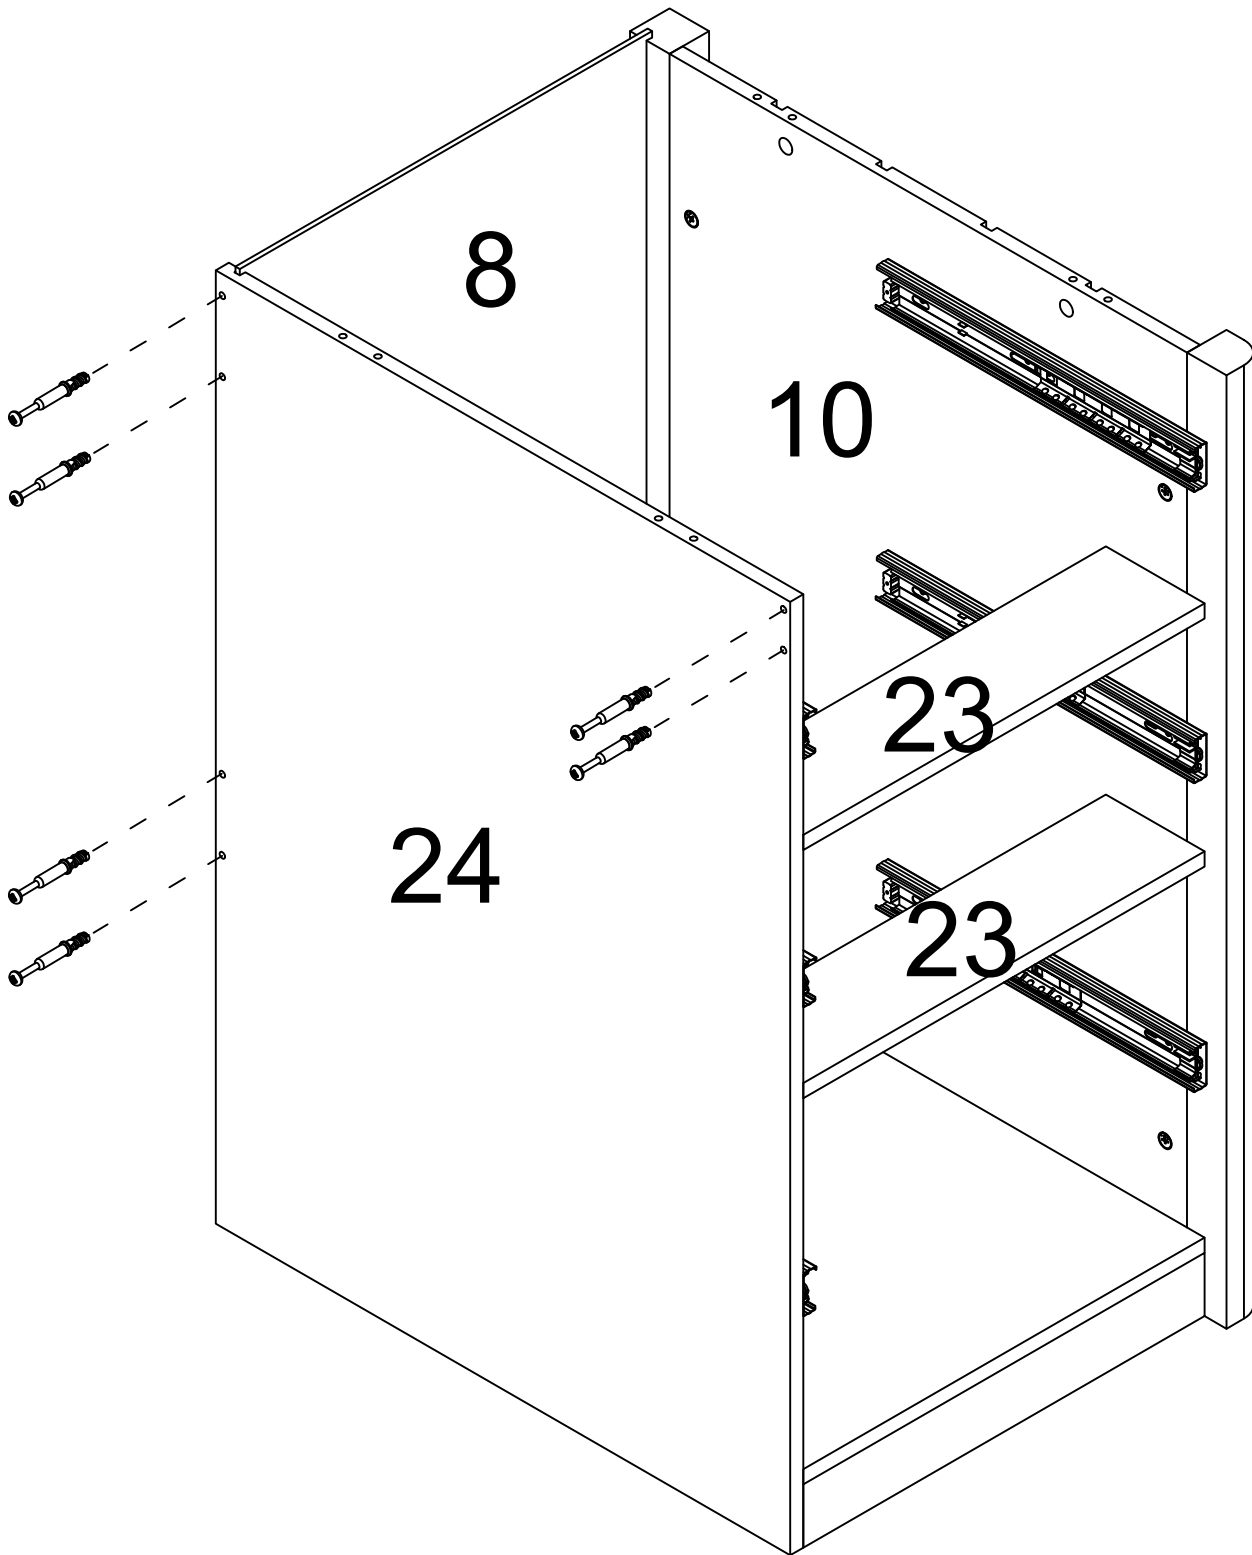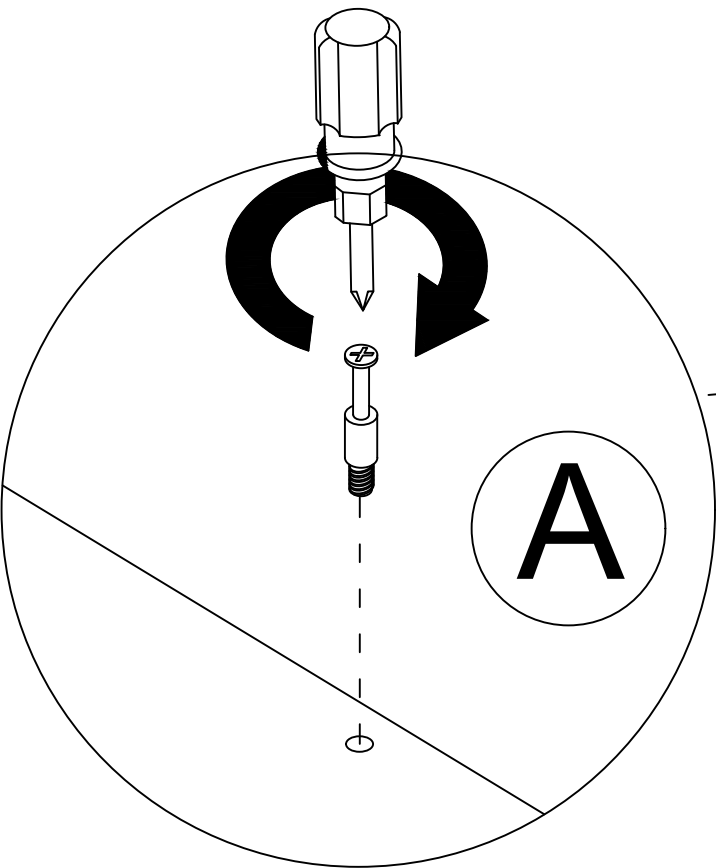


Step 48

B




x6

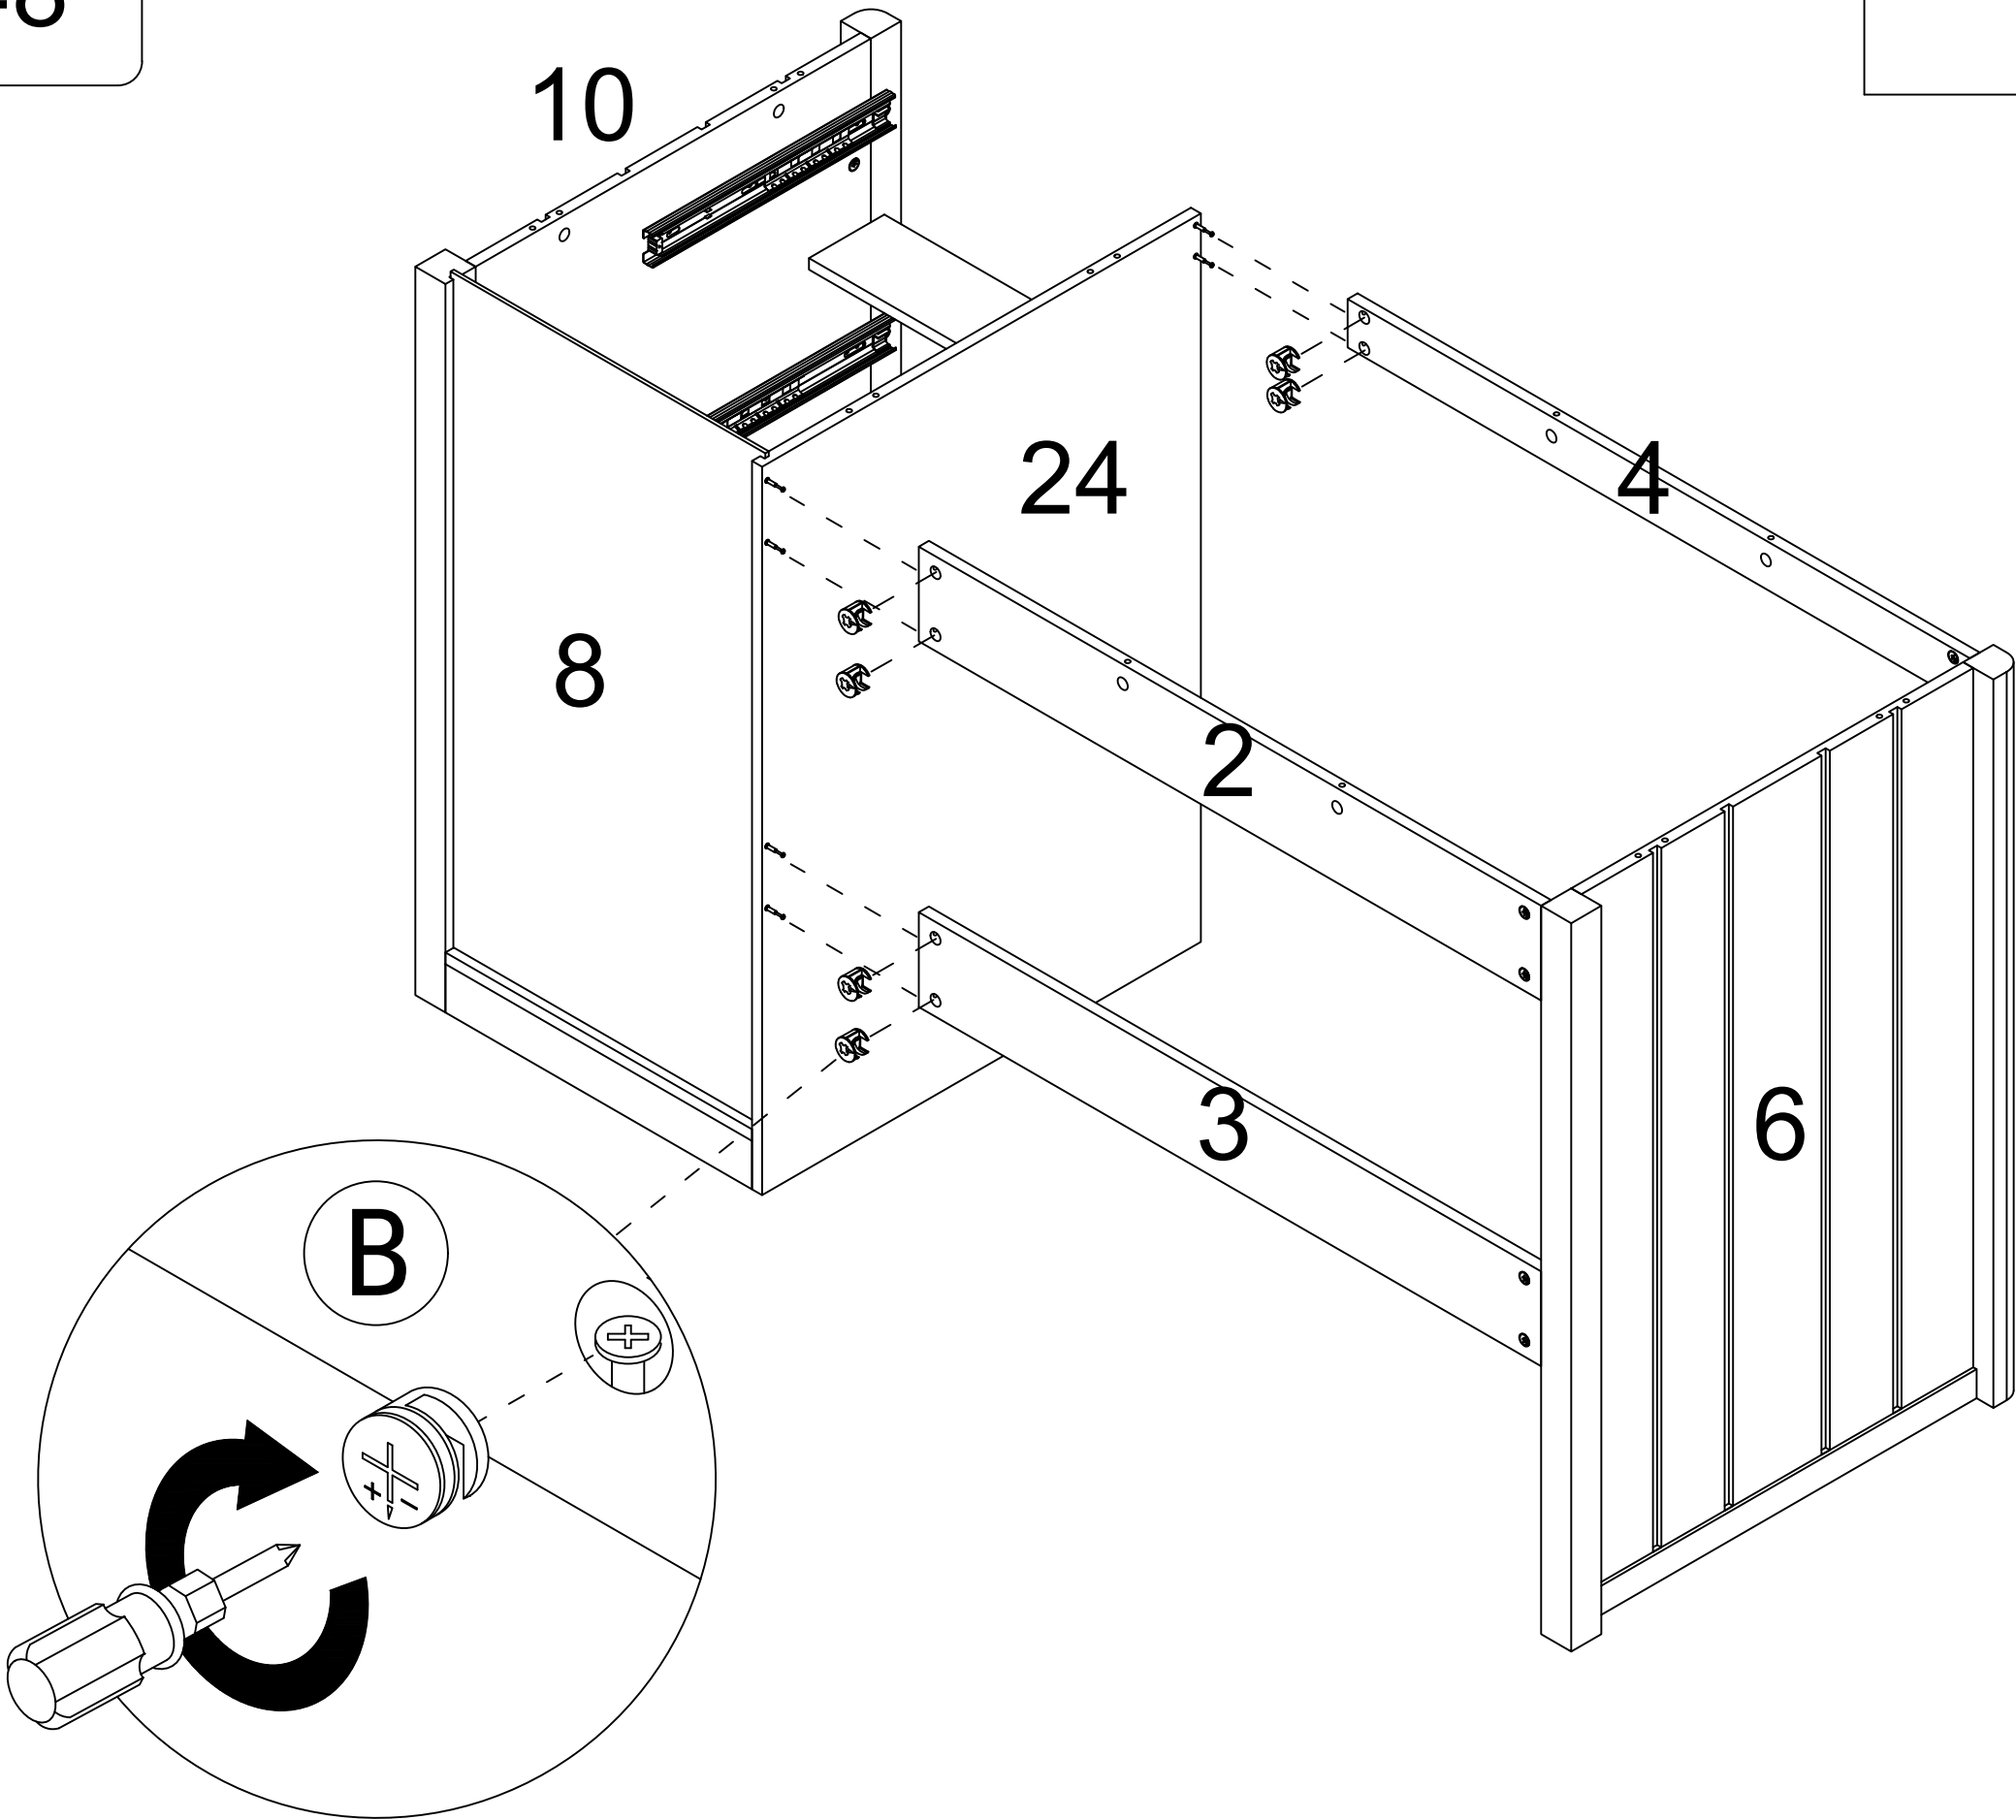




Step 49

A





x10


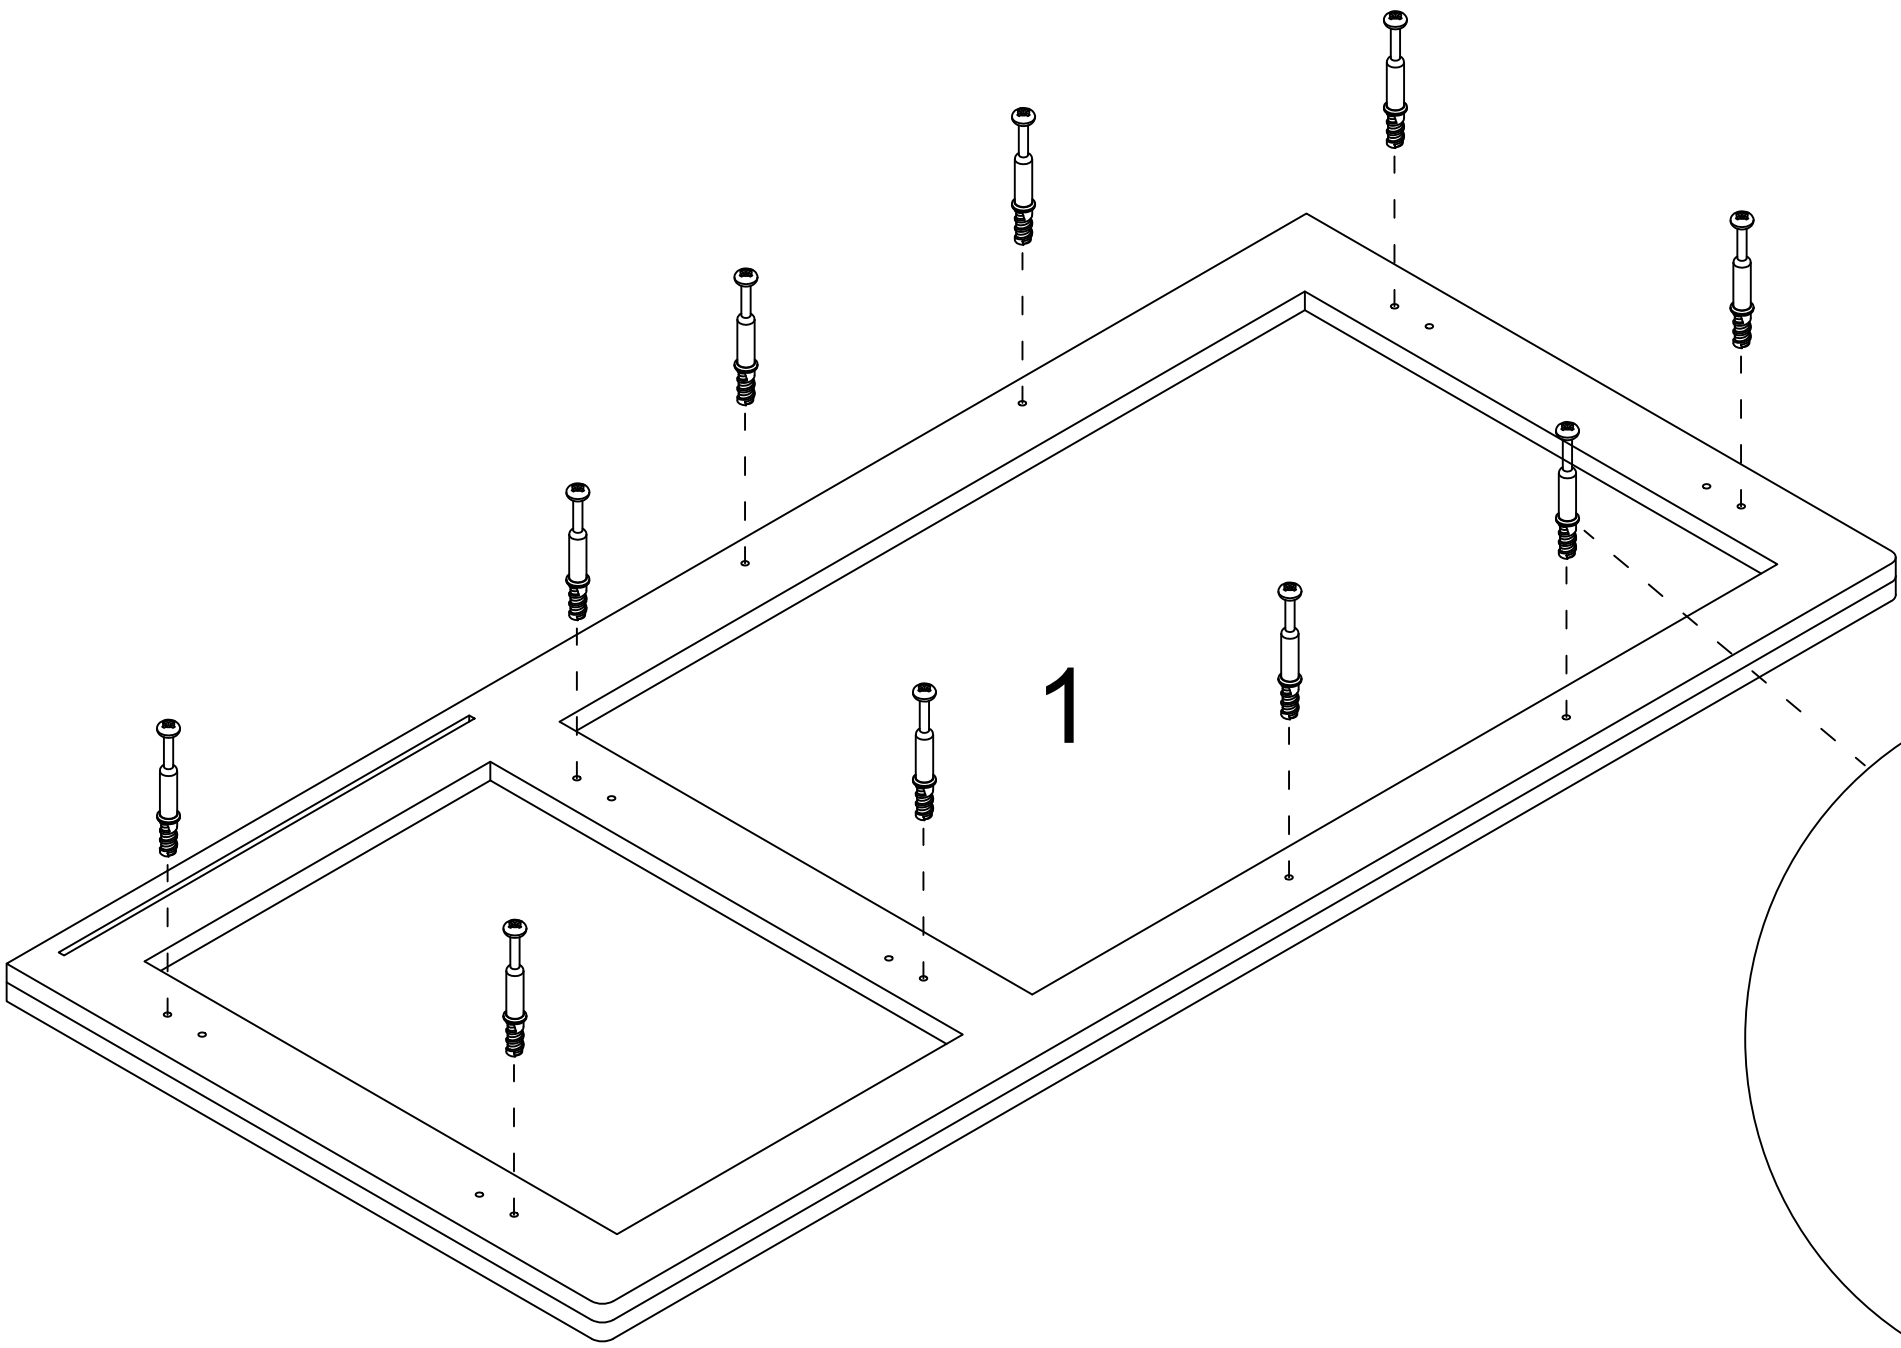


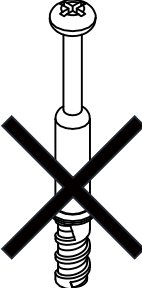	
(6x33mm)	(6x35mm)
A	M


Step 50

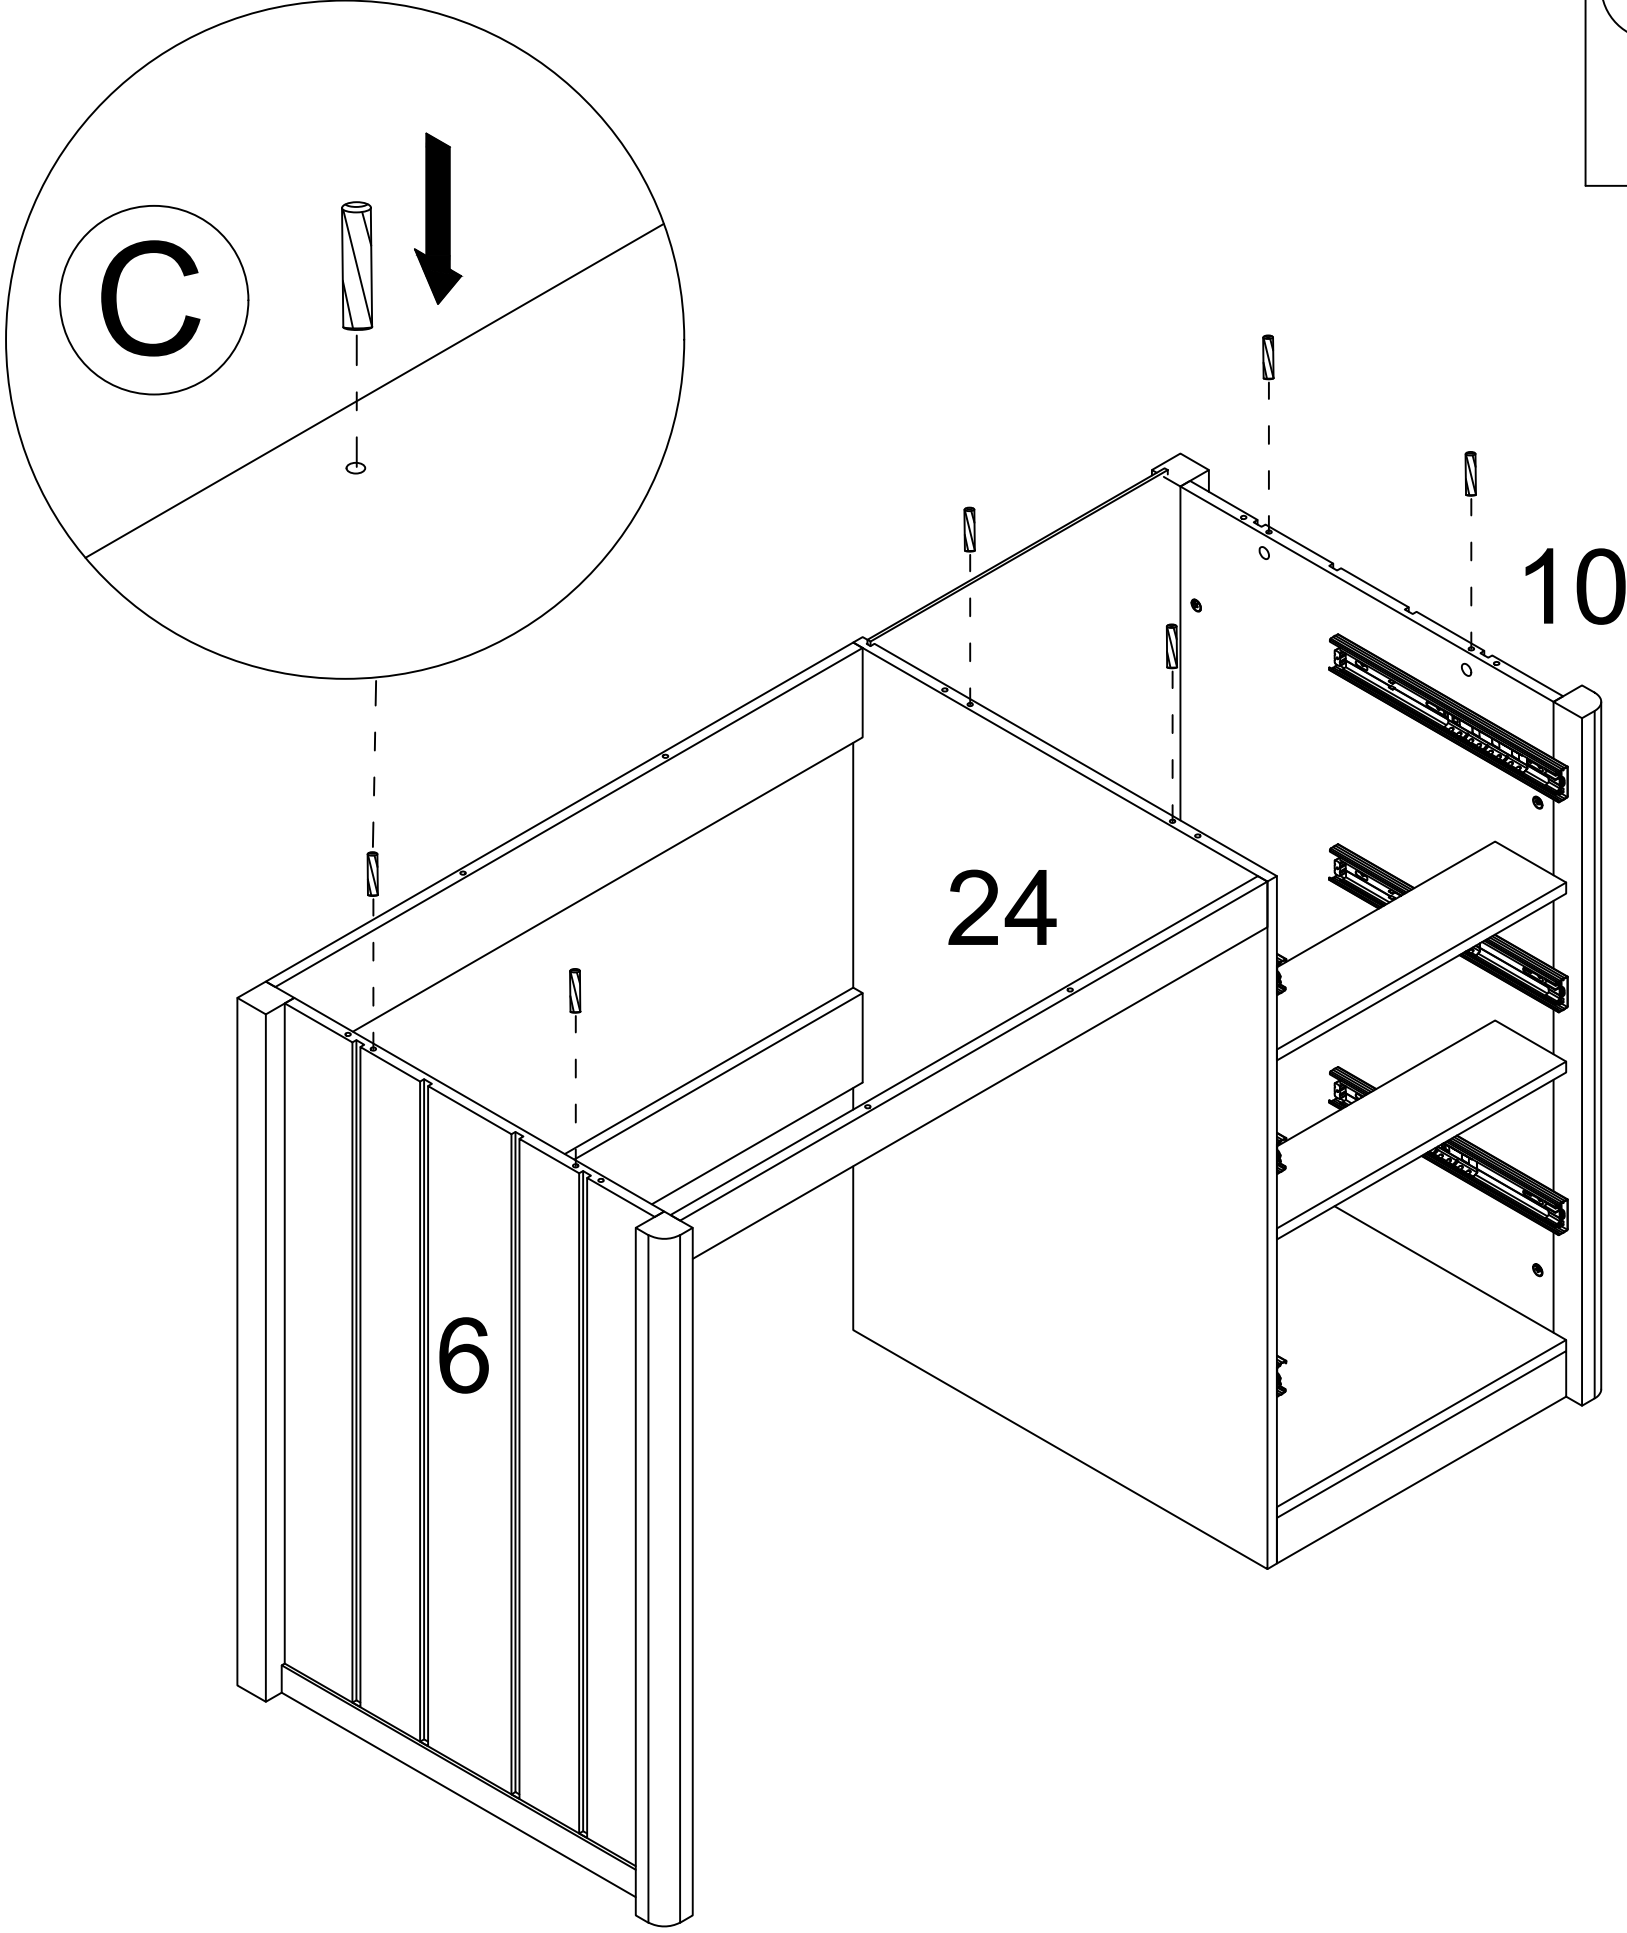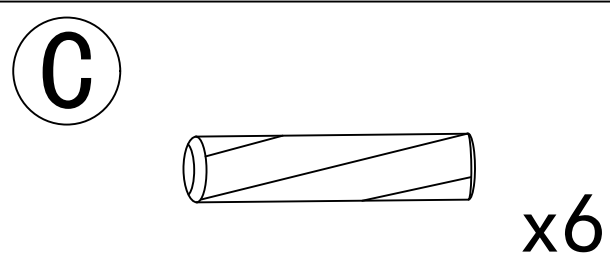


Step 51

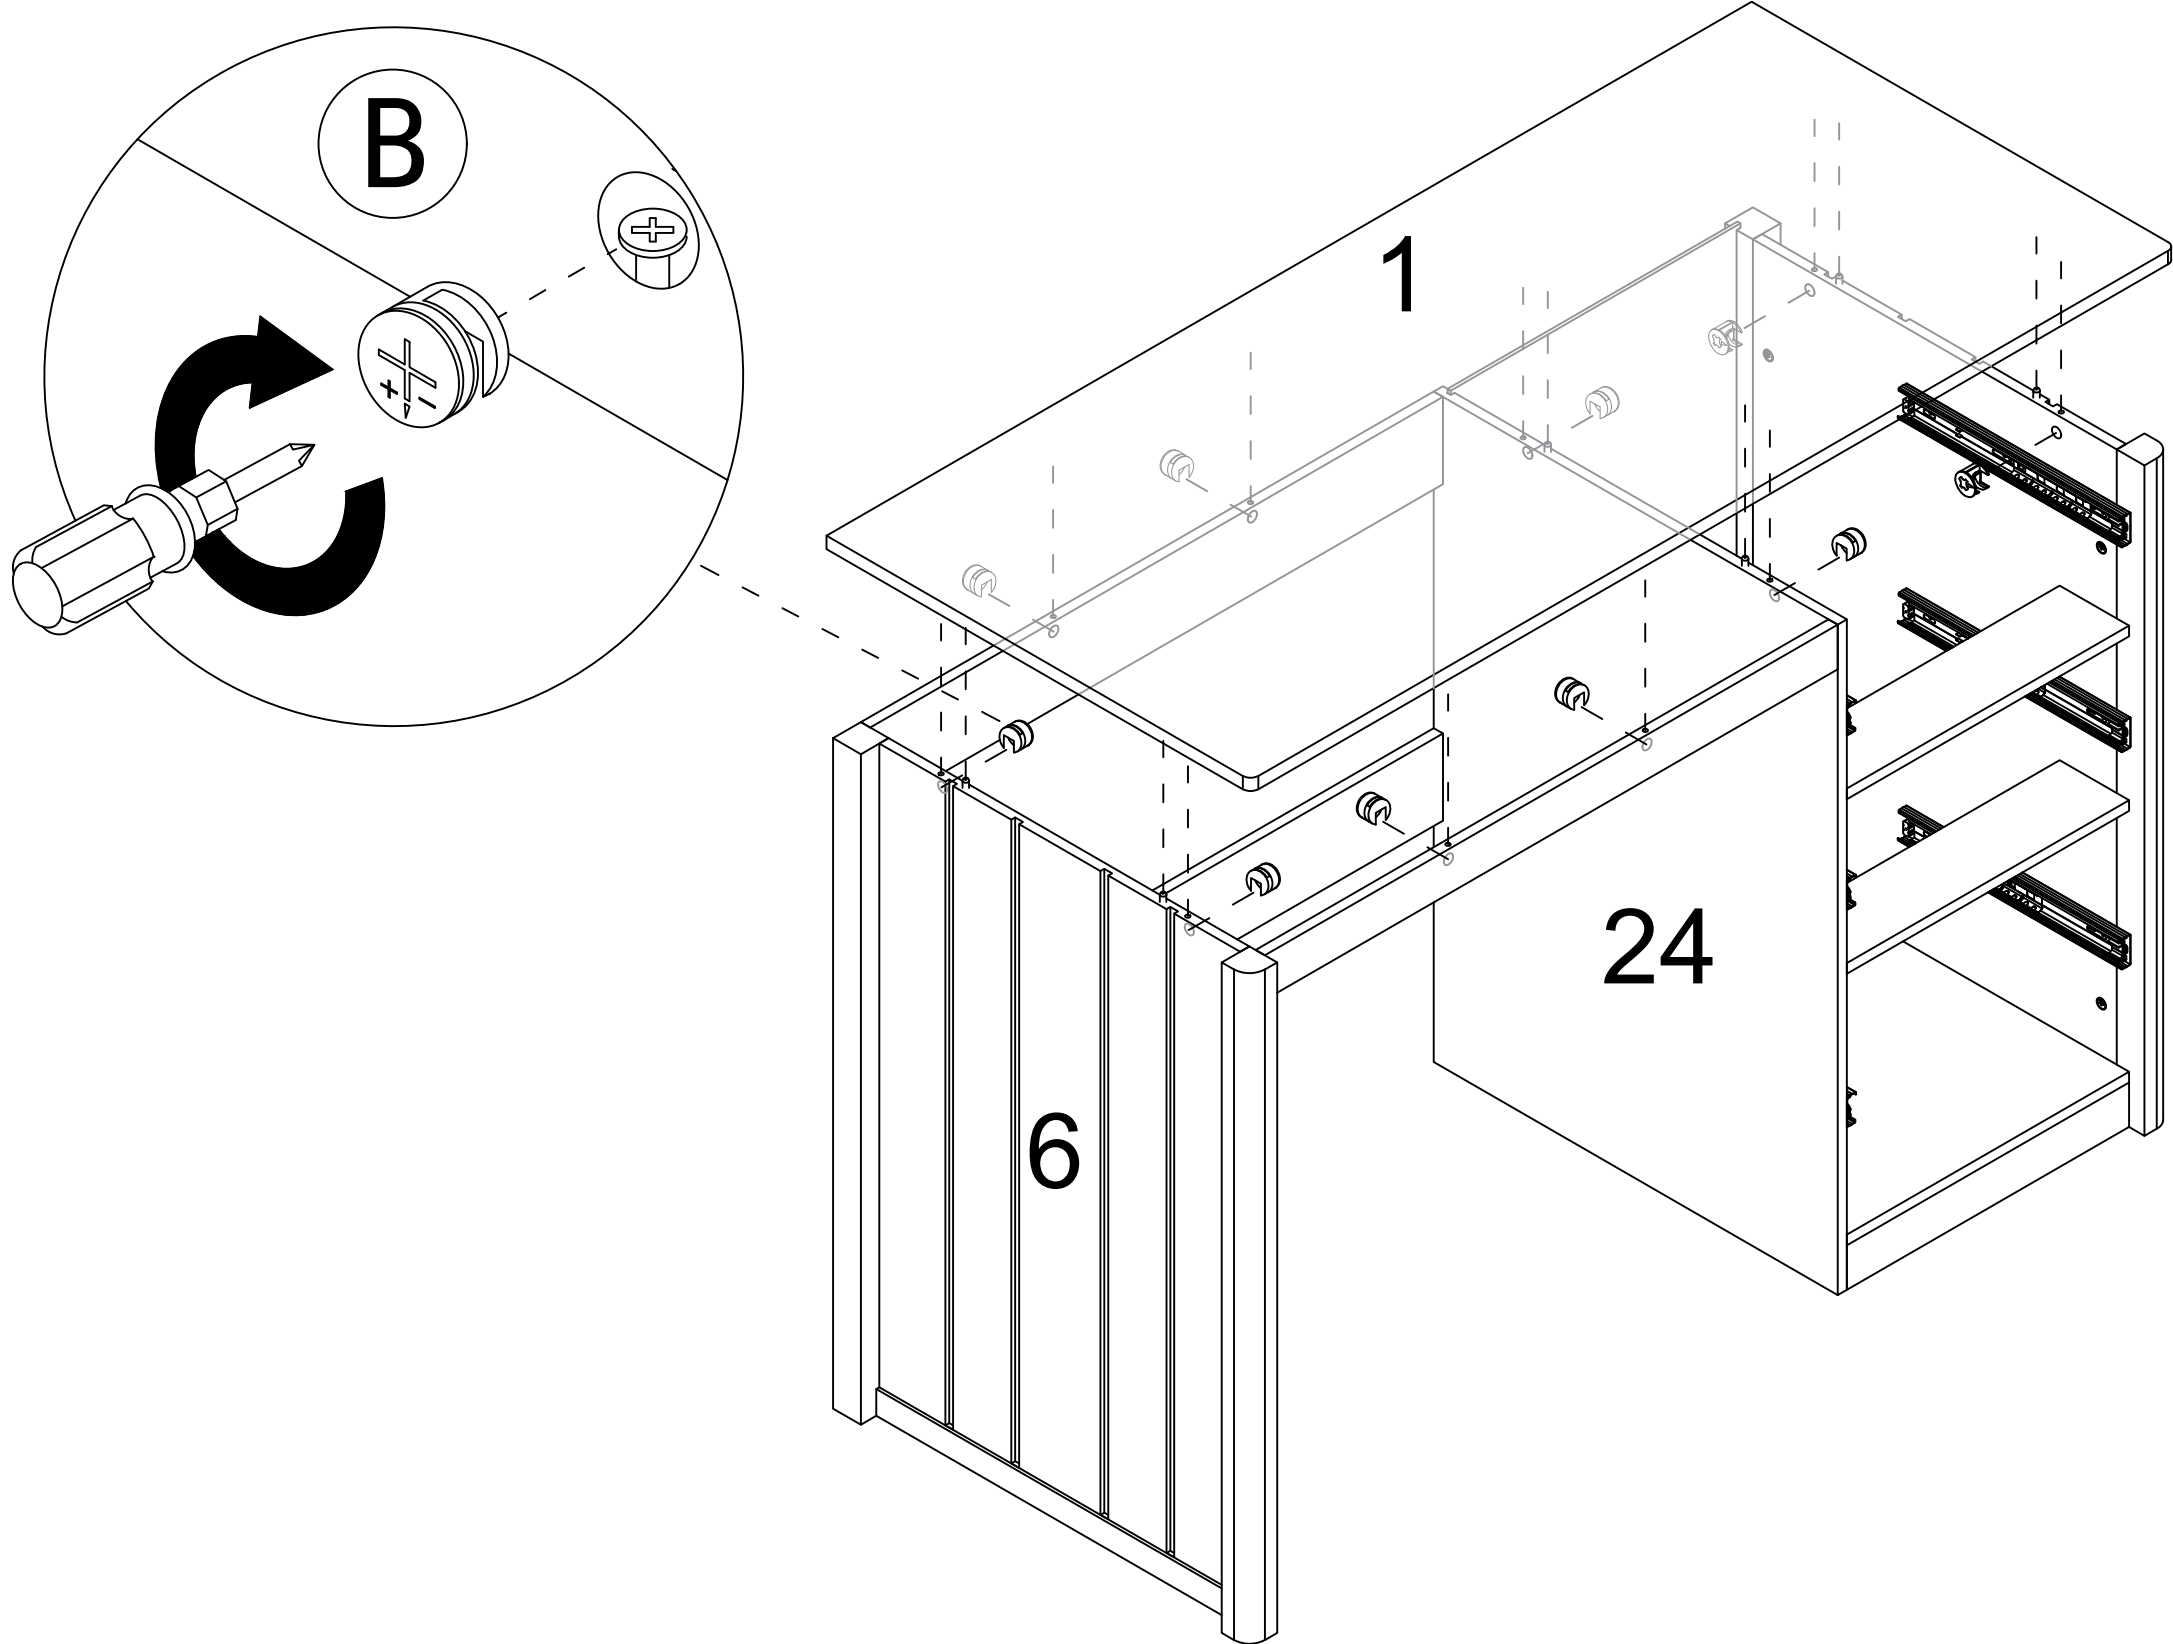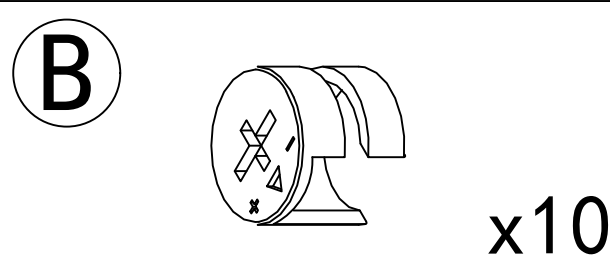




Step 52

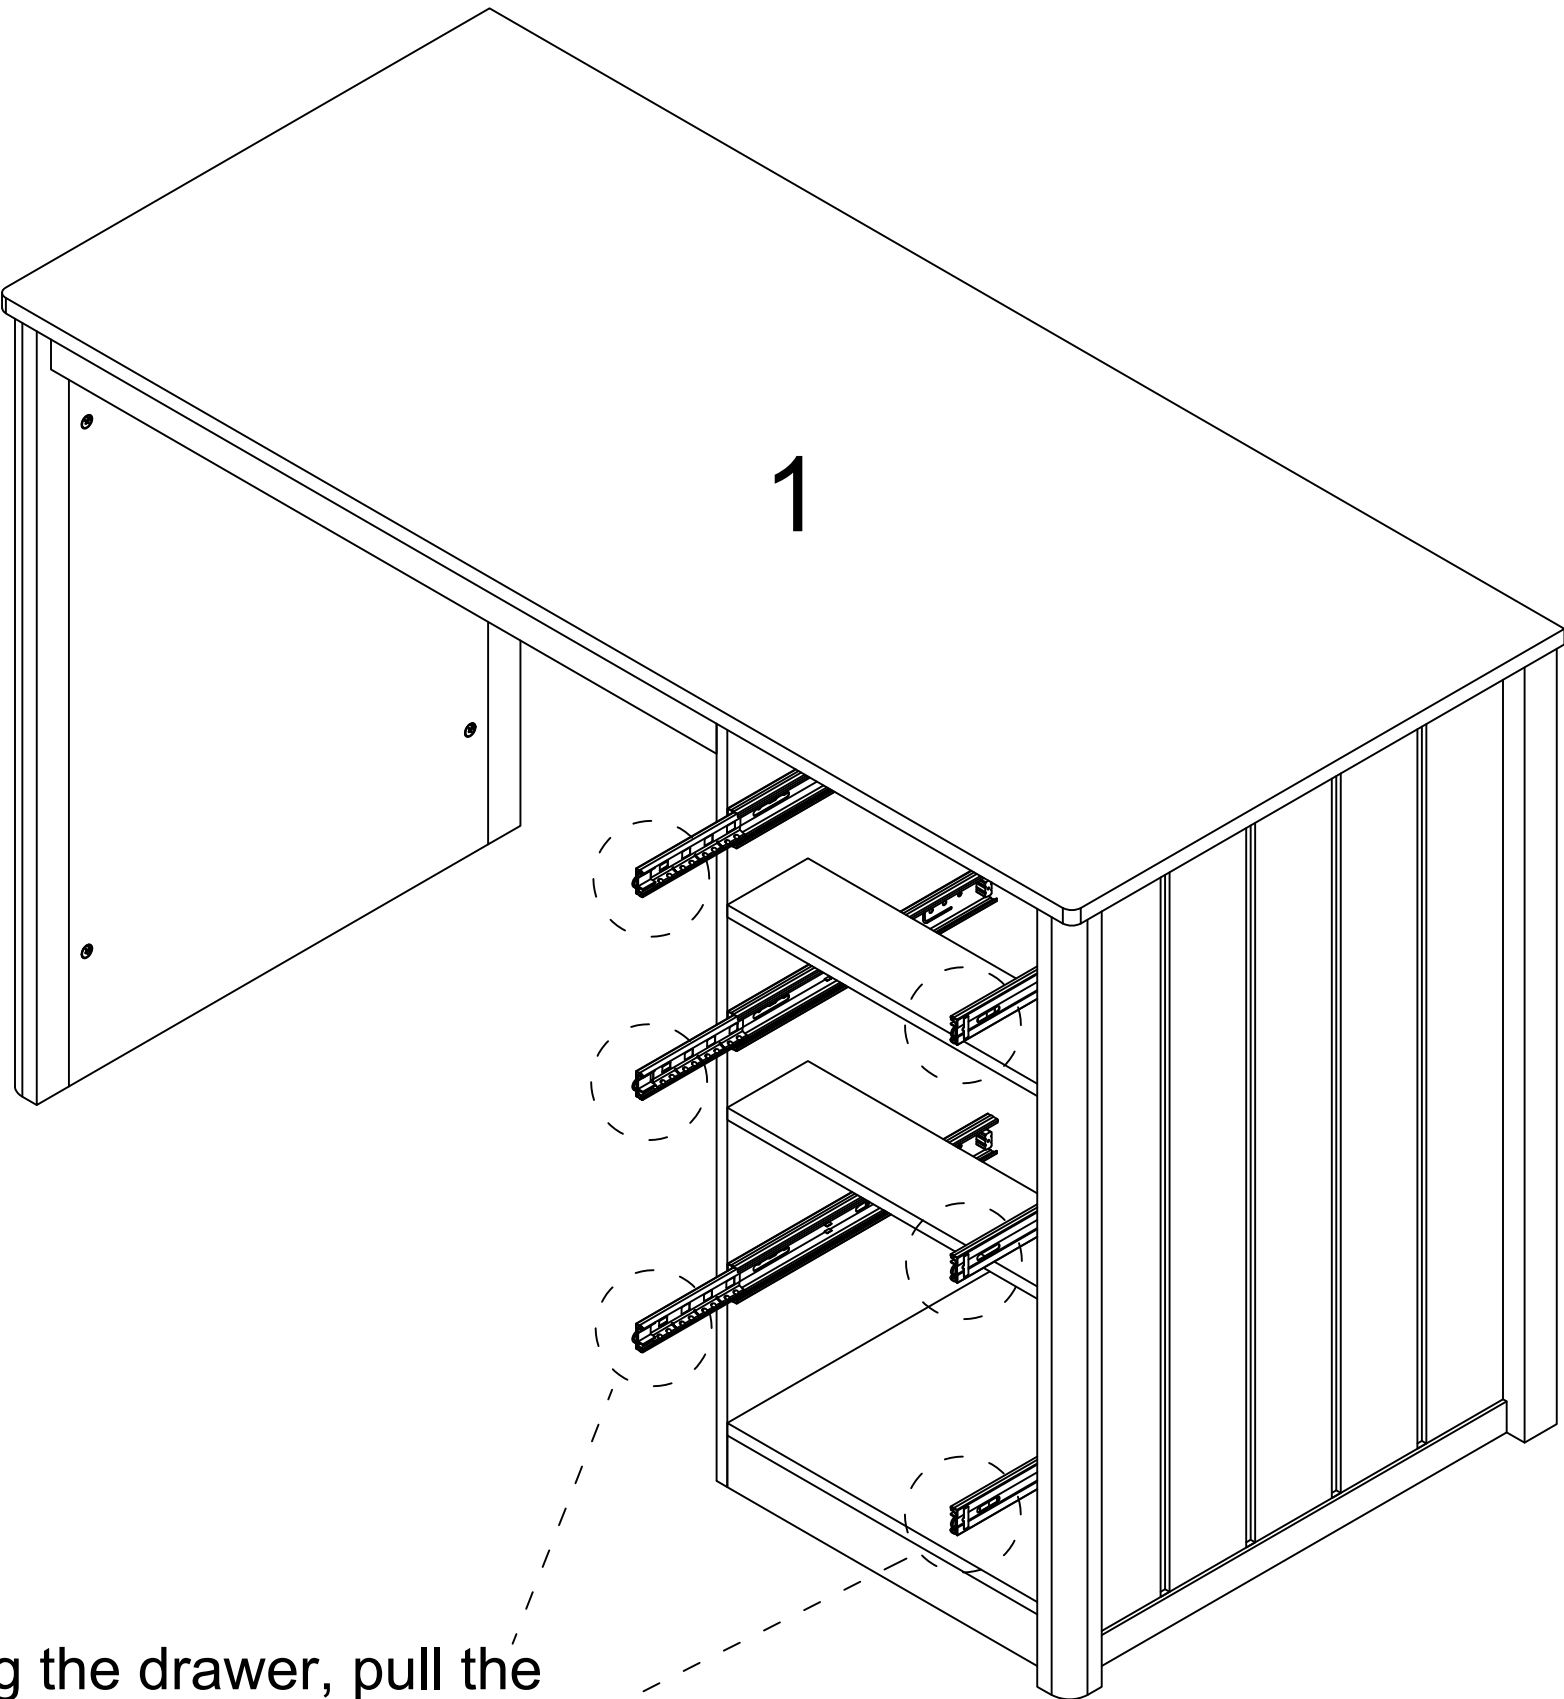

As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.


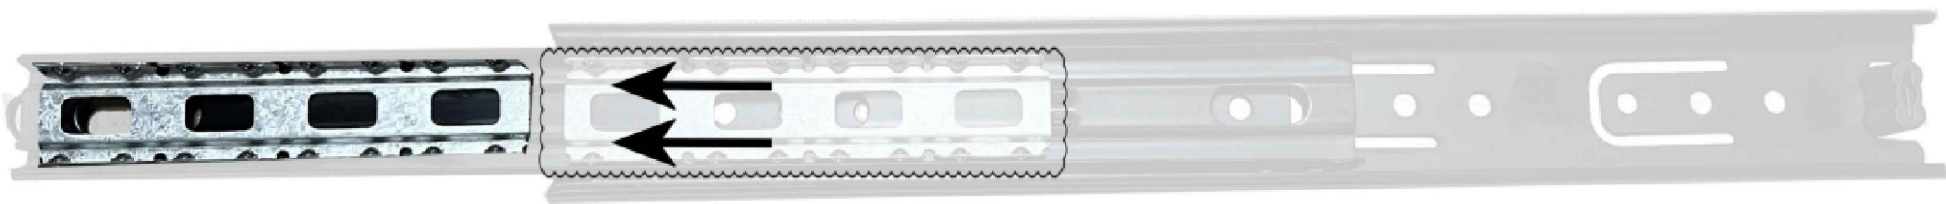


Step 53

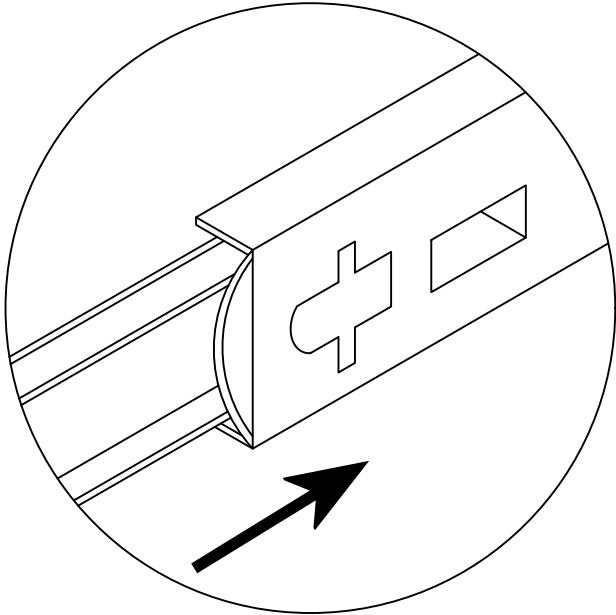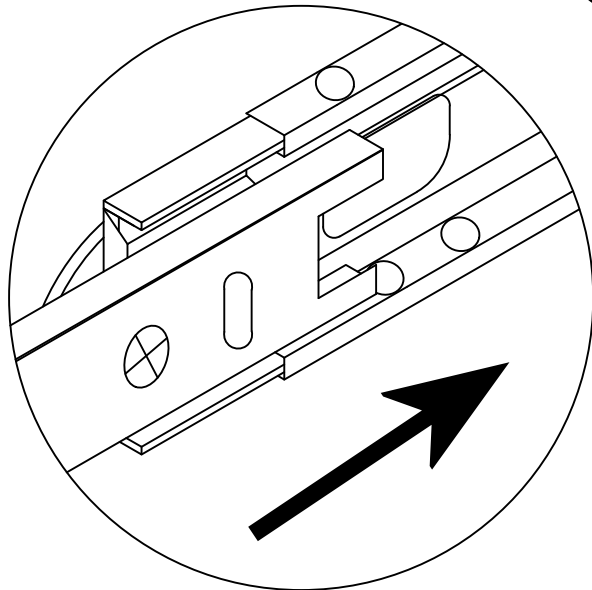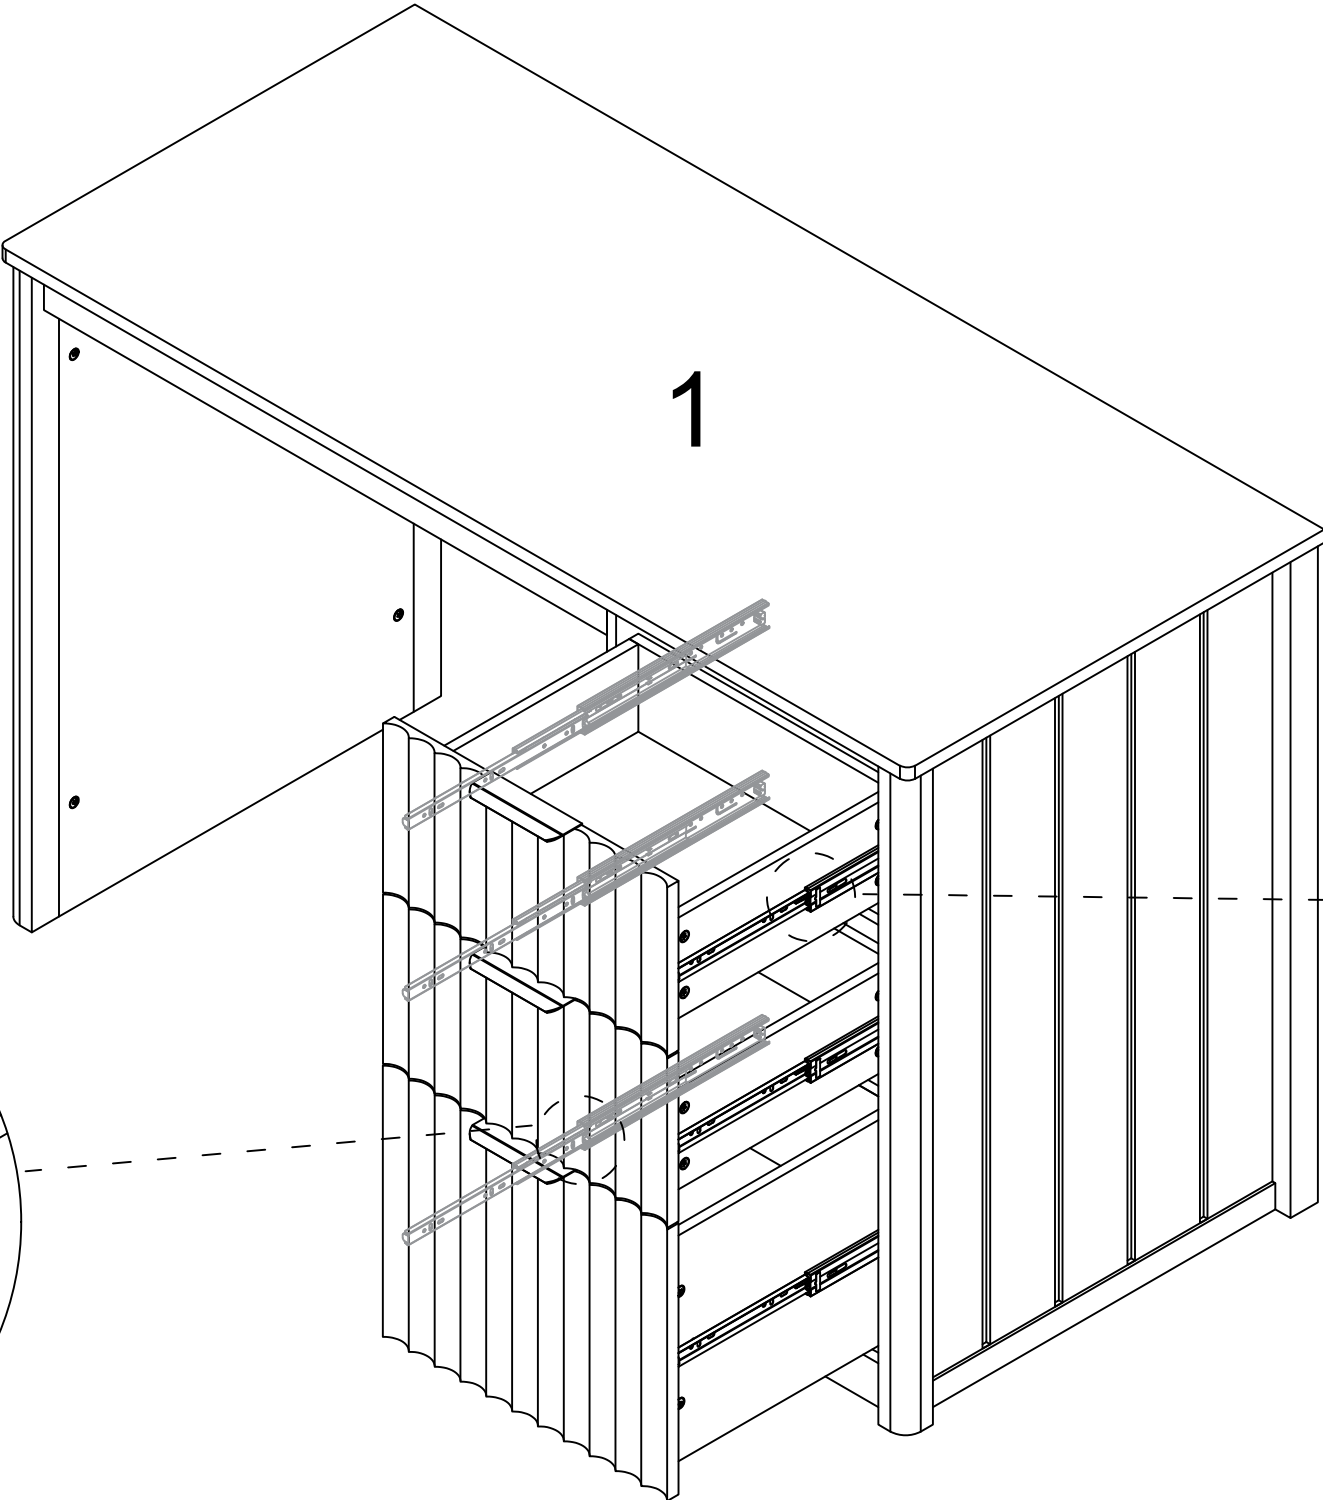



Step 54

- G

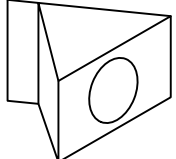


x6
- H




x1
- 

x1

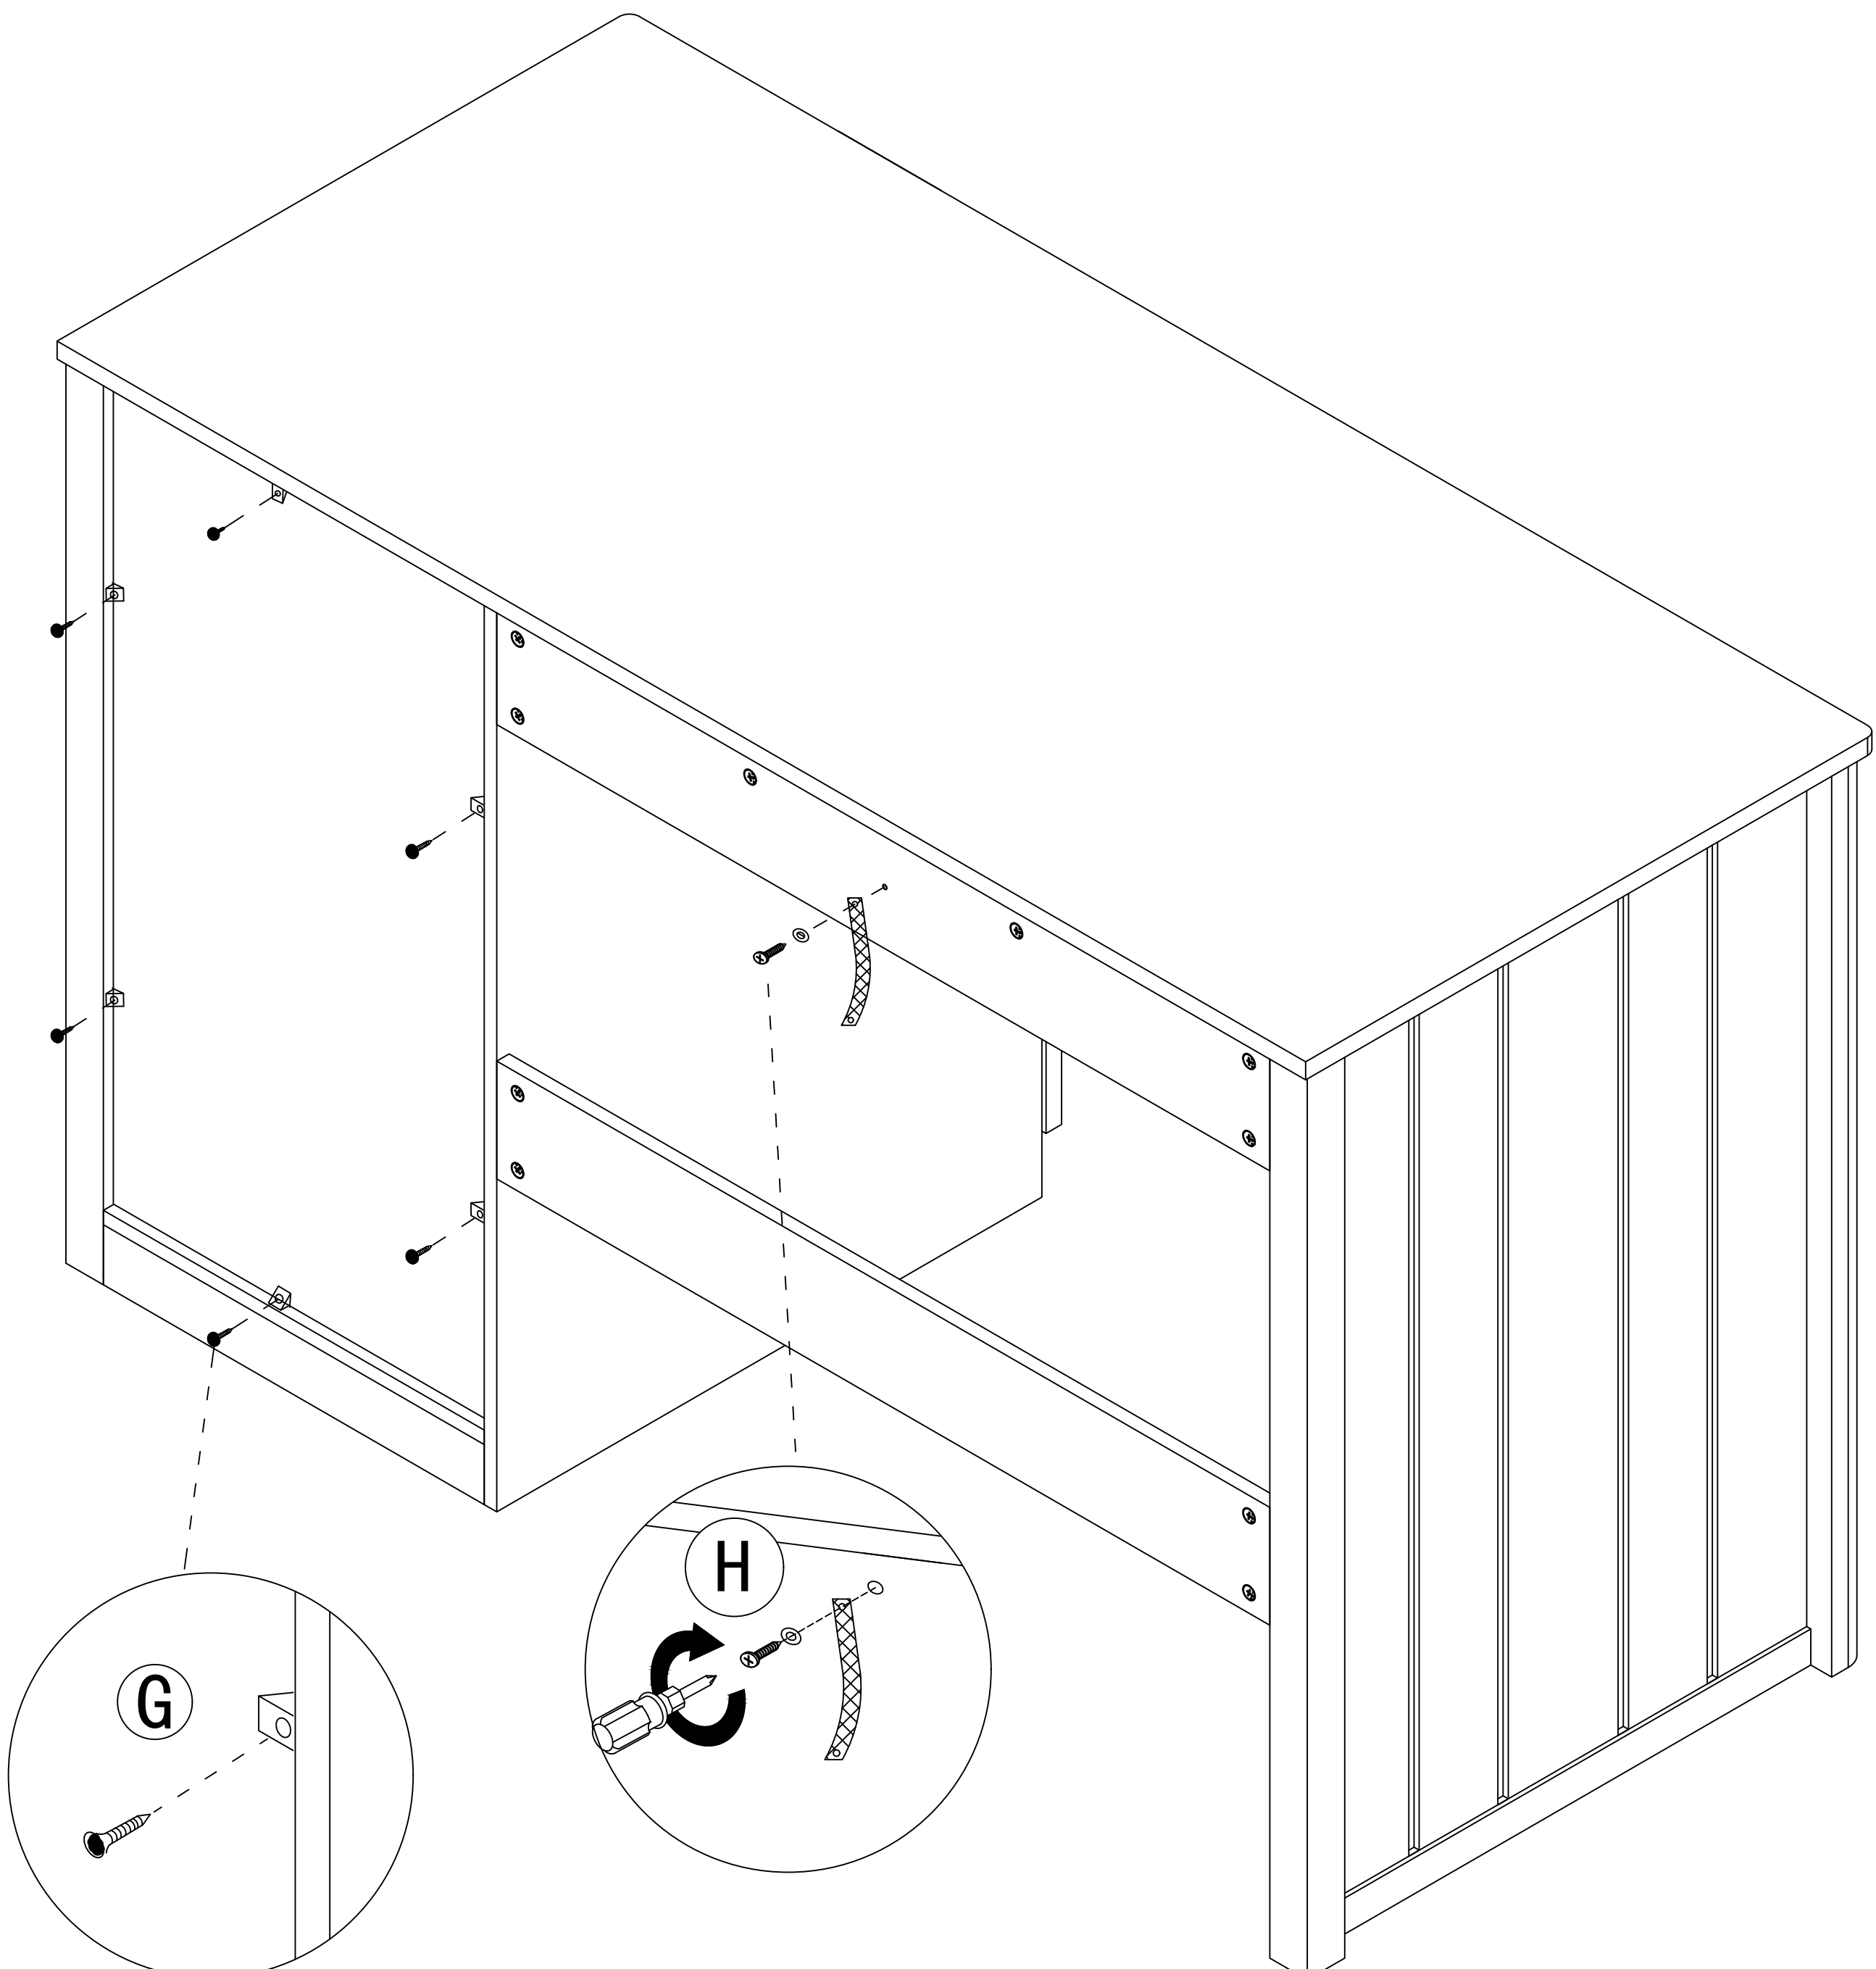

Step 55

H

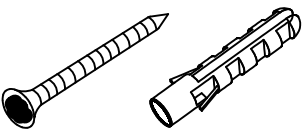

x1

