


Two-Handle Centerset Lavatory Faucet

Applicable faucets (including but not limited)

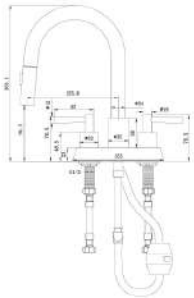

INSTALLATION

Before to installation: Shut off water supply. Remove old faucet.
Clean sink/countertop surface in preparation for new faucet

01



1. Apply some plumber's putty or other suitable sealant to the bottom of undercover

02



2. Align the plate with the countertop holes.

03



3. Insert the faucet into the sink.

04



4. Put the rubber ring first and tighten the nuts.

05



5. Insert the quick-connect hose first and install the gravity ball in the appropriate position

06



6. Connect and tighten the supply hoses.
Turn on the water supplies. Check all connections to see if there is leakage. (Just tighten it gently, excessive force can damage the hose)

TOOLS YOU WILL NEED




Pop-up Drain with Overflow Installation Guide

NOTES:

- Fits for sink WITH overflow hole.
- Clean the sink hole, make sure to remove debris.
- Please avoid using plumber's putty. The seal on top is leak-free. Plumber's putty might cause damage.
- Silicone and plumbing tape can be use for sealing requirement.



1. Unscrew components A & B.

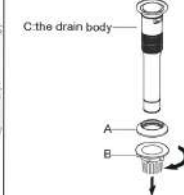

2. Insert the drain body C into the hole in the sink.




3. Screw components A & B back on as shown.



4. Connect the bottom end of the drain to the Drain Pipe.



5. Push to activate.

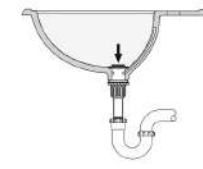

If you have any question or need help,
please be free to contact us. After-sale service: dlem@pobosales.com