


FPSC23ST-N


Assembly Instructions

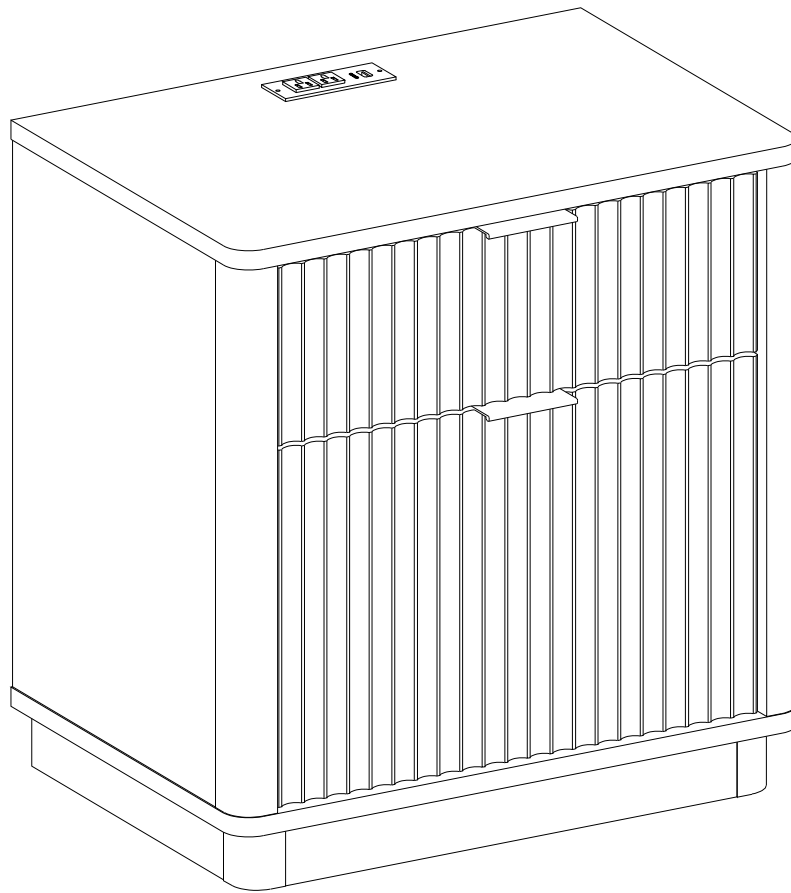


Date 2025-11-07 Rev.02-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

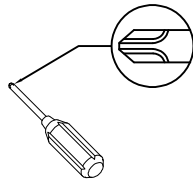

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

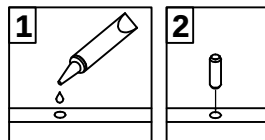


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

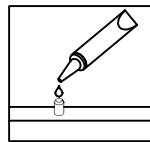


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

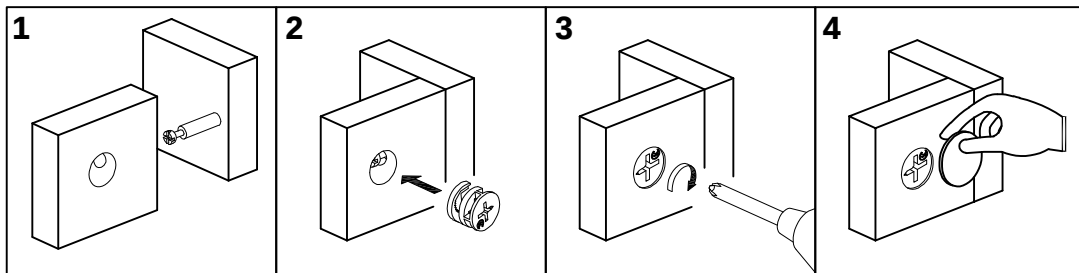




- VII. Power tools should not be used to assemble this product .

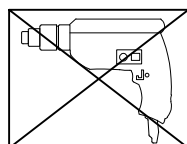


Parts List

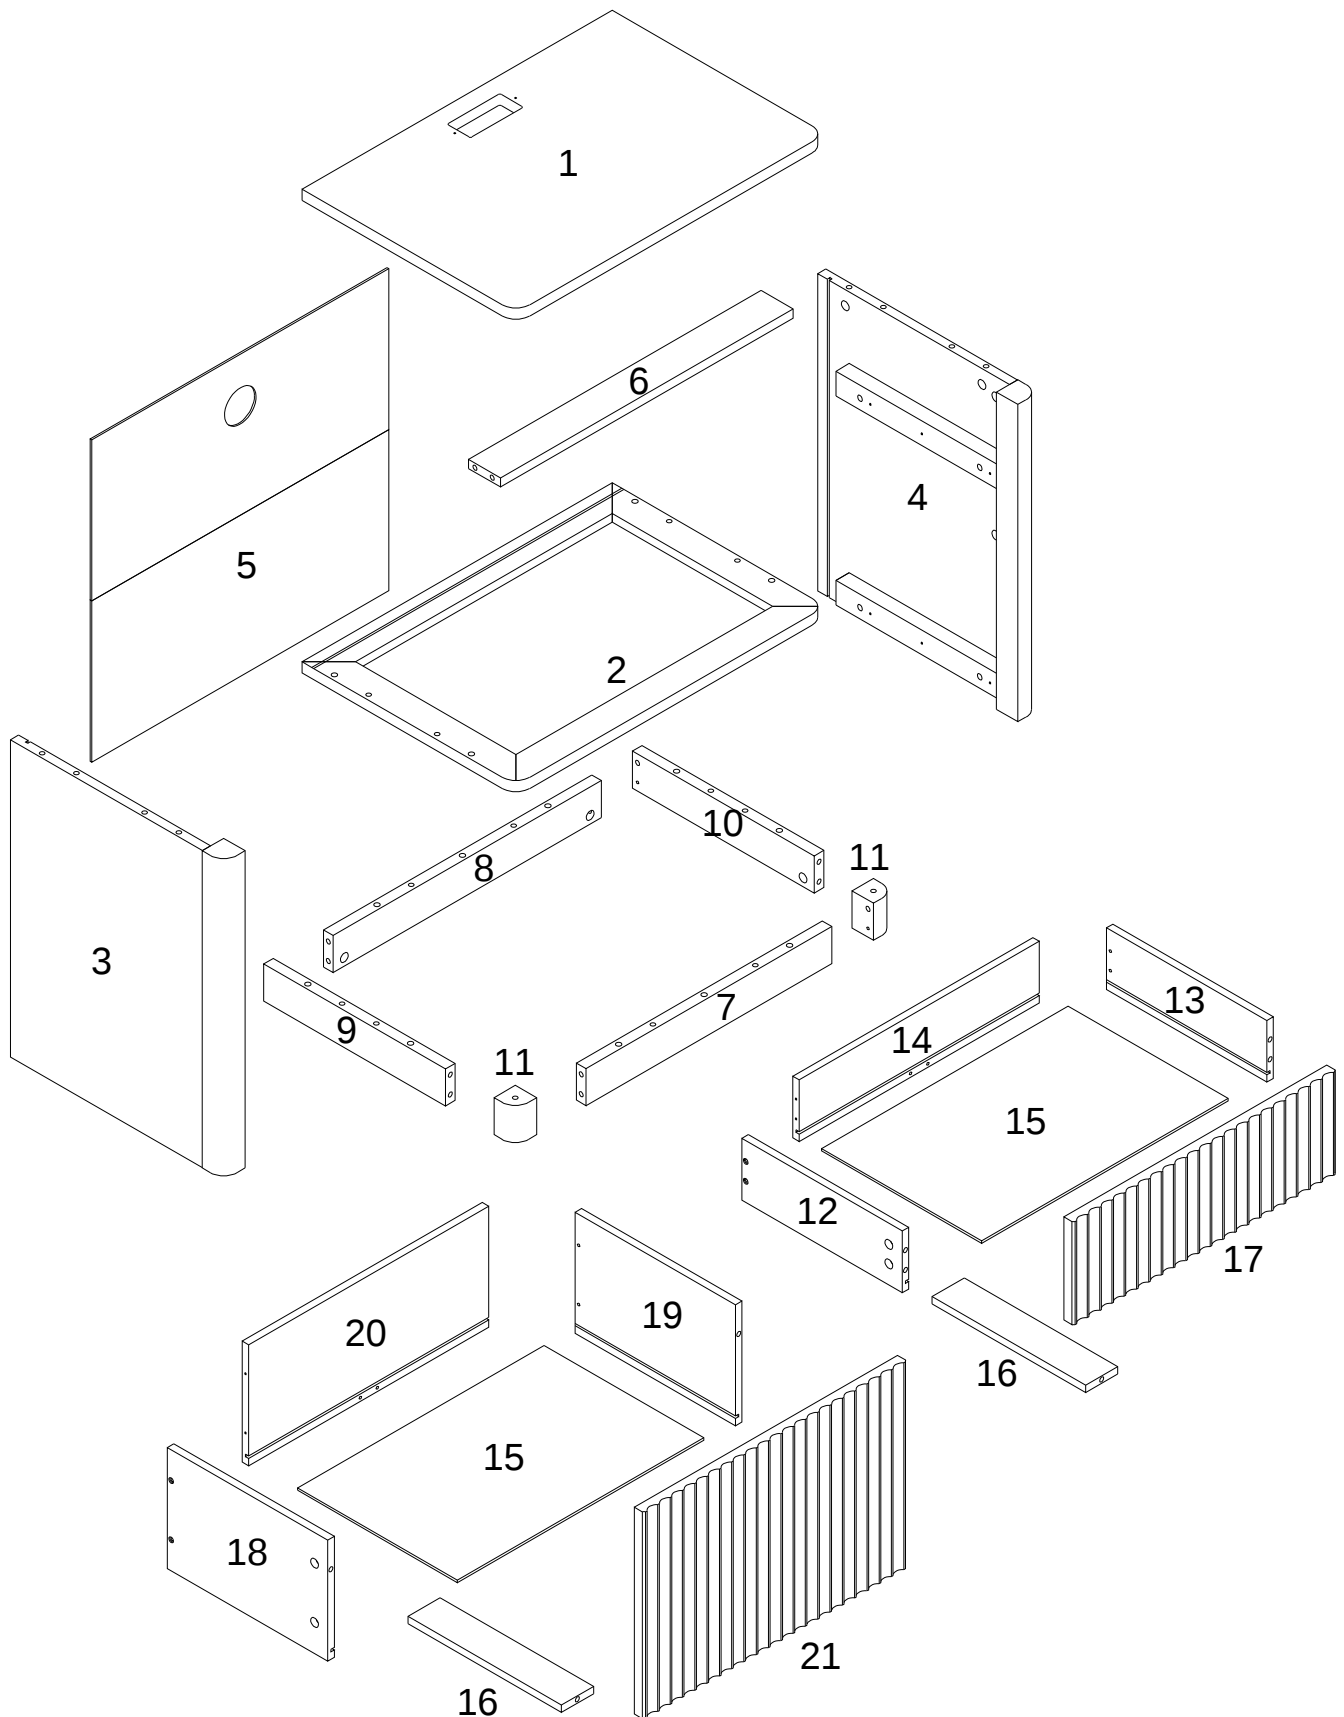

Hardware List


A		Ø8x30mm	Large Dowel	26 pcs
B		Ø6x33mm	Cam bolt	22 pcs
C		Ø15x11mm	Large Cam lock	12 pcs
D		Ø30mm	Cam cover	22 pcs
E			Glue tube	1 pc
F		M 4	Allen Wrench	1 pc
G		Ø15x9mm	Small Cam lock	10 pcs
H		Ø4x38mm	Screw	12 pcs
J		Ø6x50mm	Screw	4 pcs
K		1/4"x50mm	Bolt	10 pcs
L		Ø3.5x12mm	Screw	30 pcs
M			Plastic wedge	8 pcs
N		Ø3*17mm	Screw	8 pcs
O			Power Cord W/USB	1 pc
P			Handle	2 pcs
Q		12"	Left Glide Track	2 pcs
R		12"	Left Glide Runner	2 pcs

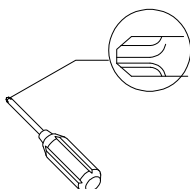

Phillips head screwdriver required for assembly
(not included)


Hardware List

S		12"	Right Glide Track	2 pcs
T		12"	Right Glide Runner	2 pcs

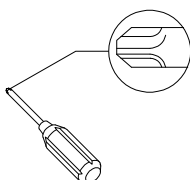


Phillips head screwdriver required for assembly
(not included)





Step 1

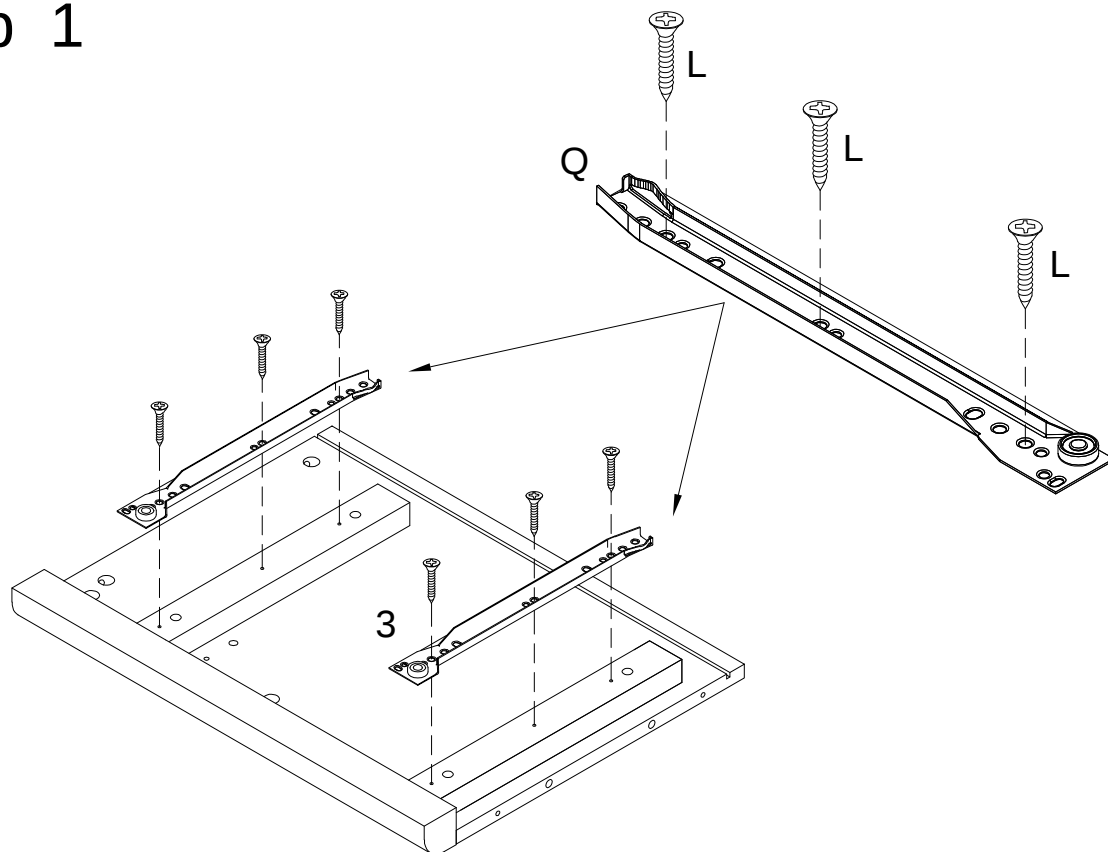


Step 2

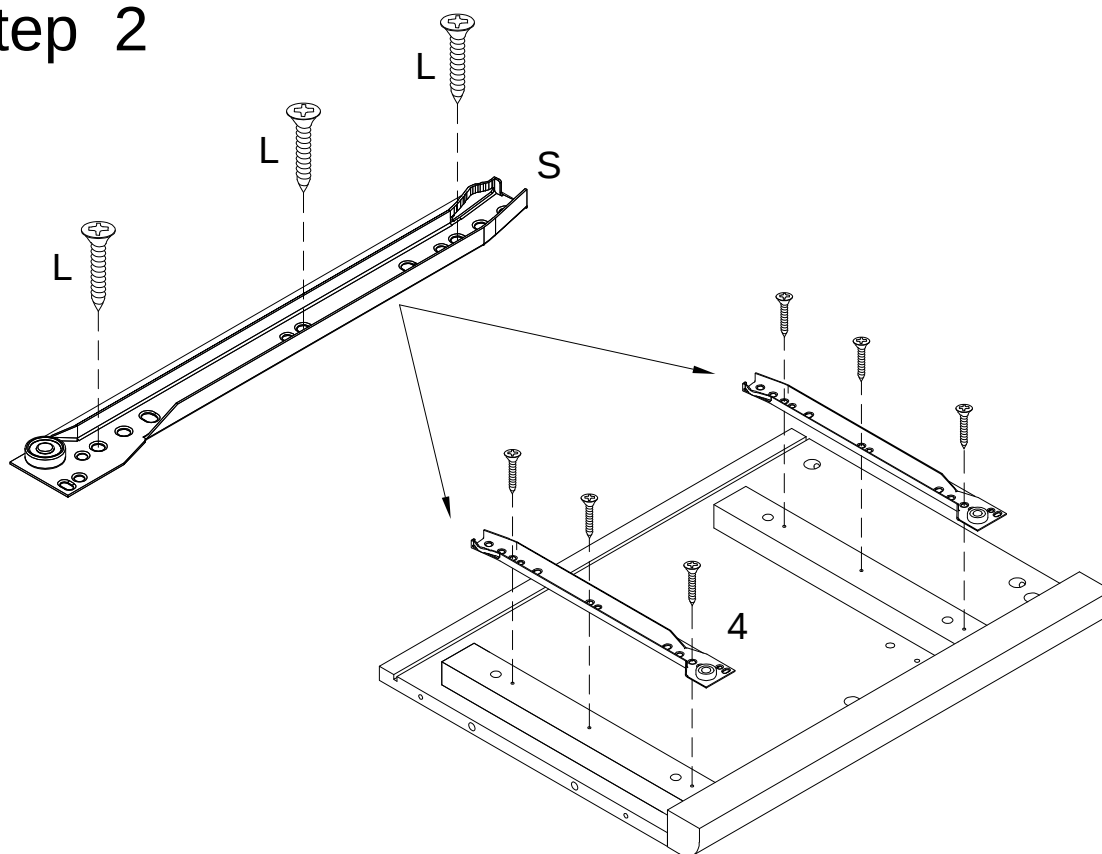


Step 3

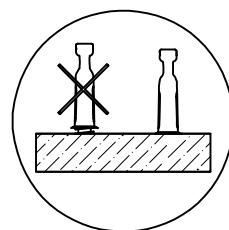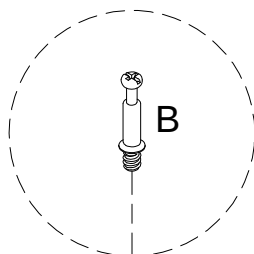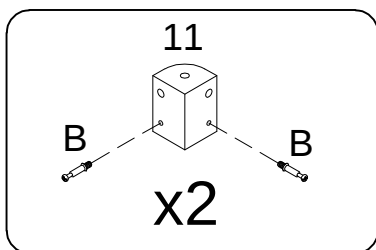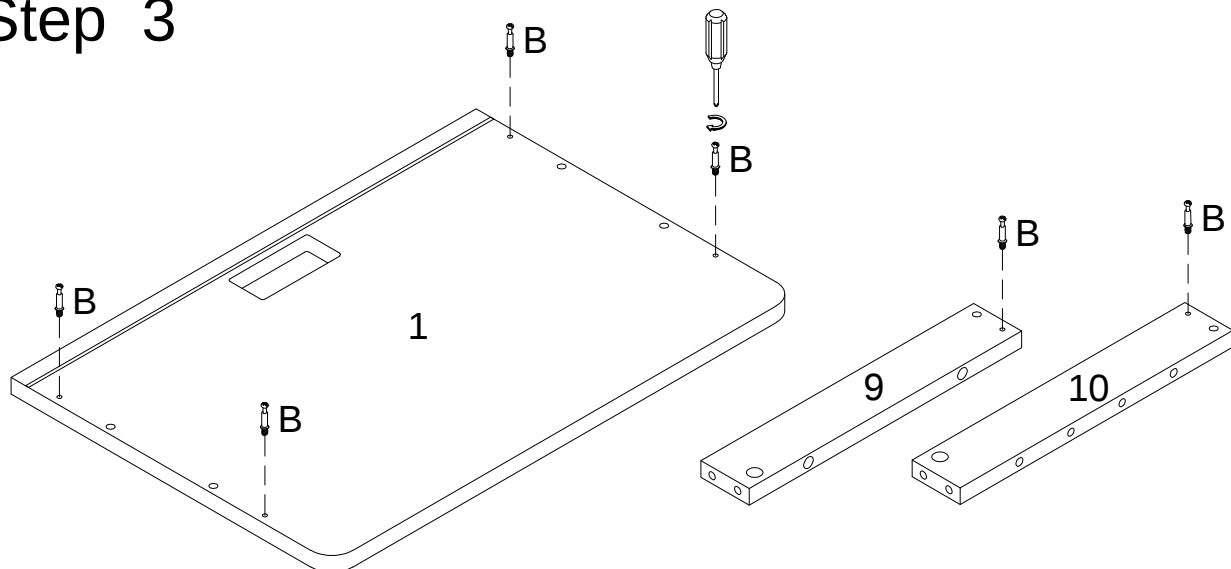


Step 4

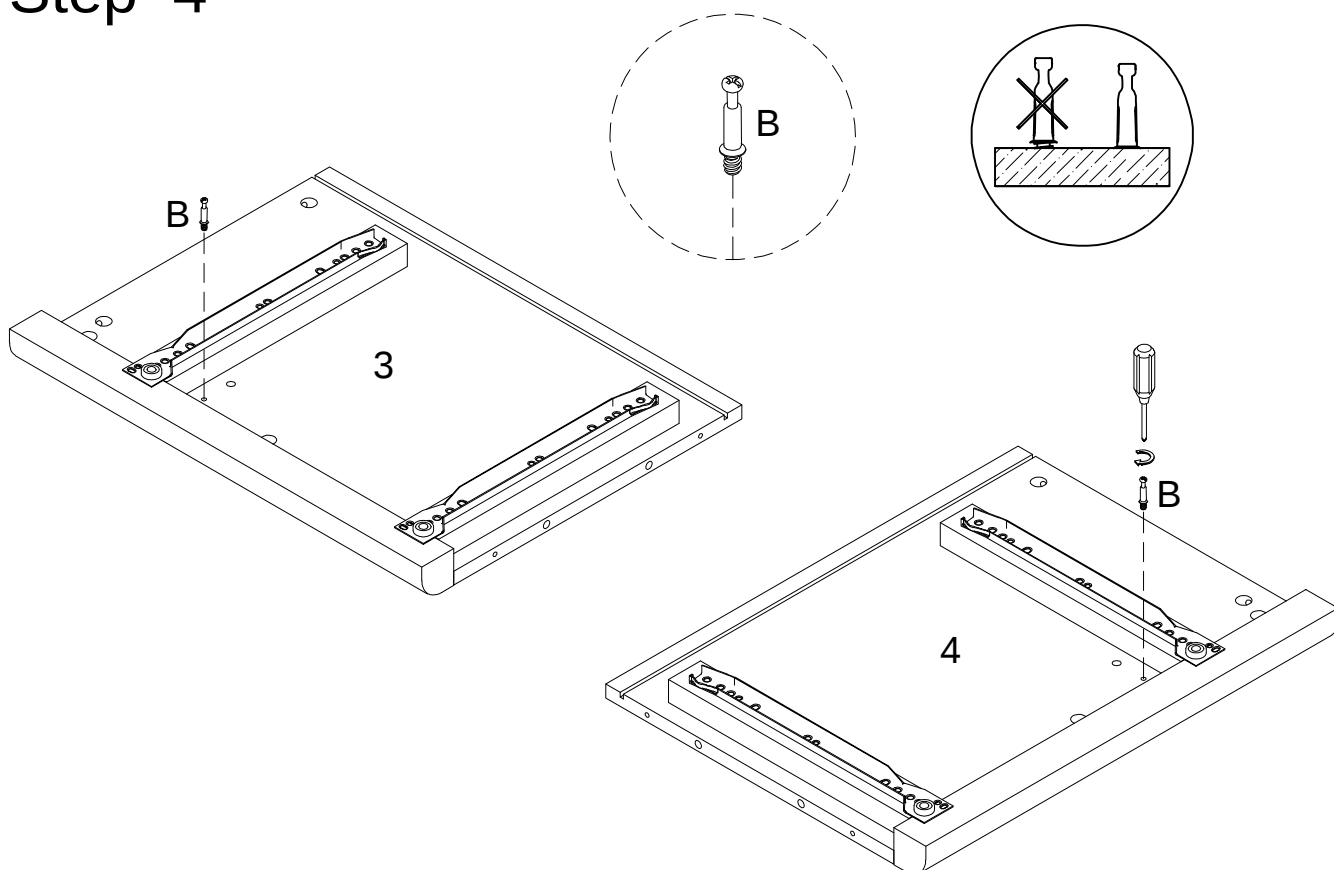


Step 5

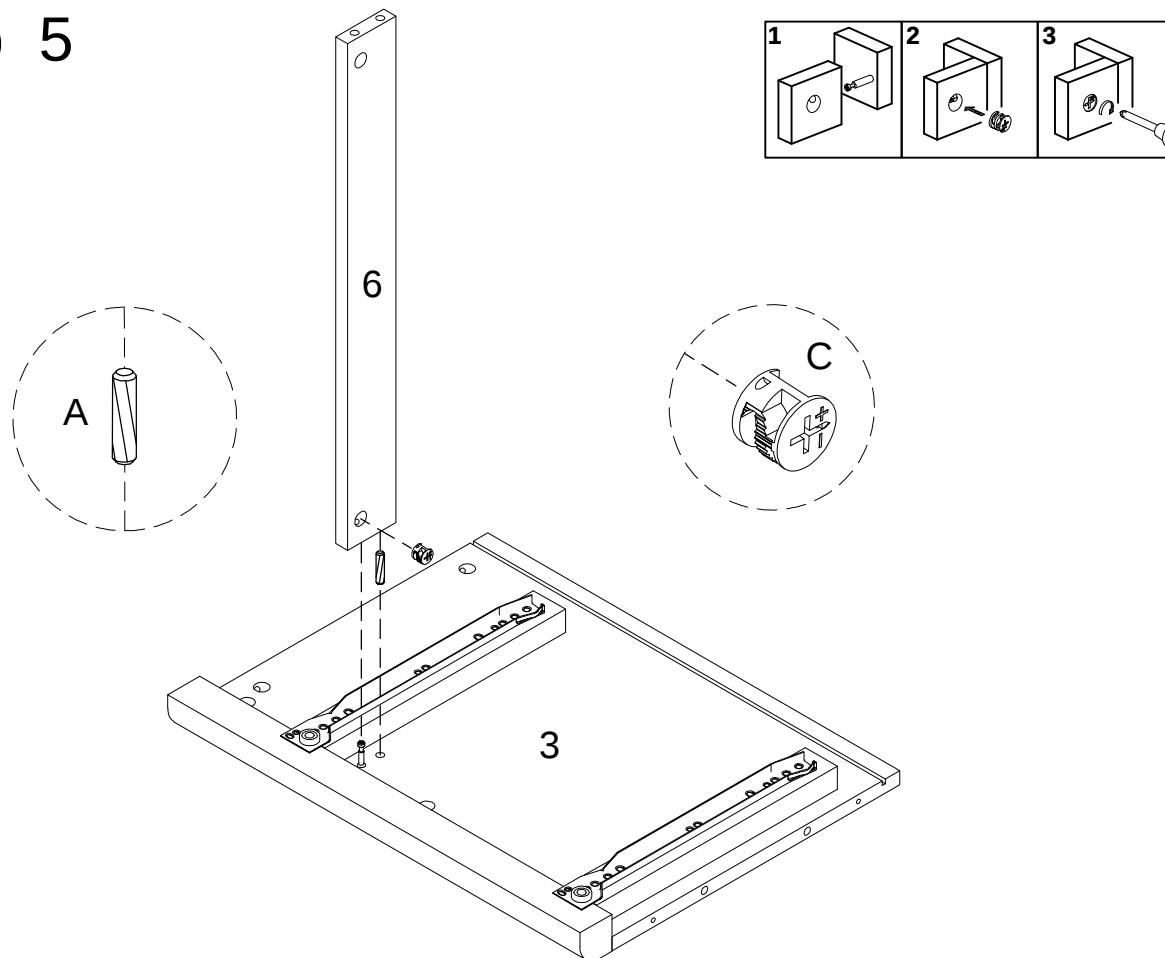


Step 6

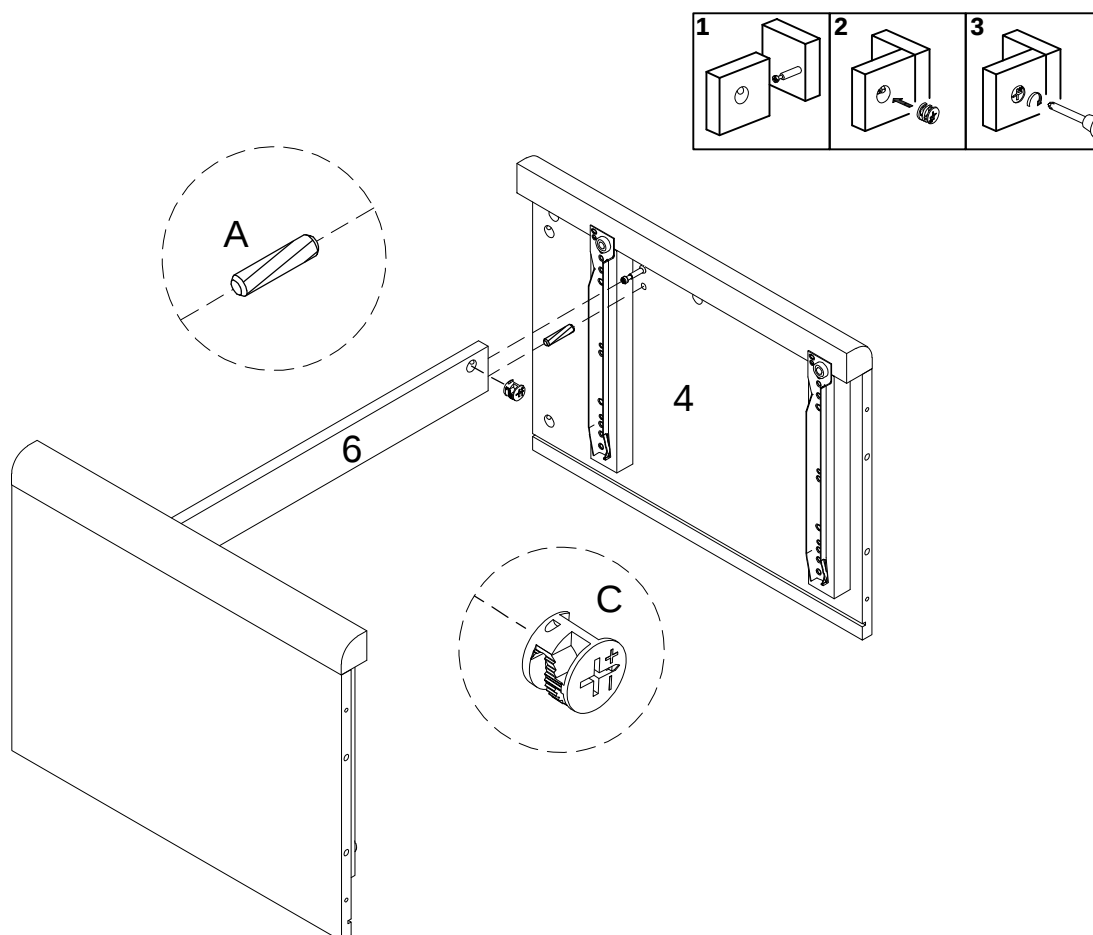


Step 7

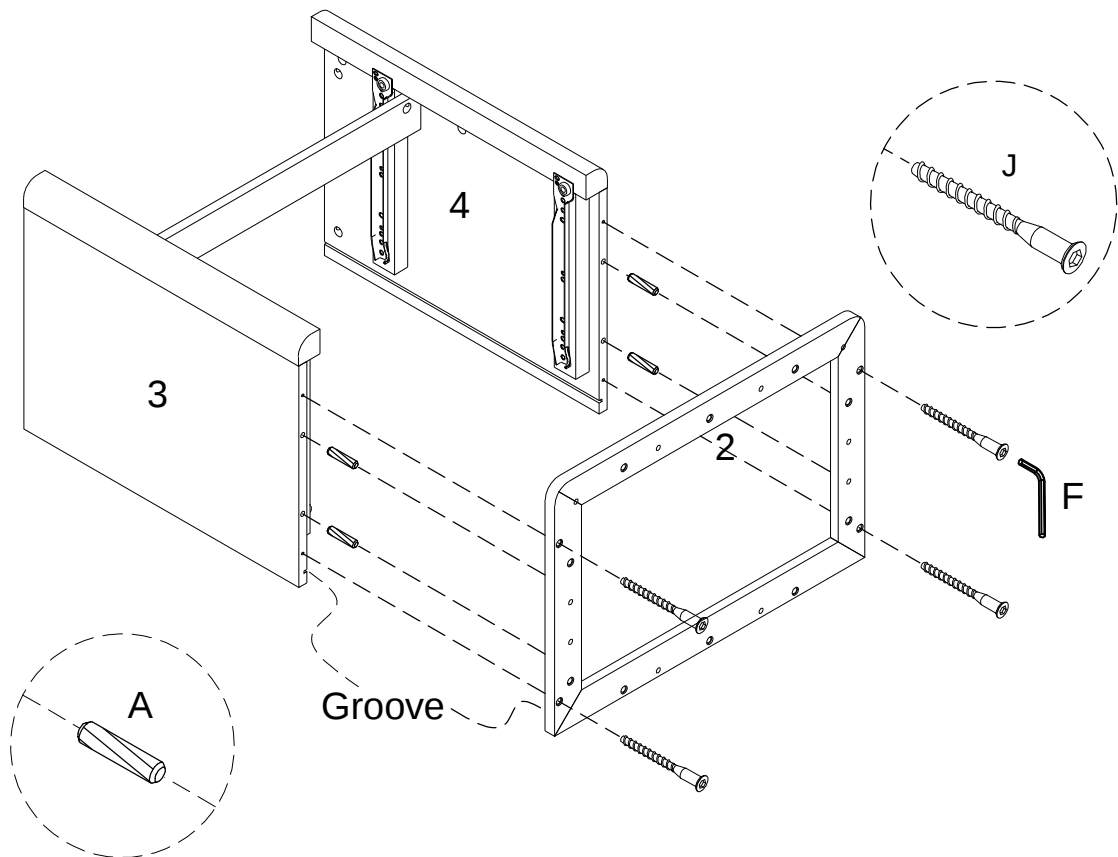


Step 8

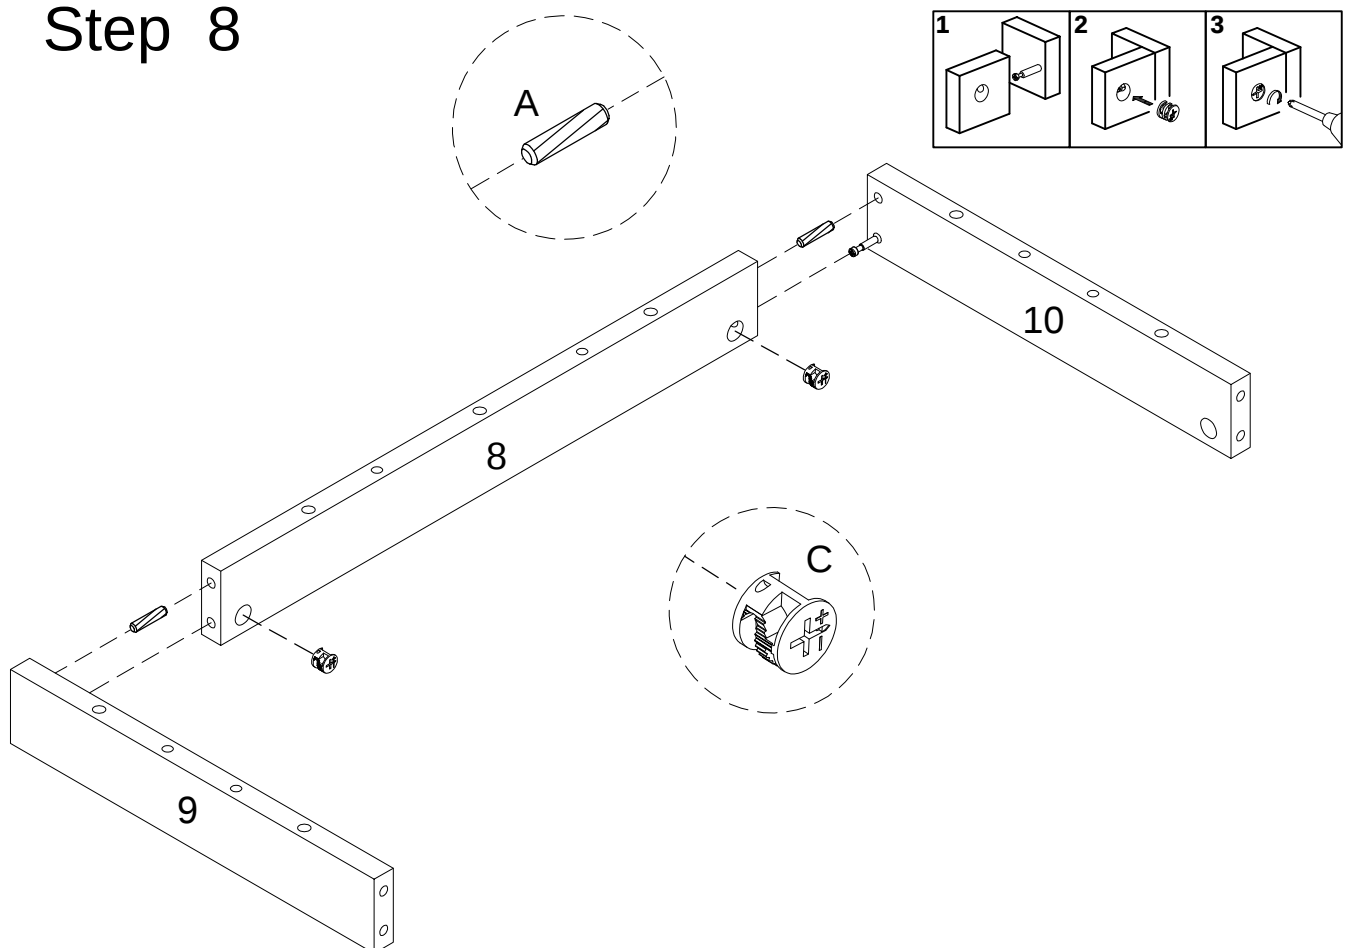


Step 9

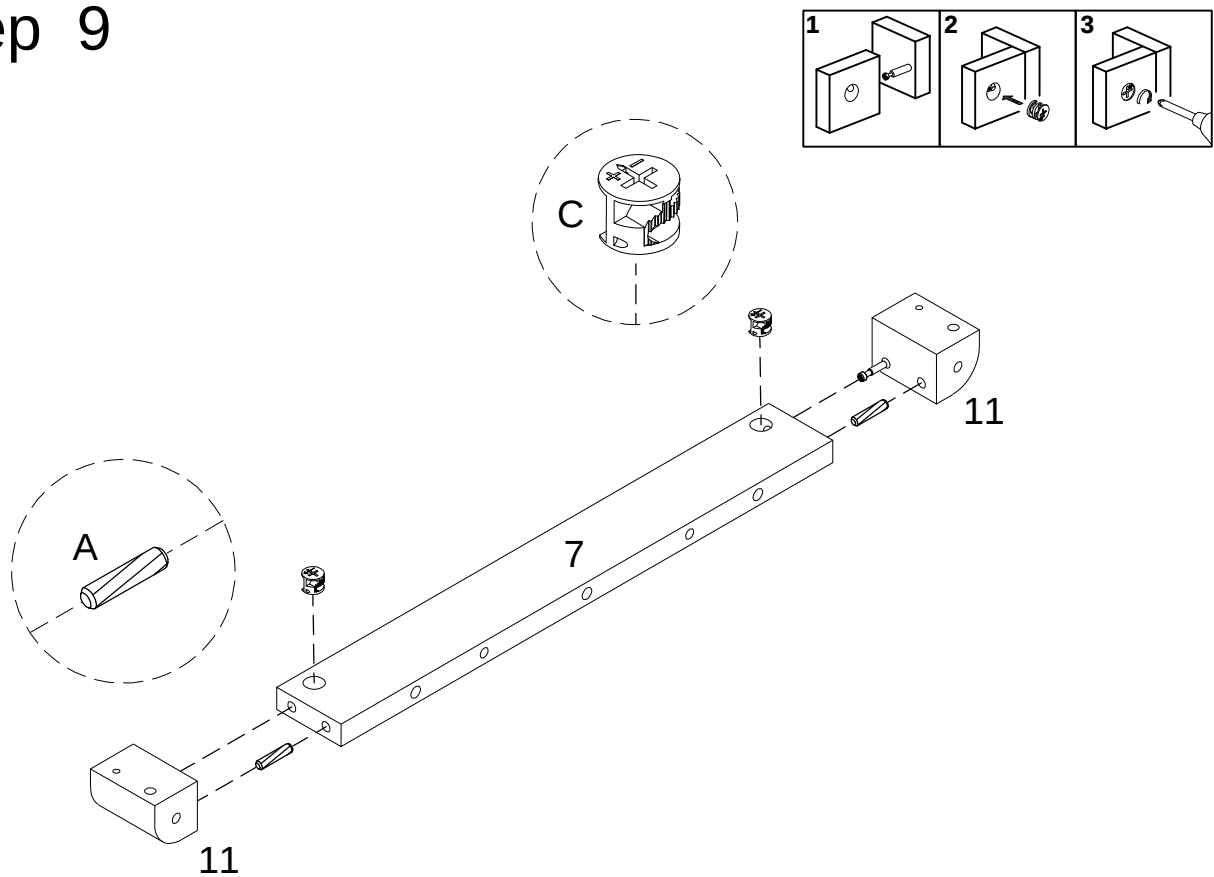


Step 10

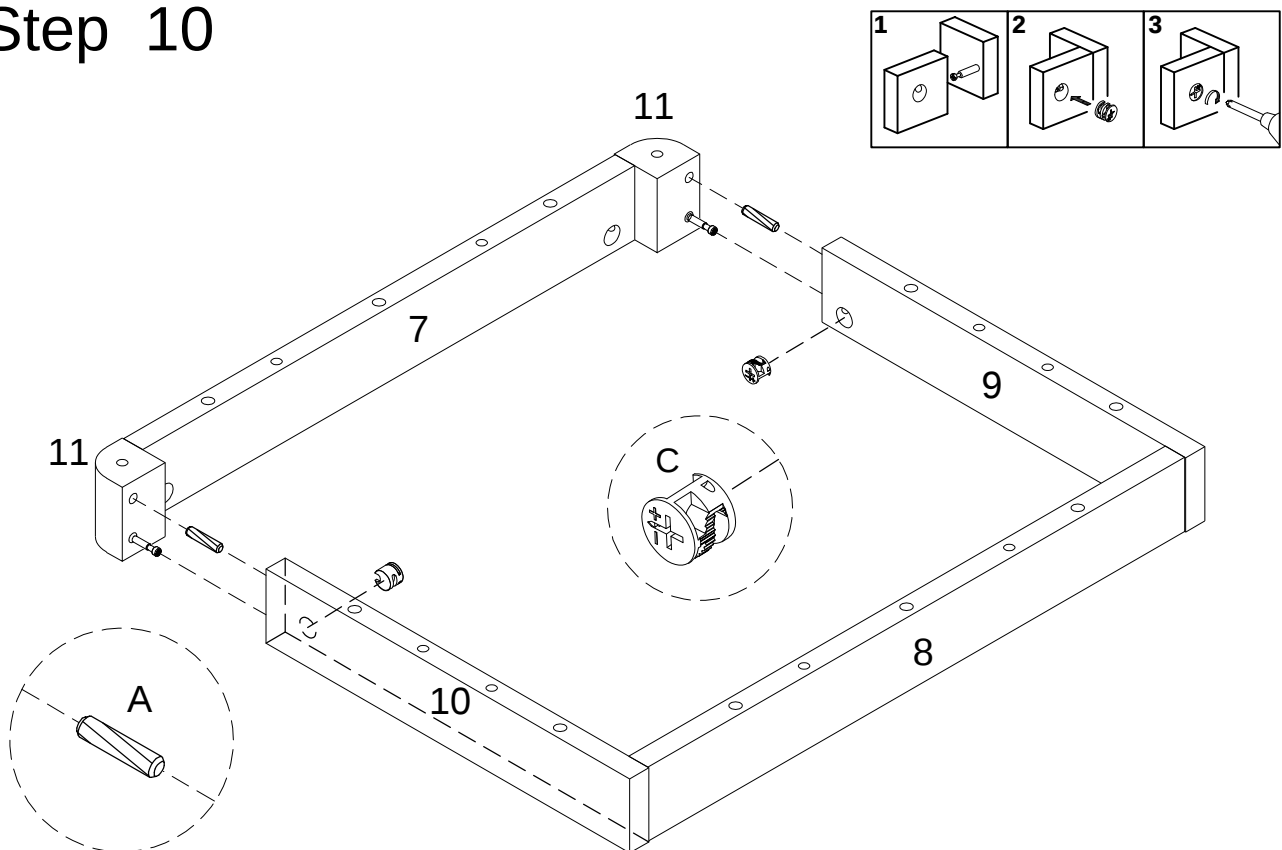


Step 11

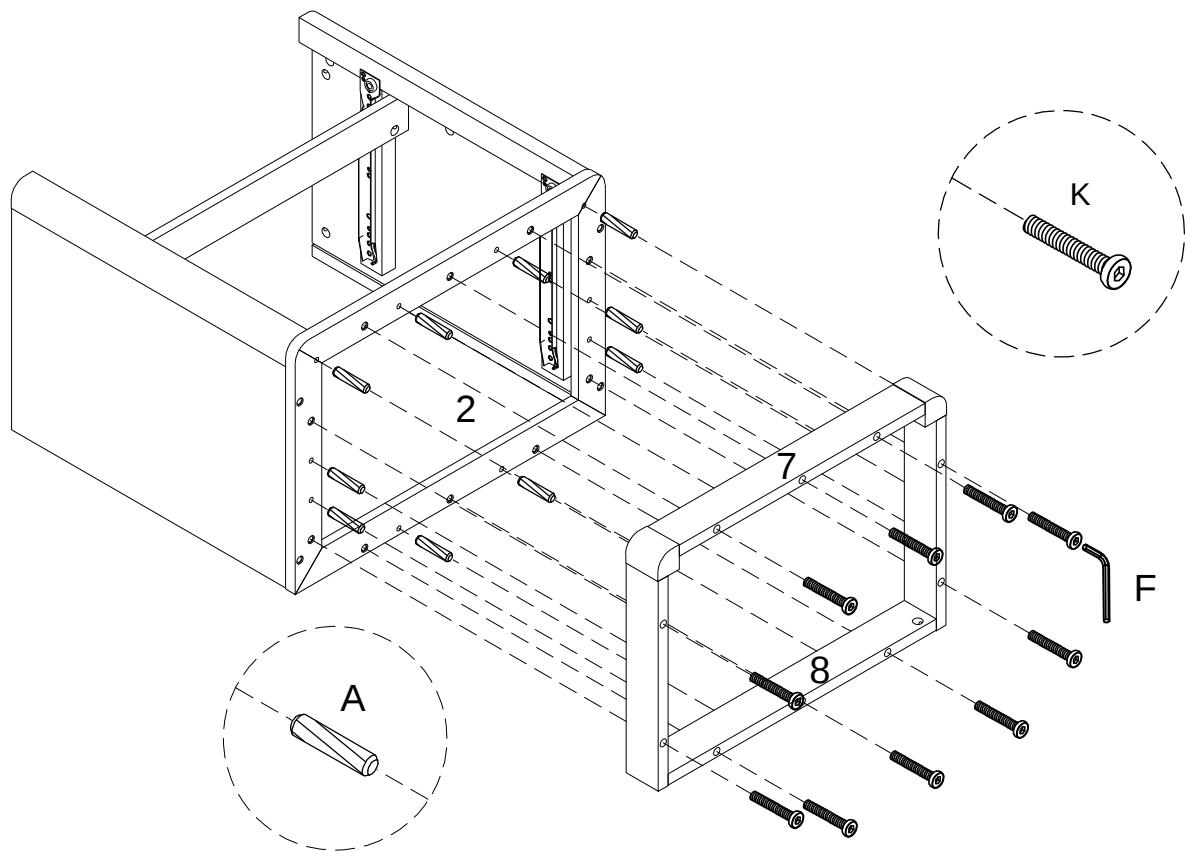


Step 12

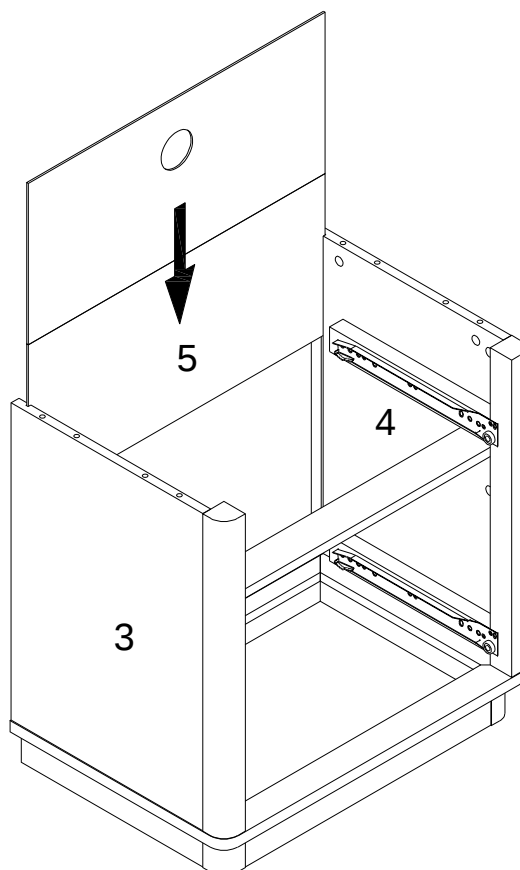


Step 13

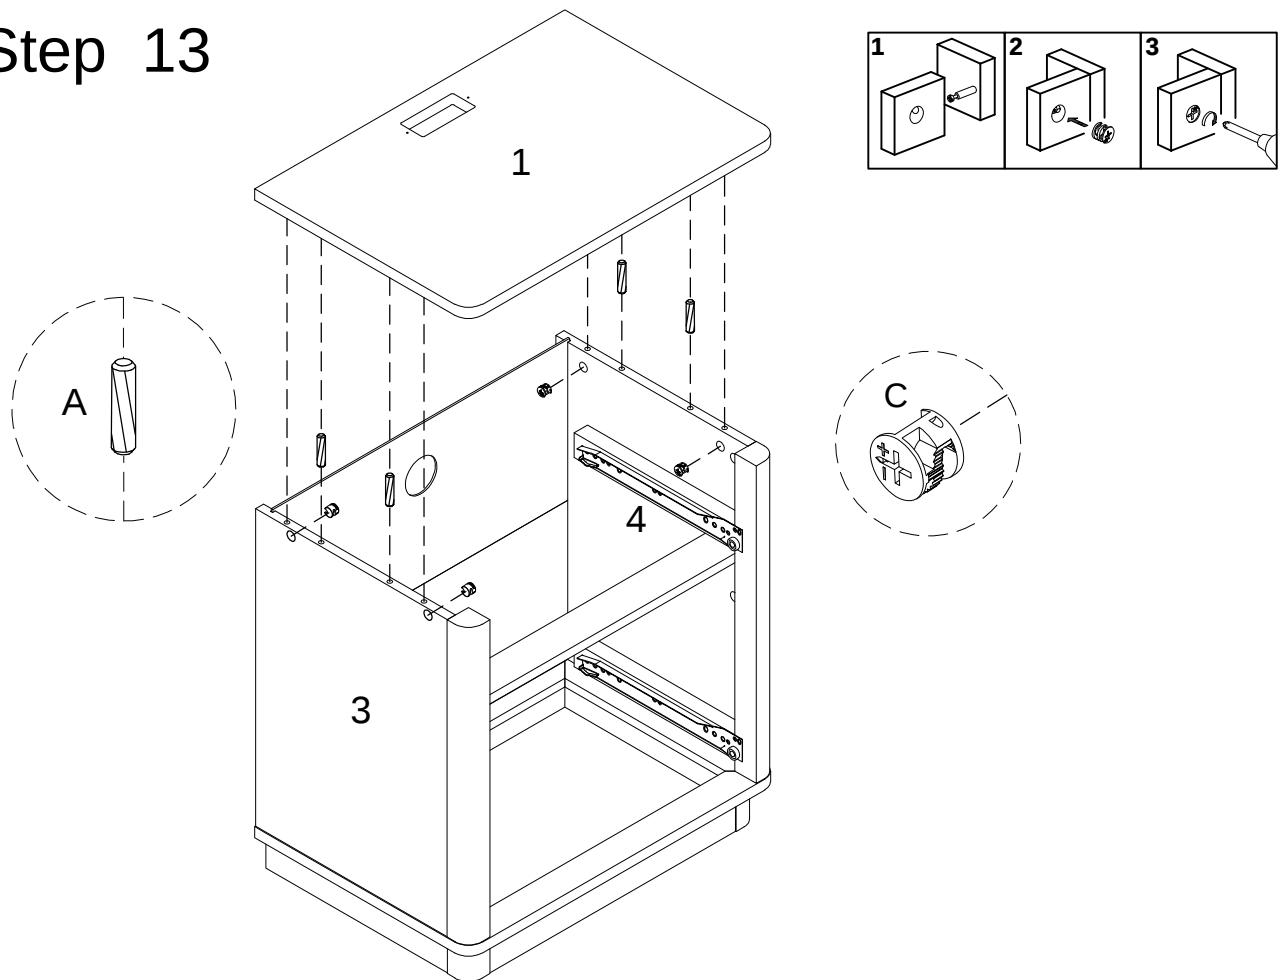


Step 14

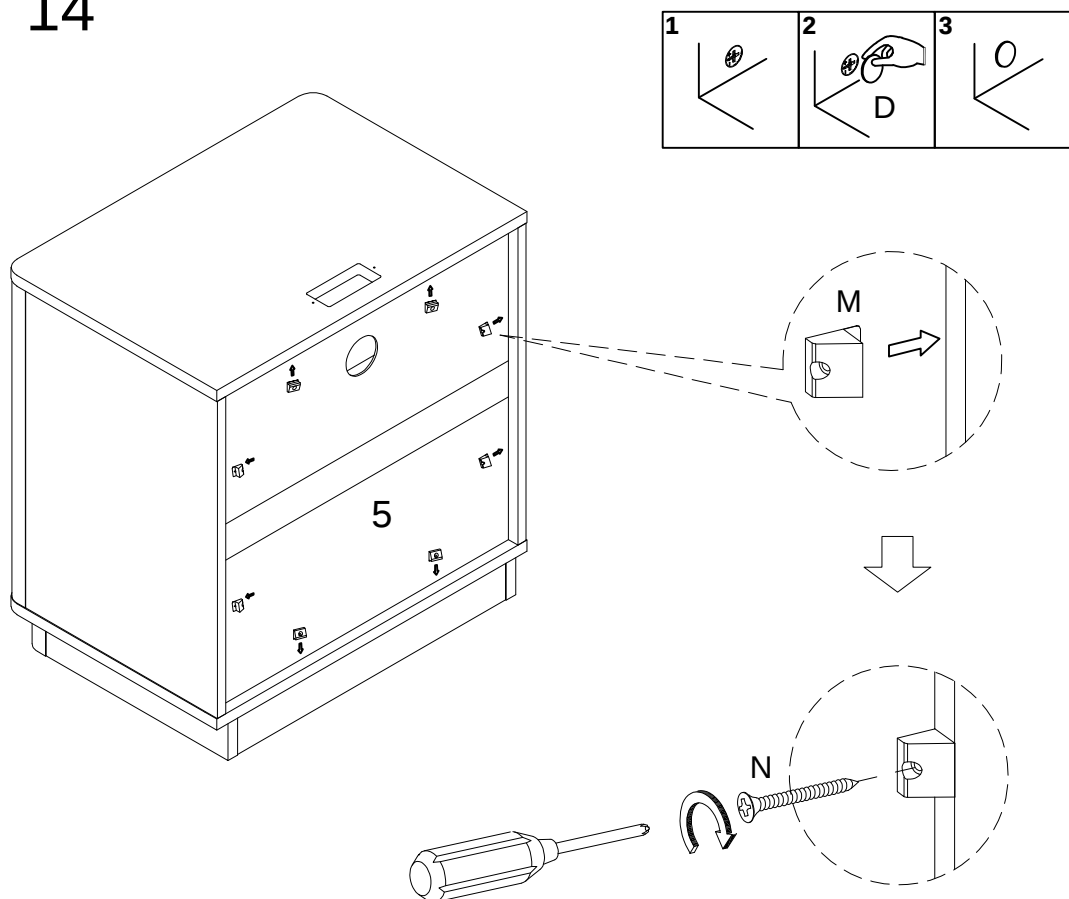


Step 15

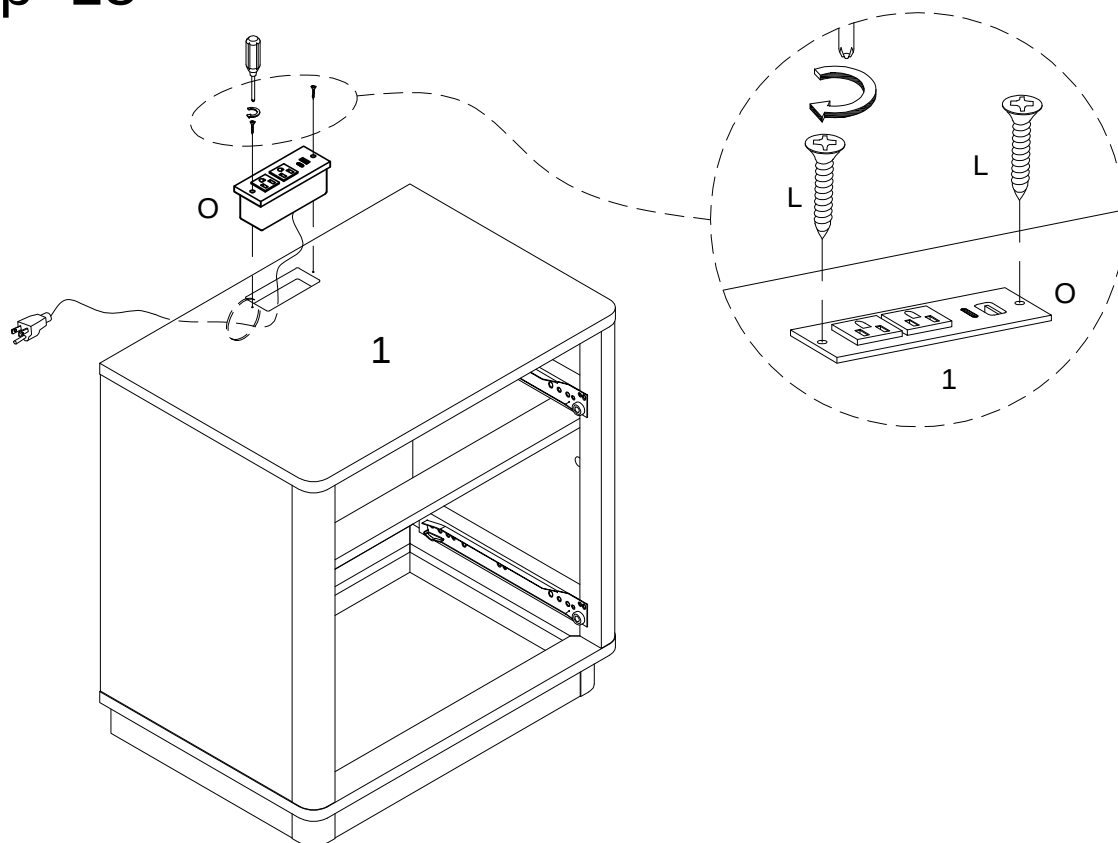


Step 16

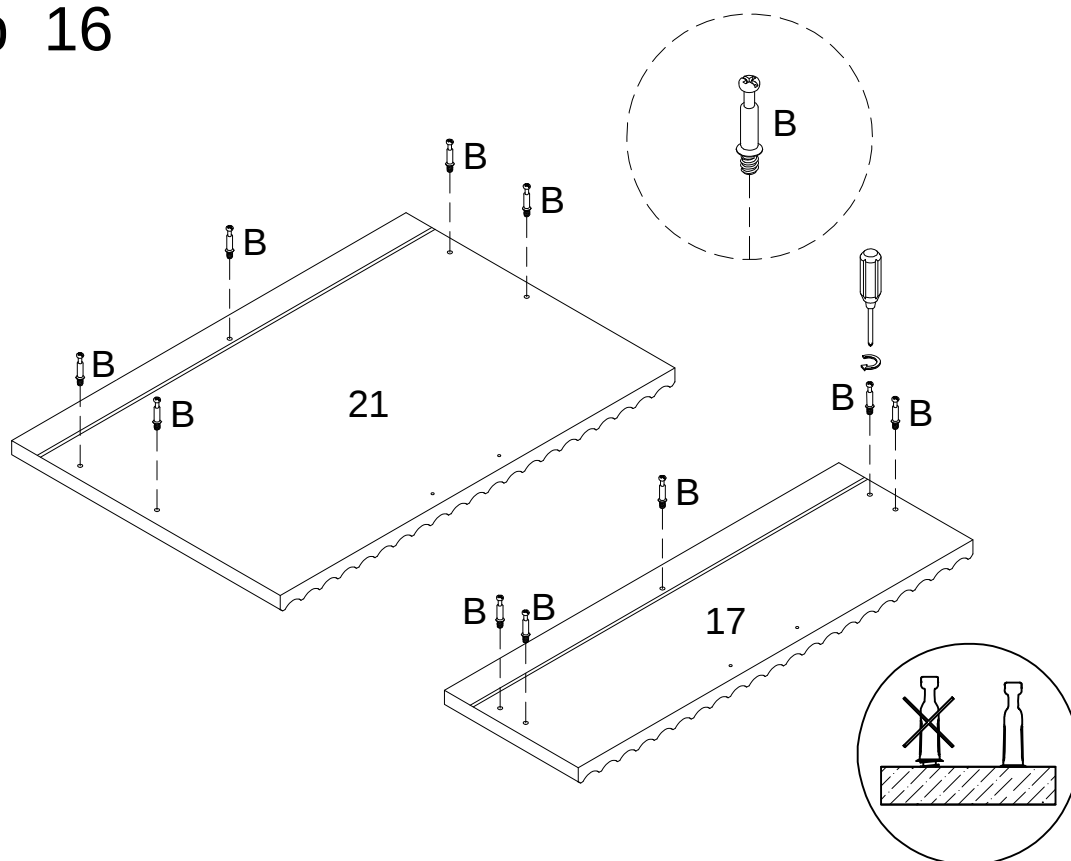


Step 17

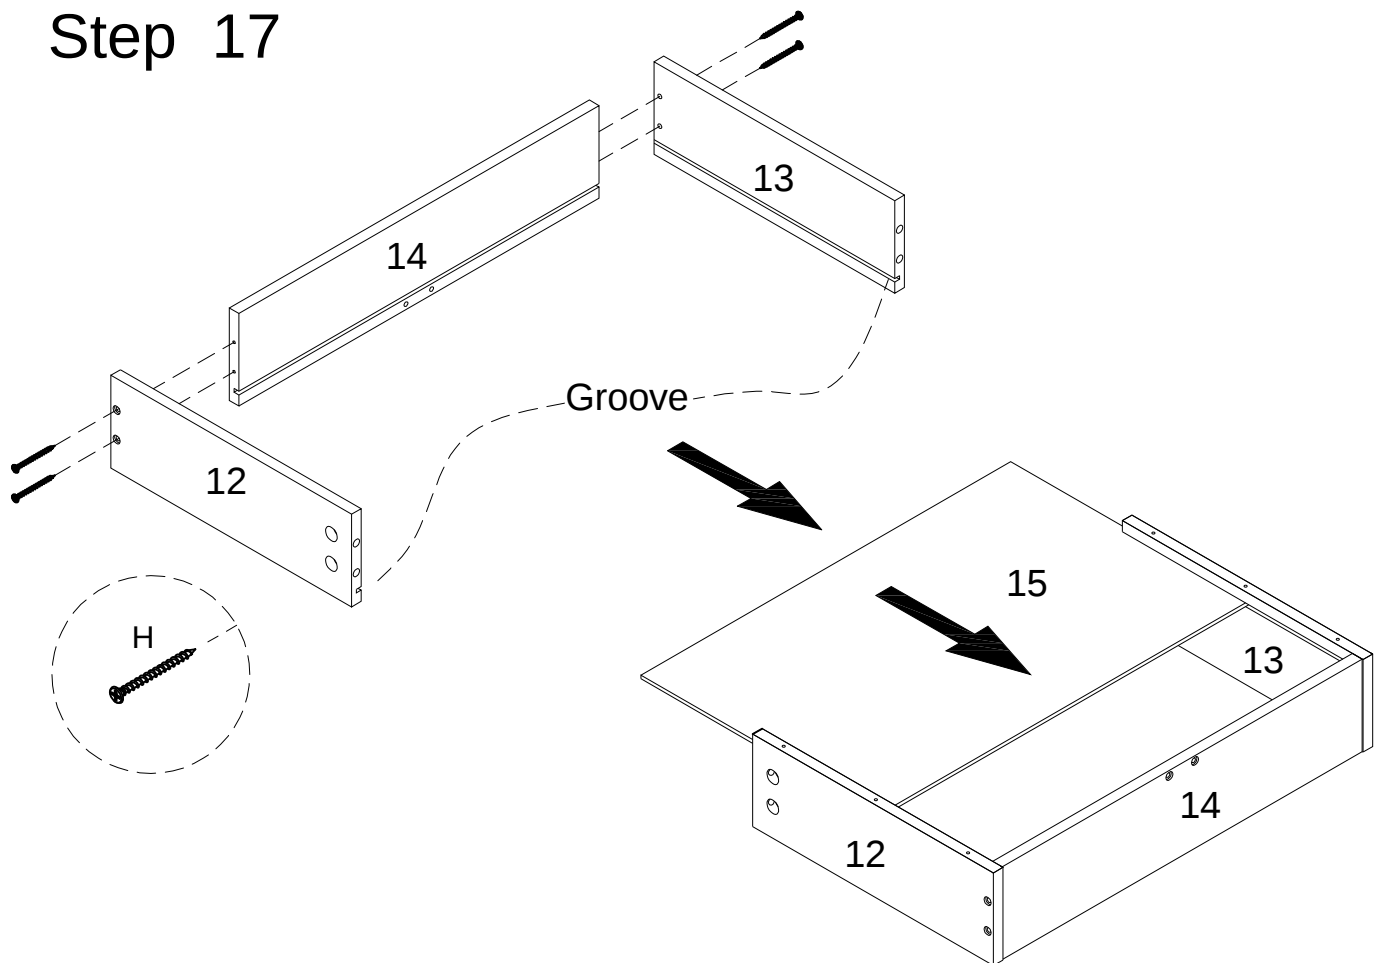


Step 18

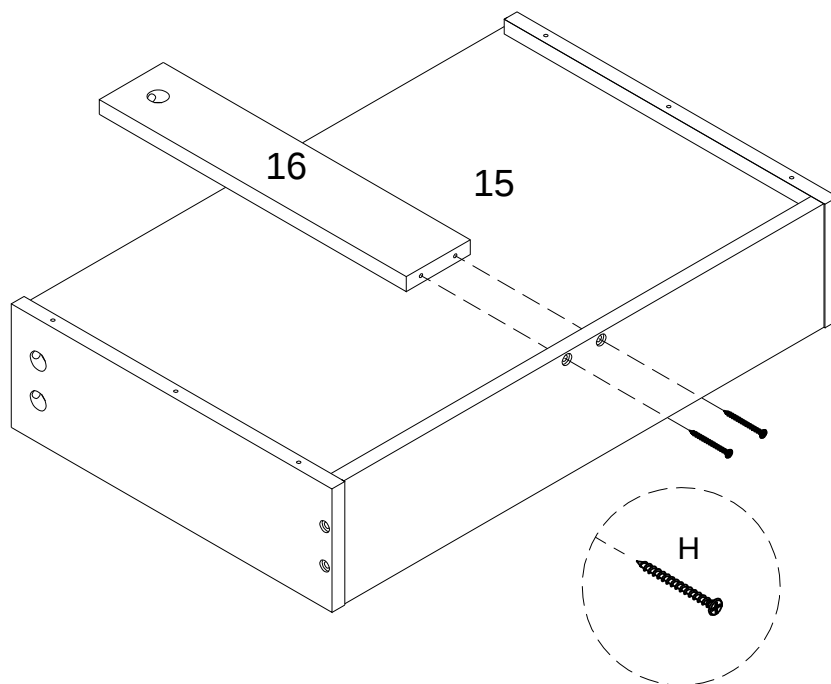


Step 19

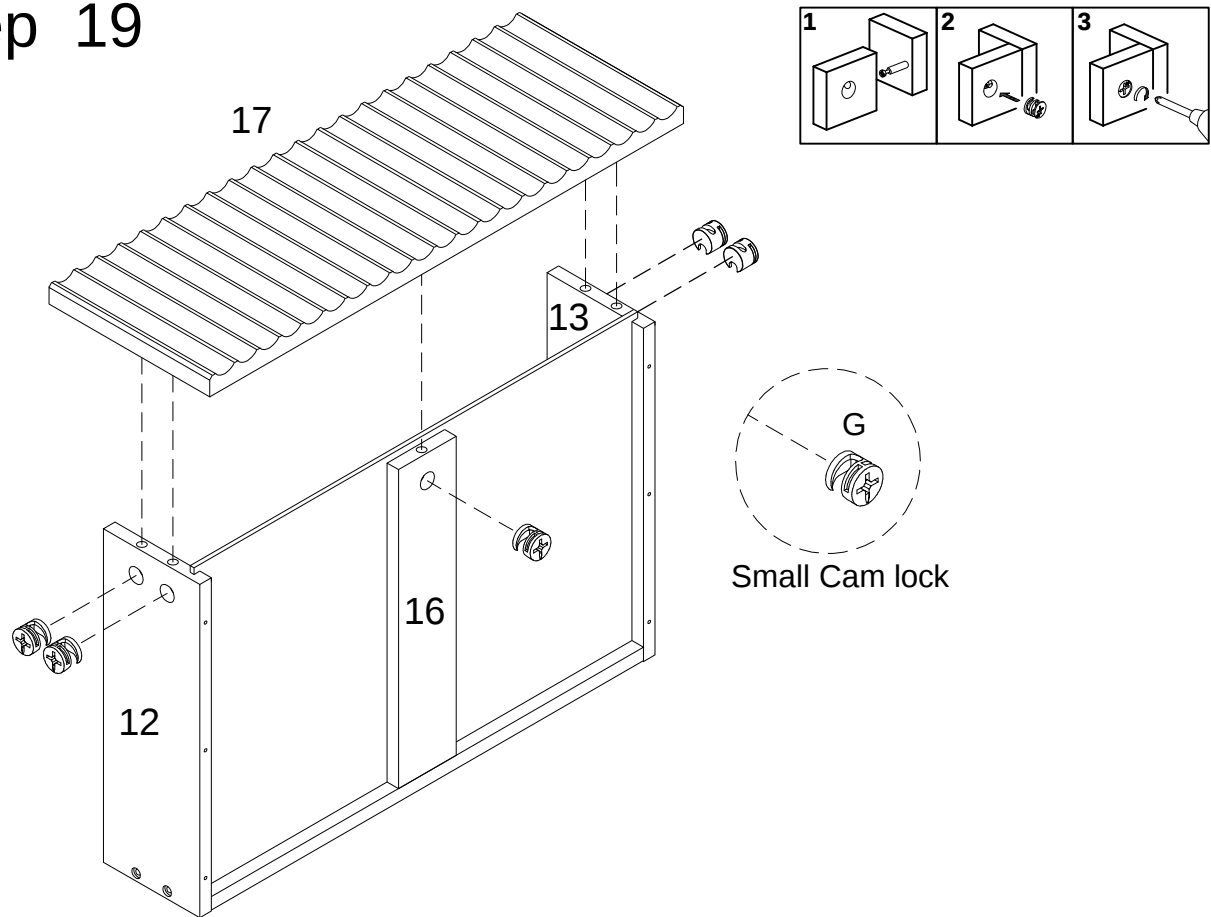


Step 20

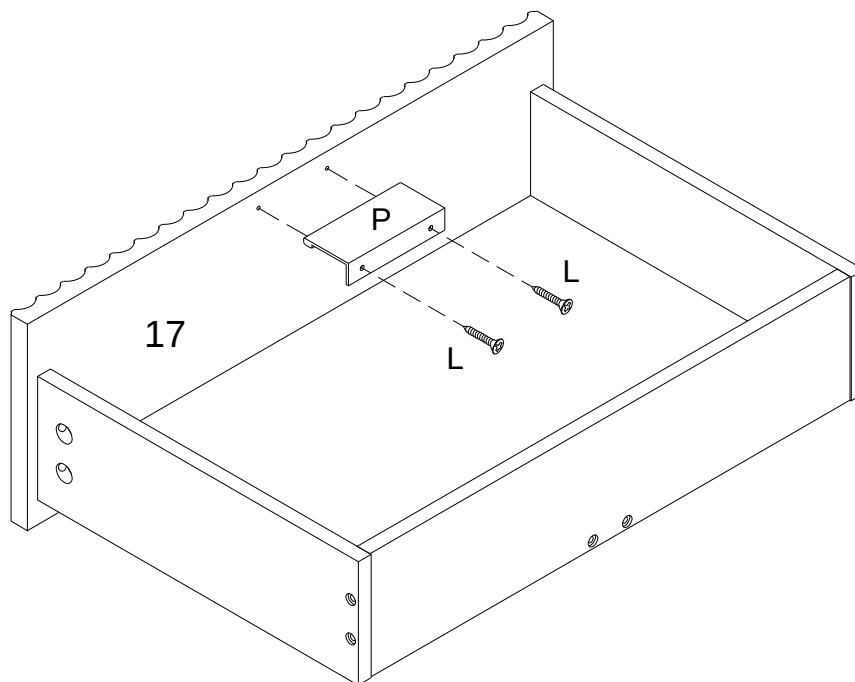


Step 21

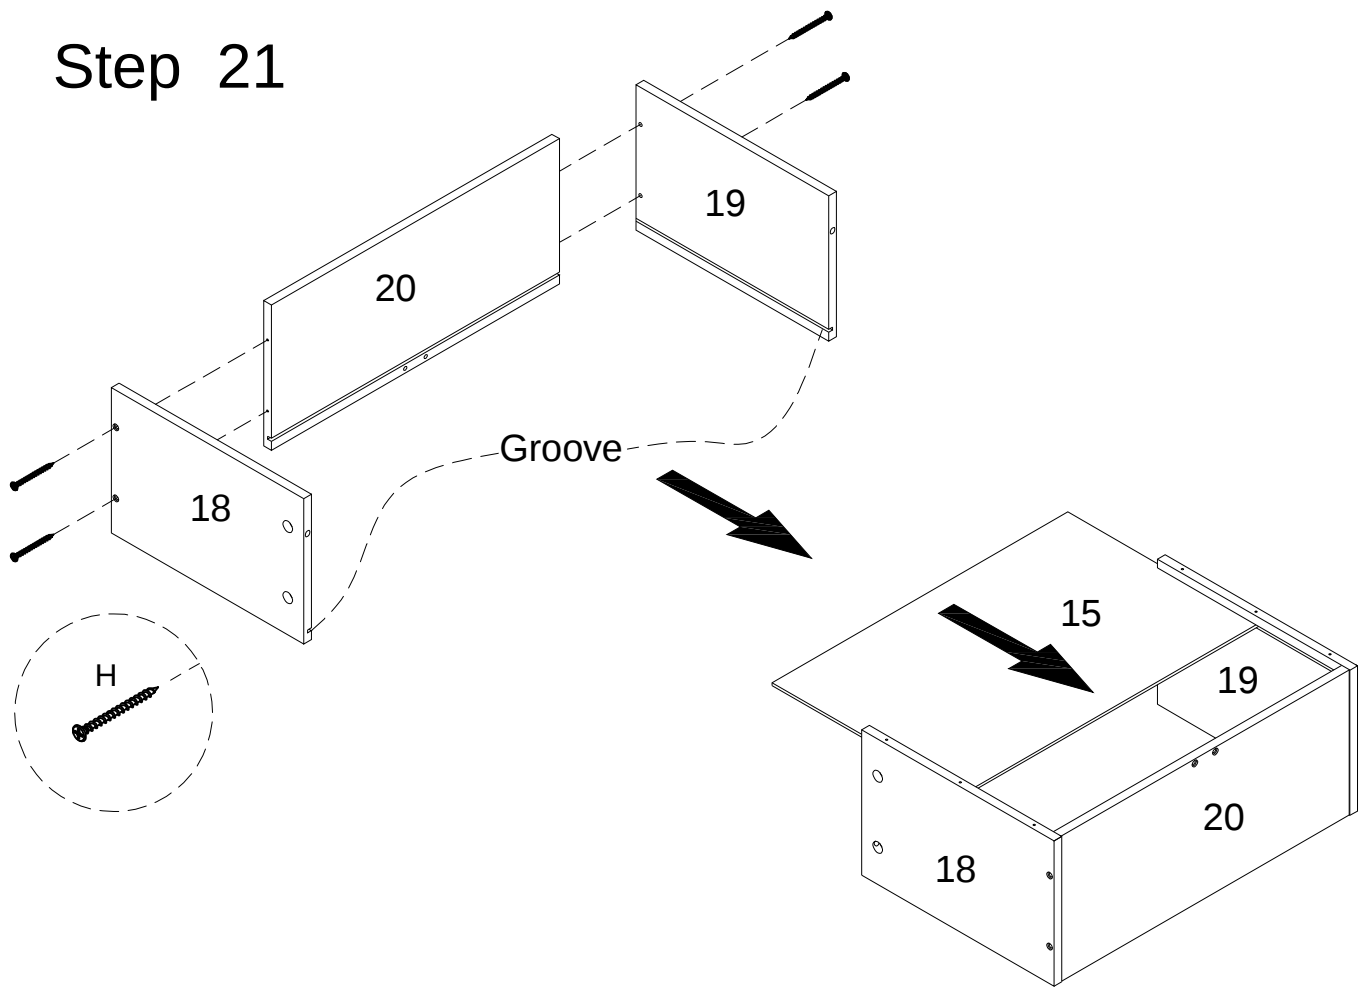


Step 22

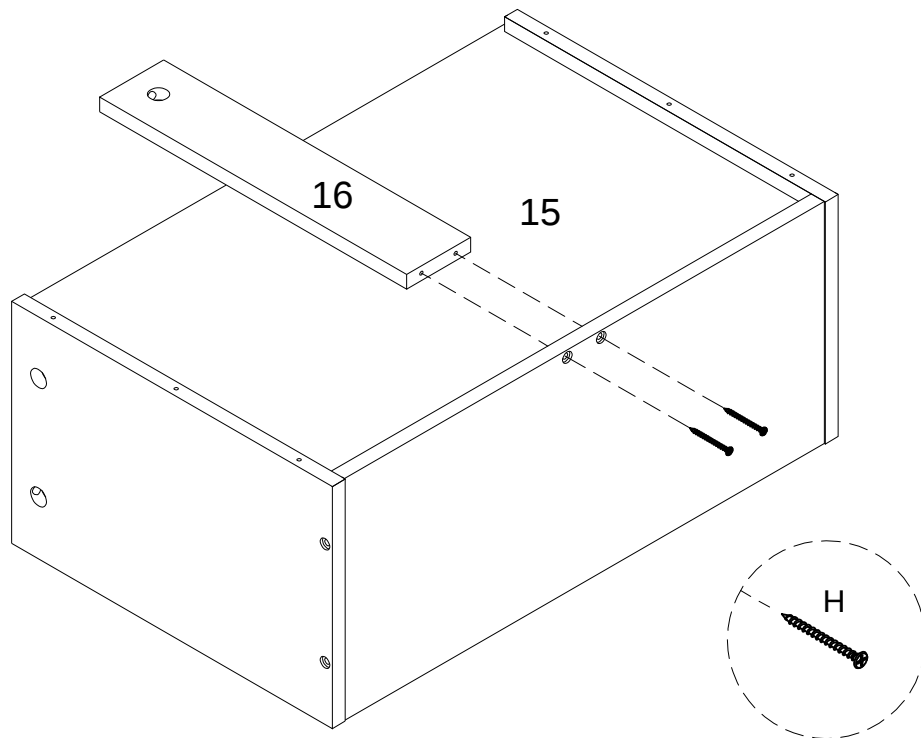


Step 23

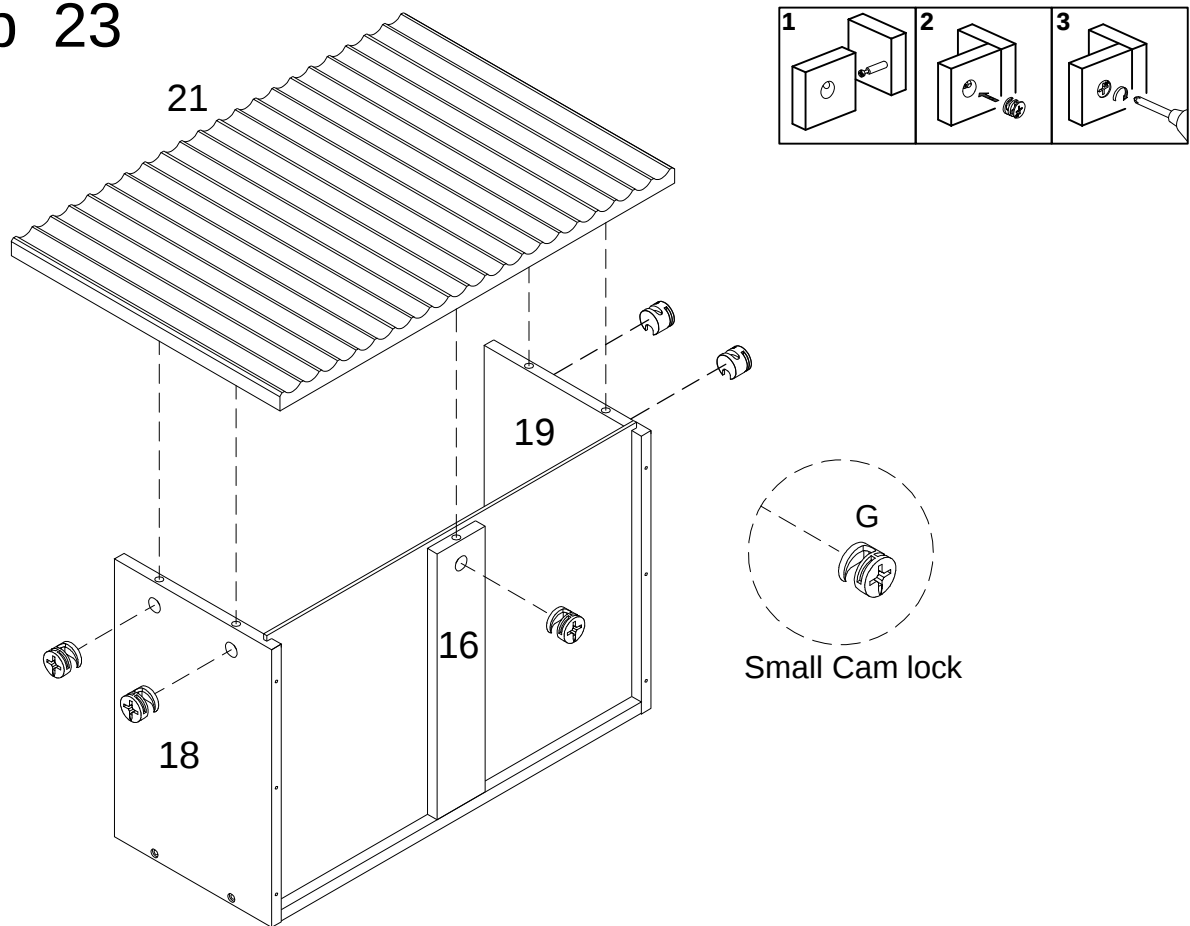


Step 24

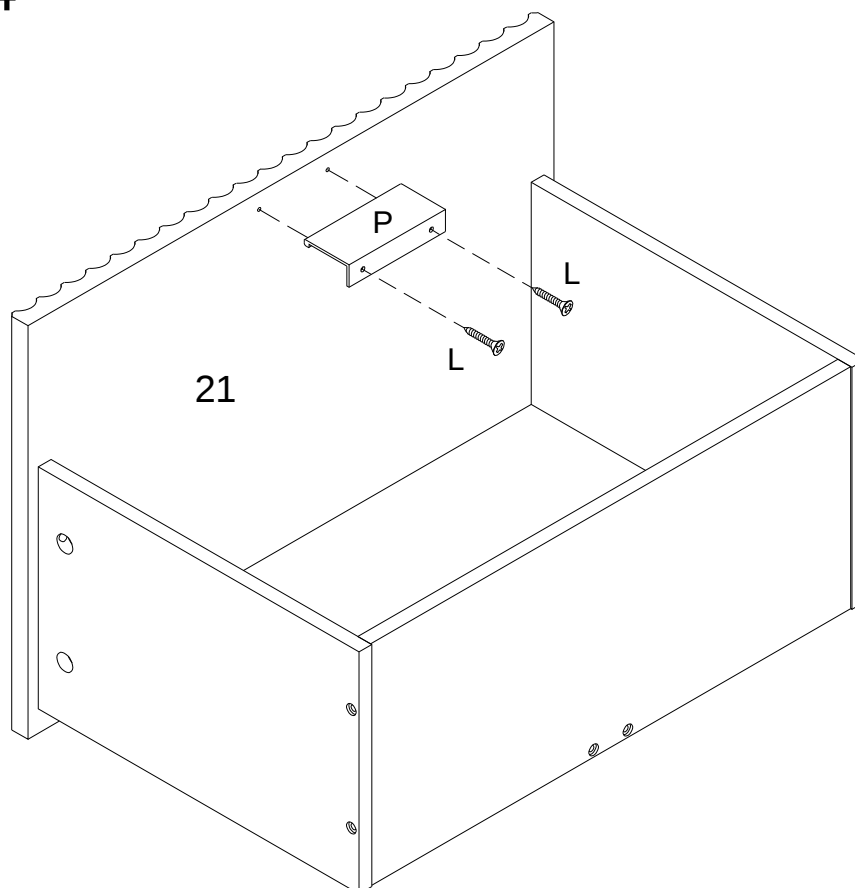


Step 25

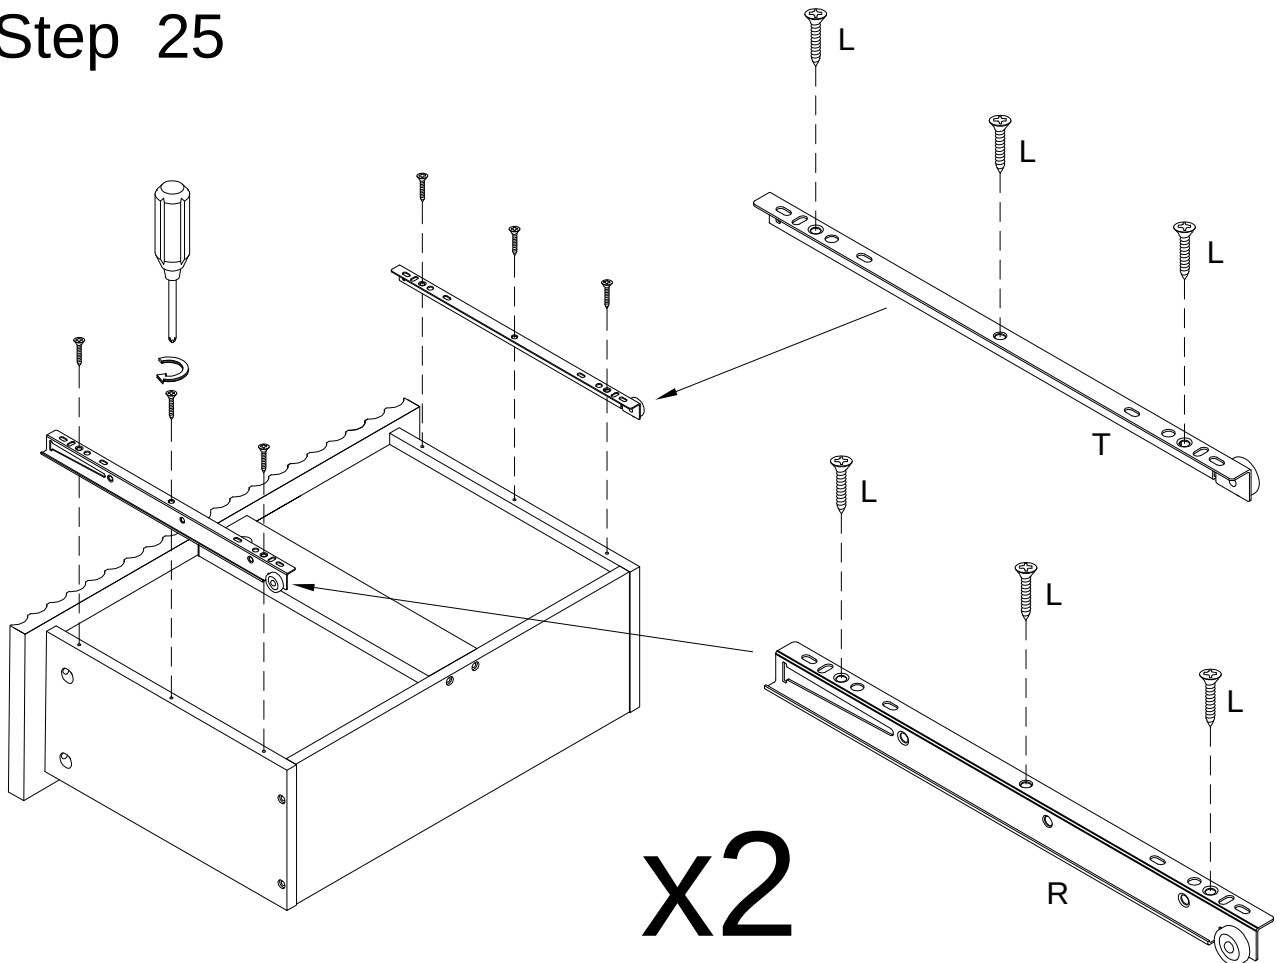

Step 26

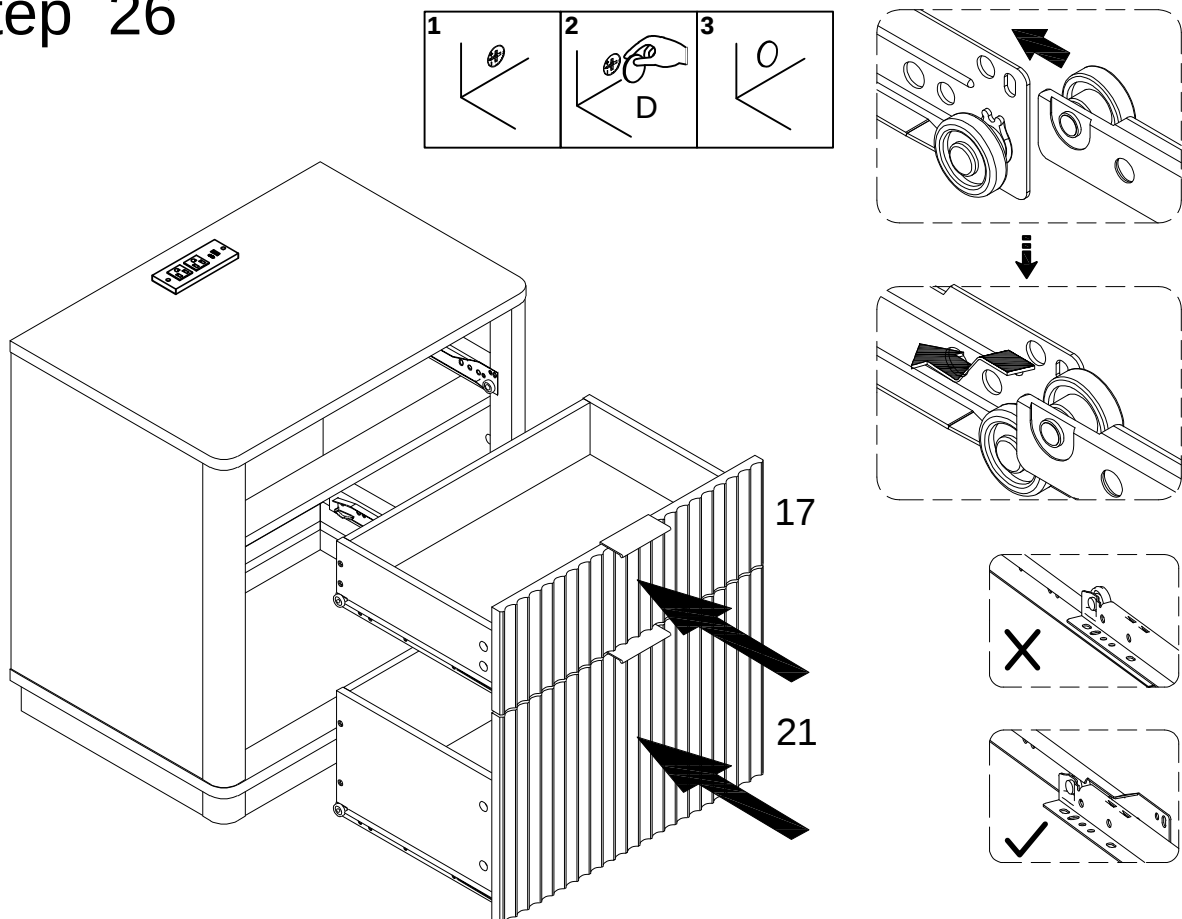

Step 27

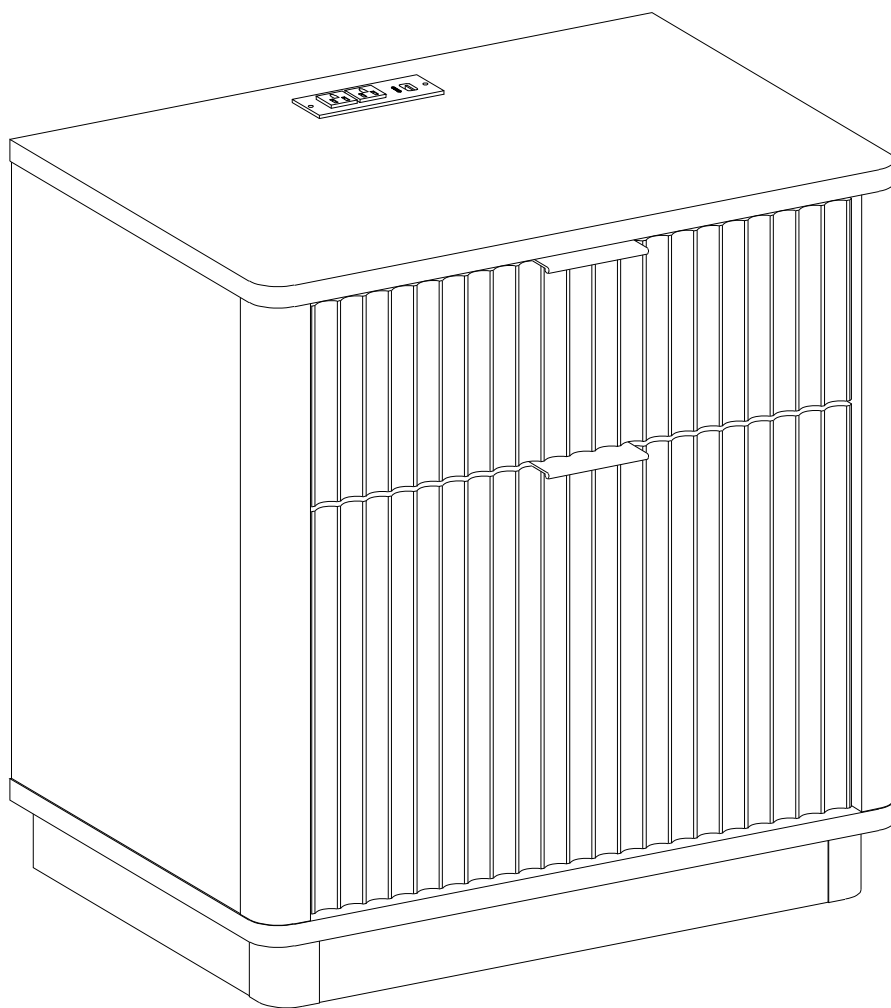

Final Assembly