


Assembly Instruction

ITEM # SW24L1093- Vintage Florentine Floral 2 Doors Cabinet


PARTS										
QTY	1	1	2	1	1	1				

PARTS										
QTY	8	8	4	1						


STEP 1

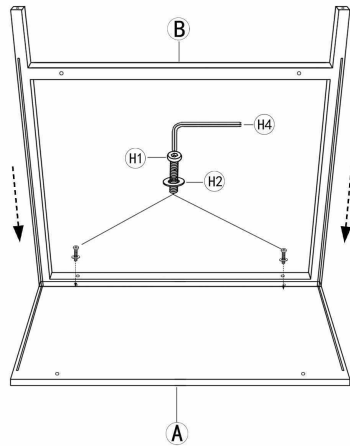


STEP 2

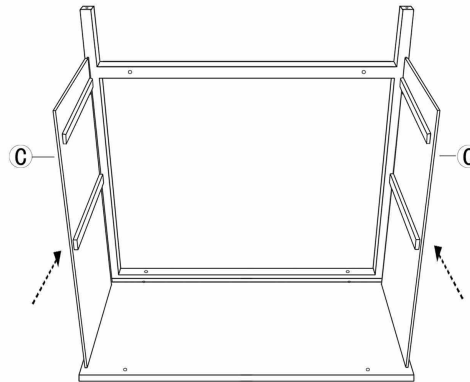


STEP 3

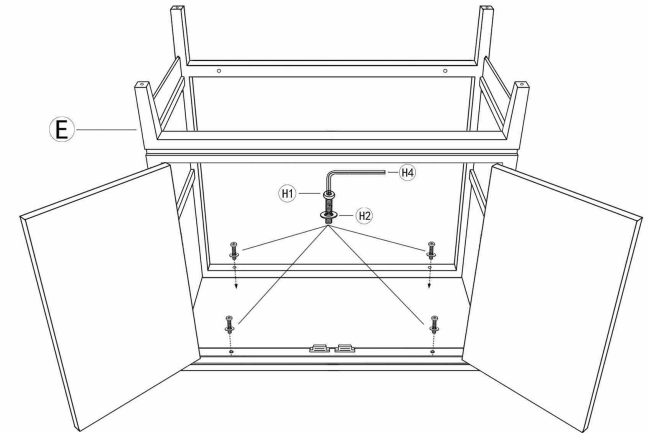

STEP 4

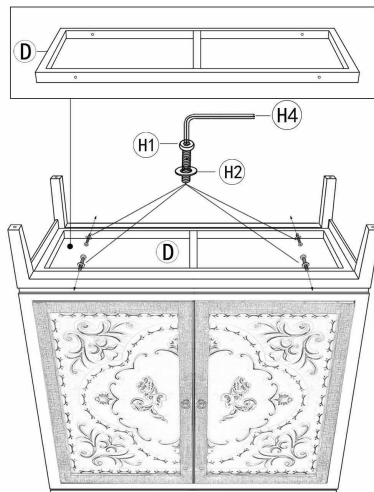

STEP 5

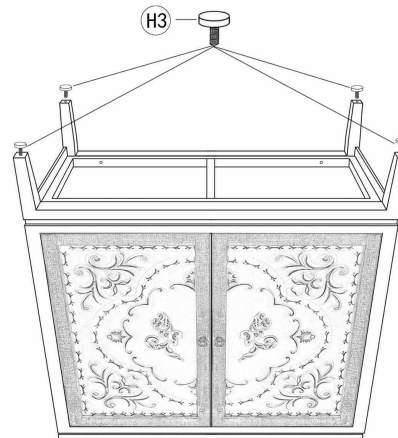

STEP 6

