


ASSEMBLY INSTRUCTIONS

30 INCH BATH VANITY (COMBO)



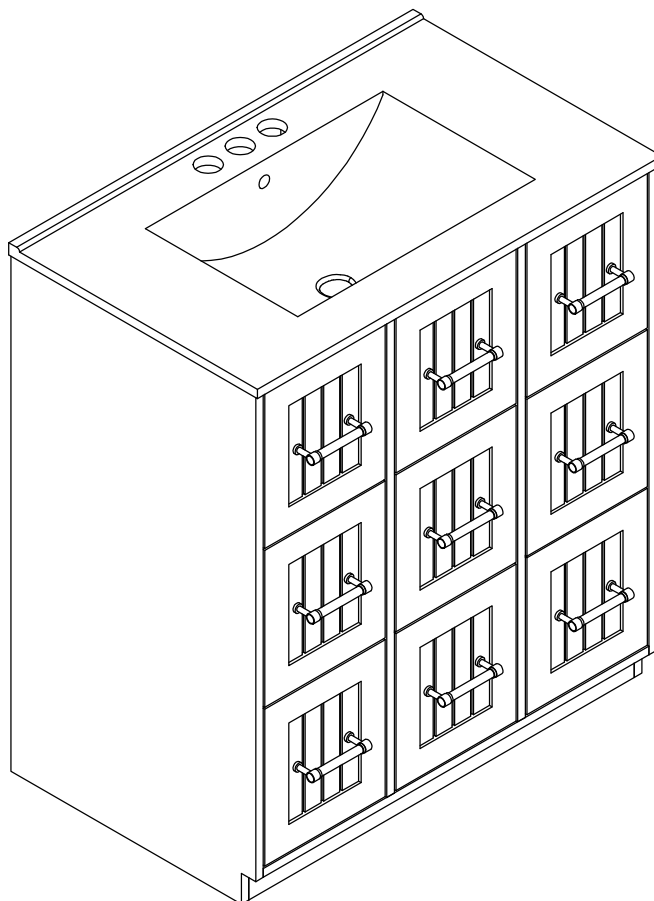


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

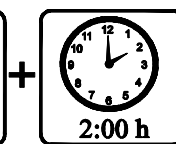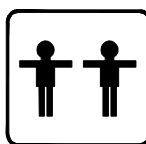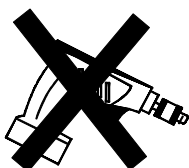

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation







Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions











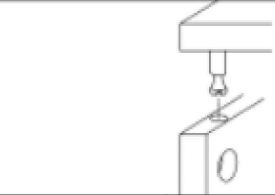
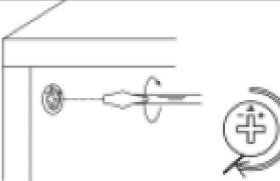
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET







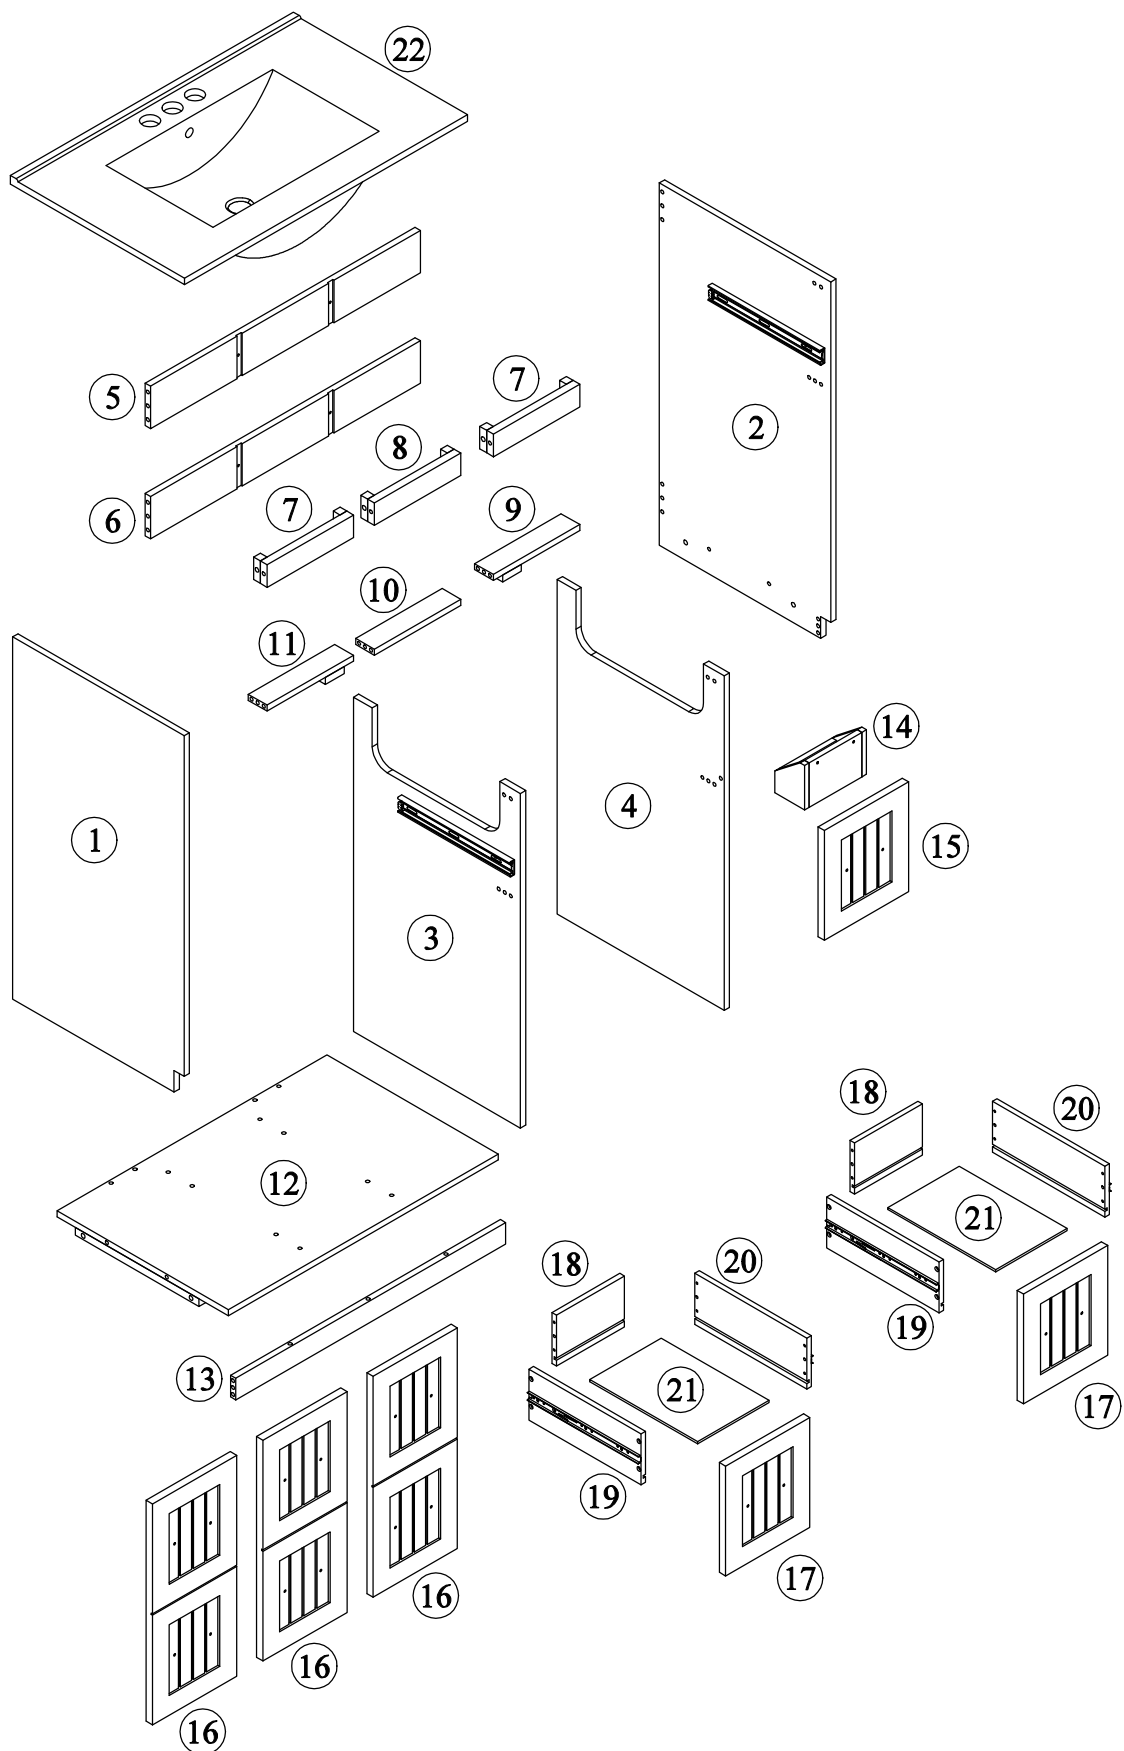


Identifying the Hardware-Identify the hardware using the illustrations below.









Part List -

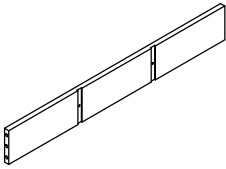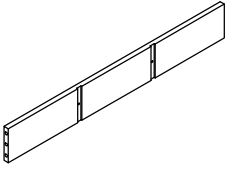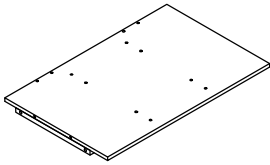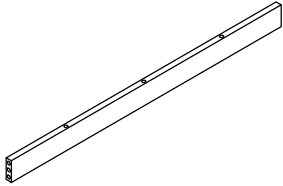1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
5		6	
	Top Rear Panel - 1pc		Bottom Rear Panel - 1pc
7		8	
	Top Bar Front (L+R) - 2pcs		Top Bar Front (M) - 1pc
9		10	
	Mid Bar Front (R) - 1pc		Mid Bar Front (M) - 1pc
11		12	
	Mid Bar Front (L) - 1pc		Bottom Frame - 1pc
13		14	
	Bottom Bar Front - 1pc		Flip down Box - 1pc




Part List -

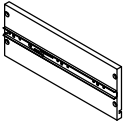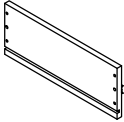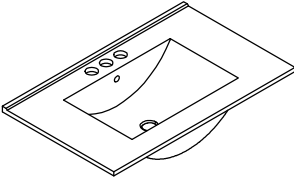15	 Flip down Face - 1pc	16	 Cabinet Door - 3pcs
17	 Drawer Face - 2pcs	18	 Drawer Back Panel - 2pcs
19	 Drawer Side Panel (L) - 2pcs	20	 Drawer Side Panel (R) - 2pcs
21	 Bottom Drawer Panel - 2pcs	22	 Sink - 1pc


Hardware List -

A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts (23pcs)	Three in one lock (23pcs)	Wood dowel (38pcs)
D  ø6x30mm	E  Handle (9pcs)	F  ø5/32"x15mm
Wood dowel (8pcs)	Handle (9pcs)	Handle screw (12pcs)
G  ø5/32"x30mm	H  Rod Support hinge (1pc)	I  Swivel hinge (2pcs)
Handle screw (6pcs)	Rod Support hinge (1pc)	Swivel hinge (2pcs)
J  ø6xø3x12mm	K  Damping hinge (6pcs)	L  ø7xø3.5x15mm
Flat head screw (8pcs)	Damping hinge (6pcs)	Flat head screw (36pcs)
M  ø8xø4x25mm	N  ø8xø4x32mm	O  ø13x1/4"x45mm
Round head screw (4pcs)	Round head screw (16pcs)	Hex-Head bolts (2pcs)
P  ø13x1/4"x28mm	Q  ø1/4"x16x1mm	R  Split lock washer (8pcs)
Hex-Head bolts (6pcs)	Washer (8pcs)	Split lock washer (8pcs)
S  4mm	T  Anti fall hardware (2sets)	
Allen key (1pc)	Anti fall hardware (2sets)	


STEP: 1

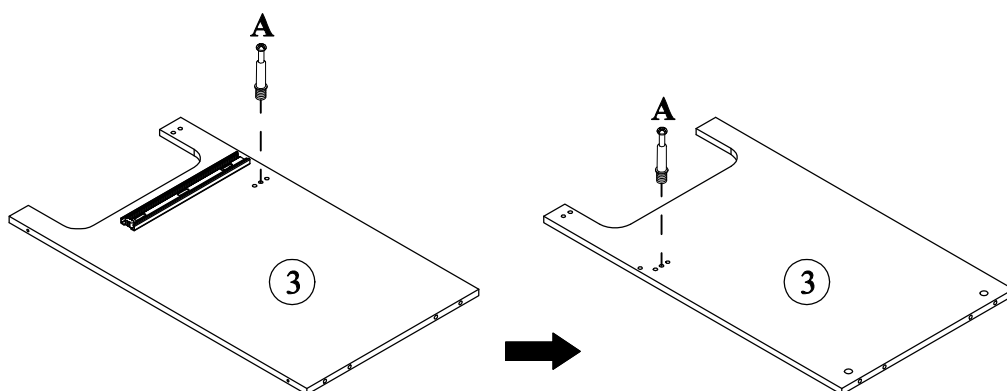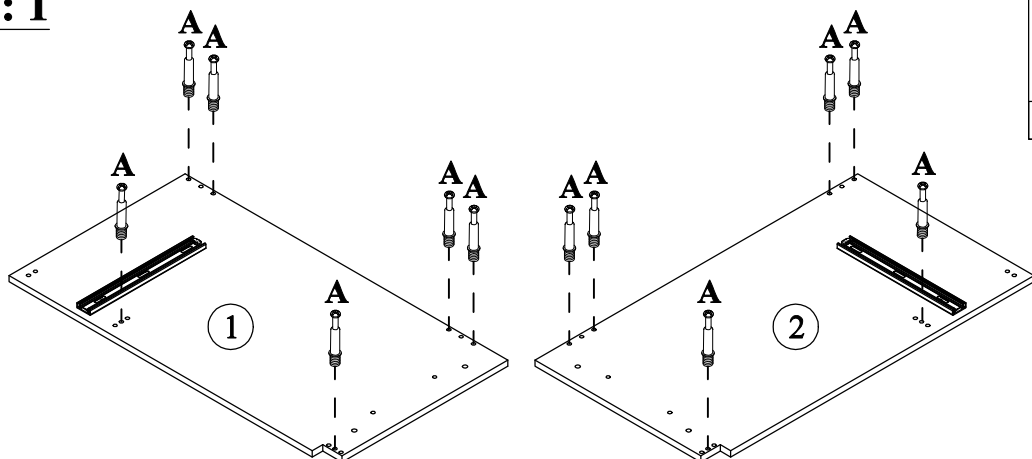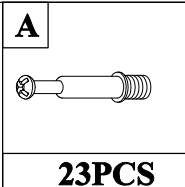


Turn over Panel No.3 and install screw (A)

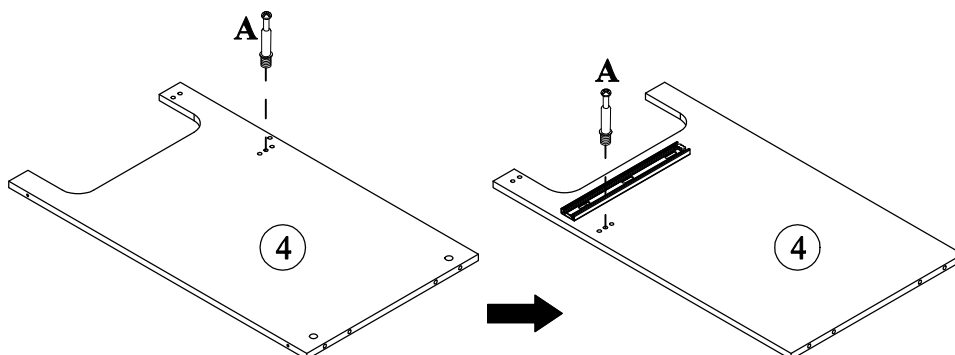


Turn over Panel No.4 and install screw (A)

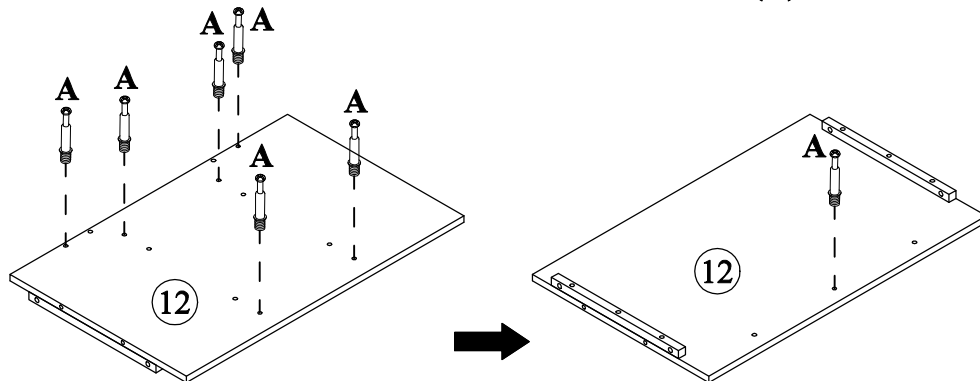


Turn over Panel No.12 and install screw (A)

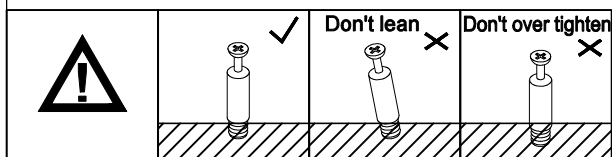



STEP: 2

E		G		I		J	
1PC		2PCS		2PCS		4PCS	

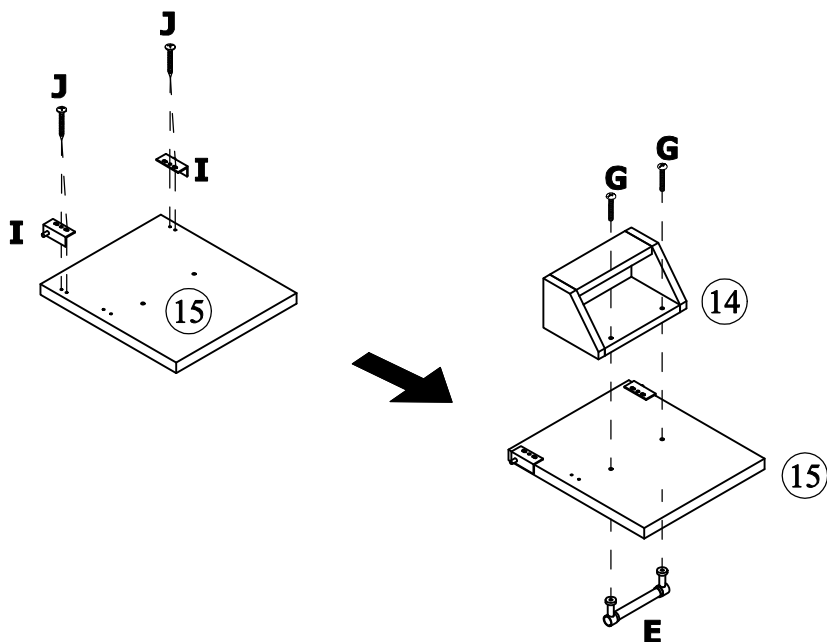





STEP: 3

B		C	
1PC		2PCS	

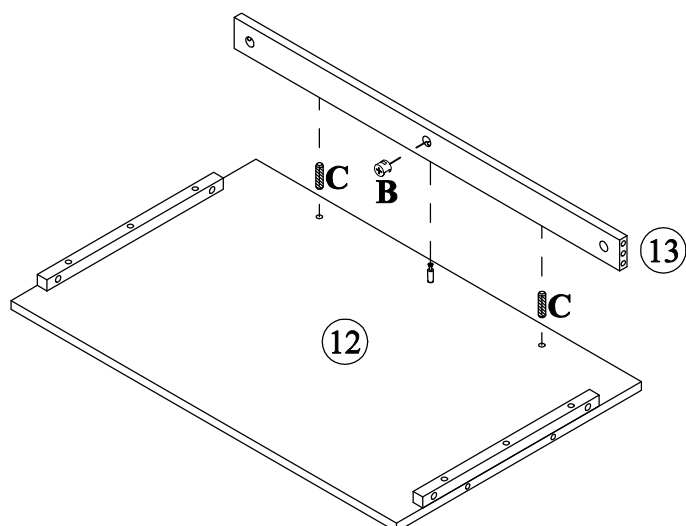

STEP: 4

B		C		O		Q	
4PCS		12PCS		2PCS		2PCS	
				R		S	
				2PCS		1PC	

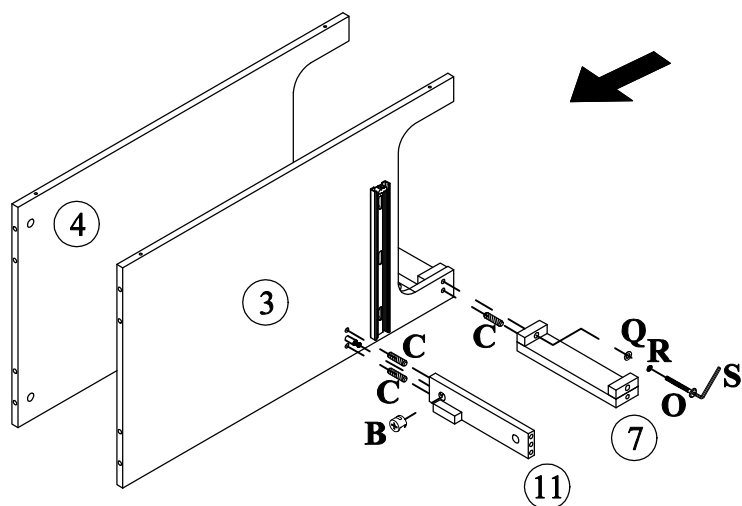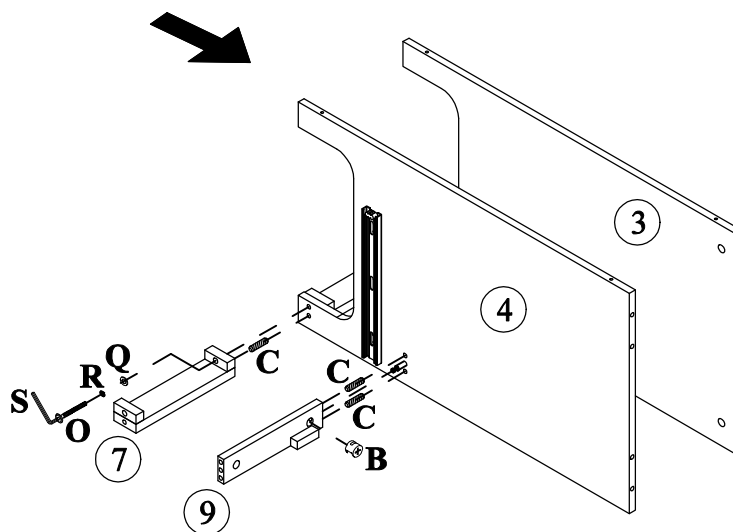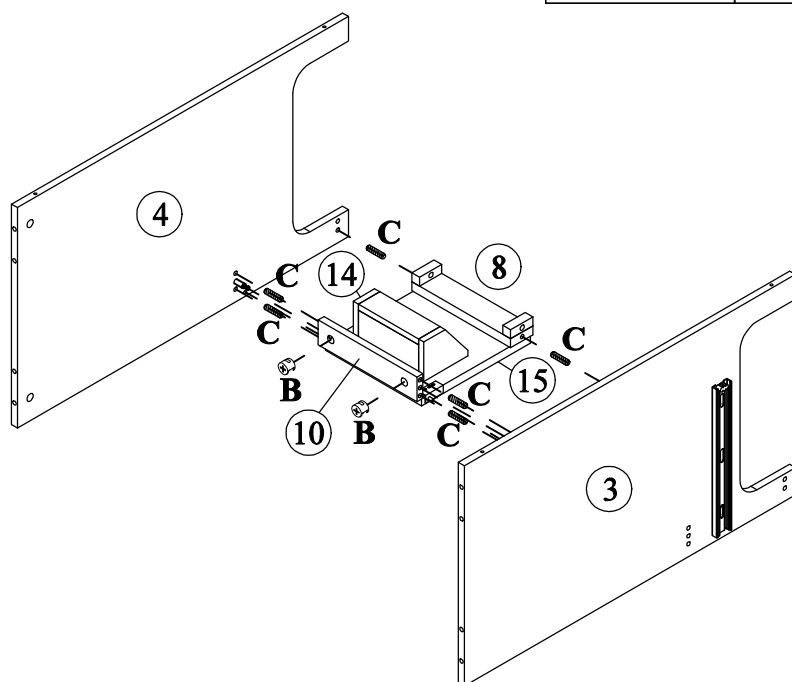


STEP: 5

M



4PCS

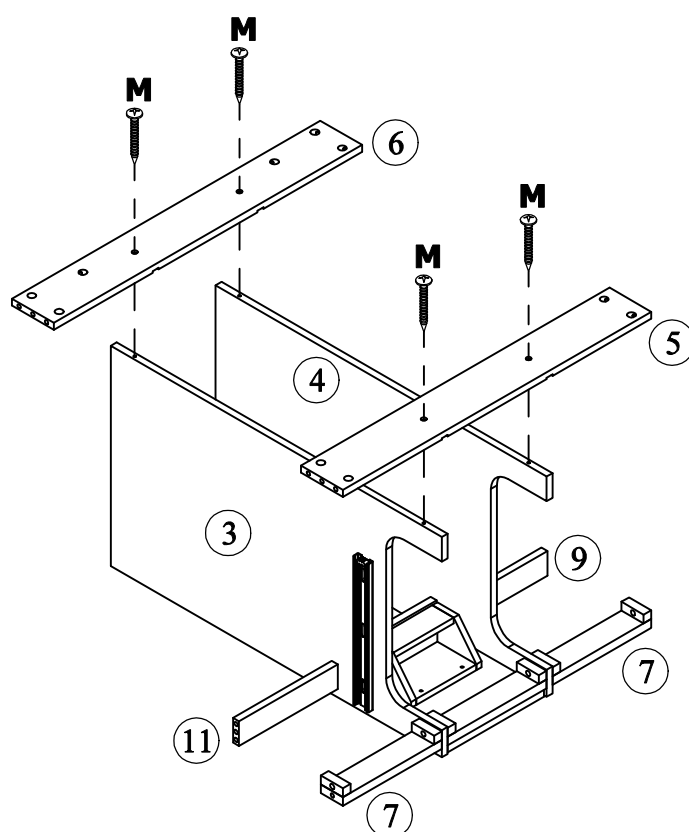

STEP: 6

B






6PCS


C





6PCS

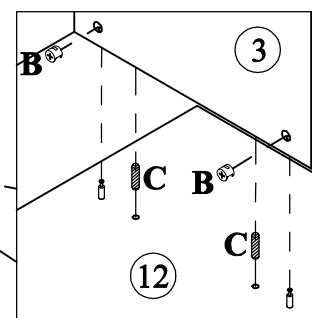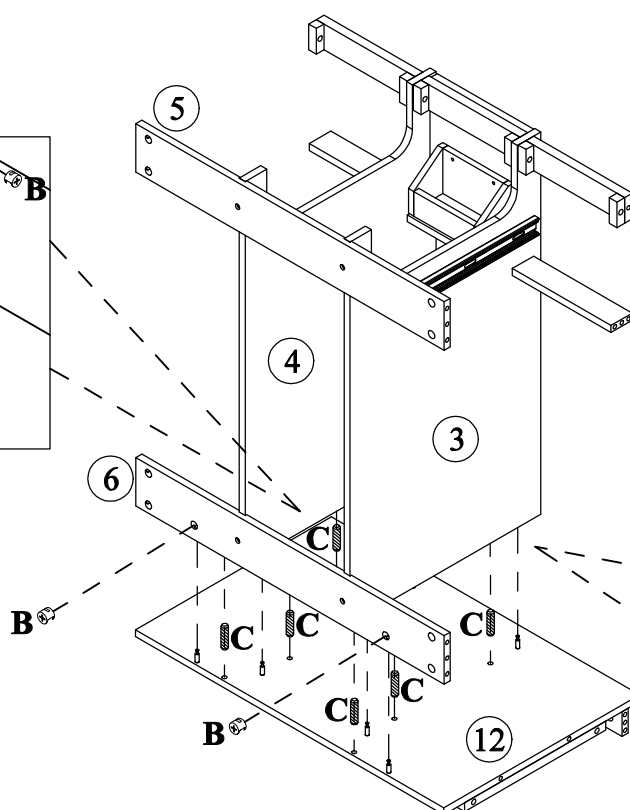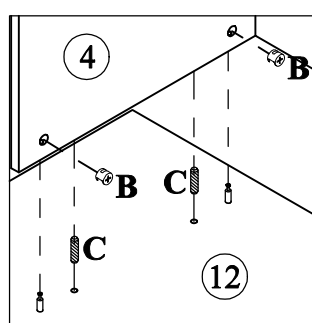




STEP: 7

B		C		P		Q	
6PCS		9PCS		3PCS		3PCS	
				R		S	
				3PCS		1PC	

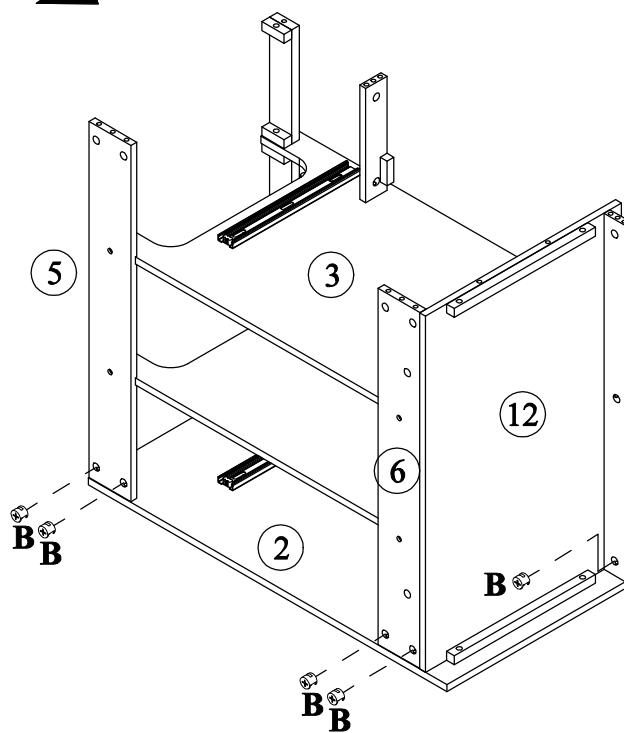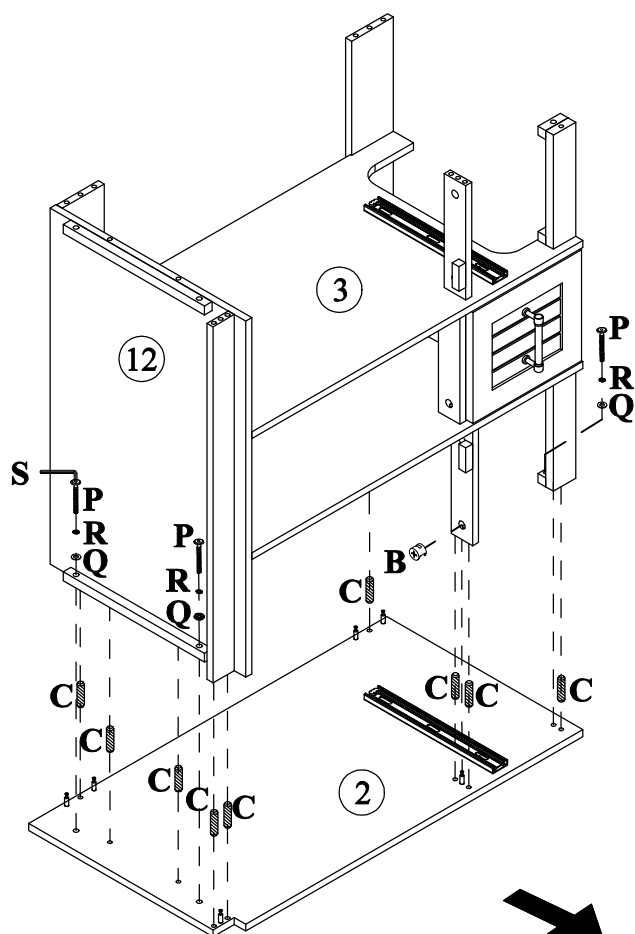



STEP: 8

B		C		P		Q	
6PCS		9PCS		3PCS		3PCS	
				R		S	
				3PCS		1PC	

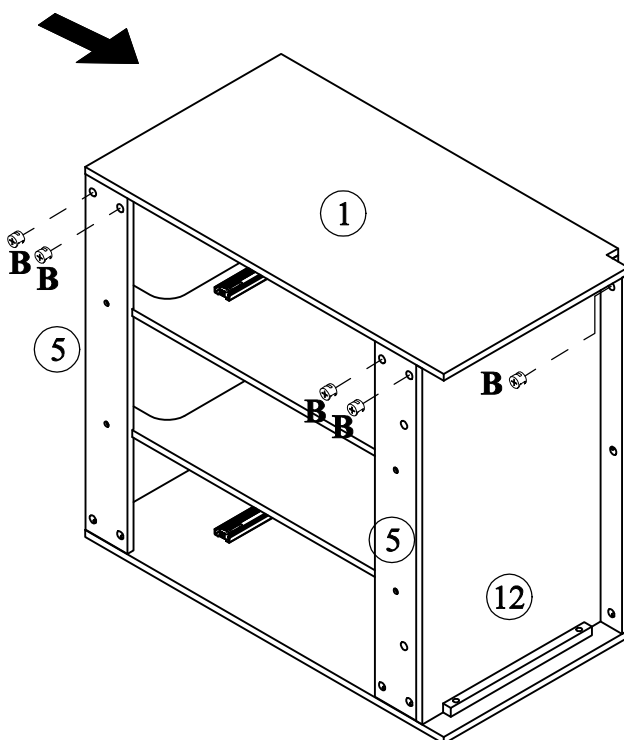
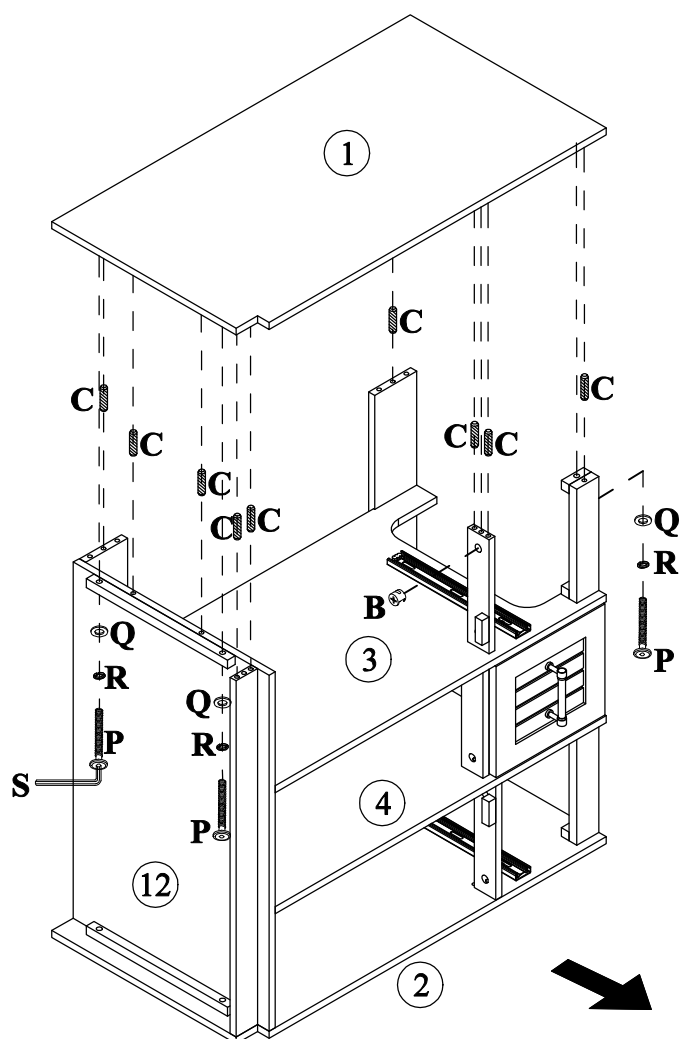




STEP: 9

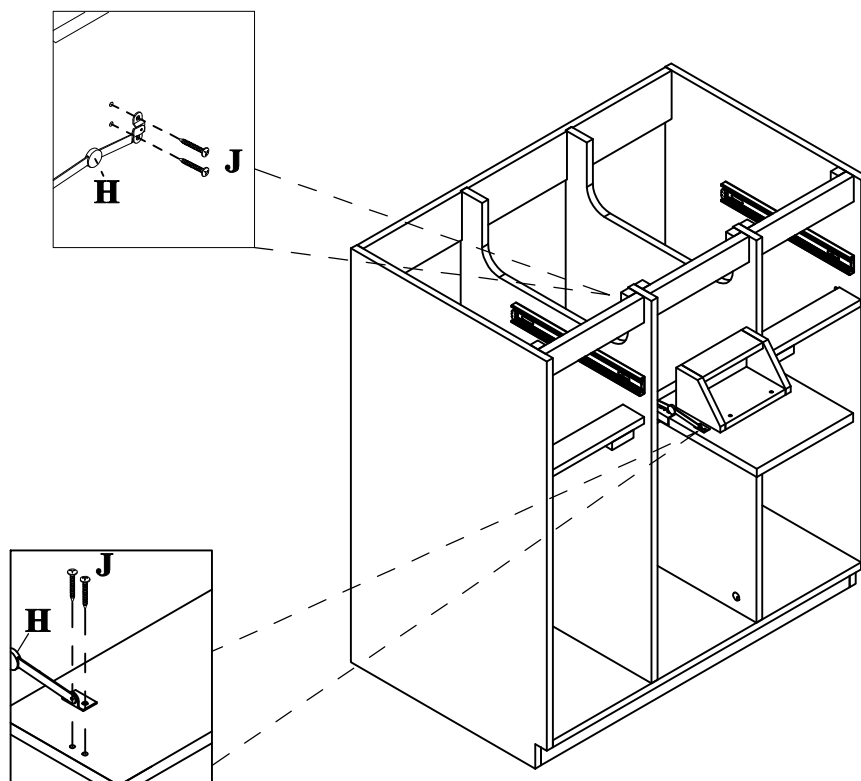

H	J
	
1PC	4PCS

STEP: 10

E	F	K	L
			
6PC	12PCS	6PCS	12PCS

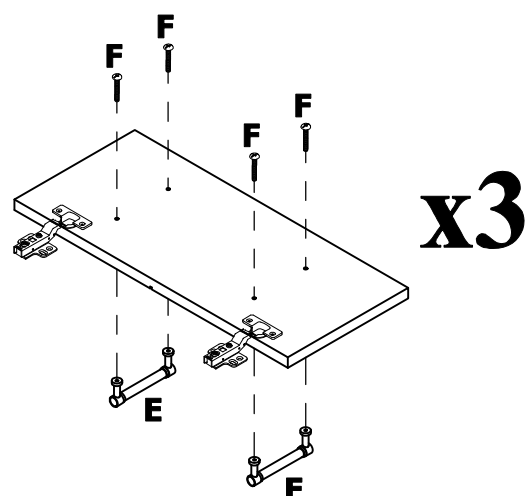
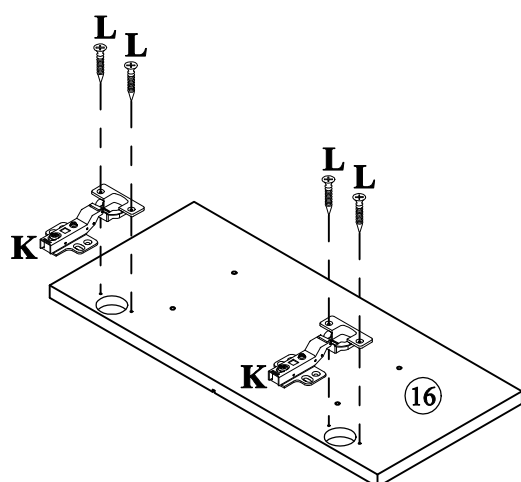


STEP: 11


L




24PCS

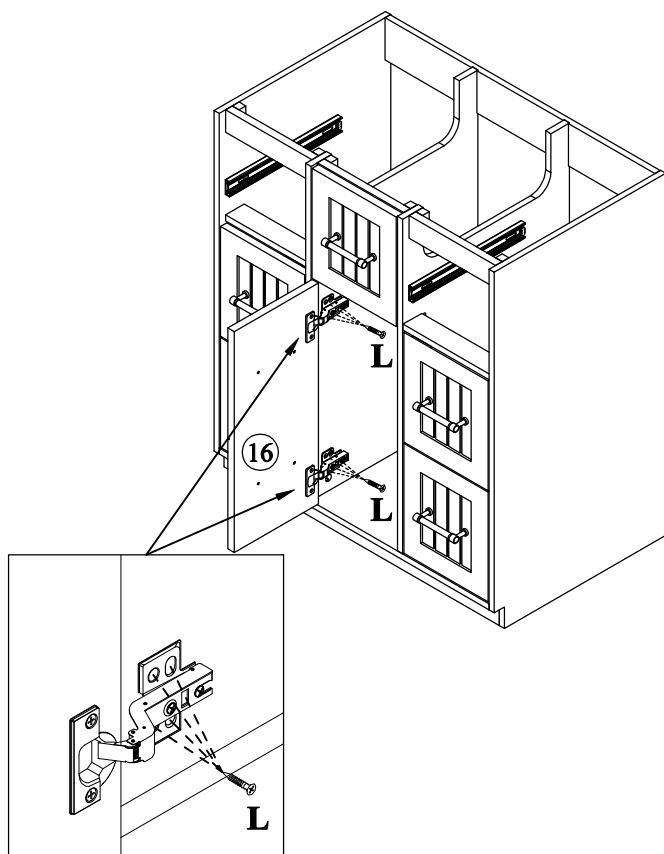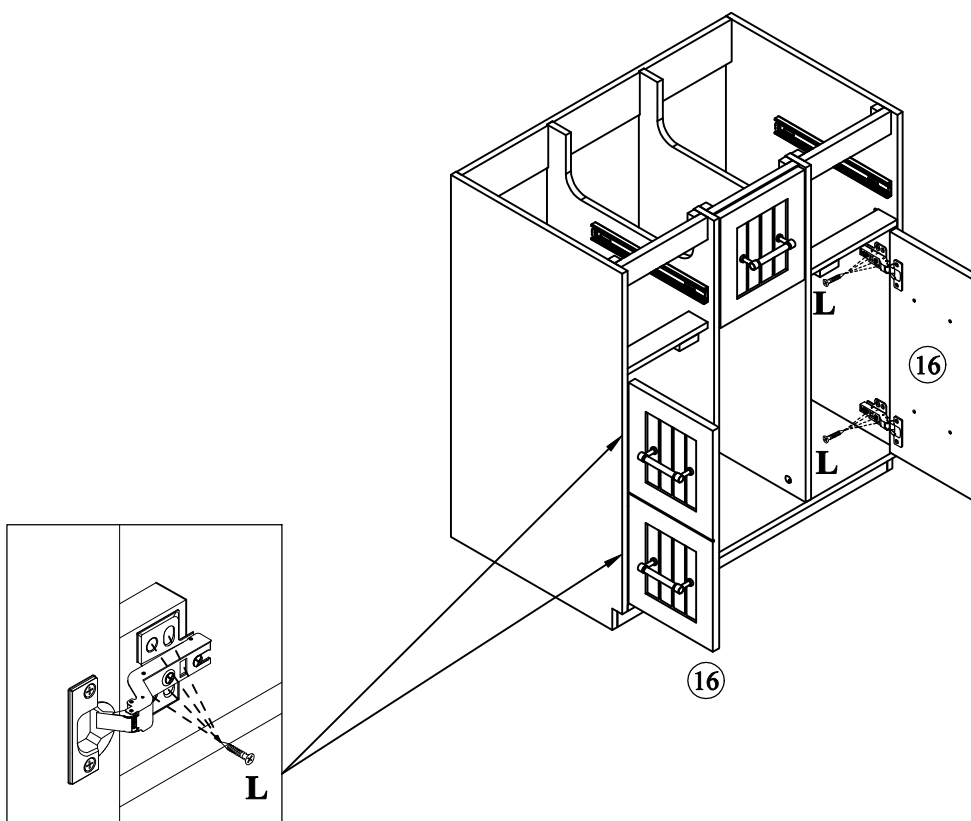


Use the screws to adjust up or down

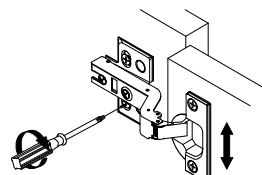


Use the screws to permanent

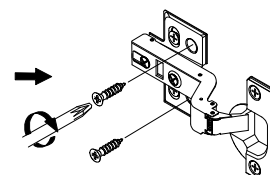


Use the screws to adjust left or right

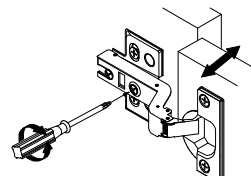


Use the screws to adjust in or out

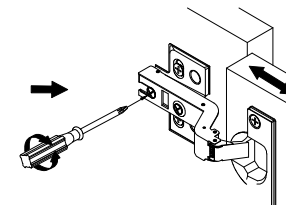



STEP: 12

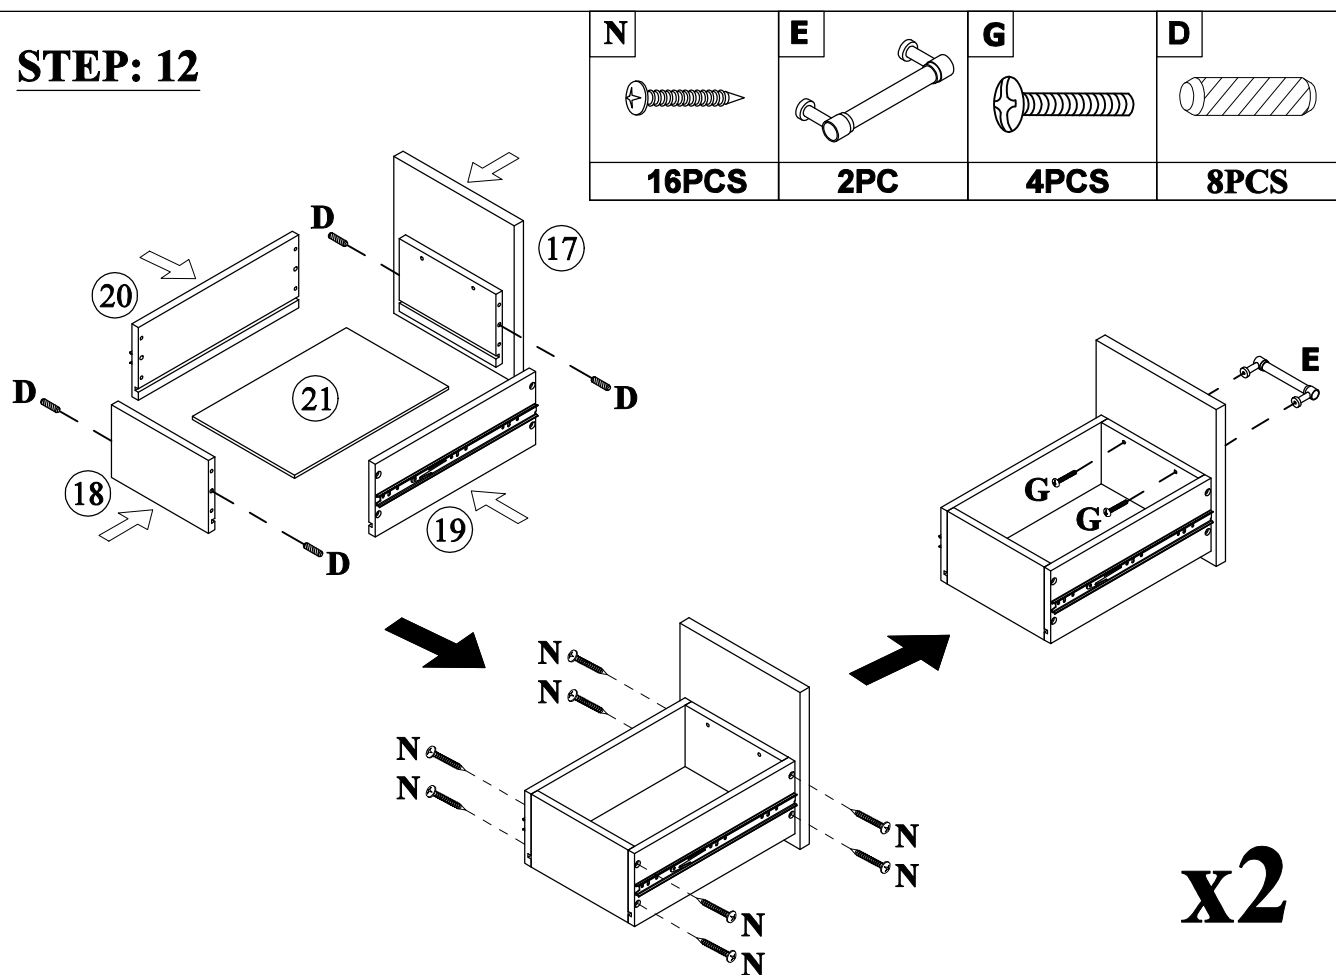

STEP: 13

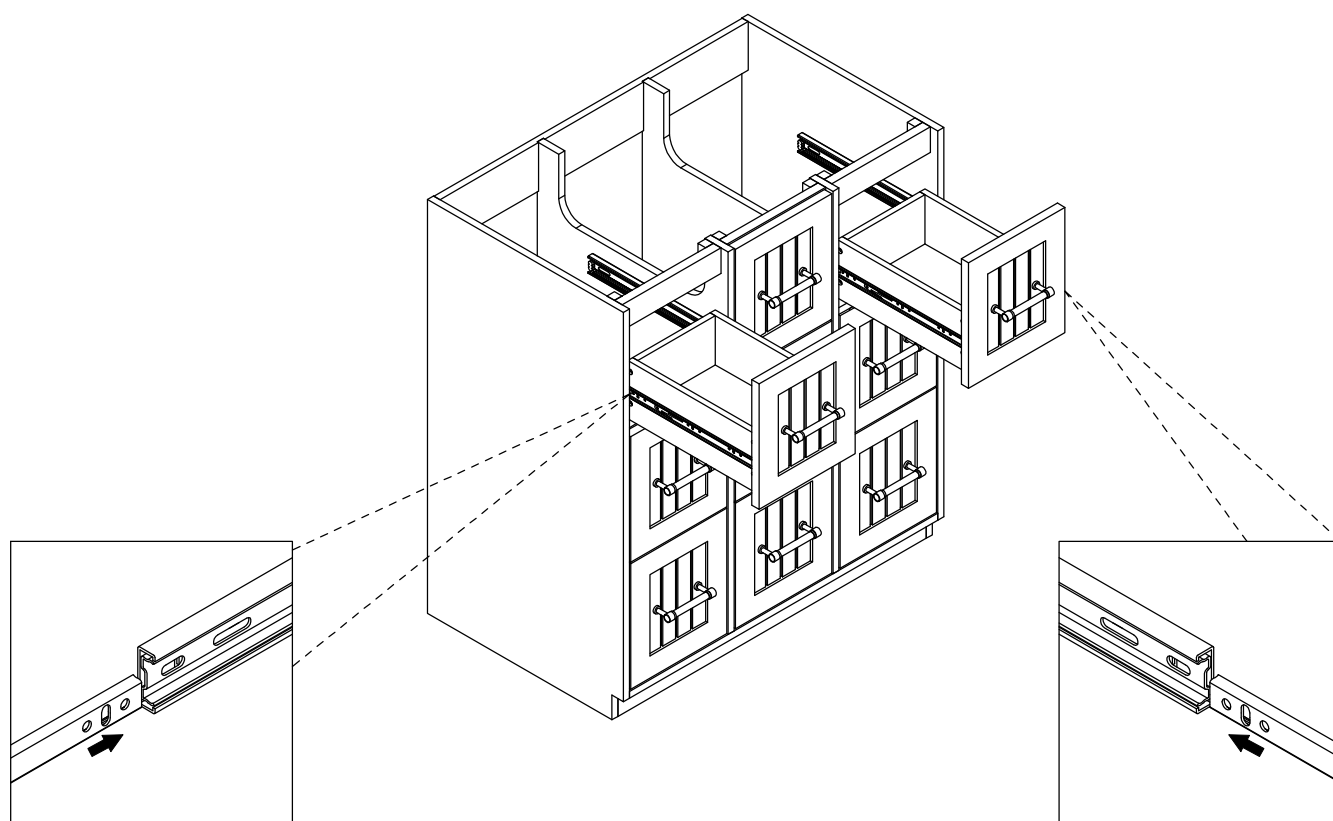


STEP: 14

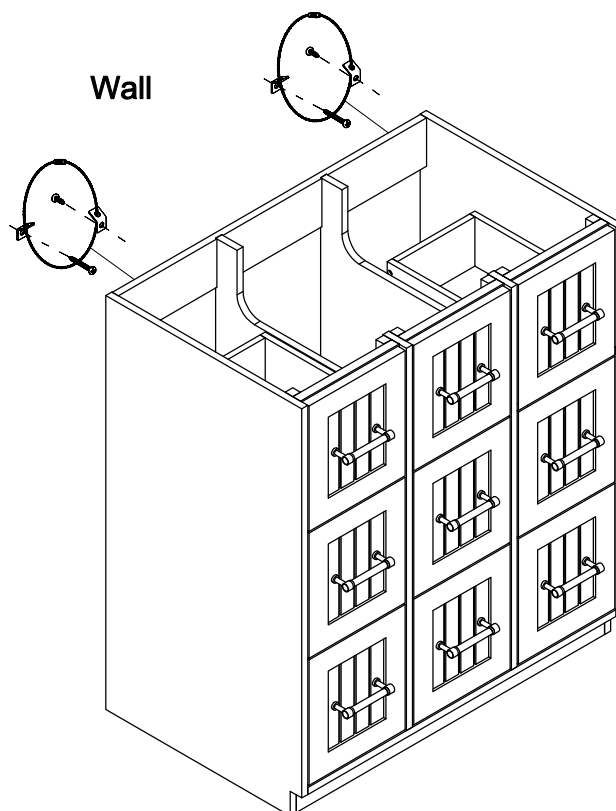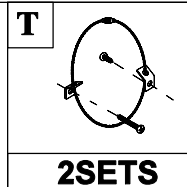


STEP: 15


Install the sink on the cabinet with glue.
Let stand for 24 hours

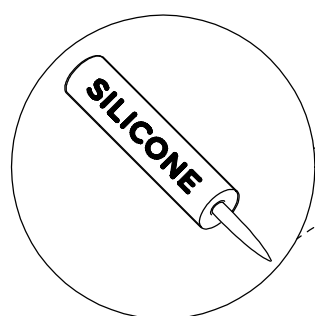


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

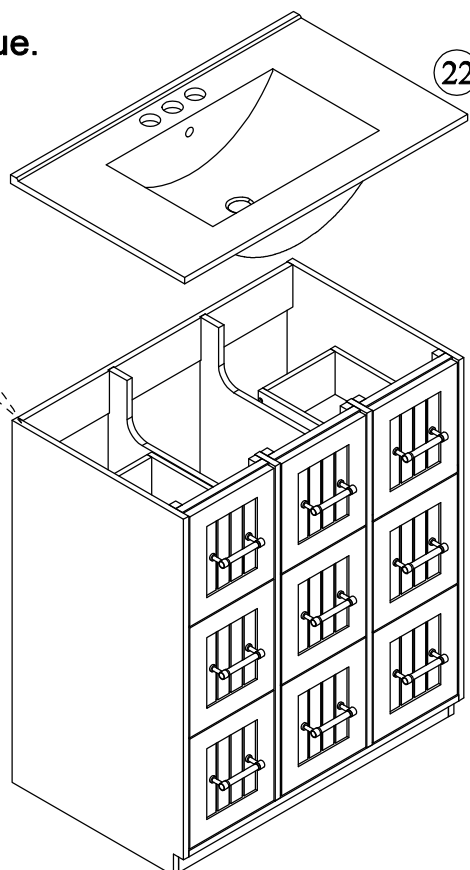

STEP: 16

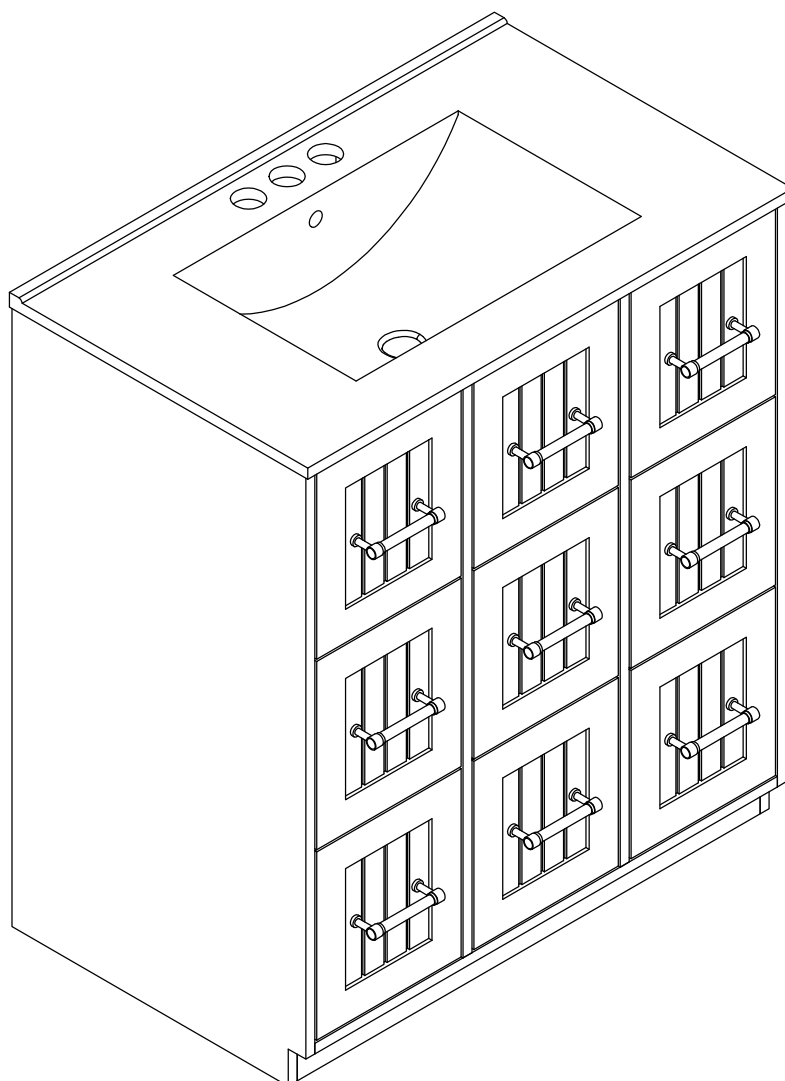

HINGE ADJUSTMENTS

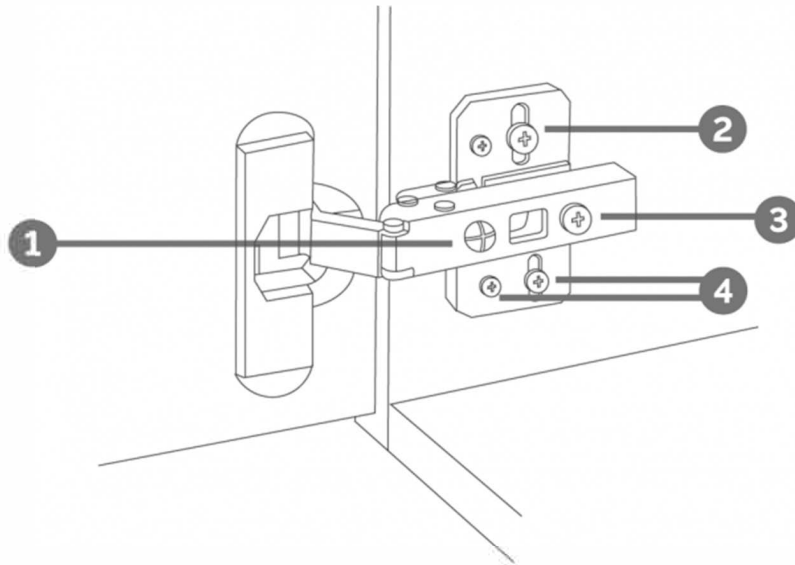


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

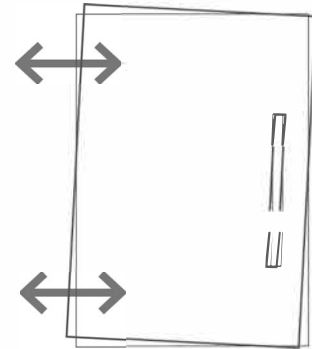


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

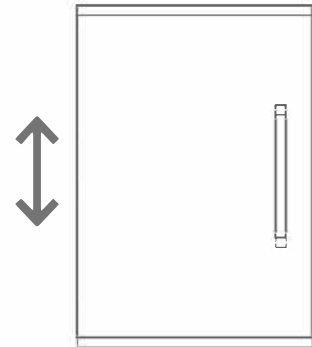

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

