


MANUAL INSTRUCTIONS

5 BOXES

COURTYARD GAZEBO

HARDTOP GAZEBO WITH NETTING

12*20FT

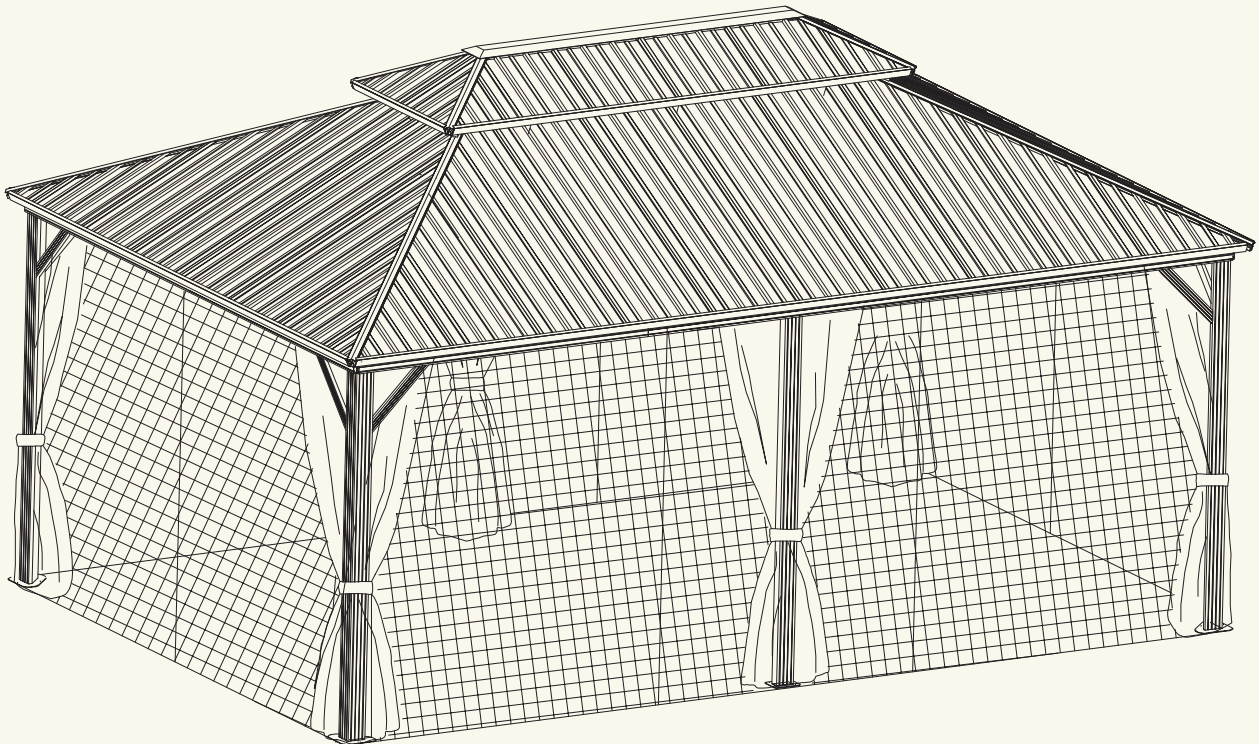

CONTACT US:24H, Mon~Sun.



service@kmcglobe-us.com



(USA) +1 213-816-4788

CUSTOMER SUPPORT

Dear customer

Thank you for your purchase.

This product is a non-permanent outdoor structure designed and manufactured for personal use rather than commercial use.

Please confirm whether the installation is permitted in your states firstly.

1. When you receive the product, please make sure that all the boxes have arrived, and all the parts are intact.
2. Please browse the entire installation manual before assembling, retain this instruction manual for future reference.
3. If any problem occurs unsatisfactorily as follows:
 - Lack of boxes, or some boxes are not arrived.
 - The outer box is damaged.
 - The product is damaged / bent / cracked while you open the box.
 - The parts / accessories / assembly tools are missing.
 - The product is hard to assemble.
 - The instructions are not clear, or hoping for assistance with installation.
 - The product has functional problems.
 - The product did not meet your expectations.
 - Other aspects that you are not satisfied with.

Please feel free to contact us for help firstly. If there is any damage, please send us clear photos. We will check and do our best to provide the best solution for you. The missing or damaged parts will be delivered to you within 5 days.

**DO NOT RETURN YOUR UNIT TO THE STORE
CONTACT US FIRST**



service@kmcglobe-us.com



(USA) +1 213-816-4788

ATTENTION

PREPARATION:

The gazebo needs to be installed in cooperation with **four people**.

Estimated Assembly Time: **6 Hours**.

Site preparation suggestion: Level the ground surface, construct a wooden or concrete base as a foundation.

The following installation tools will be used.



2 m Adjustable Ladder



Tape Measure



Screw Driver



Pistol Drill



gradienter



Hammer






gloves





4 people

Minimum foundation size:

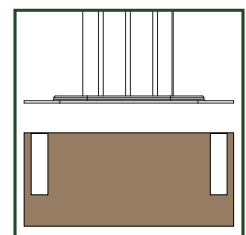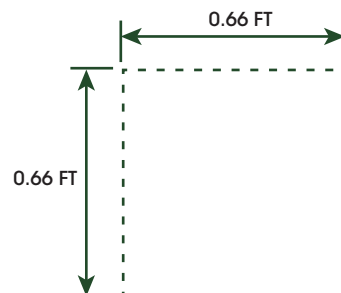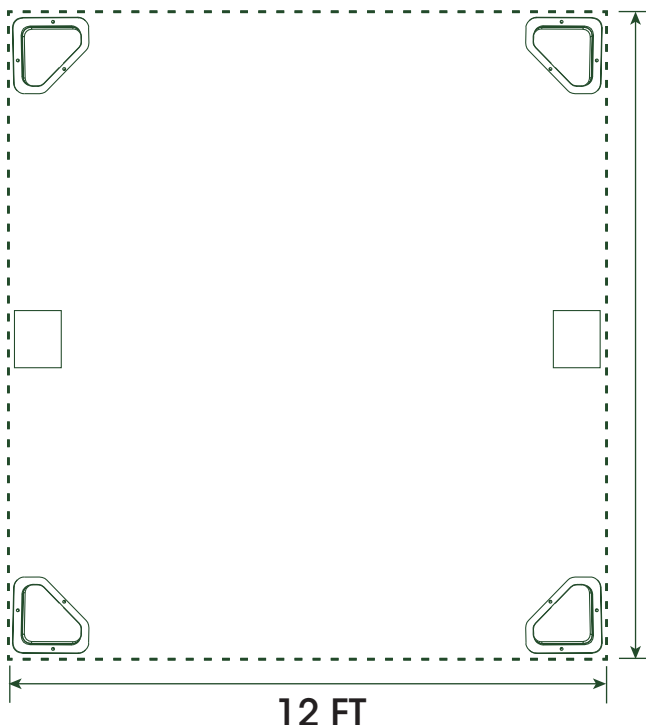

If your foundation is made of hardwood or concrete, Drill holes in the foundation using an M8 drill with the depth exceeding 40mm.

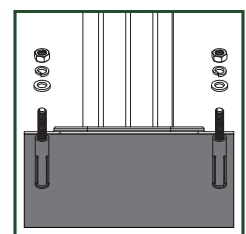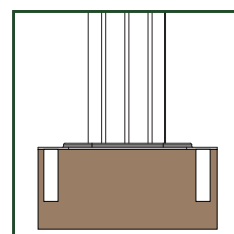

Use the expansion bolts that are pre-configured with the product to secure it in place. This installation method will provide better wind resistance performance, extend the product's lifespan.

ATTENTION

CAUTION:

1. Tighten each bolt firmly and properly. Do not completely tighten the screws until all screws are started.
2. Some parts may contain sharp edges. Wear protective gloves in the box as necessary.
3. Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.
4. It is strongly recommended to hire a professional installation team.

WARNING:

1. Children under the age of 10 should be supervised by a competent adult while using this furniture.
2. Please keep children out of the assembly area during assembly.
3. Never use this product as a support. Do not shake, lean, or climb on the product any time.
4. Please take appropriate measures to deal with the bad weather. Heavy rain, wind and snow may damage the gazebo. If necessary please dis-assemble and store for later use.
5. In snowy weather, please ensure that the thickness of snow on the roof does not exceed 5 inches, If it does, please remove the snow as soon as possible to ensure safety.
6. When the wind force reaches scale 8, please take corresponding measures to reinforce the gazebo to prevent it from being damaged by the wind, and be cautious of safety issues during strong wind conditions.
7. It is necessary to use anchor bolts, expansion bolts and ropes to fix the gazebo to the foundation for Long-term stability.
8. We offer a one-year warranty, excluding damages caused by improper installation, incorrect usage, failure to use the fixing accessories, unclean snow, or failure to take preventive measures.
9. Stay away from open flames.

PARTS LIST

- 1. Please ensure that all parts, accessories and installation tools are complete before starting the installation.
- 2. Due to the variety of accessories, some parts may be glued together, some parts may be trapped inside the larger ones, please check carefully.
- 3. In case you cannot find or lose some small parts or screws during installation, we have provided extra parts, it is a bag with "Additional Parts" label.
- 4. If any accessories are missing or damaged, please contact us immediately.

 service@kmcglobe-us.com


CARTON: A



A X 4



B2 X 2



B3 X 2



E1 X 4
Inside the part "A"



E2 X 4
Inside the part "A"



F1 X 2



F2 X 2



F3 X 2



F4 X 2



Z X 76



Y X 156(+10)



Y1 X 12(+1)



G X 4



F6 X 2

CARTON: B



A1 X 2




B X 2



B1 X 2

PARTS LIST


CARTON: B




E X 8



G6 X 2



K1 X 6



M X 2



N1 X 10



V X 6



W2 X 6




18 X 4




22 X 8



F5 X 2




J X 4



L X 2



M1 X 5



P X 6



W X 4



14 X 20



19 X 8



23 X 2



G4 X 2



K X 4




L1 X 2




N X 12



U X 152(+10)



W1 X 8



16 X 36



21 X 8



24 X 2

PARTS LIST


CARTON: B



Z1 X 12



W3 X 2



T X 1(6pcs)

CARTON: C



B4 X 2



D X 8



Ea X 4



G7 X 4



G8 X 4



H X 4



H1 X 4



J1 X 2



G2 X 2




G5 X 2


CARTON: D



Q1 X 1




Q2 X 1




Q3 X 1




Q4 X 1



Q5 X 1



Q6 X 1




Q7 X 1




Q8 X 1




R1 X 1



R2 X 1




R3 X 1



R4 X 1

PARTS LIST

CARTON: D




R5 X 1



R6 X 1




R7 X 1




R8 X 1



R9 X 1



R10 X 1




R11 X 1



R12 X 1




S X 1




Sa X 1




S1 X 1



S2 X 1



S3 X 4



S4 X 1




S5 X 1



C X 4



C1 X 4



C2 X 2



C3 X 2



Eb X 4



G1 X 2



G3 X 2




17 X 4

CARTON: E



Q1 X 1



Q2 X 1



Q3 X 1




Q4 X 1



Q5 X 1



Q6 X 1




Q7 X 1



Q8 X 1



R1 X 1



R2 X 1




R3 X 1



R4 X 1

PARTS LIST

CARTON: E




R5 X 1




R6 X 1




R7 X 1




R8 X 1



R9 X 1



R10 X 1



R11 X 1



R12 X 1




S X 1




Sa X 1




S1 X 1



S2 X 1




S3 X 4




S4 X 1




S5 X 1

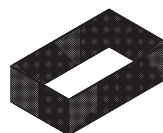


T1 X 1(6pcs)




V1 X 2



V2 X 2



V3 X 2




V4 X 2



V5 X 2



M6x16mm
1 X 254(+10)




M6x25mm
3 X 157(+10)



ST4.8x12mm
4 X 28(+2)



M6x10mm
5 X 24(+2)



M6x15mm
8 X 16(+1)




10x50mm
9 X 20




M5x12mm
10 X 64(+6)




11 X 4



S4
12 X 1




S5 S6
13 X 1




15 X 1

Phase 1 : Flooring Frame

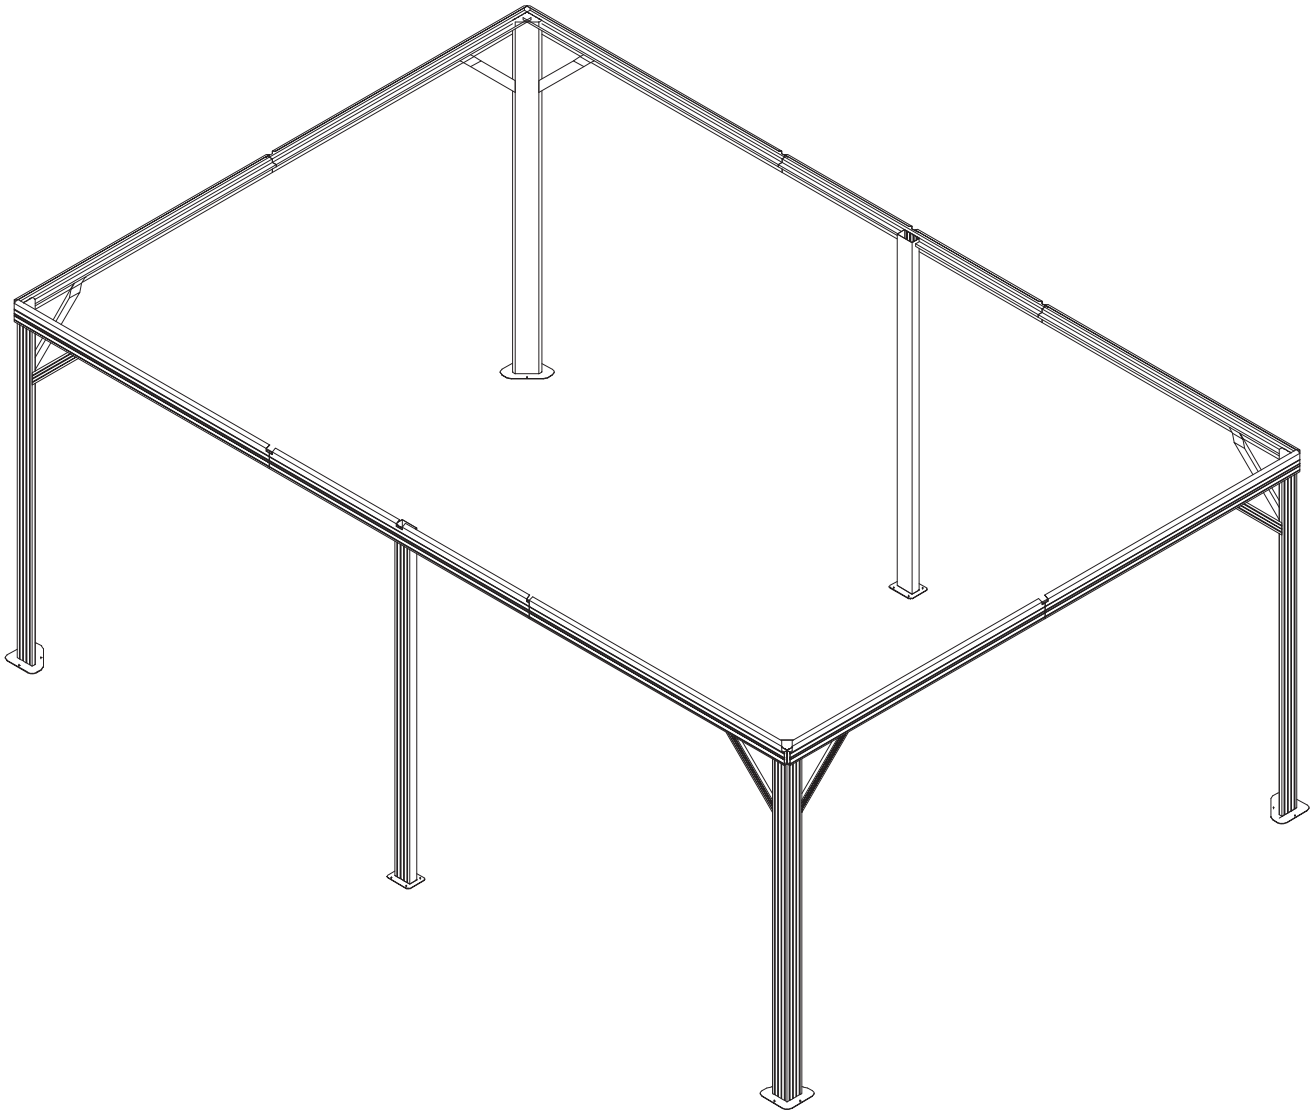


01 STEP

x4

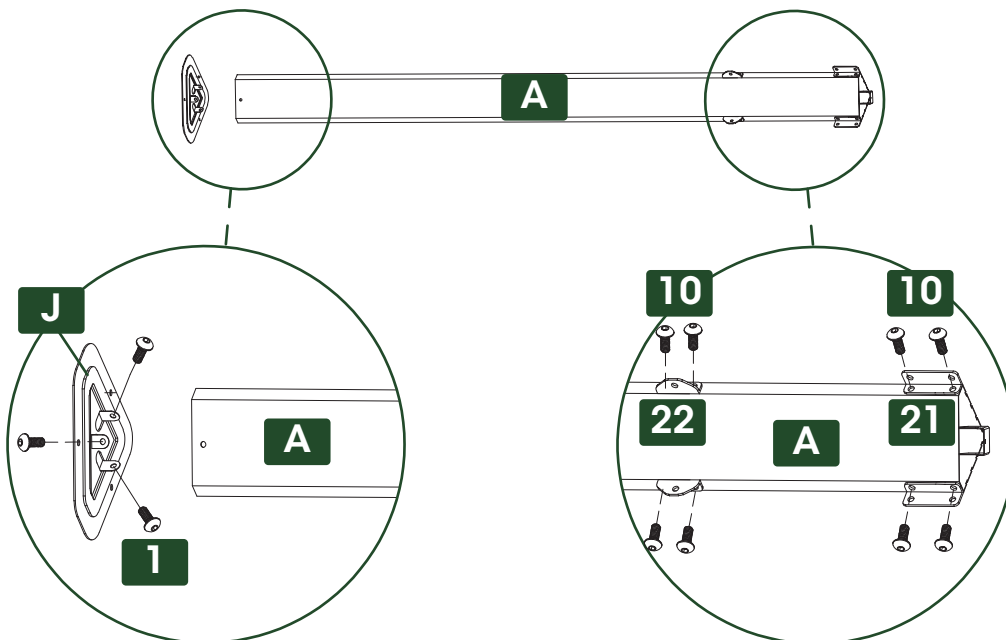


Pay attention to the direction of part "21" "22".

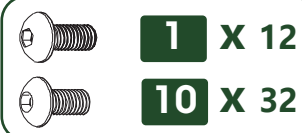

02 STEP



x2

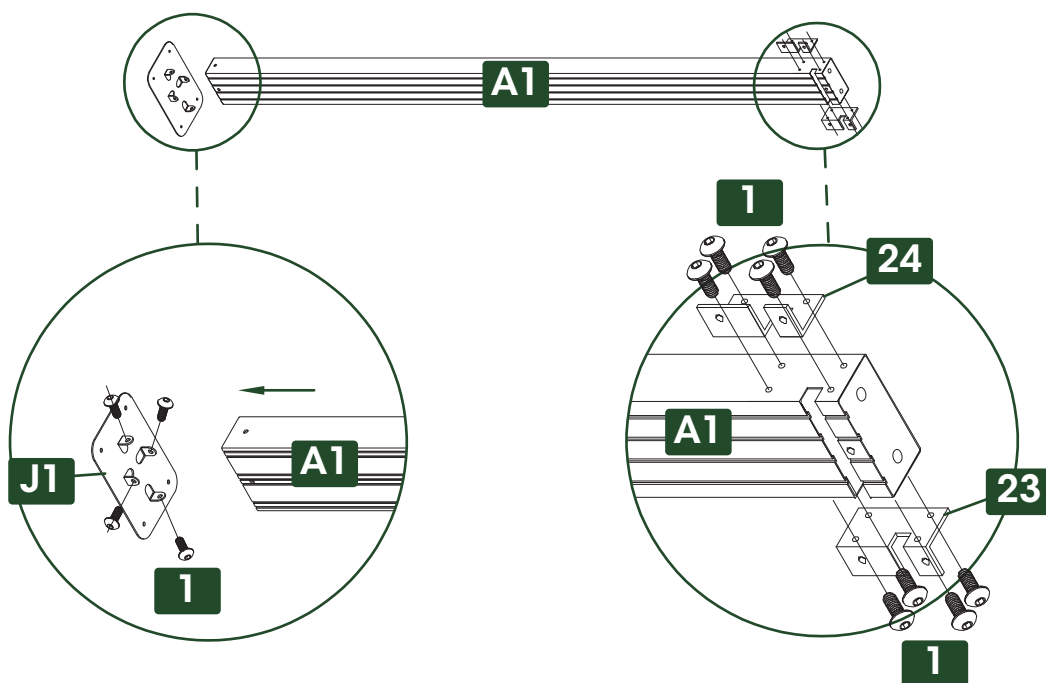

Pay attention to the direction of part "23" "24".





03 STEP x2

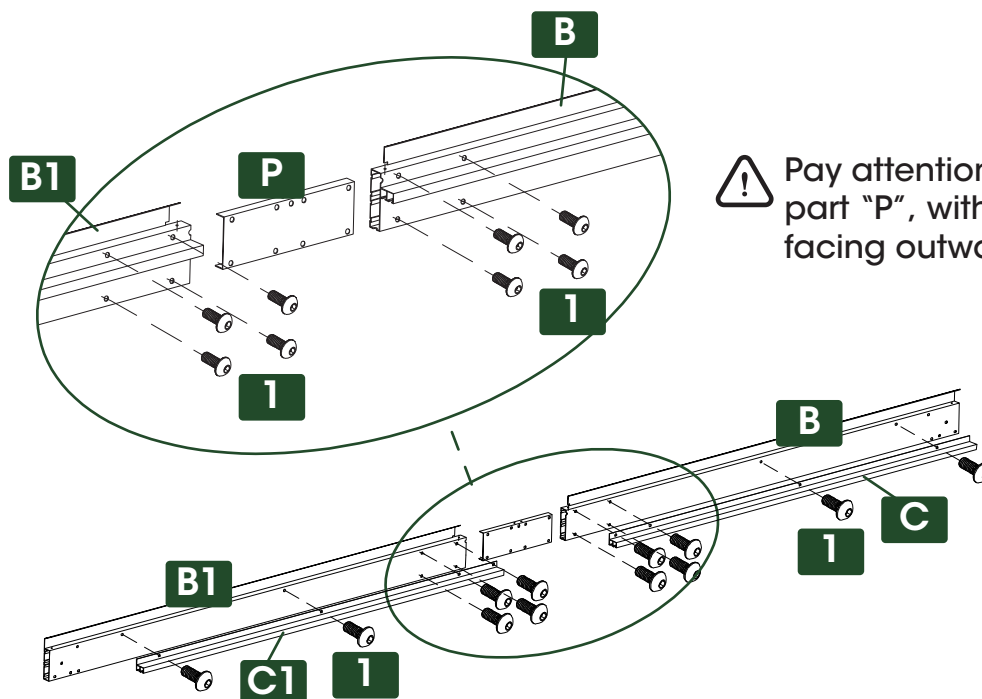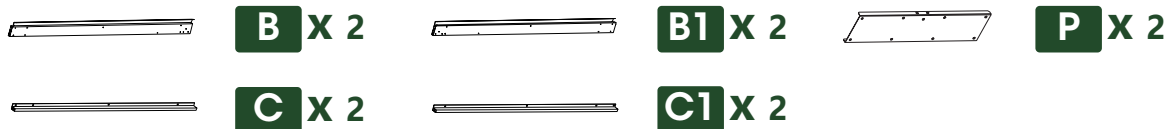

! Pay attention to the direction of part "P", with the opening facing outward.




04 STEP x2

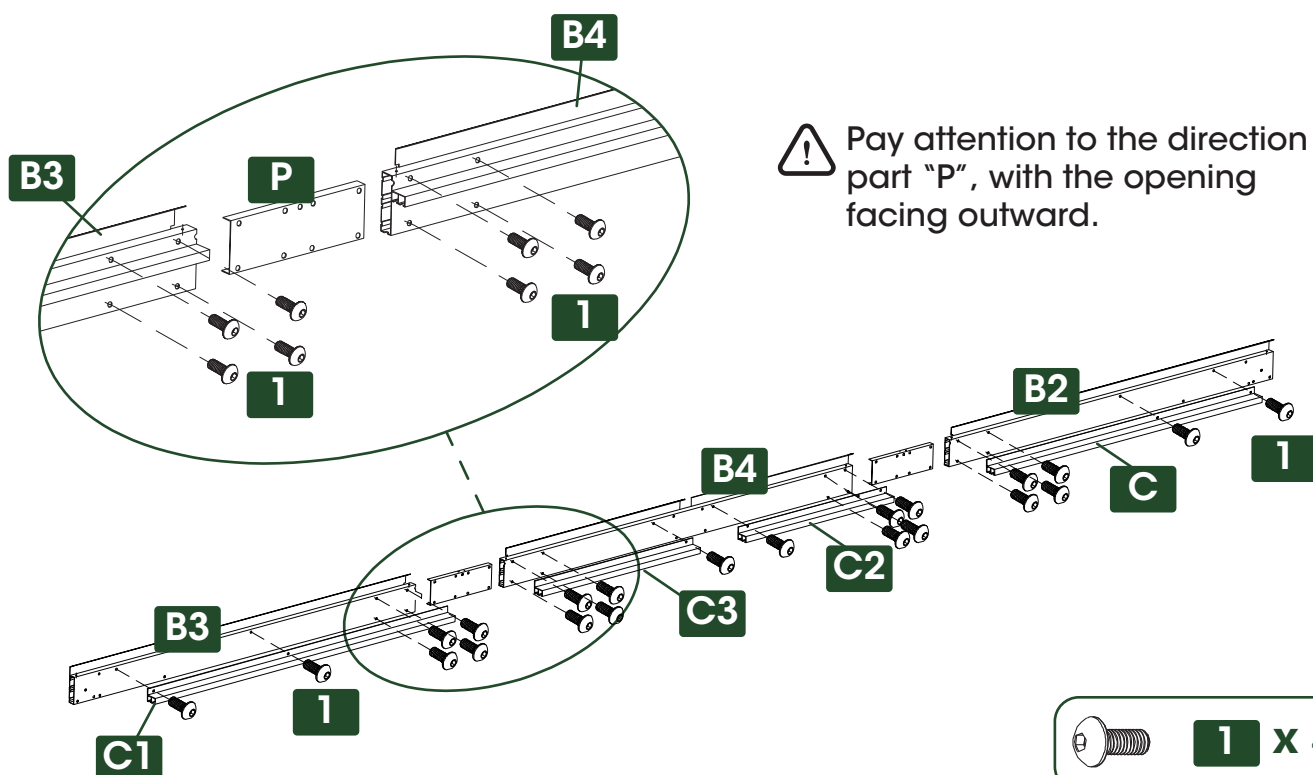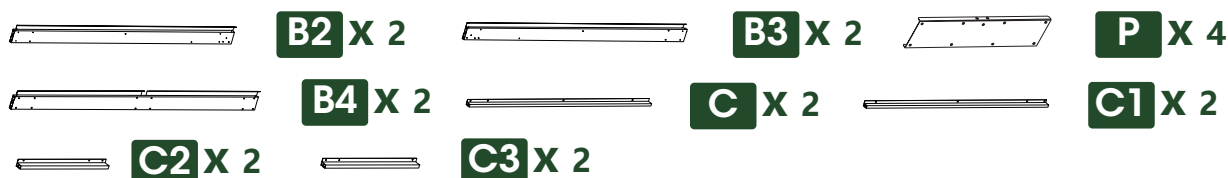

! Pay attention to the direction of part "P", with the opening facing outward.




05 STEP x2

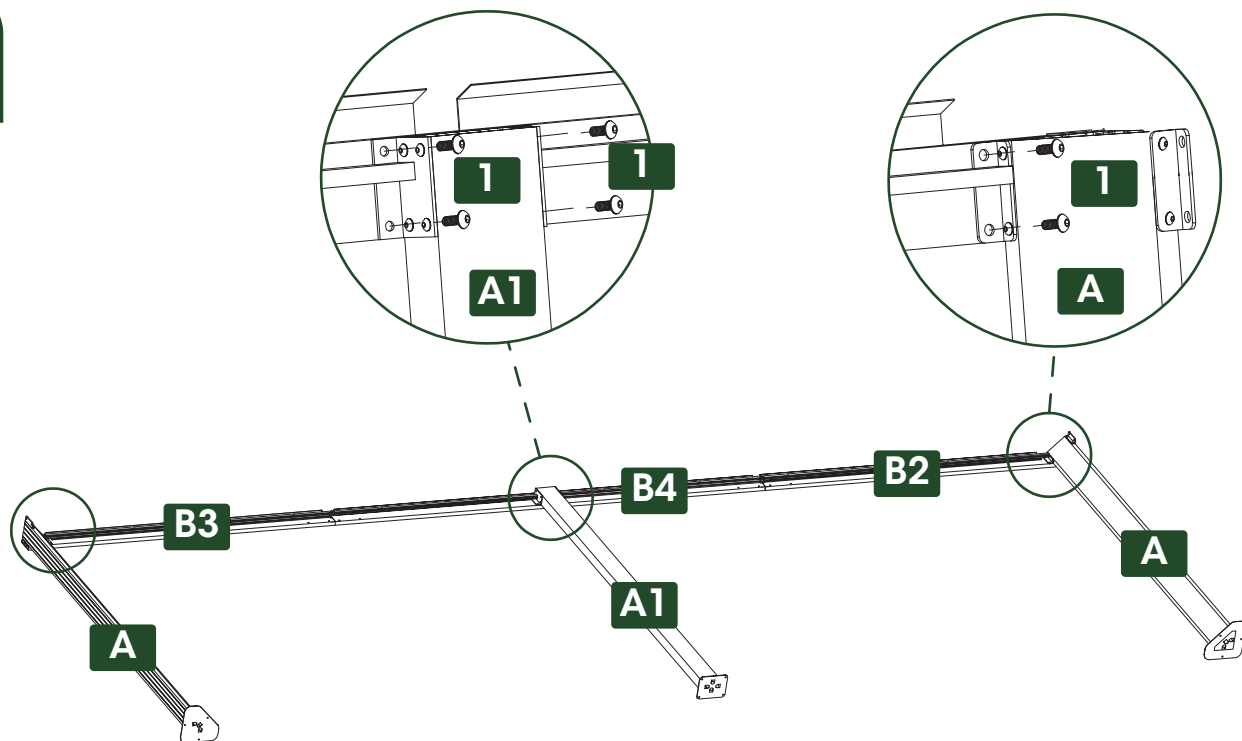

1 X 16

06 STEP

Raise the frame that has been installed above and hold on, Then connect the beam.

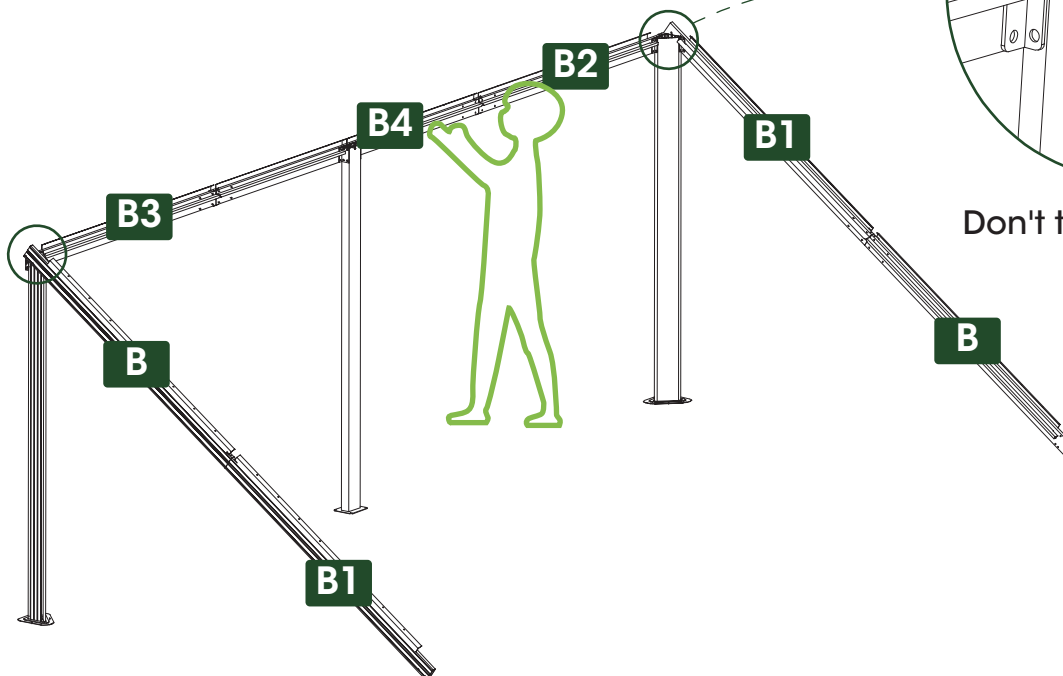

Don't tighten the screws.



1 X 2

07 STEP






H X 2



H1 X 2

Raise the other frame that has been installed above and assemble them.

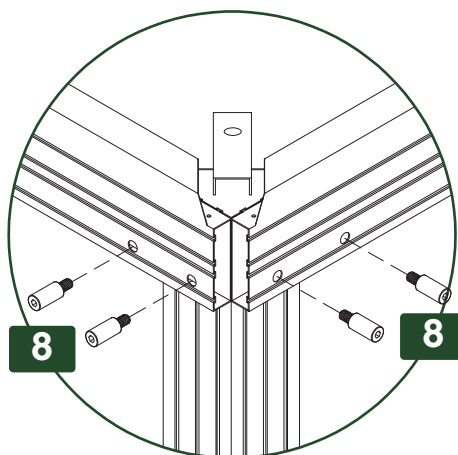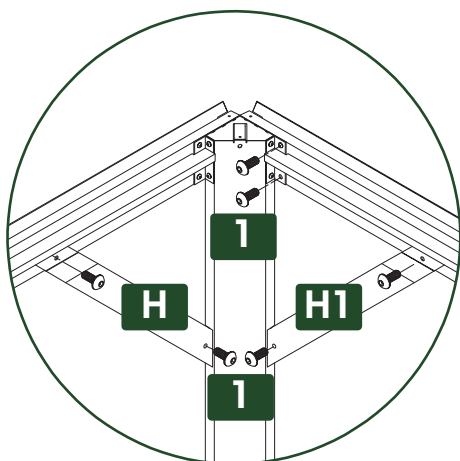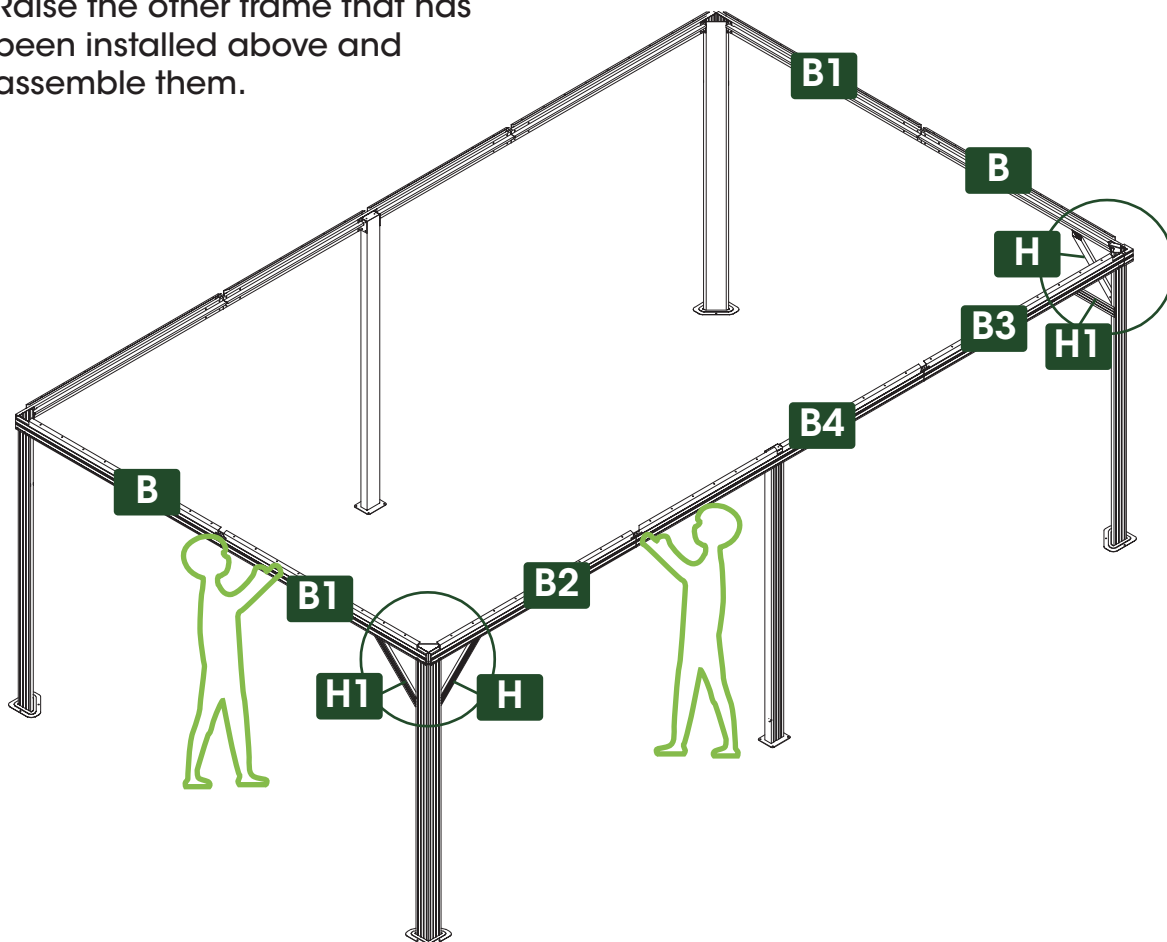

1 X 12






8 X 8

08 STEP

 **H** X 2  **H1** X 2

Tighten all the screws on the frame.

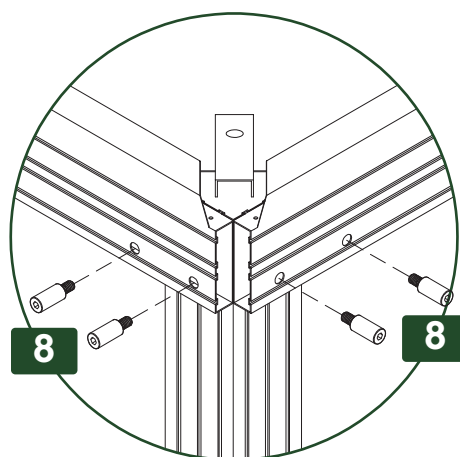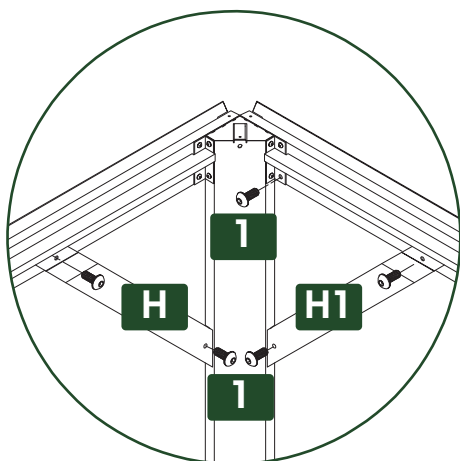
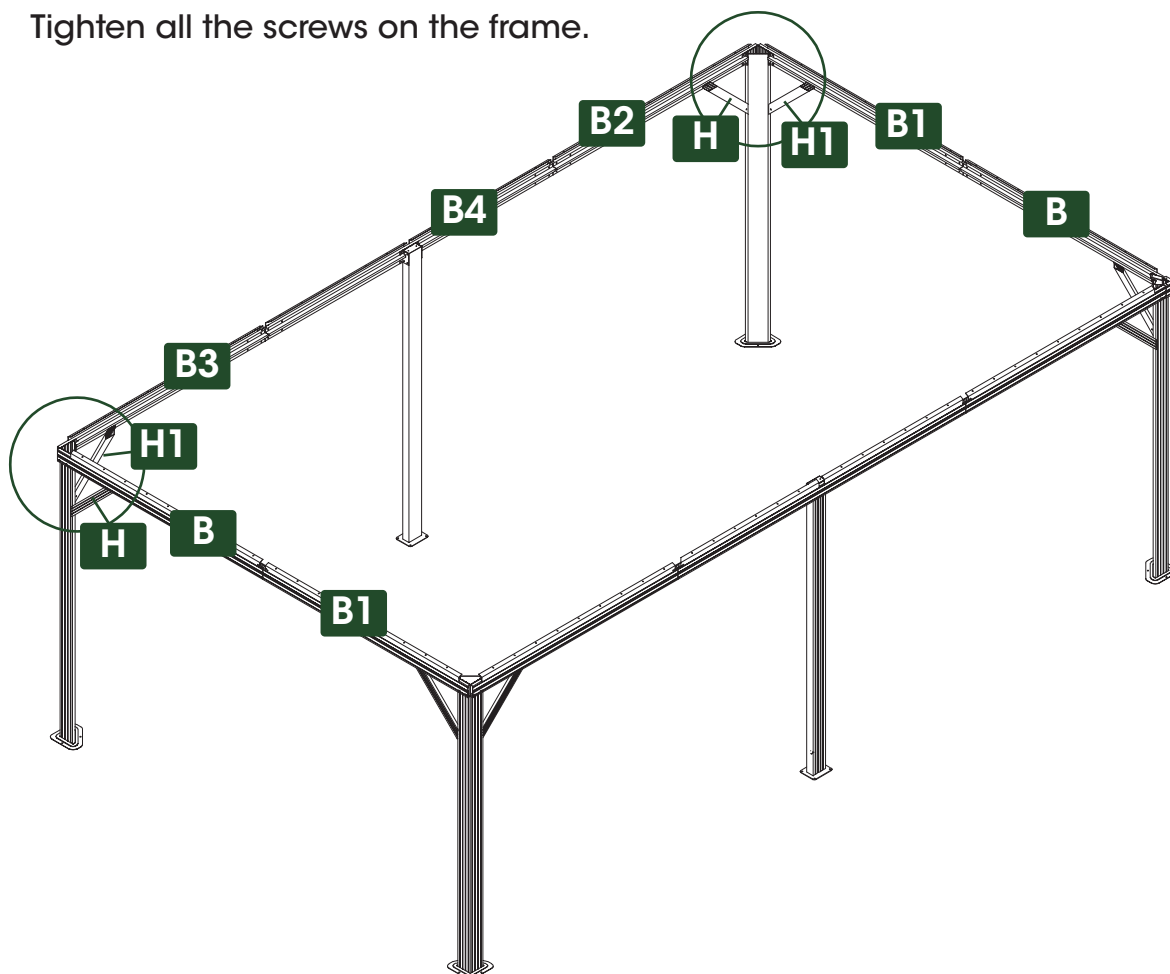


 **1** X 10
 **8** X 8

09 STEP



Y X 96

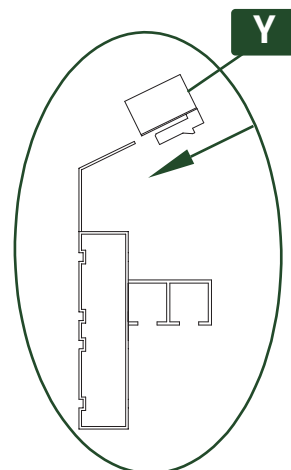
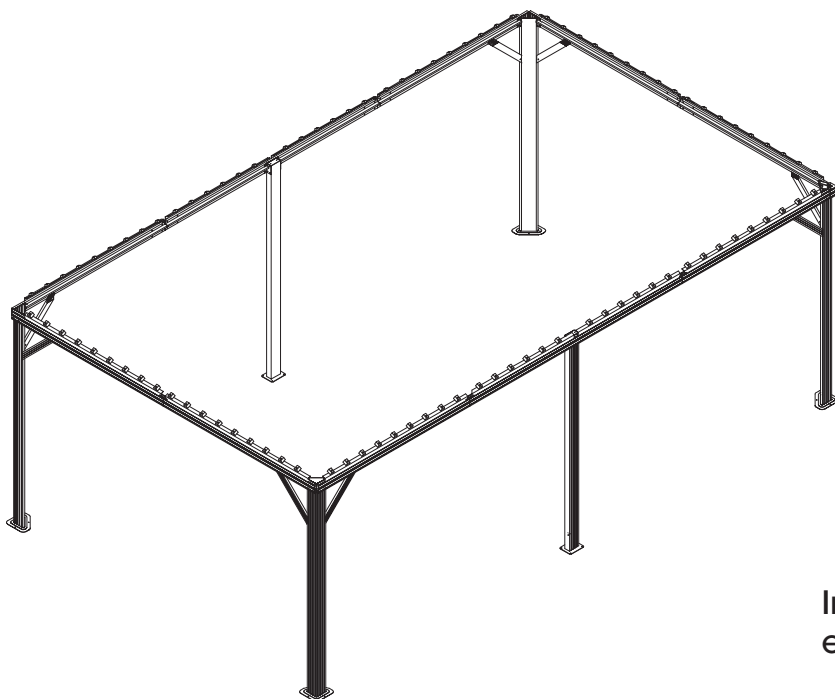


Insert the parts "Y" through the edges and align the circular hole.


10 STEP




U X 152

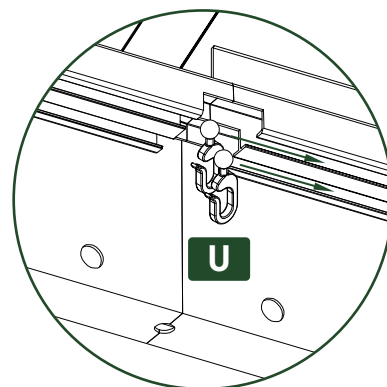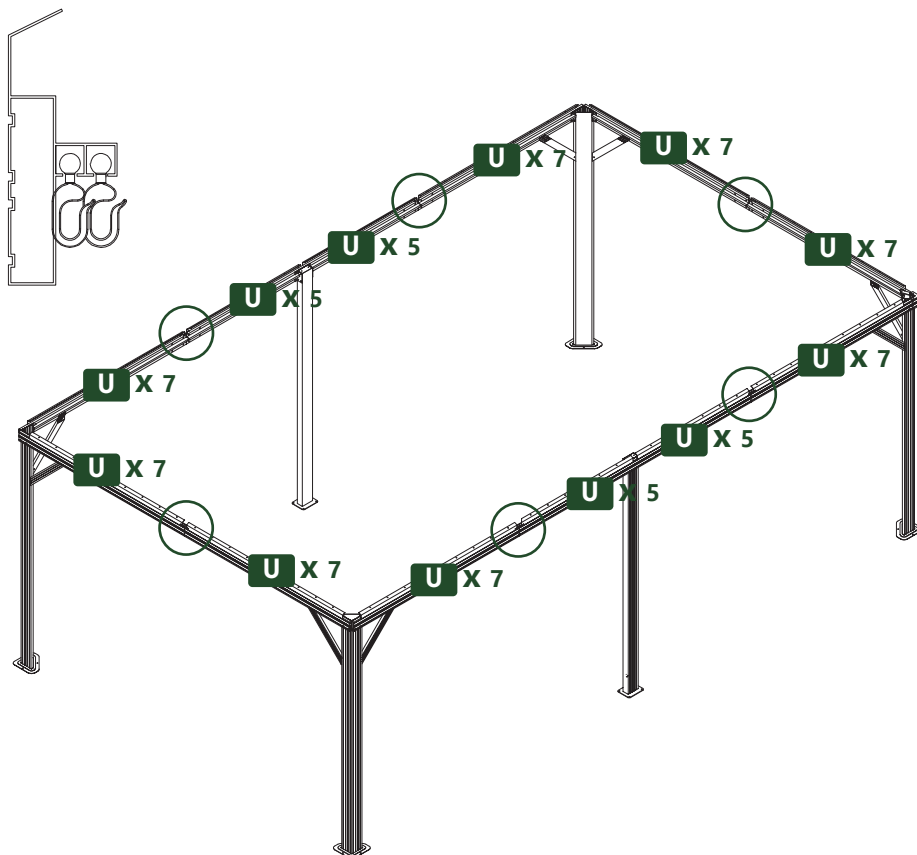

11 STEP



K X 4







K1 X 6



V X 6



Check if the frames are aligned.
You can use a level gauge for this.

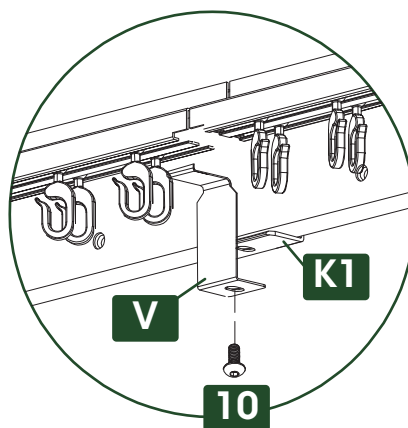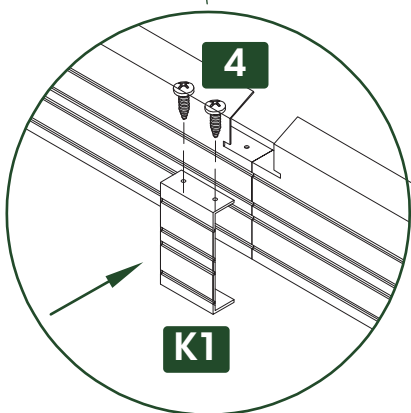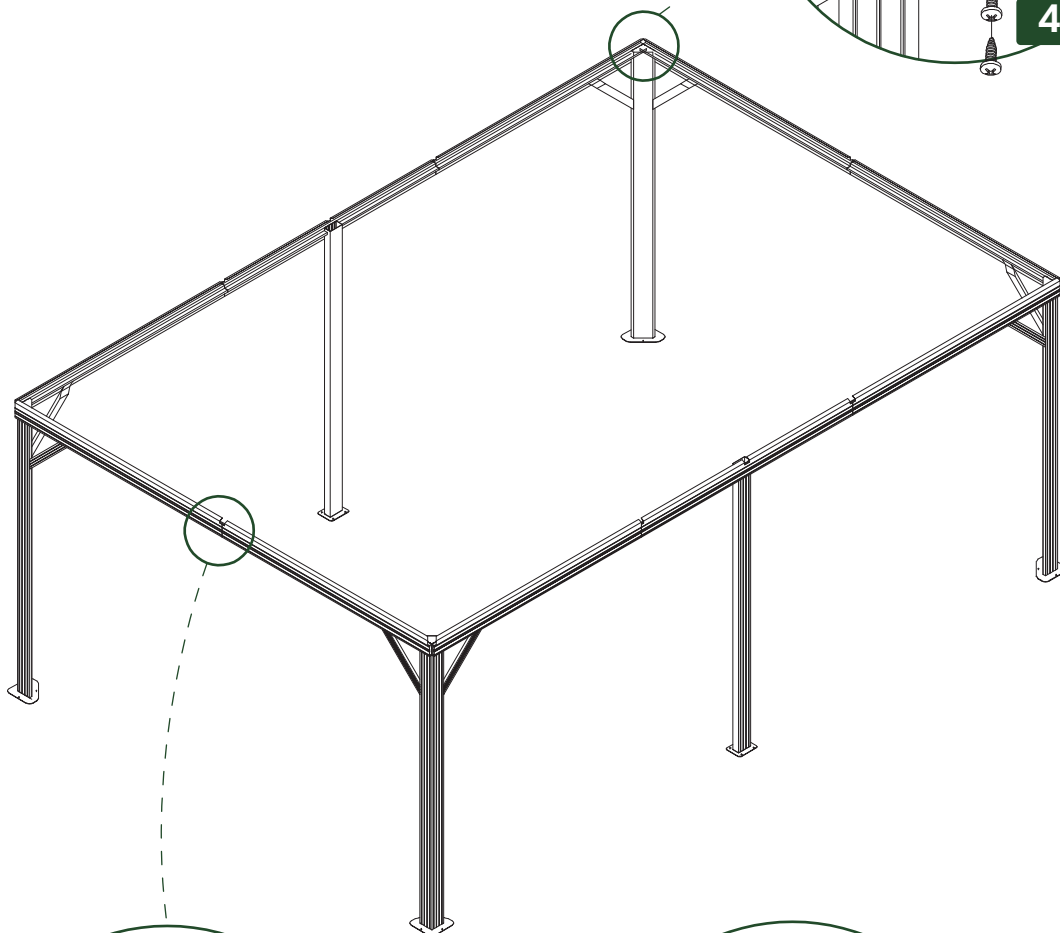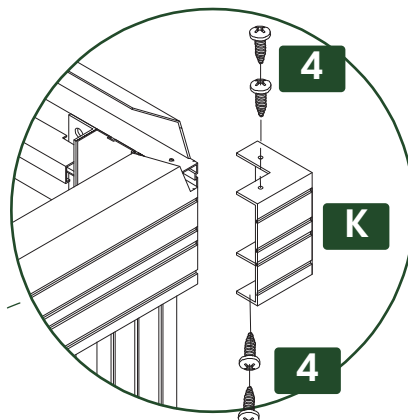


4 X 28




10 X 6

Phase 2: Top Frame

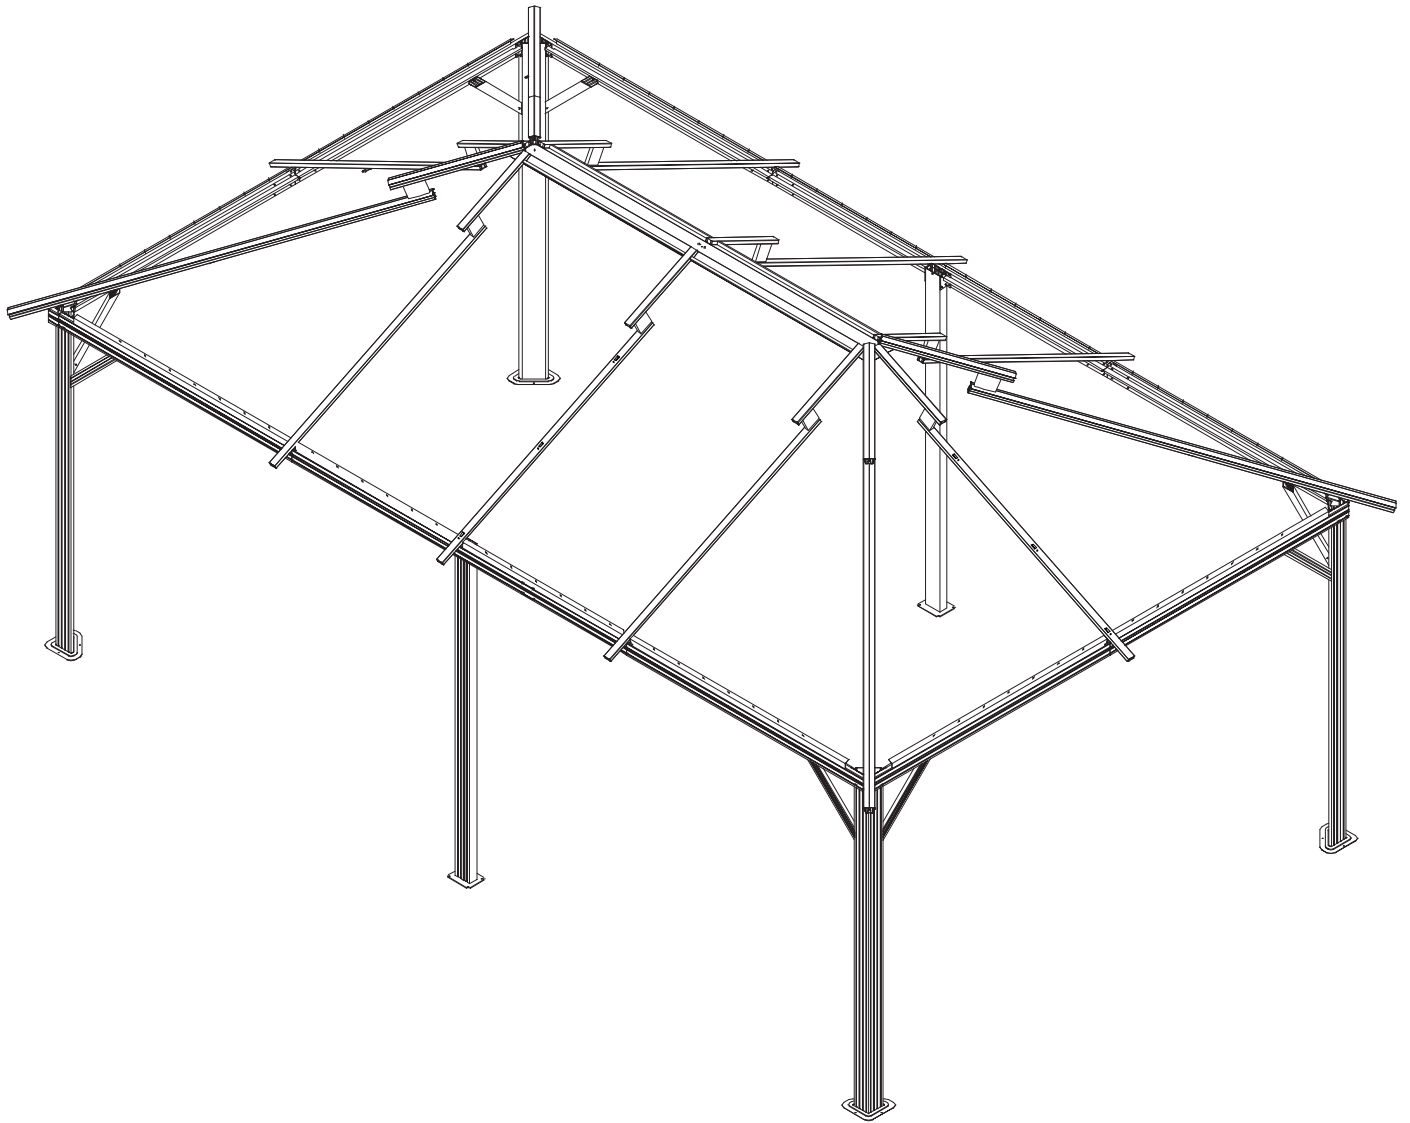



12 STEP



L X 2



L1 X 2

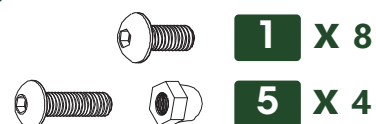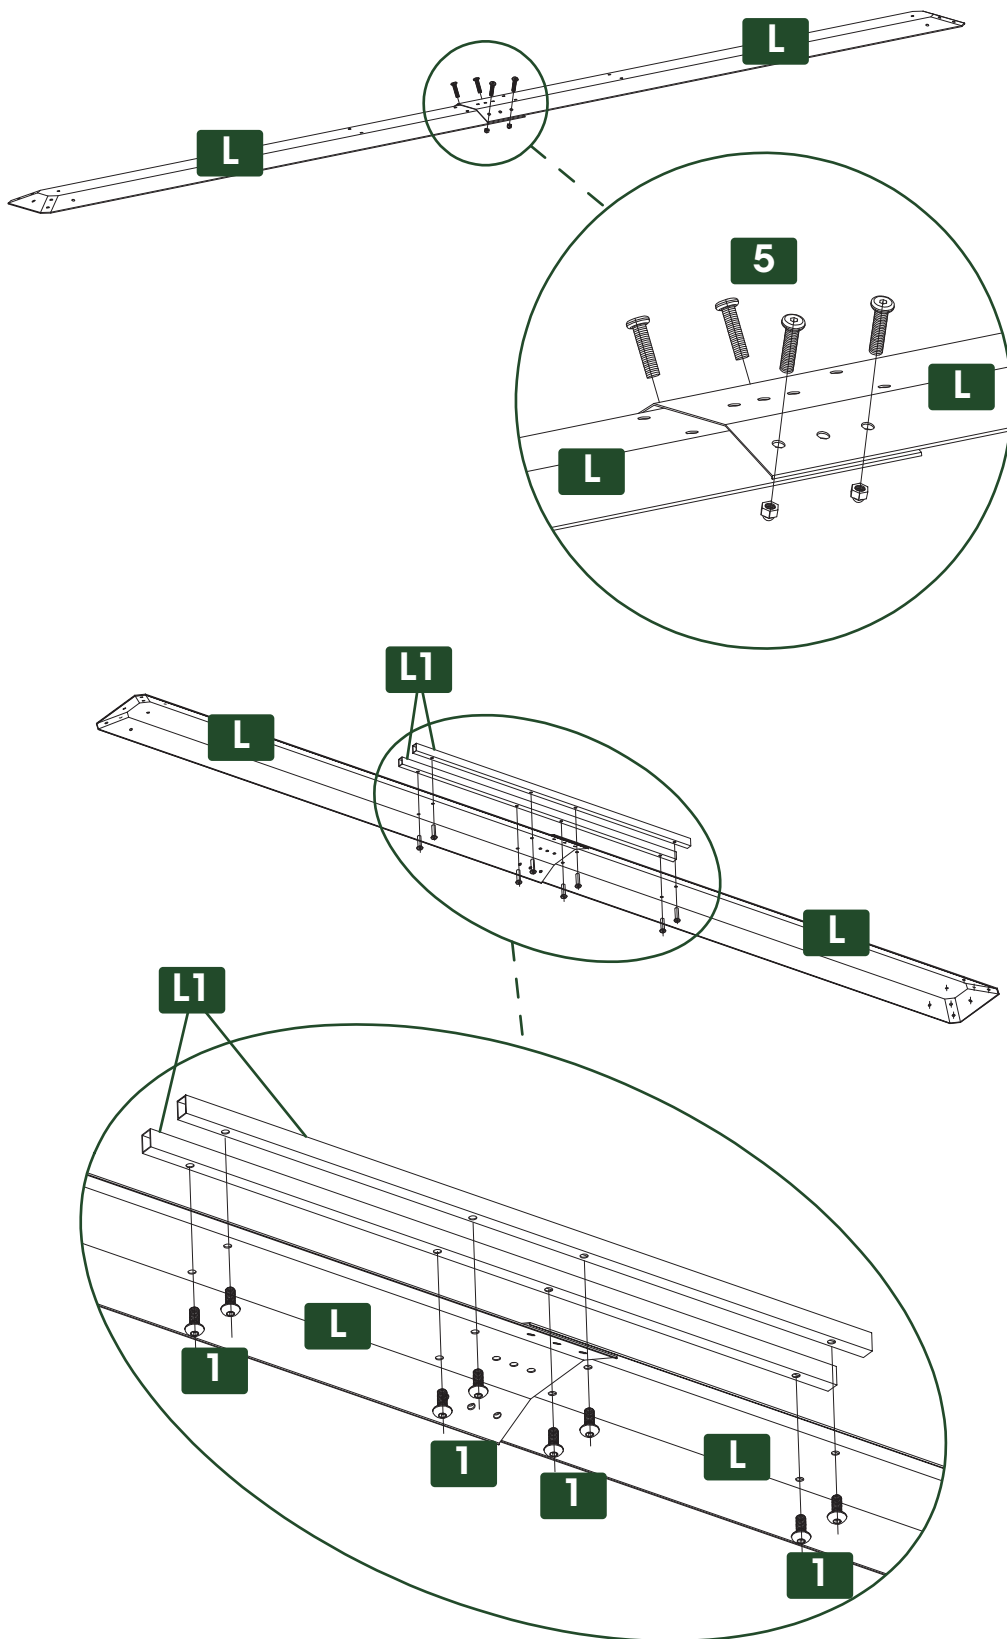


1 X 8

5 X 4

13 STEP



15 X 1

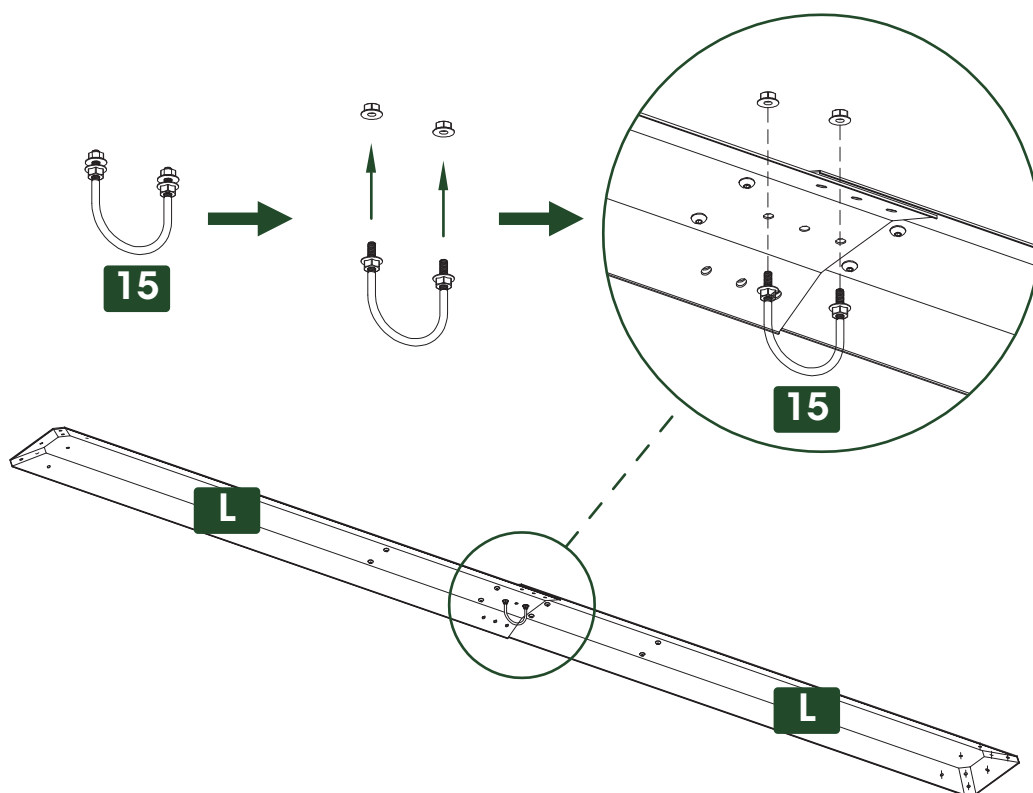

14 STEP x4



Ea X 4



Eb X 4





17 X 4



18 X 4




Pay attention to the shape of the parts "Ea" and "17", ensure that the shapes fit together.

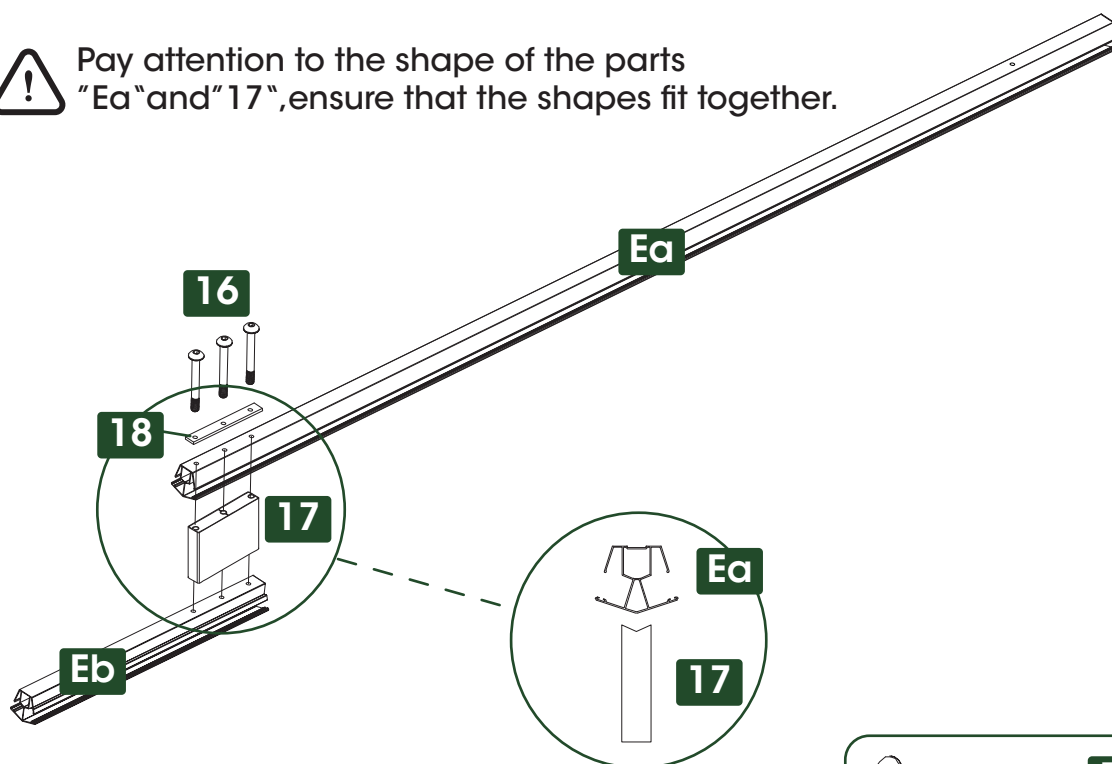


16 X 12


15 STEP x6

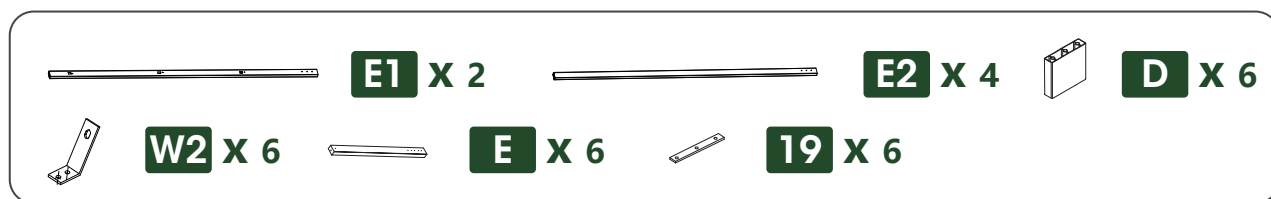


! Pay attention to the direction. The side with one hole should face outward.

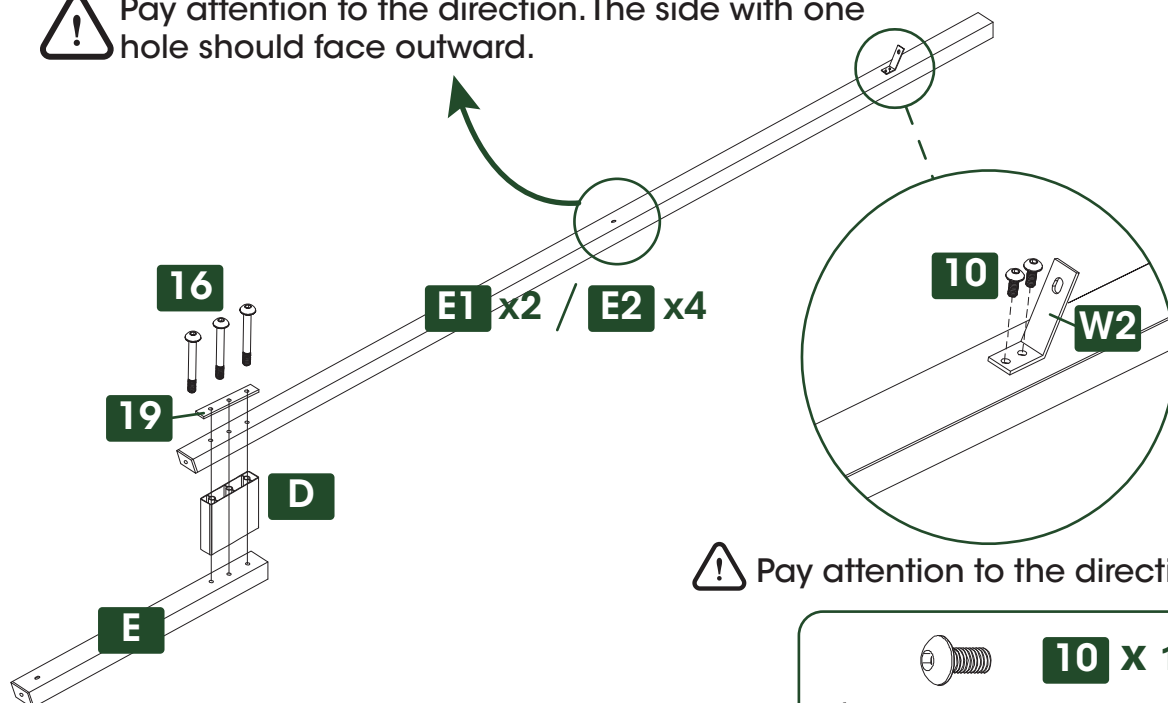


! Pay attention to the direction.

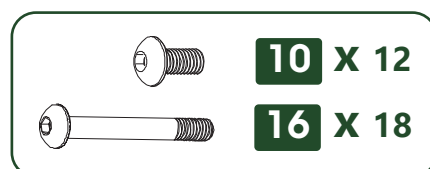


16 STEP x2

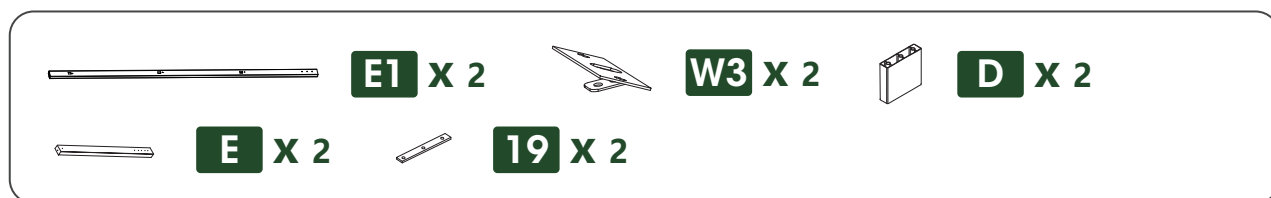

! Pay attention to the direction. The side with one hole should face outward.

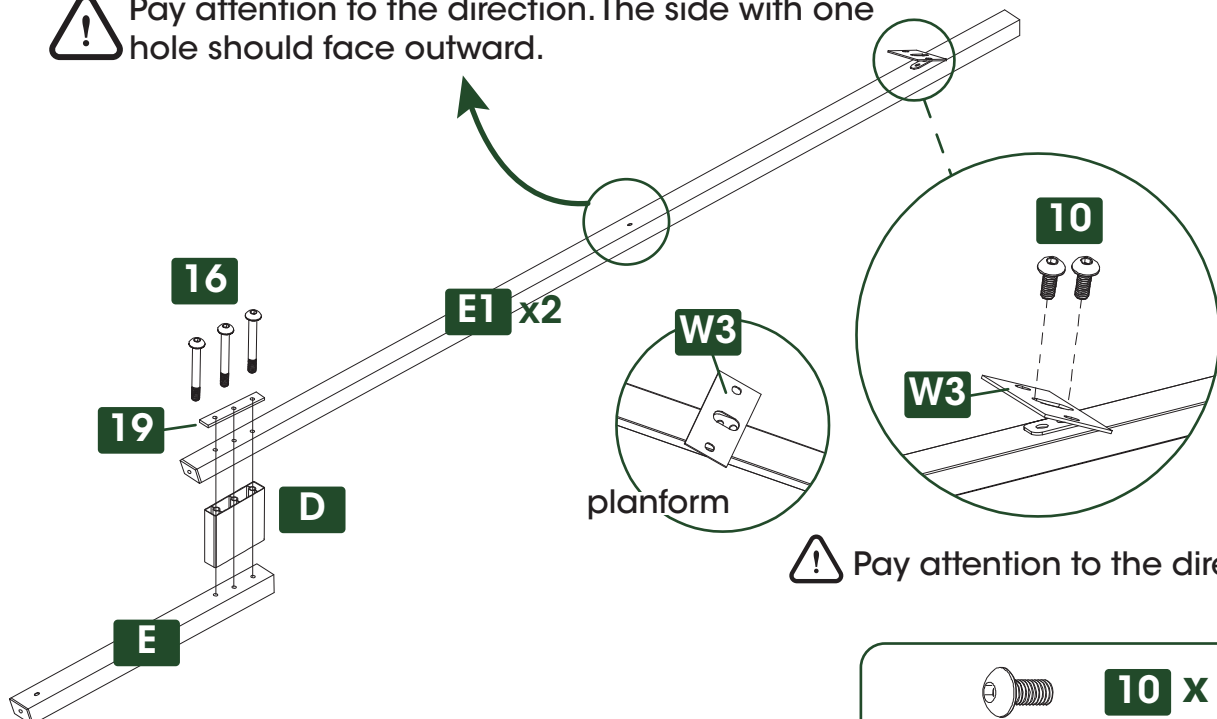

! Pay attention to the direction.

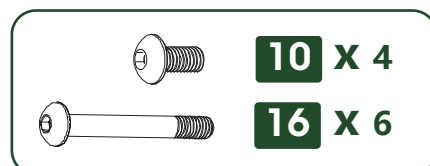



17 STEP x4



Y x 12




Y1 x 12

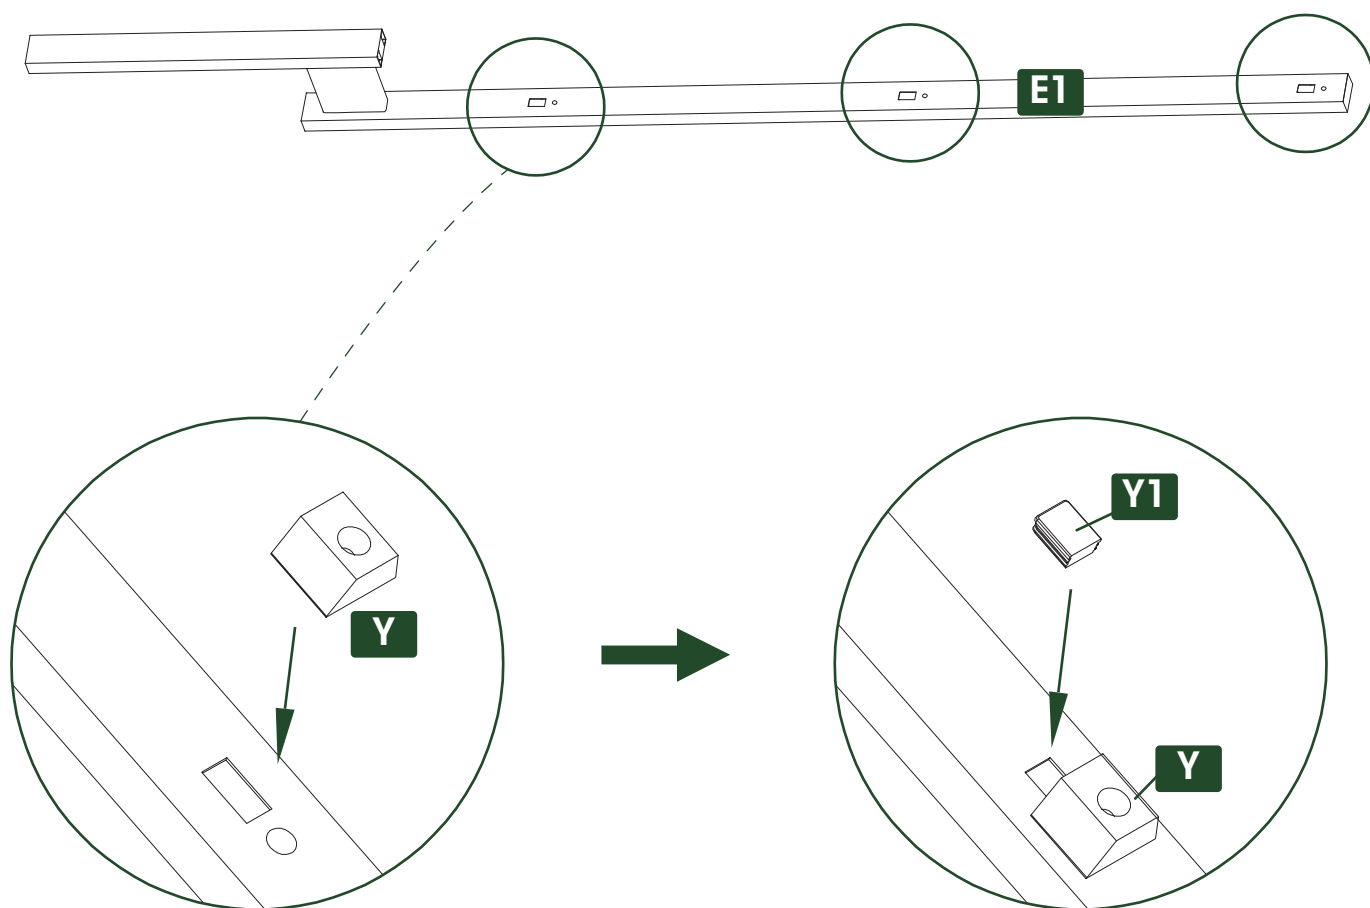


Insert the parts "Y" through the square hole and align the circular hole, then fix with part "Y1".

18 STEP x2


	F1 X 2		F2 X 2		W1 X 8
	F3 X 2		F4 X 2		Y X 48
	F5 X 2		F6 X 2		

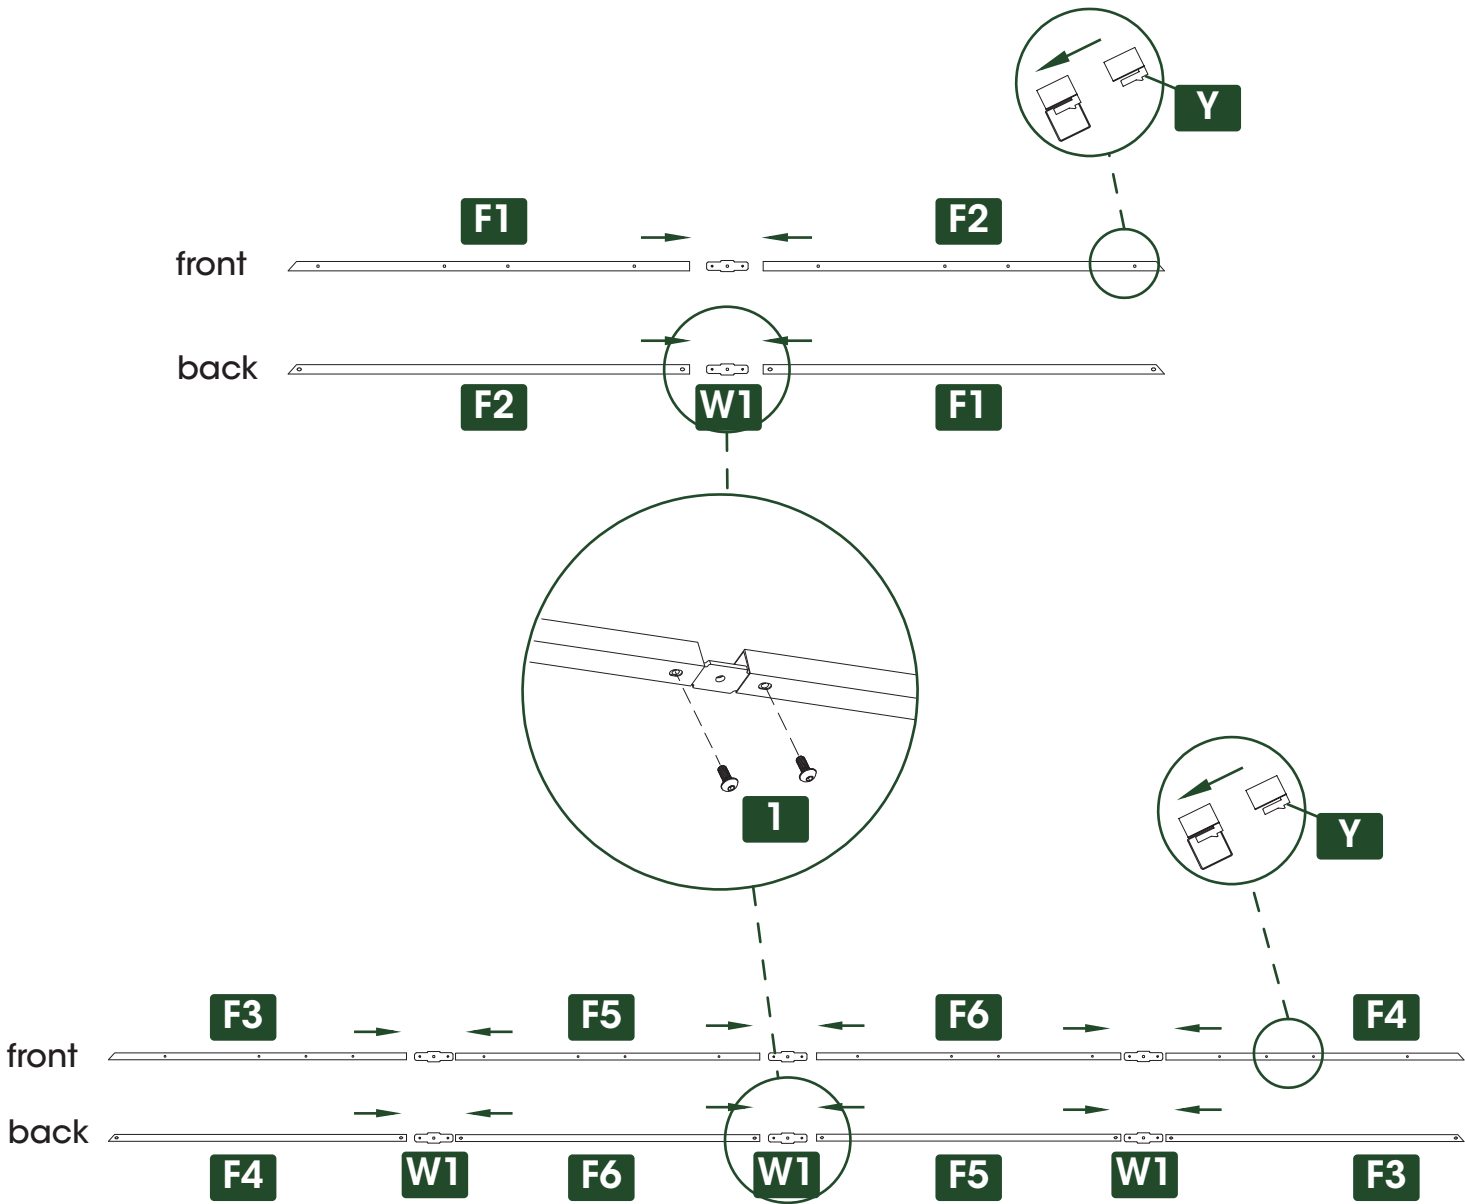

	1 X 16
---	---------------

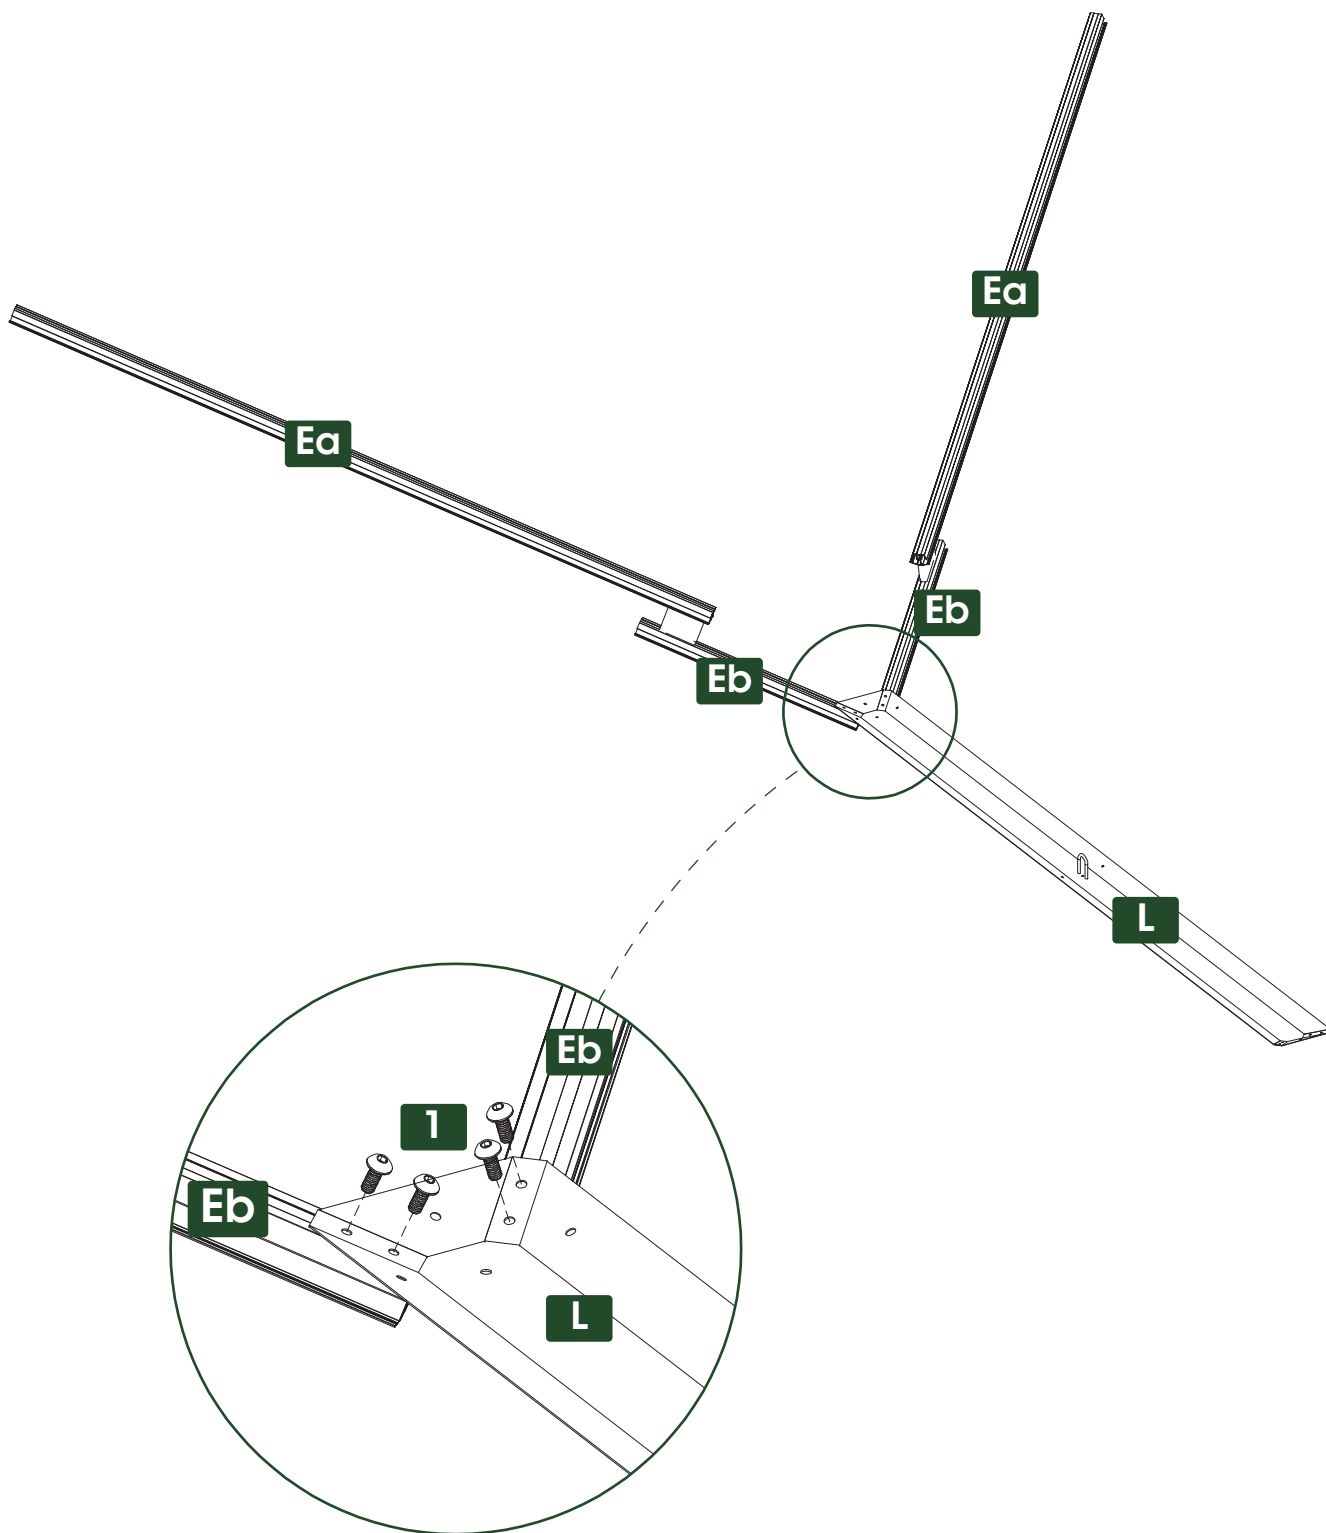


20 STEP

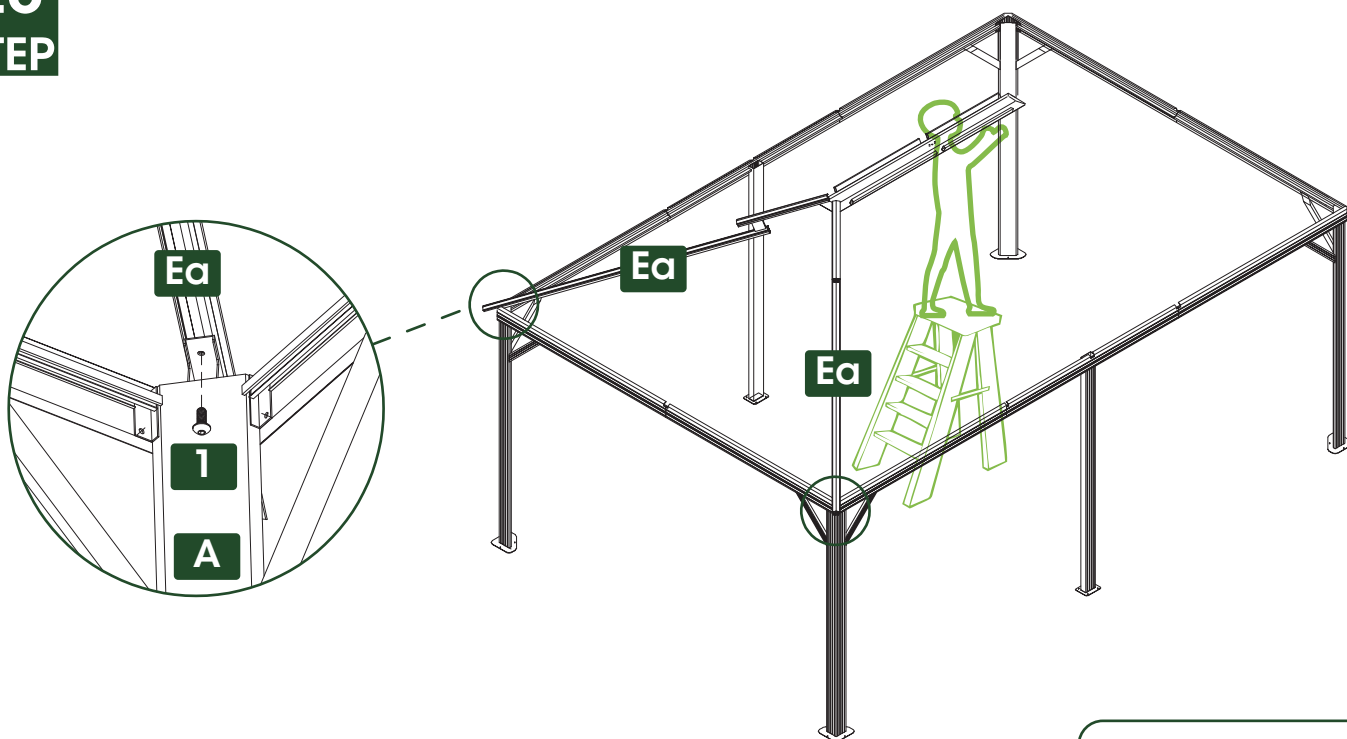


 **1** X 2

21 STEP

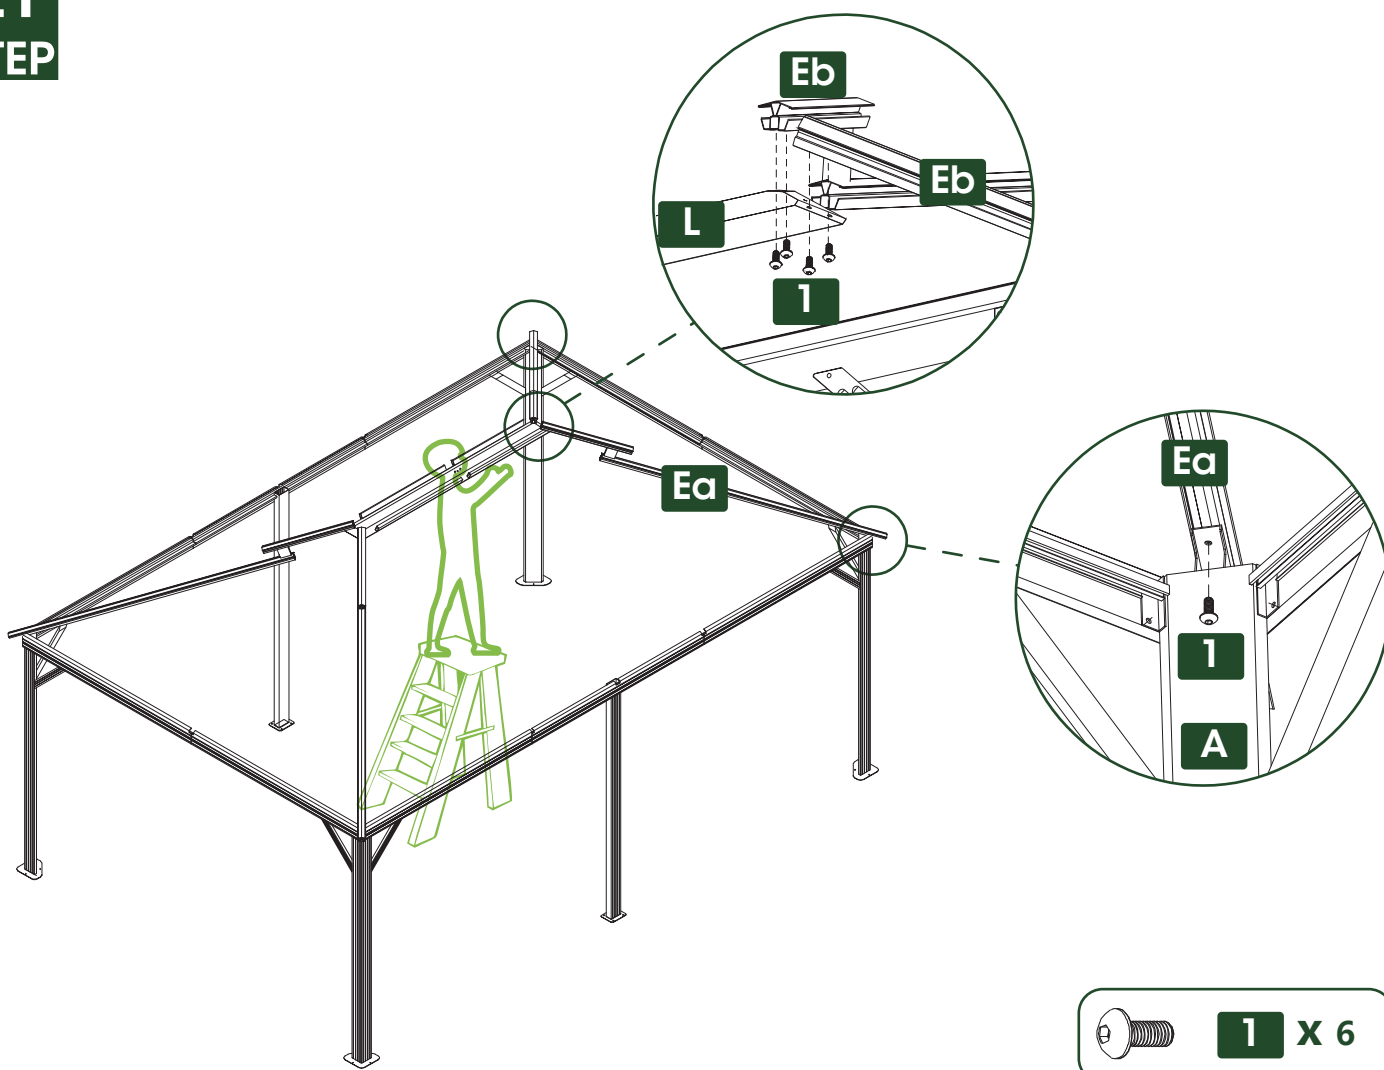

 **1** X 6


22 STEP

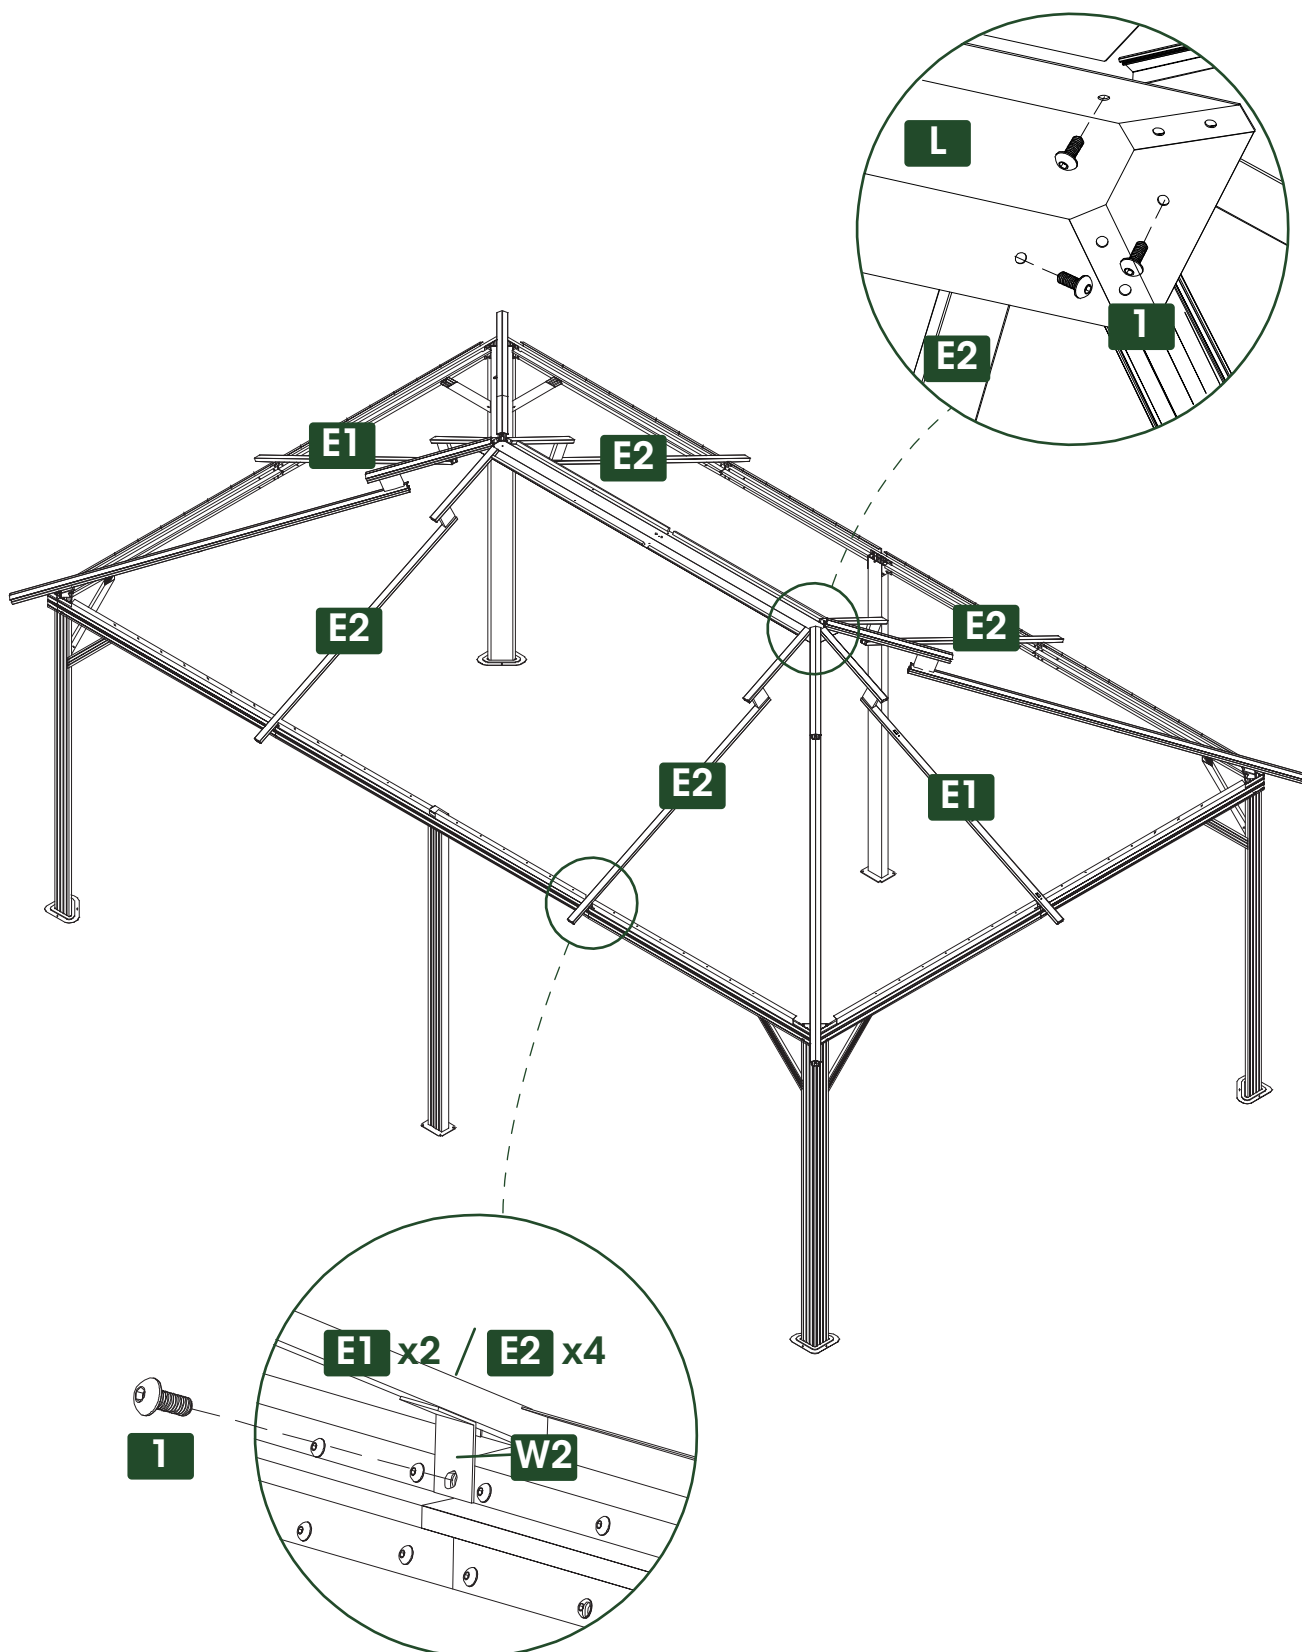

23 STEP




Check if the top frames are aligned. They should be symmetrical on both sides.

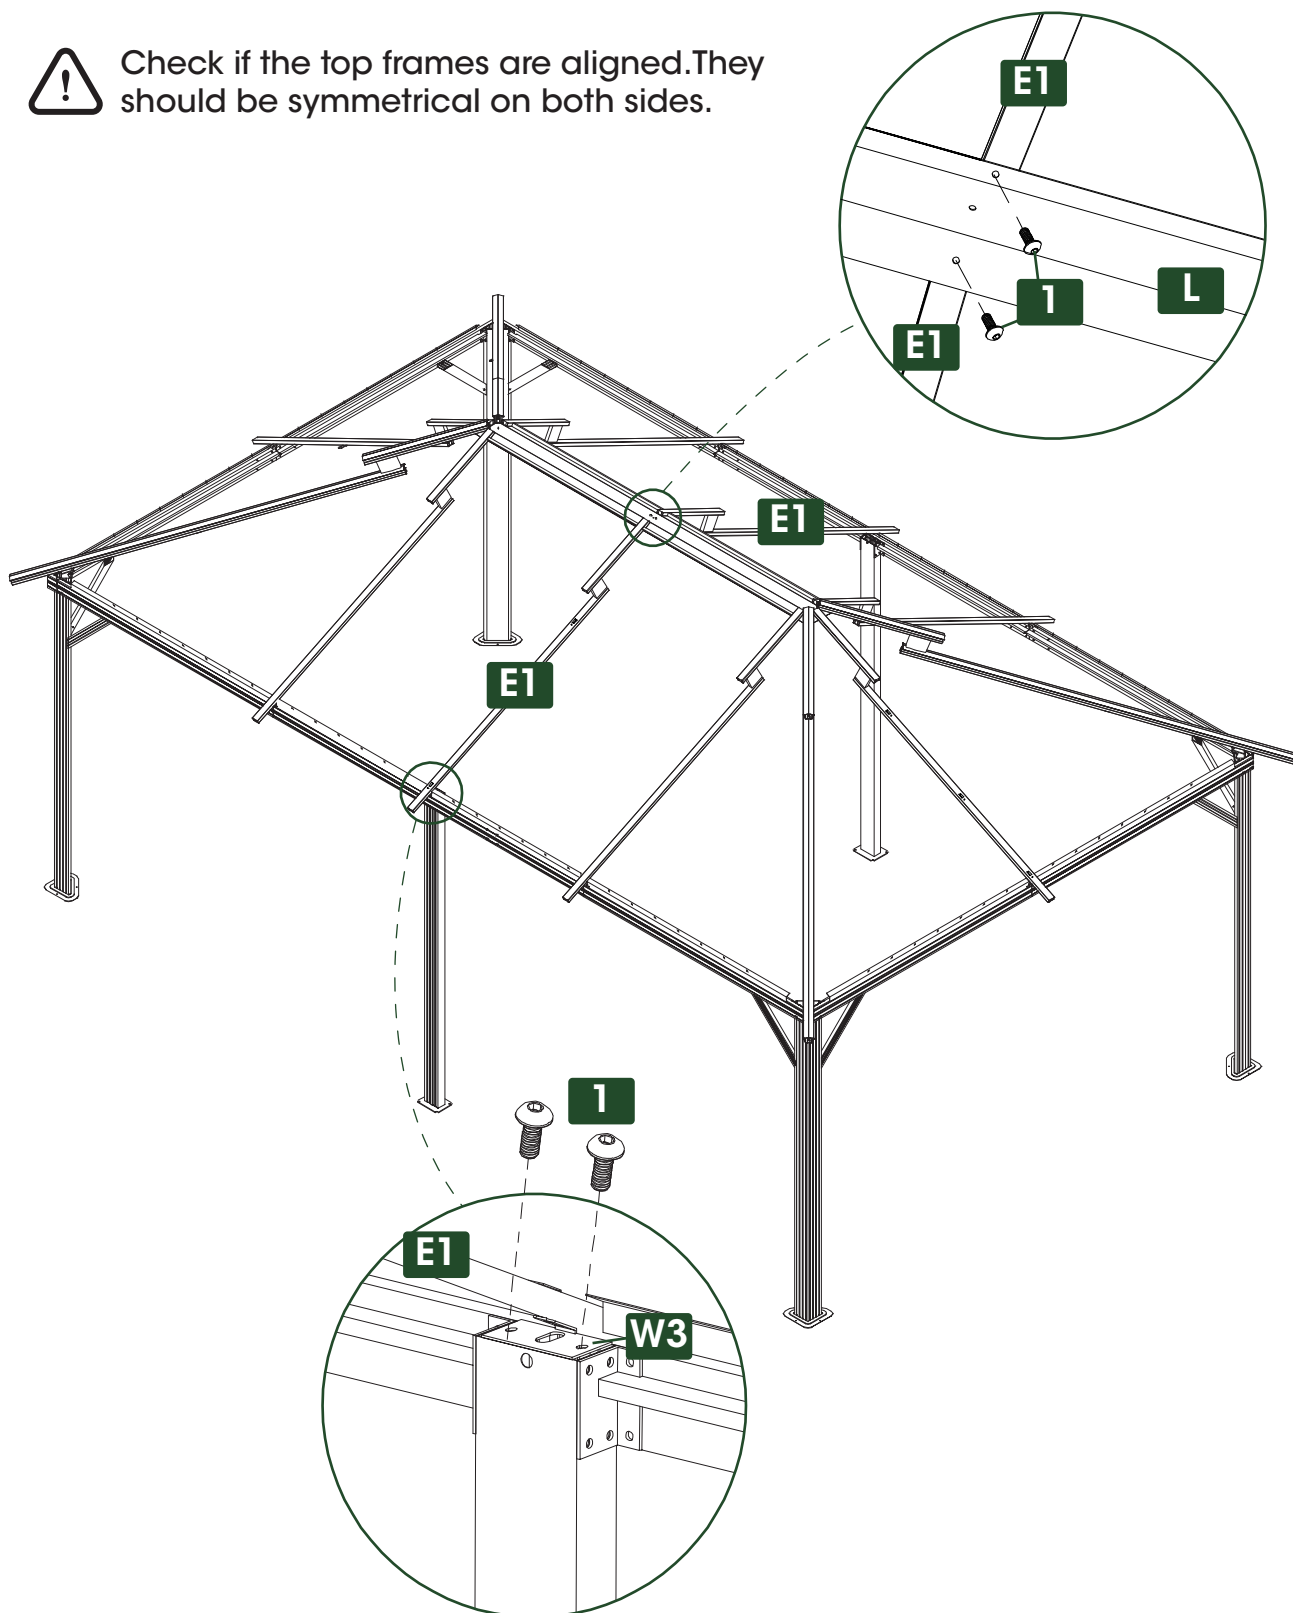

1 X 6

Phase 3: Top Material

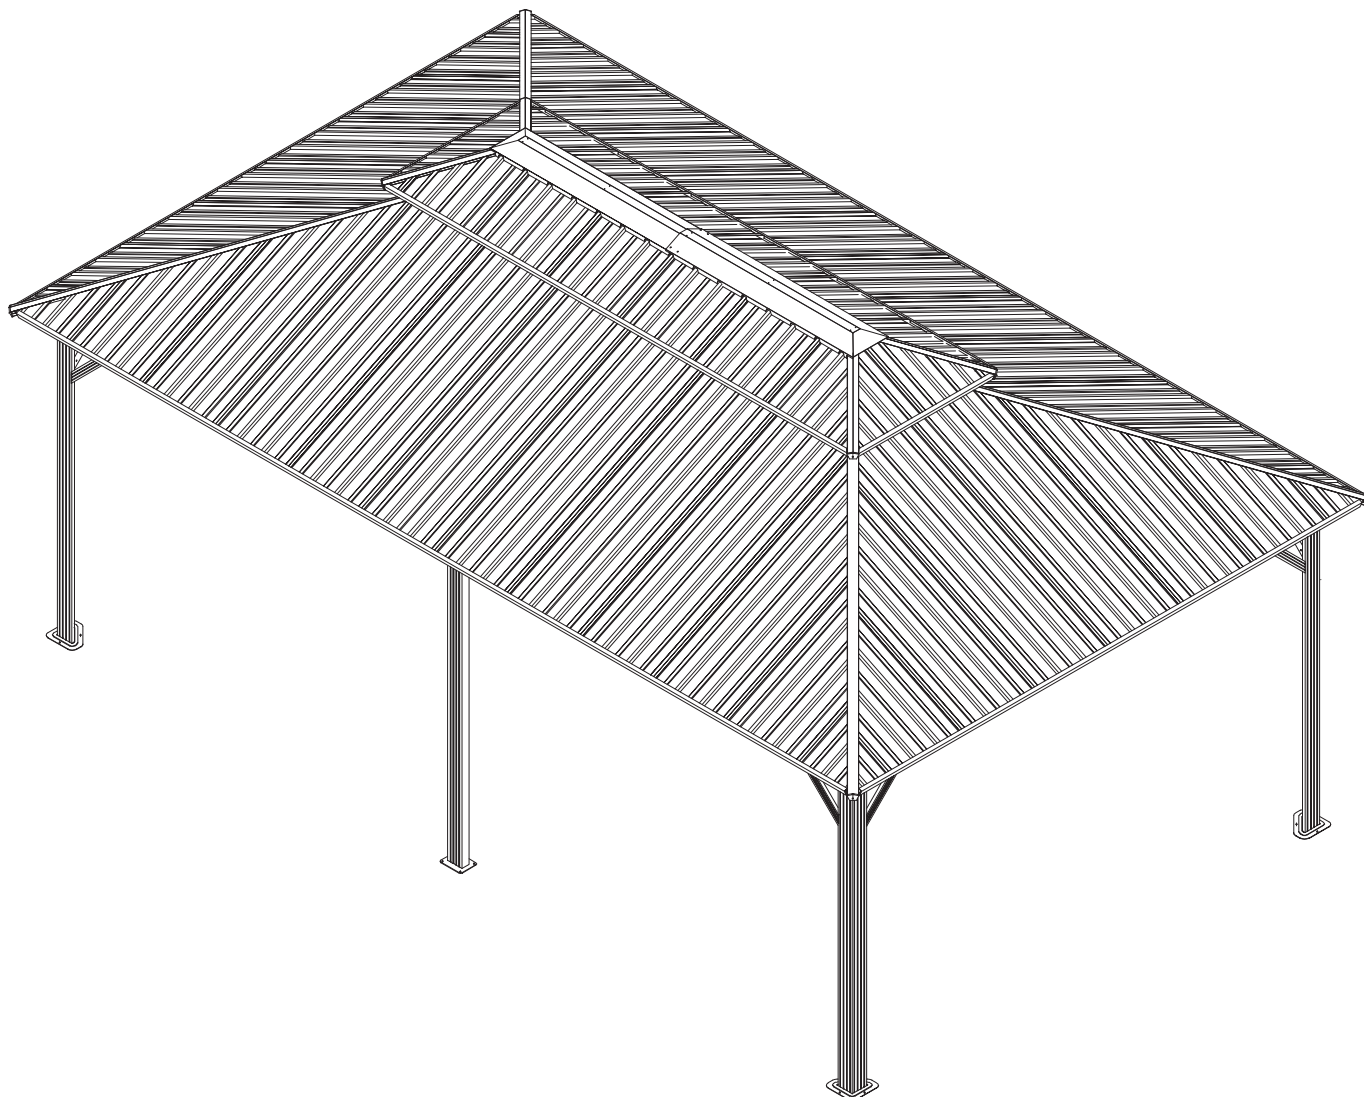


Please remove the protective film on the top material before installation.



If you find any variant of the top material, you can reset it using your hands or a pair of pliers.



Please wear gloves when working.

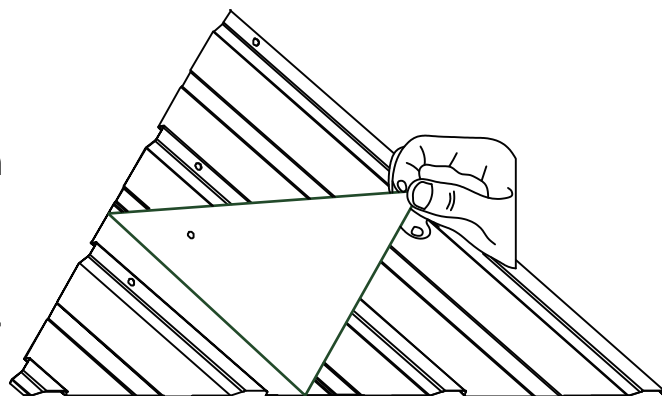




24 STEP x2






Z X 36



Z1 X 8

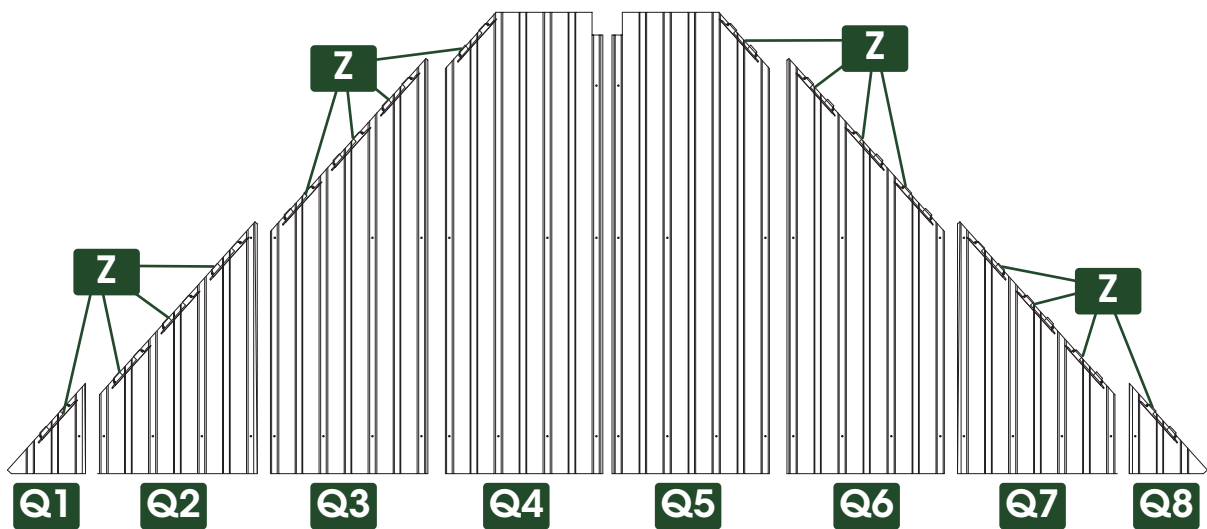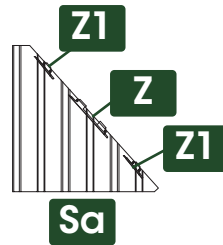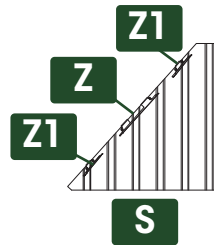

Insert the manger plate through the edges, You can use tools to strike.

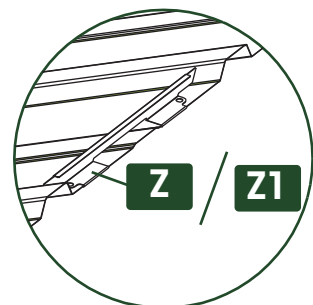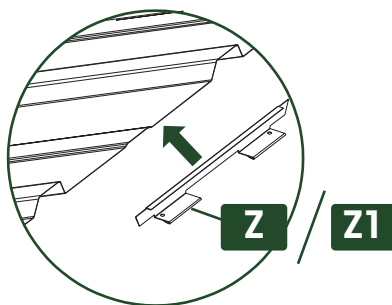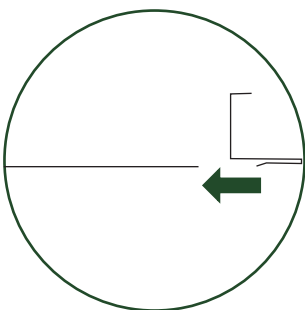

25 STEP


x2






Z X 40



Z1 X 4

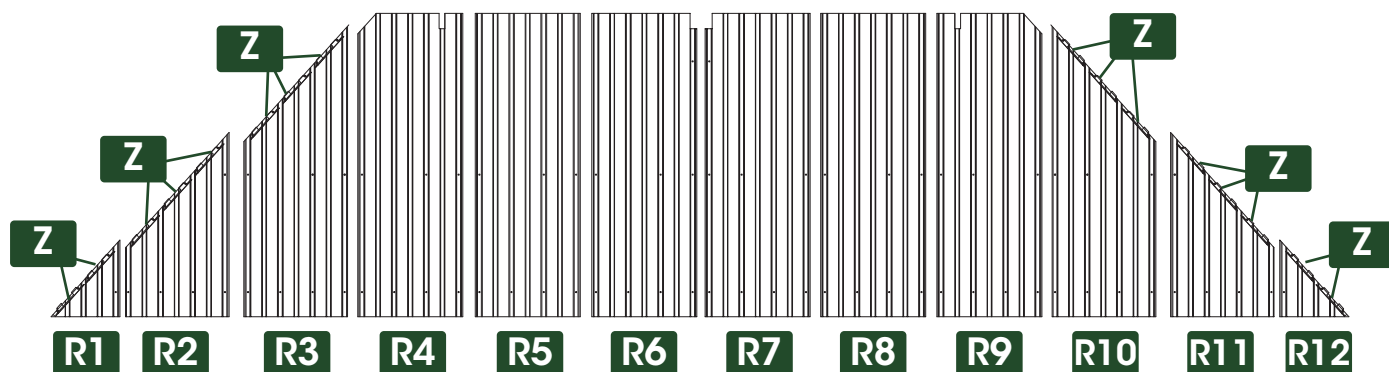


Insert the manger plate through the edges, You can use tools to strike.

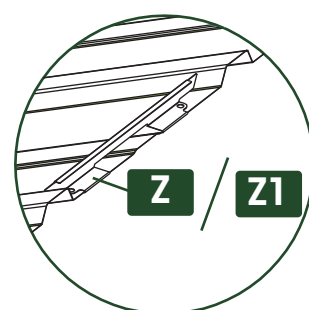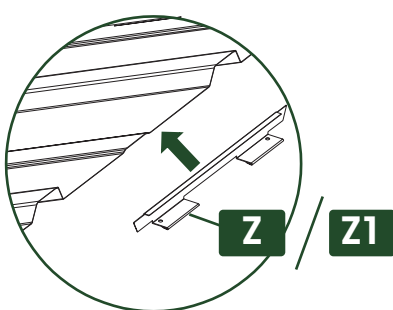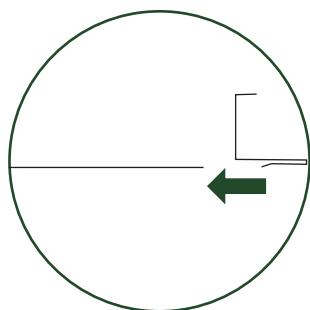



26 STEP




G1 x 2

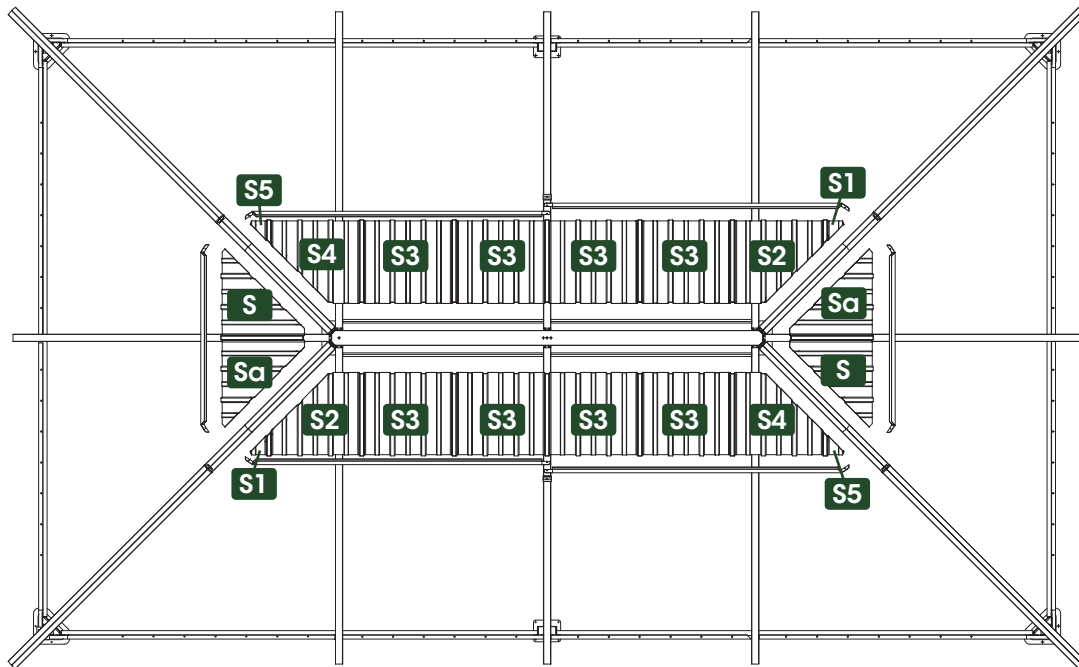



Make sure the corrugated-shaped fit of each top material.

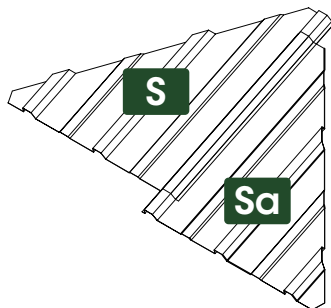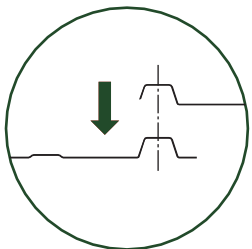

Make sure the top material is inserted into the sliding track groove.

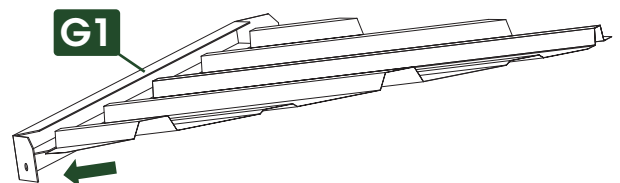

Make sure the top material is inserted into the top frame groove.

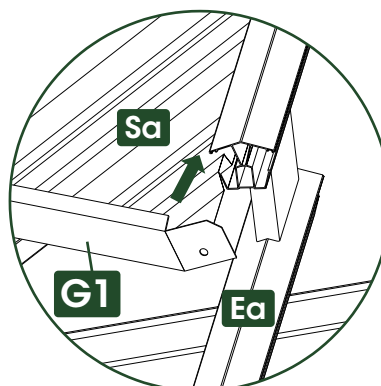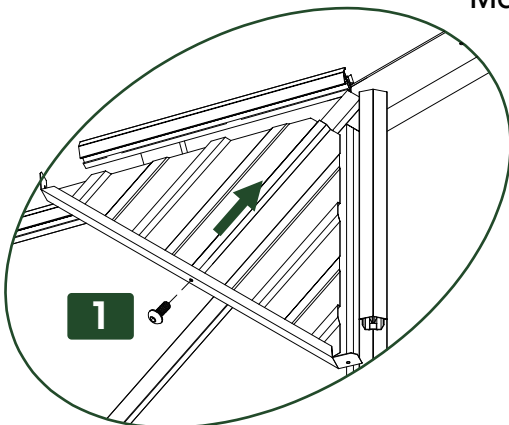

1 x 2

27 STEP



G2 X 2




N X 4



G5 X 2



N1 X 2

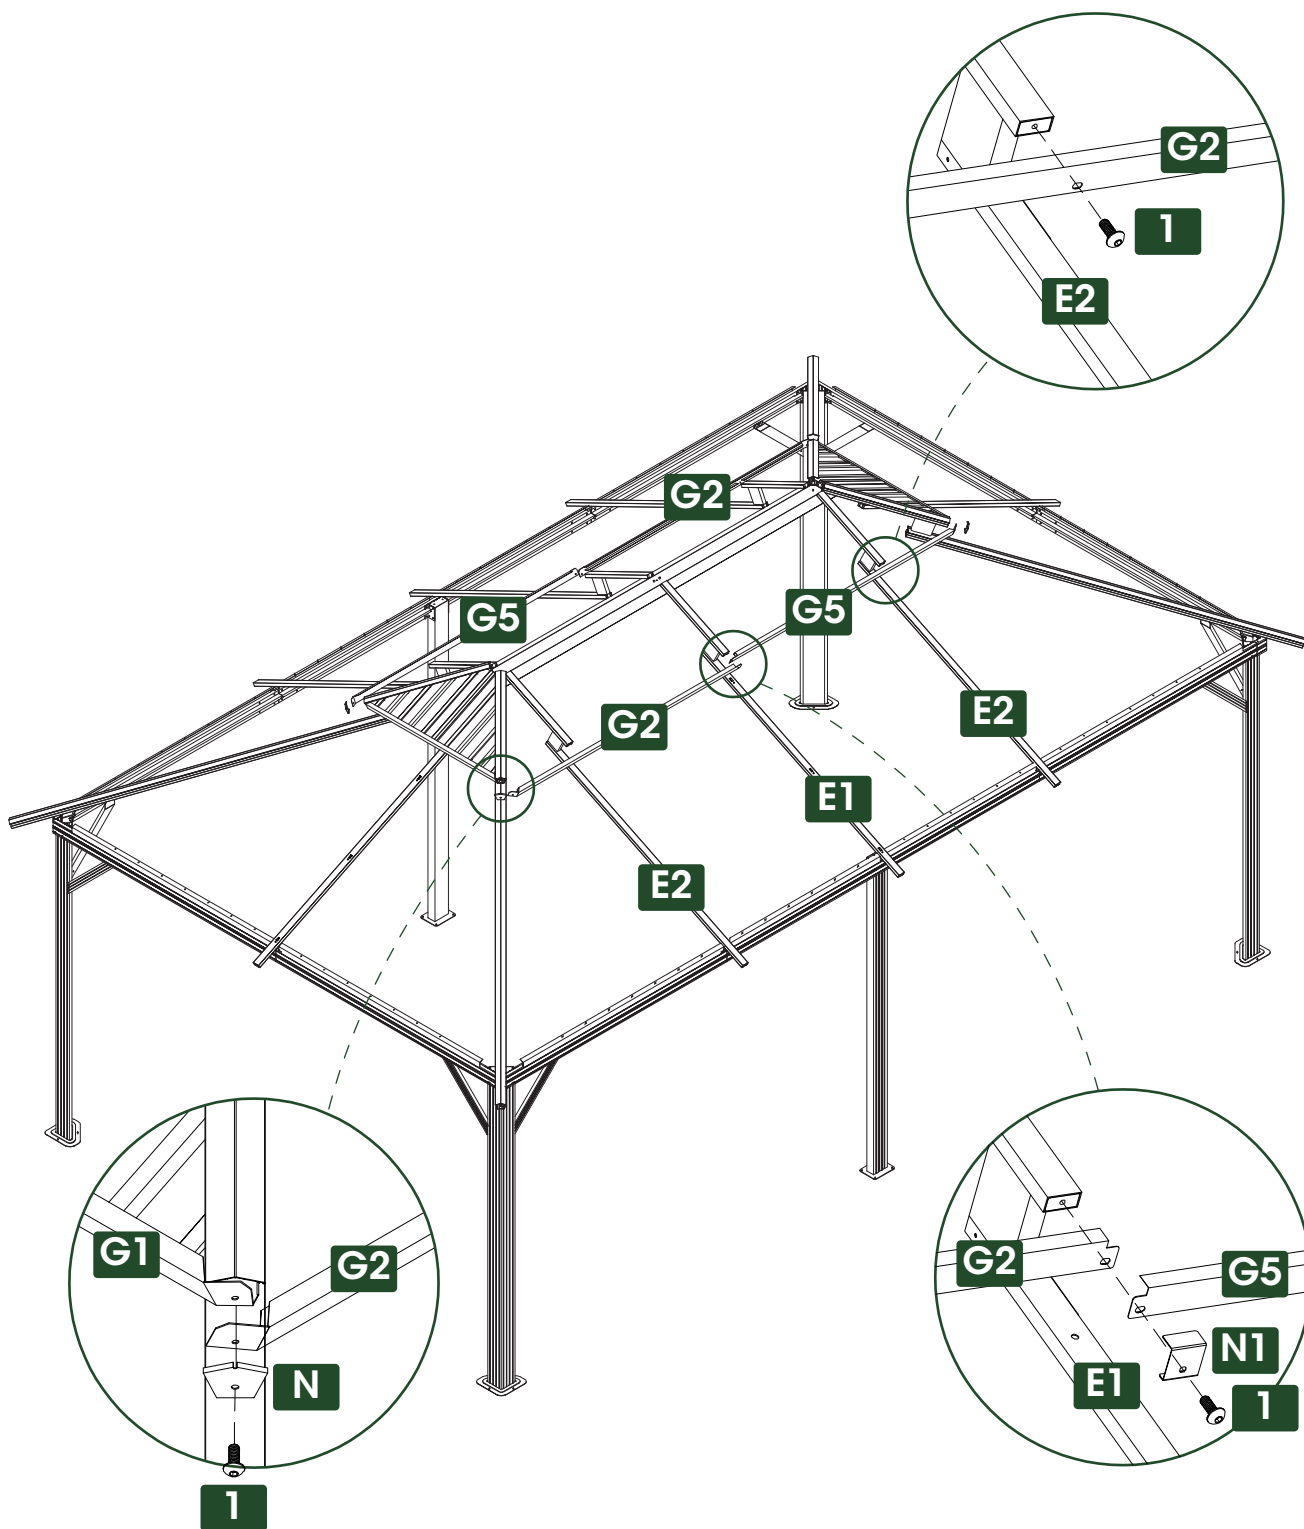


Don't tighten the screws.




1 X 10

28
STEP

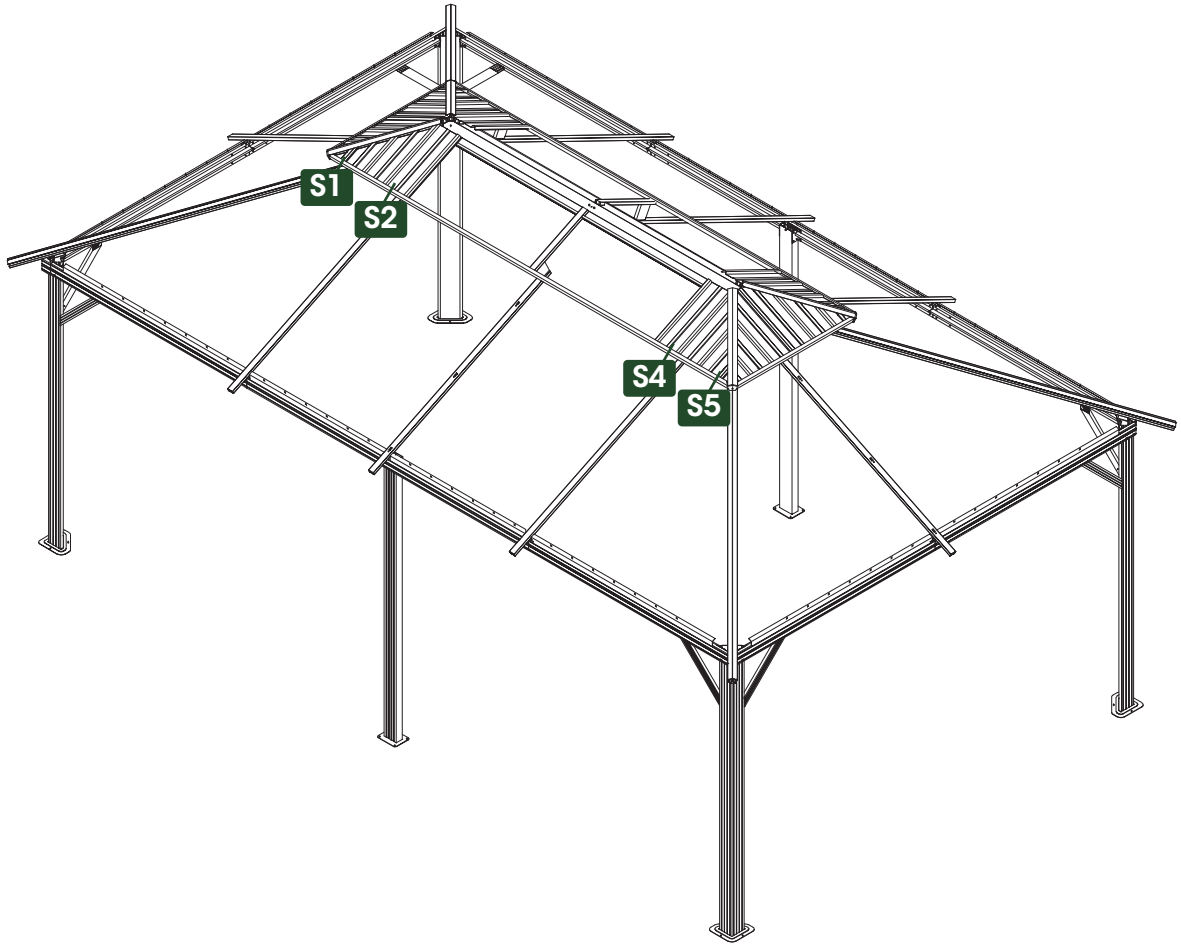

29
STEP

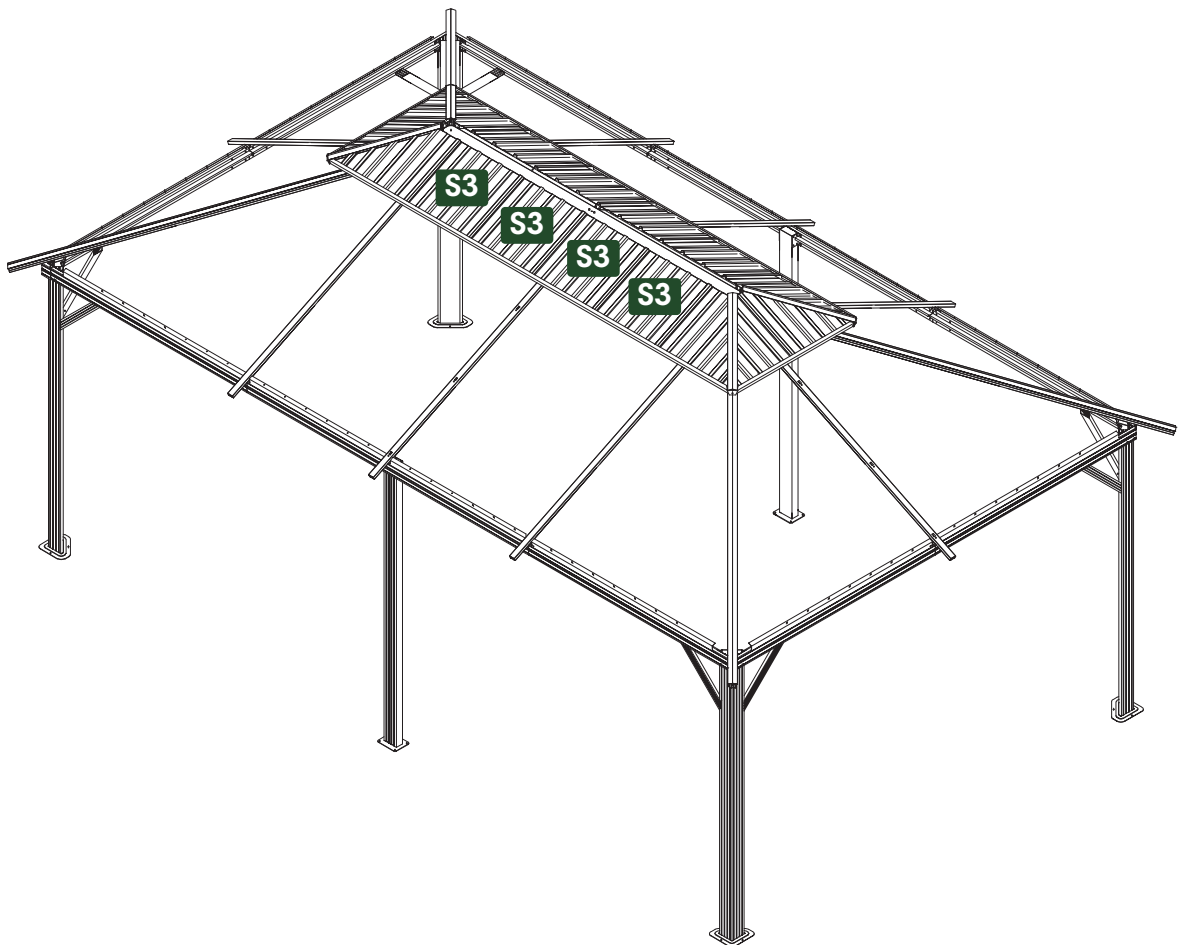





30 STEP



M X 2



M1 X 5

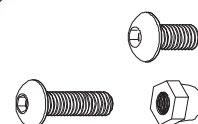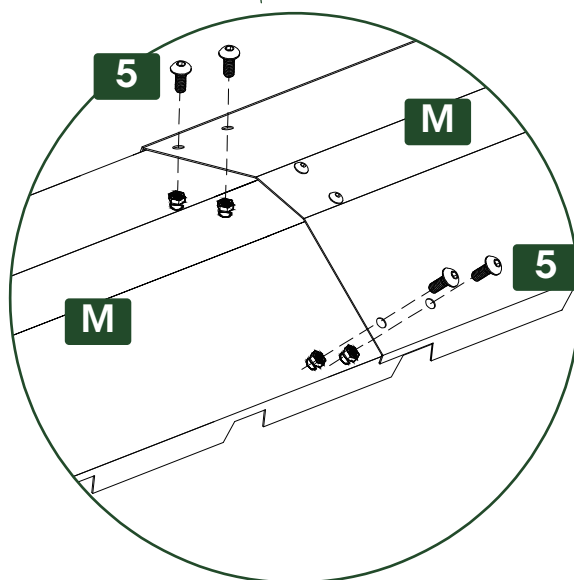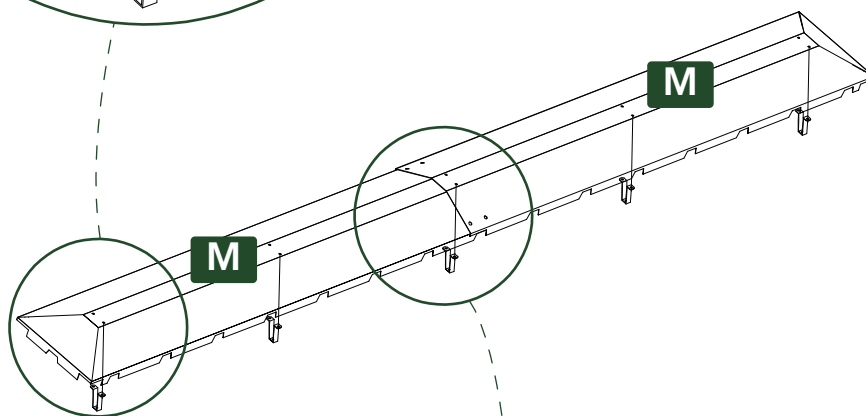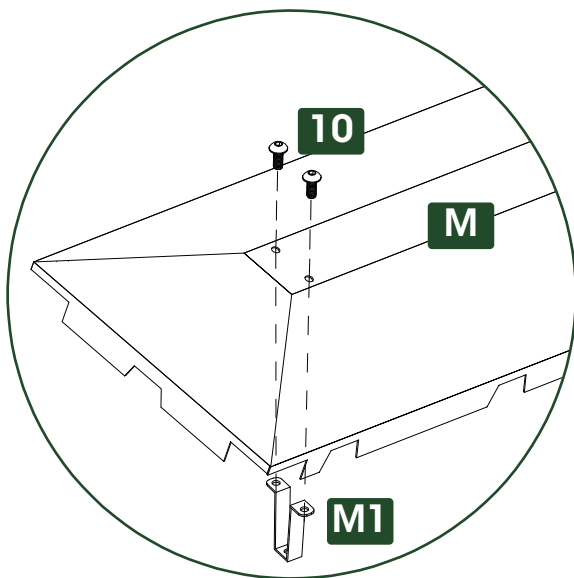

10 X 10





5 X 4

31 STEP



11 X 4

Make sure the corrugated-shaped
fit of roof and top material.

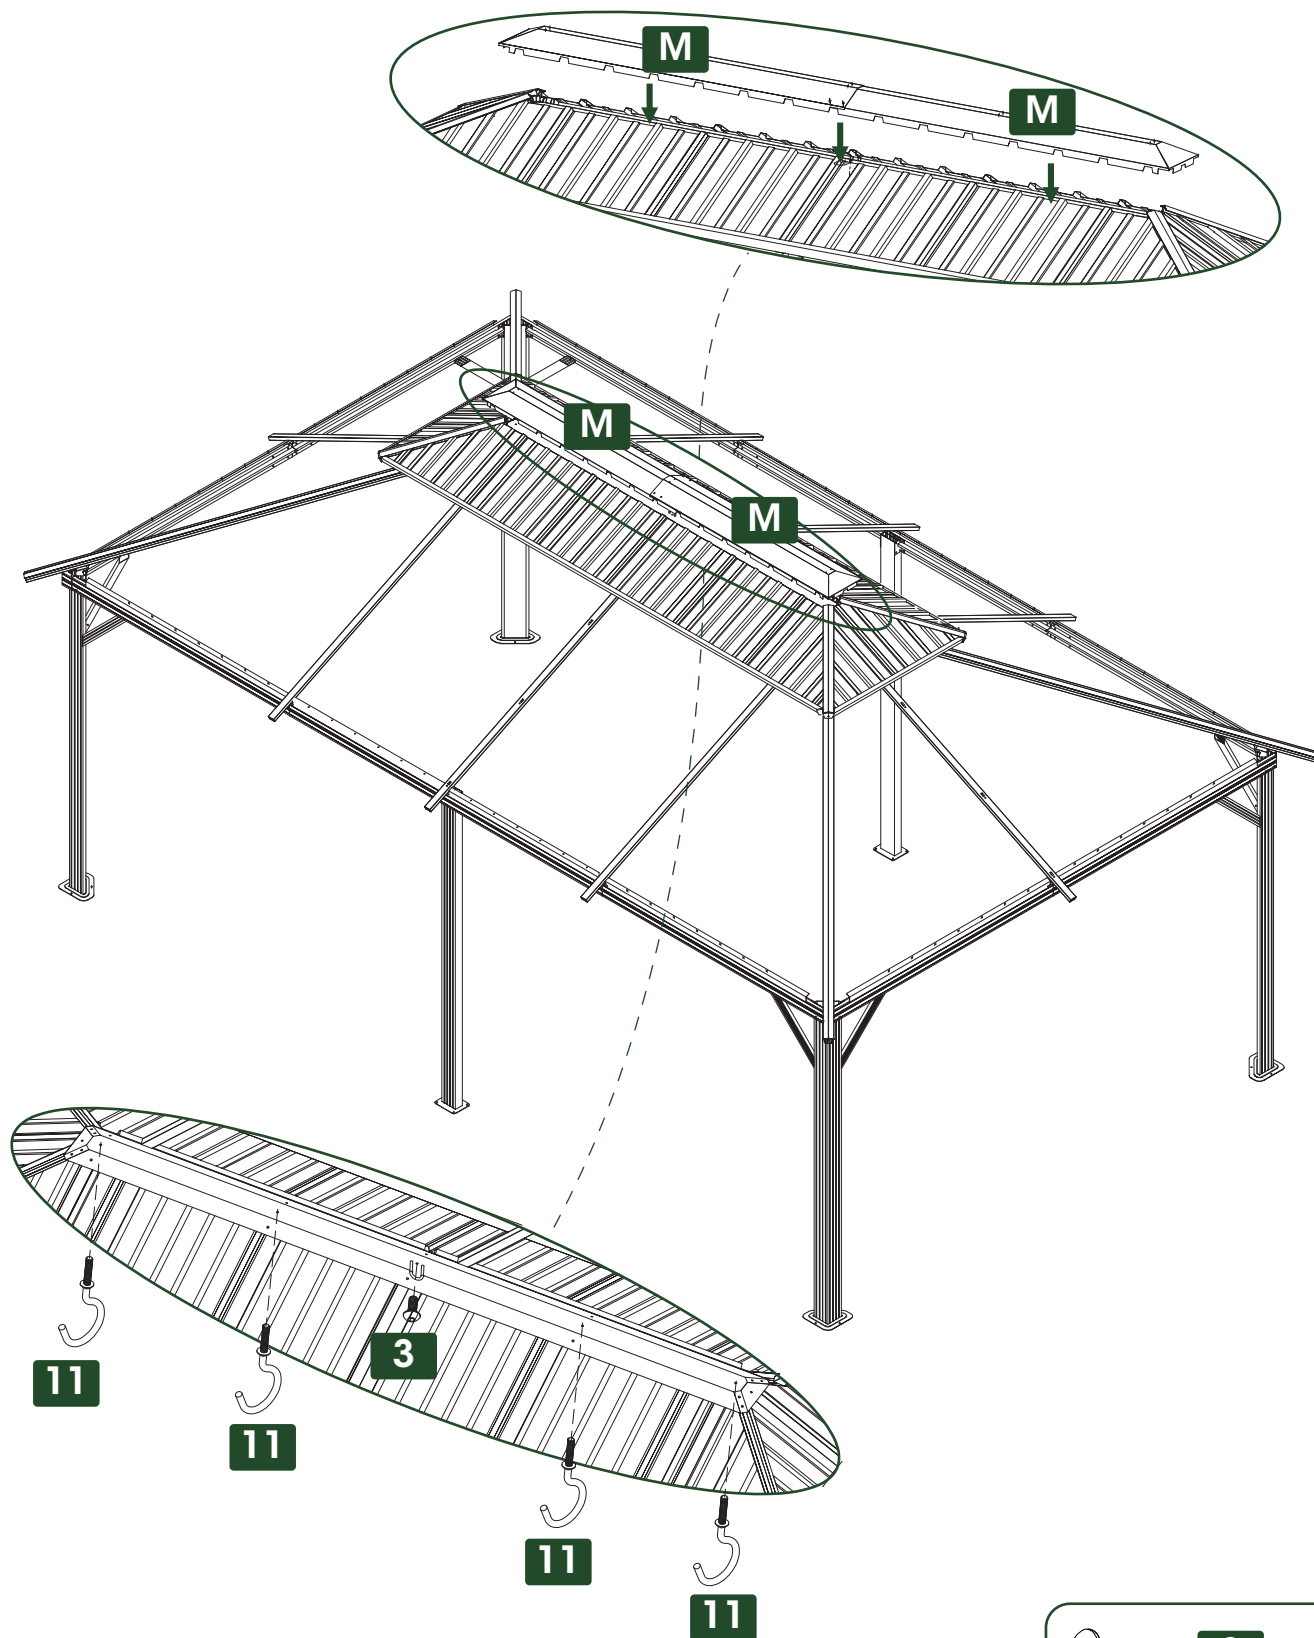


3 X 1

32 STEP



W X 4



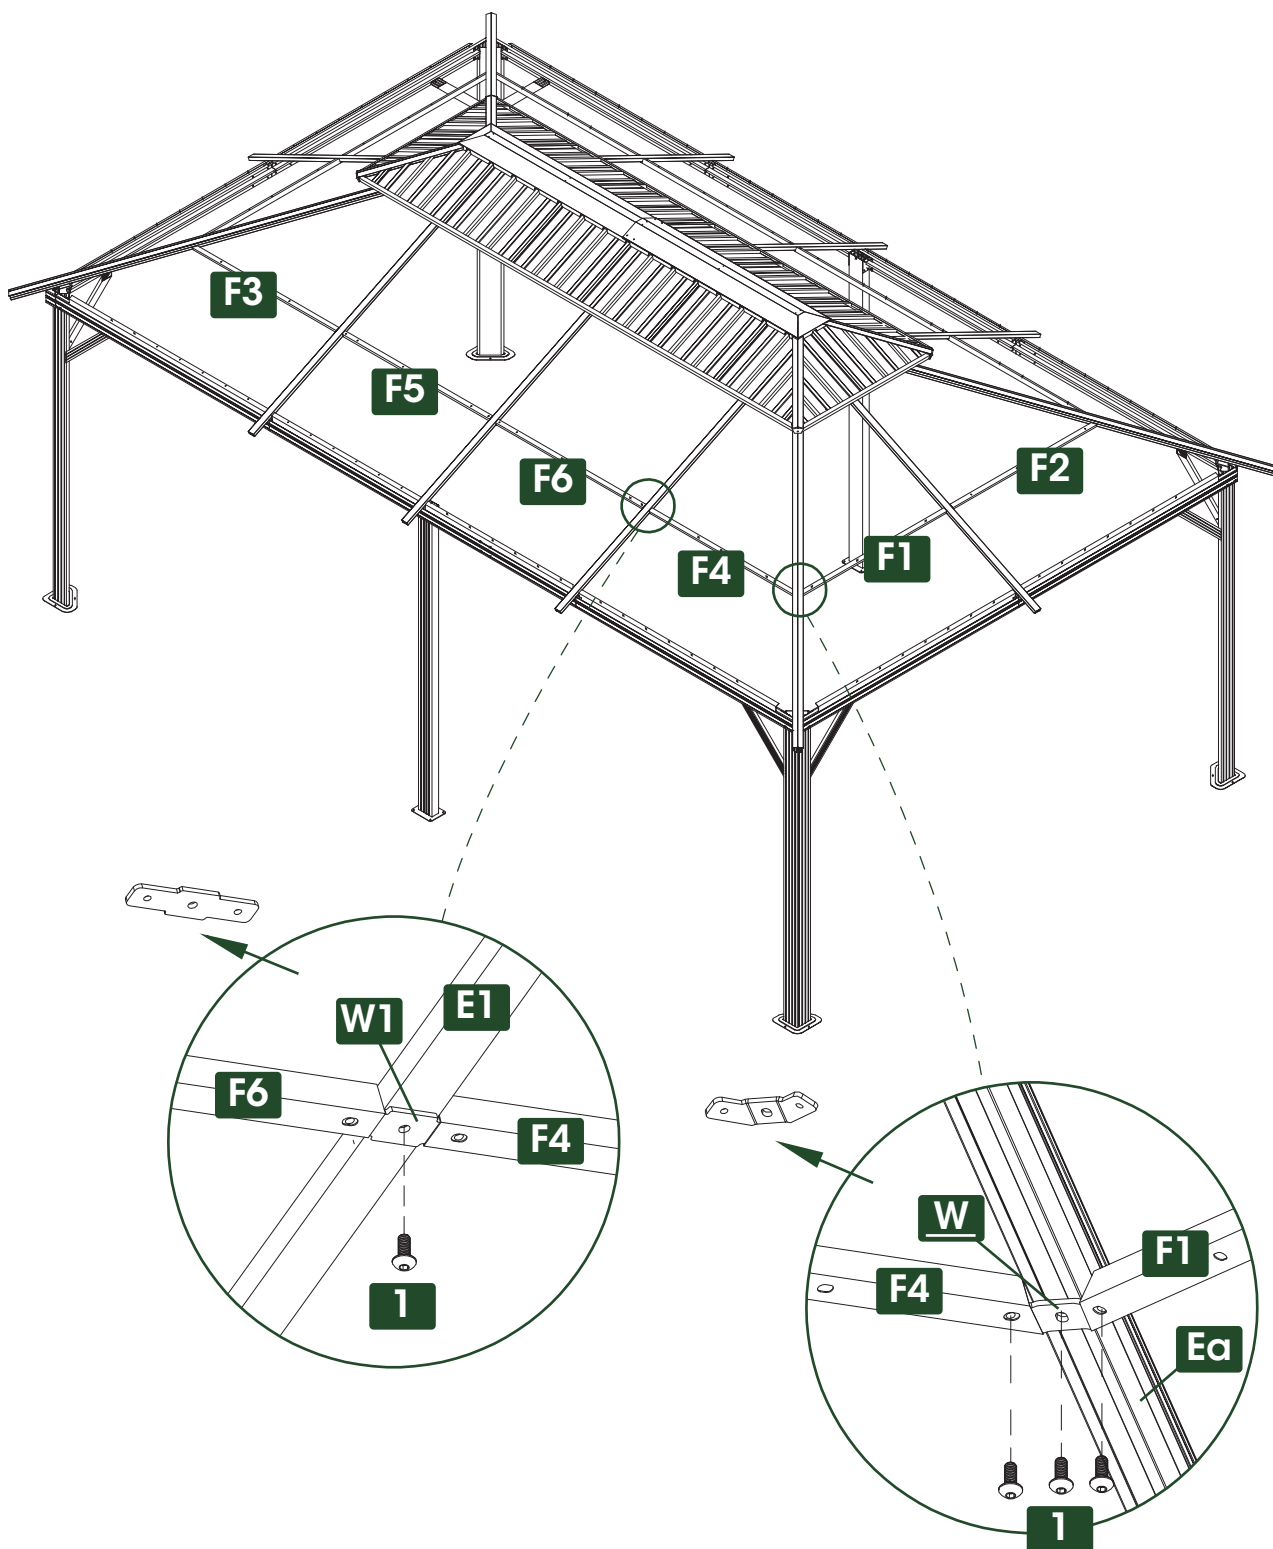


⚠ Pay attention to the direction of part "W".



1 X 20


33 STEP

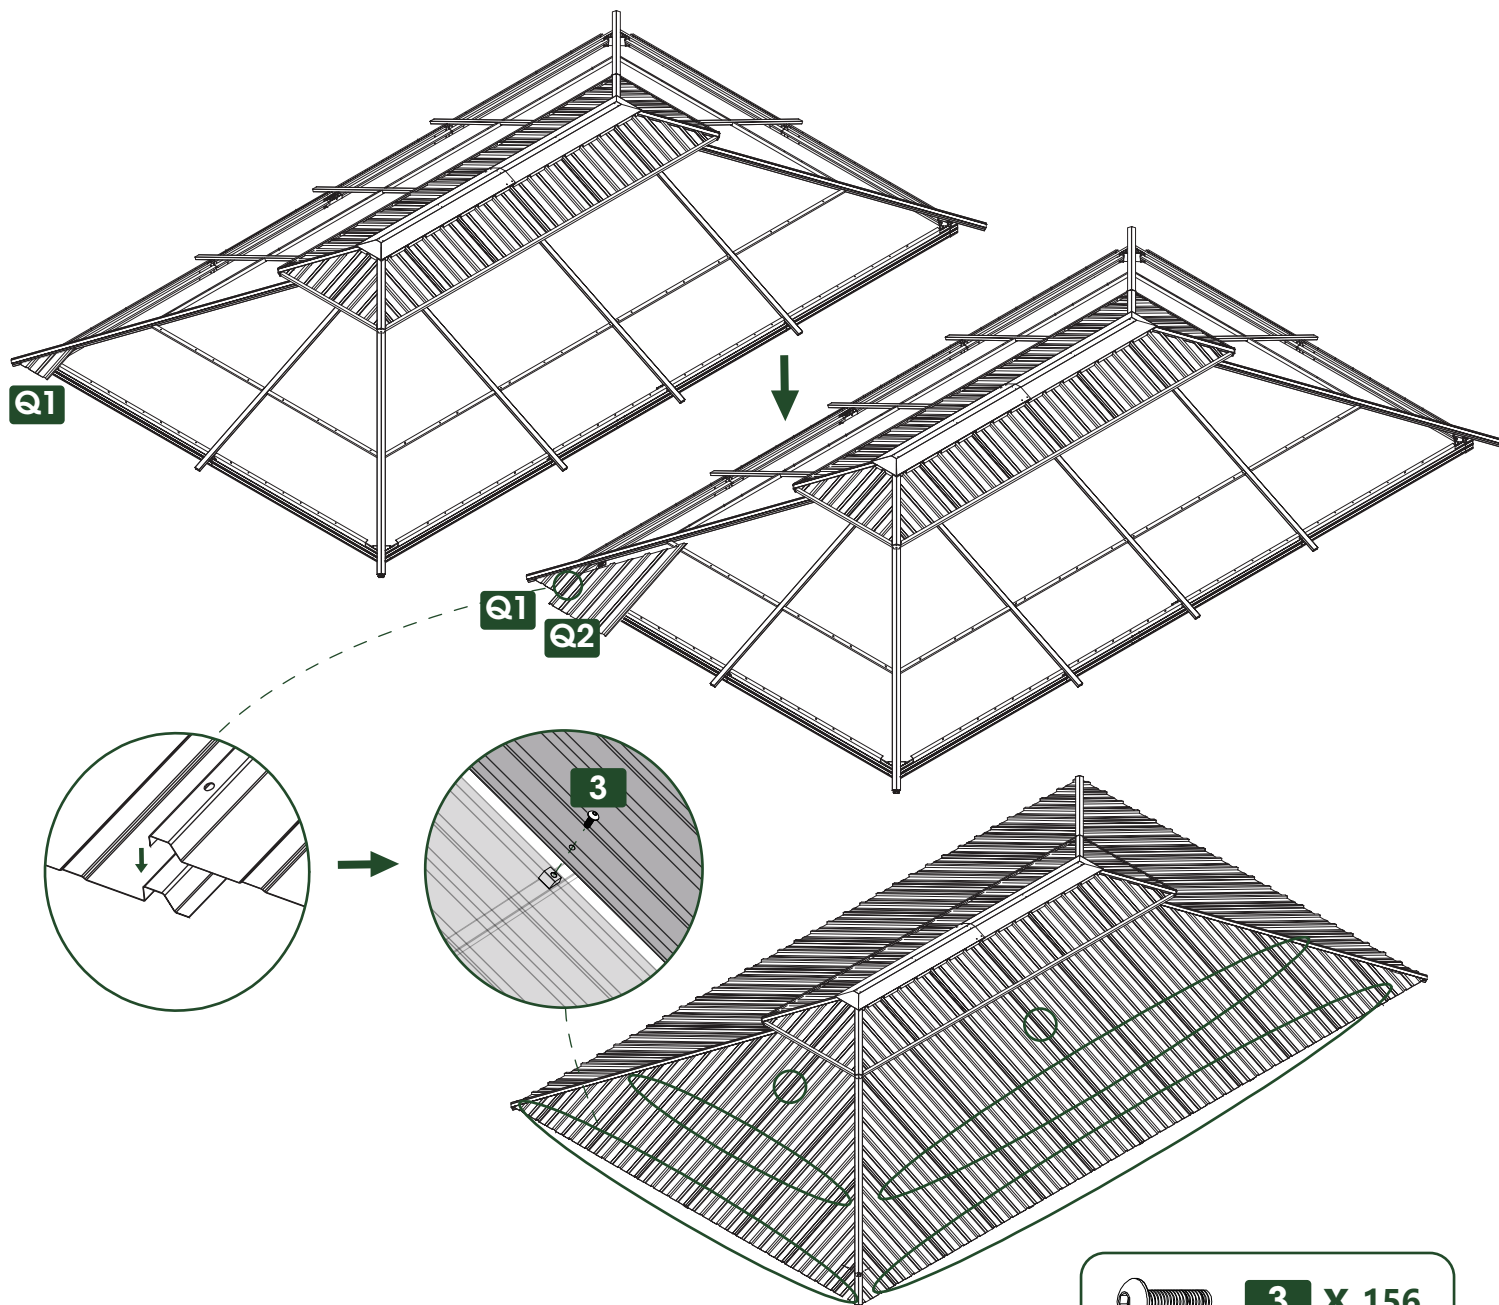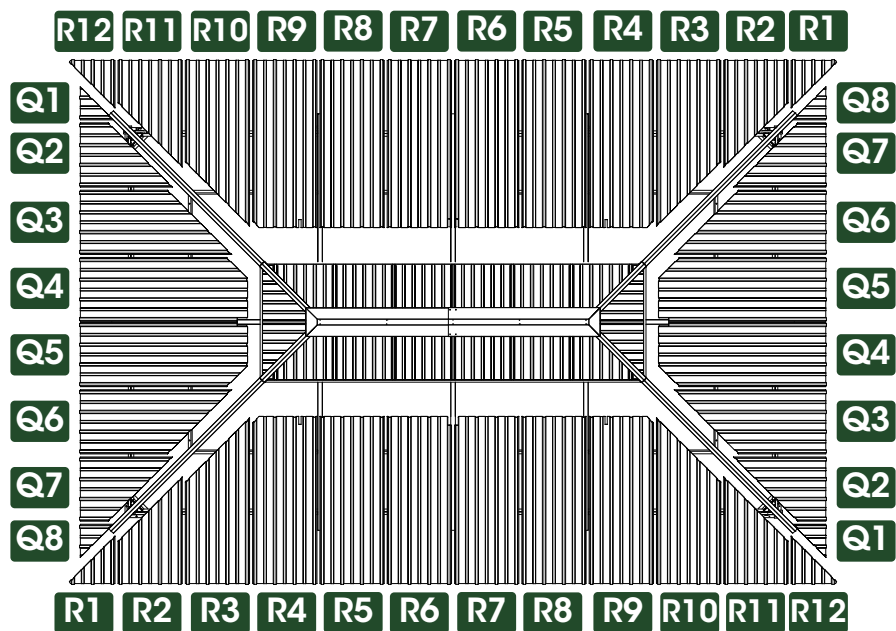

3 X 156

34 STEP


 **G** X 4  **G7** X 4
 **G8** X 4  **N** X 4  **N1** X 8

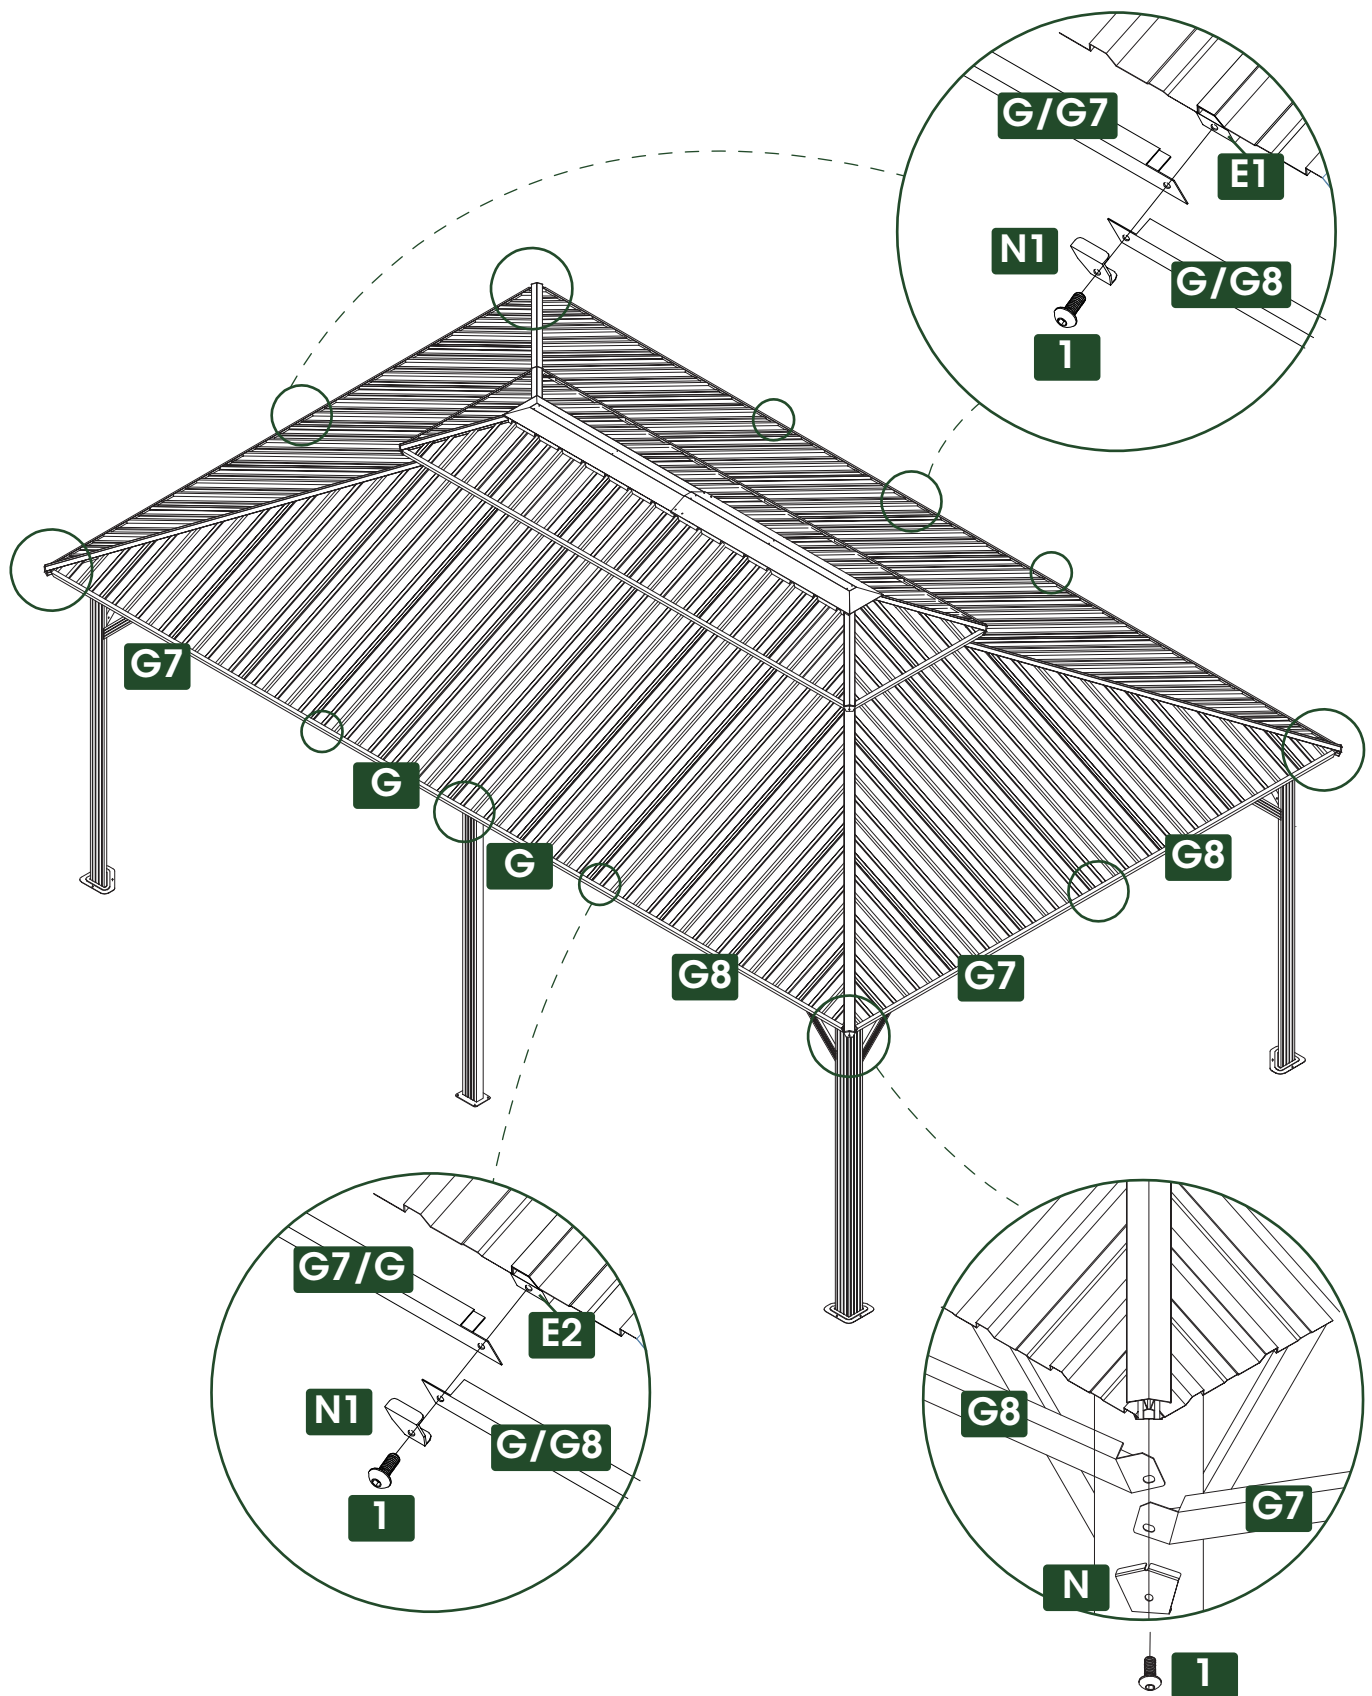

 **1** X 12

35 STEP

 **G3** X 2  **G6** X 2
 **G4** X 2  **N** X 4

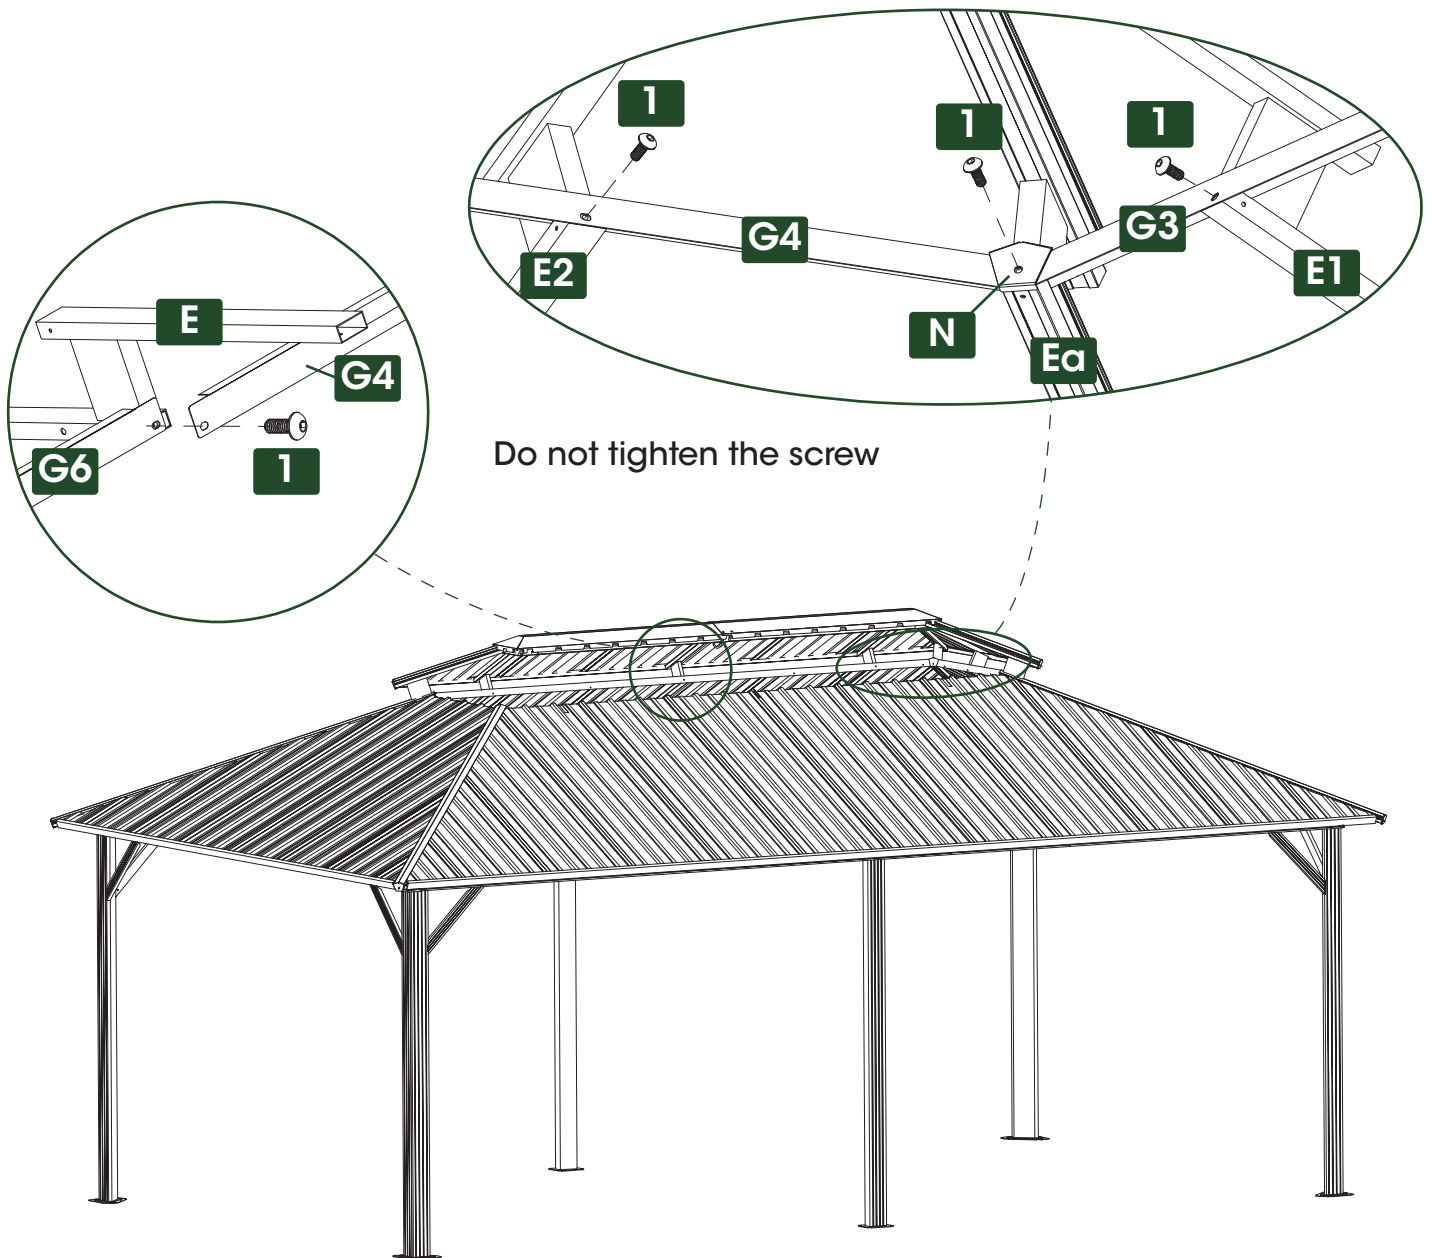


 **1** X 12

36 STEP




V1 X 2



V2 X 2



V3 X 2






V4 X 2




V5 X 2

Remove the screws 1 and reattach the sliding track.

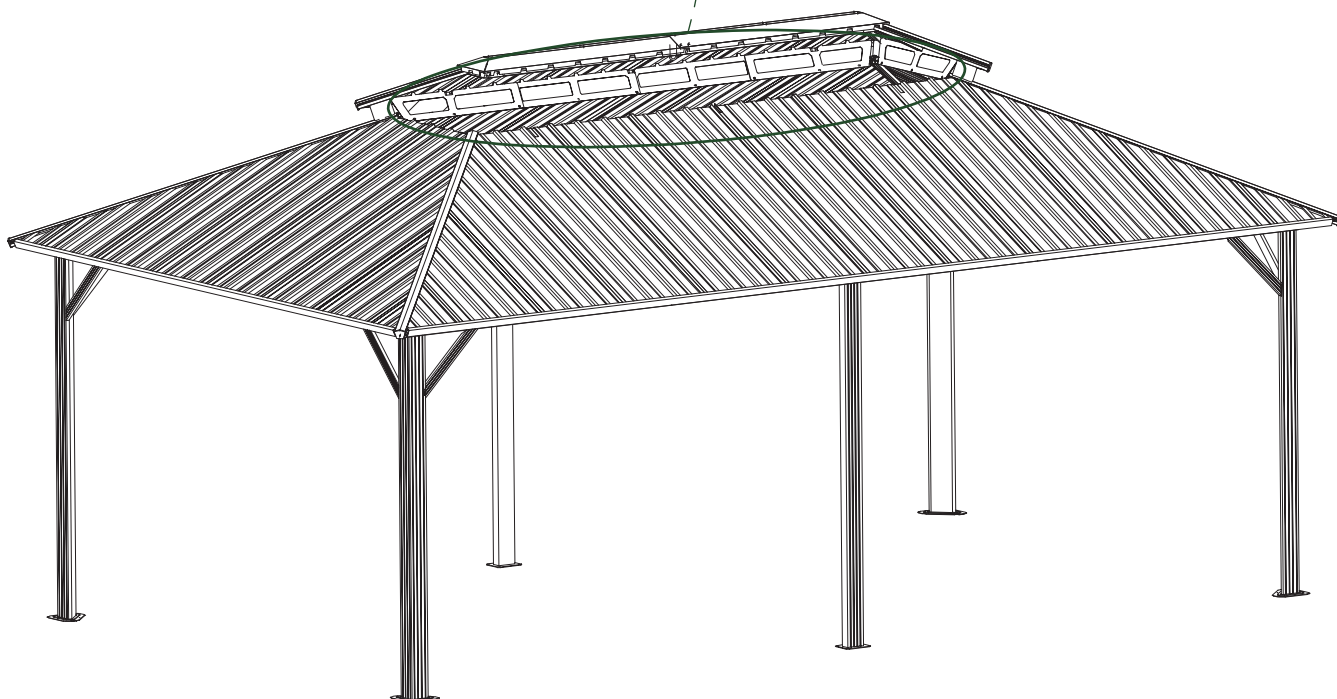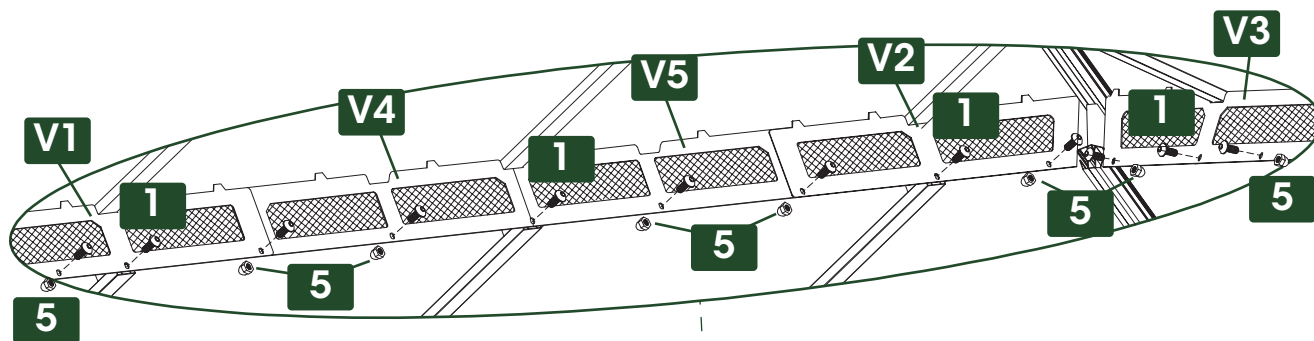


5 X 16



Phase 4: Wall&Curtain&Netting

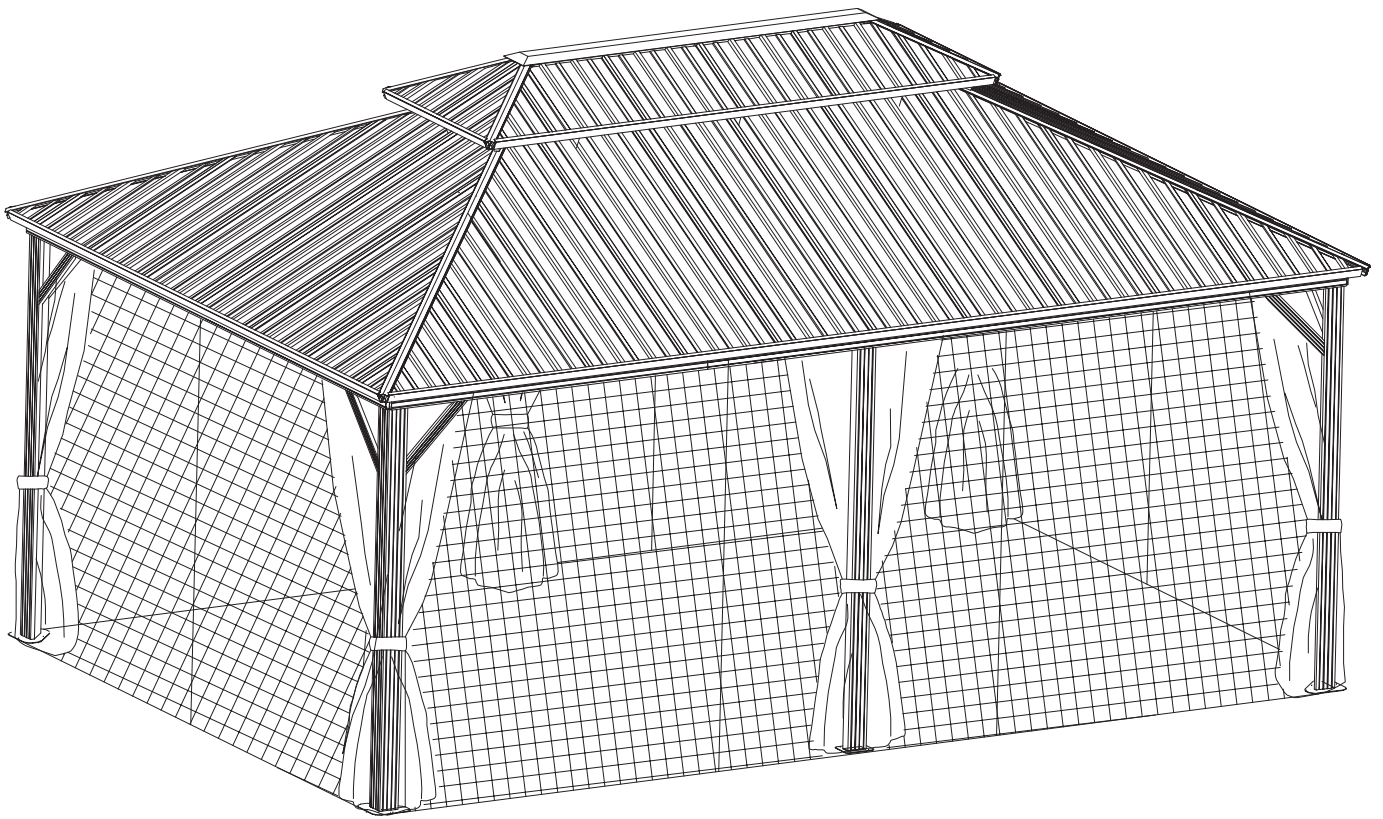


37 STEP



T X 1(4+2pcs)

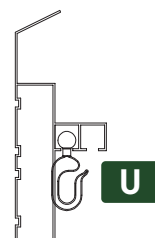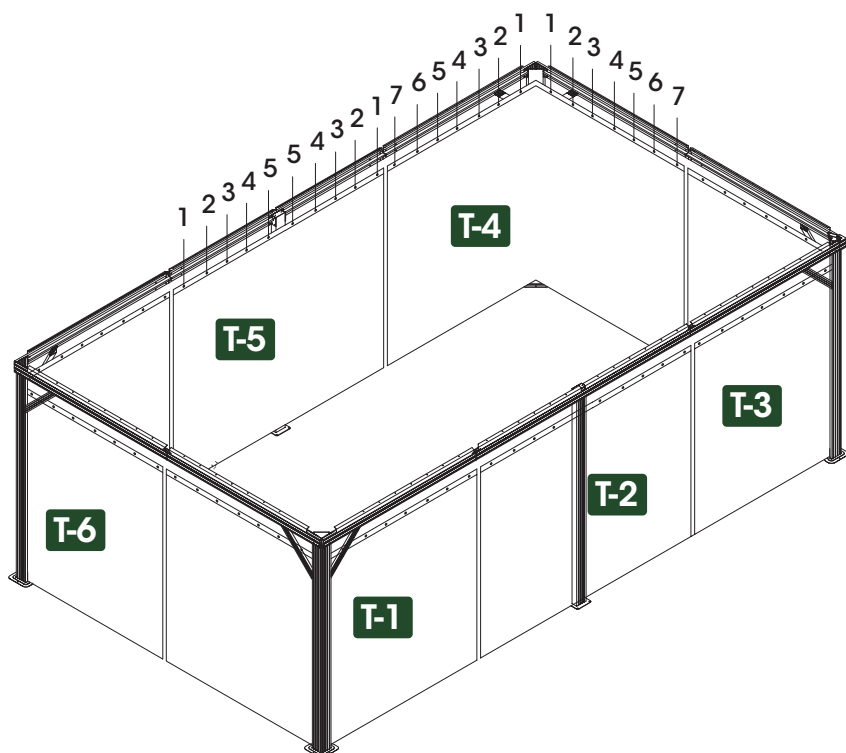



The privacy screen is on the outside, while the netting is on the inside.

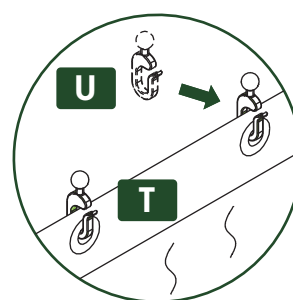


38 STEP






T1 X 1(4+2pcs)








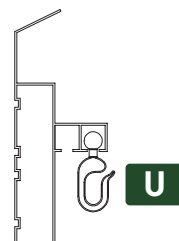
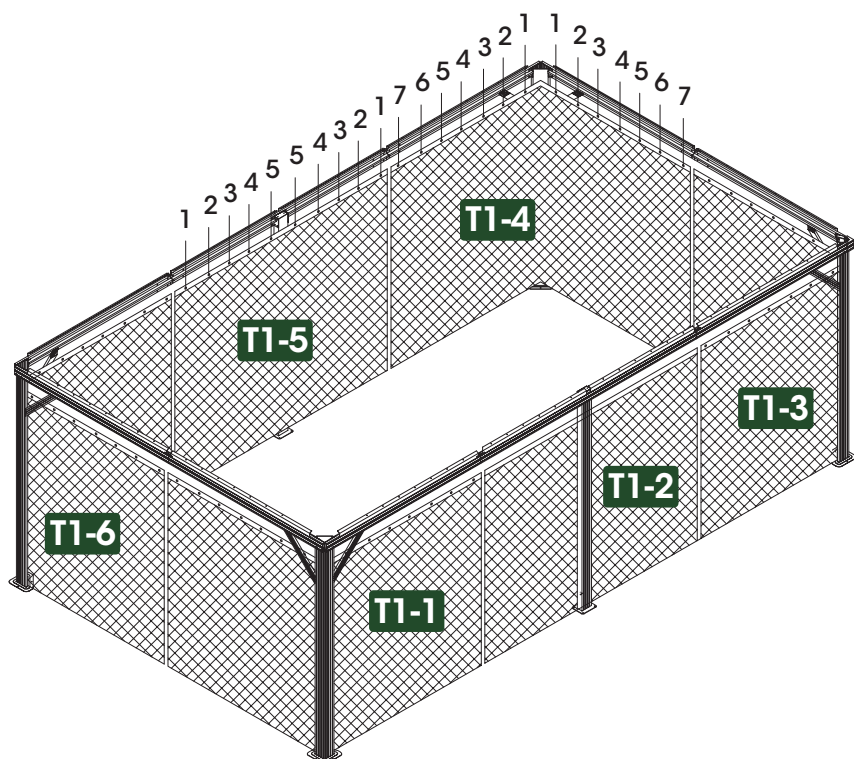


The privacy screen is on the outside, while the netting is on the inside.

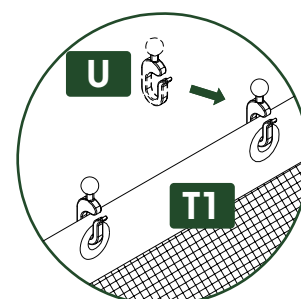

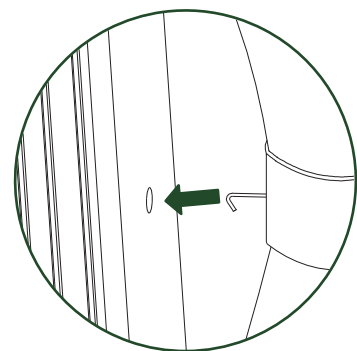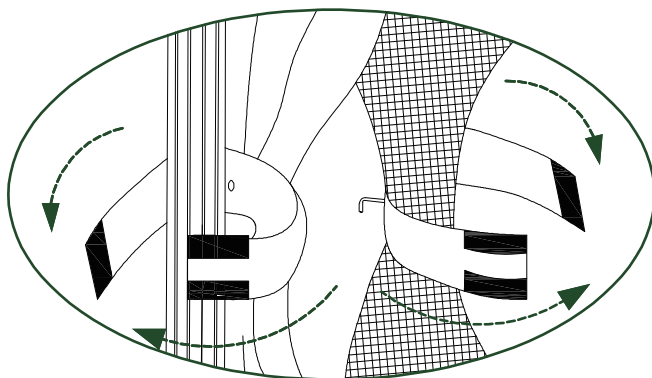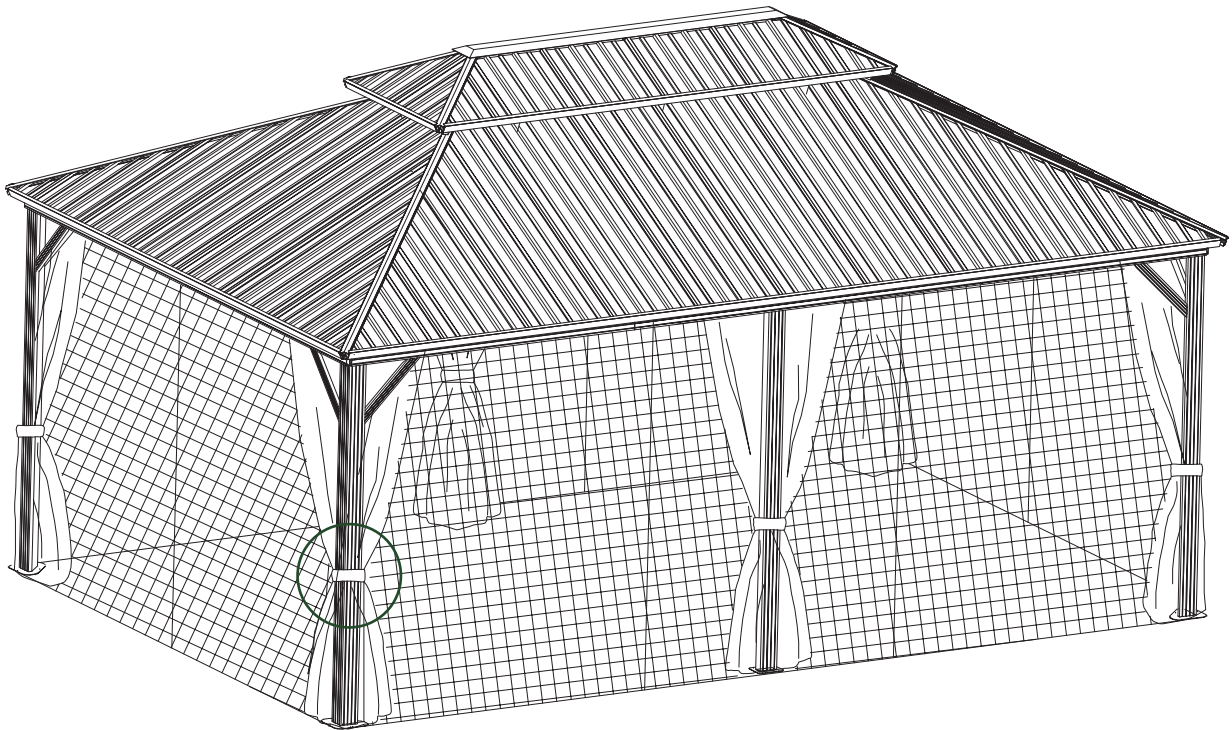

Hang the hook attached
to the netting on Part A.

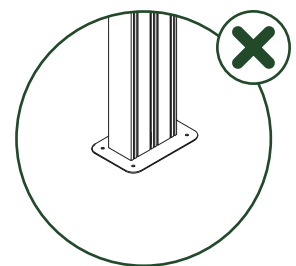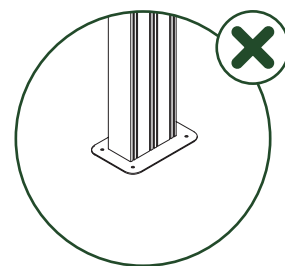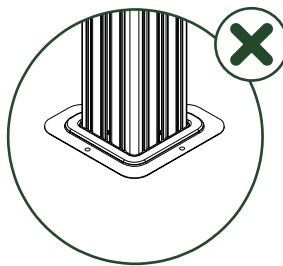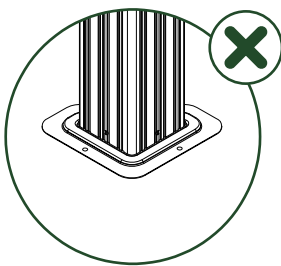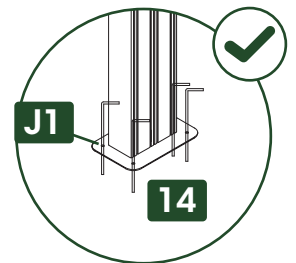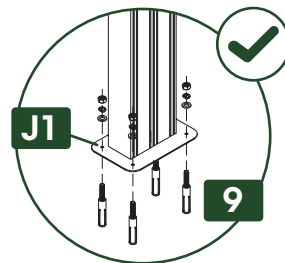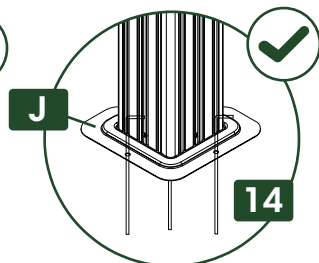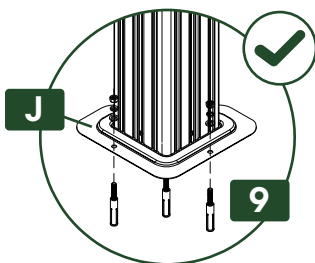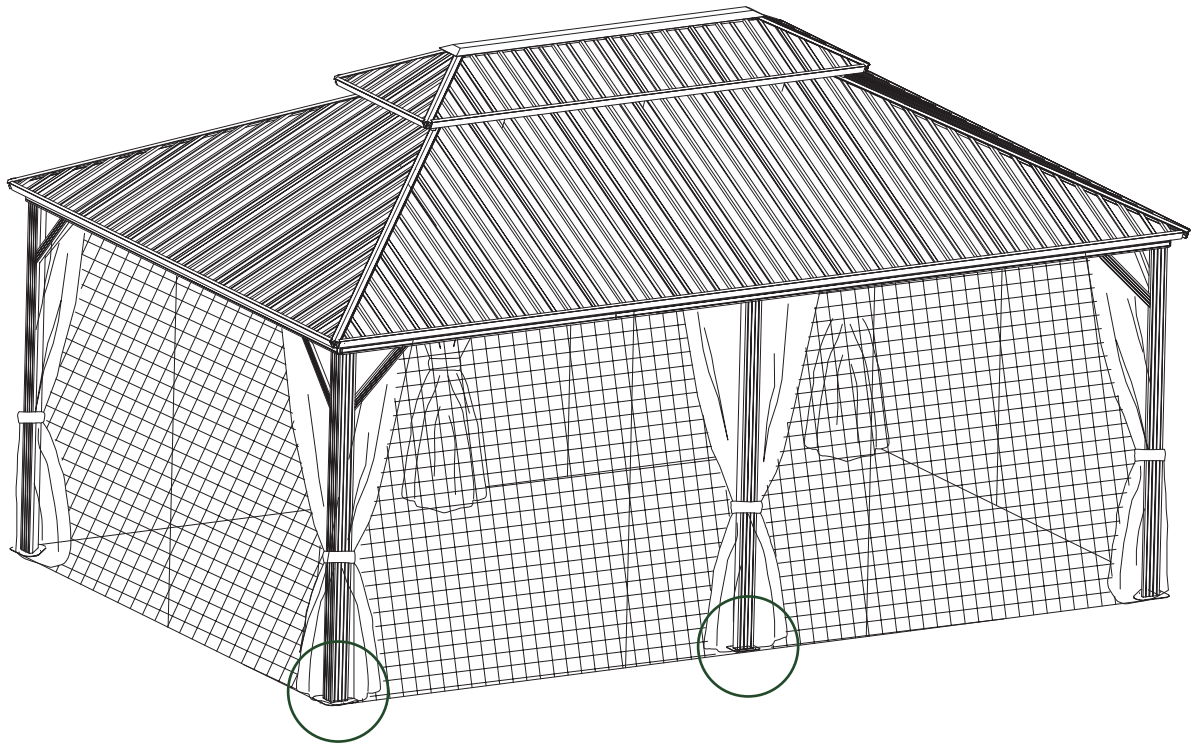

Hard foundation

Soft foundation

Hard foundation

Soft foundation

Installation Completed



To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.** Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.



9 X 20



14 X 20

AFTER-SALE

AFTER-SALE SERVICE

If you have any suggestions or encounter quality issues with our products, please contact us first.

Our after-sales team will respond within 24 hours, and we will do our best to provide a solution until you are satisfied.

GUARANTEED CUSTOMER SERVICE

Your shopping experience is very important to us!

If you feel unsatisfied or have any questions,
just contact us!

If you want to share how wonderful our smart product makes your home, **just contact us** and share your pictures!

For further information,
just contact us!



 service@kmcglobe-us.com

 (USA) +1 213-816-4788