


Assembly Instructions

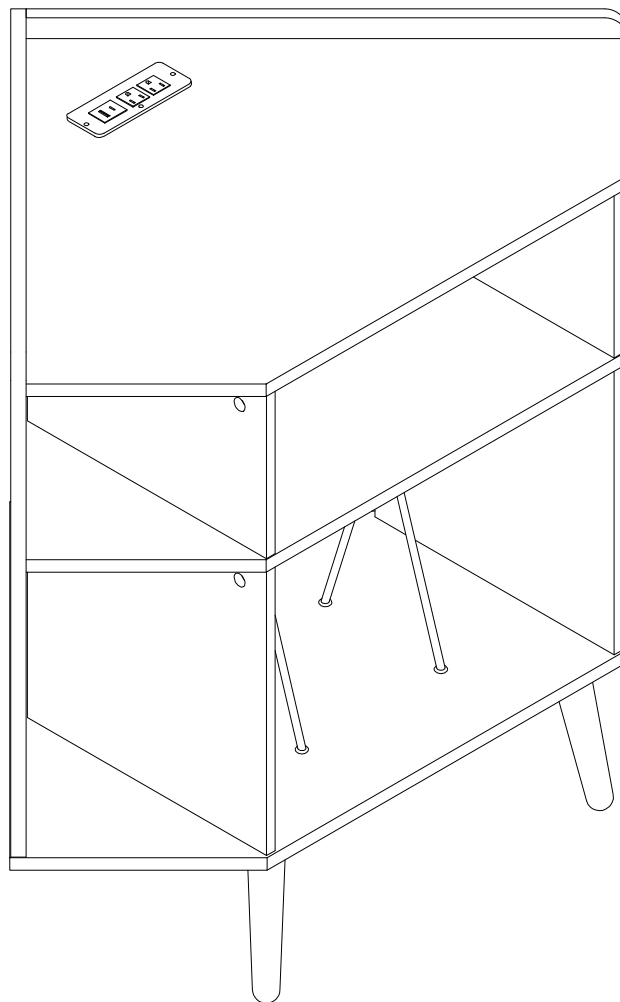


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

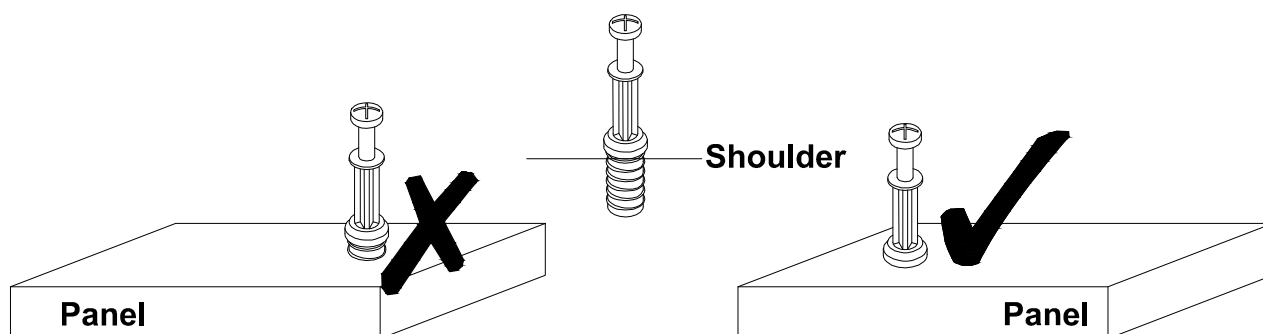

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

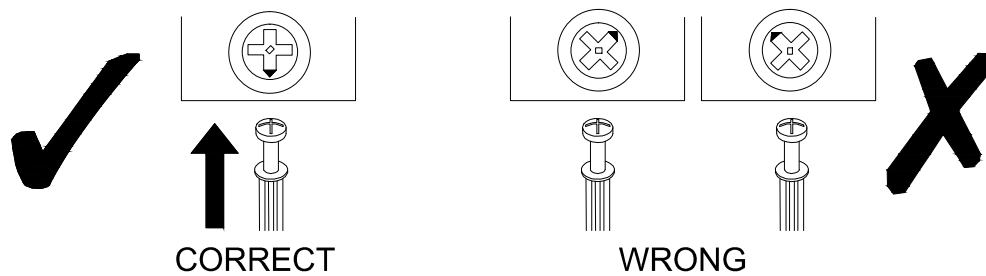

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT







Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

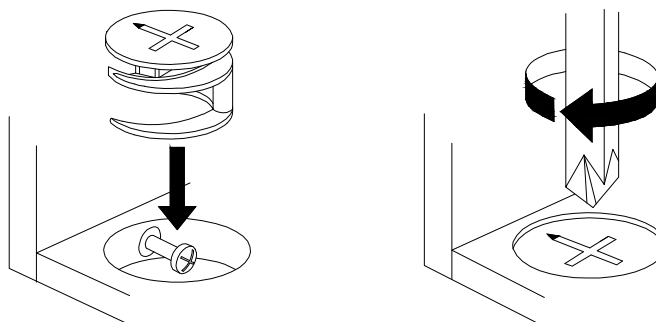


Turn cam lock clockwise to tighten.



Part List

No. A Quantity:18 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:18 Pcs Cam φ15 	No. C Quantity:18 Pcs Sticker Ø20 	No. D Quantity:11 Pcs Dowel 8*30mm 
No. E Quantity:3 Pcs 	No. F Quantity:14 Pcs Screw M3.5*14mm 	No. G Quantity:2 Pcs 	No. H Quantity:12 Pcs Screw M6*40mm 
No. I Quantity:4 Pcs Hex nut M8 	No. J Quantity:1 Pc Power strip 	No. K Quantity:1 Pc Allen Key 4# 	No. L Quantity:1 Pc Wrench 

Product structure

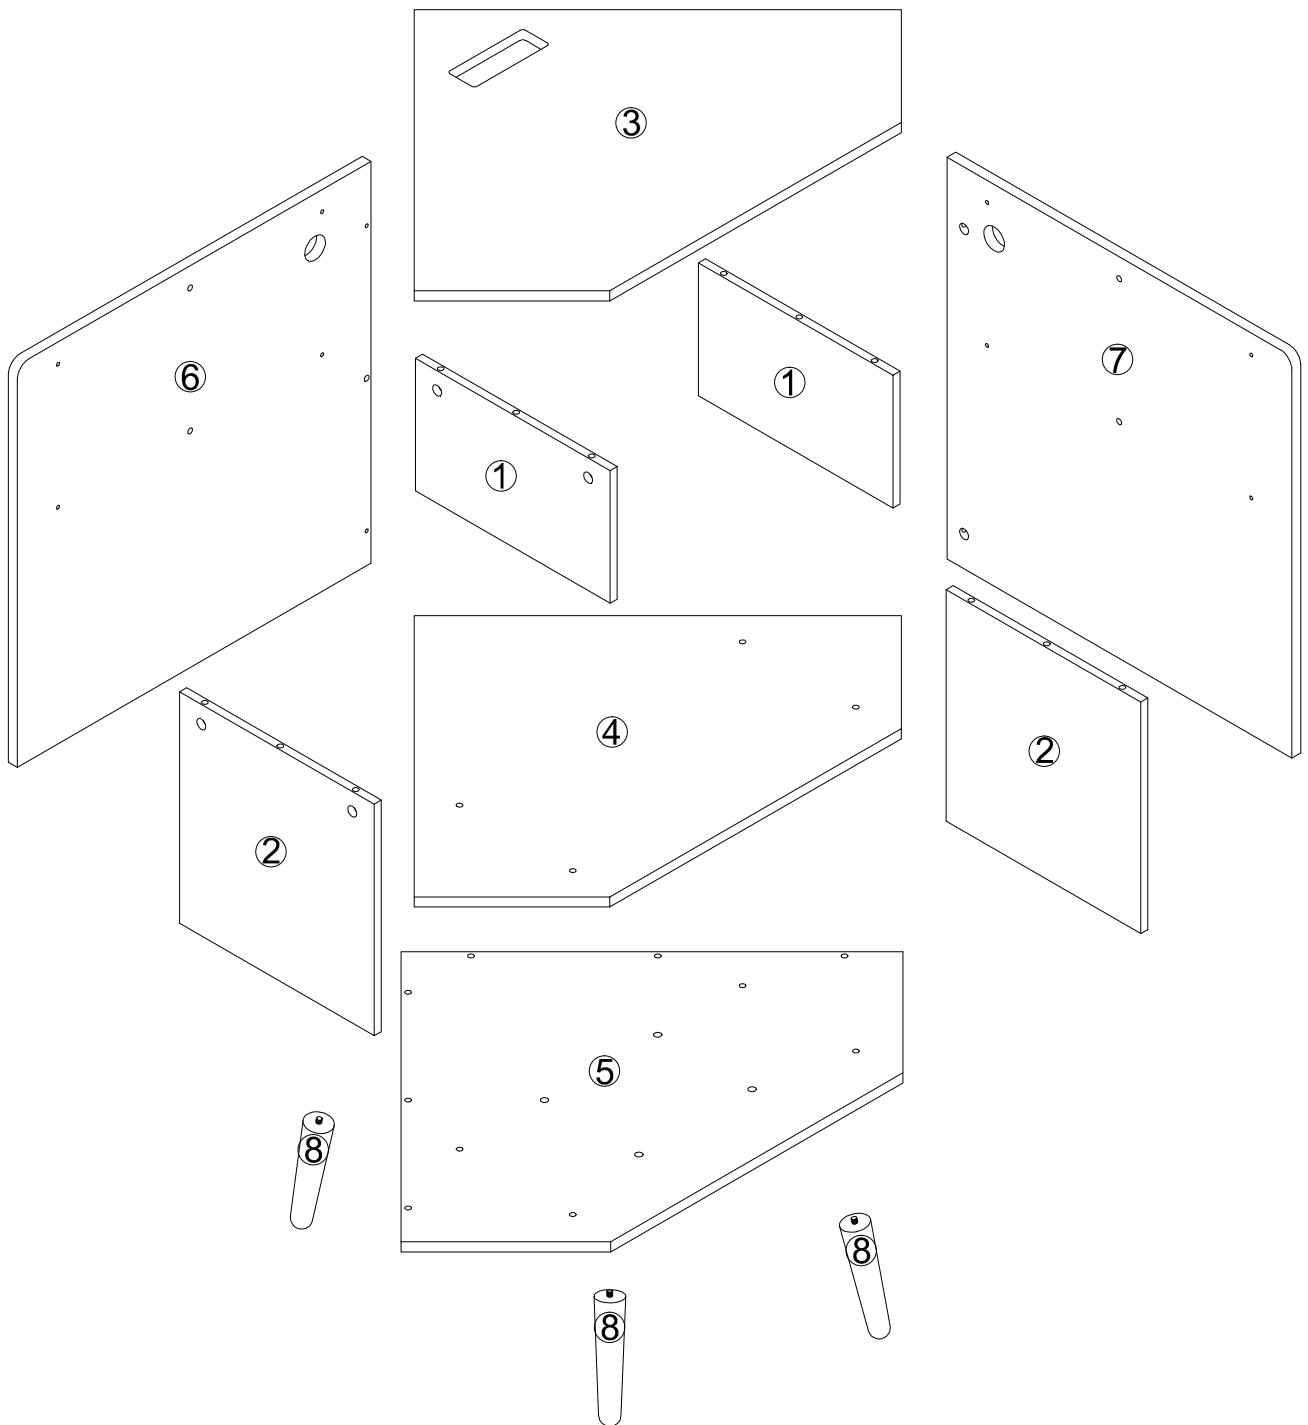


STEP 1

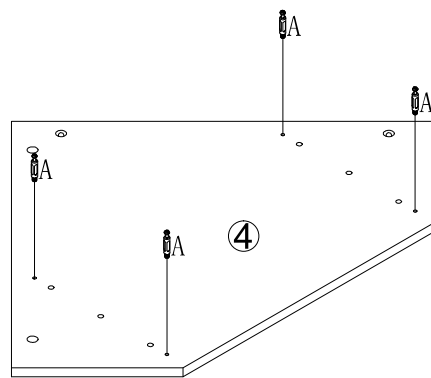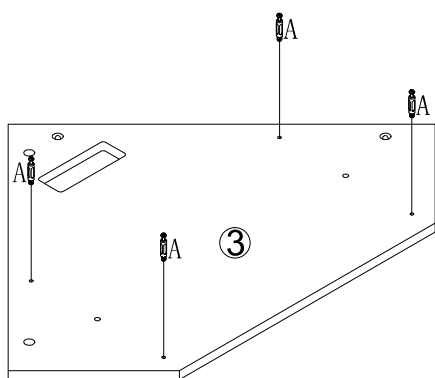

No. A
Quantity: 8 Pcs
8*28 mm



STEP 2

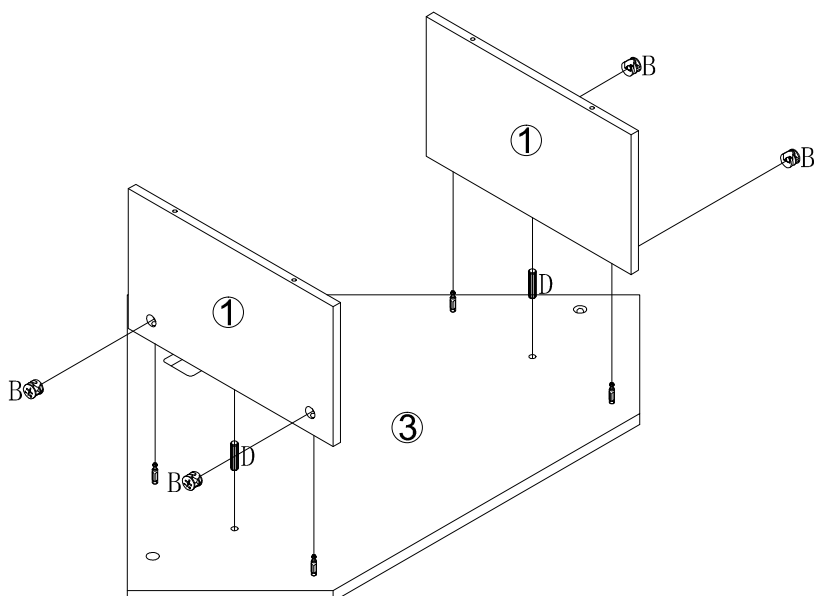

No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 3

No. H
Quantity: 4 Pcs
M6*40mm



No. K
Quantity: 1 Pc
4#


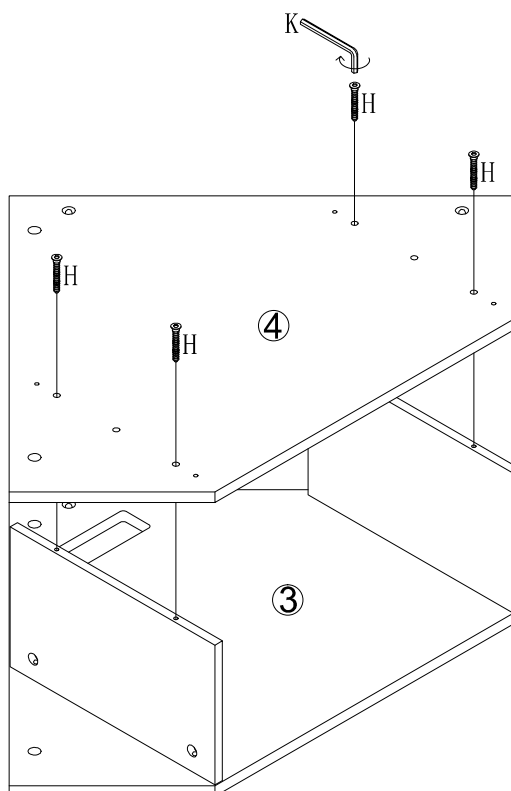


STEP 4


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm

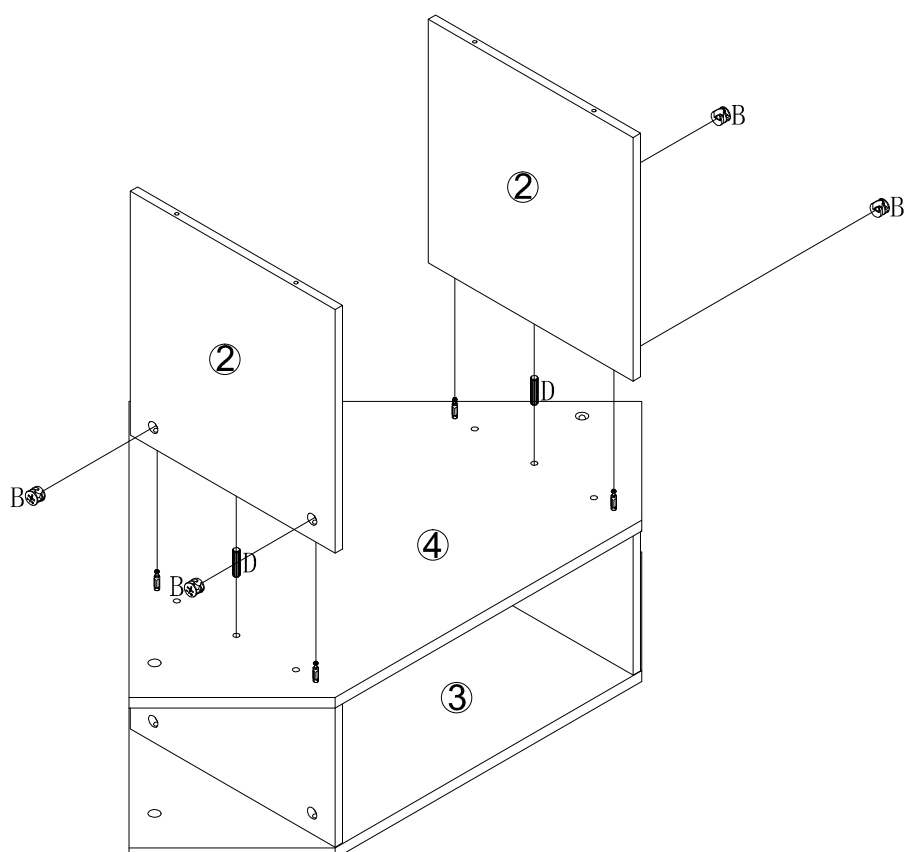


STEP 5

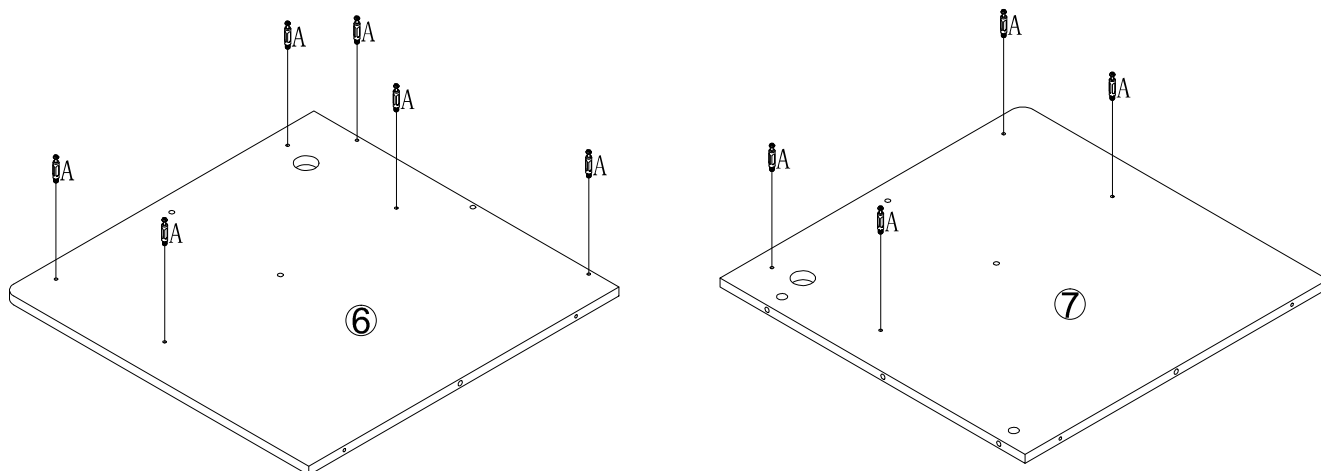

No. A
Quantity: 10 Pcs
8*28 mm



STEP 6

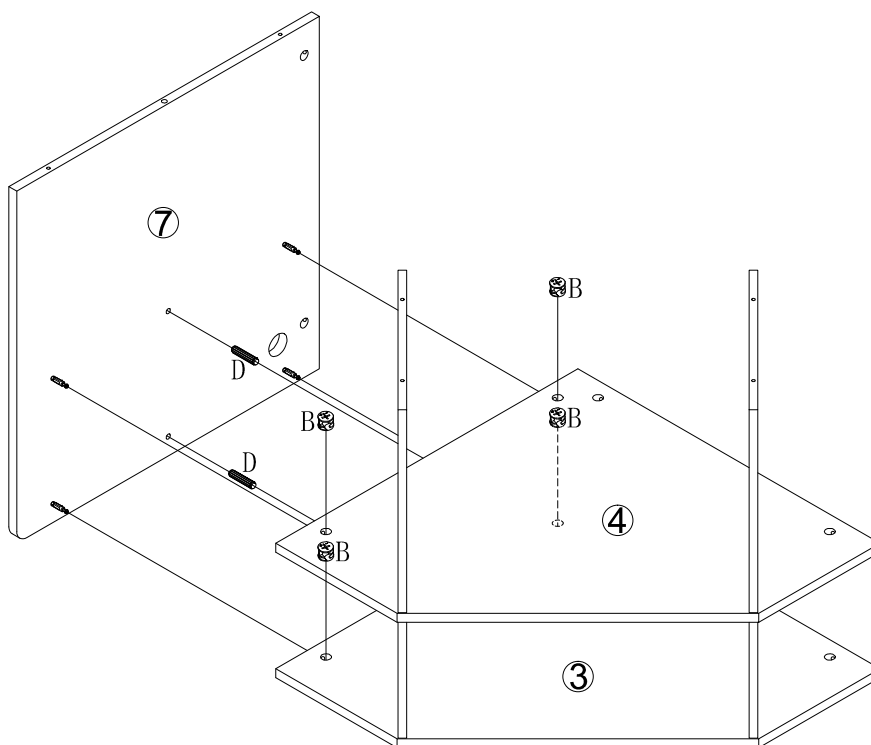

No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




STEP 7

No. B
Quantity: 6 Pcs
Ø15



No. D
Quantity: 3 Pcs
8*30mm

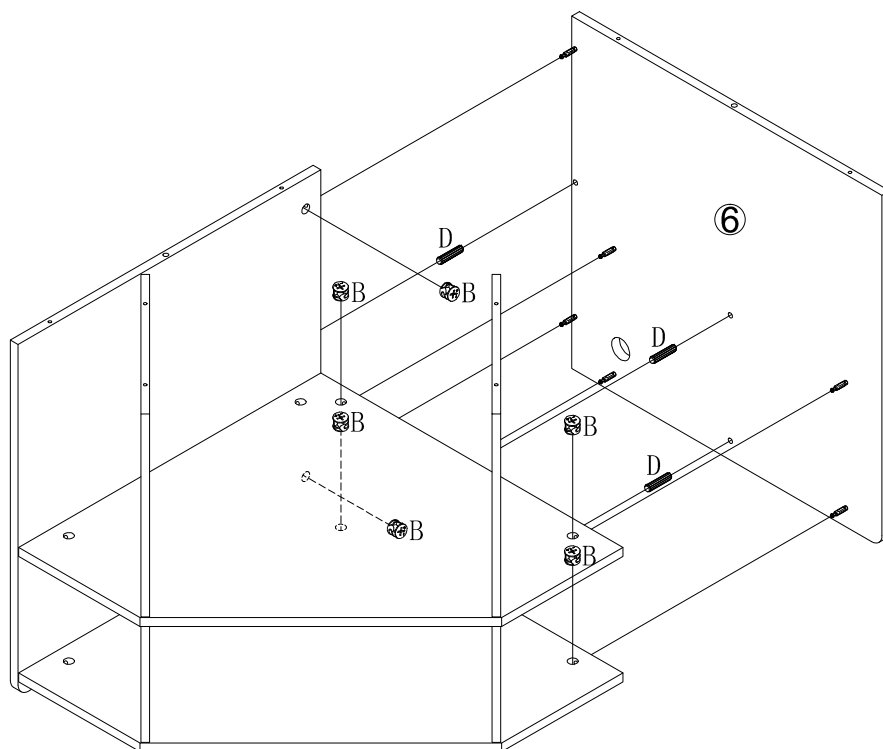

STEP 8



No. G
Quantity: 2 Pcs



No. I
Quantity: 4 Pcs
M8



No. L
Quantity: 1 Pc

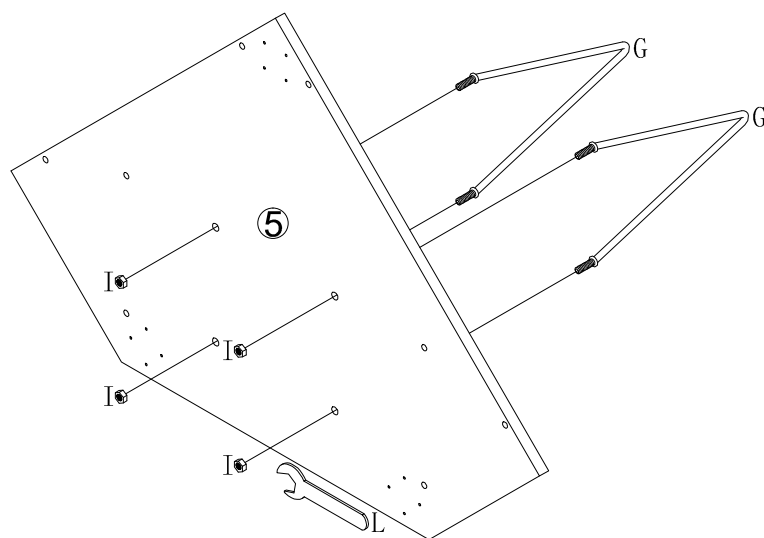

STEP 9


No. D
Quantity: 2 Pcs
8*30mm



No. H
Quantity: 8 Pcs
M6*40mm




No. K
Quantity: 1 Pc
4#

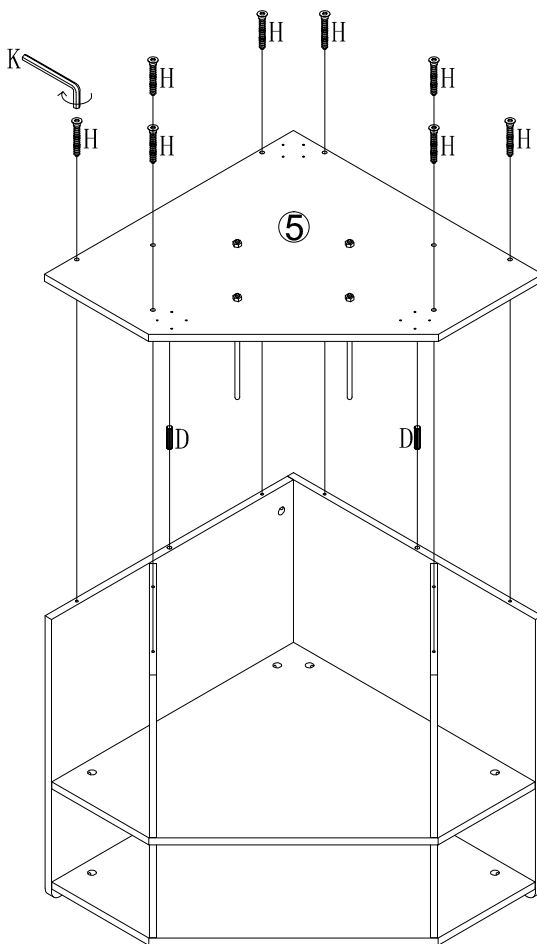


STEP 10

When installing hardware labeled 'E',
be sure to pay attention to the
orientation; the side with the lower
angled surface should face outward.


No. E
Quantity: 3 Pcs




No. F
Quantity: 12 Pcs
M3.5*14mm

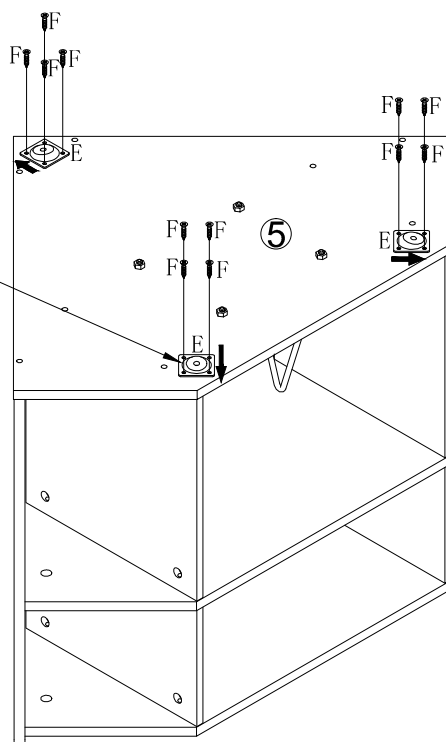

STEP 11

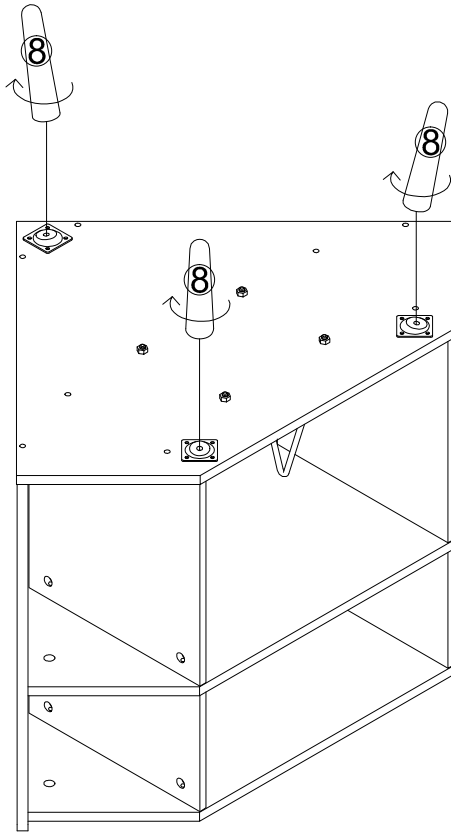

STEP 12

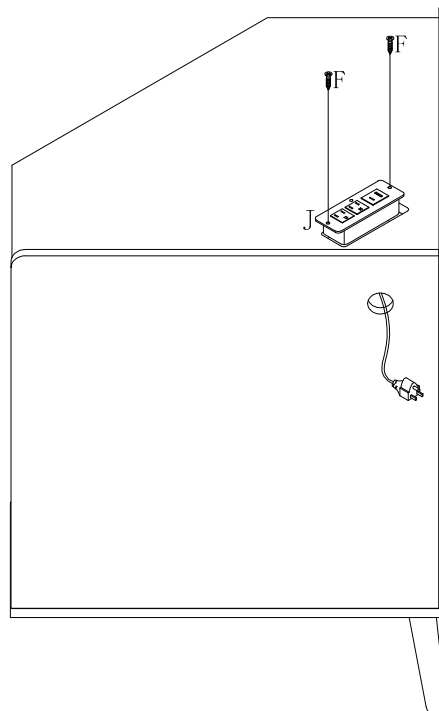

No. F
Quantity: 2 Pcs
M3.5*14mm



No. J
Quantity: 1 Pc

