


LED Upholstered Platform Bed


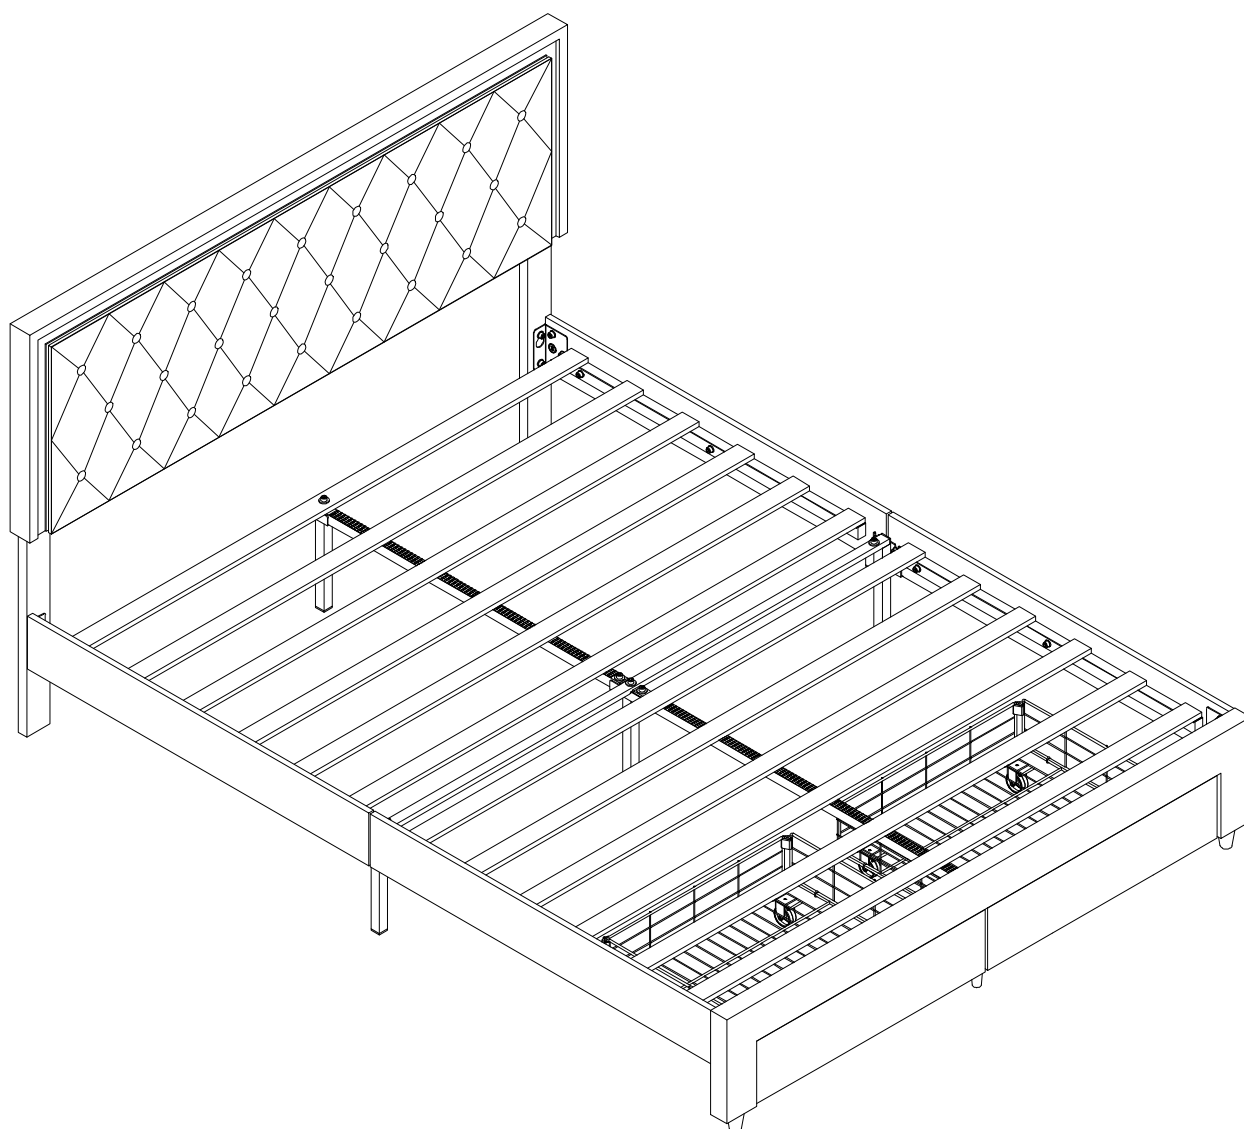


Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.



Please follow the instruction manuals and use a pad to protect the product during your assembly.

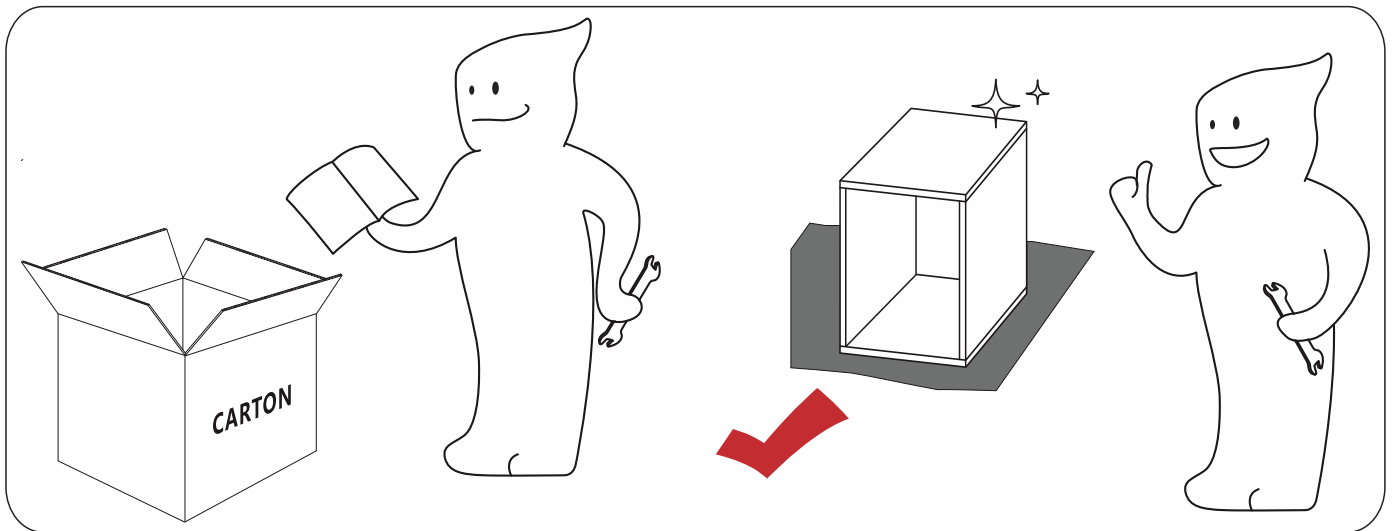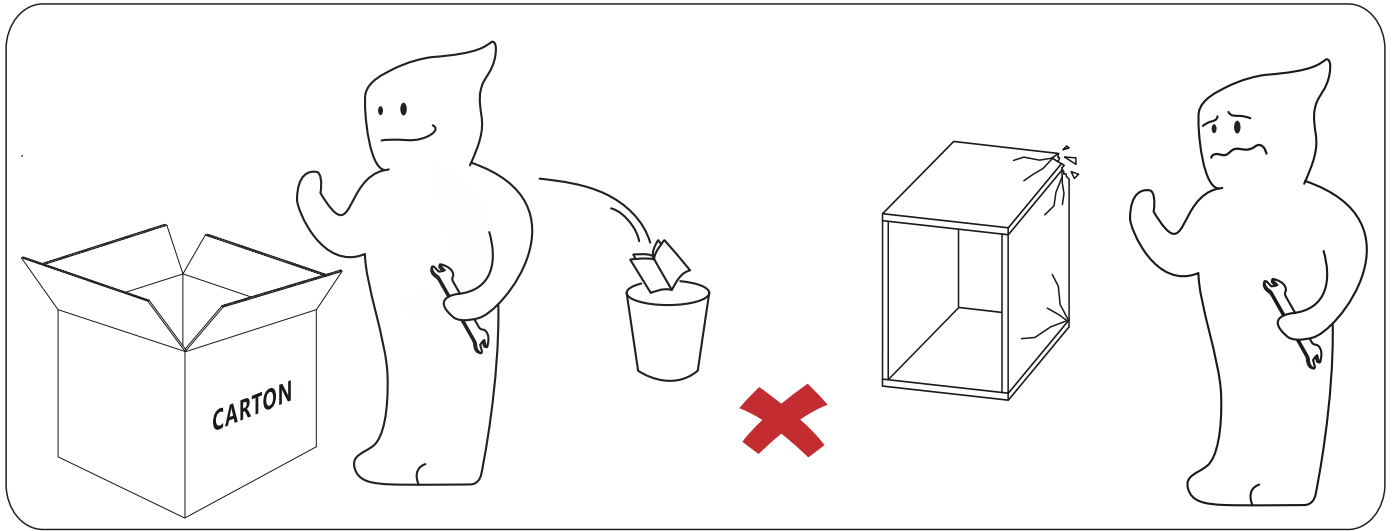


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.





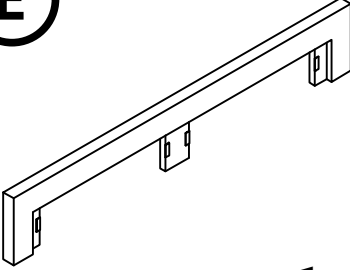
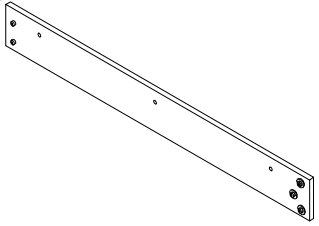
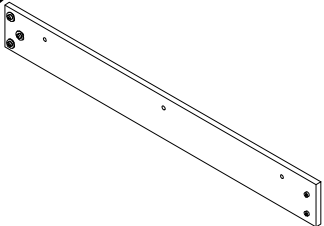
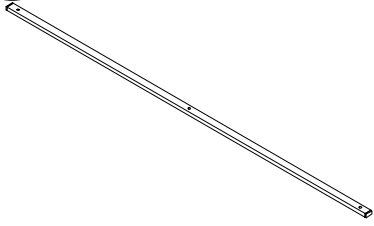
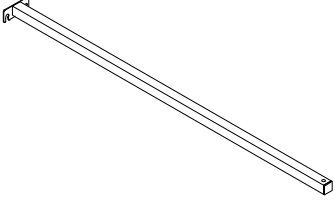
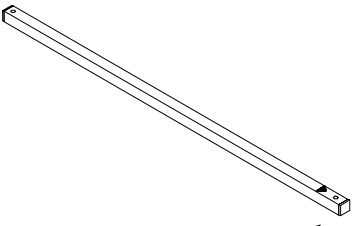
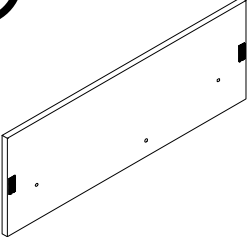
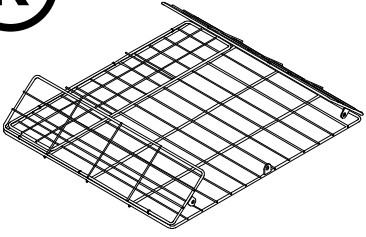
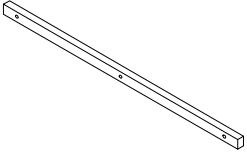


For easier and better assembly, **2** or more adults are required.








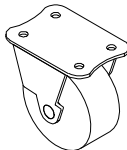
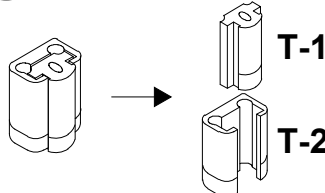







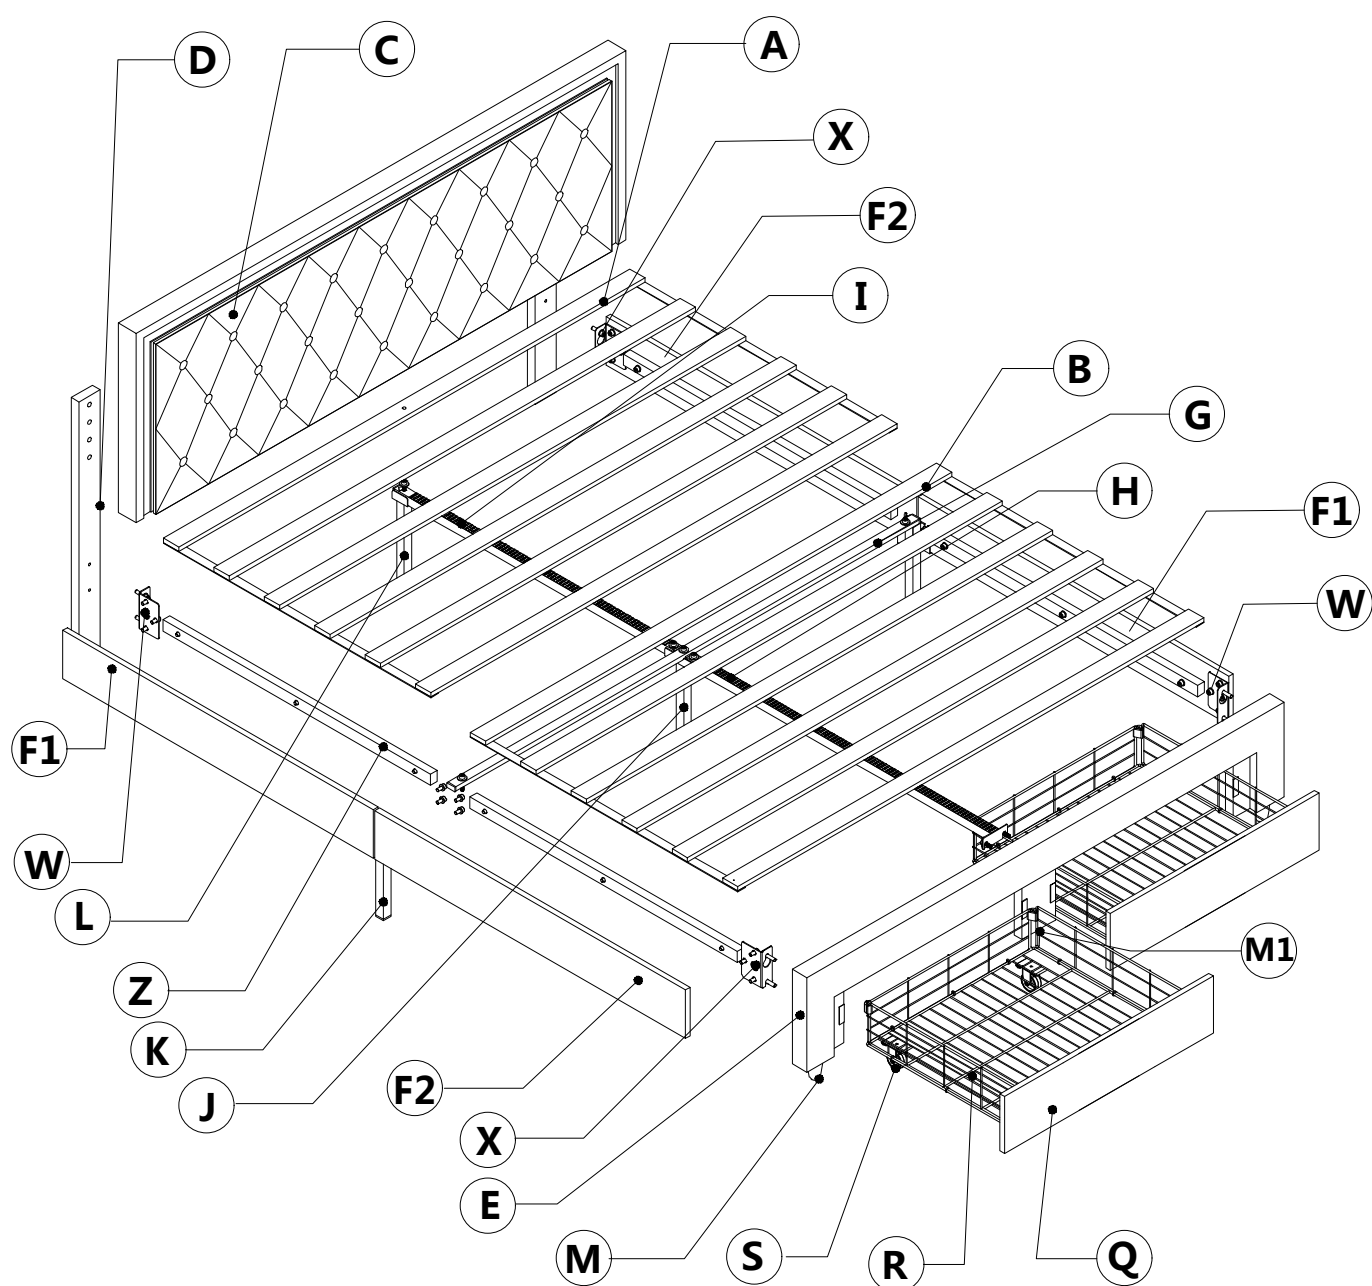ASSEMBLY INSTRUCTIONS

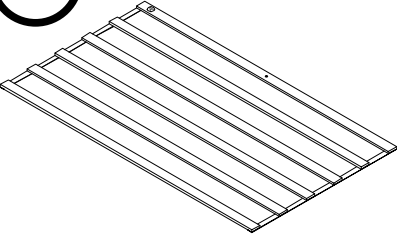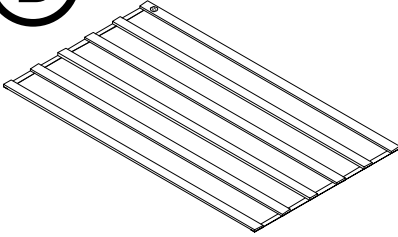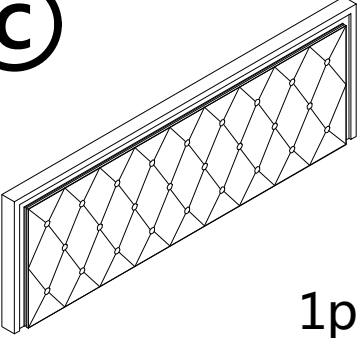

BED FRAME PARTS LIST



<p>(A)</p>  <p>1pc</p>	<p>(B)</p>  <p>1pc</p>	<p>(C)</p>  <p>1pc</p>
<p>(D)</p>  <p>2pcs</p>	<p>(E)</p>  <p>1pc</p>	<p>(F1)</p>  <p>2pcs</p>
<p>(F2)</p>  <p>2pcs</p>	<p>(G)</p>  <p>1pc</p>	<p>(H)</p>  <p>1pc</p>
<p>(I)</p>  <p>1pc</p>	<p>(Q)</p>  <p>2pcs</p>	<p>(R)</p>  <p>2pcs</p>
<p>(Z)</p>  <p>4pcs</p>		

FITTING PARTS LIST


<div><div>J</div><div></div><div>1pc</div></div>	<div><div>K</div><div></div><div>2pcs</div></div>	<div><div>L</div><div></div><div>1pc</div></div>	
<div><div>M</div><div></div><div>2pcs</div></div>	<div><div>M1</div><div></div><div>1pc</div></div>	<div><div>N</div><div></div><div>M8 X45mm</div><div>10pcs+1pc</div></div>	
<div><div>P</div><div></div><div>M8 Spanner</div><div>1pc</div></div>	<div><div>S</div><div></div><div>8pcs</div></div>	<div><div>T</div><div></div><div>T-1</div><div>T-2</div><div>4pcs</div></div>	
<div><div>U</div><div></div><div>M6×6mm</div><div>8pcs+1pc</div></div>	<div><div>V</div><div></div><div>M6×15mm</div><div>6pcs</div></div>	<div><div>W</div><div></div><div>2pcs</div></div>	
<div><div>X</div><div></div><div>2pcs</div></div>	<div><div>Y</div><div></div><div>M8 X40mm</div><div>12pcs</div></div>	<div><div>W1</div><div></div><div>1pc</div></div>	<div><div>X1</div><div></div><div>1pc</div></div>

ASSEMBLY INSTRUCTIONS



STEP 1

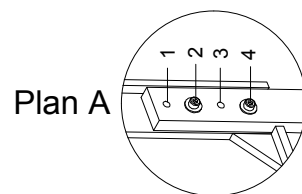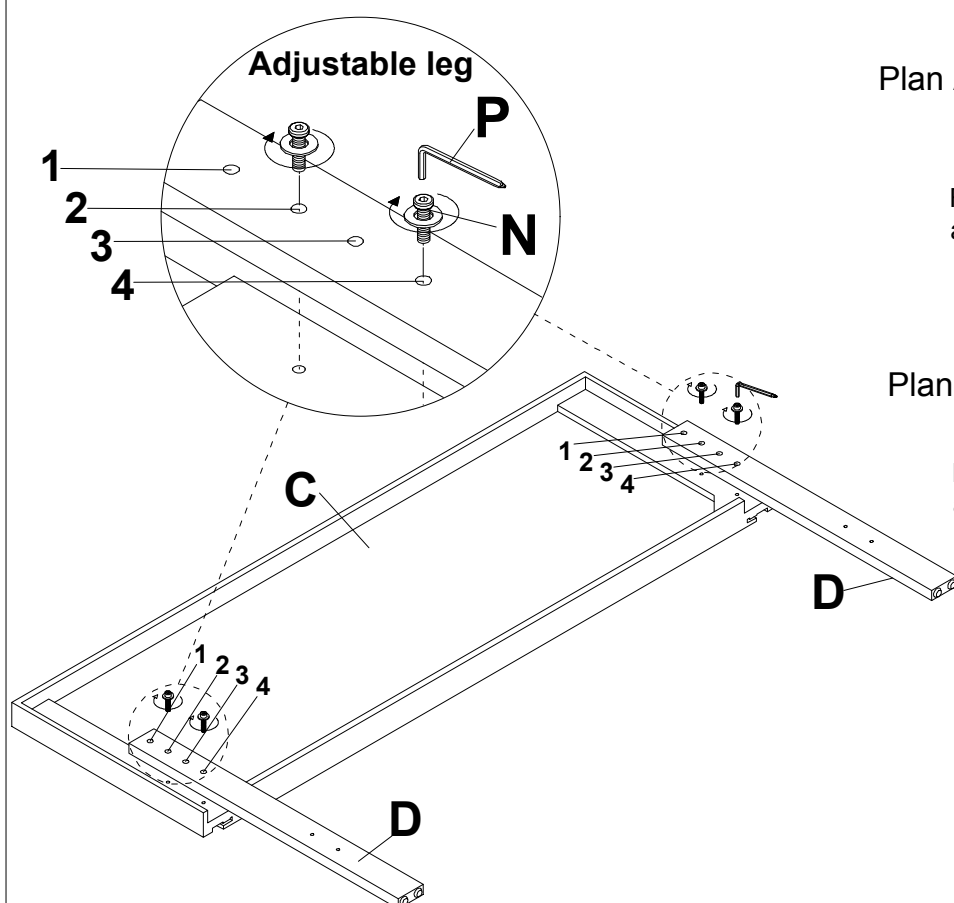


Fits a 10 inch thick mattress when attach screws to Hole 2 & Hole 4.

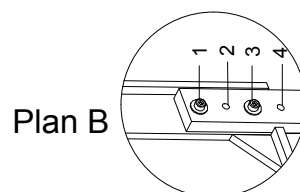

Fits a 12 inch thick mattress when attach screws to Hole 1 & Hole 3.

 M8 X45mm	N x 4pcs
	P x 1pc


STEP 2

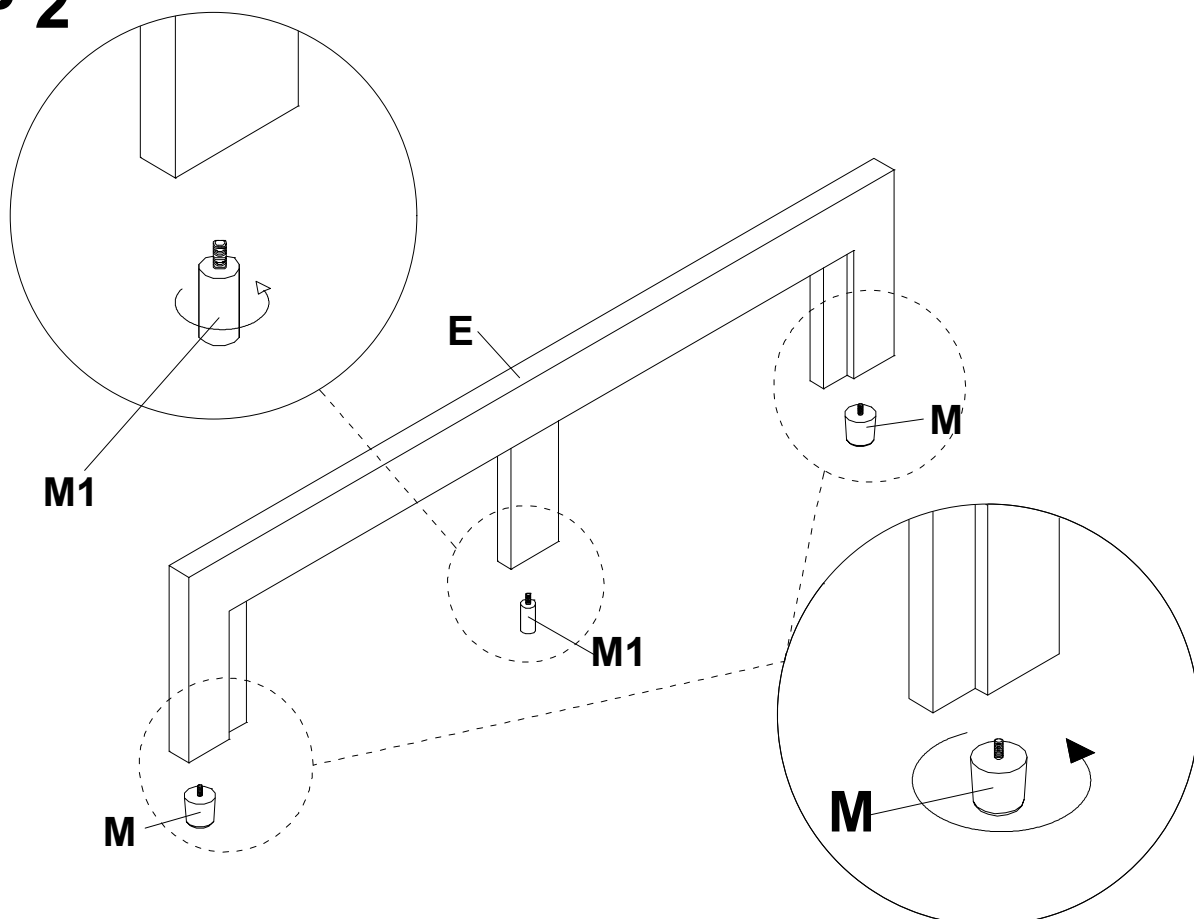




STEP 3

Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board.
Lock W and X on both sides of the board, with 3 holes on each side.

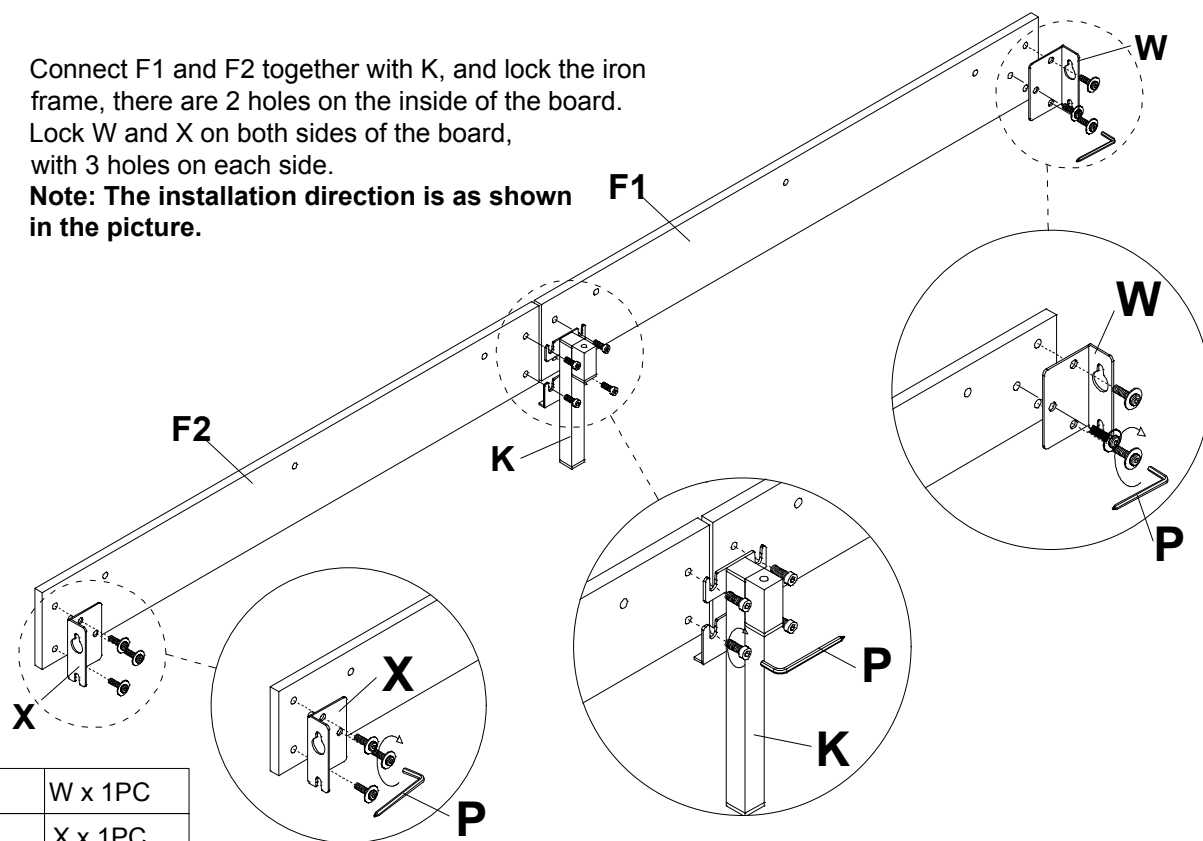Note: The installation direction is as shown in the picture.







	W x 1PC
	X x 1PC
	P x 1PC

STEP 4

Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board.
Lock W and X on both sides of the board, with 3 holes on each side.

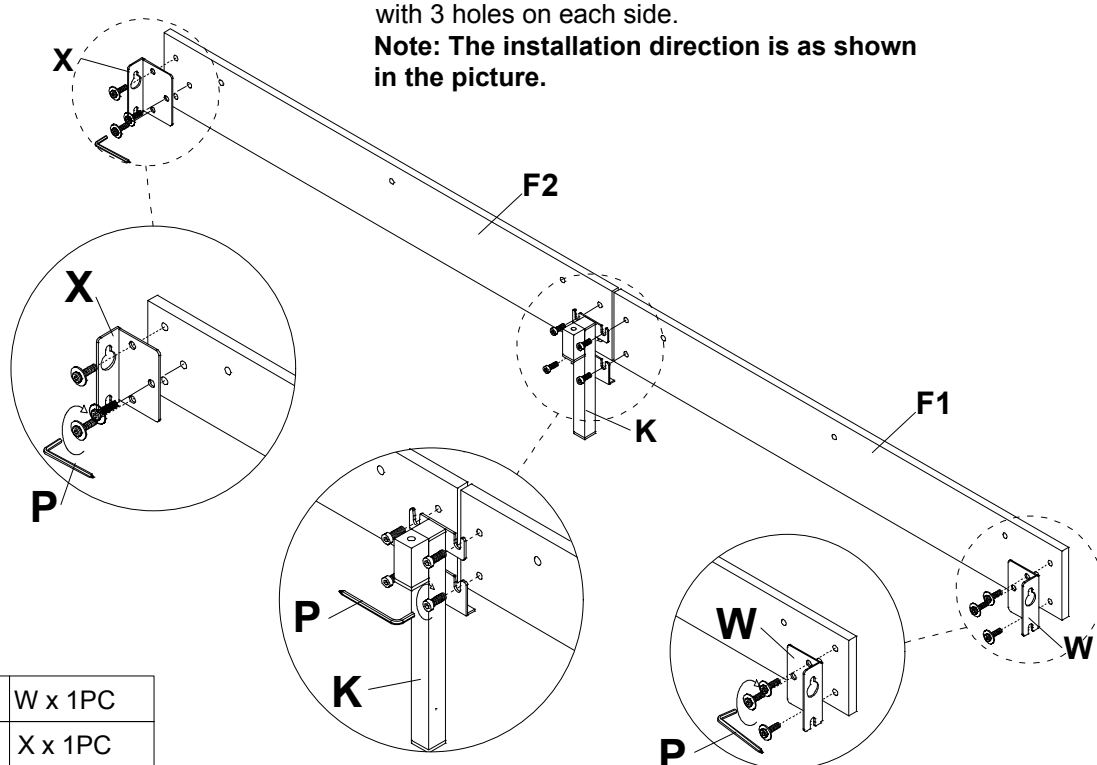
Note: The installation direction is as shown in the picture.





	W x 1PC
	X x 1PC
	P x 1PC

STEP 5

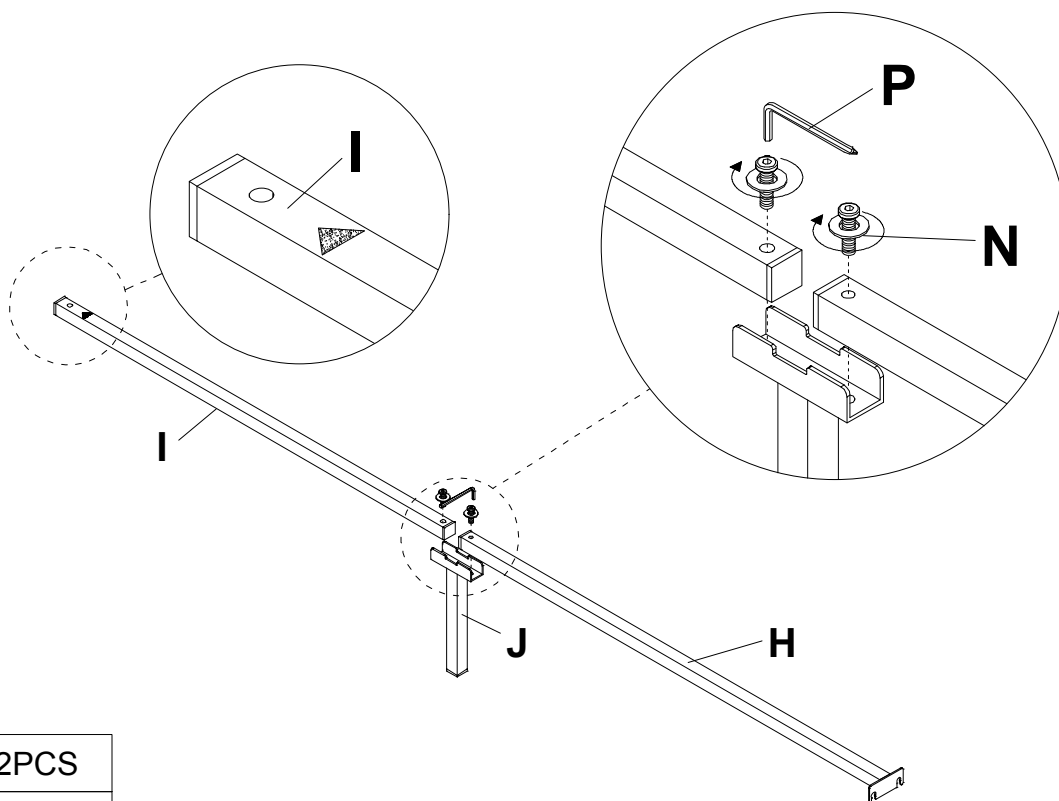
Noted that the red arrow is pointing towards the front.




 M8 X45mm	N x 2PCS
	P x 1PC

STEP 6


Loosen the screw of headboard side leg and both sides of footboard, then hang the bracket on and tighten the inner screws.

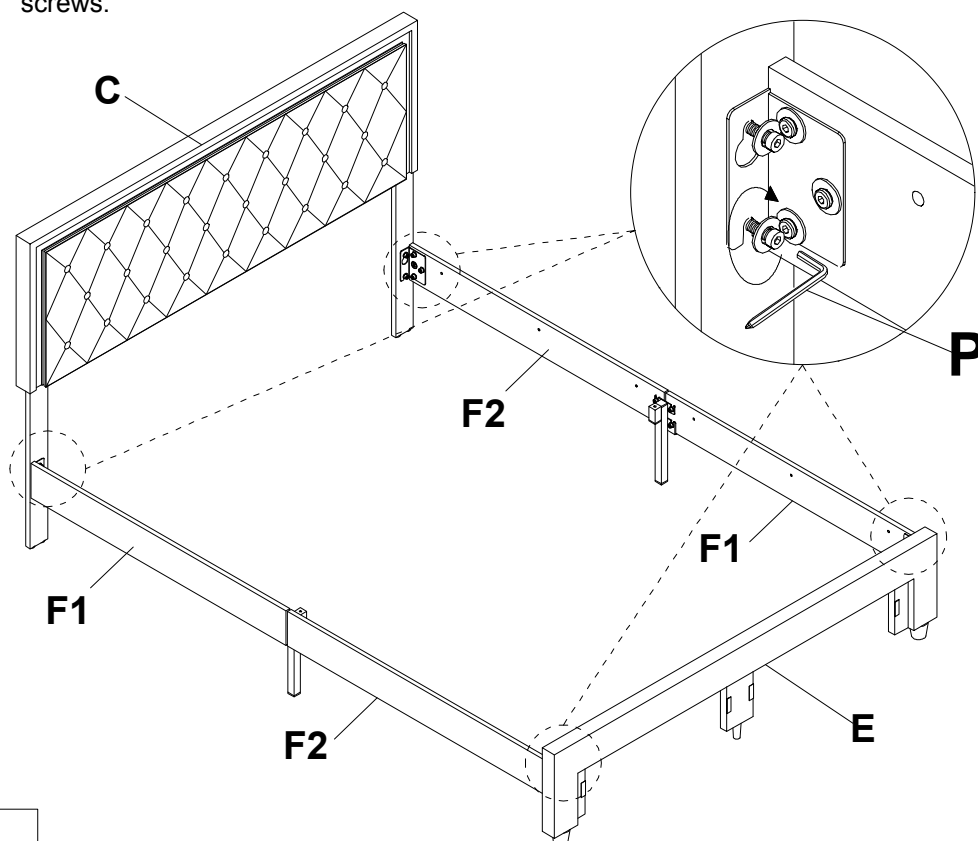

	P x 1PC
---	---------


STEP 7


Loosen the screw in the middle of the footboard, then hang the bracket on and tighten the inner screw.

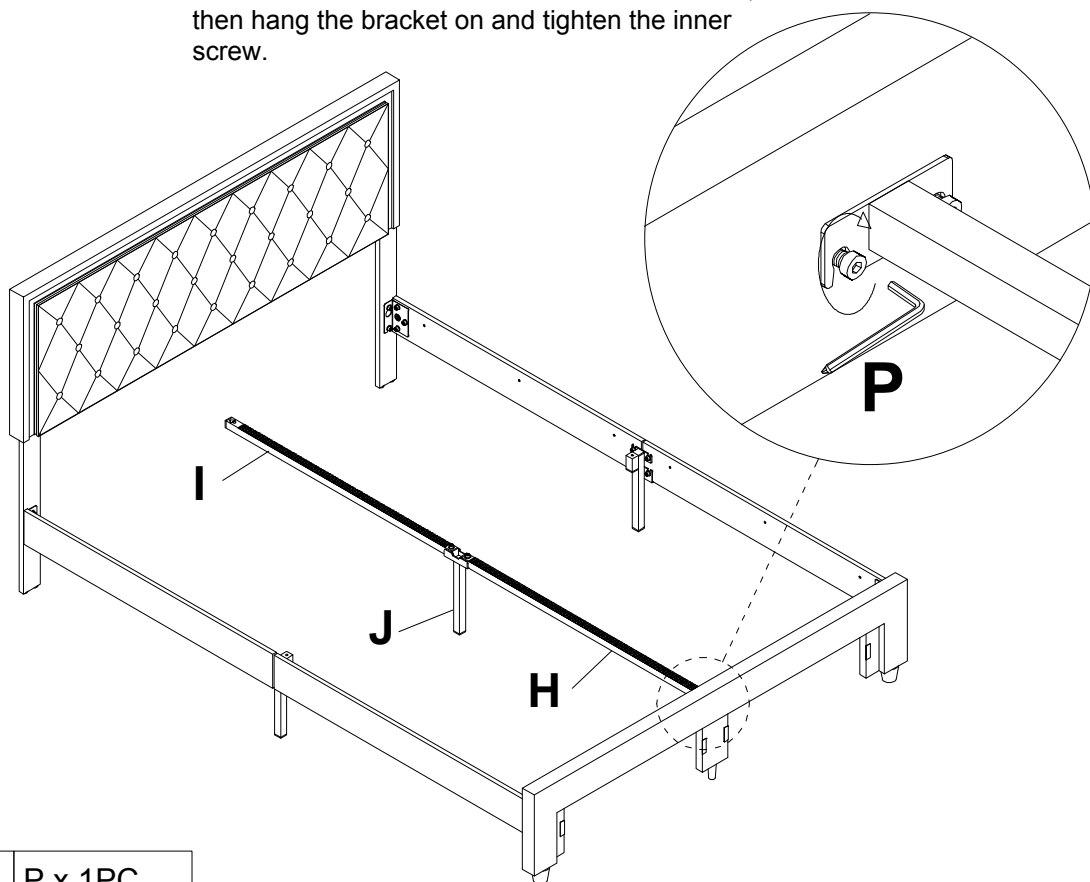


 P x 1PC


STEP 8

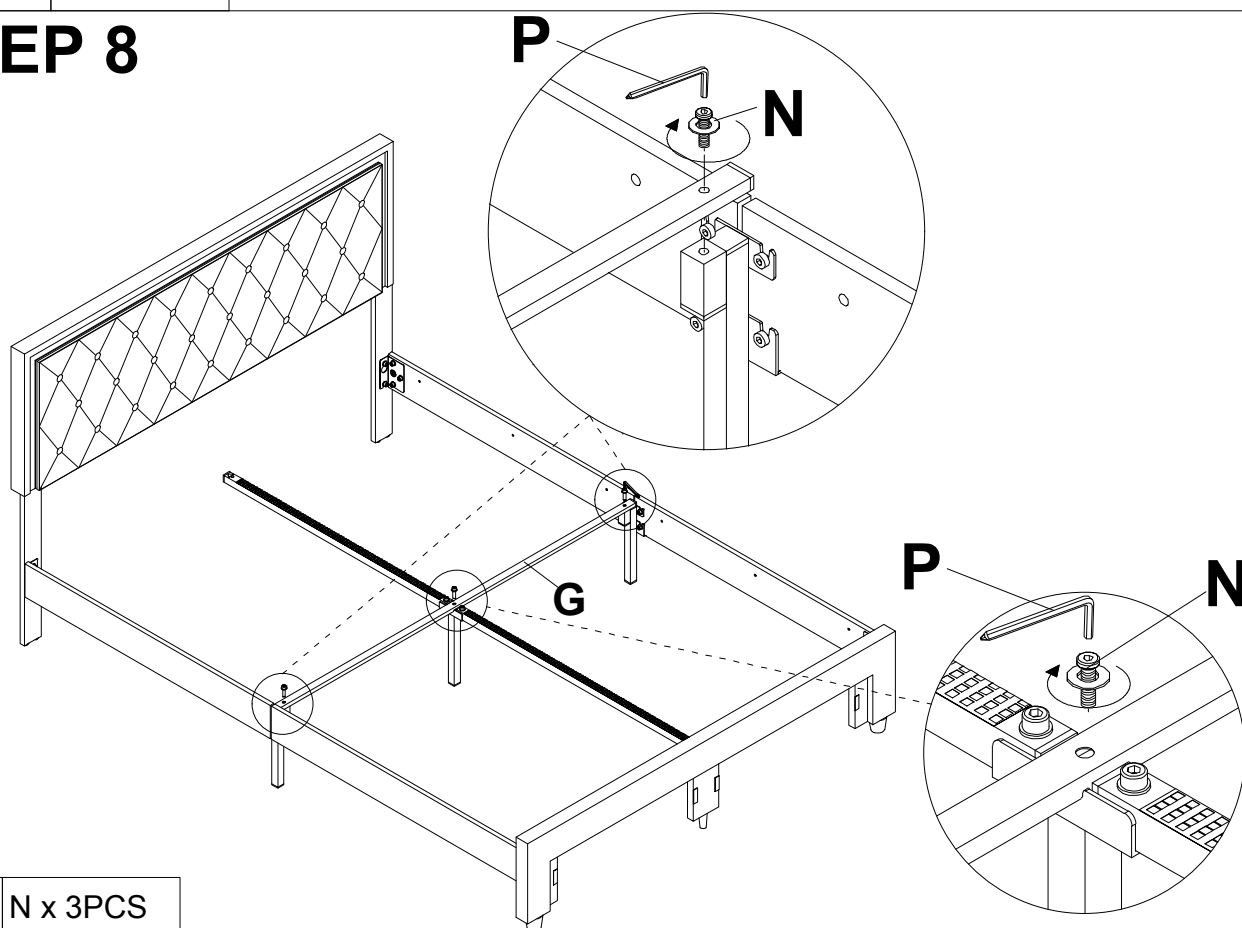



 N x 3PCS
M8 X45mm


 P x 1PC

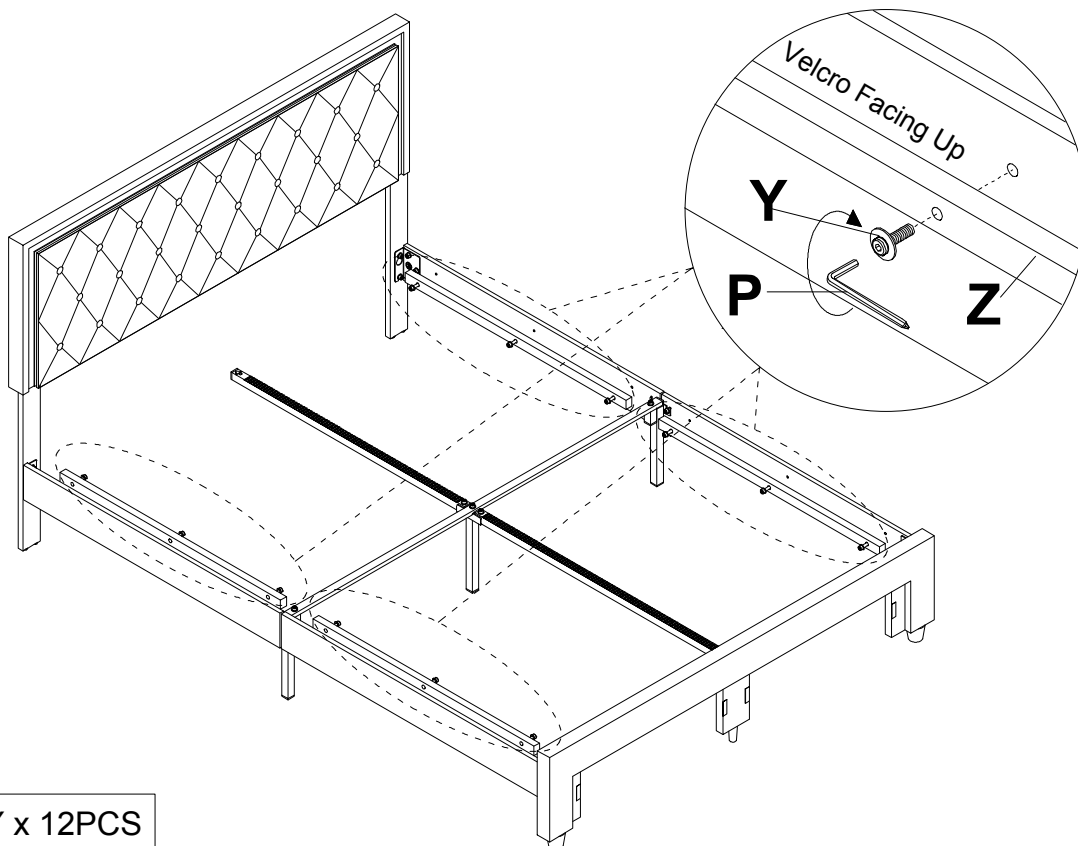STEP 9






 M8 X40mm	Y x 12PCS
 P x 1PC	

STEP 10

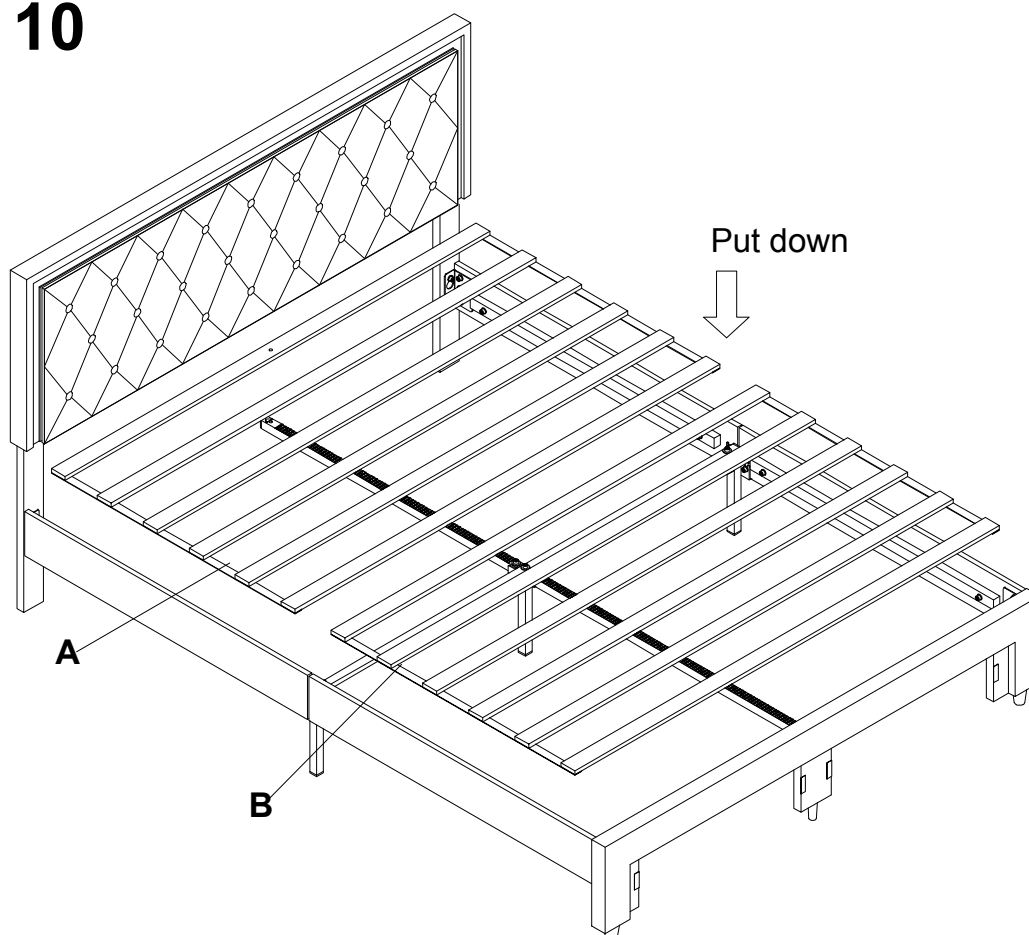


STEP 11

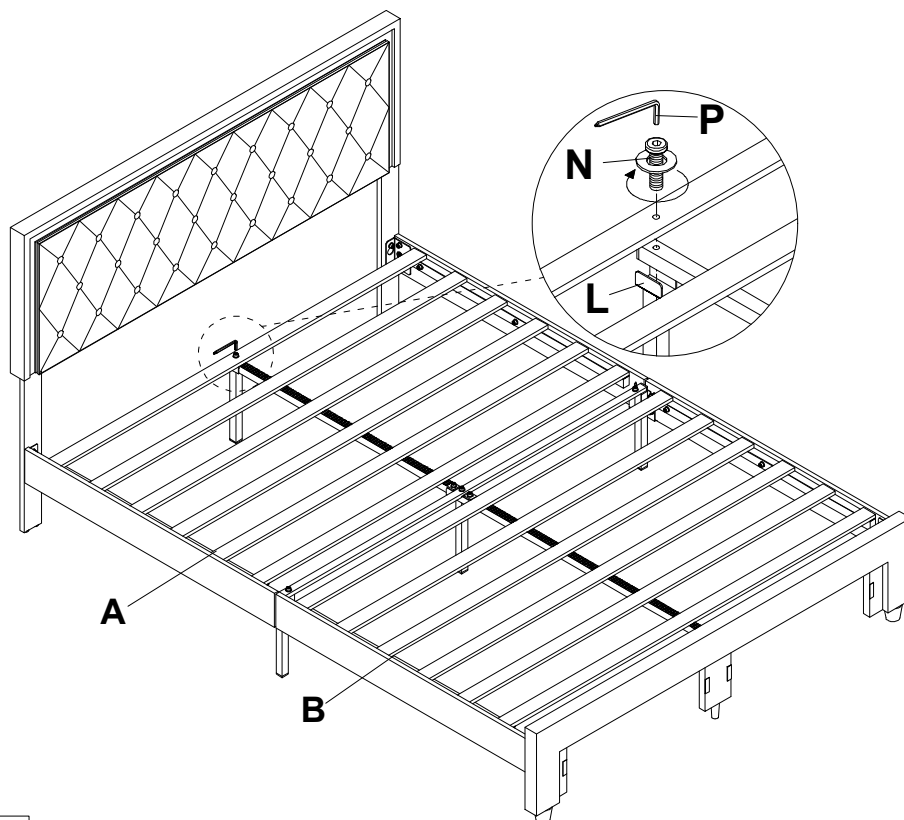


 M8 X45mm	N x 1PC
	P x 1PC

STEP 12

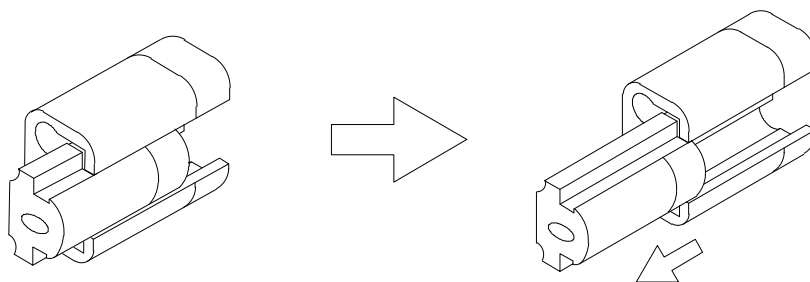


You can pull the buckle out by following the direction indicated by the arrow

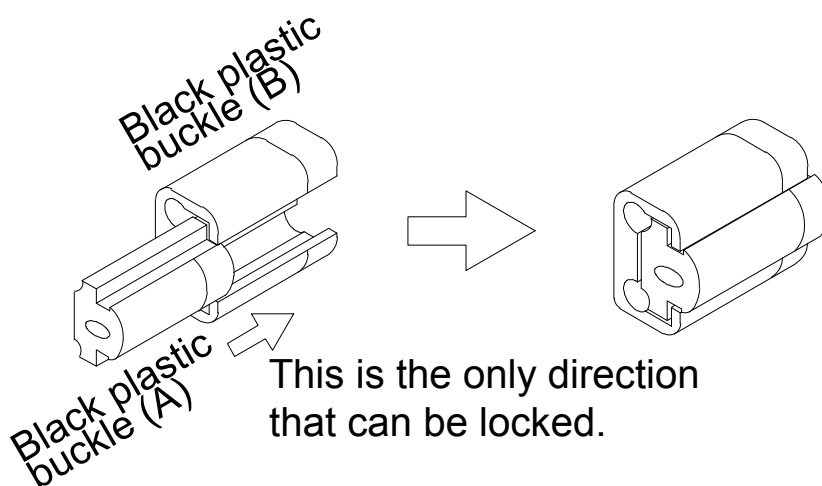

STEP 13


Unfold the drawer sides

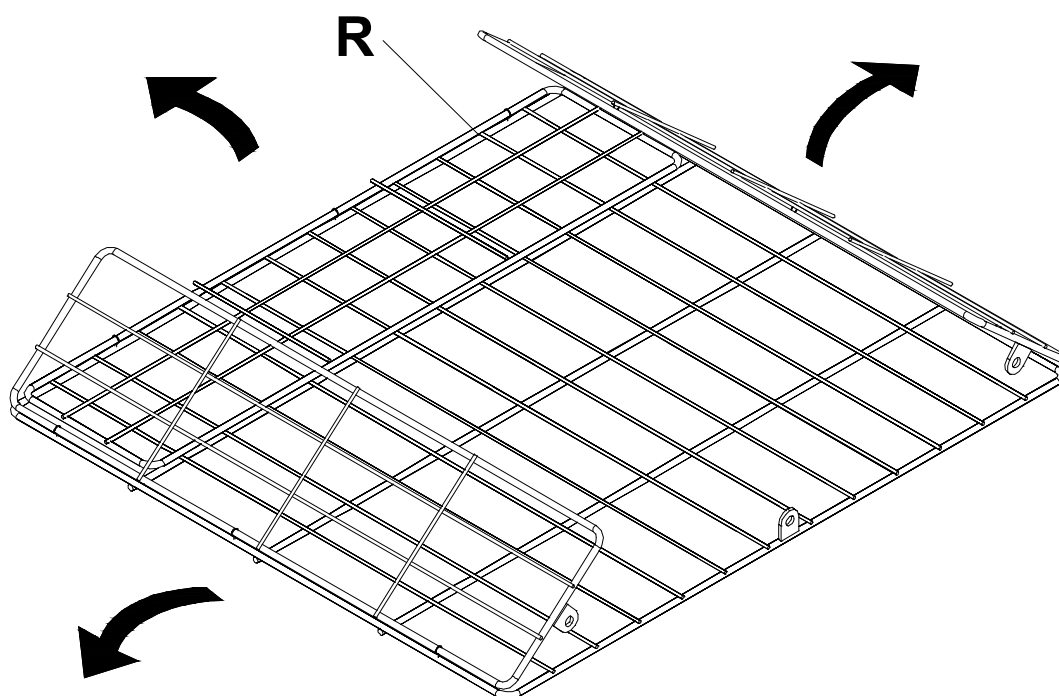




x2

STEP 14

Use T to keep drawer sides in place

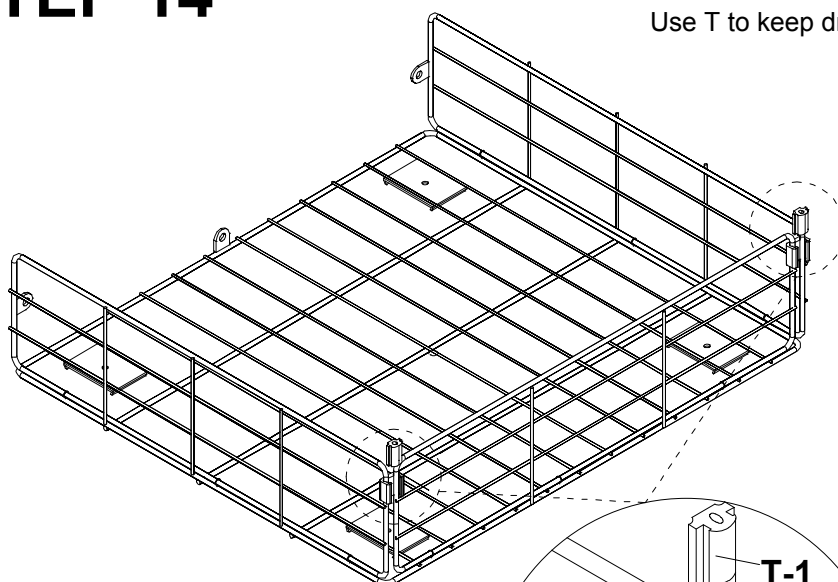


x2

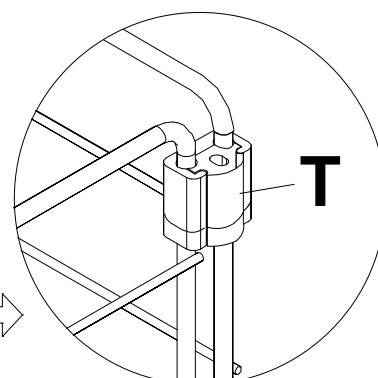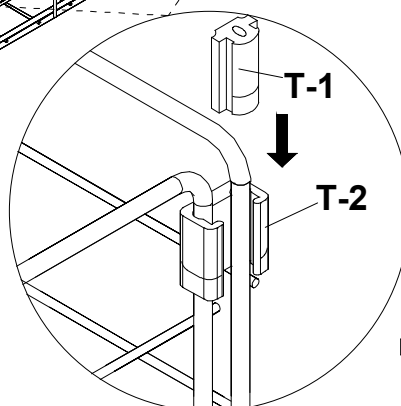

T x 4PCS

STEP 15


Insert wheels into slot from side

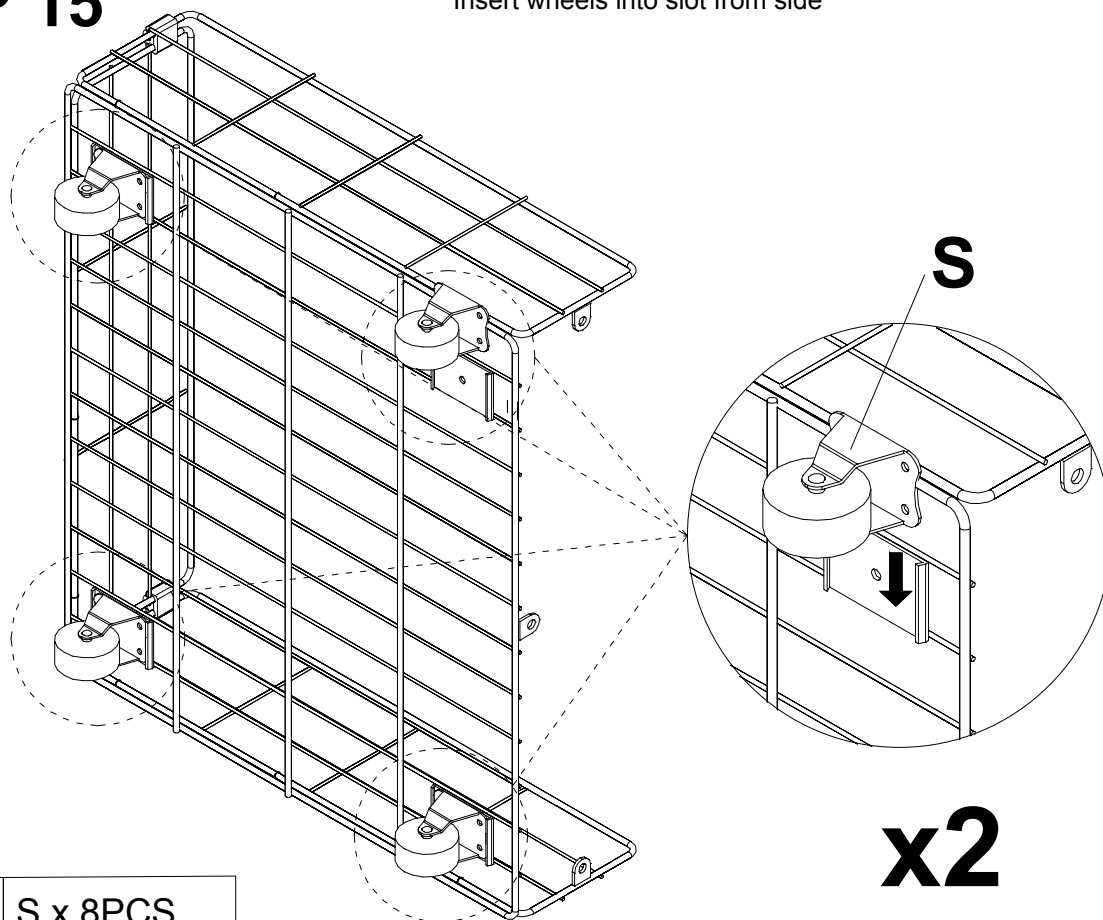

S x 8PCS

STEP 16

Secure the wheels with screws U

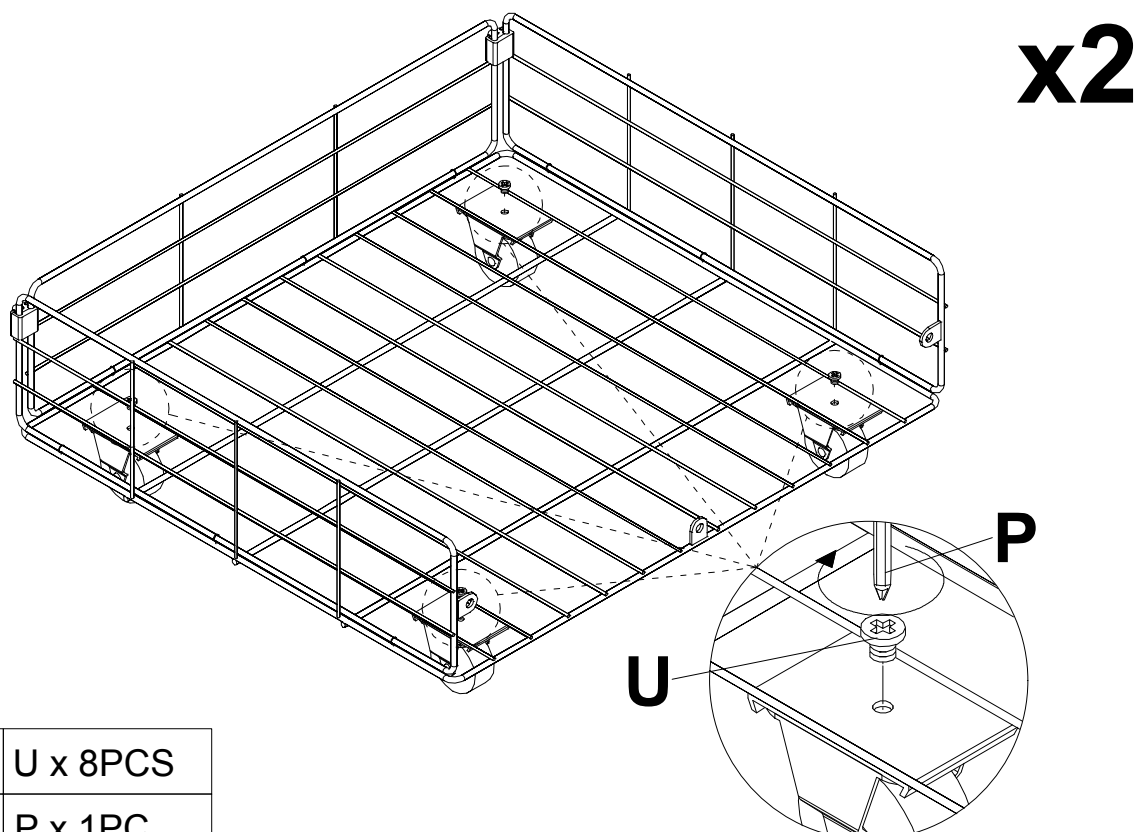


M6×6mm



U x 8PCS




P x 1PC

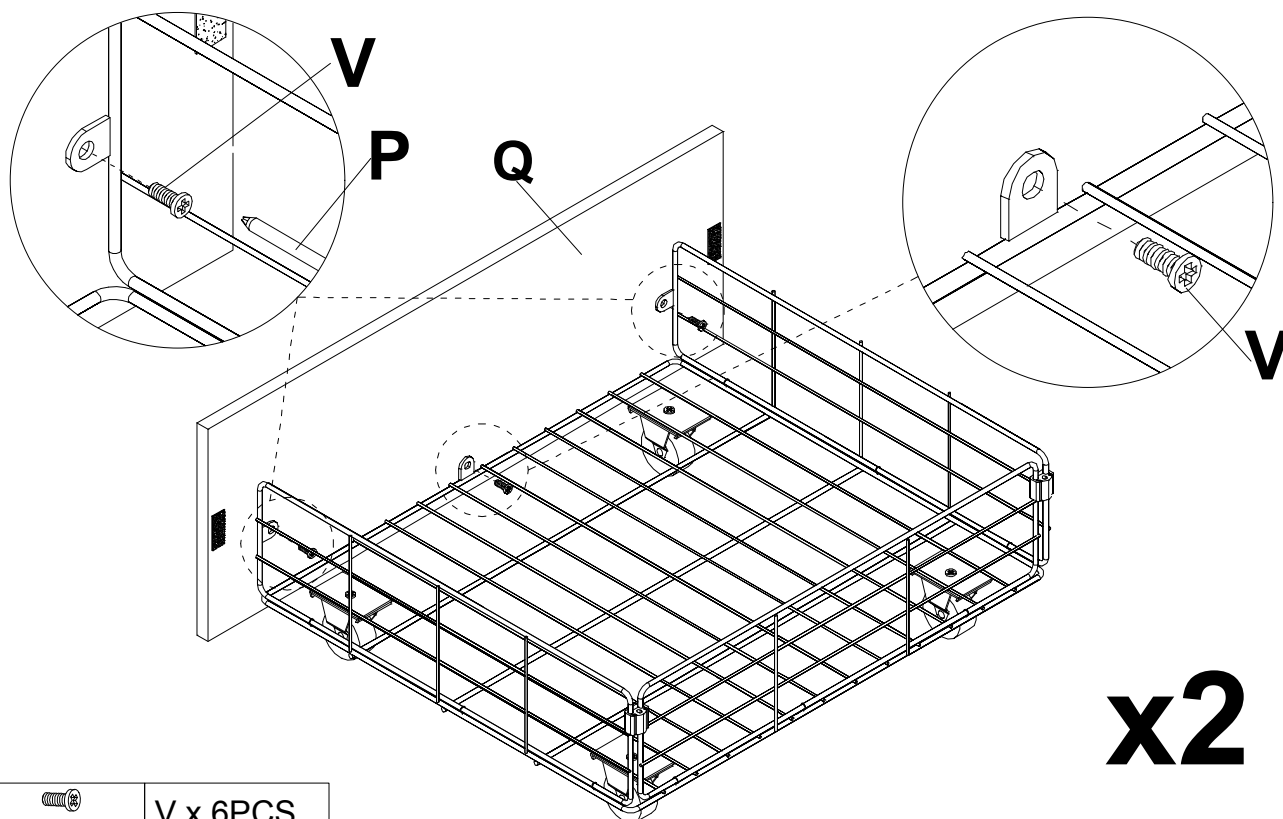STEP 17




 M6×15mm	V x 6PCS
	P x 1PC



STEP 18

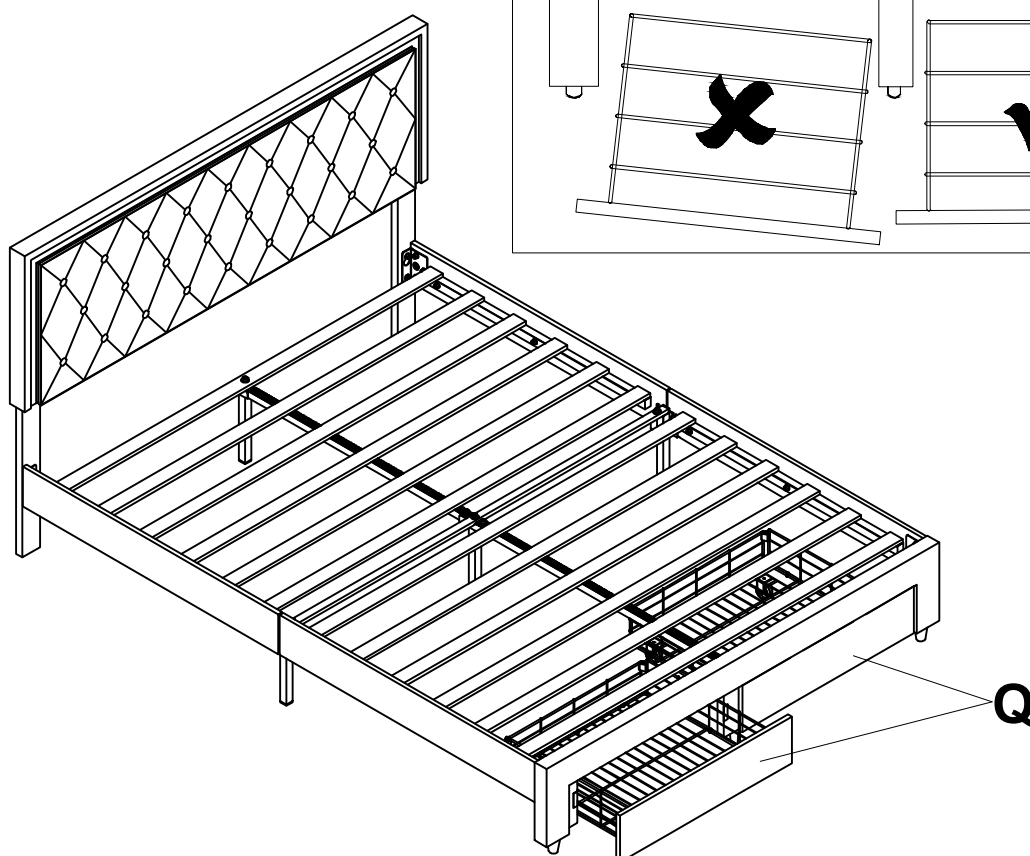


STEP 19

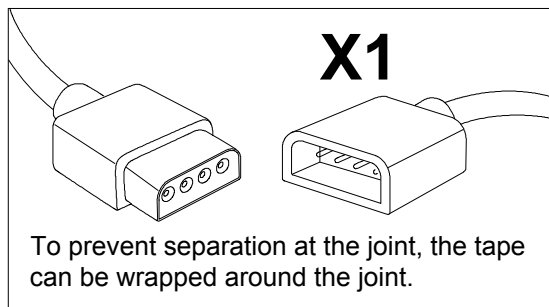


NOTE: The black part of the receiver (X1) needs to be exposed to air in order to better control the LED light.

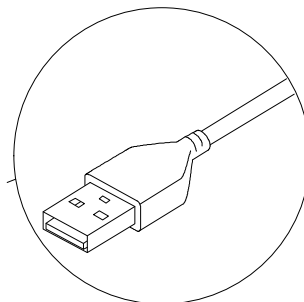

Remote control
You can use the remote to control the light. The LED lamp can only be used after the power supply is connected.

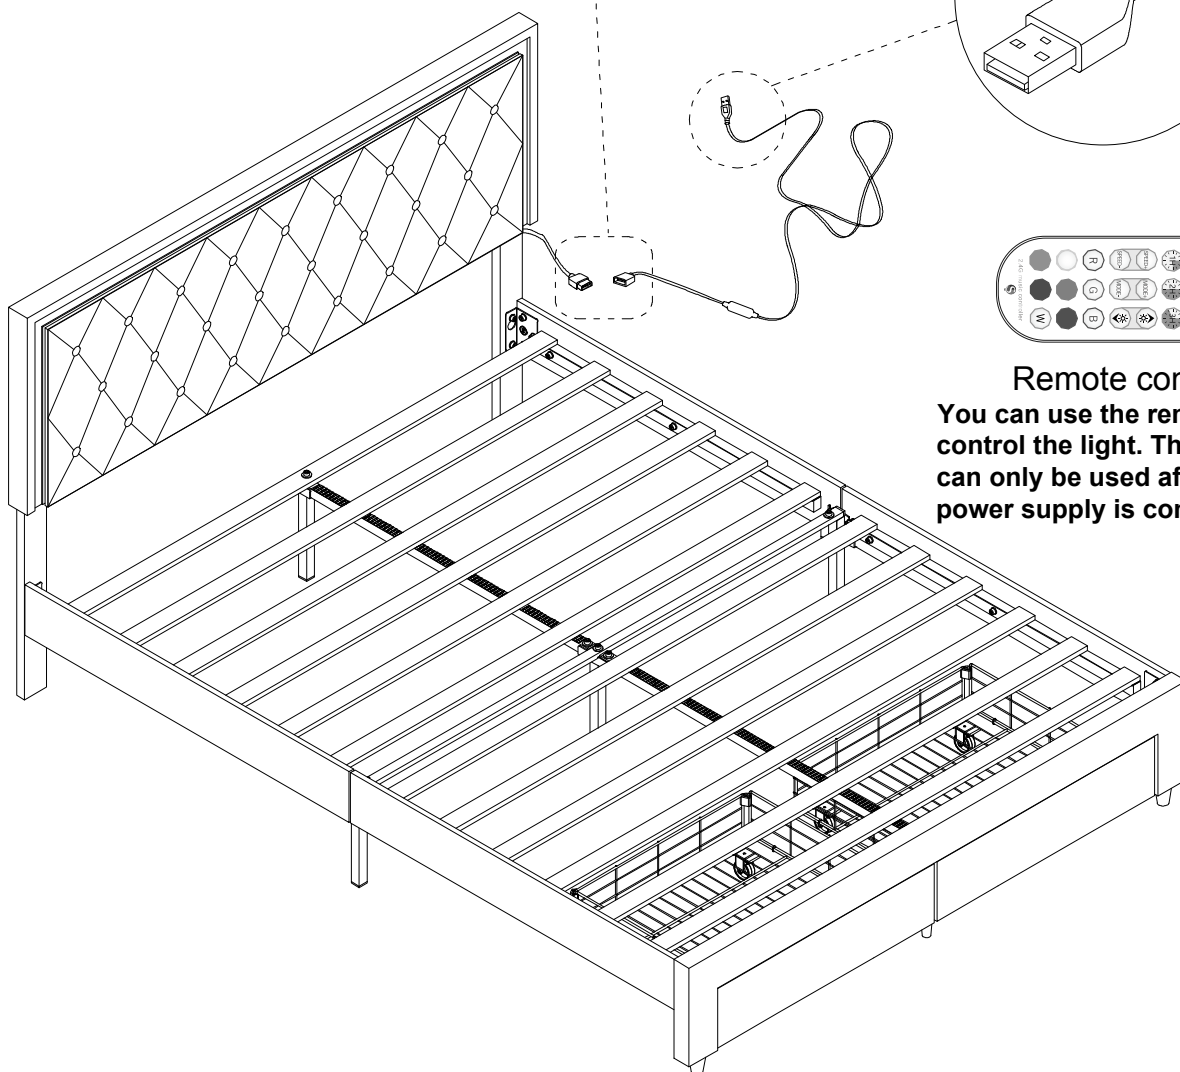


Please scan the QR code on the manual/controller and install the application.
Step1: Please make sure your phone has bluetooth enabled.
Step2: The LED light will automatically connect to the APP.

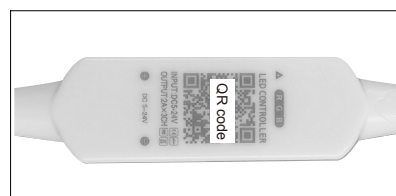

X1 x 1PC

STEP 20

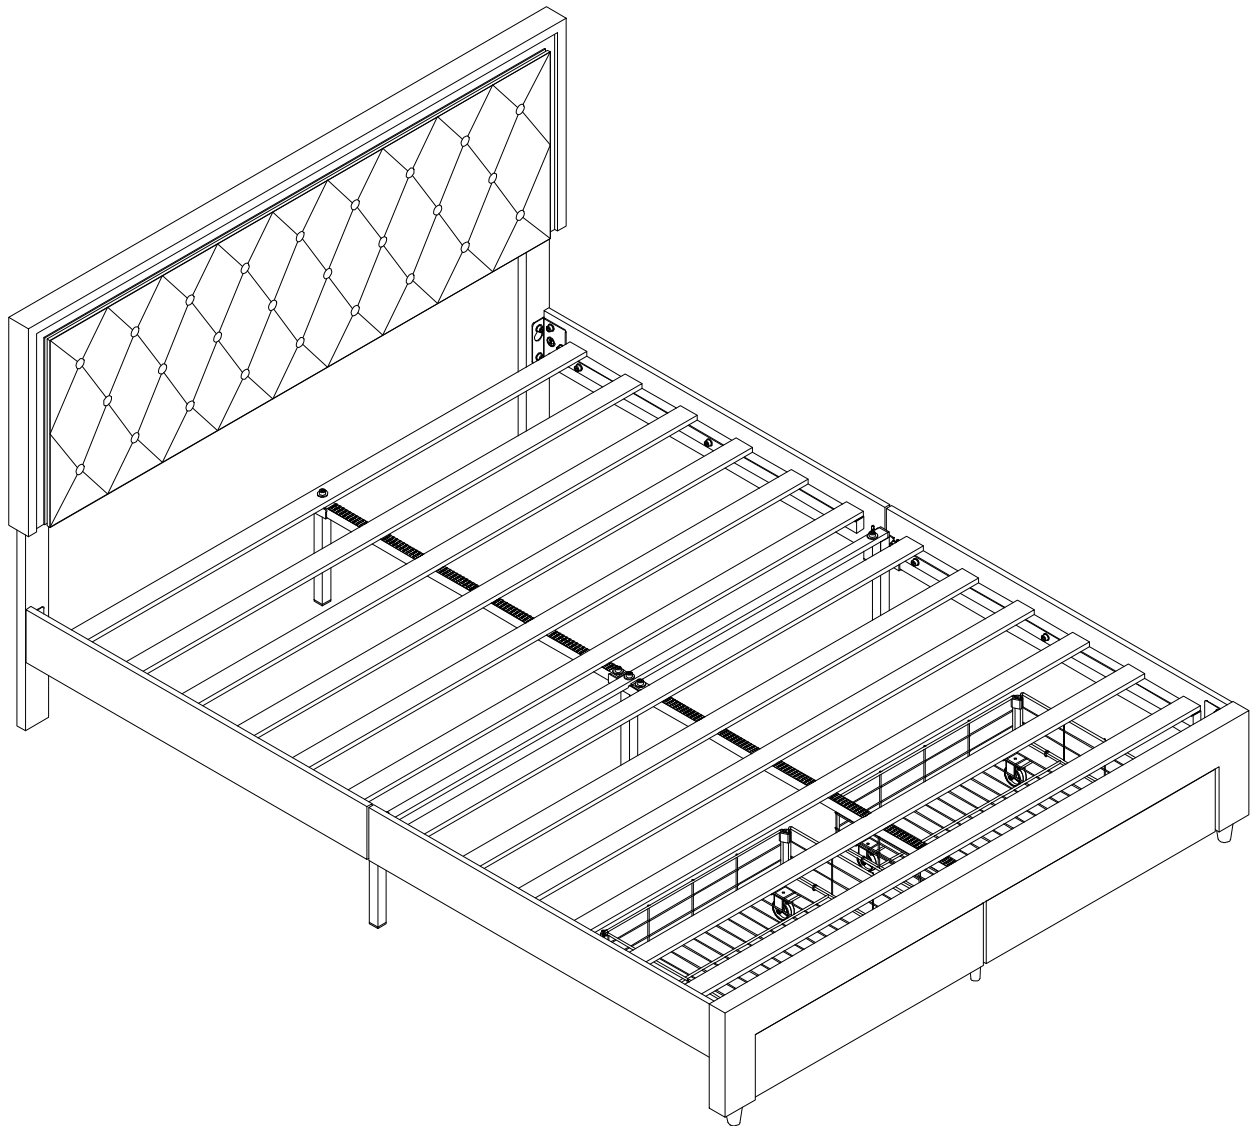

Installation Complete