


After opening the package, first sort the accessories according to the accessories table, and then start the installation after sorting.

Backplane strip

File \* 2

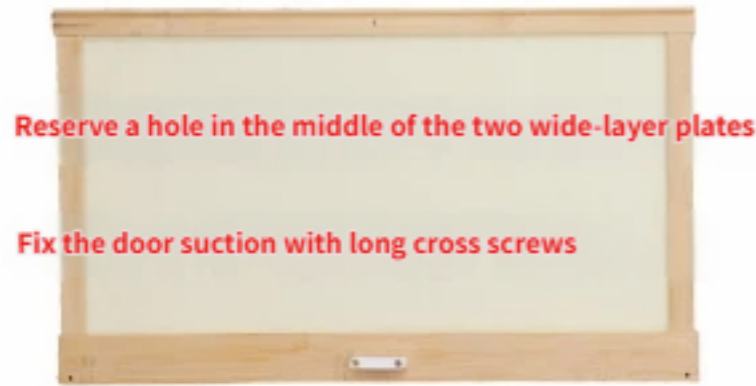

Door laminate



Left bracket



Right bracket



Large back plate \* 2



Short back plate

When installing, pay attention to the door magnetic attraction side facing the outside



Narrow laminate \* 4



Wide laminate \* 3



Drawer board

Card the entry shaft at the left and right ends of the drawer board



Cabinet door \* 2

Card the entry shaft at the upper and lower ends of the cabinet door



Door shaft



Door suction



Door handle



Handle flat head screw



Long cross screw  
(Install door suction)



Small cross screw  
(Install iron sheet)



Hexagon screw

(Installation of laminates and strips, etc)



Iron sheet

Align the wide shelf groove with the grooves on the left and right supports.



Use internal hex screws to secure the bottom of the left and right supports.

Install the wider shelf for the upright supports into the second set of mounting holes.

Install the retaining strip at the bottom of the support using the provided holes.



Align the wide shelf groove with the grooves on the left and right supports.

Install the door damper with the front facing up.



Tighten the side supports using internal hex screws.

Install the wider shelf for the door damper into the upper mounting holes of the frame.

Double-grooved back panel strips.

Secure the wide shelf groove to the center hole using an Allen screw.

Secure the back panel strips to the top.



Then, stack and secure the narrow shelves one by one.

Use internal hex screws to attach the side supports to the vertical frame.



Insert the back panel into the slots, one by one.



Position the front edge of the top door panel upwards and secure it in place. Secure the side panels of the shelf with Allen screws.



Secure the door hinges at the top and bottom of the cabinet door. Snaps into the slots on the upper and lower door panels and the wide side panel.



Secure the door hinges on both sides of the drawer side panel. Snaps into the slots on the front of the bracket. Snap the small back panel into the slots at the rear.



Install the top panel at the top position. Position the door damper towards the front and facing downwards. Secure both sides with Allen screws.



Secure the trim strip to the top of the bracket using an Allen screw. Tighten both sides to complete the installation.

