
ASSEMBLY INSTRUCTIONS

PLEASE RETAIN THIS INSTRUCTIONS FOR REFERENCE

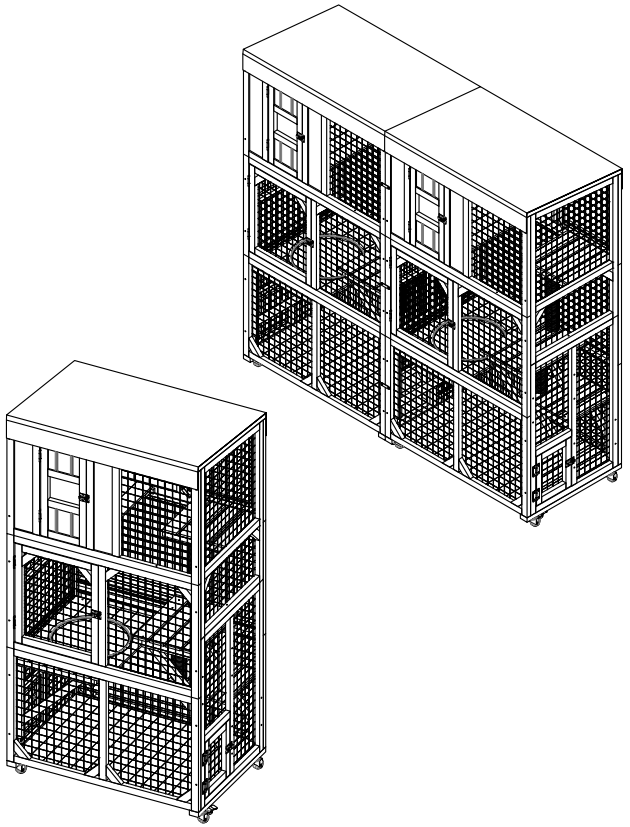

TIME:30-60 minutes

NUMBER OF PEOPLE: 2

Greeting!
So here I am

your new pet house

- Thanks for letting me be a home for your furry friend(s).
- They'll be cozy and protected from the weather when they're with me.
- Iust remember to take care of me too, so I can last a long time.
- When you open the box, you might smell a funny smell.
  Don't worry,it's not dangerous, Iust let me ventilate on the balcony or in a well-ventilated area for a few days and the smell will go away.
- Be careful when you assemble because some of my parts can be sharp or heavy.Make sure all the screws are tight during installation and double-check that they're all secure before using me.
- Please follow the instructions from my maker so your warranty stays good.If you are unsure about the assembly instructions in the manual, you can contact us for an assembly video if you need.
- Remember to place and use me on a flat surface to make sure it's put together correctly and works well.
- Keep me away from fire and dangerous chemicals.
- Clean me with a damp, soapy sponge without corrosive agents.
- Dry me with a soft, clean, dry cloth.
- Do not cleaning me with high pressure.
- Do not put bleach, acids, solvents, or abrasive cleaners on me.
- Check that all my bolts, screws, and knobs are tight every 90 days.



HELP CENTER


- Your full satisfaticon is our FIRST priority.
- We hope you enIoy it and have a good shopping experience.
- We are committed to resolve any issue when the item does not meet your expectations.
- Please feel free to contact us through order detail page, we will get back to you and solve them within 24 hours.



WARNING:

Manufacturer and seller expressly disclaim any liability for personal inIury, property damage, or loss, whether direct, indirect, or incidental, resulting from incorrect attachment, improper use, inadequate maintenance, or neglect of this.


C M3*16 6PCS
I 3PC

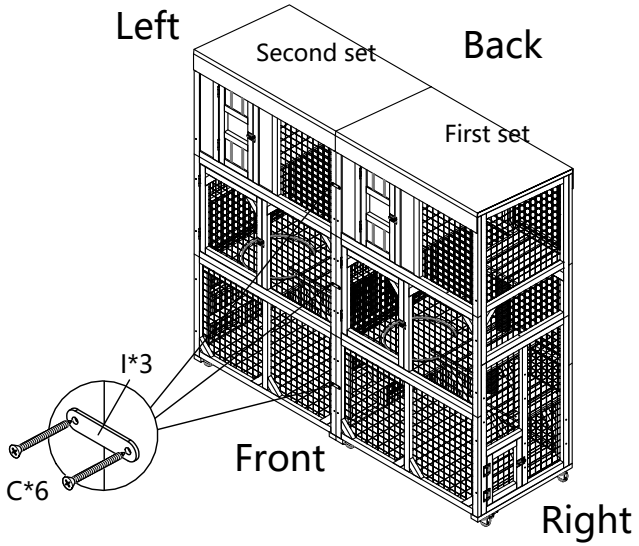

STEP 22

Fix the two set together with (I)*3 Metal connector and screws.

C M3*16 6PCS
I 3PC

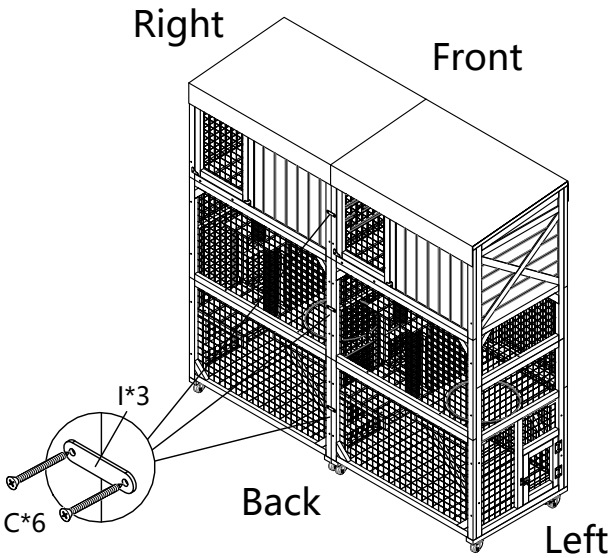


STEP 23

Fix the two set together with (I)*3 Metal connector and screws.


Front View



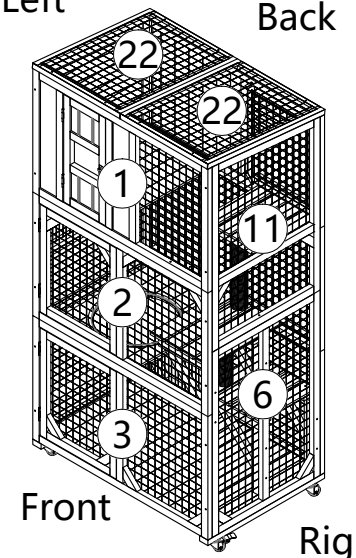













Back View



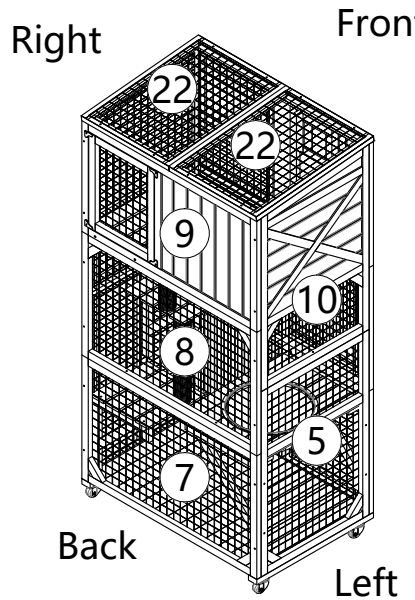


ASSEMBLY INSTRUCTION

Tool Required: Electric Drill Phillips Screwdriver

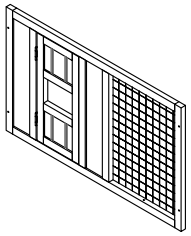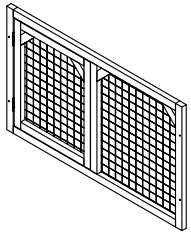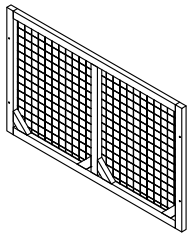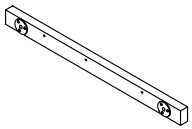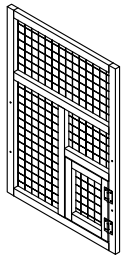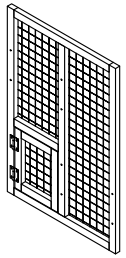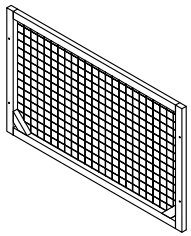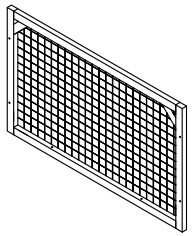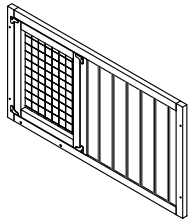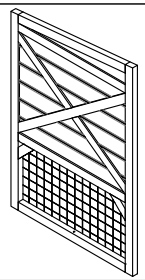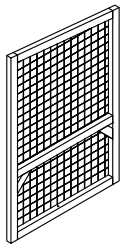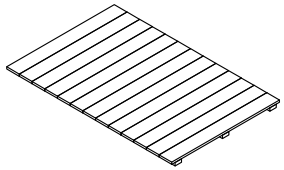
		
① Front upper panel	② Front middle panel	③ Front down panel
		
④ *2 Wheel install panel	⑤ Left down panel	⑥ Right down panel
		
⑦ Back down panel	⑧ Back middle panel	⑨ Back upper panel
		
⑩ Left upper panel	⑪ Right upper panel	⑫ Bottom panel

ASSEMBLY INSTRUCTIONS FOR TWO SETS CONNECTION

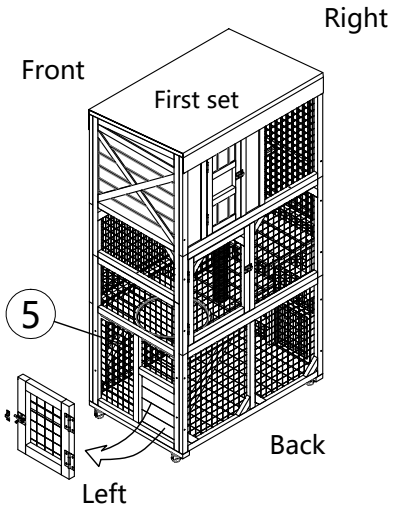


Take off the door of ⑤ Left down panel from first set.

STEP 20

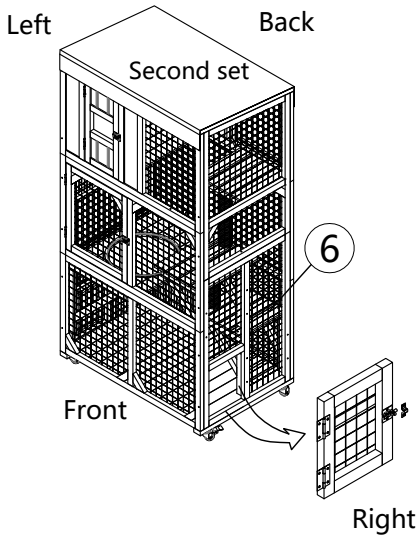

Take off the door of ⑥ Right down panel from Second set.

STEP 21











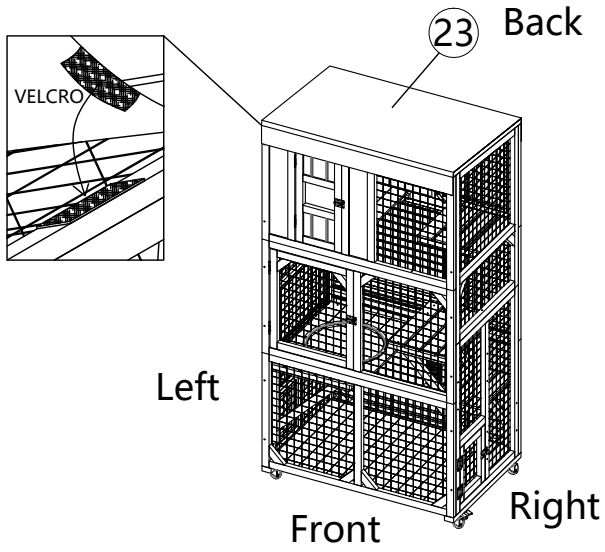


STEP 19

Put on 23 Oxford Fabric.

ASSEMBLY INSTRUCTION

Tool Required: Electric Drill Phillips Screwdriver

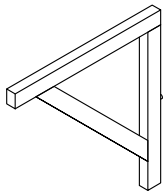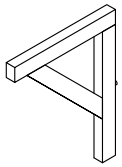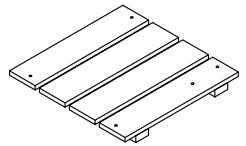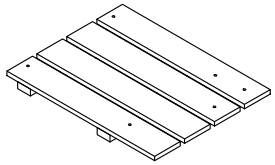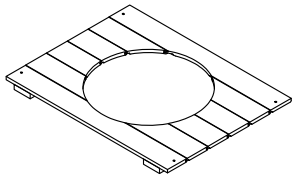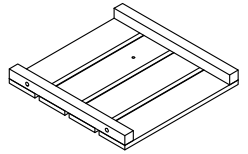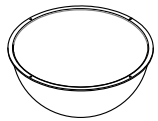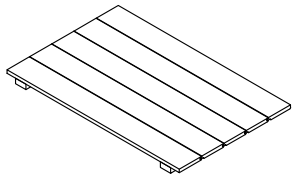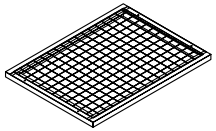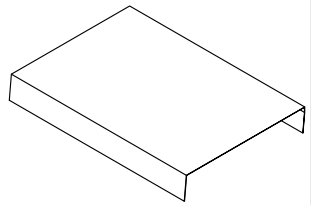		
13 *2 Big support	14 *4 Small support	15 Layer panel
		
16 Layer panel	17 Layer panel	18 Layer panel
		
19 Space Capsule	20 Layer panel	21 *2 Scratching post
		
22 *2 Roof	23 Oxford Fabric	


ASSEMBLY INSTRUCTION


Tool Required: Electric Drill Phillips Screwdriver

Parts Description

	A	M3.5*40	62PCS+1
	B	M3*23	20PCS+1
	C	M3*16	28PCS+1
	D		4PCS
	E		2PCS
	F		2PCS
	G		1PC
	H	M3.5*50	9PCS+1
	I		6PCS+1
	J	M6*50	2PCS

B M3*23 4PCS

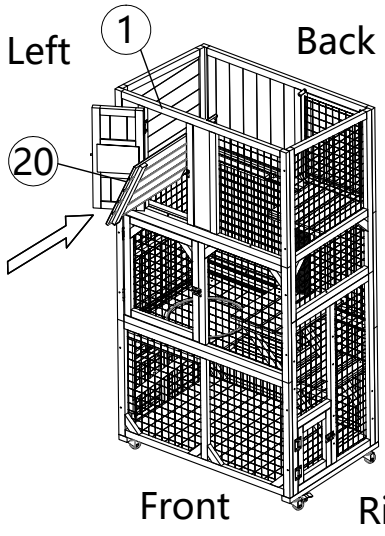


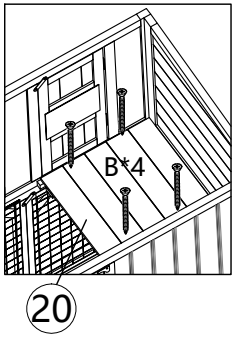

Open the door of ①Front upper panel,fix ⑳ Layer panel with screws.

STEP 17


A M3.5*40 8PCS

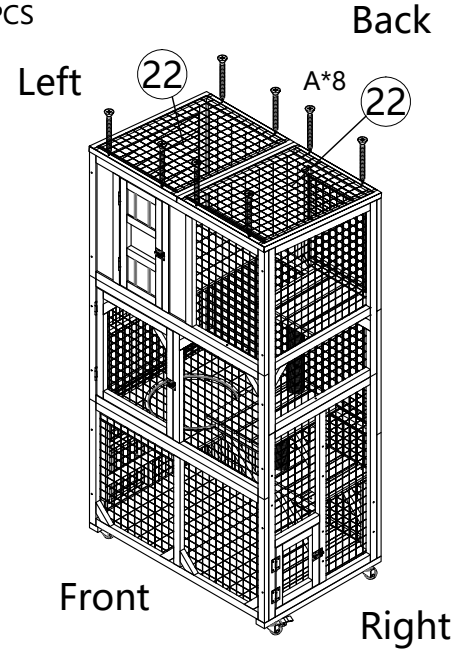

Assemble ㉒*2 Roof with screws.

STEP 18


A M3.5*40 8PCS

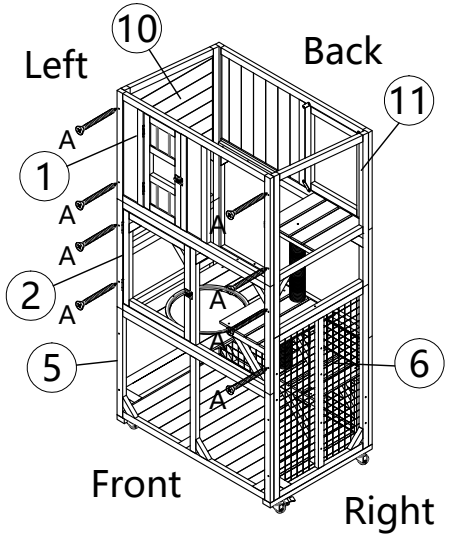

Fix ① Front upper panel、② Front middle panel on ⑩ Left upper panel、⑪ Right upper panel 、⑤ Left down panel、⑥ Right down panel with screws.

STEP 15


A M3.5*40 4PCS
H M3.5*50 4PCS

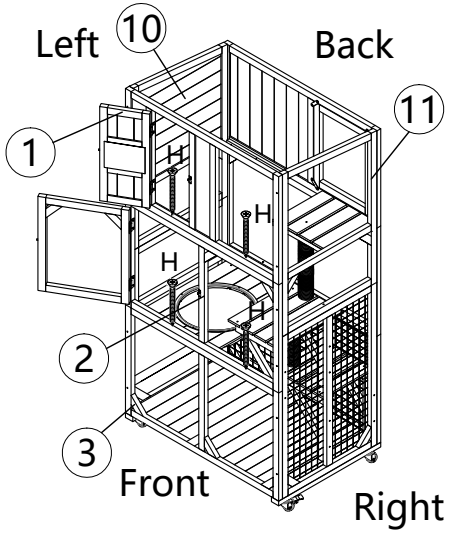

Open the doors of ① Front upper panel、② Front middle panel and fix ① Front upper panel、② Front middle panel 、③ Front down panel with screws.

STEP 16


C M3*16 8PCS
D 2PCS

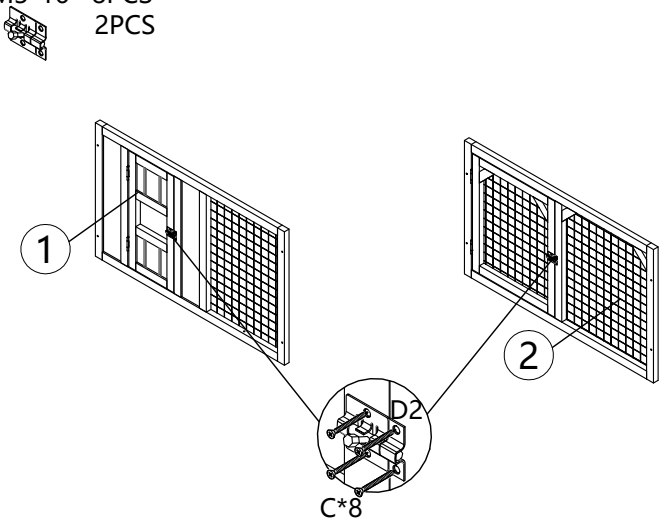

Fix (D)*2 Bolt on ① Front upper panel、② Front middle panel with screws.

STEP 1

C M3*16 8PCS
D 2PCS

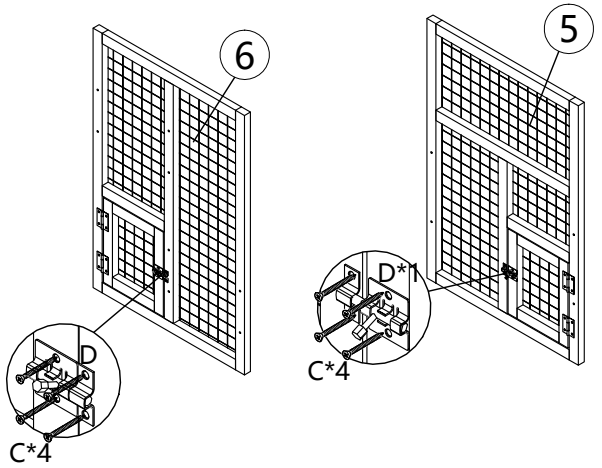


Fix (D)*2 Bolt on ⑤ Left down panel 、⑥ Right down panel with screws.


STEP 2

E 2PCS Wheel with brake

F 2PCS Wheel without brake

G 1PC

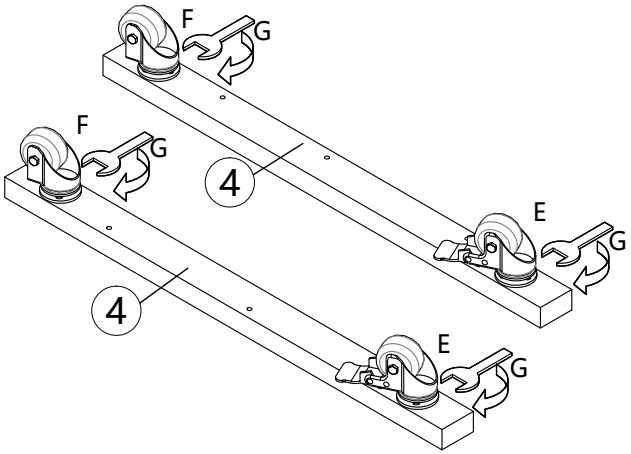

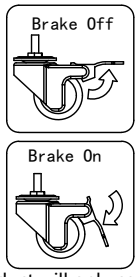


The product will only come to a complete stop when the brakes on all four casters are engaged. Please select the liked placement before engaging all the brakes

STEP 3

Fix (F)*2 Wheel without brake、(E)*2 Wheel with brake on ④*2 Wheel install panel separately with (G)spanner.

A M3.5*40 8PCS

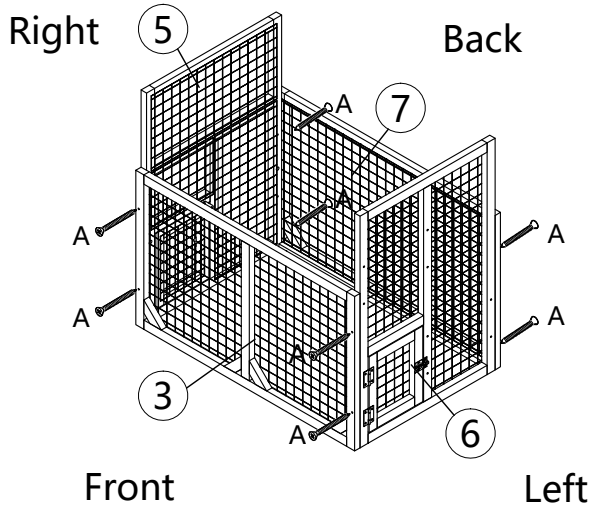


STEP 4

Attach ③ Front down panel、⑤ Left down panel、⑥ Right down panel、⑦ Back down panel together with screws.

A M3.5*40 4PCS


H M3.5*50 1PC

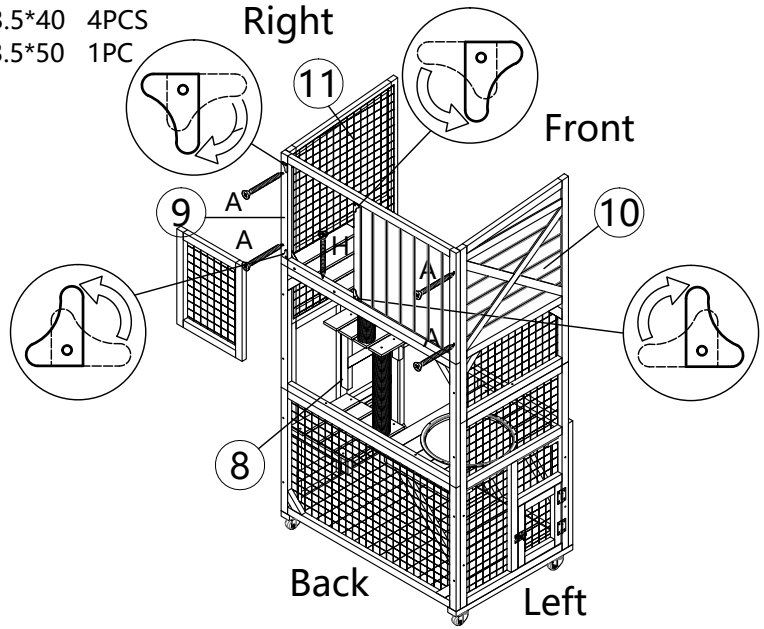

Fix ⑨ Back upper panel on ⑩ Left upper panel、⑪ Right upper panel with screws.
Remove the door of ⑨ Back upper panel,Fix ⑨ Back upper panel on ⑧ Back middle panel with screws.

STEP 13


A M3.5*40 1PC

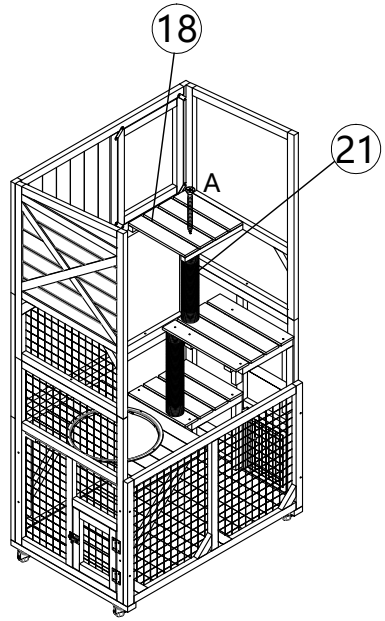

Fix ⑱ Layer panel on ㉑ Scratching post with screws.

STEP 14


A M3.5*40 1PC

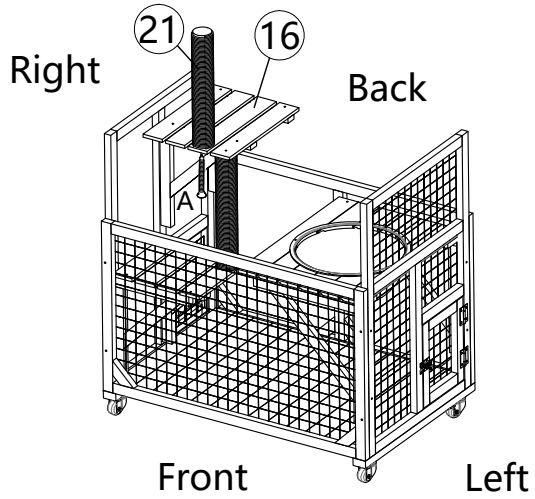

Fix ㉑ Scratching post on ⑯ Layer panel with screws.

STEP 11


A M3.5*40 8PCS
H M3.5*50 4PCS

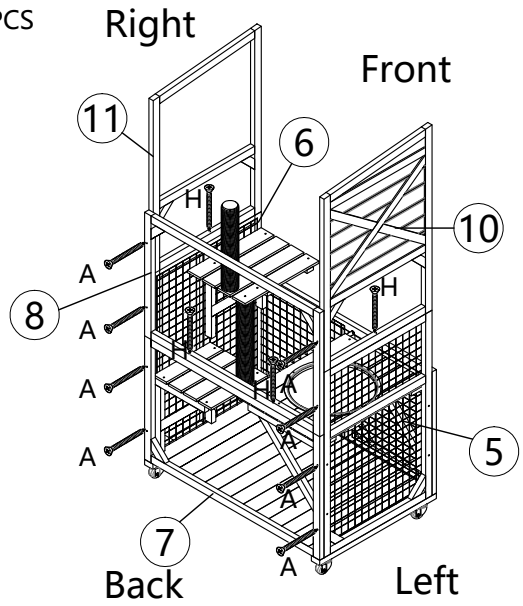

Fix ⑦ Back down panel 、⑧ Back middle panel on ⑤ Left down panel 、⑥ Right down panel、⑩ Left upper panel、⑪ Right upper panel with screws.

STEP 12


A M3.5*40 6PCS

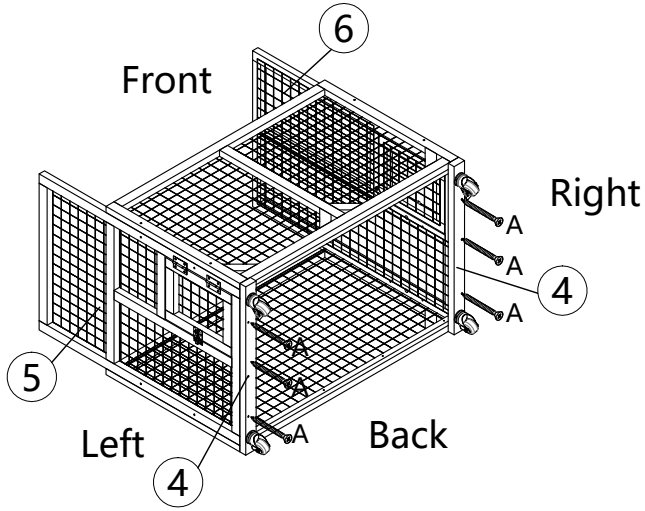

Fix ④ *2 Wheel install panel on ⑤ Left down panel and ⑥ Right down panel with screws.

STEP 5


B M3*23 4PCS

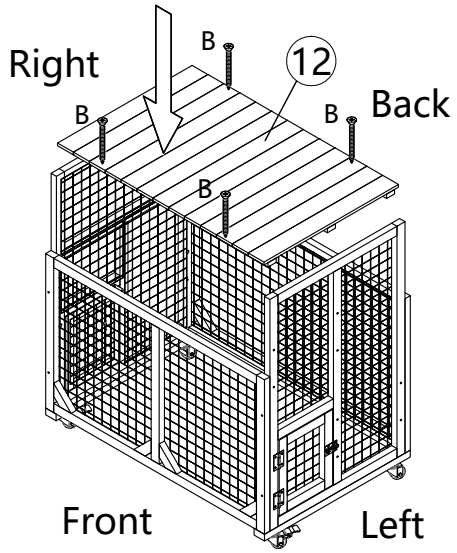

Fix ⑫ Bottom panel with screws.

STEP 6

J M6*50 2PCS

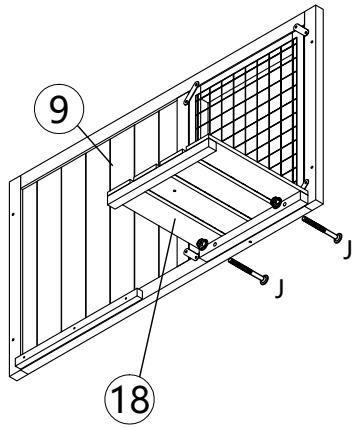


Assemble ⑨ Back upper panel、⑱Layer panel with screws

STEP 7

B M3*23 12PCS


A M3.5*40 1PC

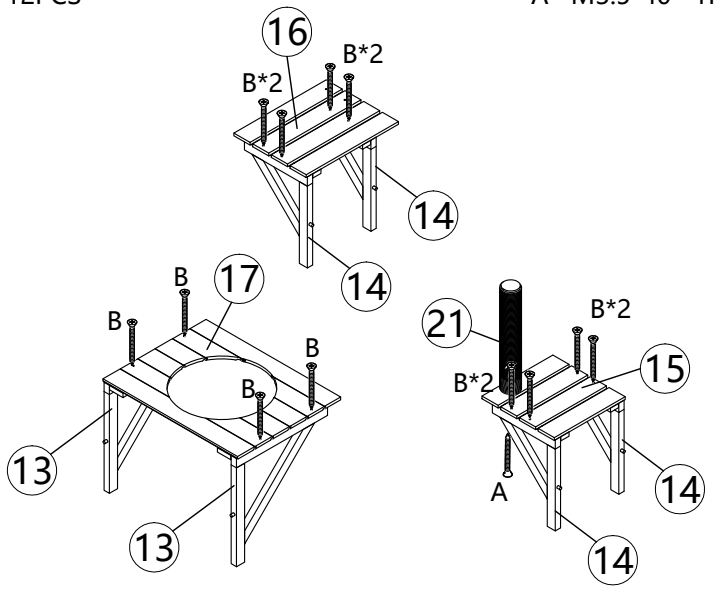

Assemble ⑬ *2 Big support、⑰ Layer panel with screws.Assemble ⑭ *2 Small support、㉑ Scratching post、⑮ Layer panel with screws.
Assemble ⑭ *2 Small support、⑯ Layer panel with screws.

STEP 8


A M3.5*40 8PCS

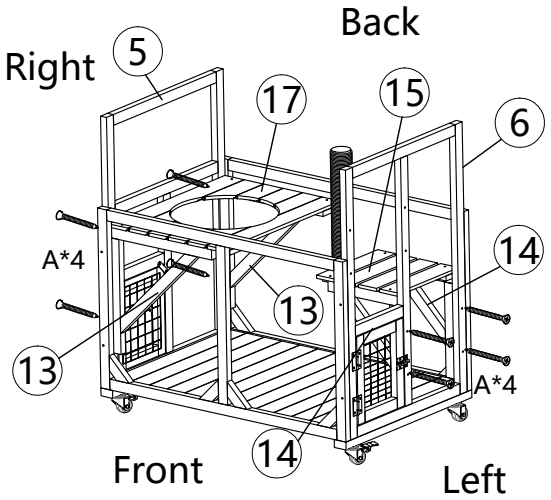

Fix the installed ⑬ *2 Big support、⑰ Layer panel on ⑤ Left down panel with screws.
Fix the installed ⑭ *2 Small support、⑮ Layer panel on ⑥ Right down panel with screws.

STEP 9

A M3.5*40 5PCS

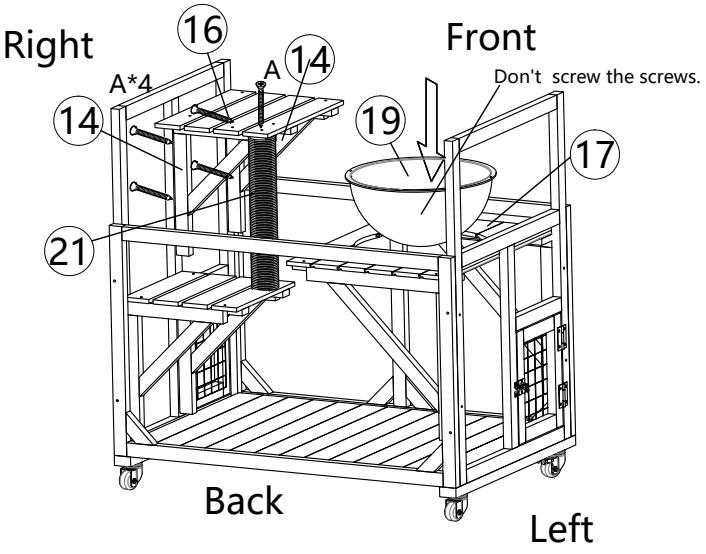

Fix the installed ⑭ *2 Small support、⑯ Layer panel on ⑤ Left down panel with screws.
Assemble ㉑ Scratching post with screws.Put ⑲ Space Capsule into ⑰ Layer panel .

STEP 10