




6798NAT-61 / 6798OAK-61 DONTE RECTANGULAR COFFEE TABLE
ASSEMBLY INSTRUCTIONS

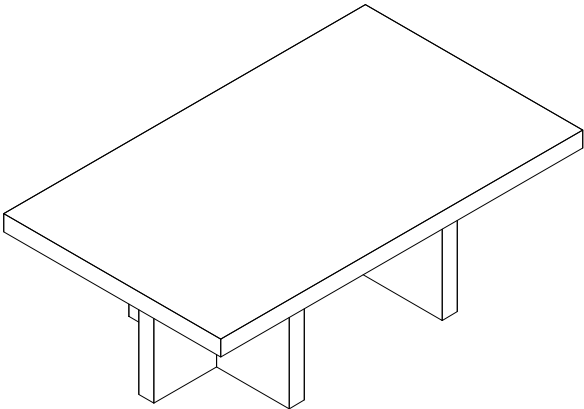



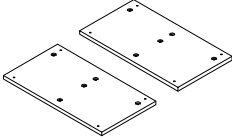







ASSEMBLY INSTRUCTIONS

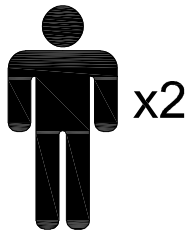

15 MIN

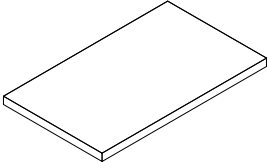


TOOLS REQUIRED
(Allen Key provided)

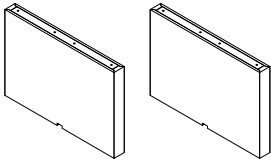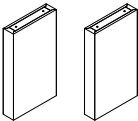



CARTON	ITEM	PART	HARDWARE	
1	6798NAT-61/ 6798OAK-61	① TOP PANEL x 1 PC 	Ⓐ	M6 x 35 mm: 18 pcs 
		② MOUNTING PLATES x 2PCS 	Ⓑ	M6 x 20 mm: 6 pcs 
			Ⓒ	Ø6 x Ø10 x 1.2: 24 pcs 
			Ⓓ	Ø6 x Ø19 x 2: 24 pcs 
			Ⓔ	4mm x 60: 1 pc 
		③ BIG LEG x 2PCS 		
		④ SMALL LEG x 2PCS 		
		⑤ T CONNECTOR PLATE x 2PCS 		

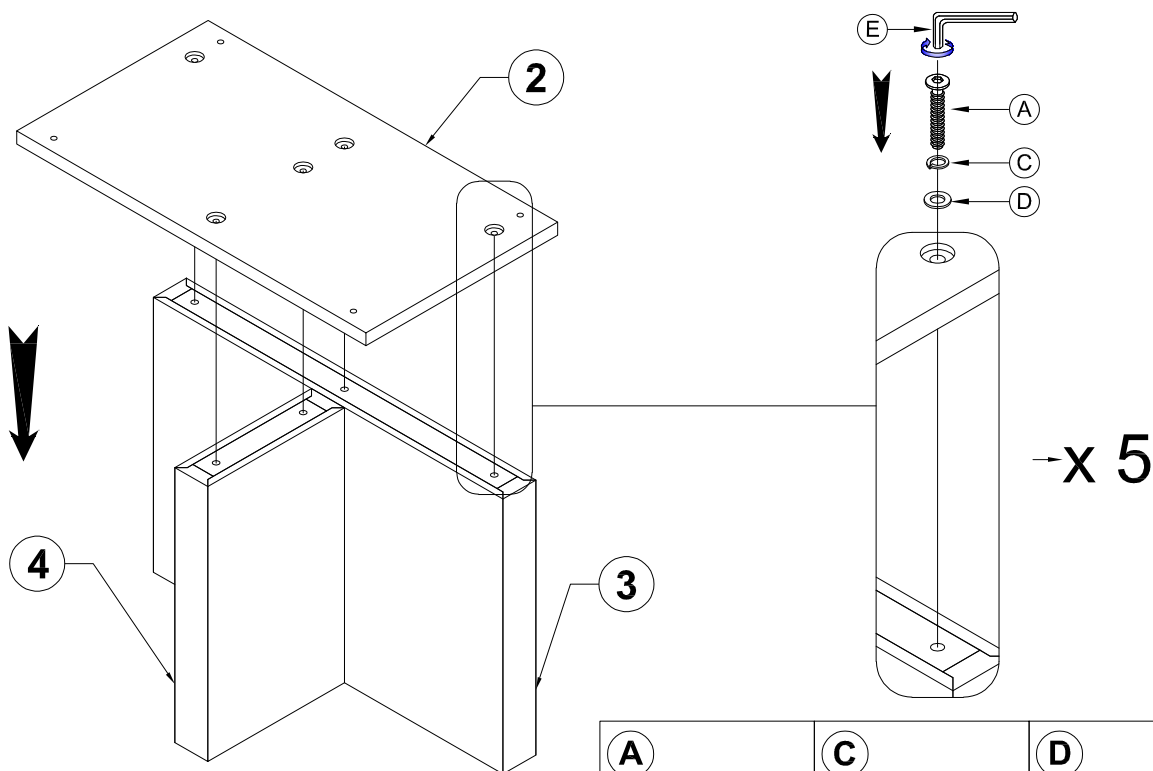STEP 1

Prepare part 3 and 4 (Big and Small legs) and connect a mounting plate on top of the legs with corresponding hardware. You will need to use 5 set of hardware to connect these 3 pieces








Repeat this step 1 to assemble the other set of legs and mounting plate

A	C	D	E
			
M6 x 35 mm : 10 pcs	Ø6 x Ø10 x 1.2 : 10 pcs	Ø6 x Ø19 x 2 : 10 pcs	4mm x 60 : 1 pc

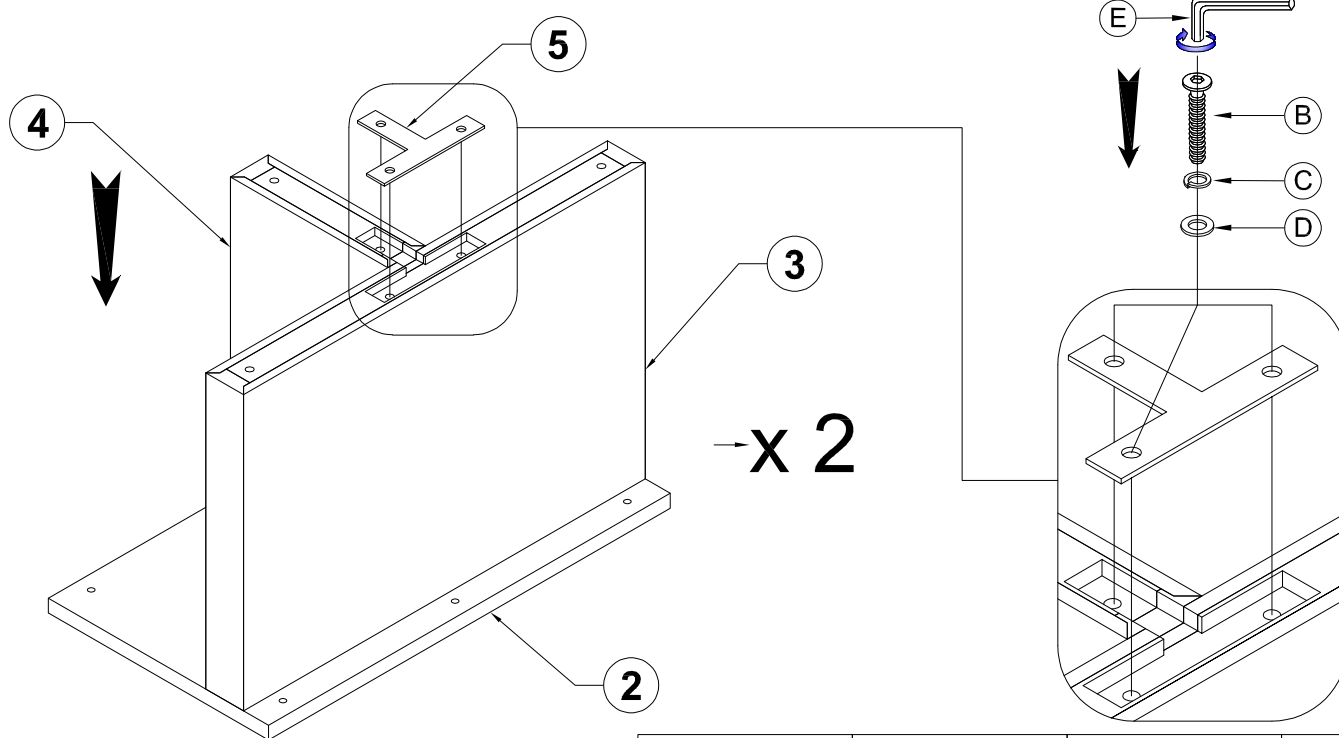STEP 2


Assemble one of the T connector plates to the first set of legs already assembled and connect with corresponding hardware. Repeat this step with the second legs set




B	C	D	E
			
M6 x 20 mm : 6 pcs	Ø6 x Ø10 x 1.2 : 6 pcs	Ø6 x Ø19 x 2 : 6 pcs	4mm x 60 : 1 pc

STEP 3

Prepare the top panel to connect it with the previously assembled set of legs. Use corresponding hardware to connect each leg to the top panel using 4 sets of hardware to connect each corner. See image below

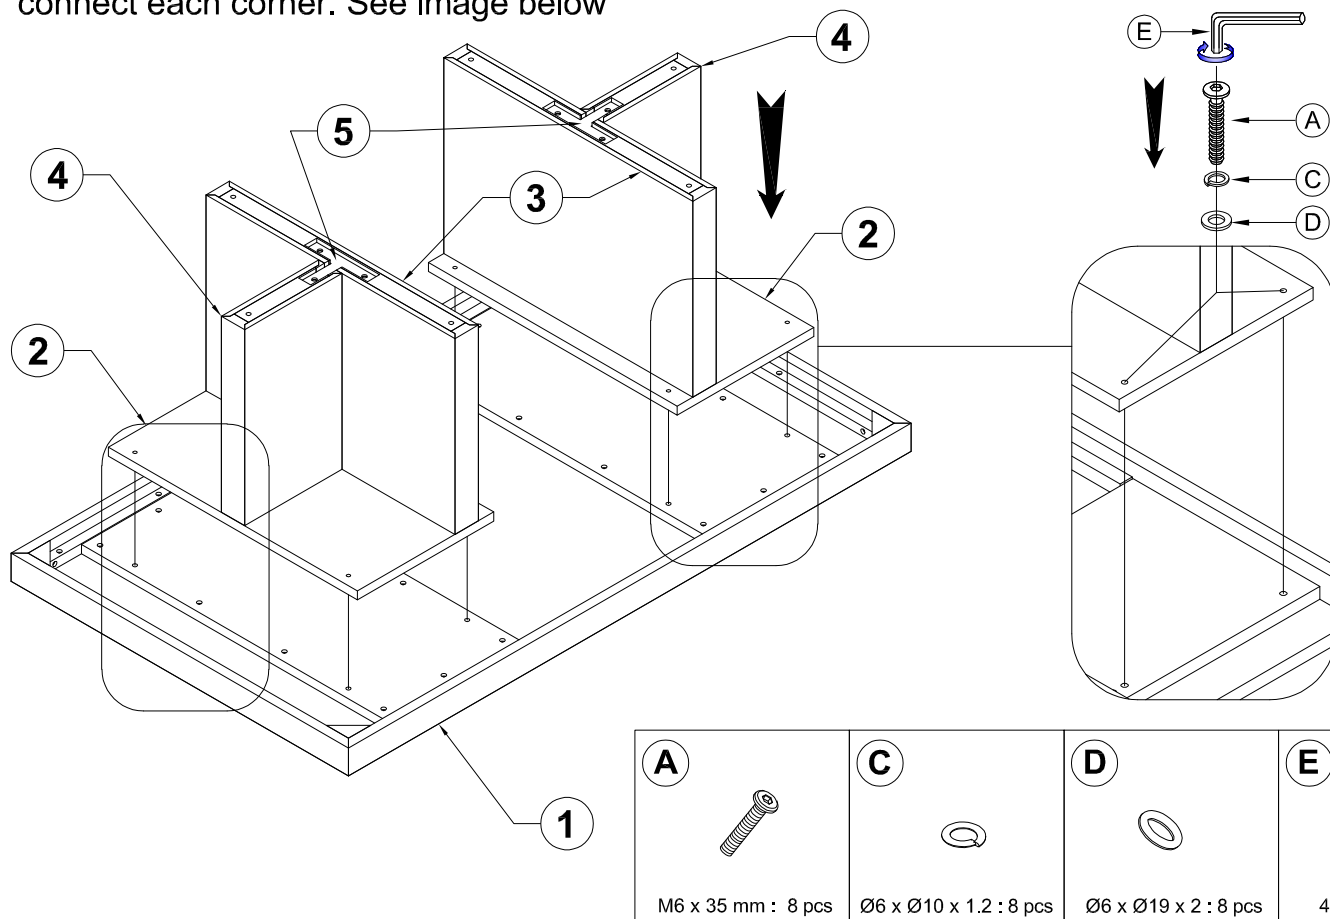

ASSEMBLY COMPLETED

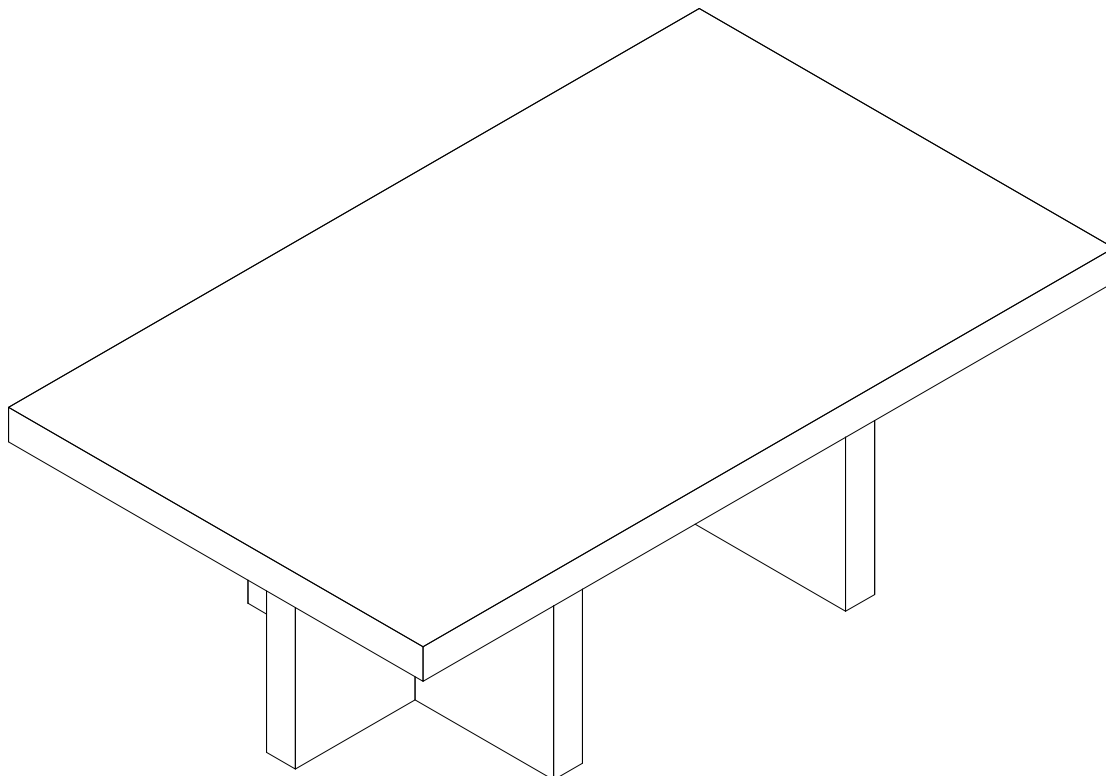

CAUTION ! : REQUIRES TWO ADULTS TO FLIP AND TURN TABLE UPRIGHT AFTER ASSEMBLY IS FINISHED.