

Product specifications


- 100% waterproof & easy to clean
- Easy to install and lightweight
- Suitable for indoors only.
- Luxurious and aesthetic look
- Scratch-resistant due to the European standard UV varnish
- B1 Fire Rating
- Long-lasting, having passed aging tests
- Certified antimicrobial properties (zero microbial growth)
- Each panel measures 4' x 9' with a 2.8mm thickness

Suitable for all interior applications in both commercial and residential settings, including wet areas, walls, and furniture.

IMPORTANT: Products must be brought to the installation area at least 24 hours prior to application and kept with packaging open. This process equalizes product temperature with ambient temperature and minimizes stress caused by expansion.

Tools and Materials

1. Measuring Tape
2. Silicon / Construction Adhesive
3. Level
4. Utility Knife

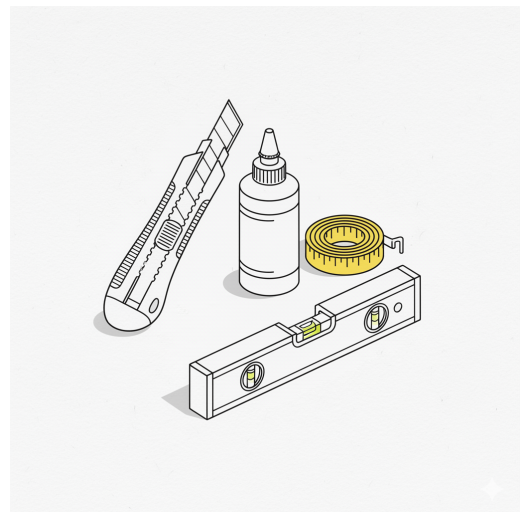

Step 1: Prepare the Surface

1. Remove furniture and any wall decorations.
2. Clean the wall to remove dust, grease, or debris.
3. Fill any holes or cracks in the wall.
4. Ensure the wall is dry and even. **Some surfaces may require a primer for optimal adhesion.**

Step 2: Measure and Cut

1. Measure the wall and mark the starting point for the first panel. Use a level to ensure straight alignment.
2. **Cut end panels** to size if necessary using a utility knife or a handsaw. If the end panel width is less than half of a whole panel, consider using the center of the wall as your starting point and cut partial end panels for both sides
3. Drill holes for outlets and fixtures using a circle cutter attached to your drill.



Step 3: Apply Adhesive and Install



4. Use any type of construction adhesive. The adhesive must be applied to the surface in an S-shape or zigzag pattern on the back of the panel, one at a time.

We recommend: [Le Page construction adhesive](#)

5. Press the panel firmly onto the marked spot on the wall. Hold for a few seconds to secure the bond. Leave a 2–3 mm expansion gap around panel ends, walls, corners, skirting boards, and profiles during installation.



6. Apply a suitable sealant in the gaps if installing this product in a bathroom or other damp area.

We recommend: [Gorilla sealant](#)

7. Repeat the process, aligning each panel carefully with the previous one.

Allow adhesive to cure for a minimum of 2 hours before adding back furniture. **Full curing takes 24 hours.** The product is covered with a surface protection film to prevent damage during transportation and installation. *Remove the film three days after installation.*



UV Marble Panels

Installation Guide

How to clean

Clean the product with a damp cloth or wash it with a soft sponge and mild cleaner. Avoid harsh chemicals.

The panels can be installed with a seamless finish (no grouting required). The adhesive waterproofs the surface.

Additional Tips:

For a simple and elegant complement to your panel installation, Aluminum profiles can be used.

- Colors: Commonly available in Silver and Gold.
- Purpose: These profiles provide clean transitions and protect edges, enhancing the overall aesthetic.
- Shapes: They are produced in various forms, such as T profiles, U profiles, outer corner profiles, inner corner profiles, and edge end profiles. Please select the appropriate shape for your application.

Note: These aluminum profiles are not supplied by us. They should be purchased separately from a third-party building materials supplier or hardware store.

For assistance or inquiries, please **call 1-877-243-3267** or **email sales@dundeedeco.com**