
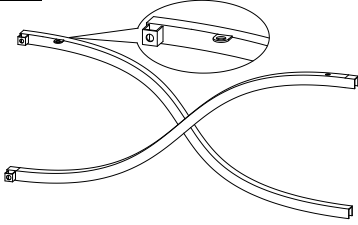
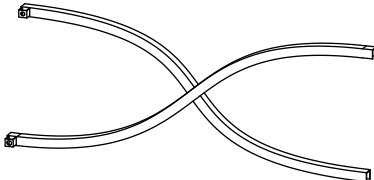
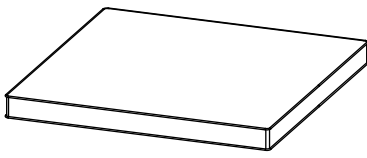
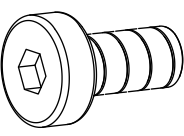

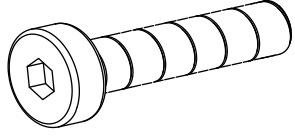


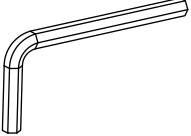
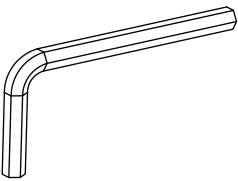
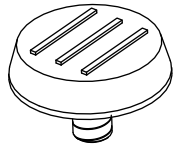


ASSEMBLY INSTRUCTION

METAL X-BASE OTTOMAN

A Side Panel A  2pcs	B Side Panel B  2pcs	C Cushion (In Other Carton)  1pc
D Bolt 1/4"X1/2"  8pcs	E Bolt 5/16"X5/8"  2pcs	F Bolt 5/16"X1-3/4"  2pcs
G Lock Washer 5/16"  4pcs	H Flat Washer 5/16"  4pcs	I Allen Wrench 1/4"  1pc
J Allen Wrench 5/16"  1pc	K Leveler 1/4"X12mm  4pcs	

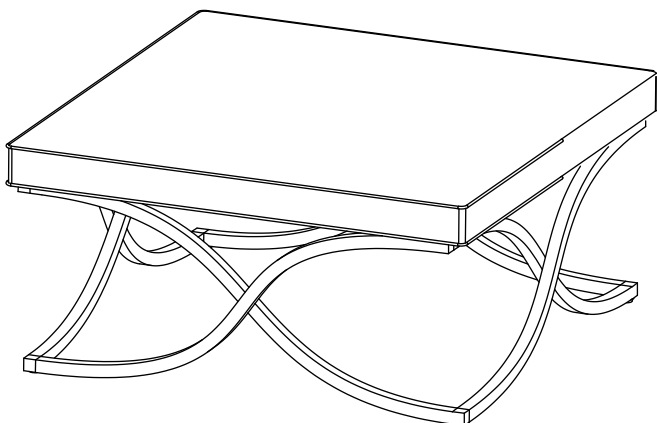


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**


1

Attach side panel A (A) to side panel B (B) by bolt (D) and allen wrench (I) as shown.

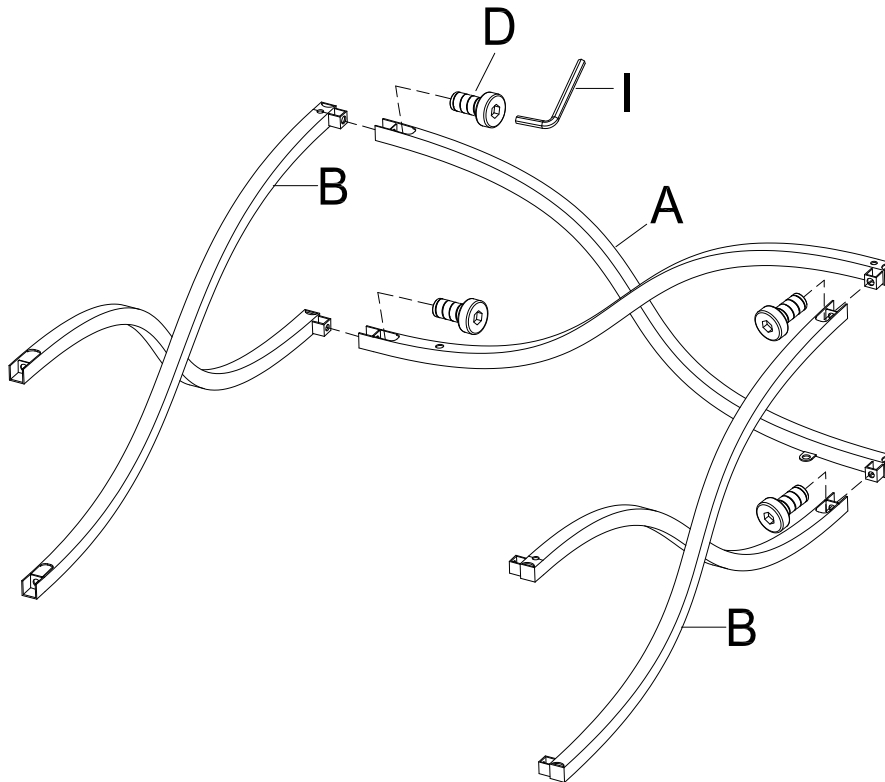


2

Attach side panel A (A) to side panel B (B) by using bolt (D) and allen wrench (I) again.

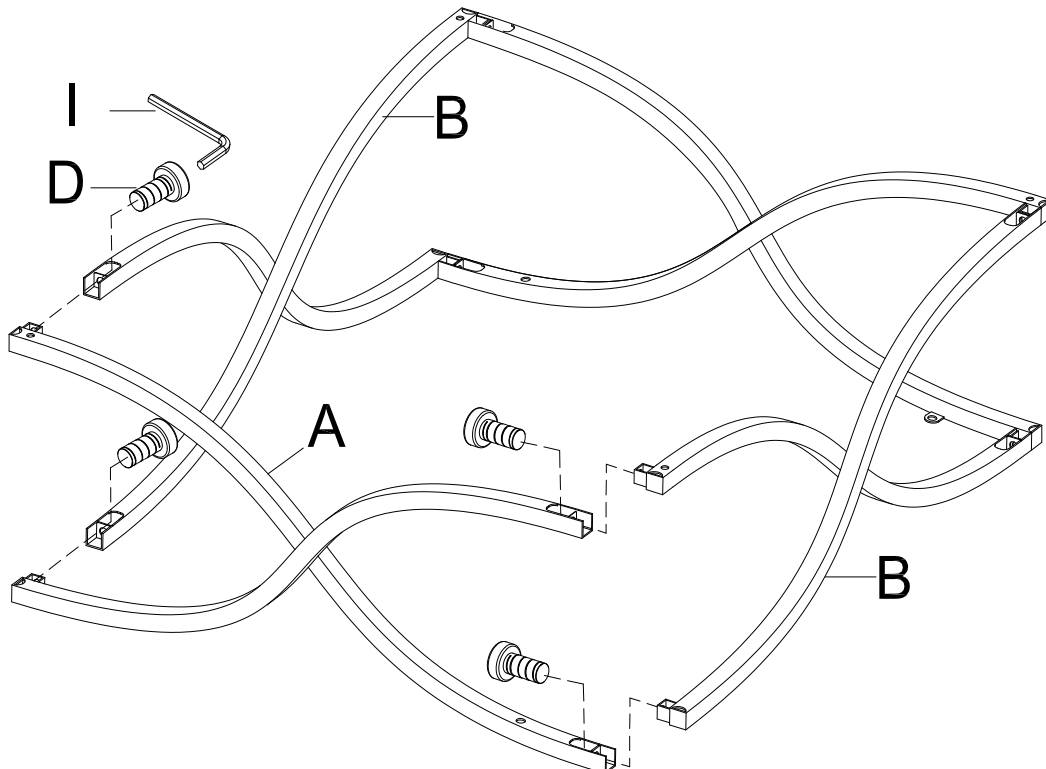


3

Attach leveler (K) to bottom of the side panel A (A) and side panel B (B) as shown.

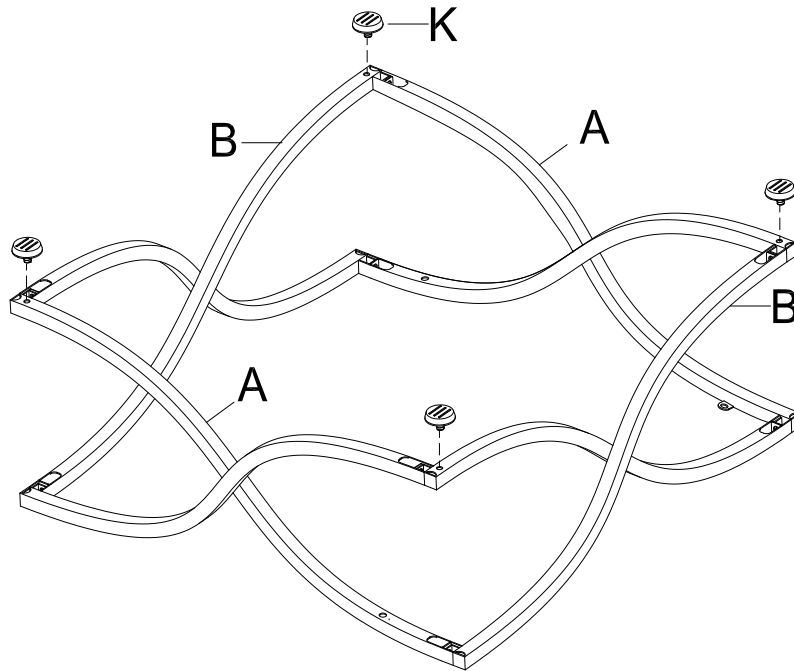**4**

Attach the assembled metal base to cushion (C) by using bolt (E), lock washer (G), flat washer (H) to cross the iron sheets of side panel A (A), and using bolt (F), lock washer (G), flat washer (H) to cross side panel A (A). Then, use allen wrench (J) to fasten bolt (E) and bolt (F).

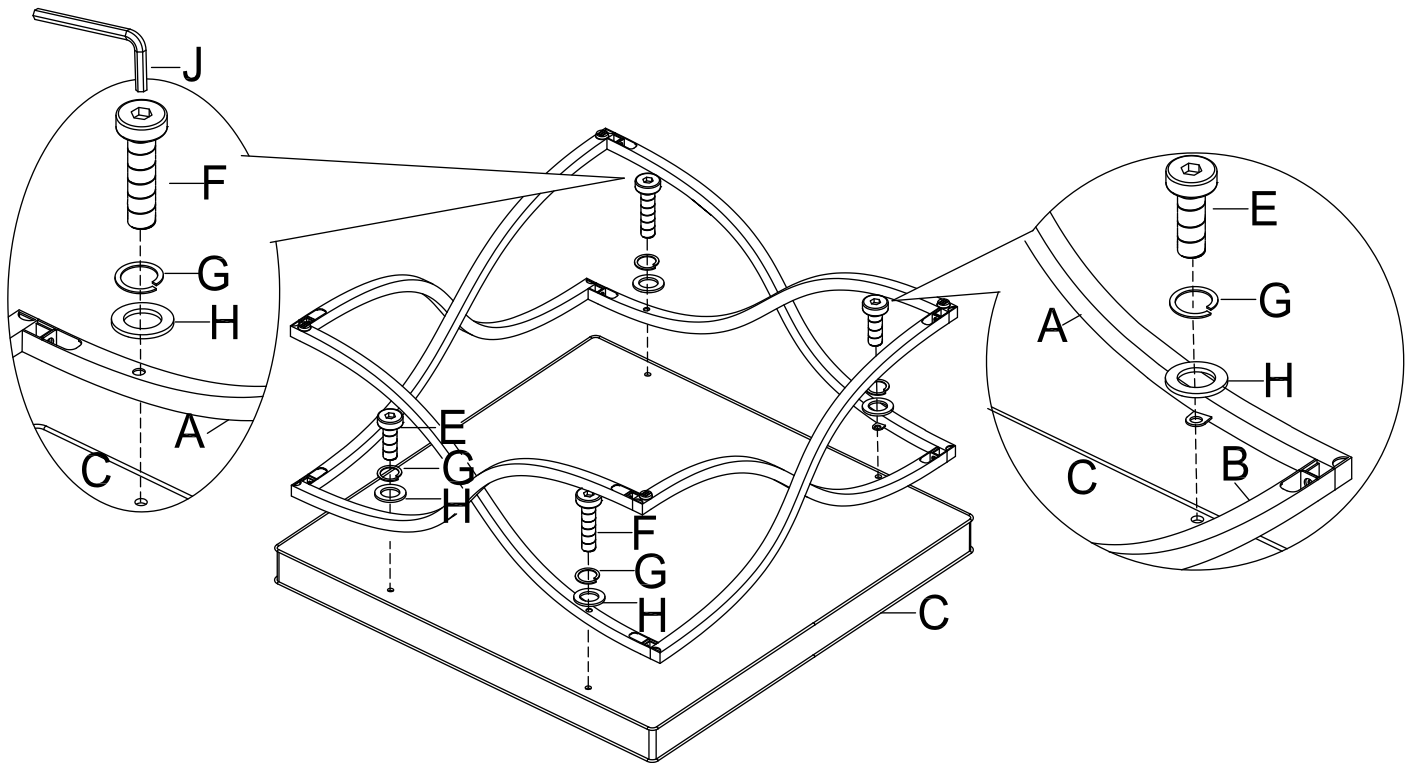

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.