
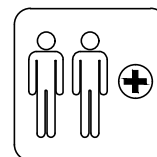
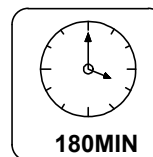
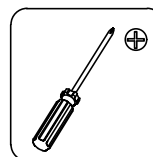
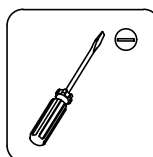


Installation & Assembly

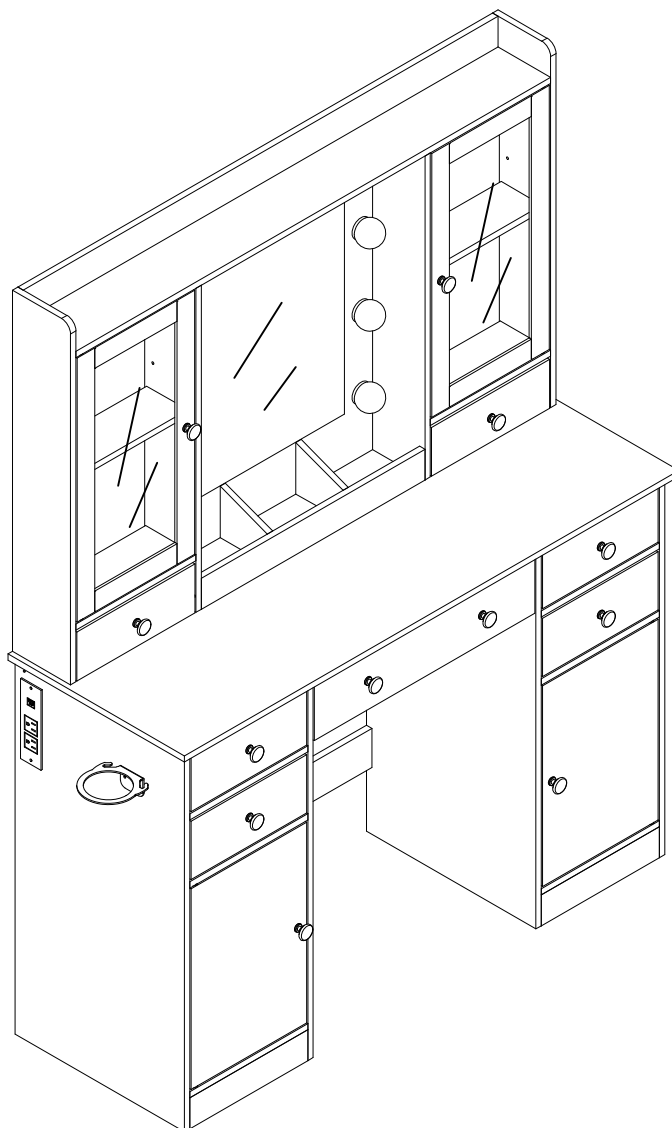

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

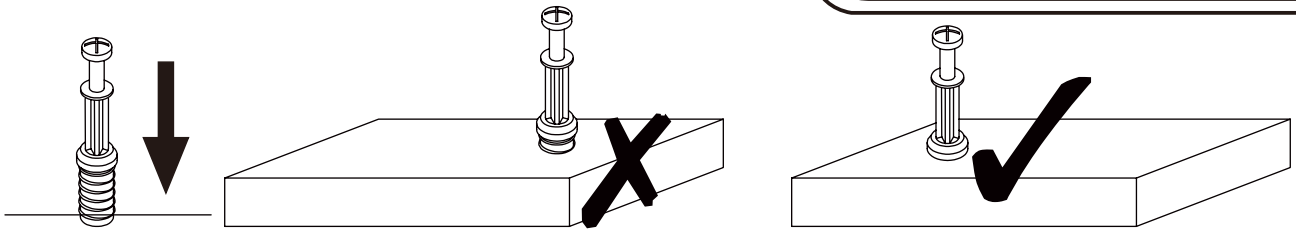


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

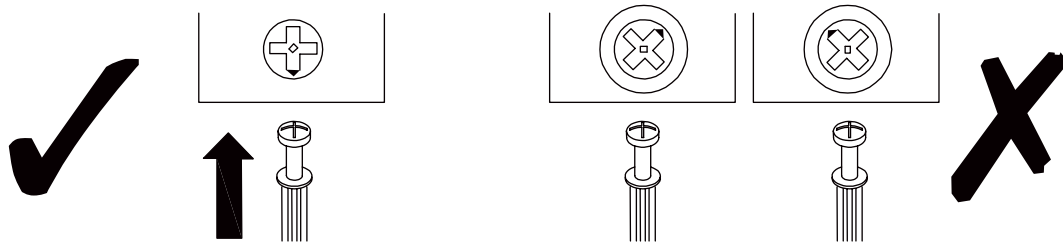









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










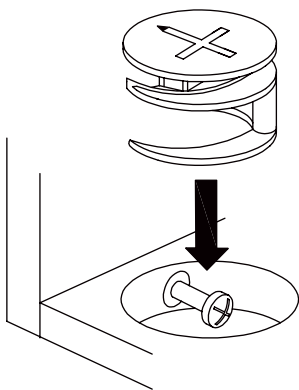











EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.







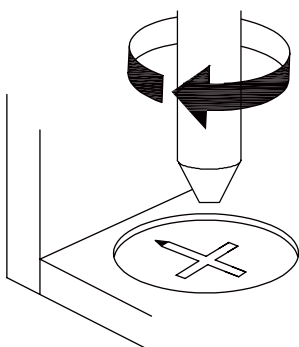







EN_Turn cam lock clockwise to tighten.

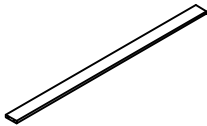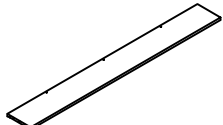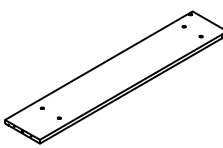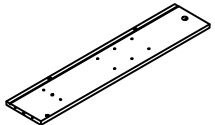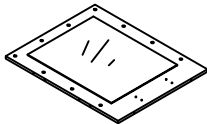
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x2	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x1	

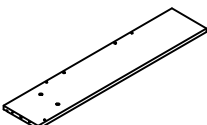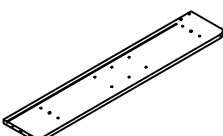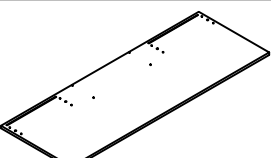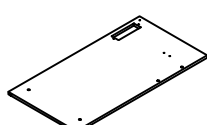


NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x4	
⑱		x1	
⑲		x2	
⑳		x1	

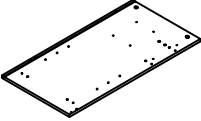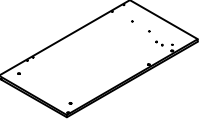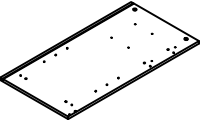NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x2	
24		x1	
25		x1	
26		x1	
27		x1	
28		x1	
29		x1	
30		x1	

NO.	PARTS	QTY	SPARE
31		x1	
32		x1	
33		x2	
34		x2	
35		x2	
36		x2	
37		x2	
38		x5	
39		x5	
40		x4	

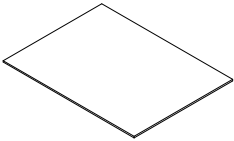NO.	PARTS	QTY	SPARE
④1		x4	
④2		x4	
④3		x1	
④4		x1	
④5		x1	
④6		x1	
	 Hardware Kit	x1	

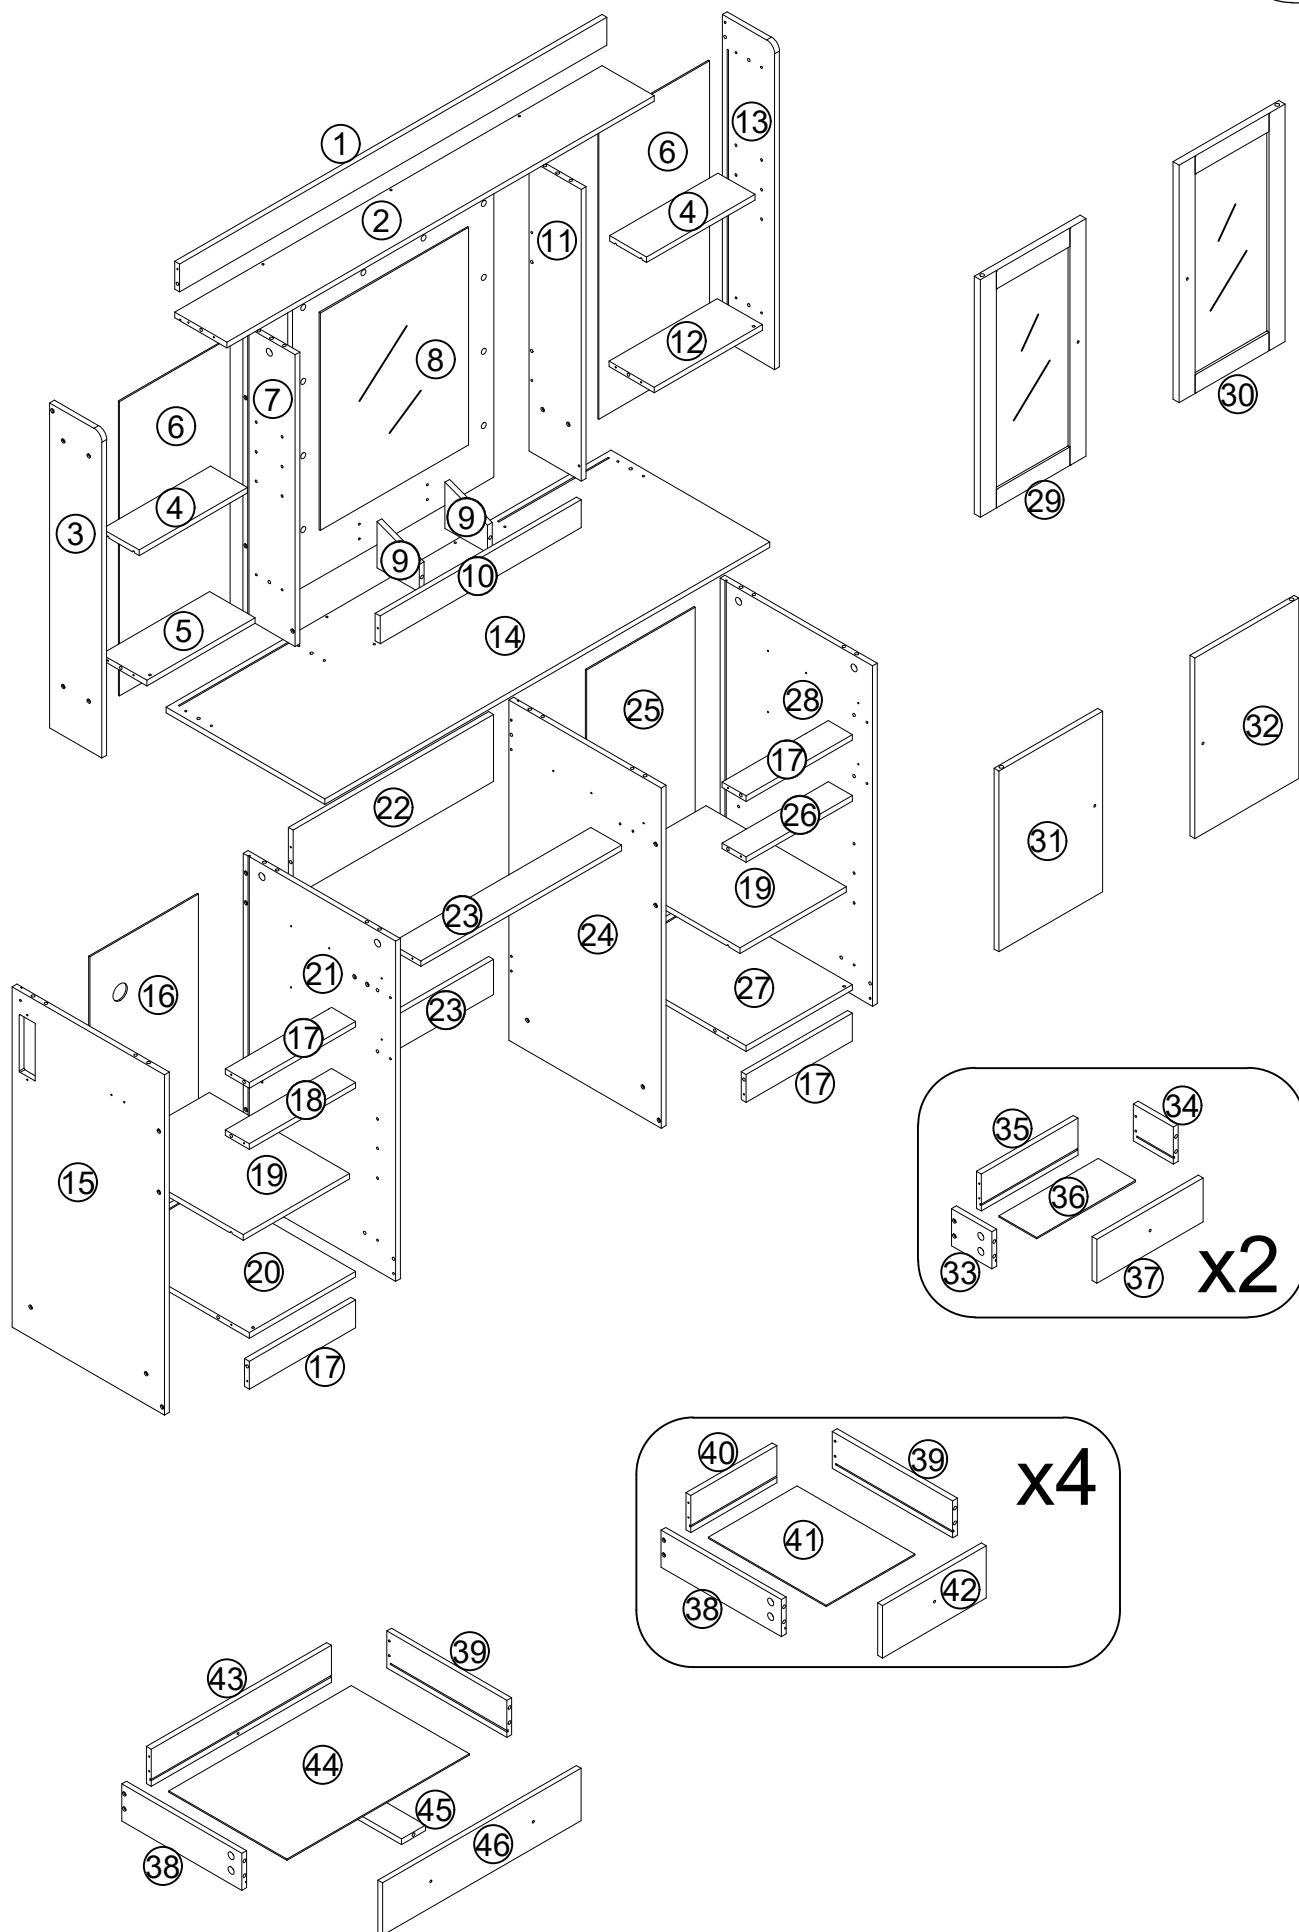


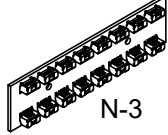 A x43 Ø6x35mm +2(spare)	 B x43 Ø15x10mm +2(spare)	 C x50 Ø6x30mm +2(spare)	 D x102 Ø4x35mm +2(spare)	 E x60 Ø3.5x12mm +4(spare)	 F x4 Ø3x16mm
 H x16 Ø3x16mm +1(spare)	 I x1	 J x2 Ø3.5x14mm	 K x1	 L x1	 M x2
 N-1 x10	 N-2 x10	 N-3	 N-4 x1	 O x2	 P x8
 Q x16	 R x12	 S x4	 T x2 Ø4x14mm	 U x2 Ø6x30mm	 V x34 +4(spare)
 X x2	 CL x5 L300mm	 CR x5 L300mm	 DL x5 L300mm	 DR x5 L300mm	

01

E x6


CL x2

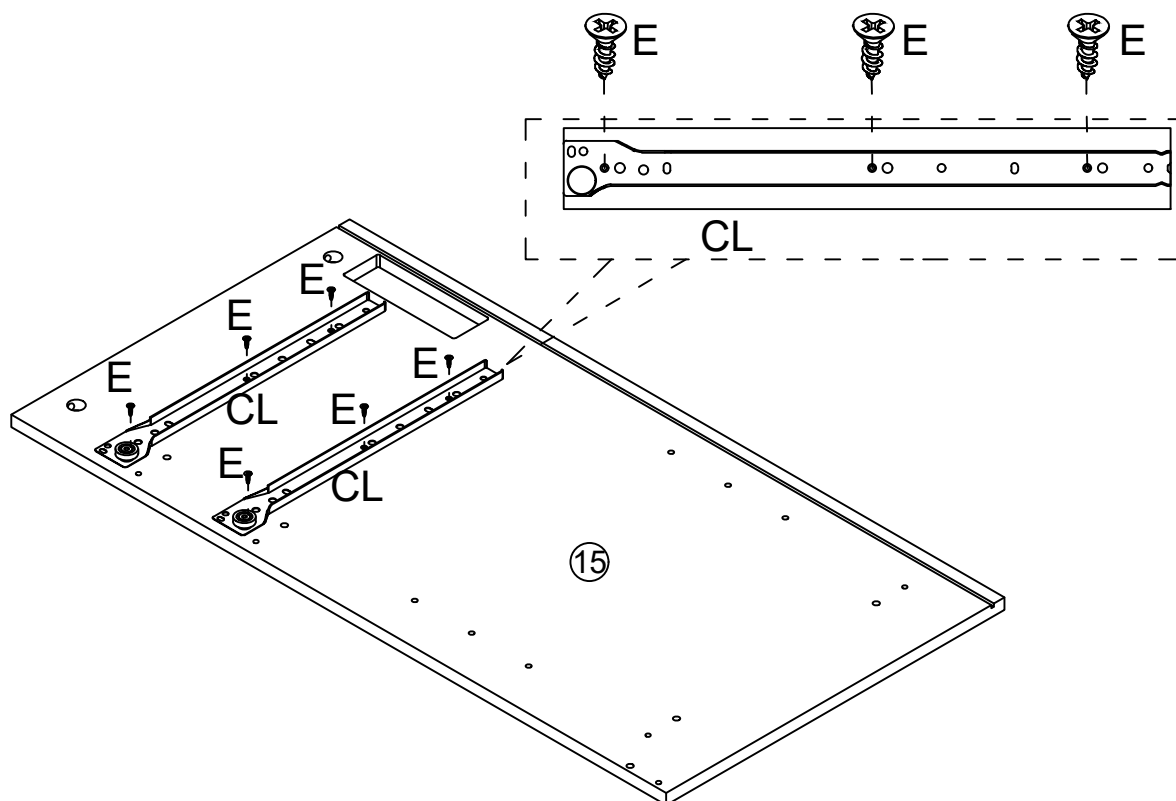

02

E x6



CR x2

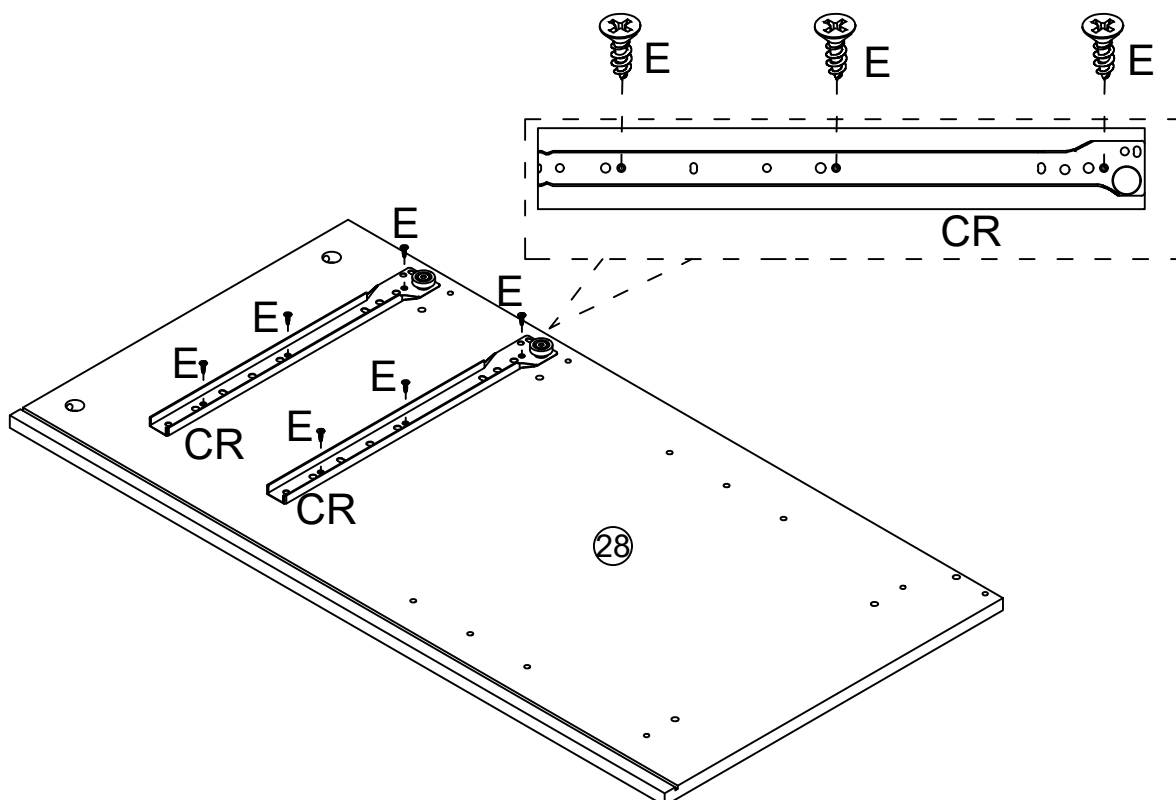

E x9

CL x1

CR x2

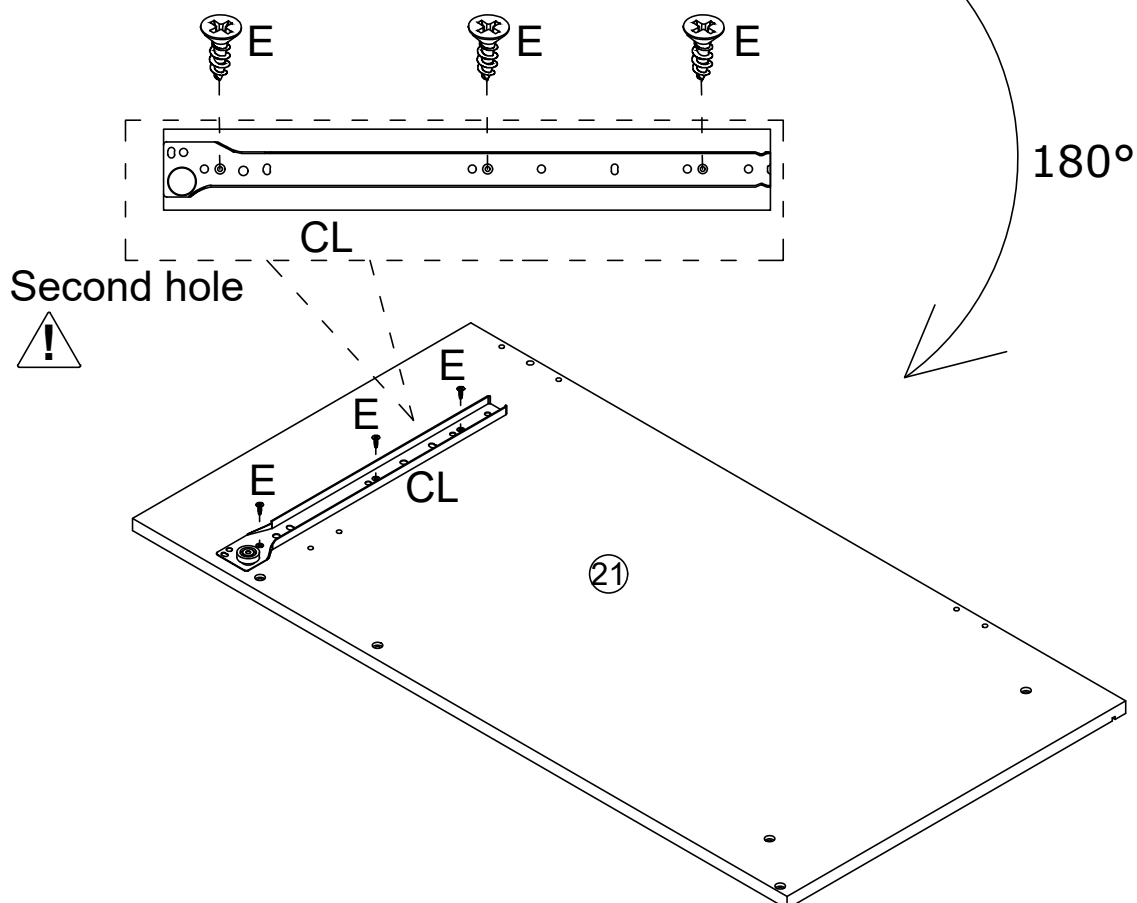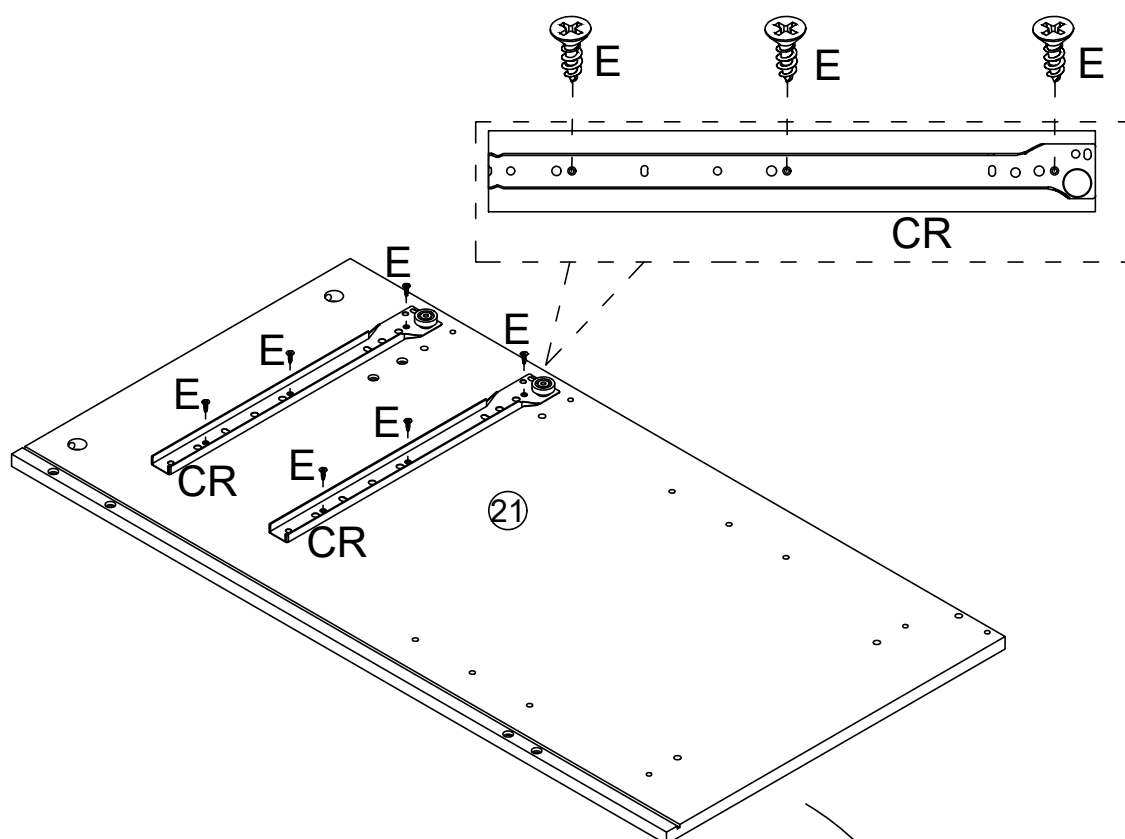



E x9




CL x2



CR x1

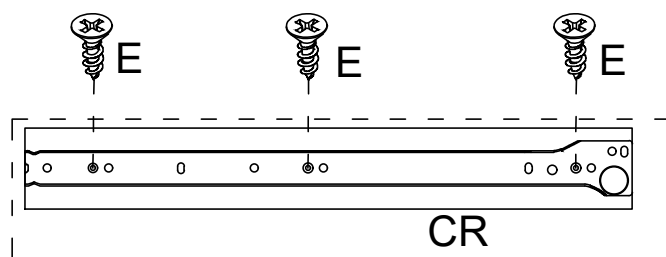
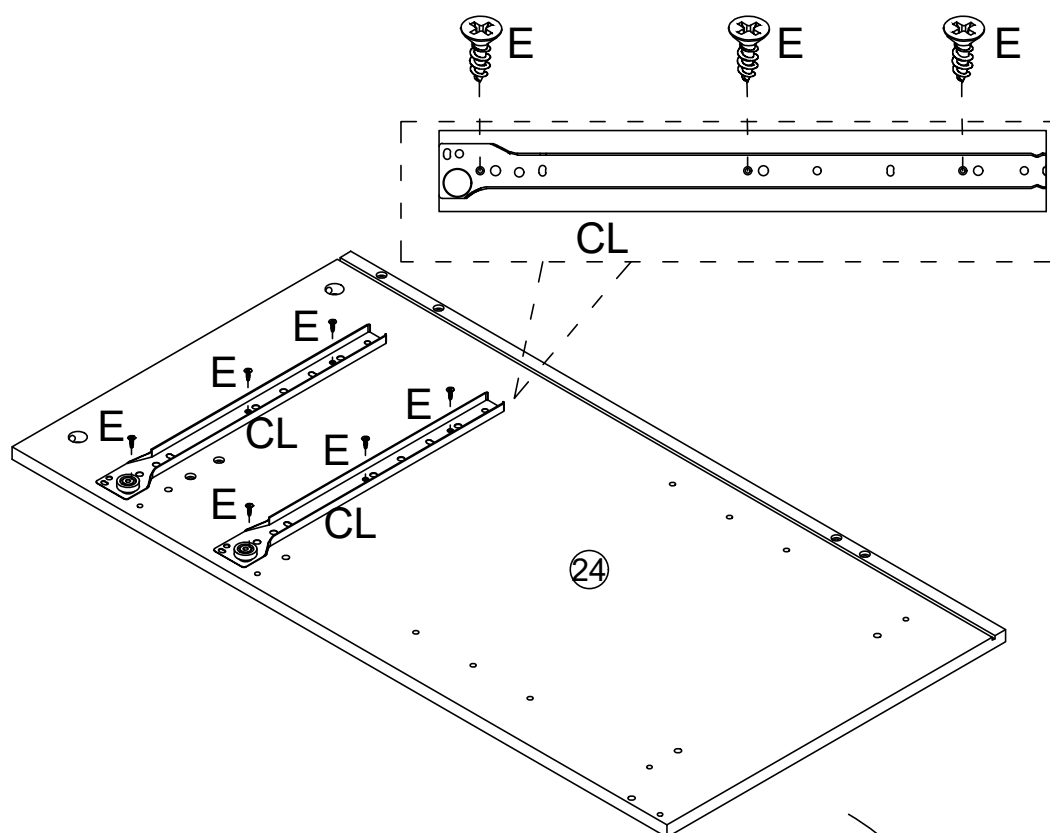


Second hole

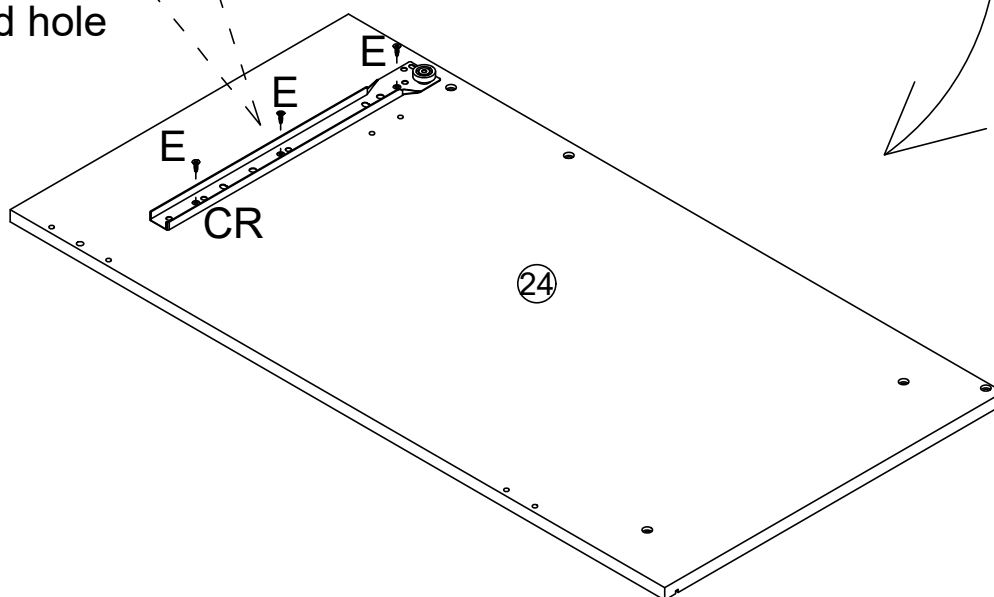

180°


F x2

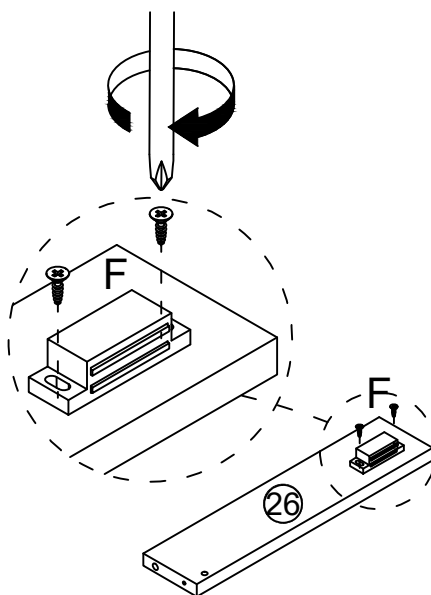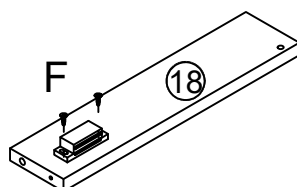

C x5




D x5

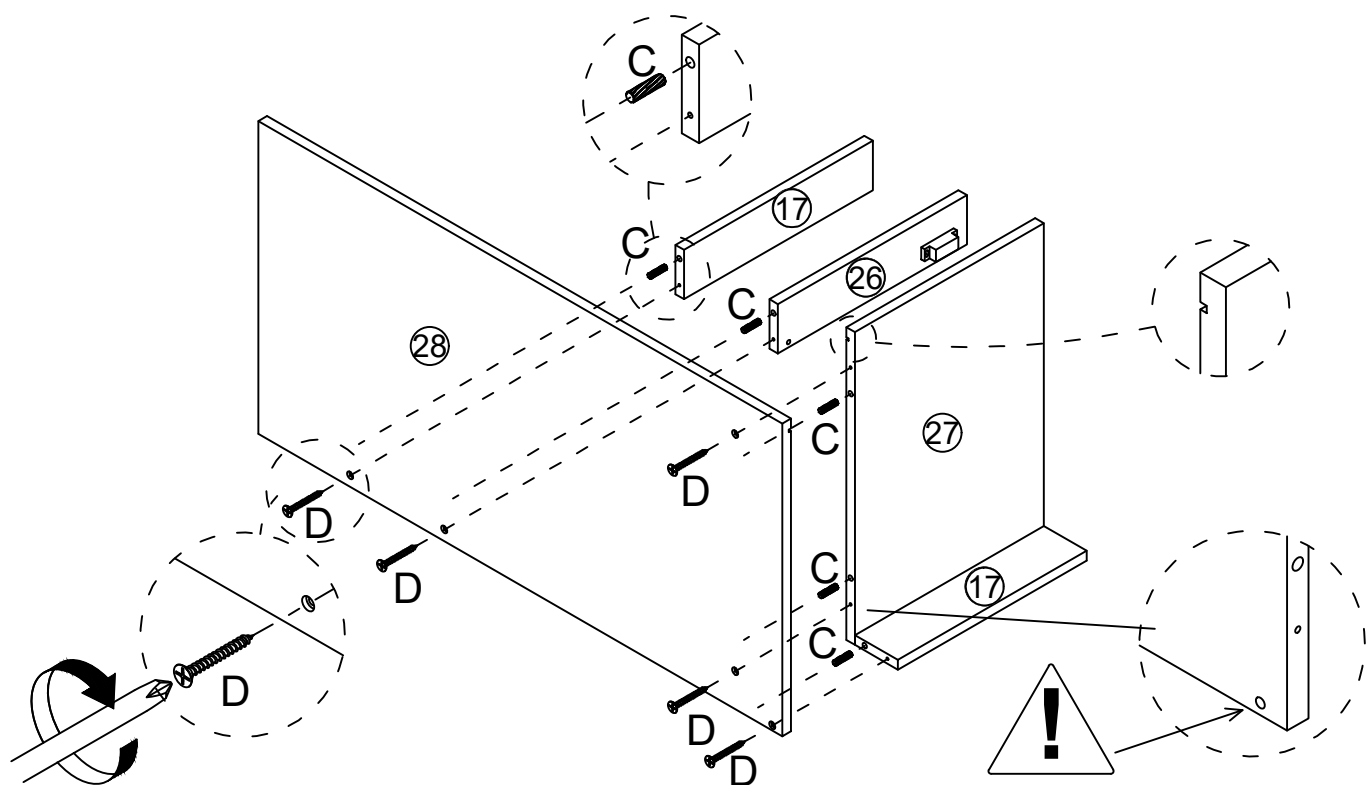

07

C x5


D x5

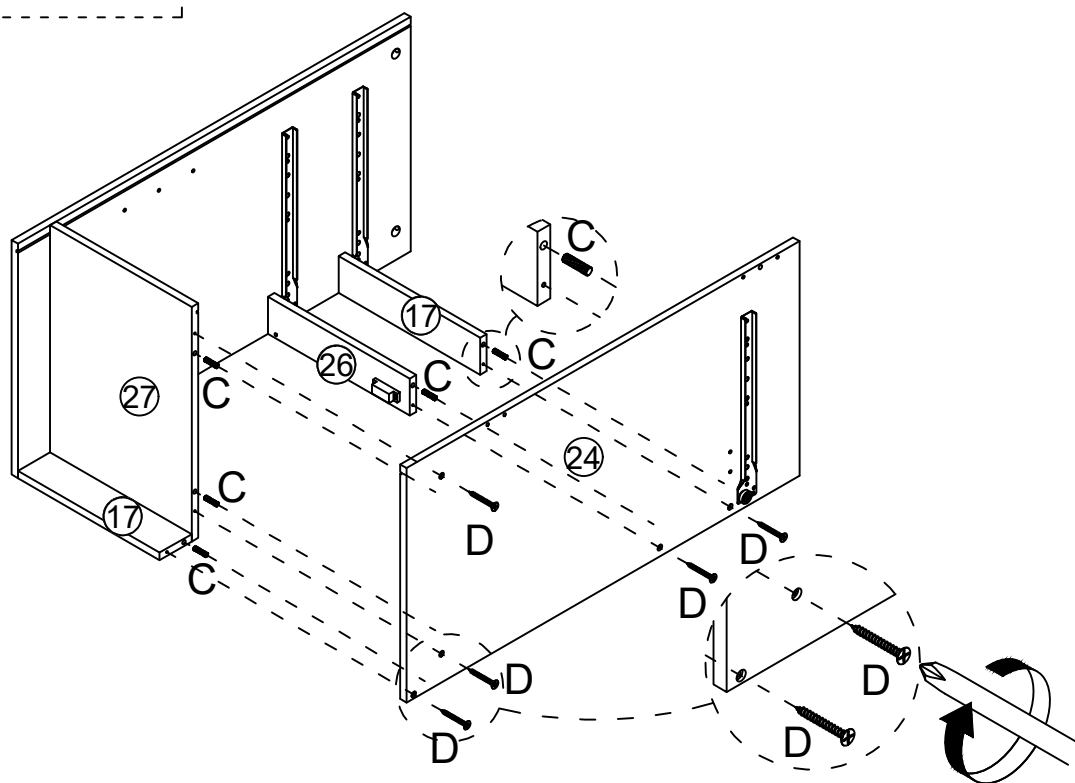

08


C x5

D x5

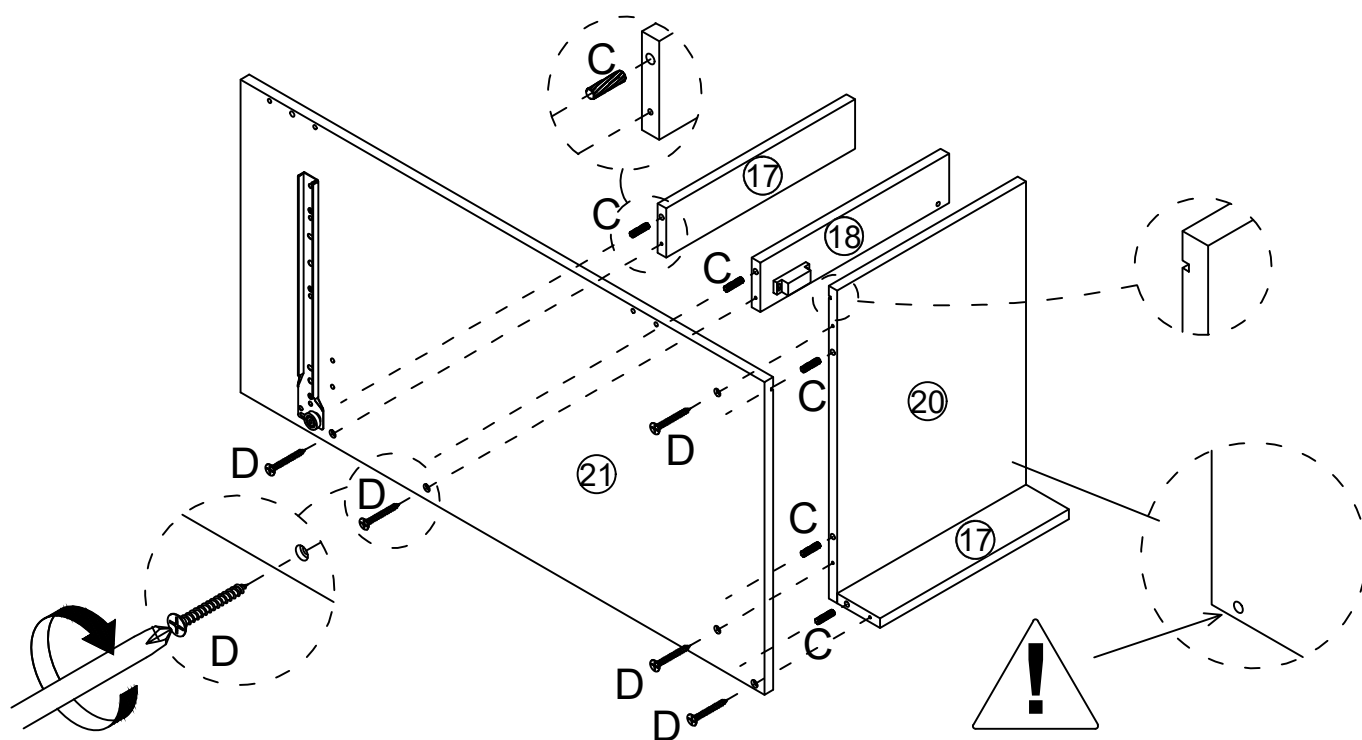


C x5

D x5

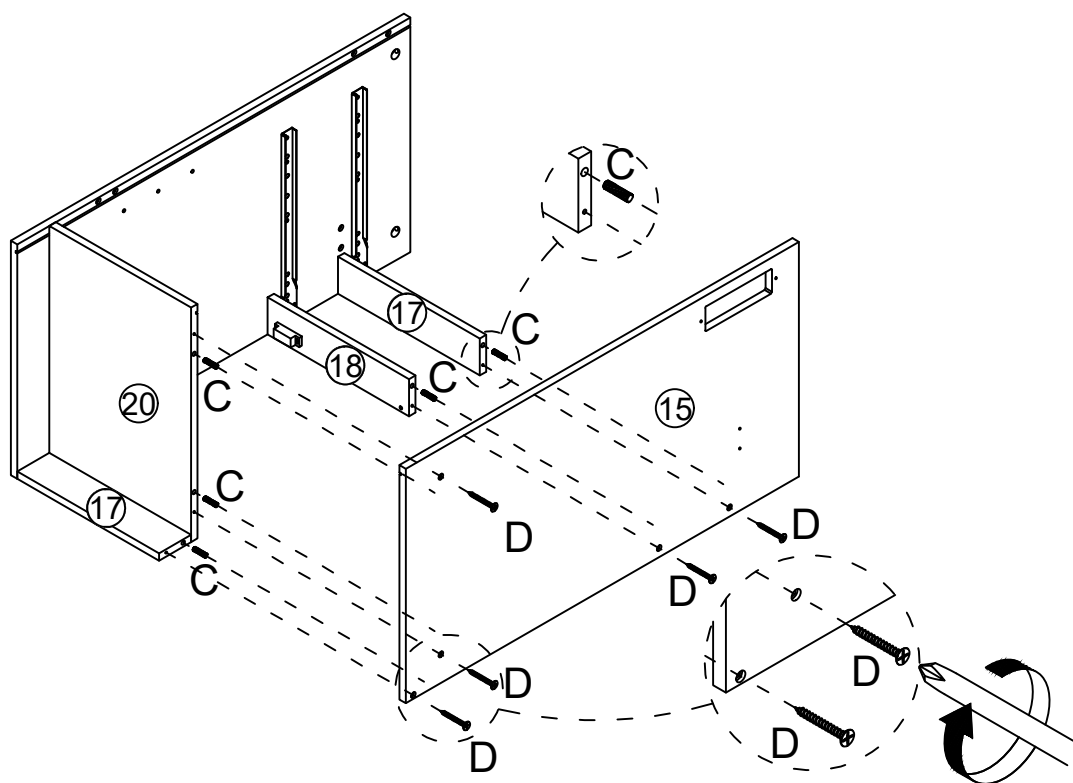

C x1


D x6

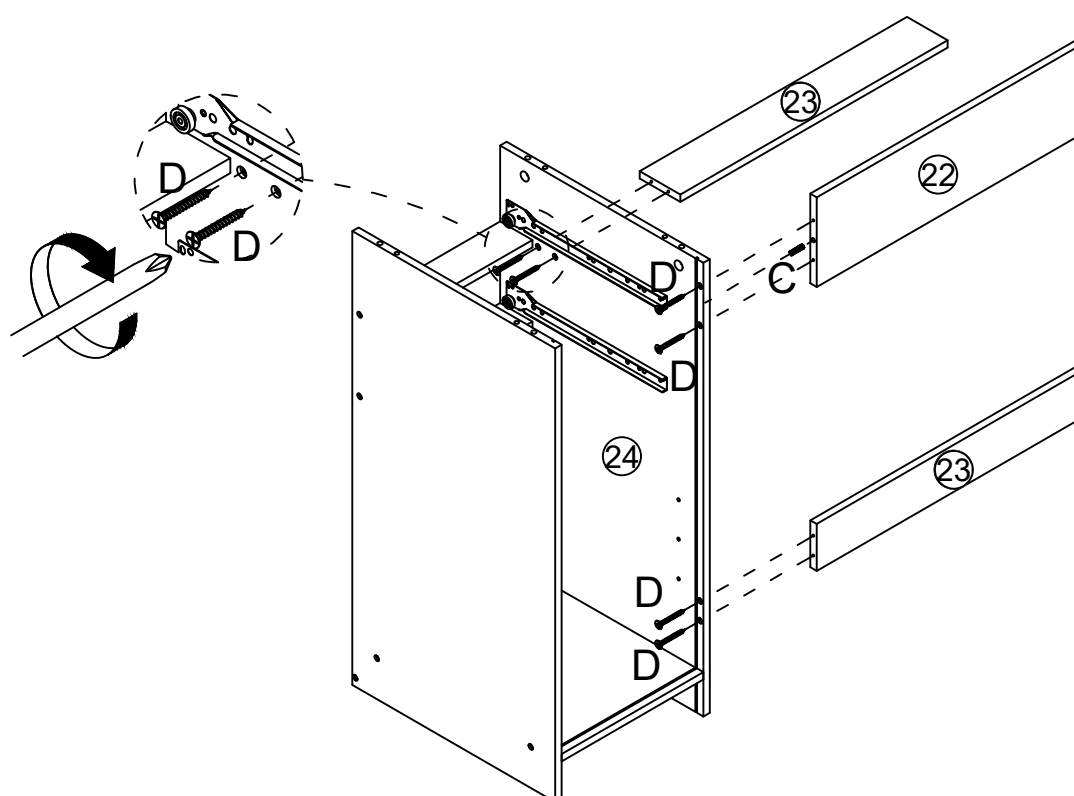


C x1





D x6

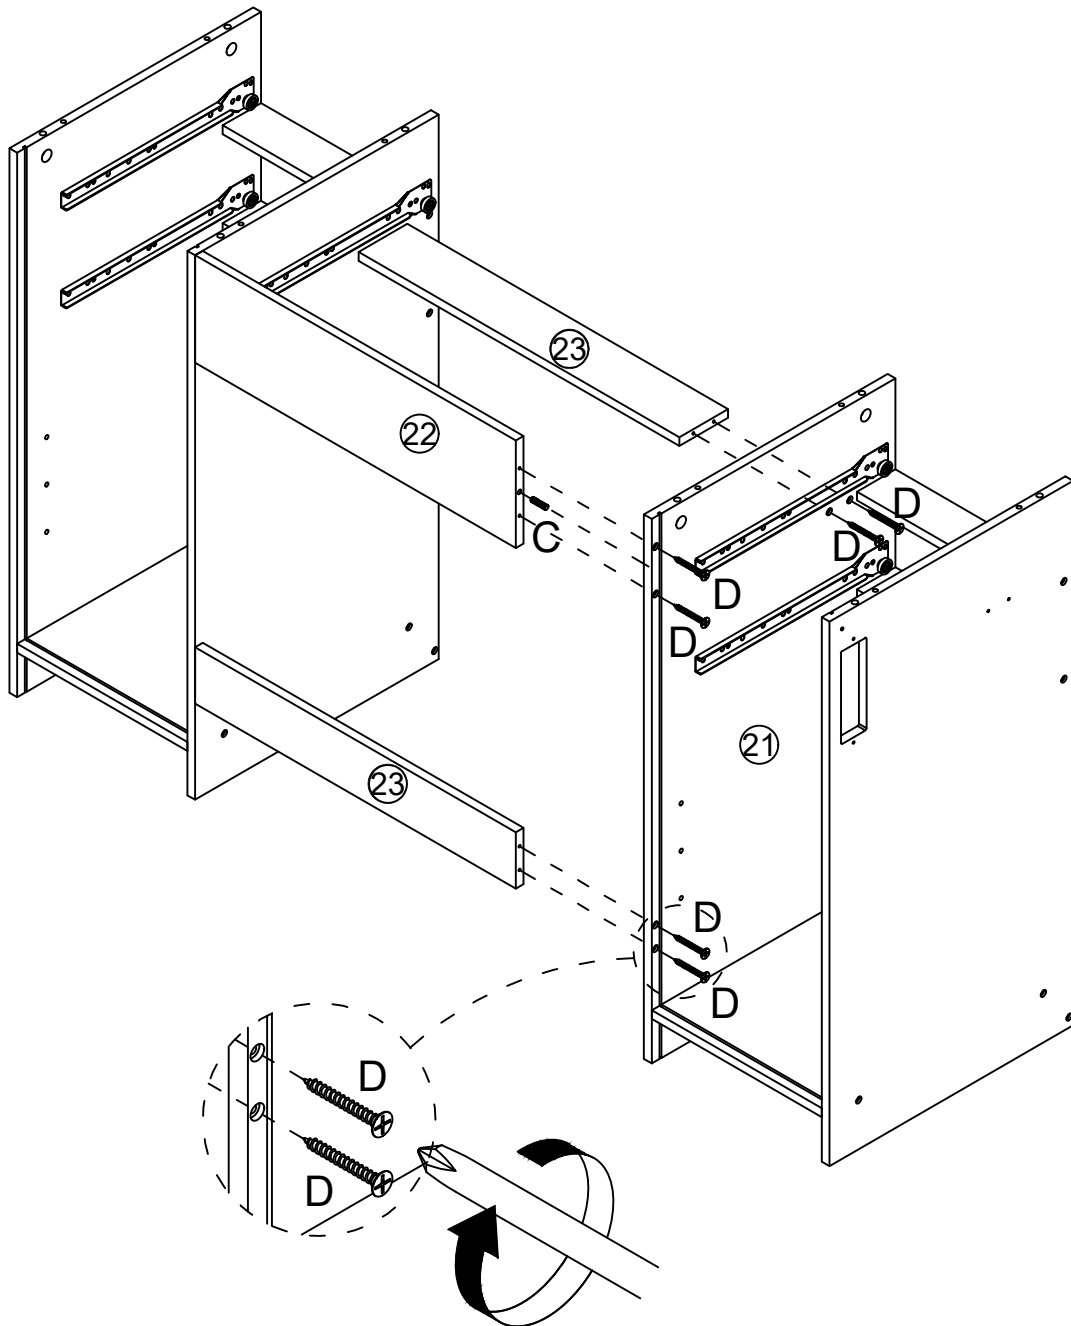



D x4

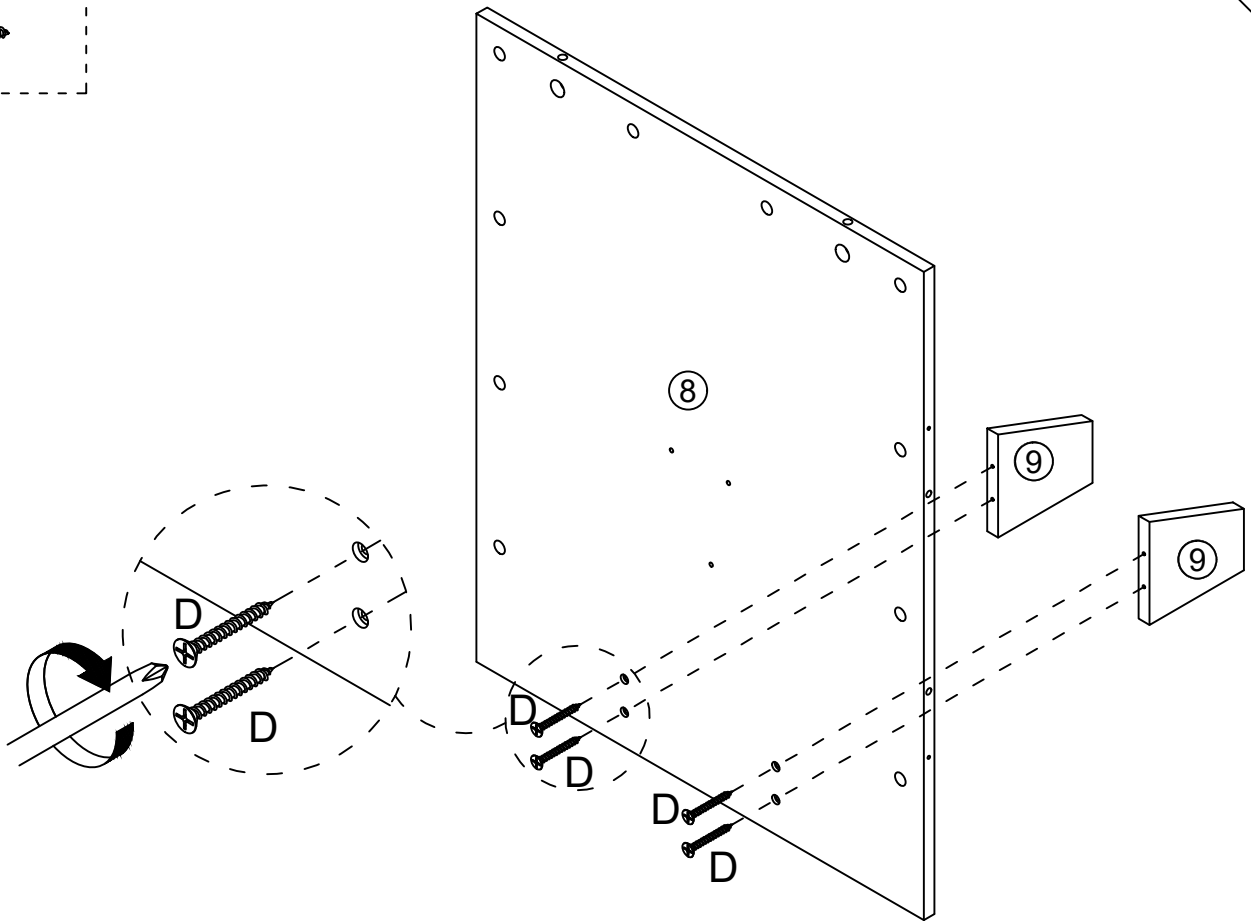

A x2

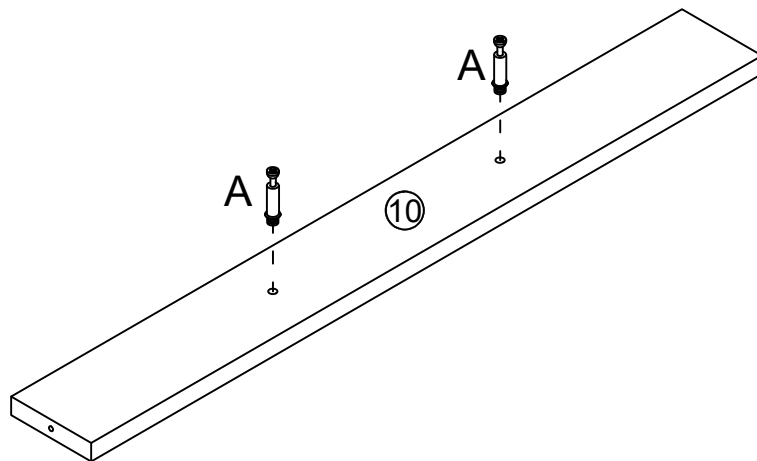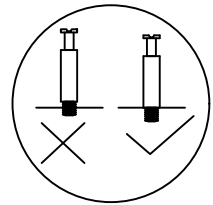




B x2

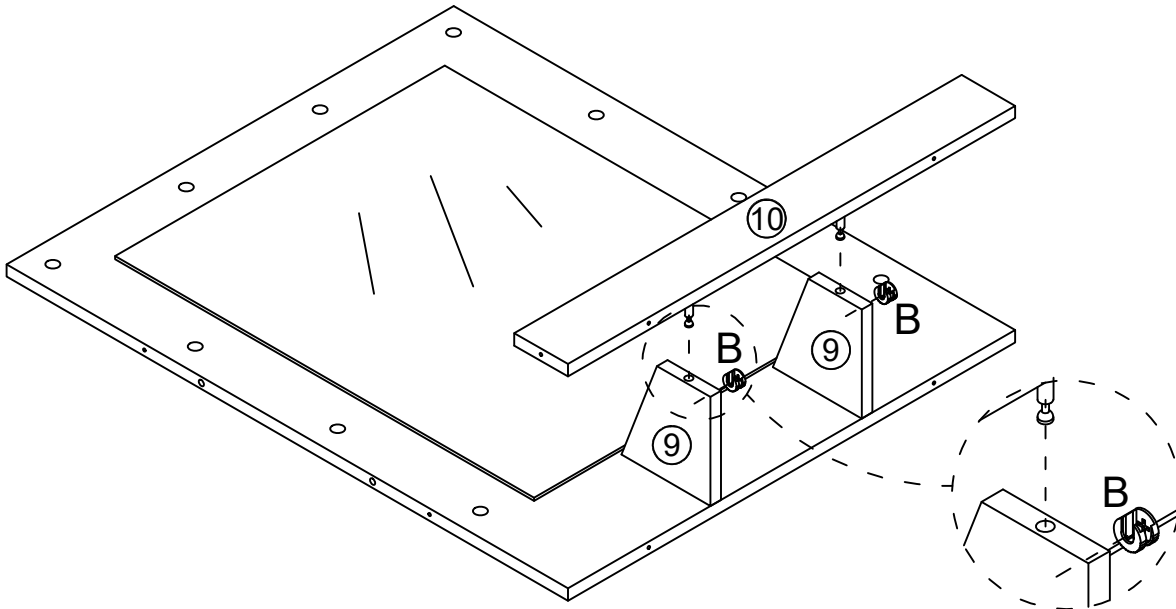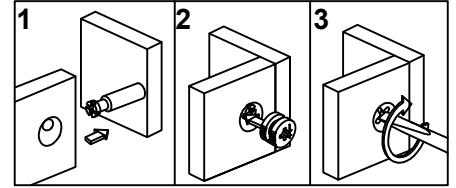


C x4

D x6

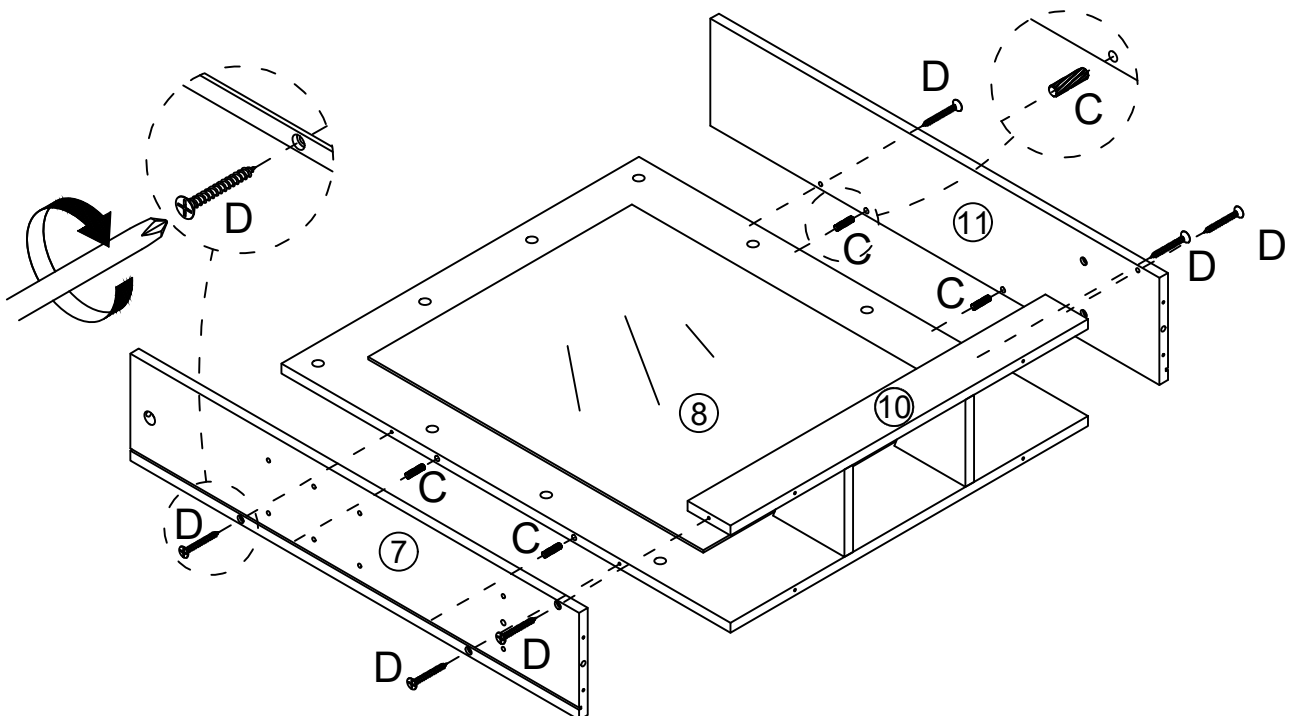

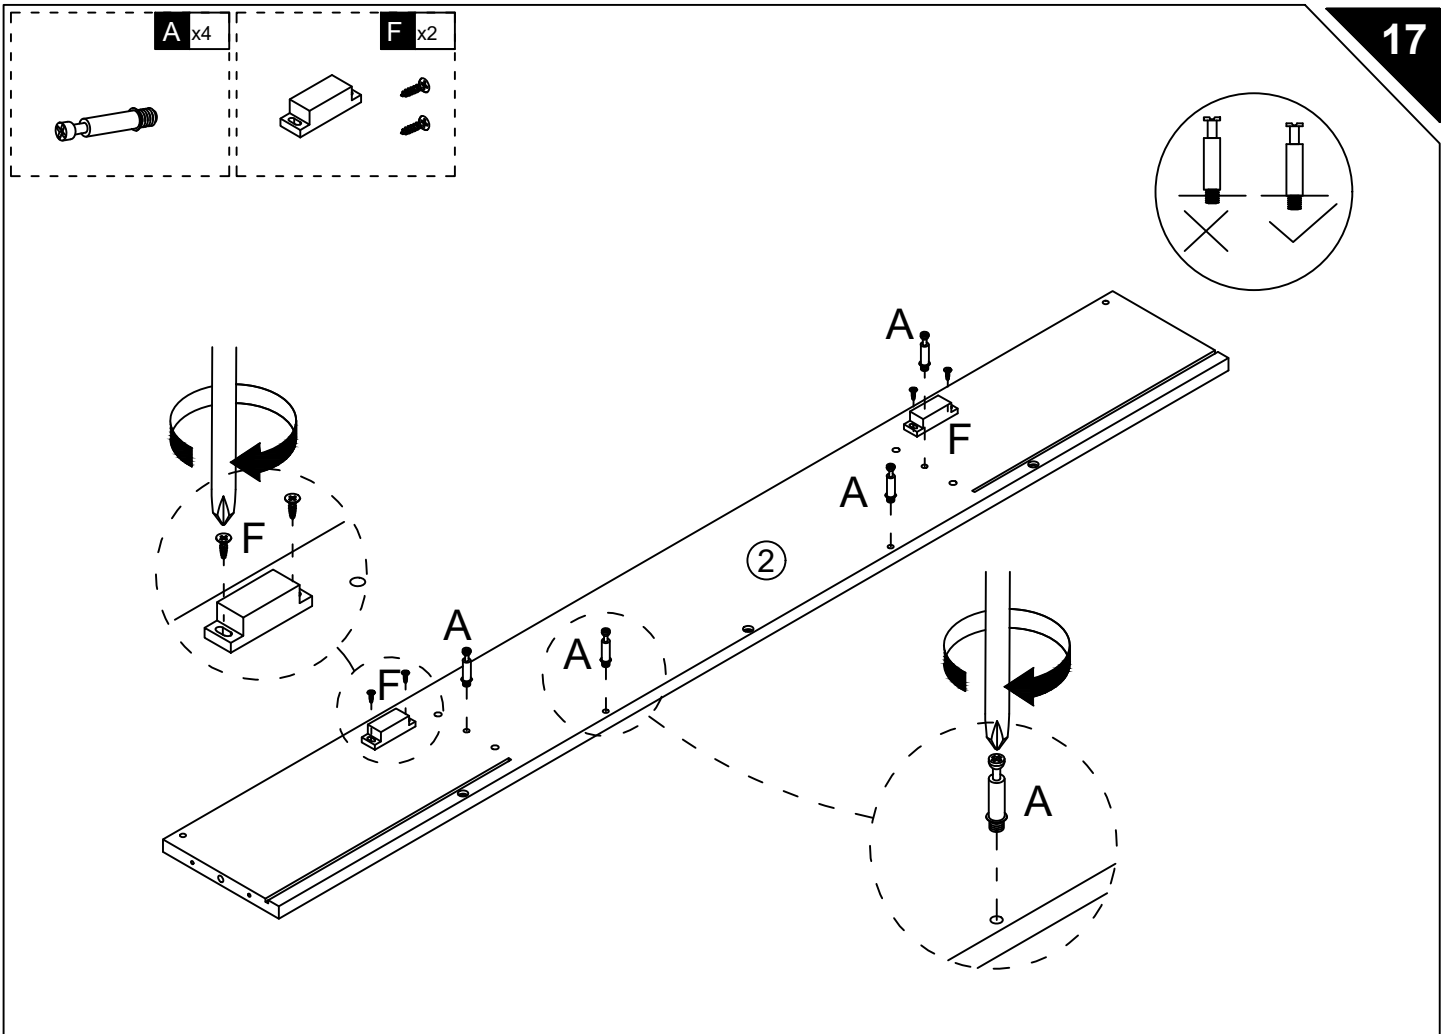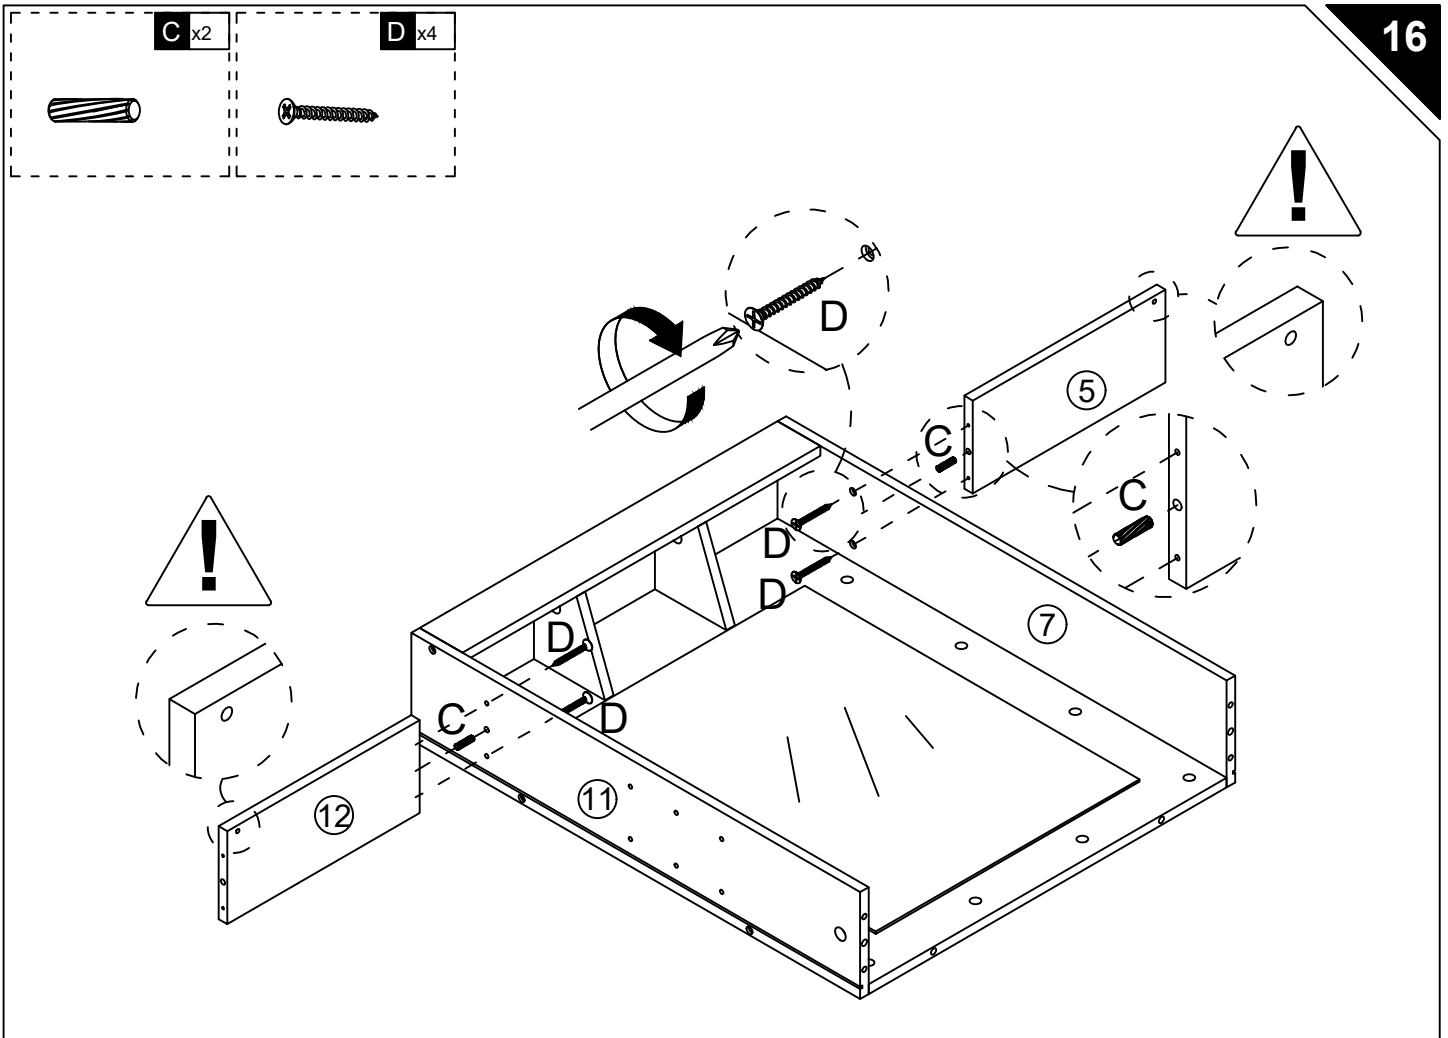


D x3

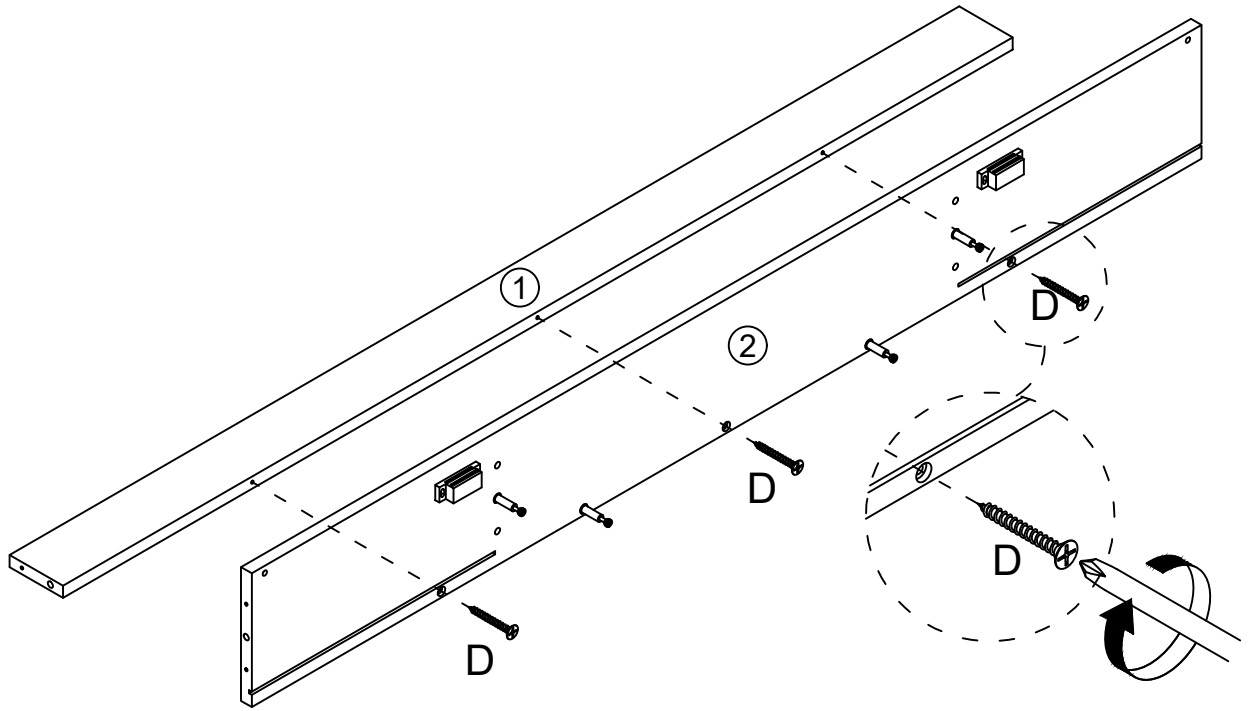


B x2

C x4

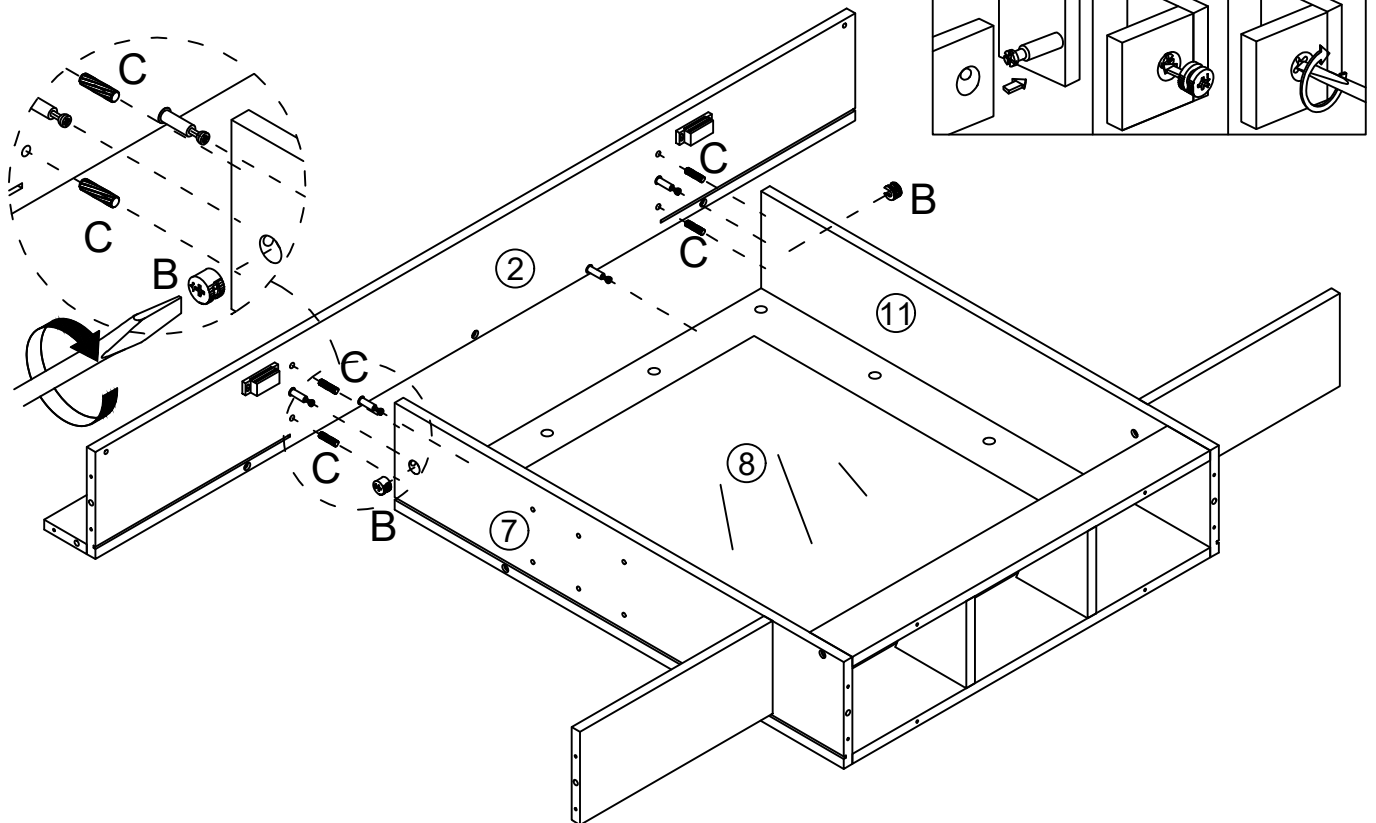


C x3

D x5

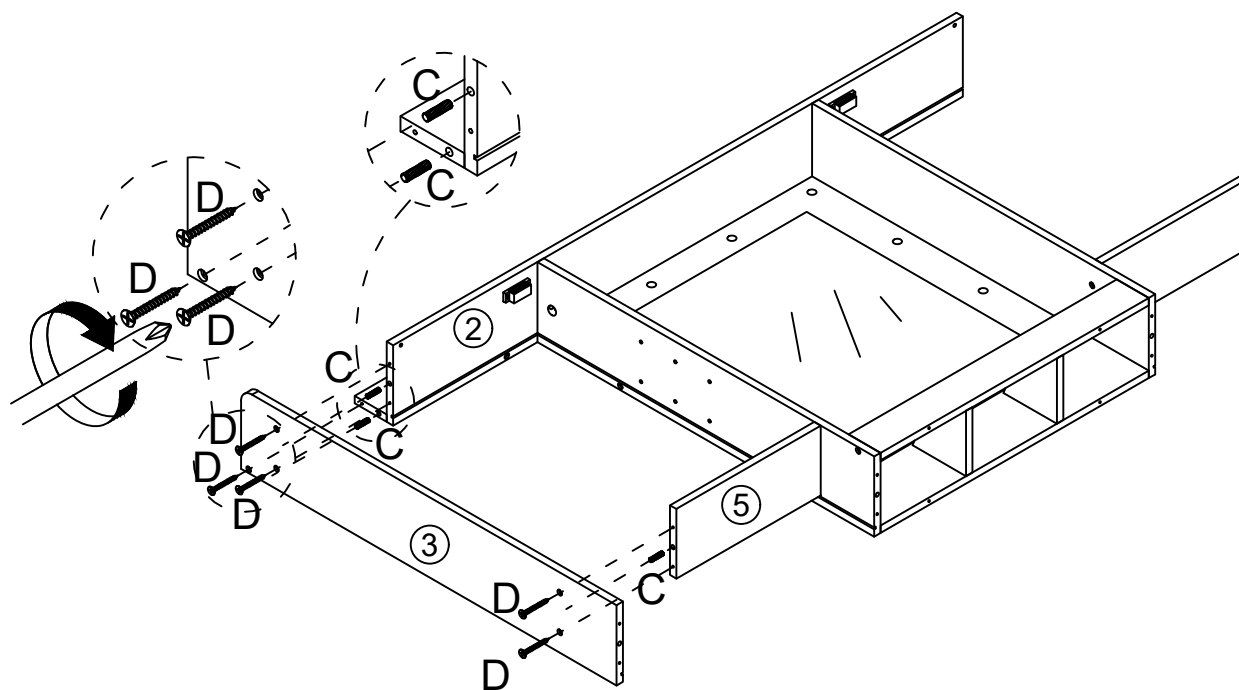


C x3


D x5

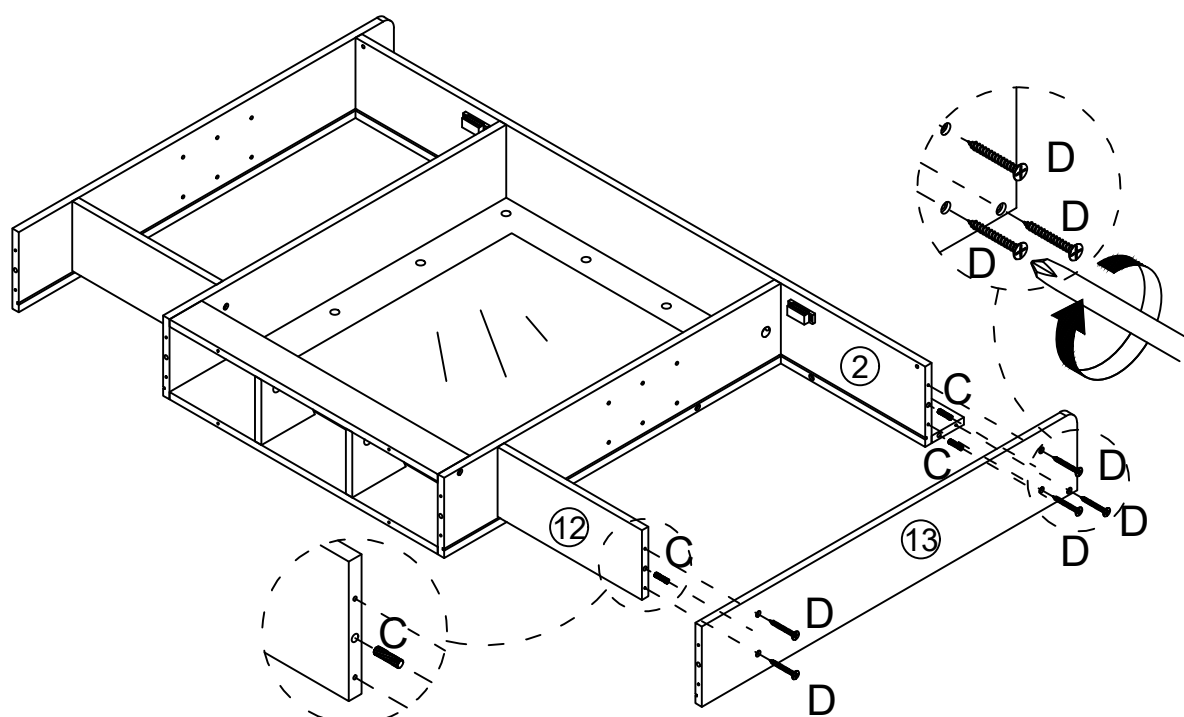


C x4

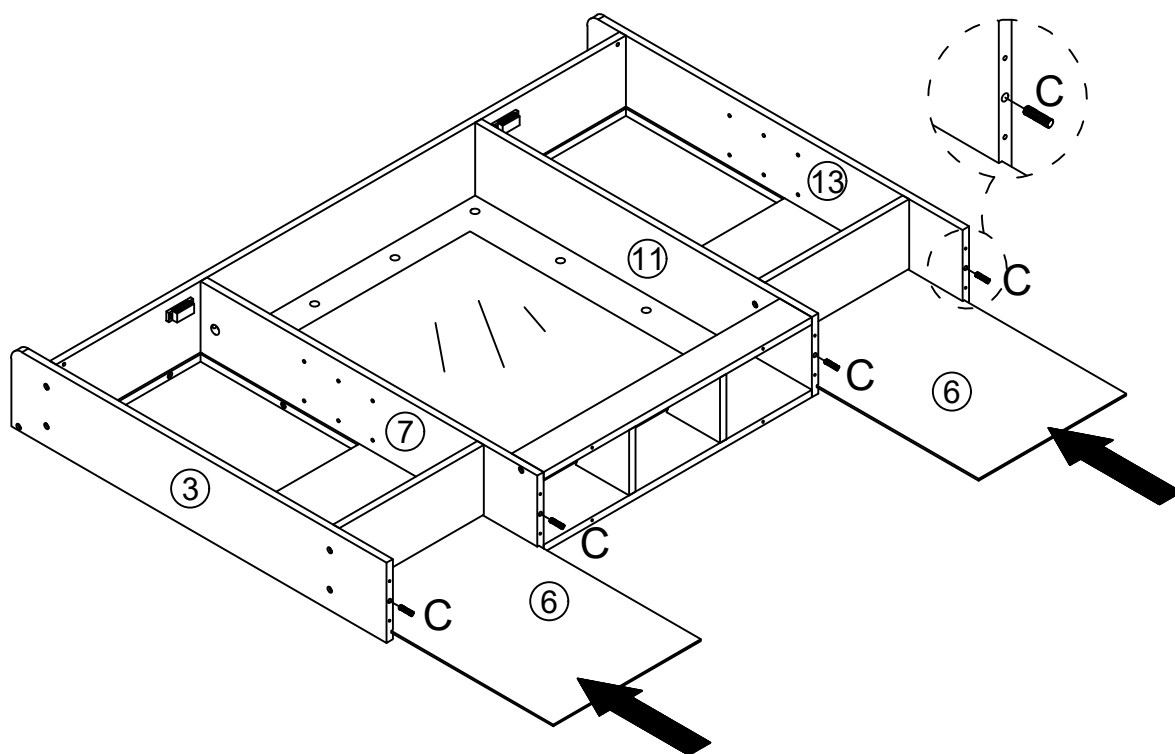






A x8

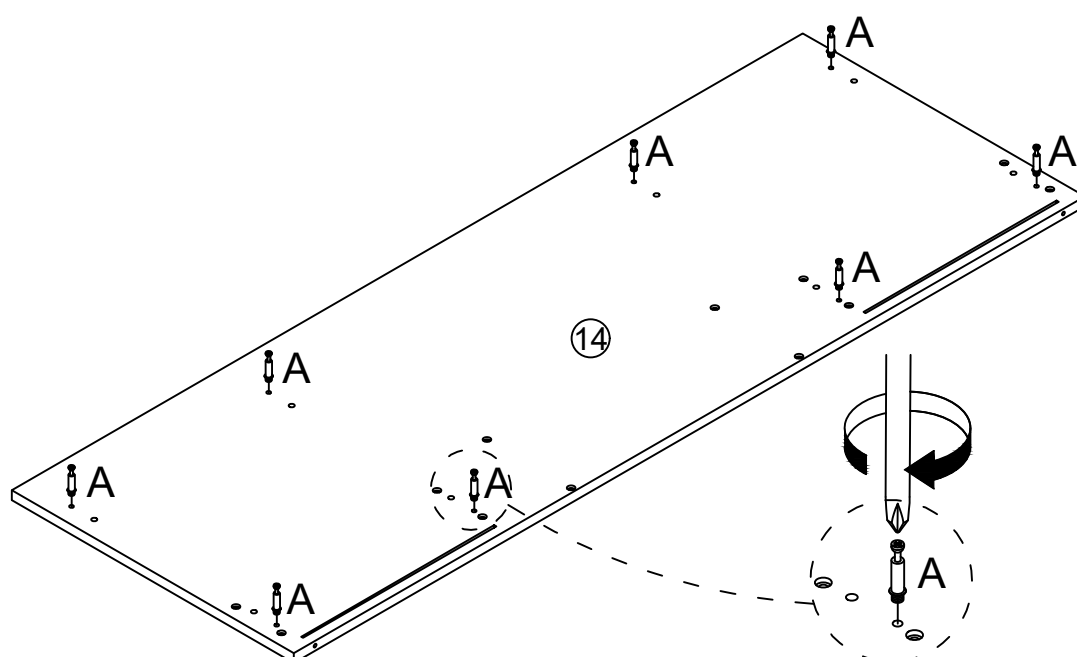



D x12


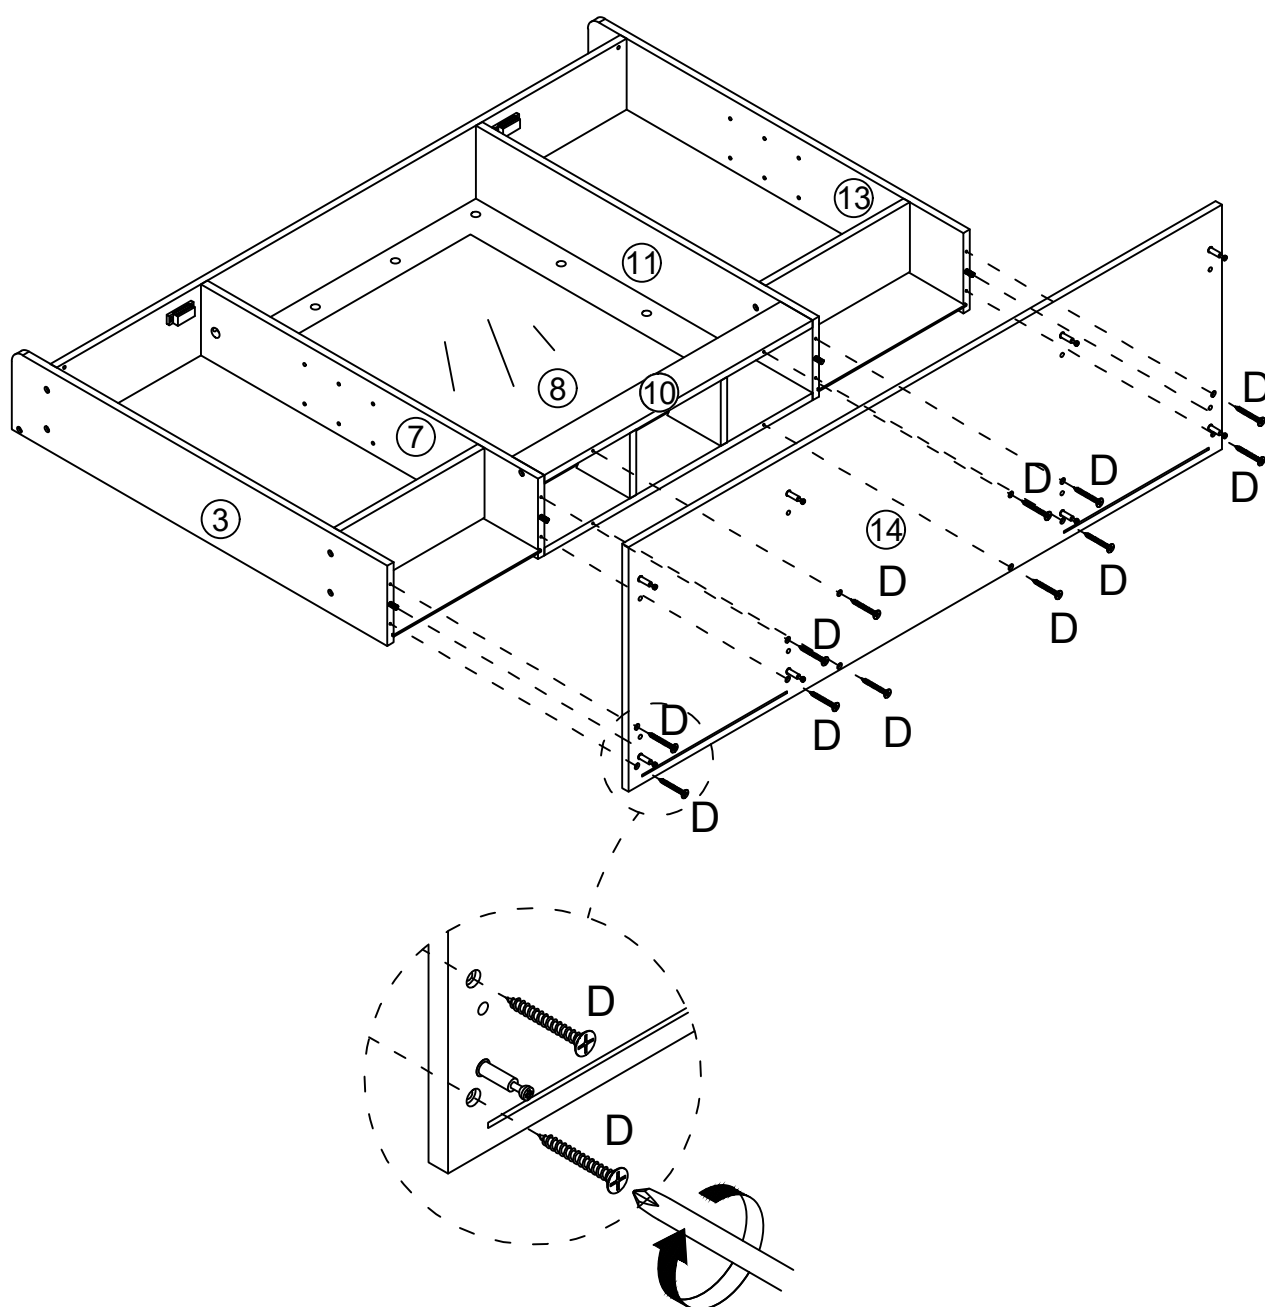


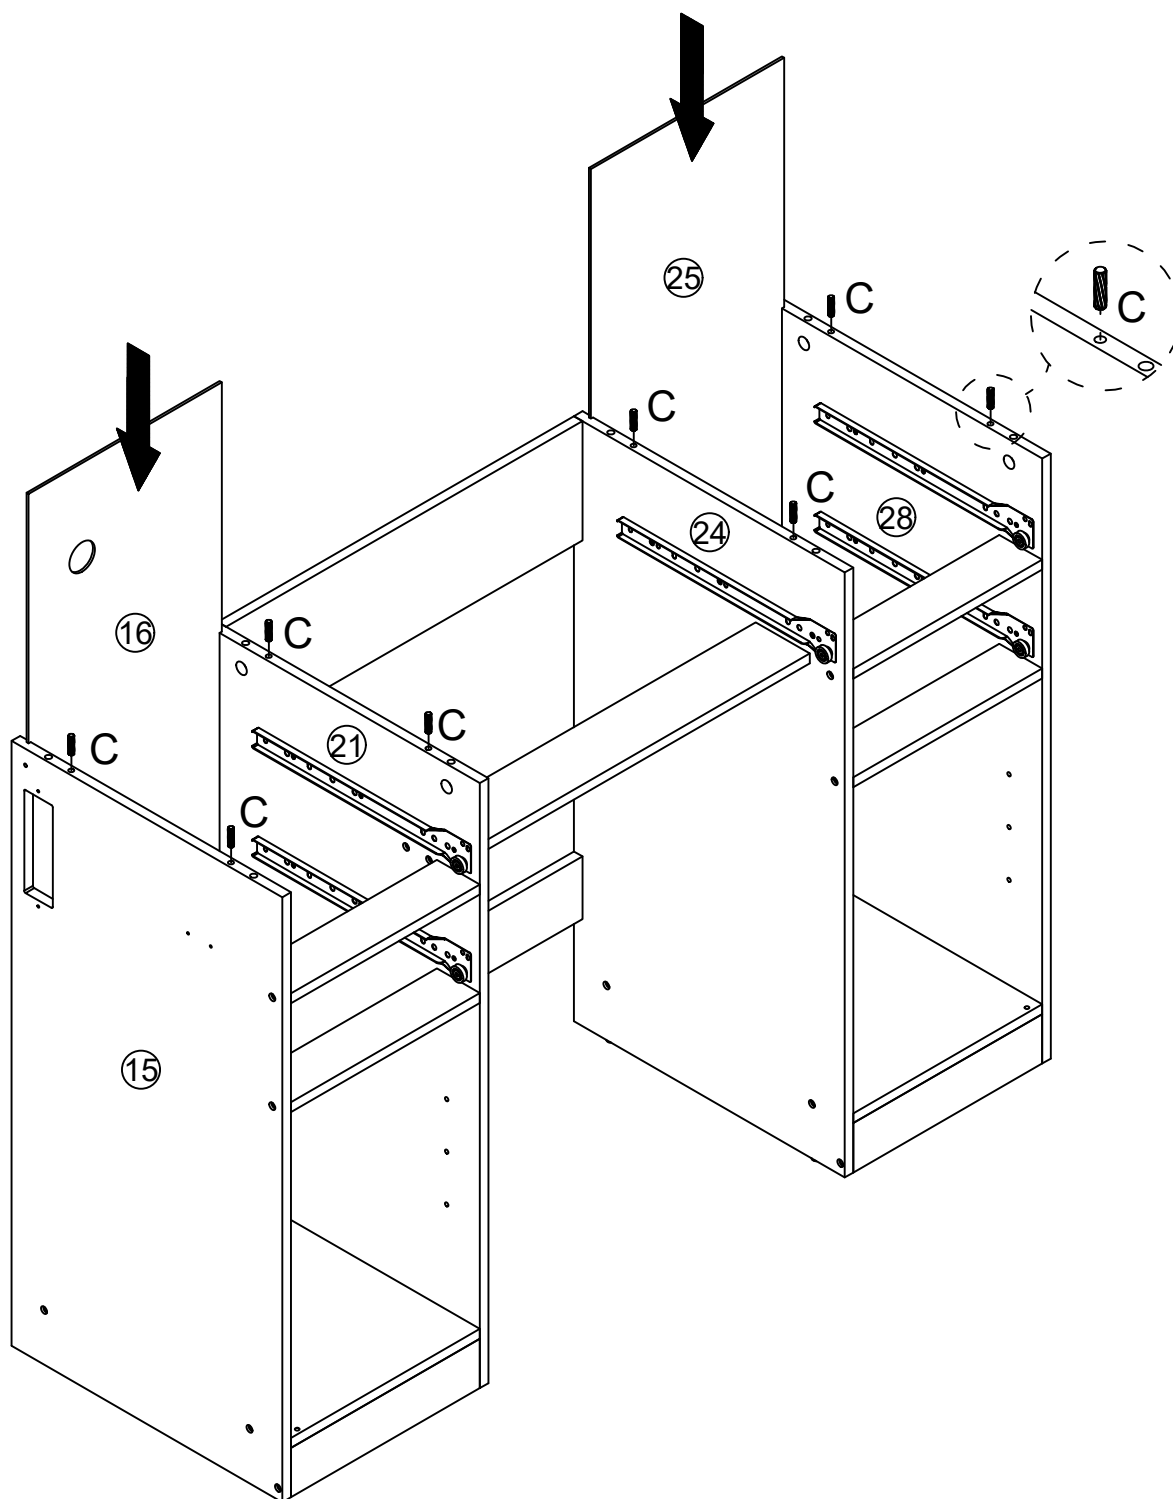

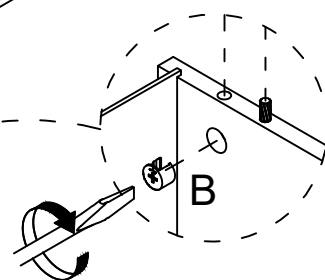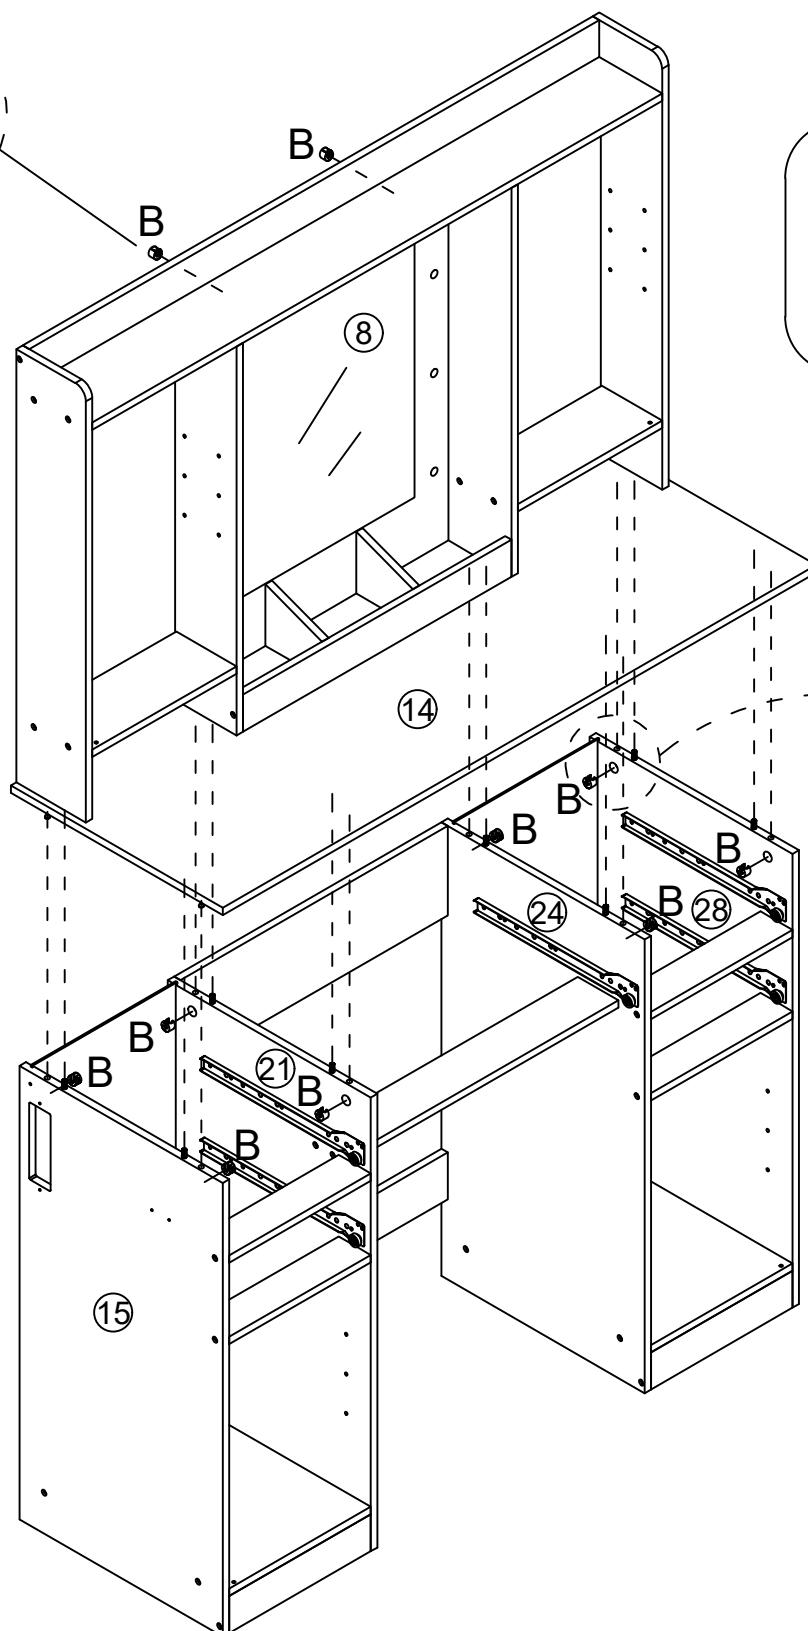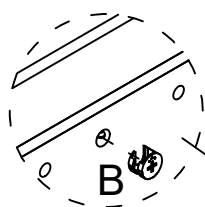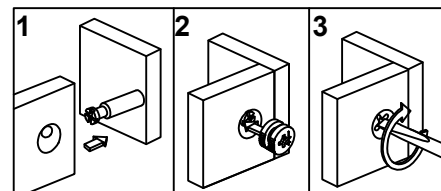


H x16

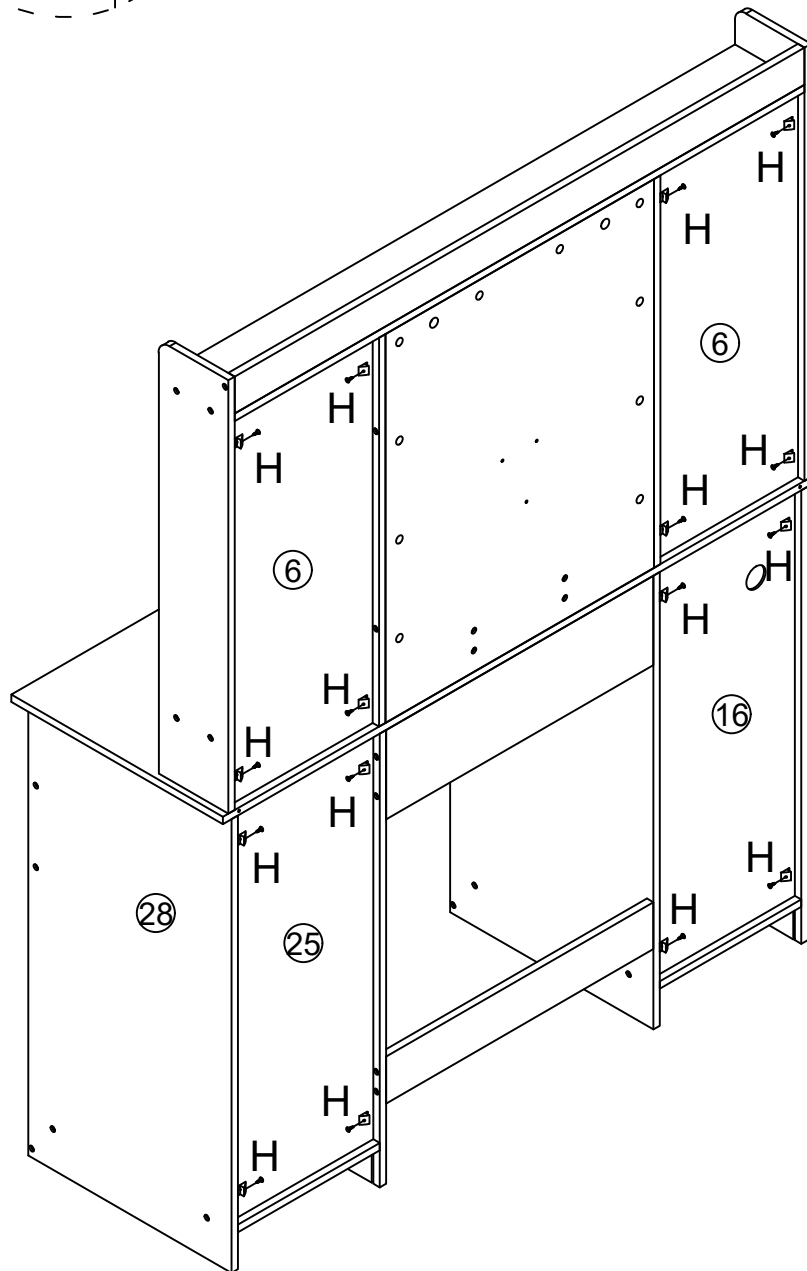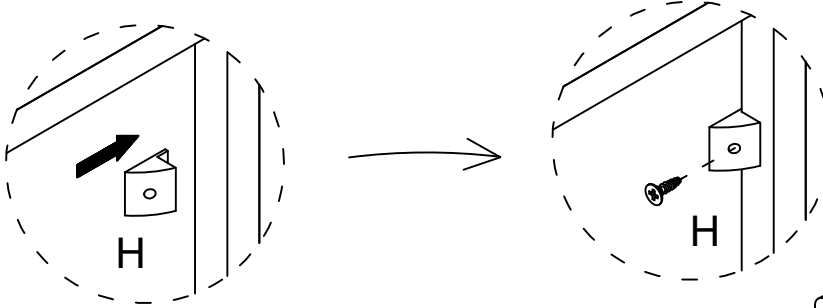


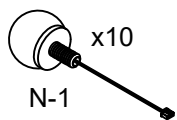


N x1

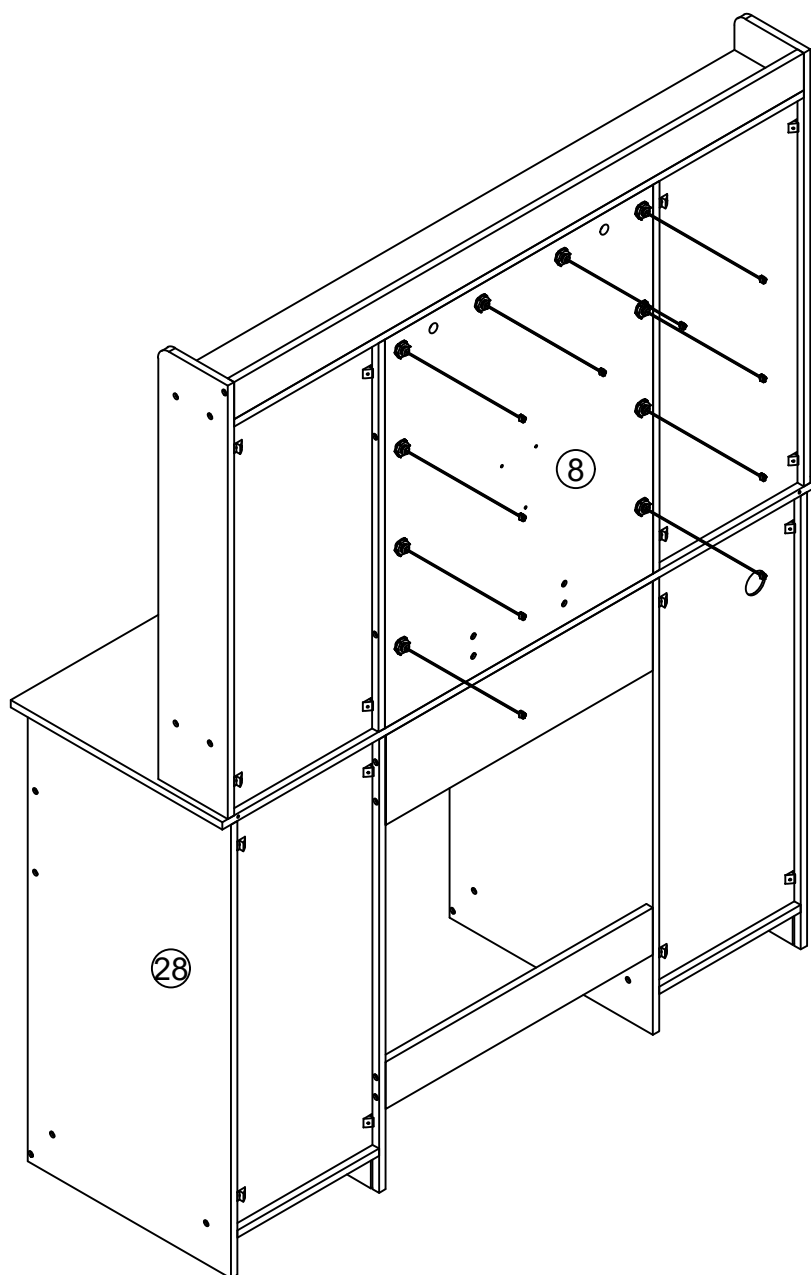


(1)






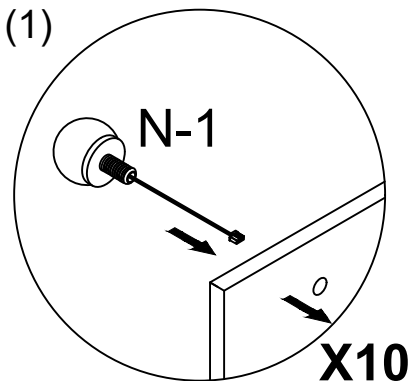




(2)

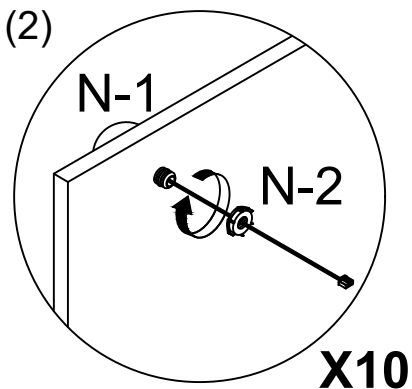


(3)

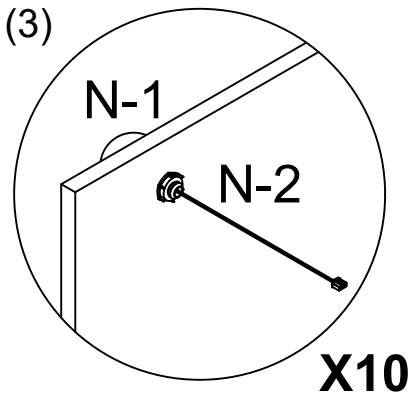


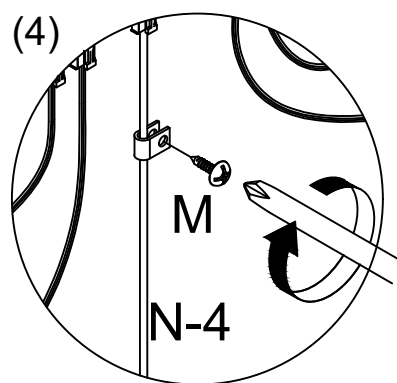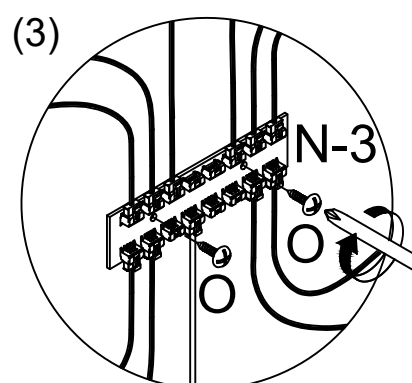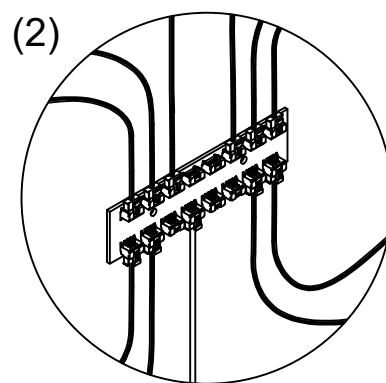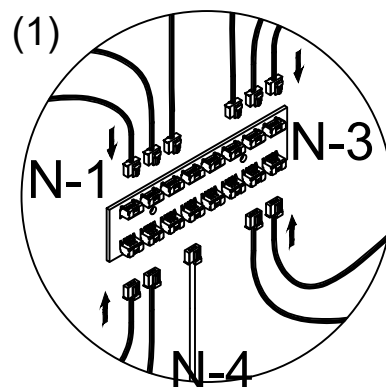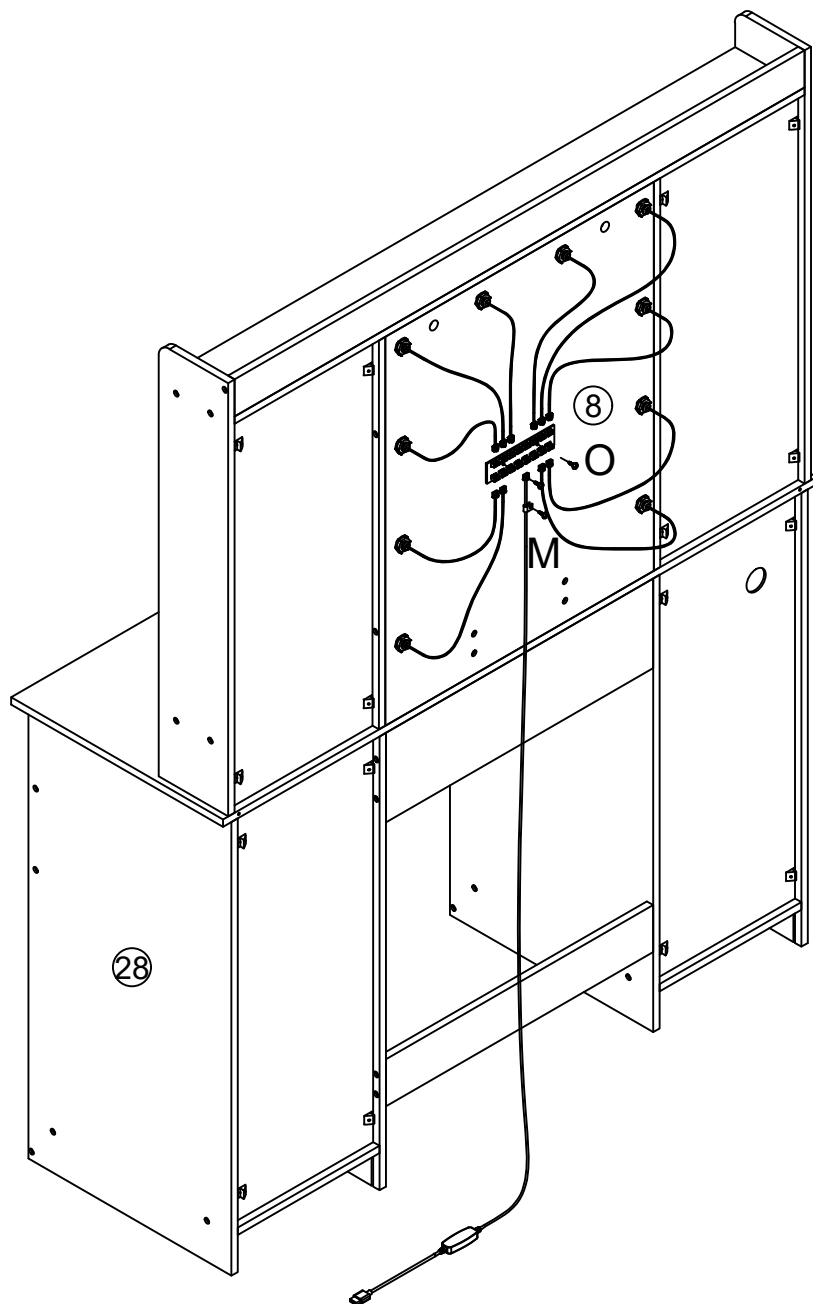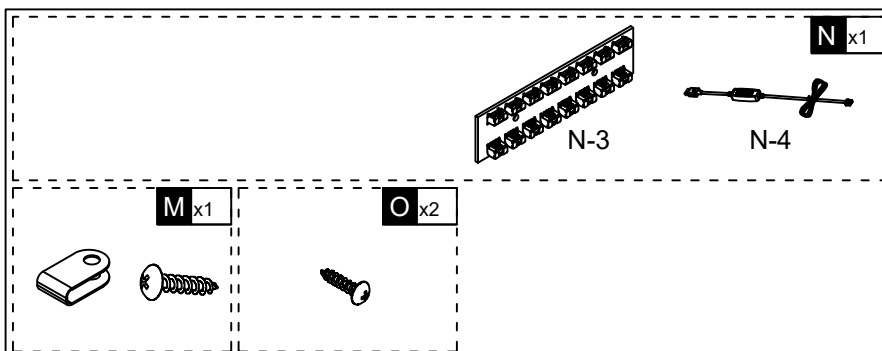

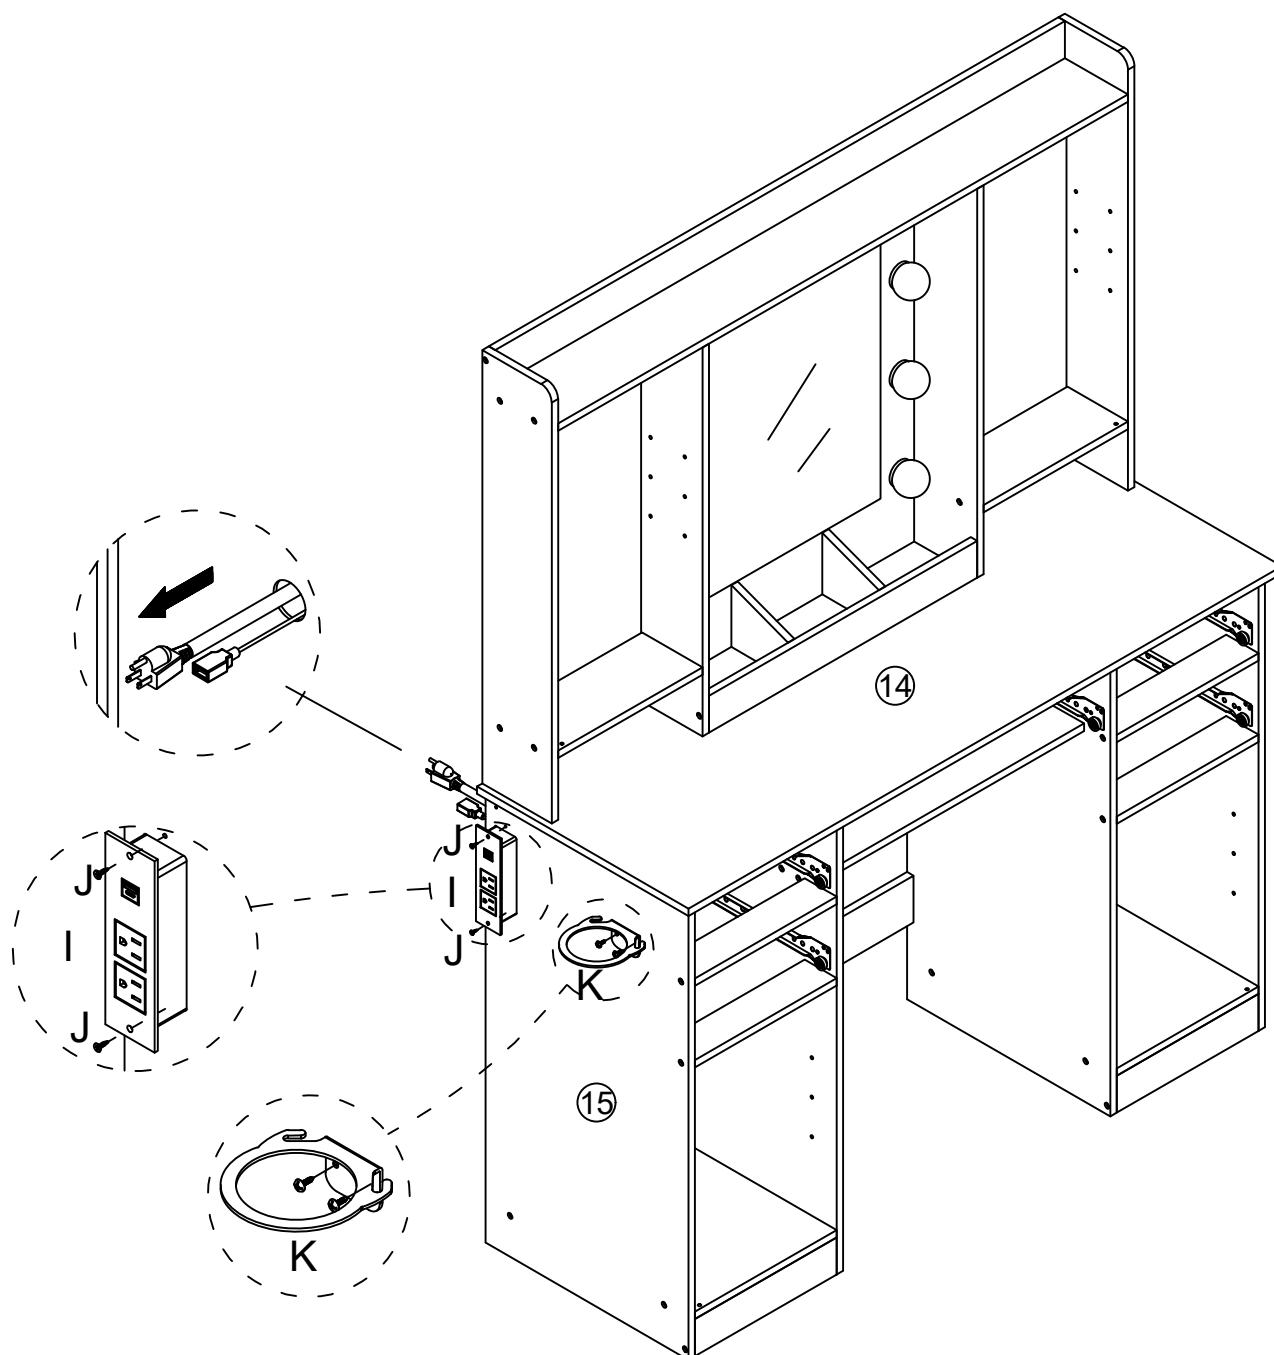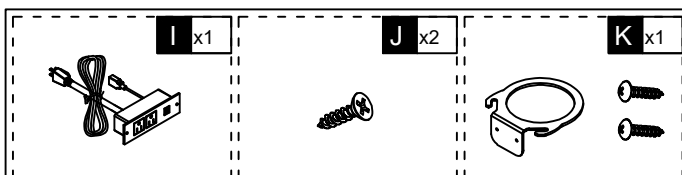


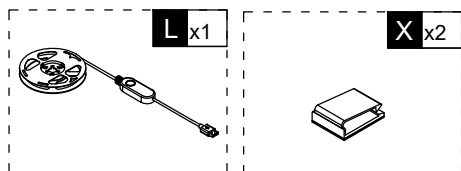


- (1) Firstly, move the cabinet to the designated location as shown in the picture, tear off the adhesive on the back of the accessory (X), and then stick the accessory (X) to the front left and right ends of the tabletop of board 1 as shown in the picture, with the opening direction facing outward.

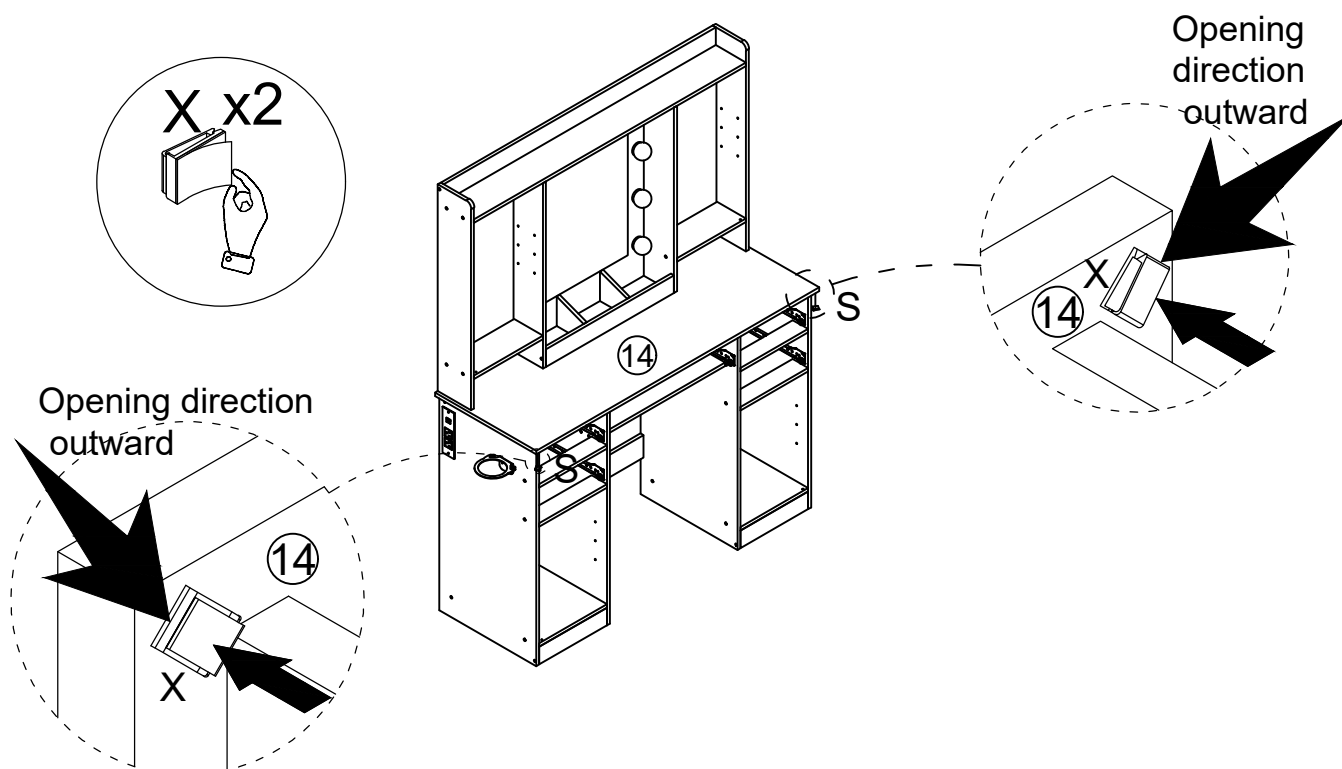


- (2) Please unfold the light strip (L), and then peel off a small piece of adhesive from the back of the "a" and "d" ends in the middle of the light strip.

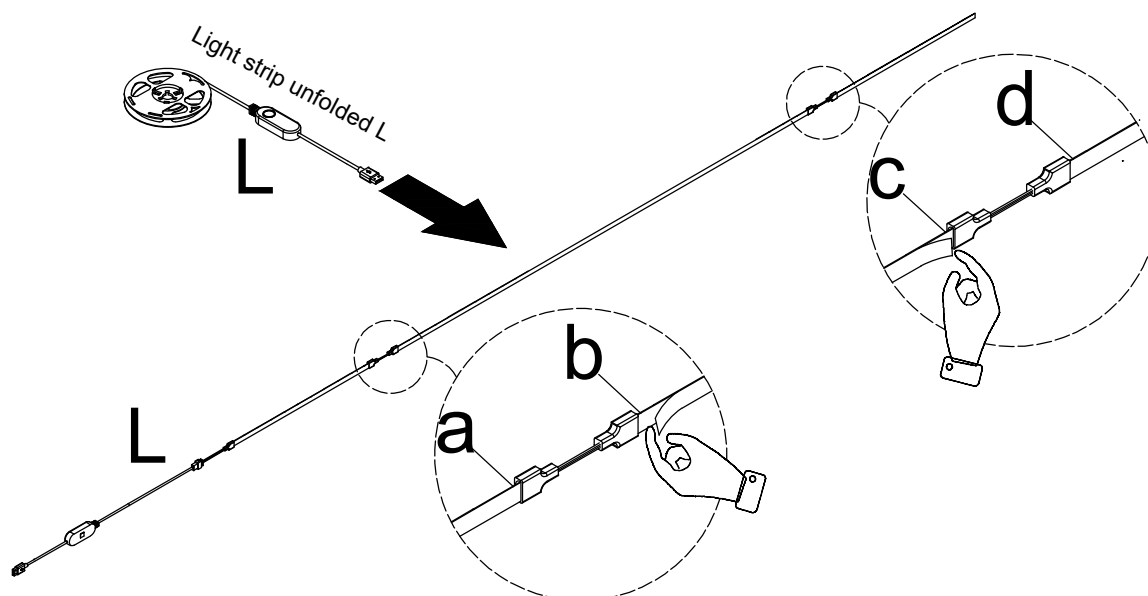


- (3) Please place the light wire between the "a" and "d" ends on the right side as shown in the diagram into accessory (X), and then peel off the adhesive on the light strip (L) to the left and stick it to accessory (X). When it reaches the left accessory (X), place the light wire between the "c" and "d" ends into accessory (X) as shown in the diagram.

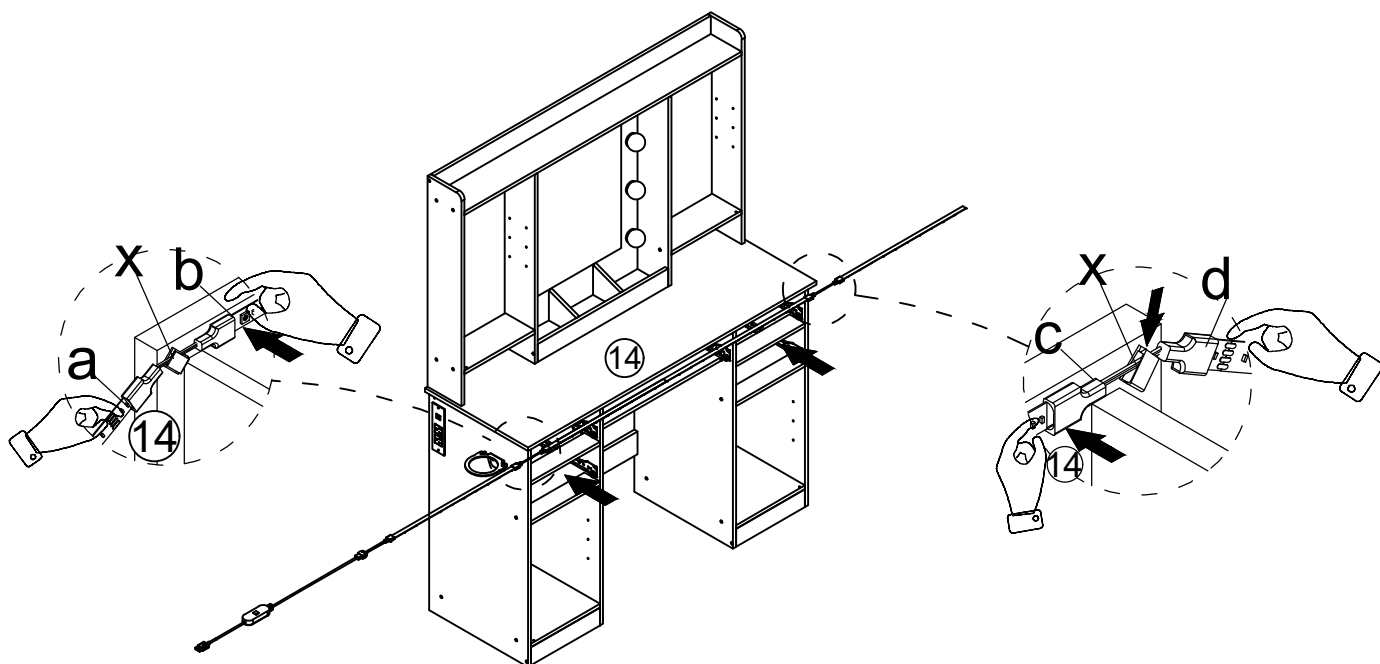


- (4) Finally, tear off the adhesive backing of the left and right light strips and paste the light strip "L" onto the left and right ends of desktop 1

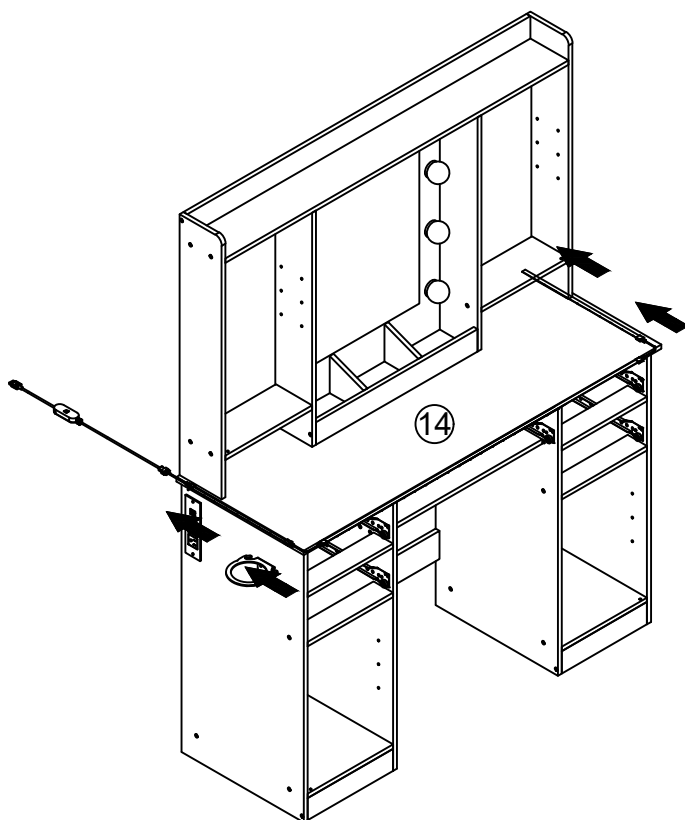

M x1

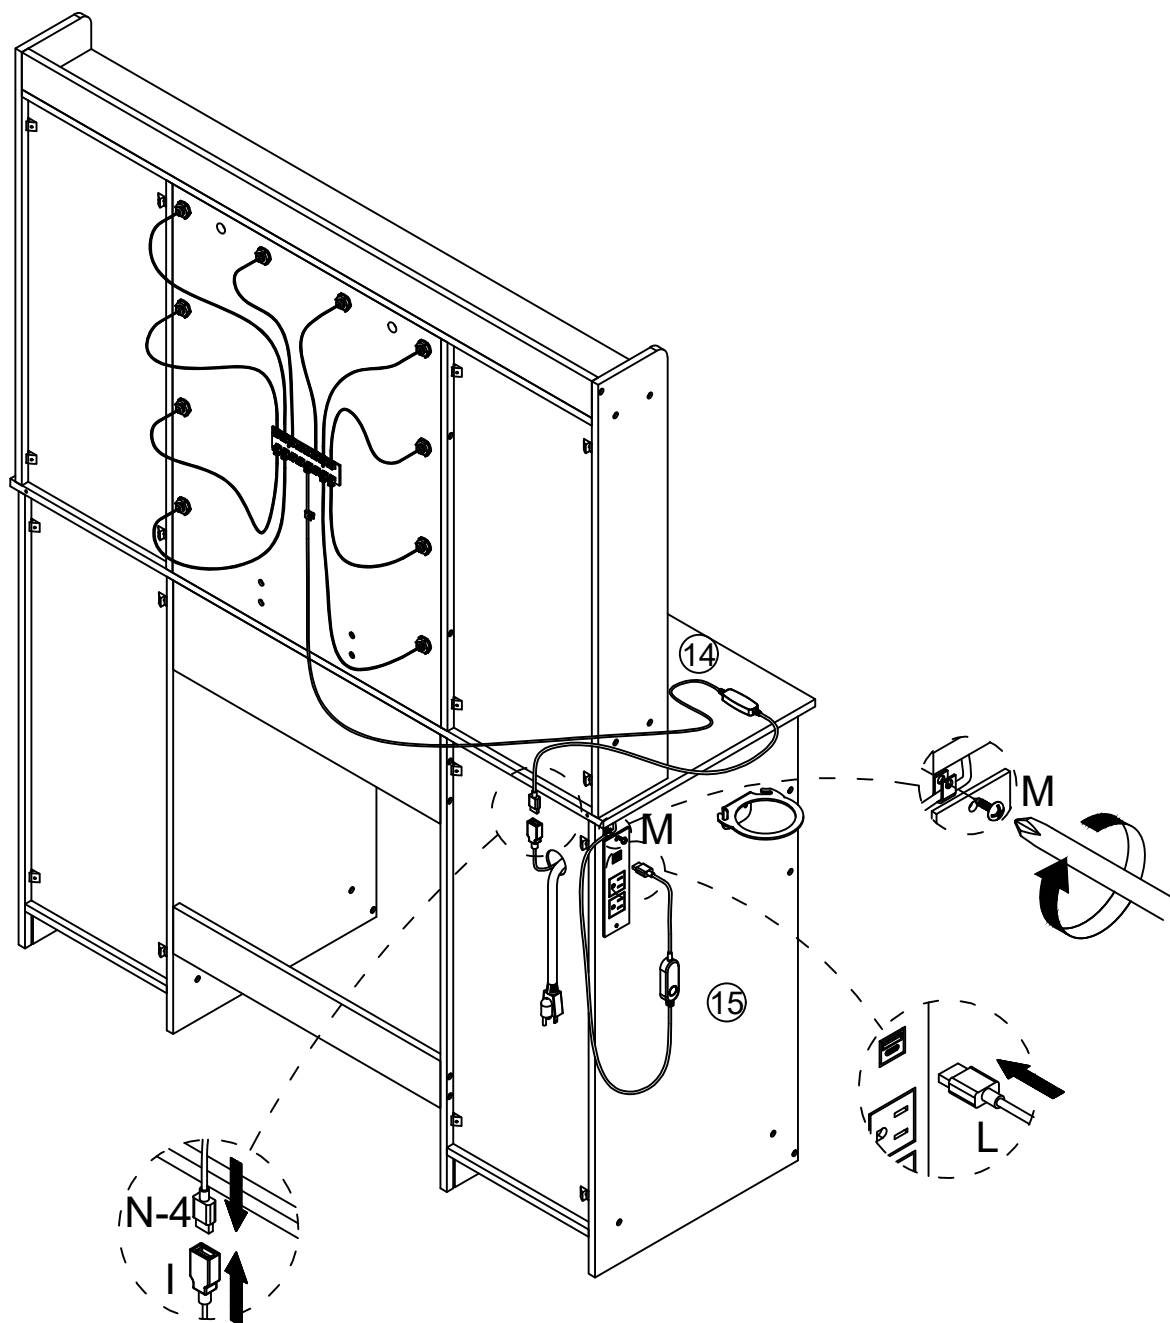

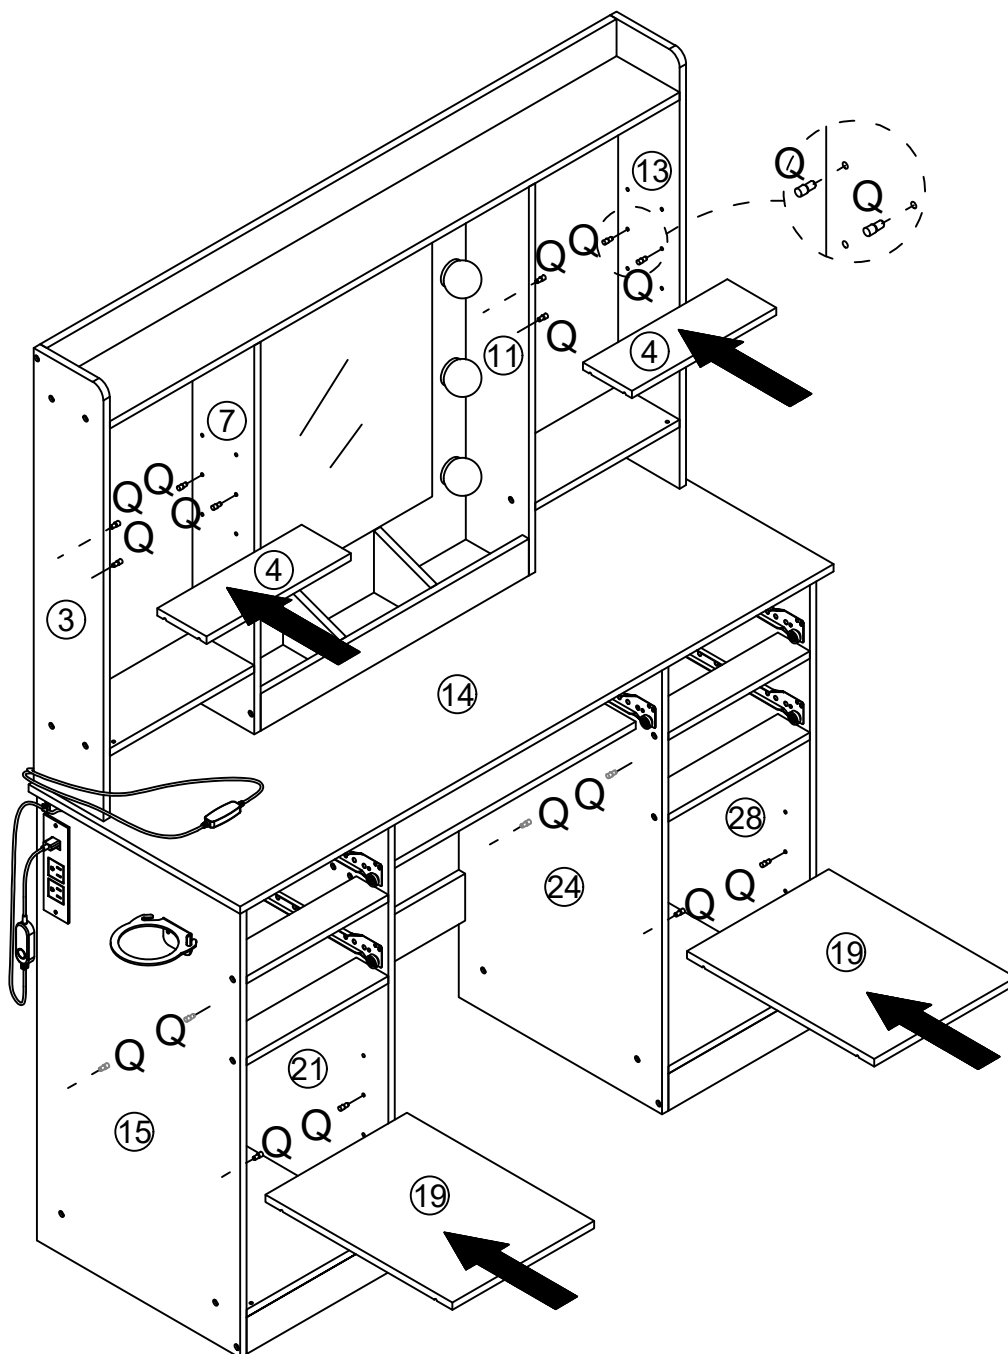


P x8




R x4




S x4

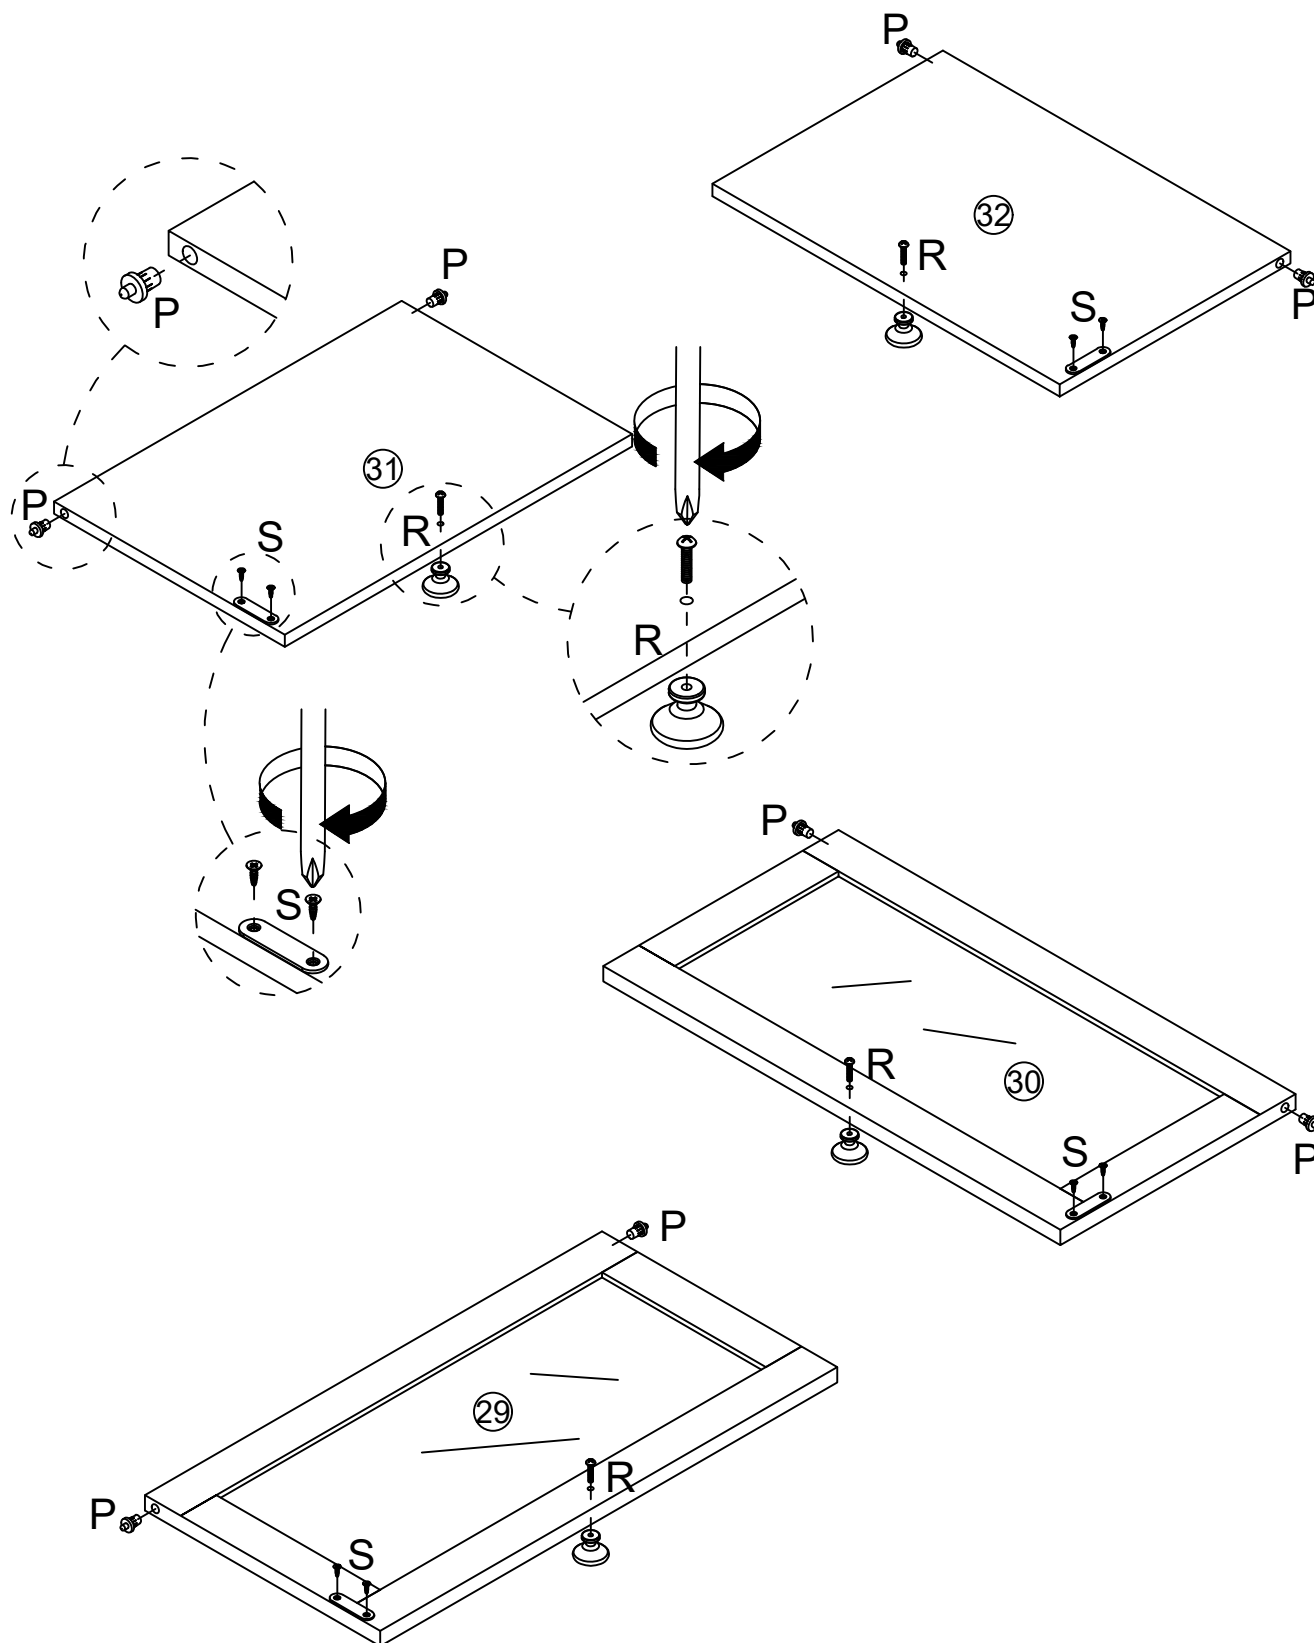

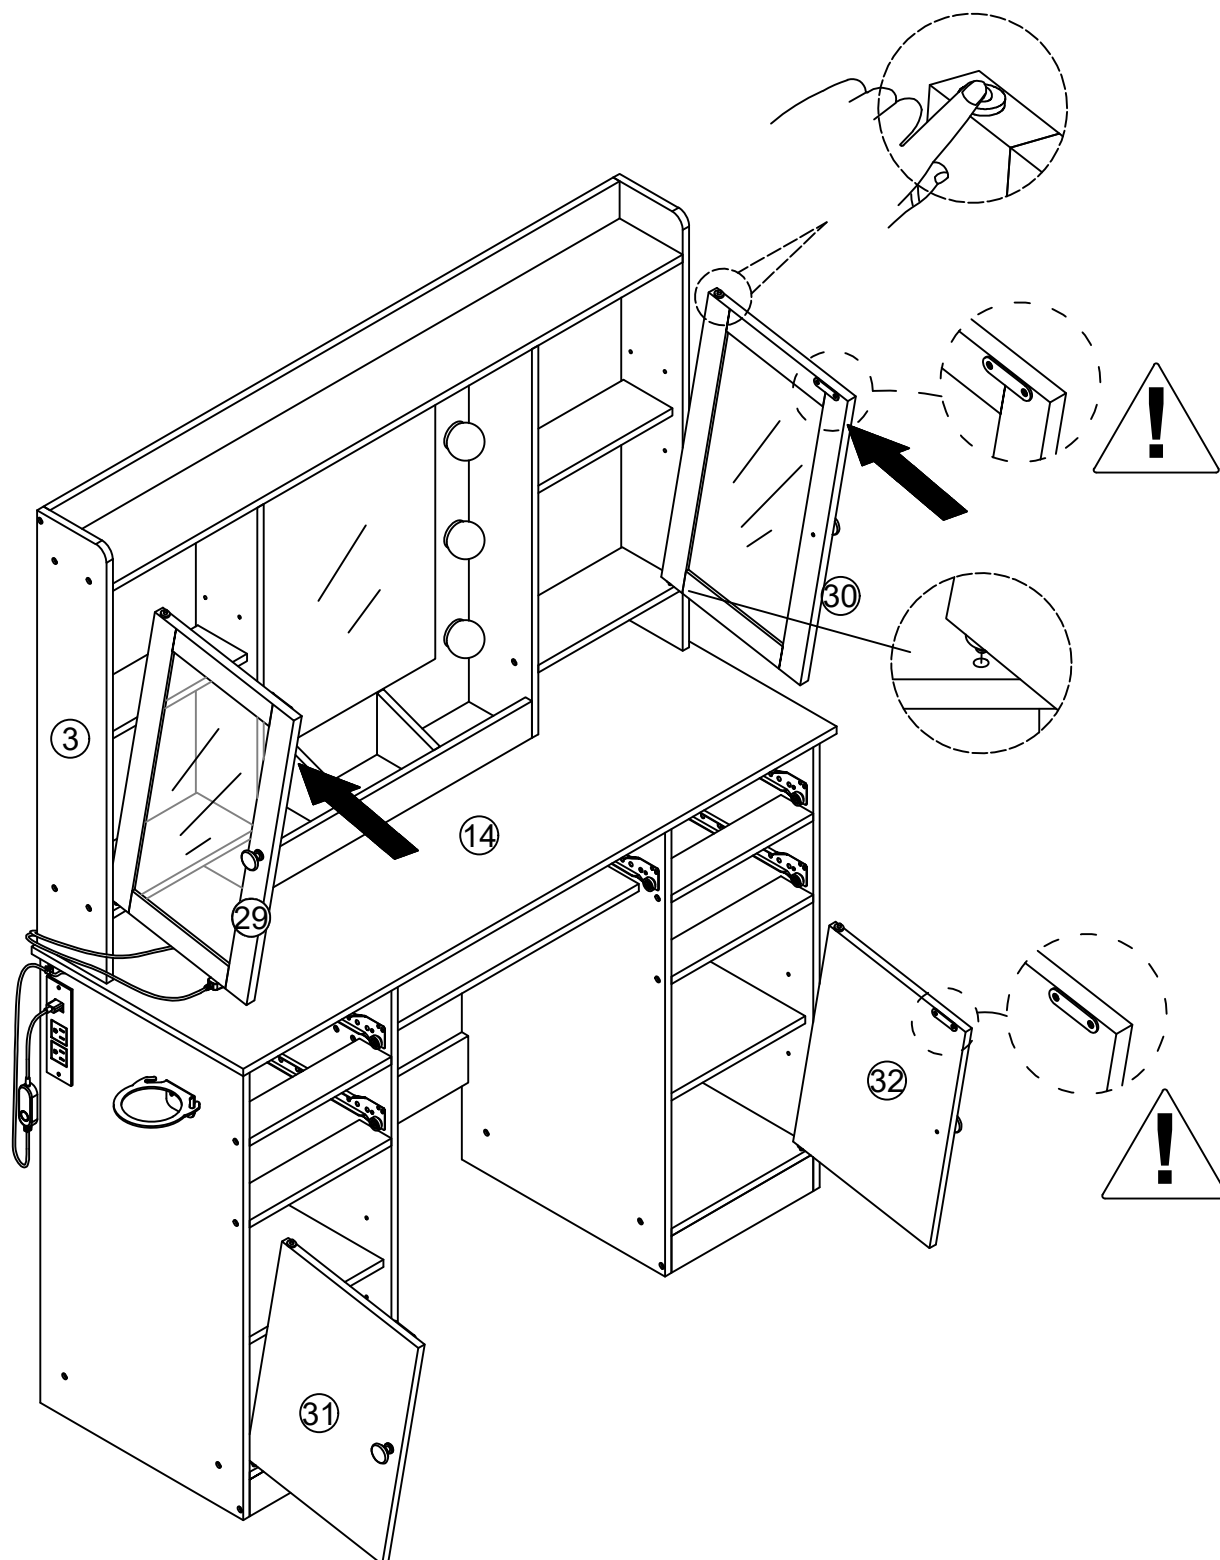


T x2


V x34

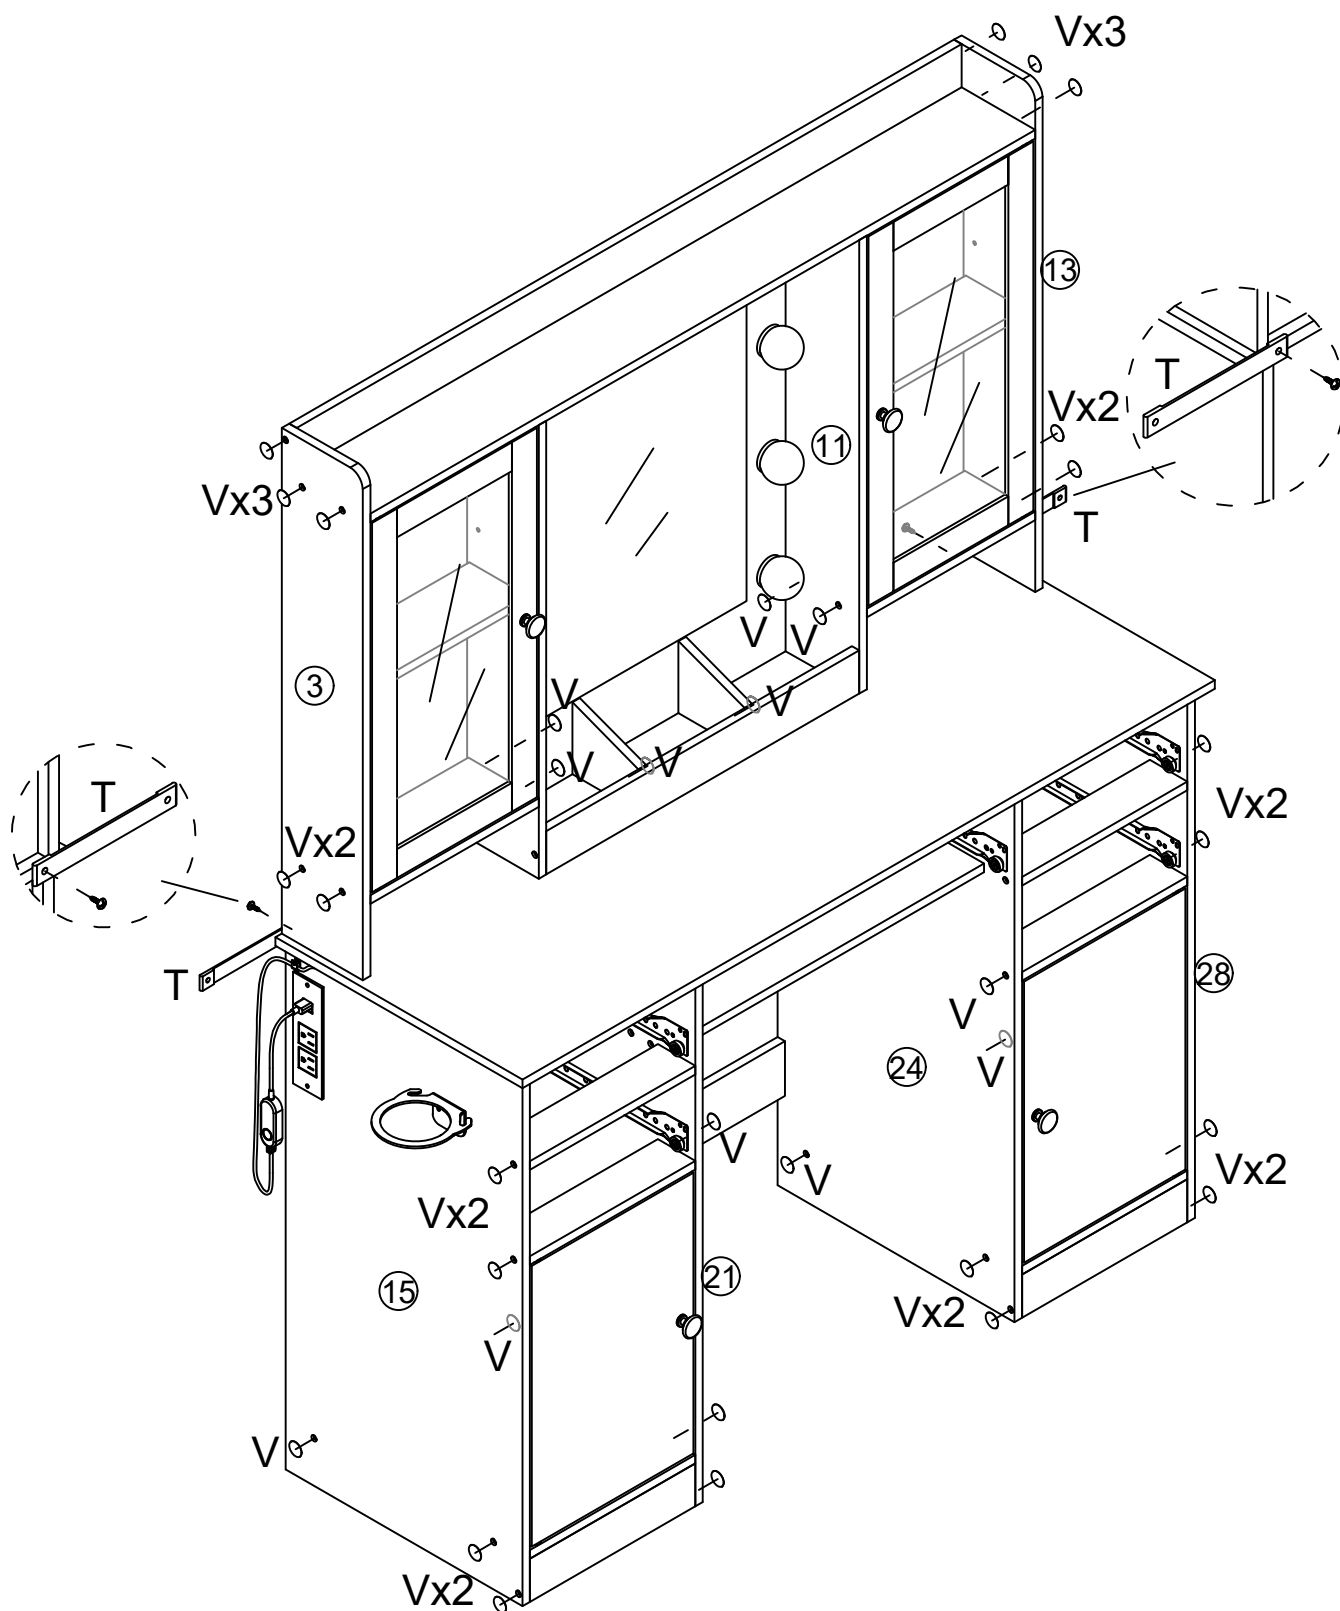


D x8

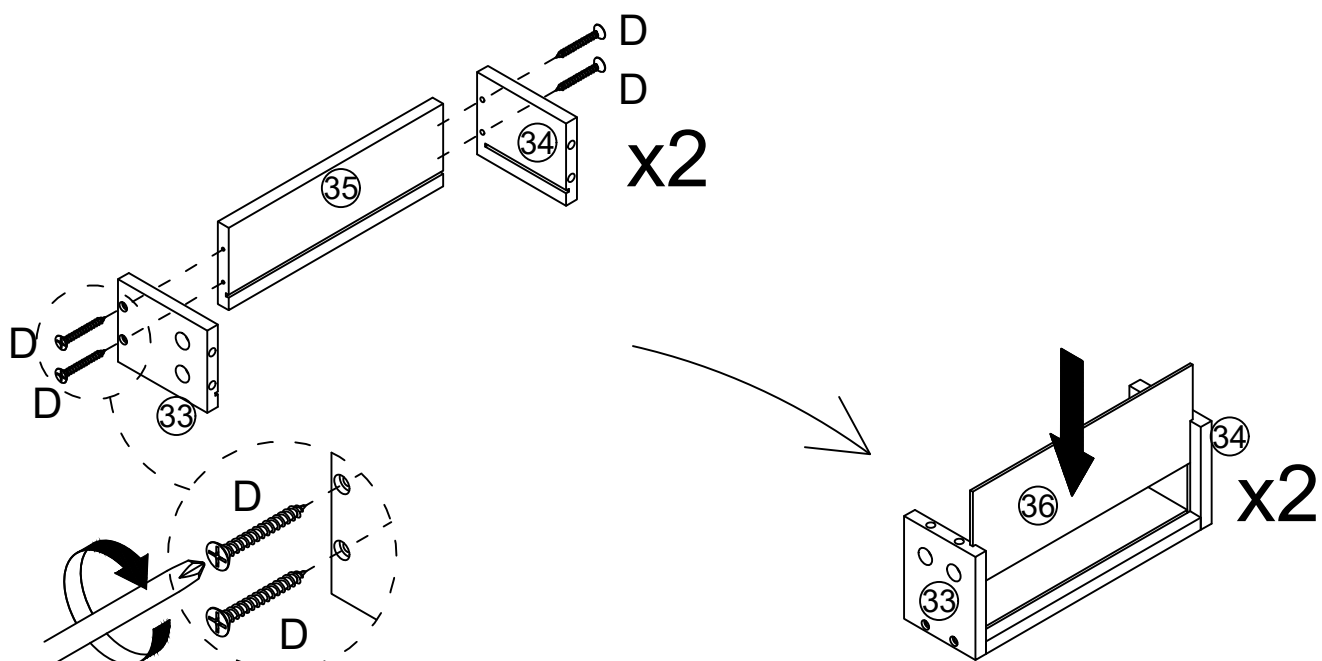

D x5

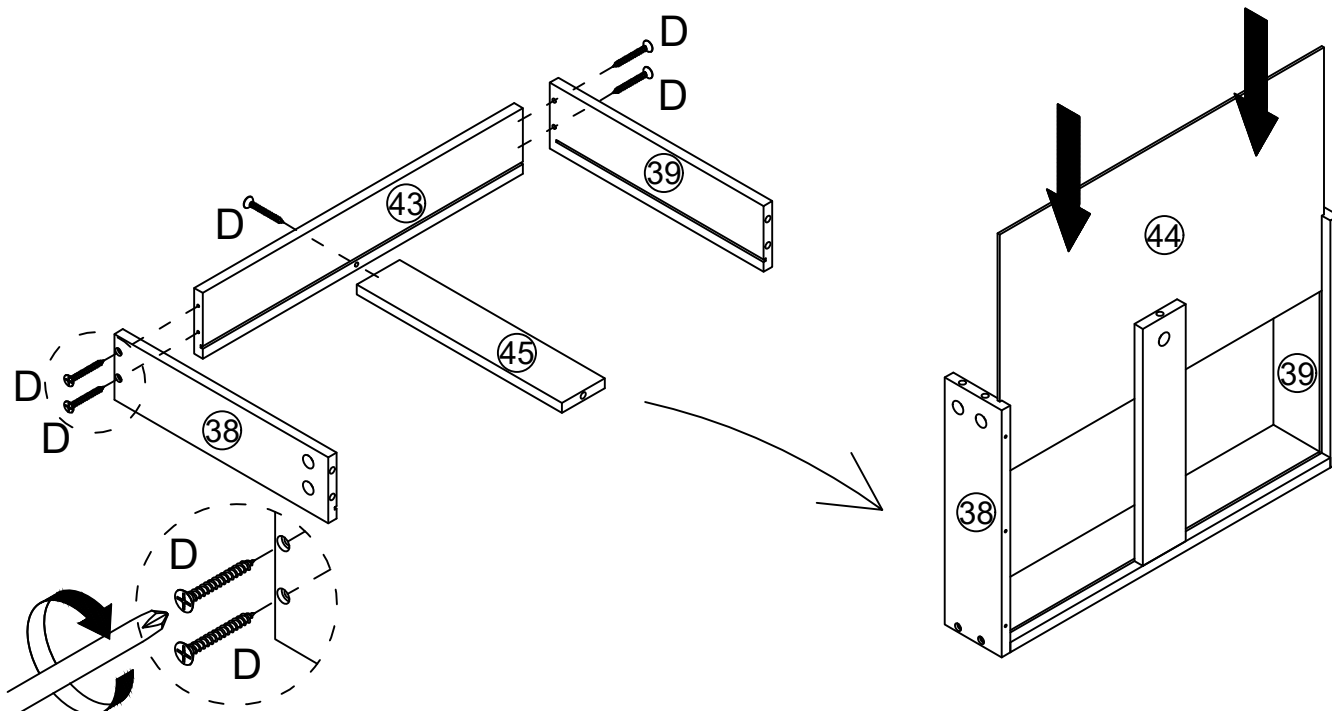


D x16

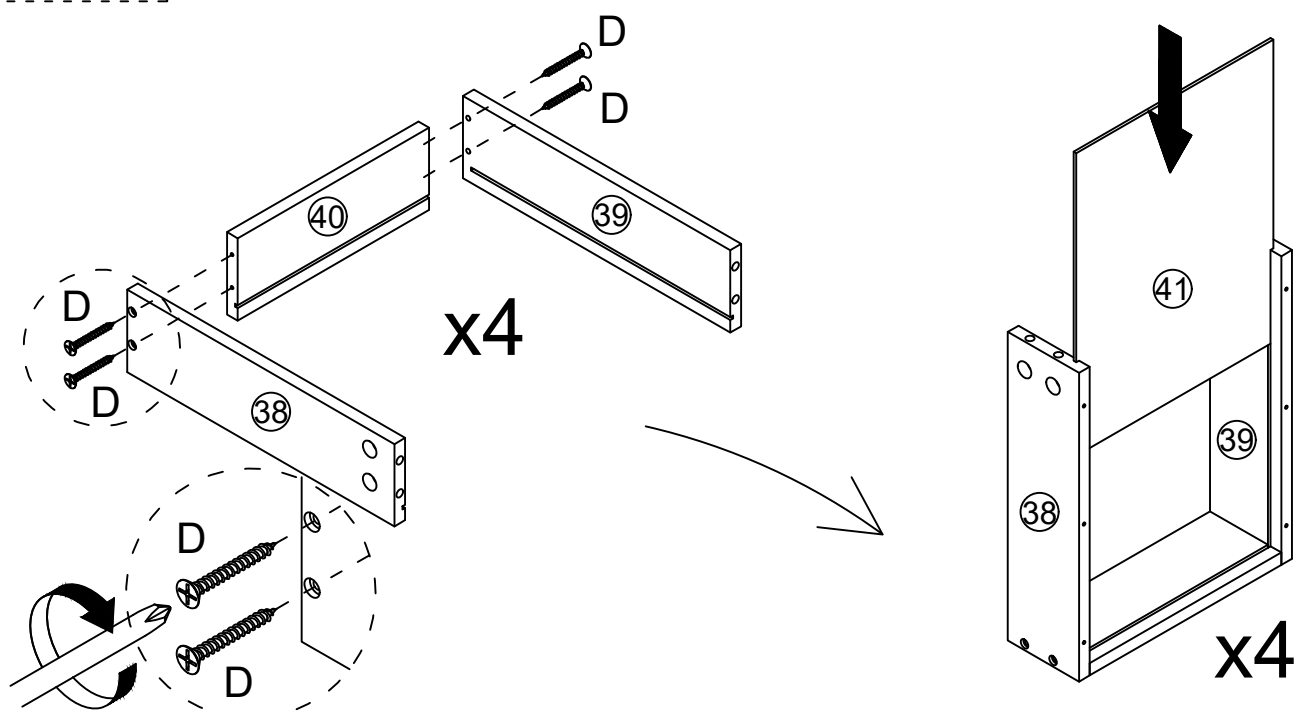

A x29





R x8

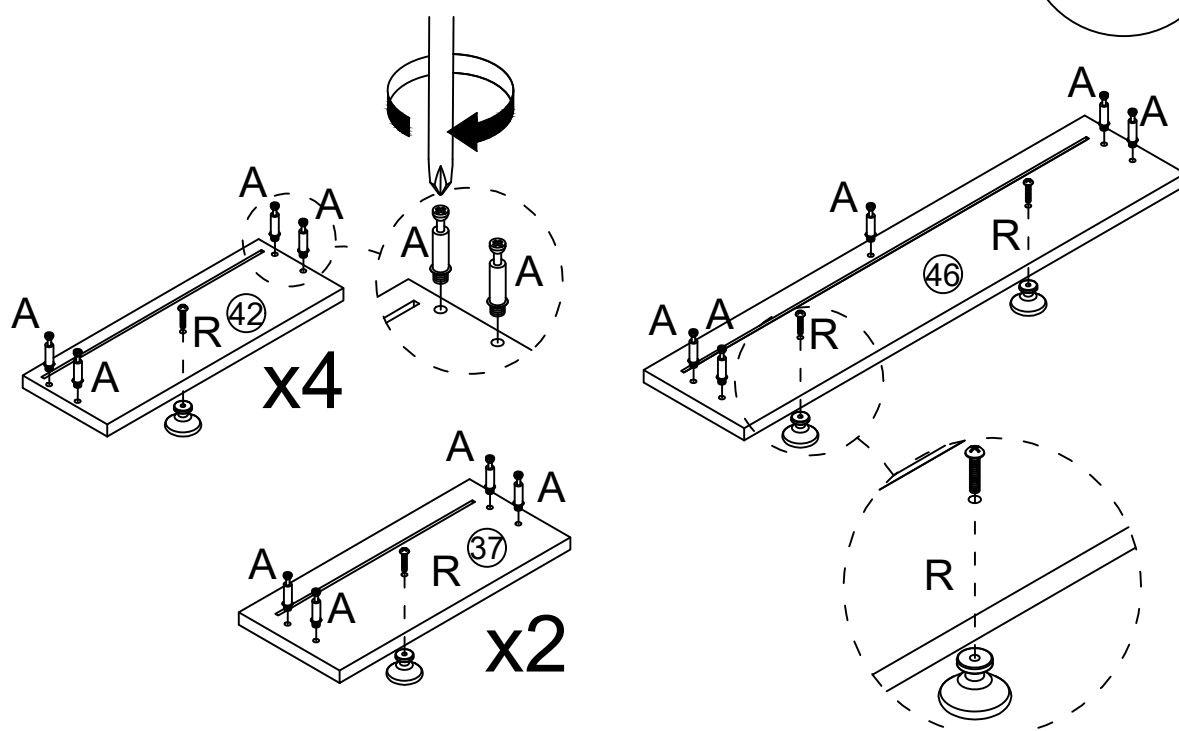

B x29



41

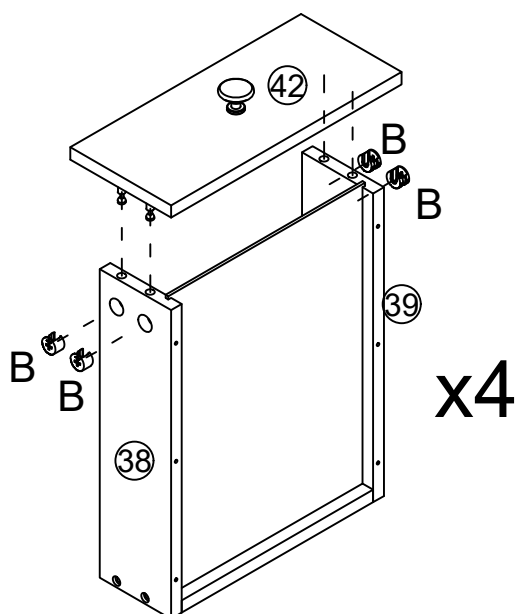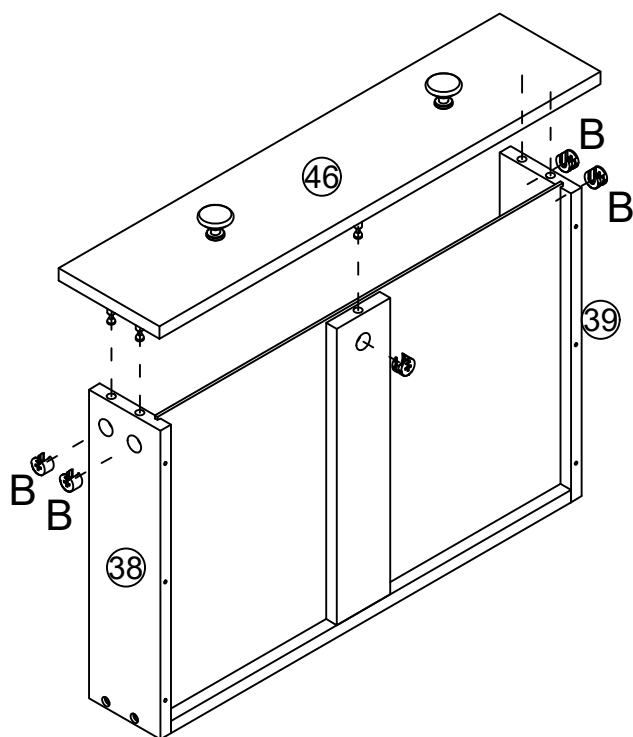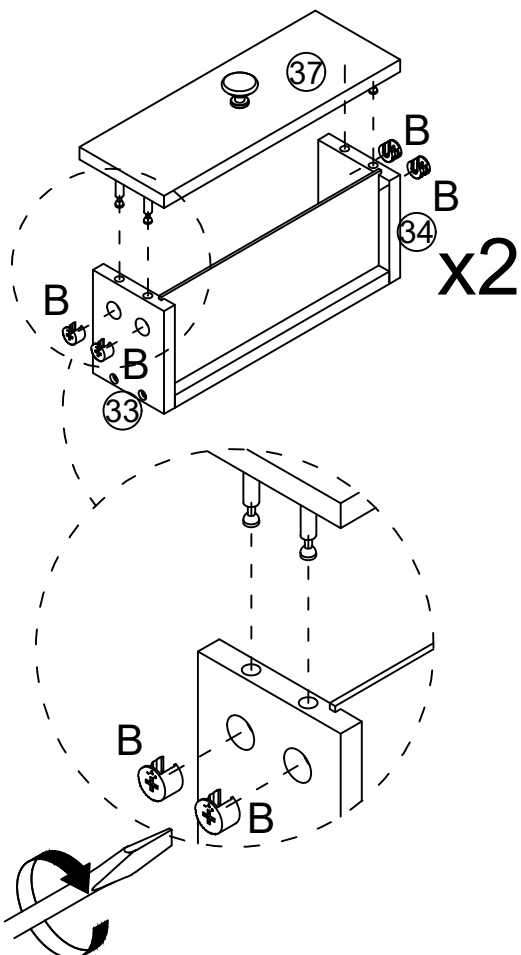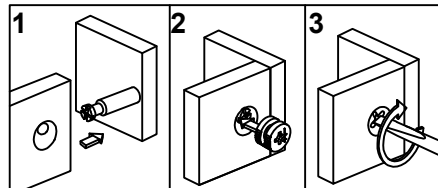





E x30





DL x5



DR x5

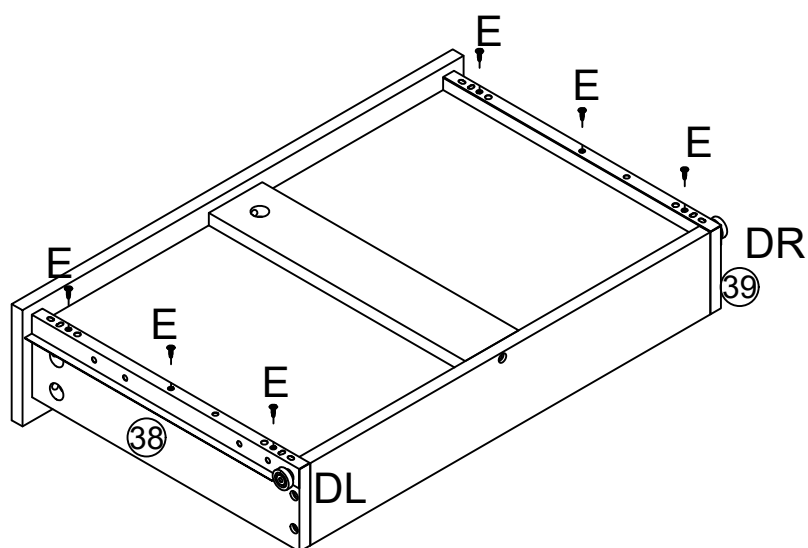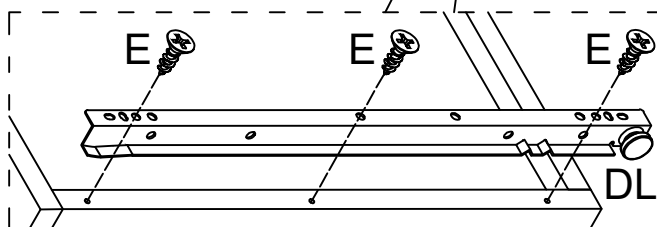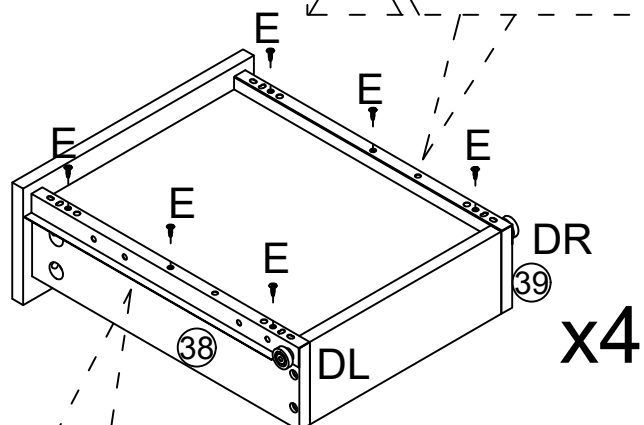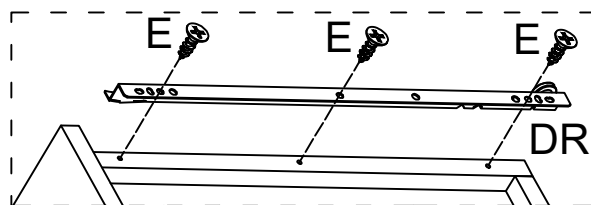

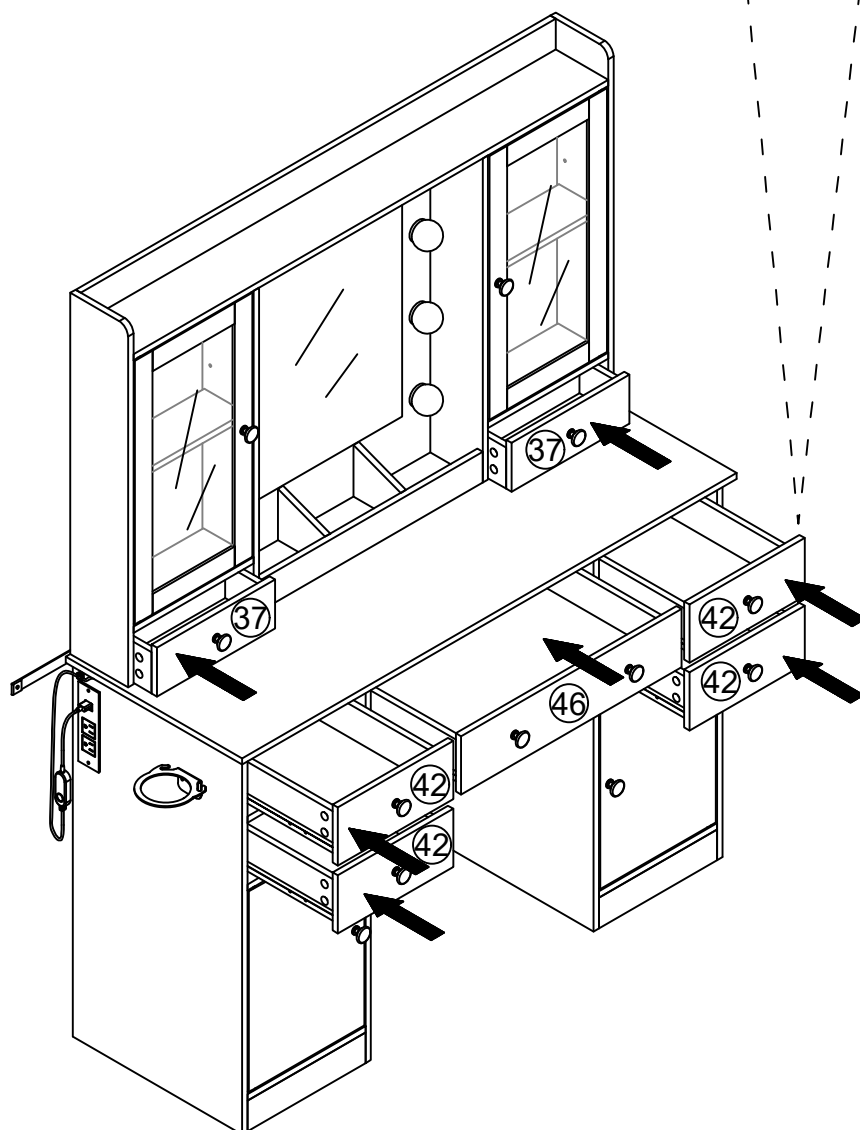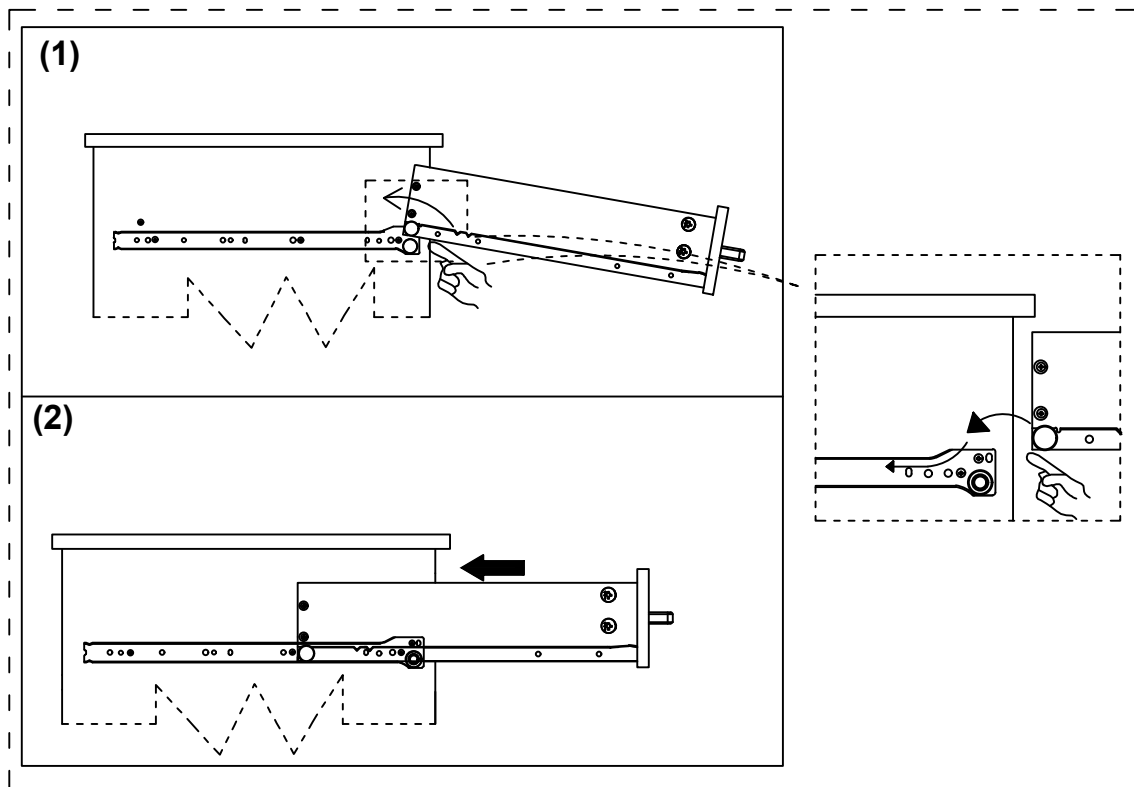


D x2

U x2



WALL

I x2

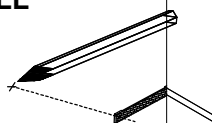

WALL


drilling hole
Ø6x30mm

II x2




WALL

III x2

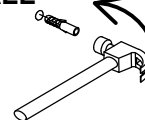

Please tear off the film on
the outside of the mirror.

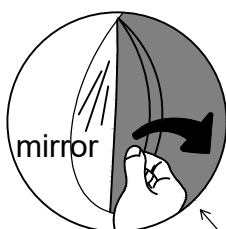

WALL

U

D

U


D

Power Supply



switch

N-4



Scan qr code to download APP
Bluetooth control

OR

Flip to the other side for
key control

