

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

QUEEN BED



WARNING !

STRANGGULATION HAZARD

NEVER place bed near windows where cords from blinds or drapes may strangle achild.

NEVER suspend strings over bed.

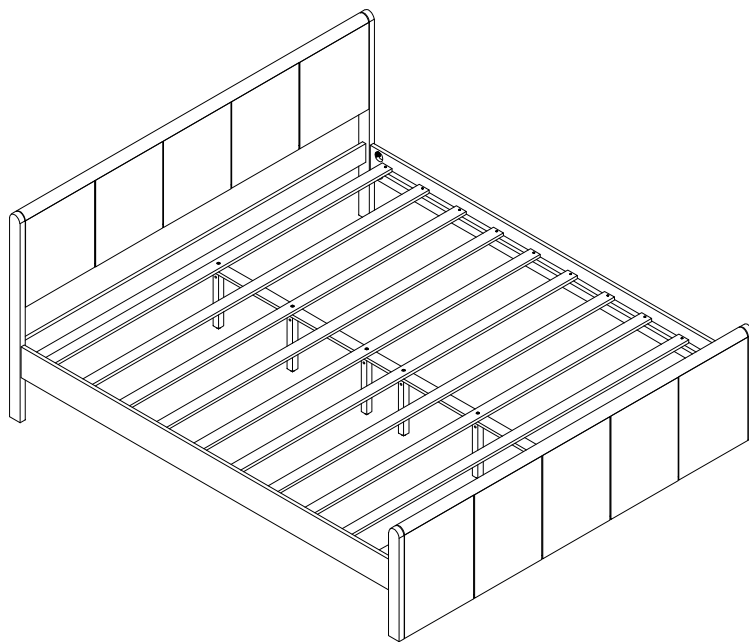
NEVER place items with astring, cord, or ribbon, such as hood strings or pacifercords, around a child's neck. These items may catch on bed parts.

ALWAYS follow assembly instructions.

Not intended for children under the age of six. INFANTS HAVE DIED FROMBECOMING ENTRAPPED IN BEDs. Openings in and between bed parts can entrapthe neck and head of a small child.

NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersizeddangerous gaps can exits and a person can become entrapped or entangled in the frame and suffocate



CAUTION: This Queen Bed is NOT a TOY.

Keep your child / children at bay in the process of assembly.










For turning the Queen Bed and to prevent damage to the Queen Bed.

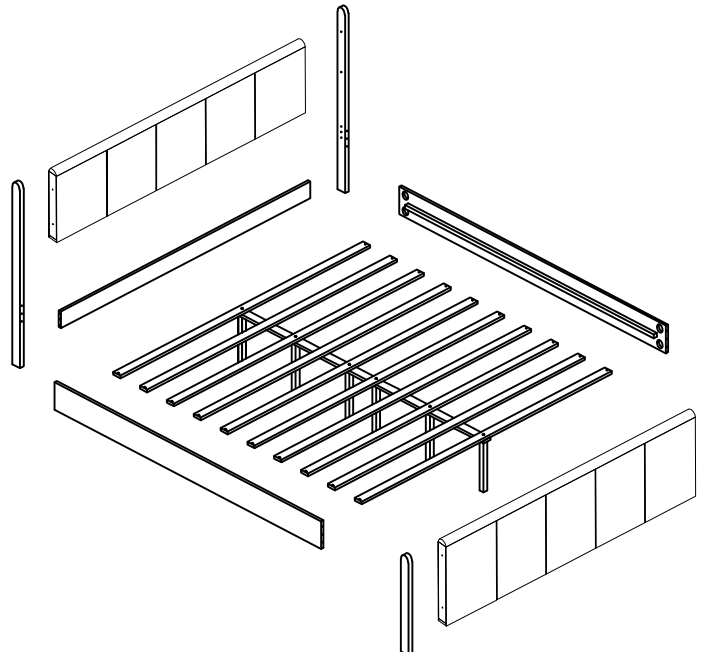


02 persons may be needed to execute this action.


PART LIST (N770P452209)

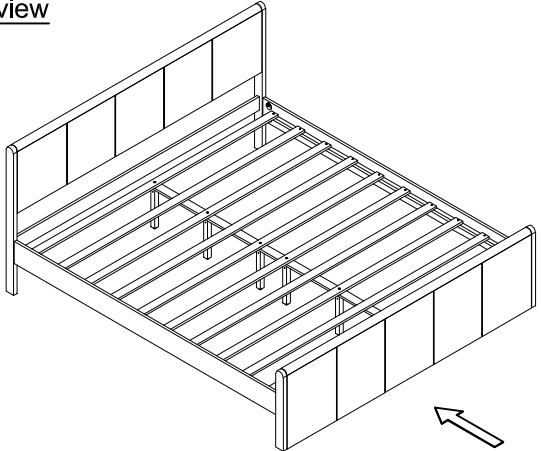
	 Headboard	1pc		 Footboard	1pc
---	--	-----	---	--	-----

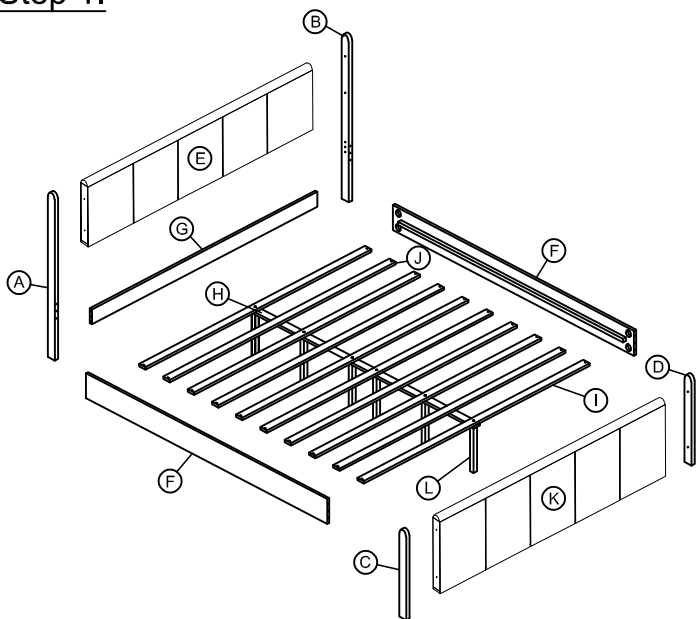
PART LIST (N770P452210/Hardware in this SKU)

	 Headboard left post	1pc		 Head board support rail	1pc
	 Headboard right post	1pc		 Center slat support rail	1pc
	 Footboard left post	1pc		 Slat 1	6pcs
	 Footboard right post	1pc		 Slat 2	4pcs
	 Side rail	2pcs		 Center support leg	6pcs

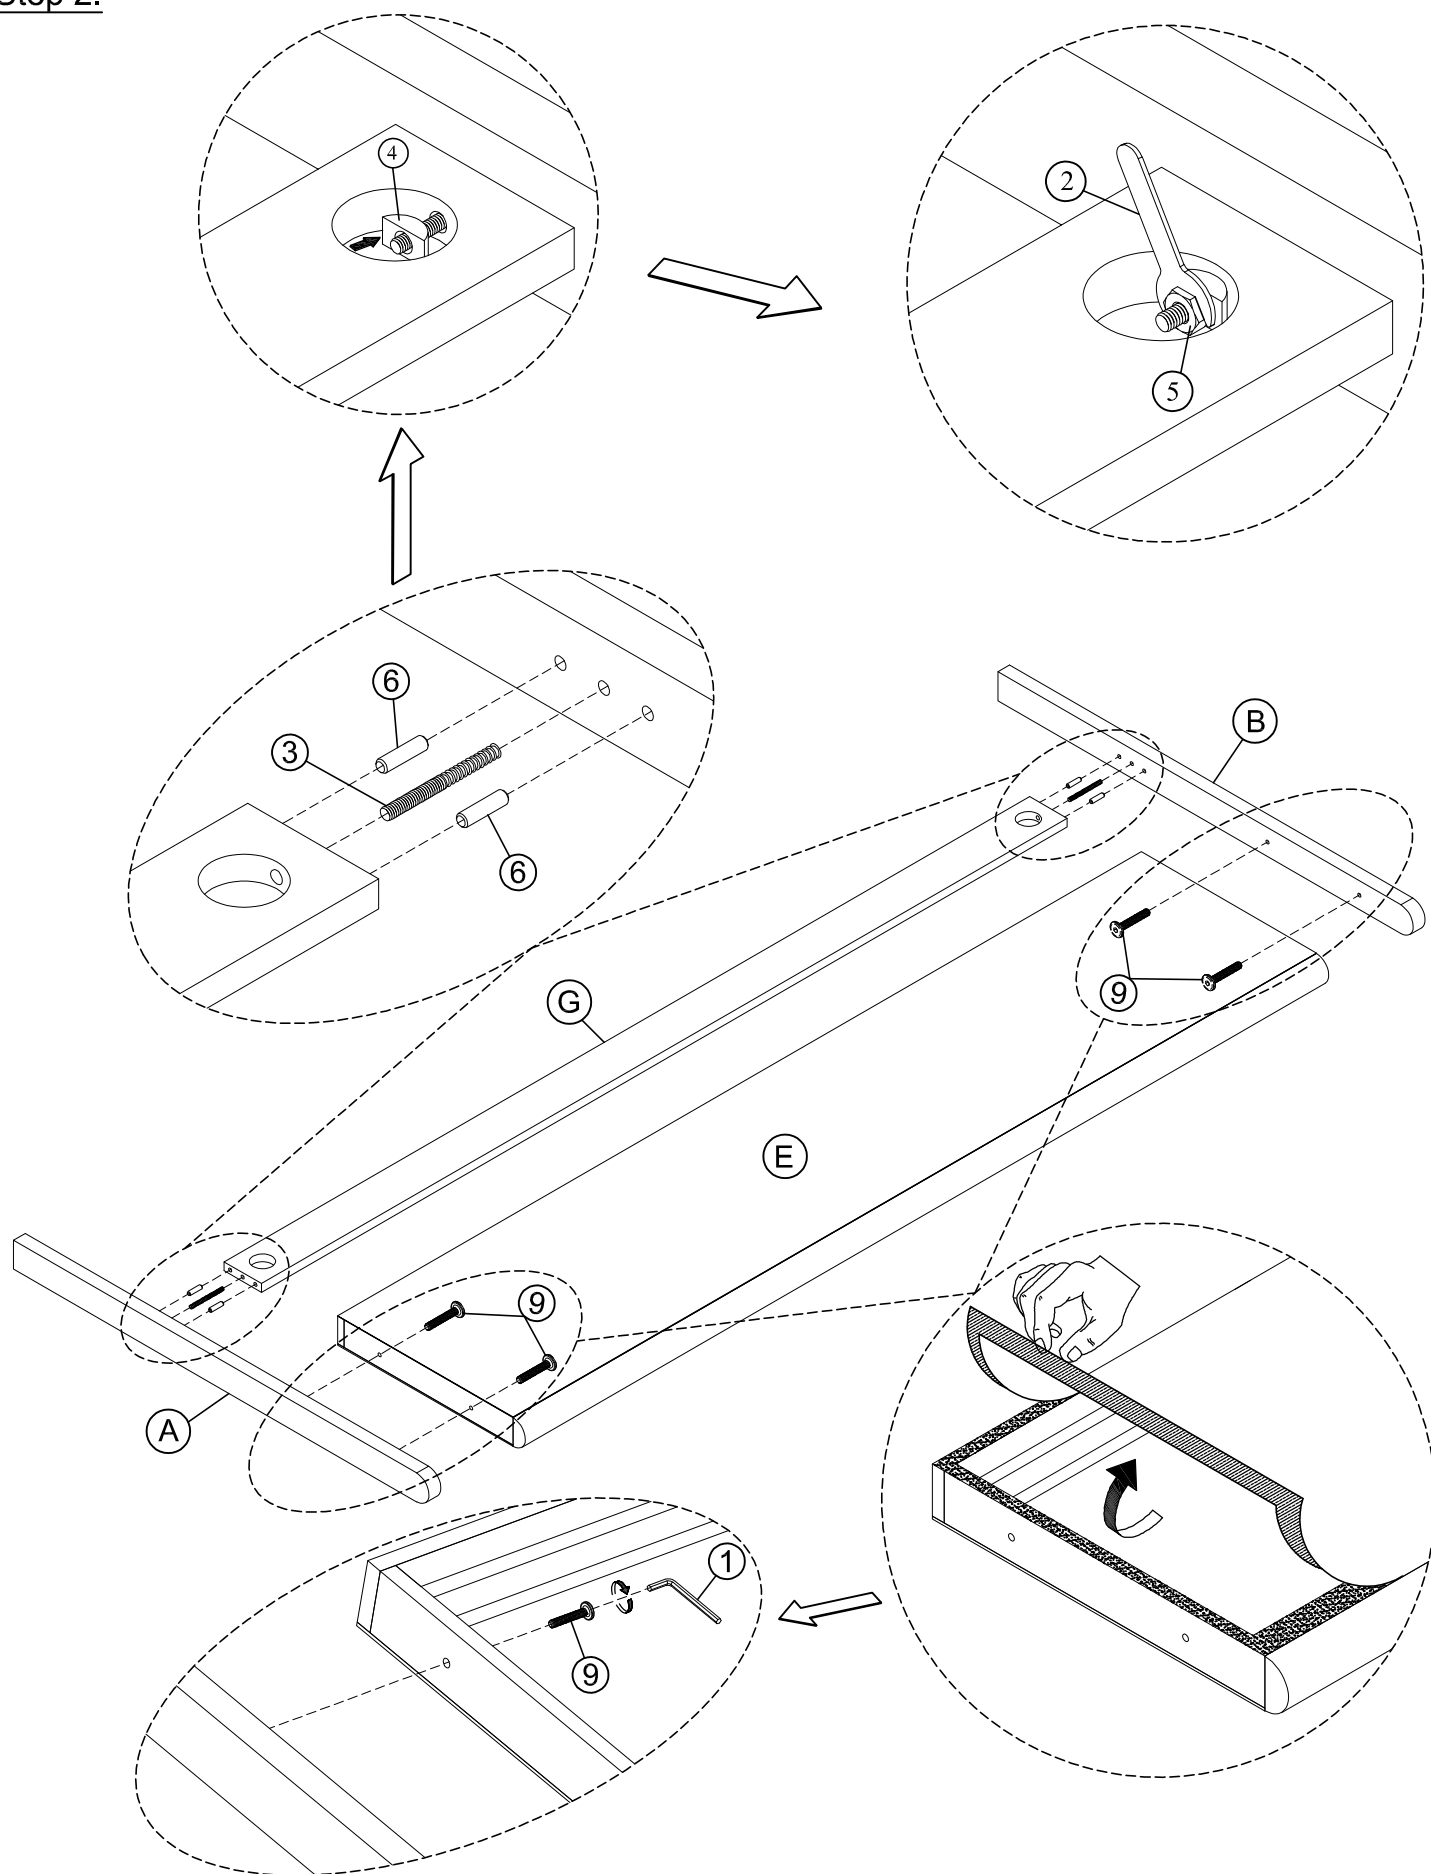
Hardware (Each of the above hardware including extra 1 pc)				Assembly Preparation	
Label	Picture	Description	Q.ty	Before Beginning Assembly 	
①		Allen wrench	1		
②		Open Wrench M10	1		
③		Full Thread Bolt M6*70mm	10+1		
④		Curve washer M6	10+1		
⑤		Hex Nut M6	10+1		
⑥		Dowel Ø8*30mm	8+1		
⑦		Vis Ø4 x 30mm	20+1		
⑧		Bolt M6 x 70mm	6+1		
⑨		Bolt M6 x 40mm	8+1		

		 *1  *10+1  *20+1  *1  *10+1  *6+1  *10+1  *8+1  *8+1	
		 - Read instruction, cover to cover.  - Have 2 adults on hand for assembly.  - Do not assemble on flooring or carpet.  - Assemble on a clean non-marring surface (packing foam).  - Save all packaging until finished.	

Assembly Preparation Overview  FRONT FACING	
This Queen Bed has multiple parts and may require up to 1 hour to assemble. To give you an overview of the Queen Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to famiariarse the parts and steps before assembly.	

Step 1: 	
Unpack and place all part on a clean, non-marring surface. - 3 -	

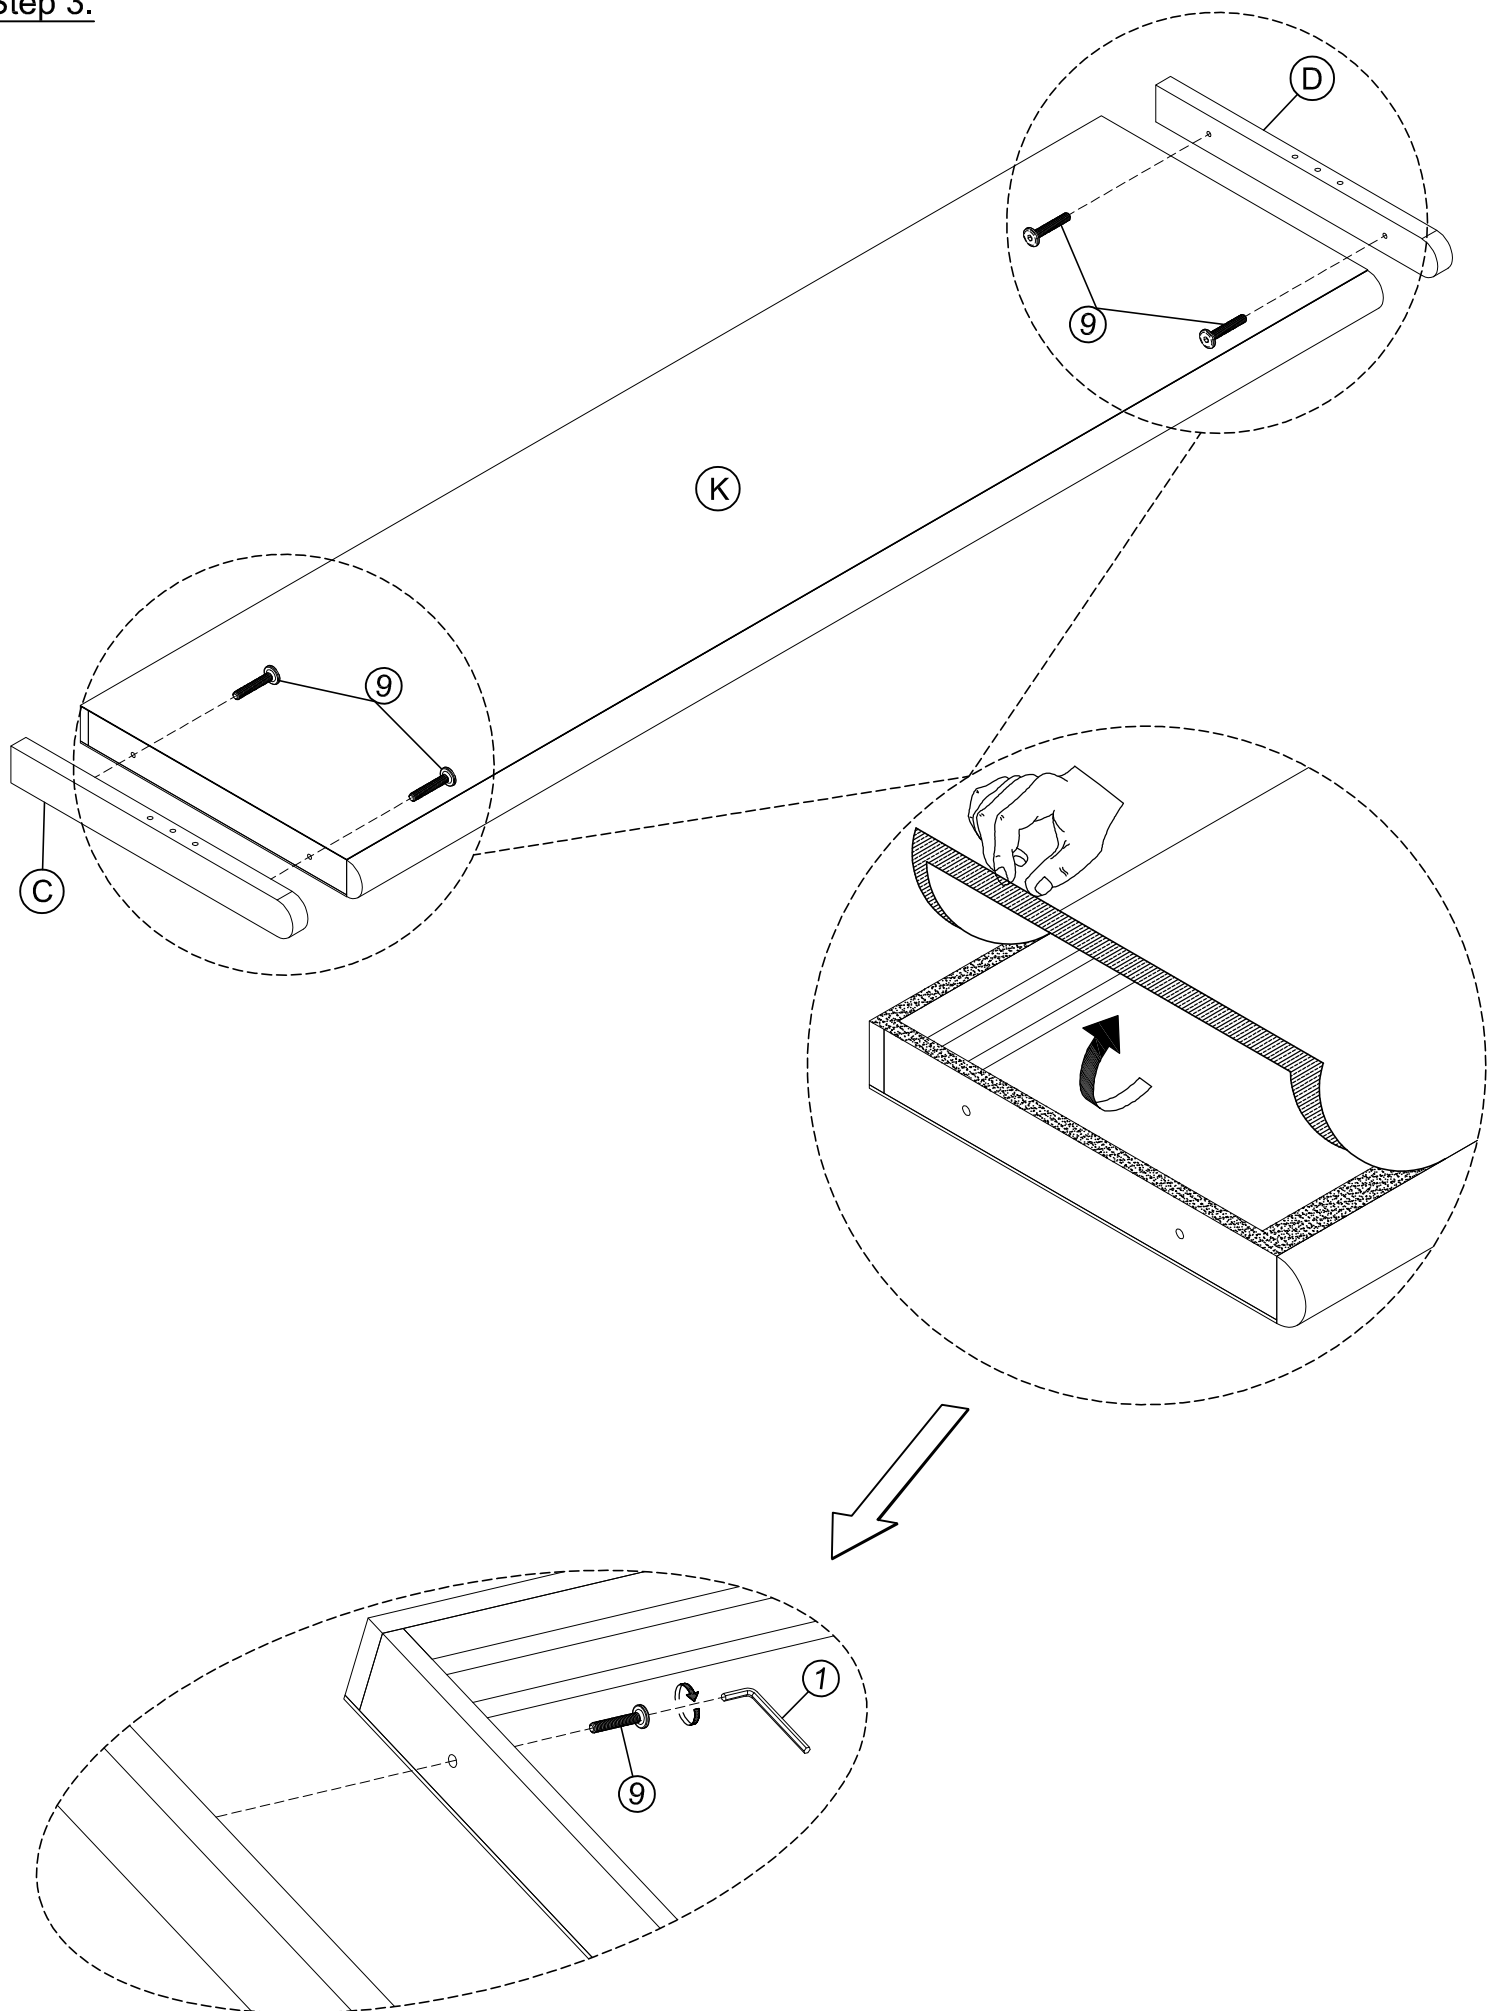
Step 2:



-Attach the headboard left post (A) and headboard right post (B) to head board support rail (G). Use Full Thread Bolt M6x70mm ③, dowel Ø8*30mm ⑥ , M6 curve washers ④ , and M6 hex nuts ⑤ to connect, and use M10 open wrench ② to lock.

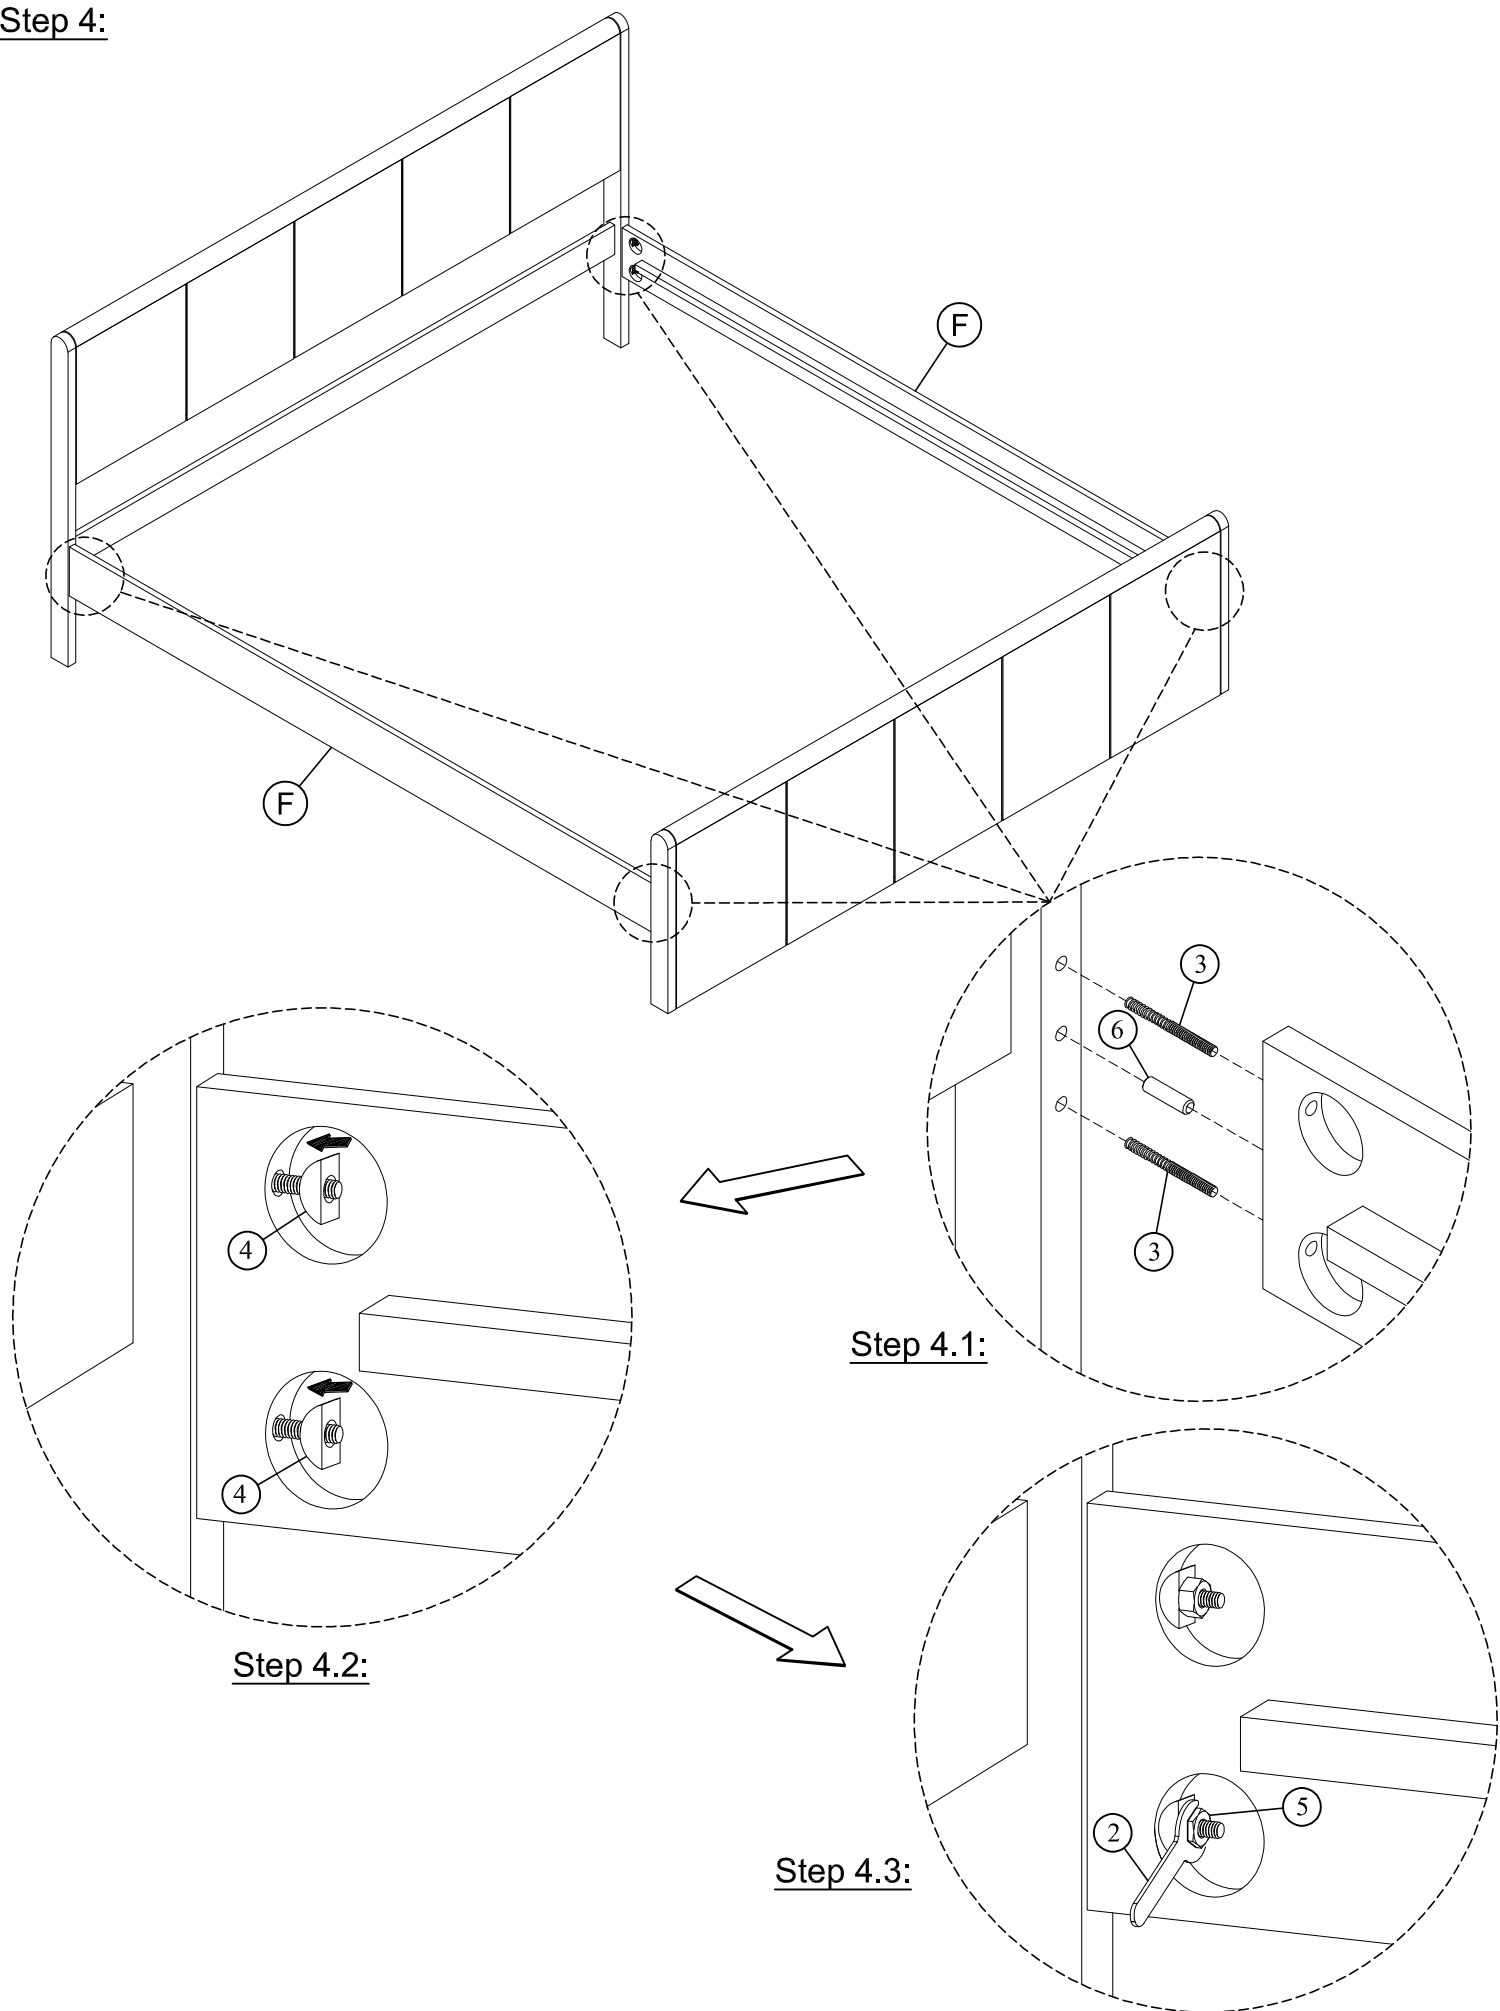
-Attach headboard left post (A) and headboard right post (B) to the headboard (E). Use M6 x 40mm bolts ⑨ + Allen wrench ① for connection.

Step 3:



-Attach footboard left post (C) and footboard right post (D) to the footboard (K).
Use M6 x 40mm bolts (9) + Allen wrench (1) for connection.

Step 4:

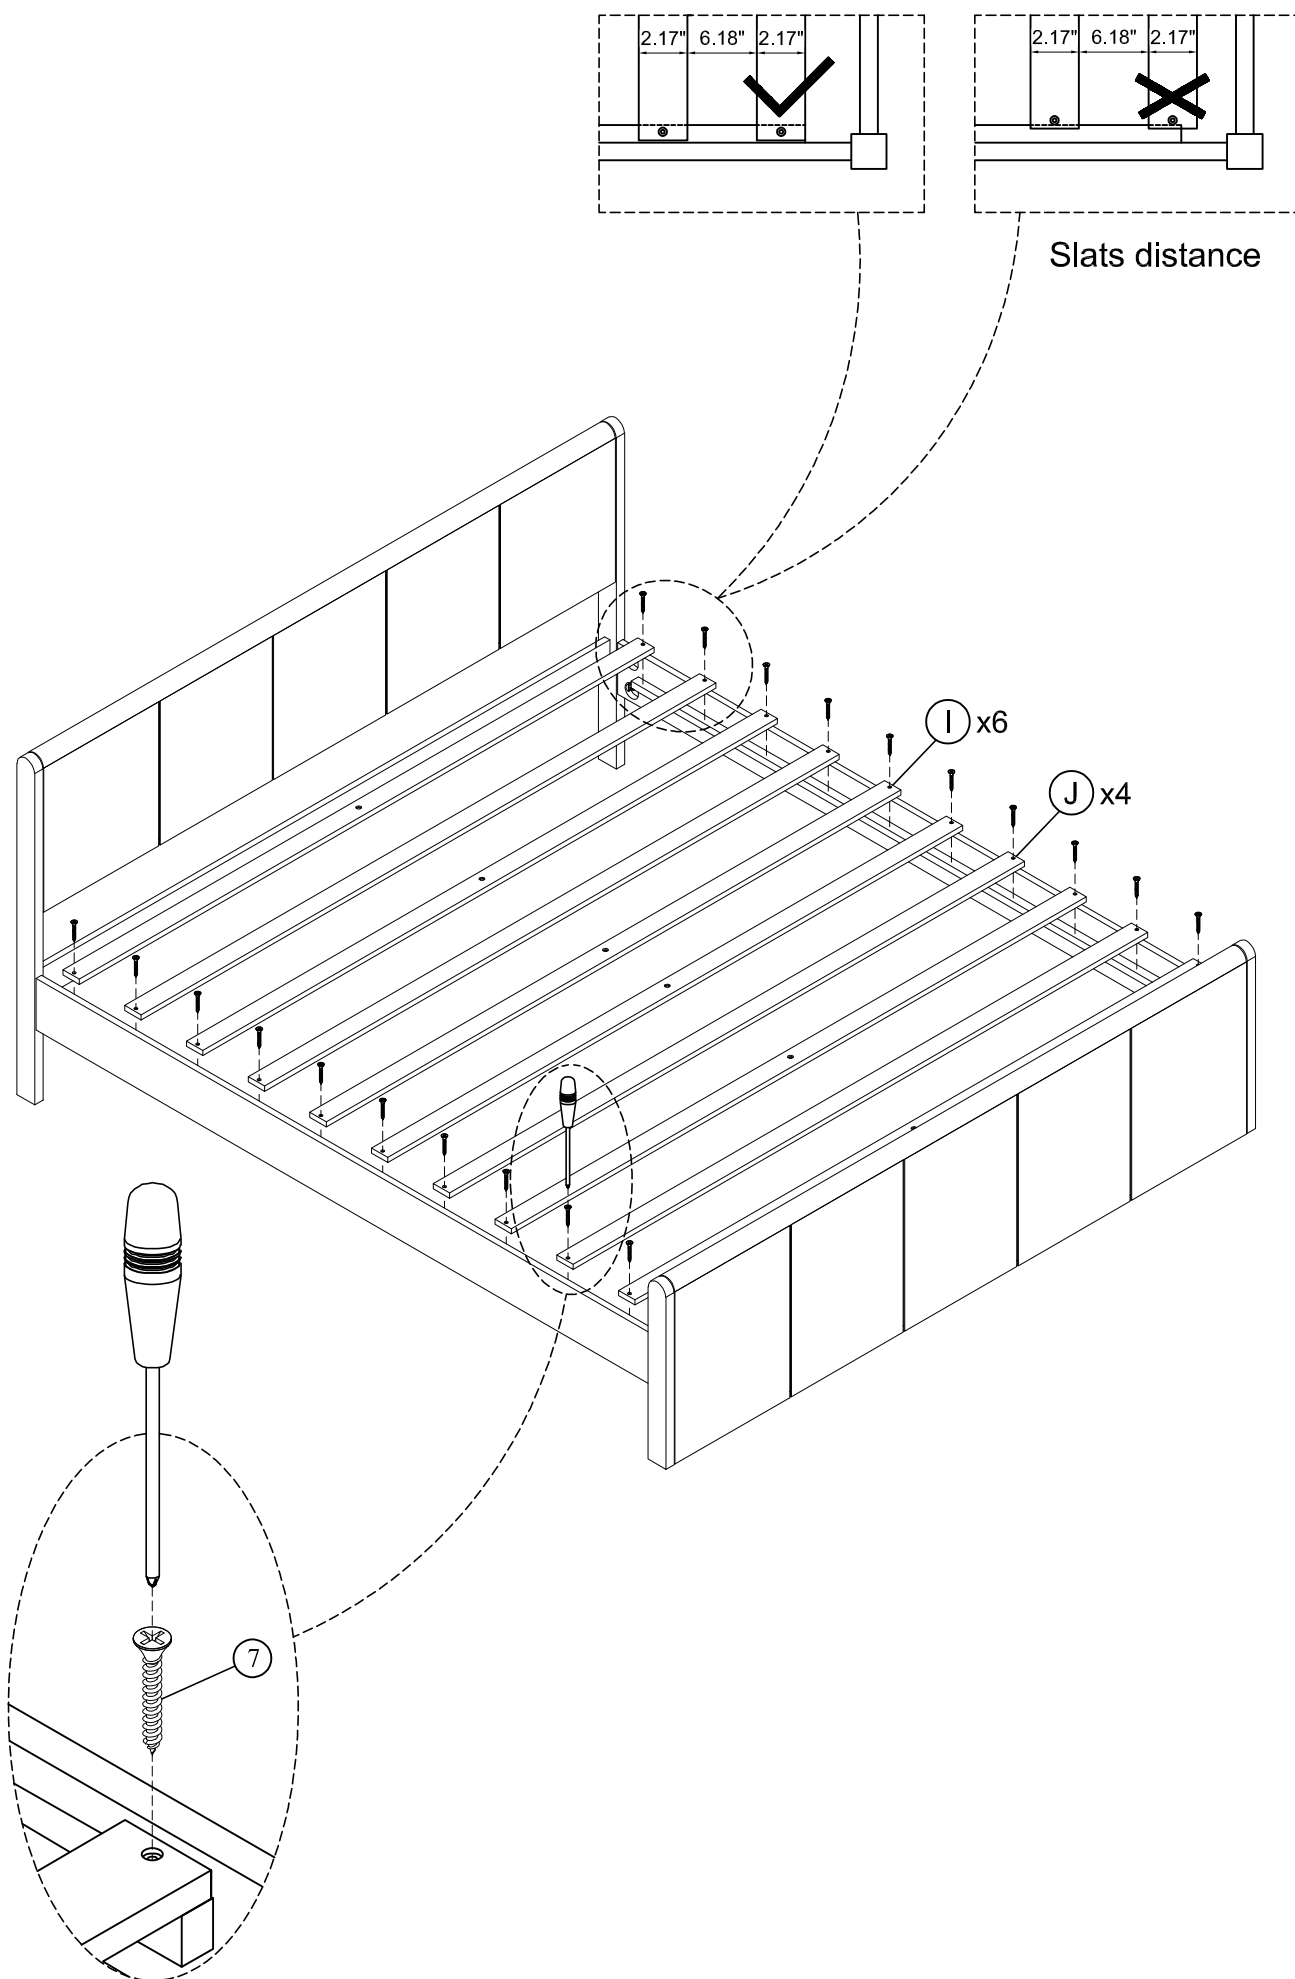


Step 4.1: -Connect the side rail (F) to the headboard left post (A), headboard right post (B), footboard left post (C), and footboard right post (D) using full thread bolts M6×70 mm (3) and 8×30 mm wooden dowels (6).

Step 4.2: -Secure with full thread bolts M6×70 mm (3) and curve washers M6 (4).

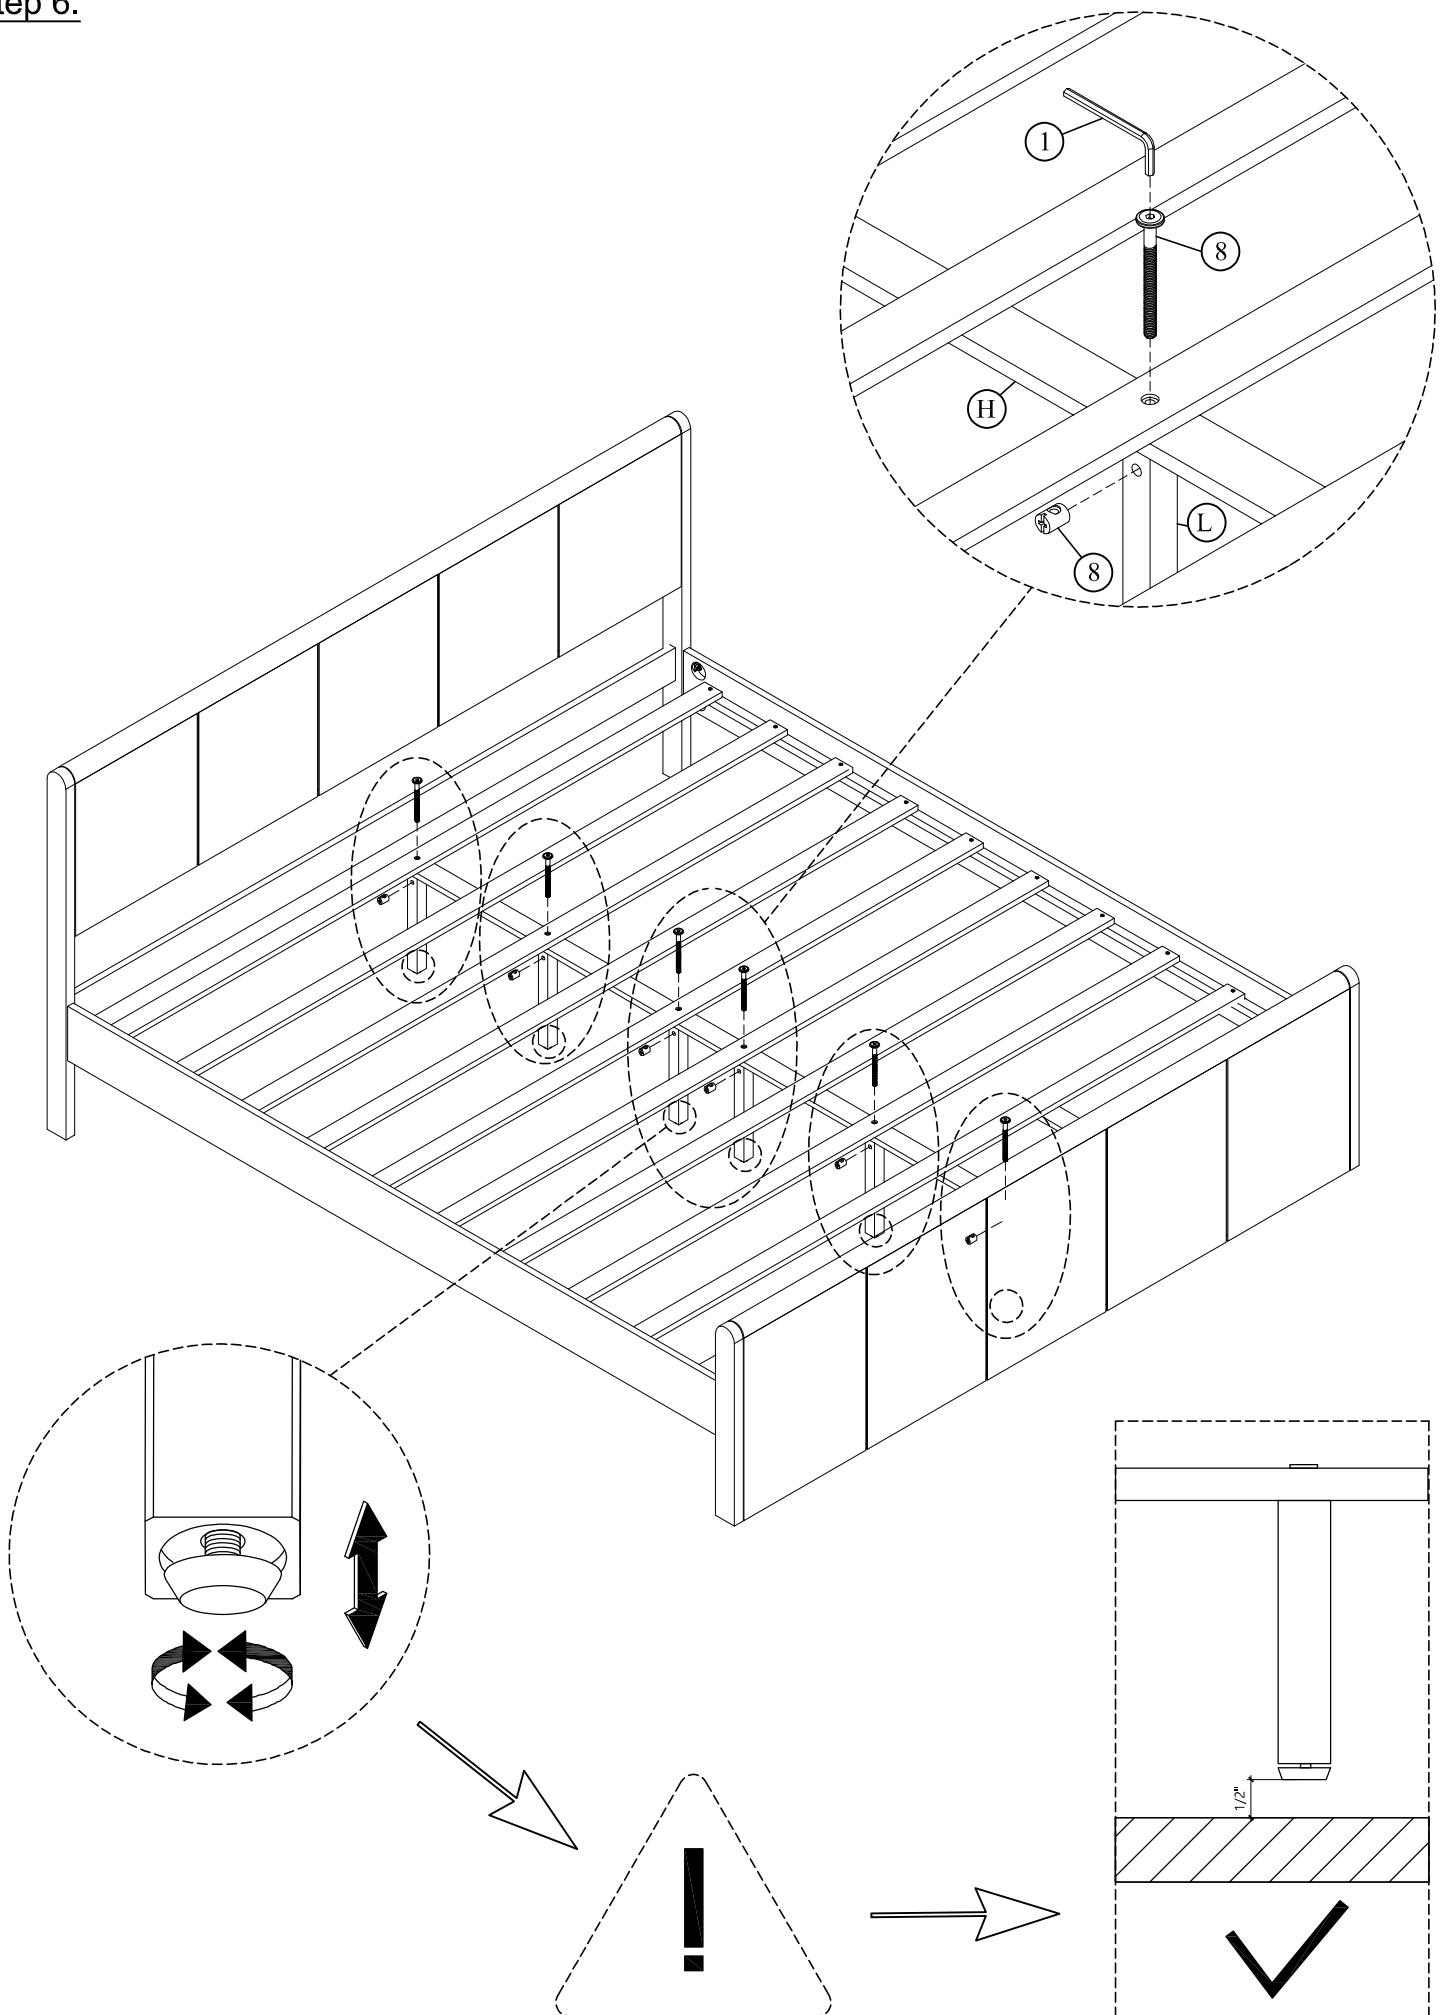
Step 4.3: - Tighten using hex nuts M6 (5) and the M10 open wrench (2)

Step 5:

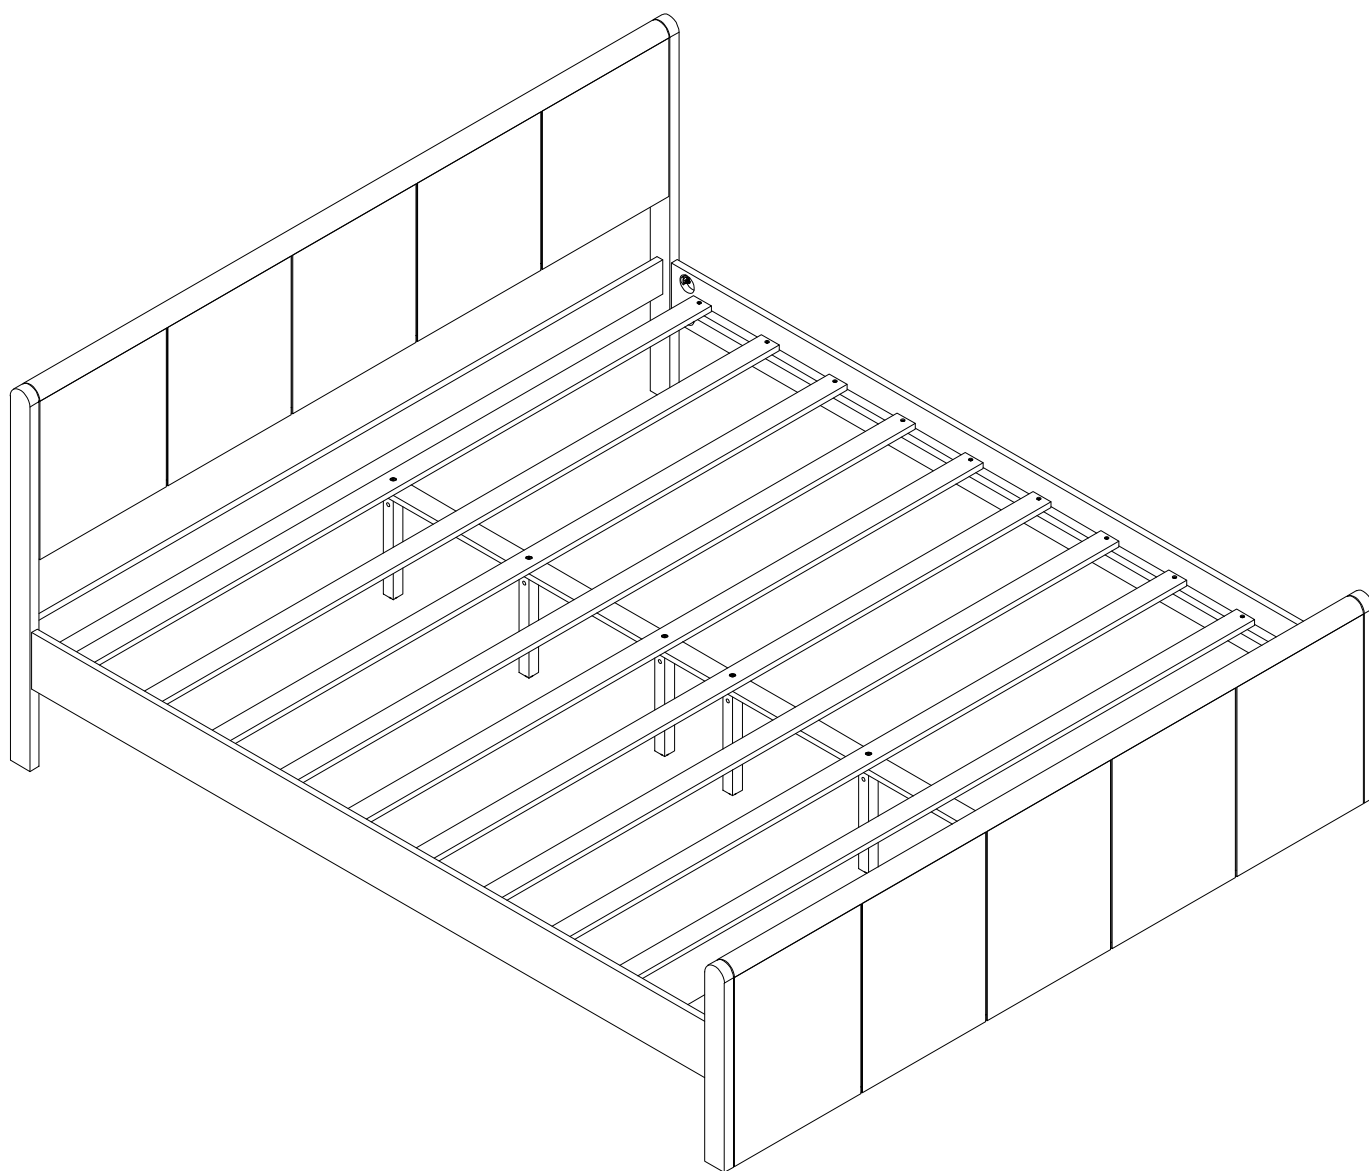


-Attach slats 1 (I) and slats 2 (J) to the side rails (F) using Vis Ø4 x 30mm (7).

Step 6:



-Attach slats 1 (I) and slats 2 (J) to the center slat support rail (H) and the center support leg (L) using M6 × 70 mm bolts (8) and an Allen wrench (1).



Inspect the Bed and make sure all parts are adequately connected.
Adjust the Levelers to desired height to avoid wobbles.
Your bed is ready for use.

CARE INSTRUCTIONS:

Hardware may loosen overtime. Periodically check that all connections are tight.
Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners. - 9 -