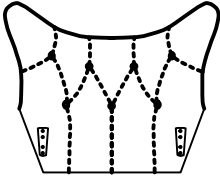

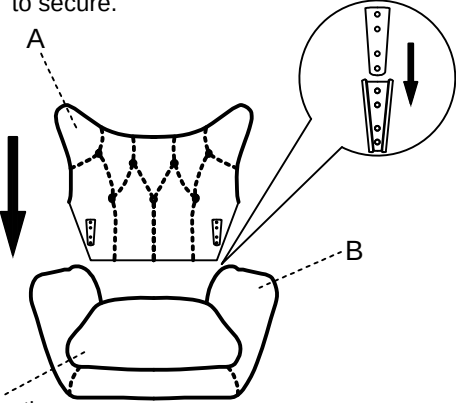
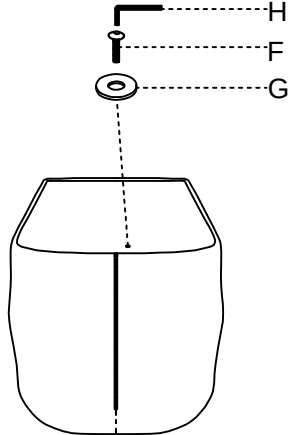
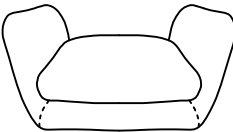



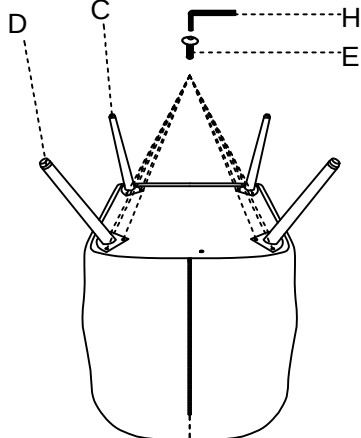
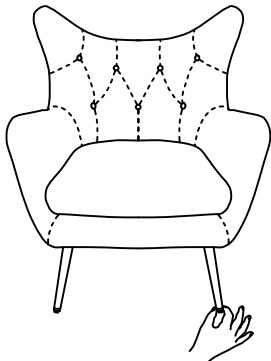




Assembly Instructions

A*1 	E*12 M6*16mm 	① Carefully align male and female bracket then insert backrest A into space between armrest, push all the way down to secure.  Attention: Remove the seat cushion before assembly, and return it to the seat cushion after assembly	② Use bolt F, flat washer G, allen key H to connect chair back with cushion. Fasten bolts to secure. 
B*1 	F*1 M6*40mm 		
C*2(FRONT) 	G*1 M6 	③ Place the Seat B on a clean padded surface. Use bolt E allen key H to attach the leg C and D to bottom of the seat B. 	④ Assembly completed.  For velvet: With help of adult partner, iron the fabric cover to stretch the wrinkles and dent mark with steam iron while necessary, please separate with a towel before ironing. WARNING Attention: After installation, adjust the adjustable leveler to keep the chair balanced. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
D*2(BACK) 	H*1 M5 		
	E*1 M6*16mm  EXTRA PARTS F*1 M6*40mm  EXTRA PARTS		