


Assembly Instructions

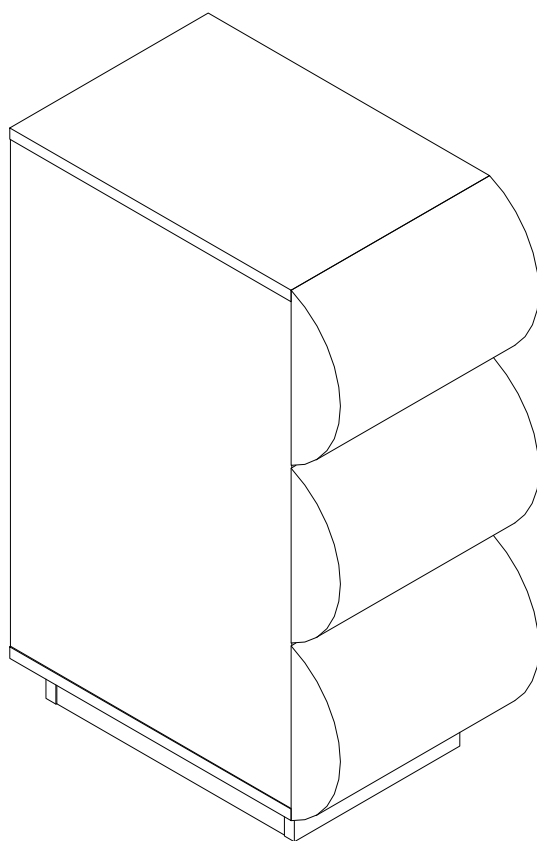


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

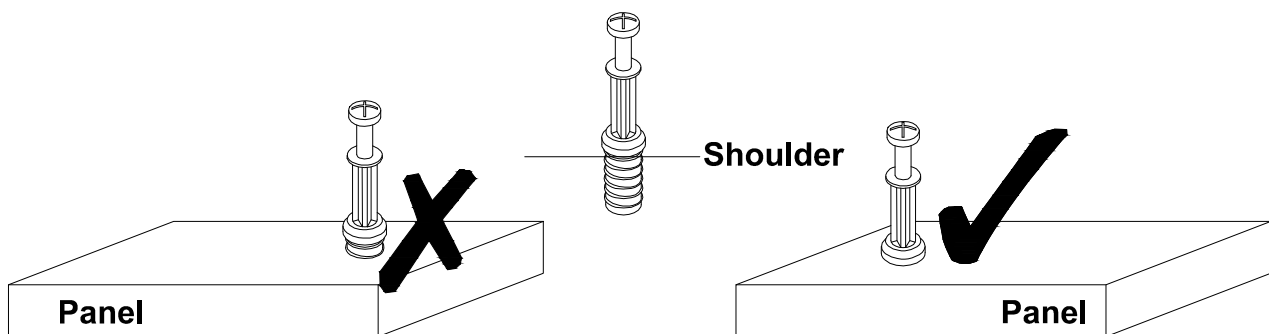

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

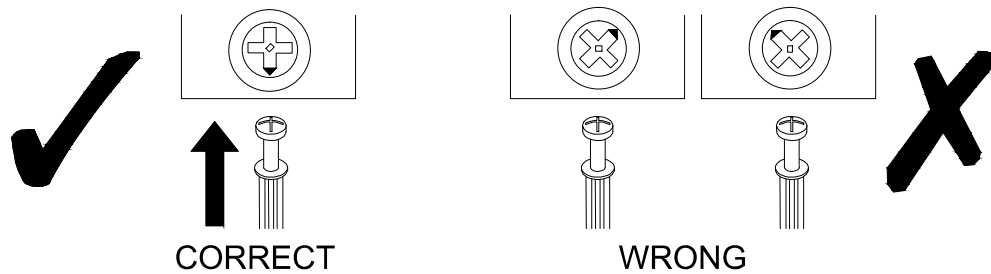

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.






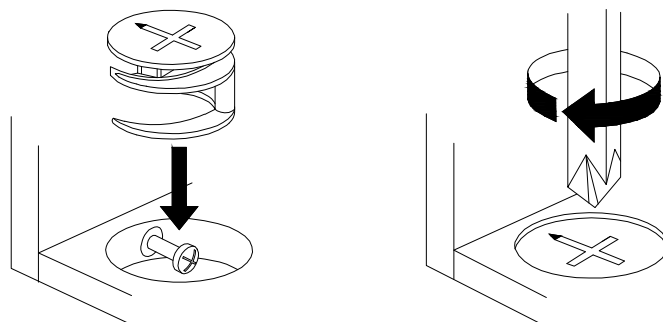


Turn cam lock clockwise to tighten.


Product structure

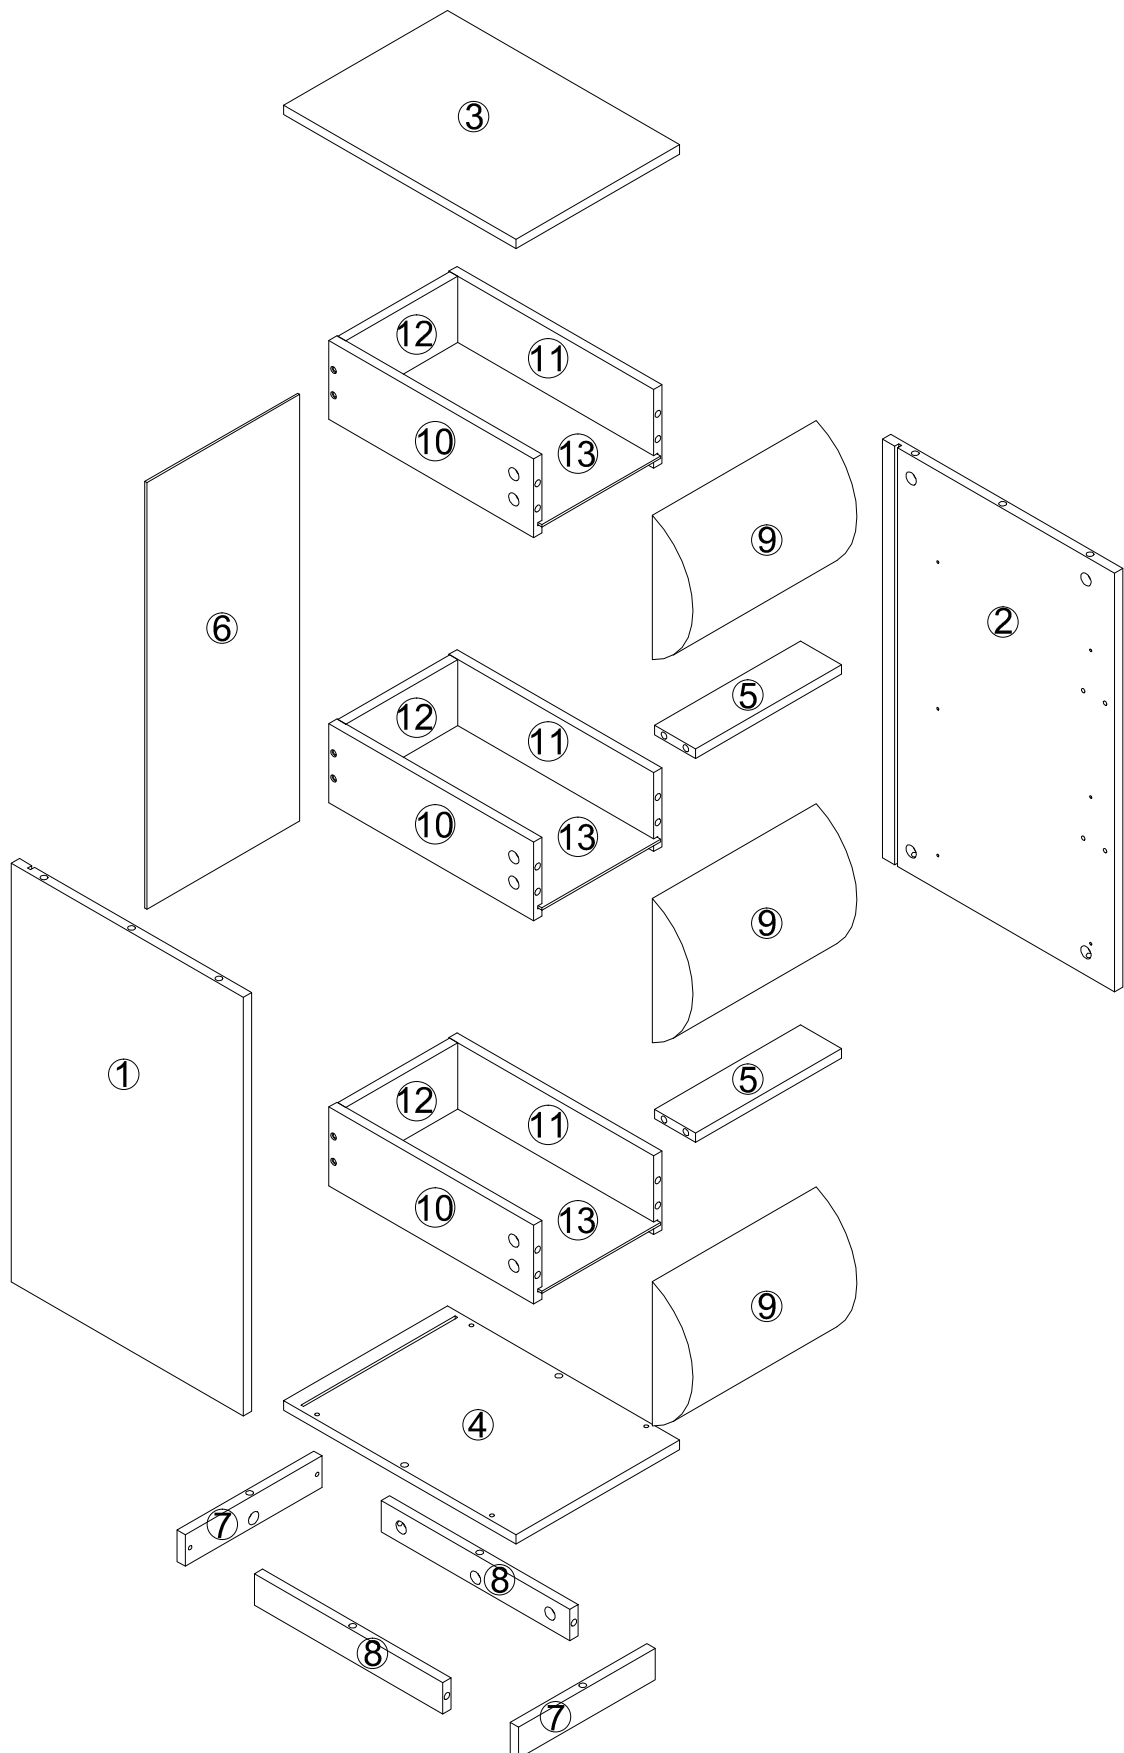


Part List

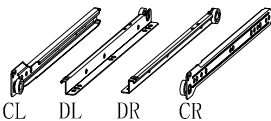No. A Quantity:36 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:36 Pcs Cam φ15 	No. C Quantity:36 Pcs Sticker Ø20 	No. D Quantity:4 Pcs Dowel 8*30mm 
No. E Quantity:3 Sets Ordinary bottom-dragging rail 12" 	No. F Quantity:24 Pcs Screw M3.5*12mm 	No. G Quantity:12 Pcs Screw M4*30mm 	No. H Quantity:6 Sets Plastic Wedge 
No. I Quantity:4 Pcs Foot Pad Ø12 	No. J Quantity:1 Sets Anti-falling Parts 		


STEP 1

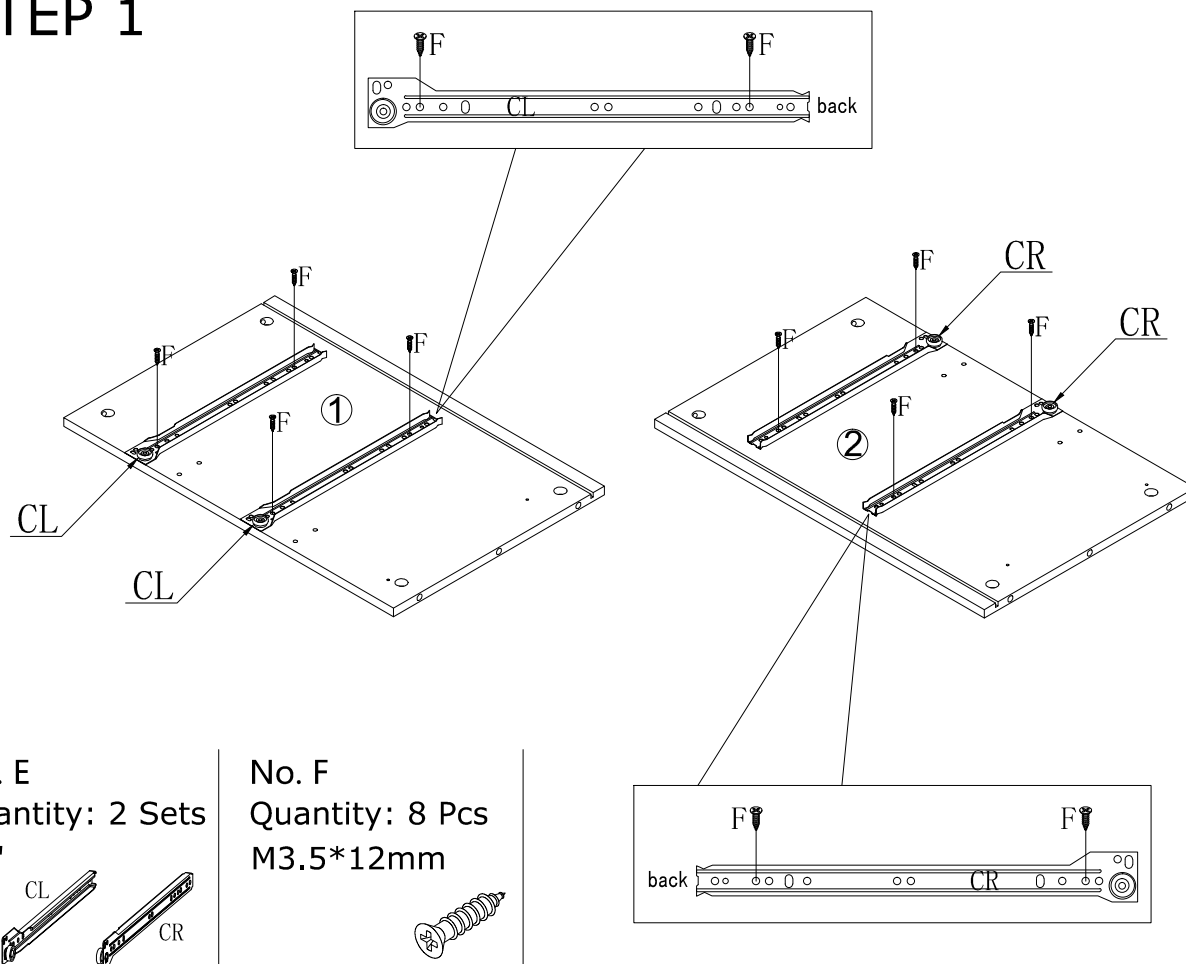


STEP 2

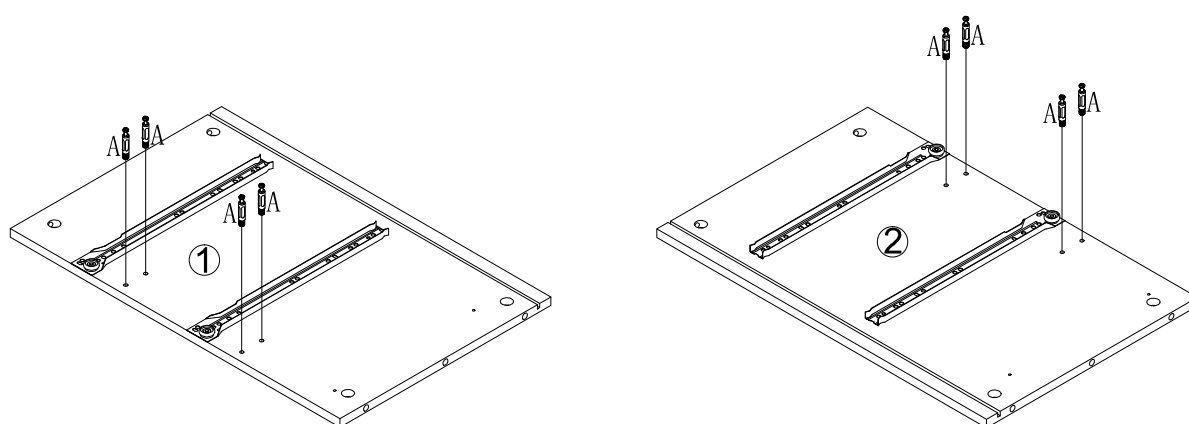

No. A
Quantity: 8 Pcs
8*28 mm




STEP 3

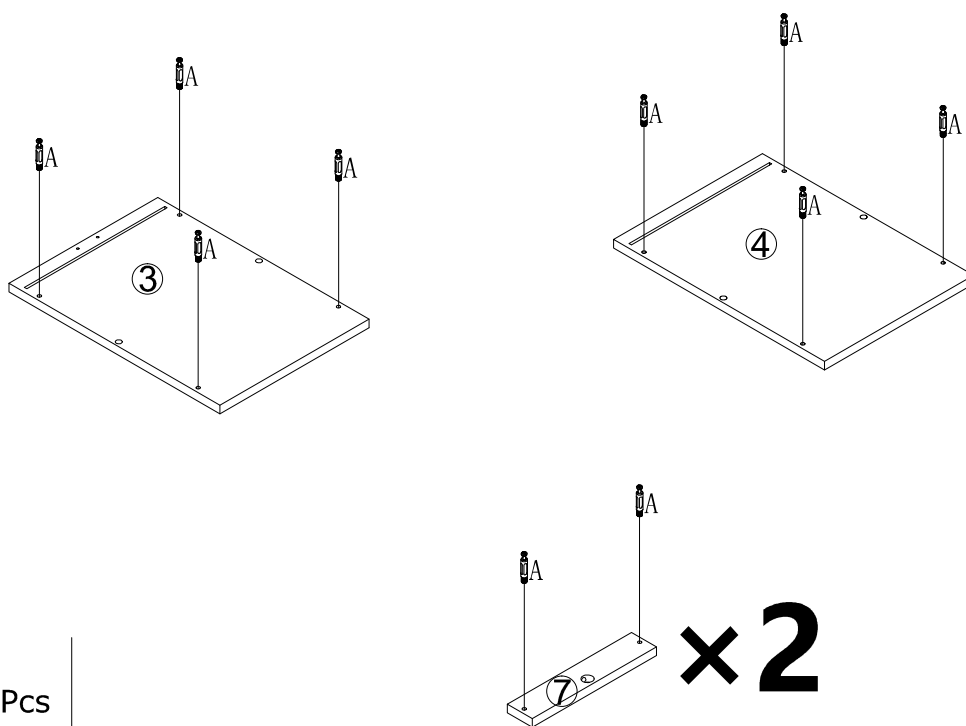

No. A
Quantity: 12 Pcs
8*28 mm



STEP 4

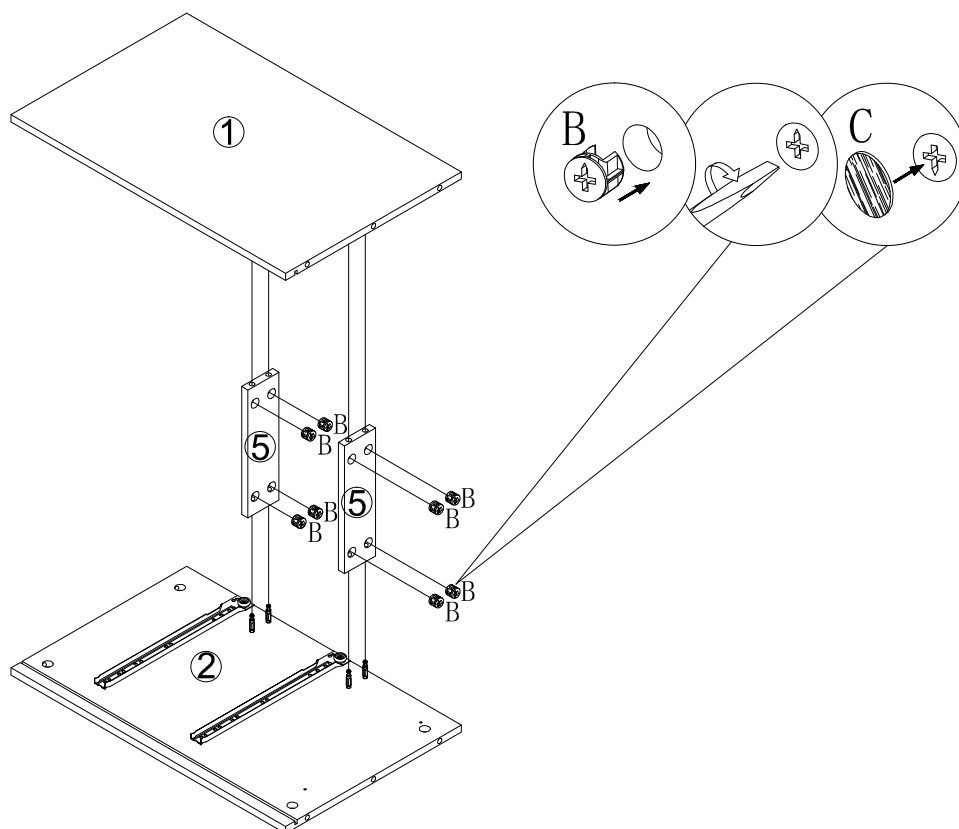

No. B
Quantity: 8 Pcs
Ø15



No. C
Quantity: 8 Pcs
Ø20



STEP 5



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

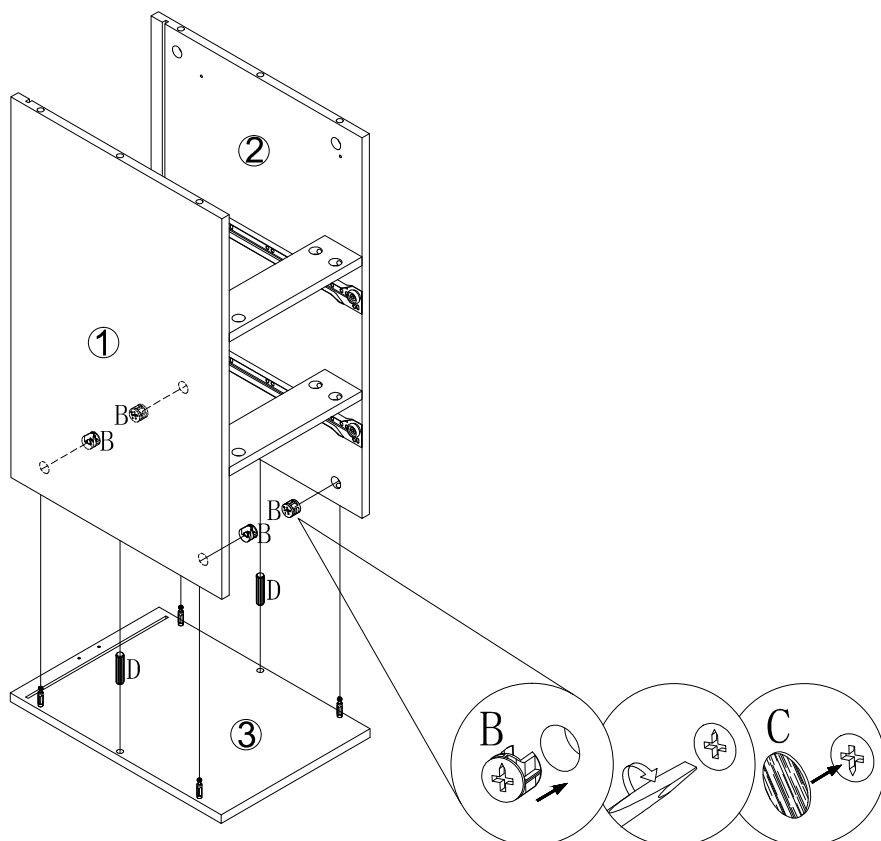


STEP 6

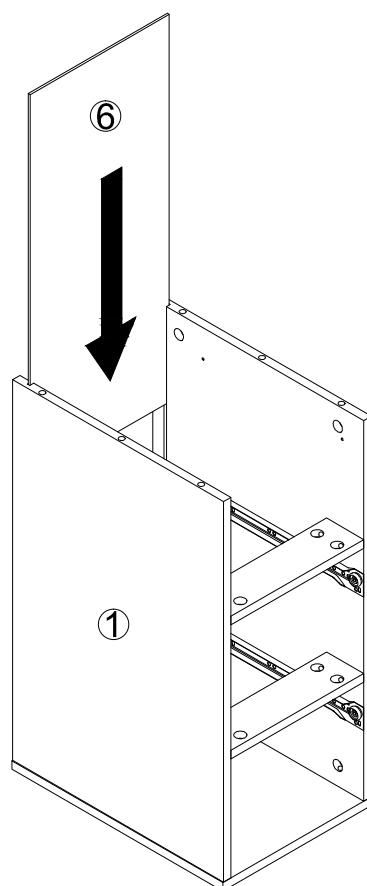

STEP 7




First, insert the metal accessories, paying attention to the direction of the arrow.

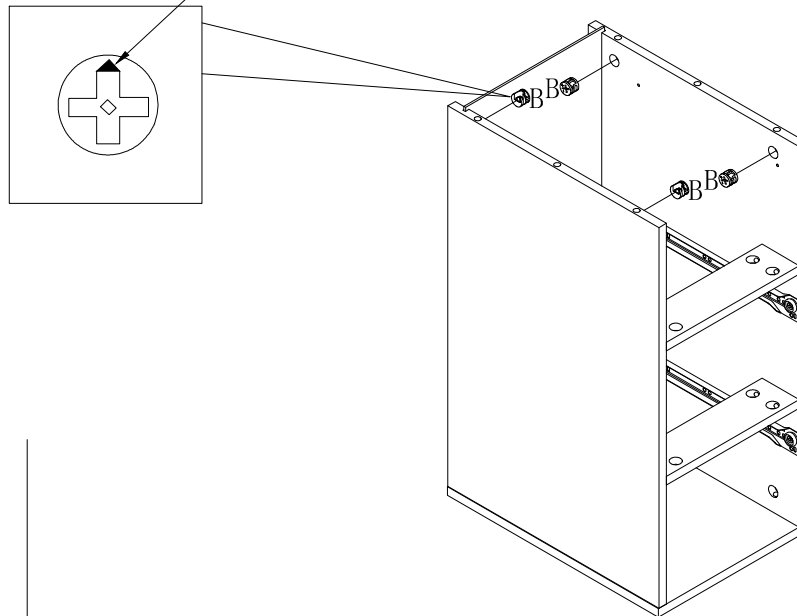


No. B
Quantity: 4 Pcs
Ø15



STEP 8

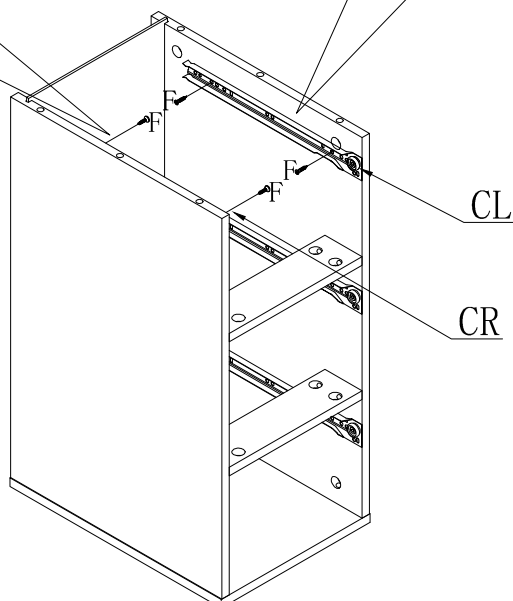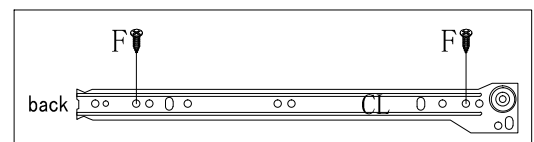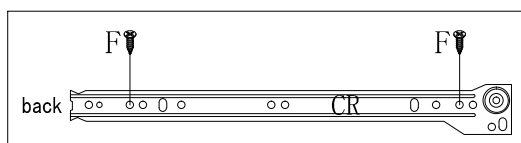


No. E
Quantity: 1 Sets
12"




No. F
Quantity: 4 Pcs
M3.5*12mm




STEP 9

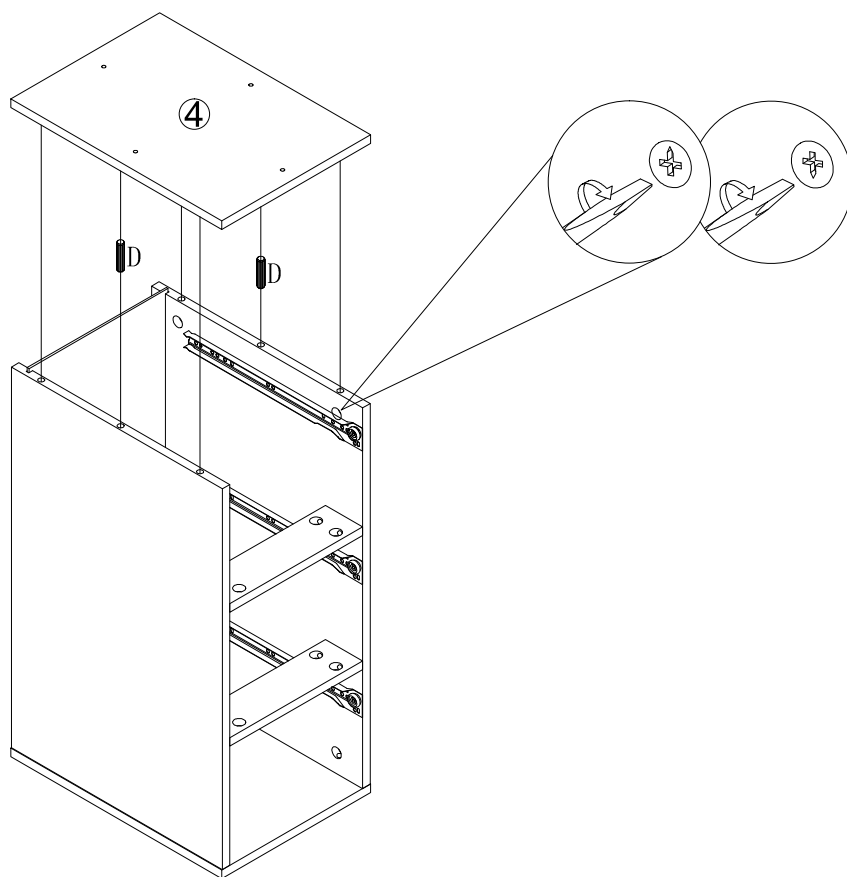


No. D
Quantity: 2 Pcs
8*30mm




STEP 10

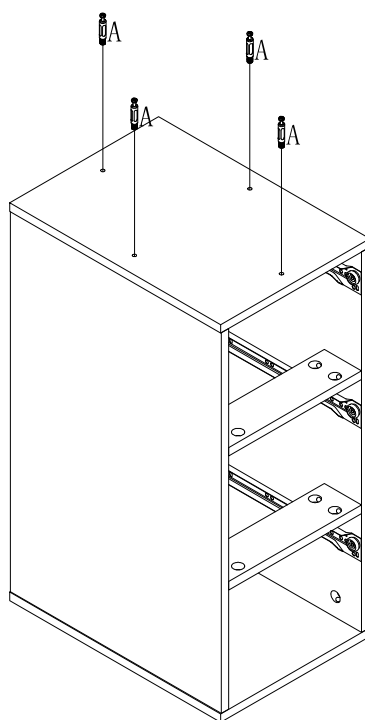

No. A
Quantity: 4 Pcs
8*28 mm



STEP 11

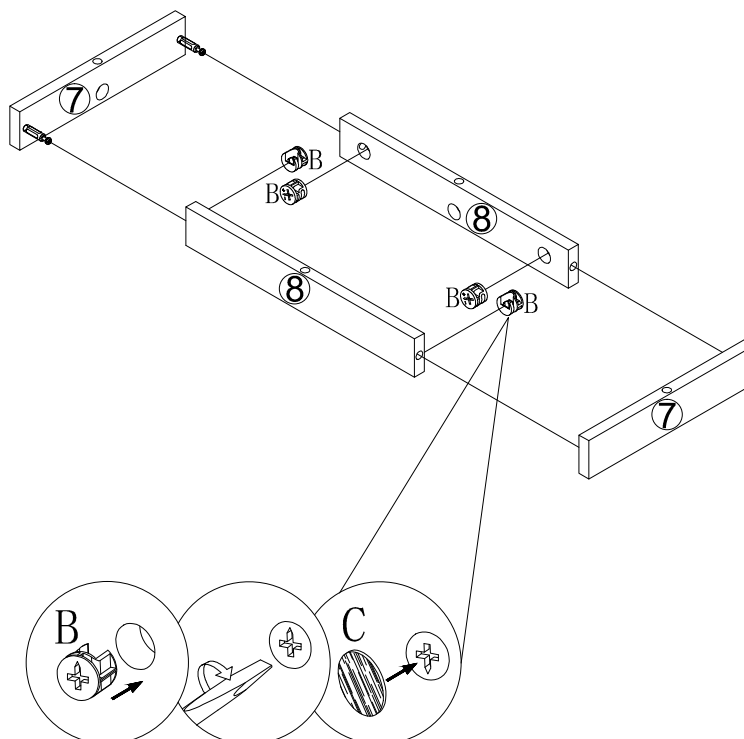


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 12

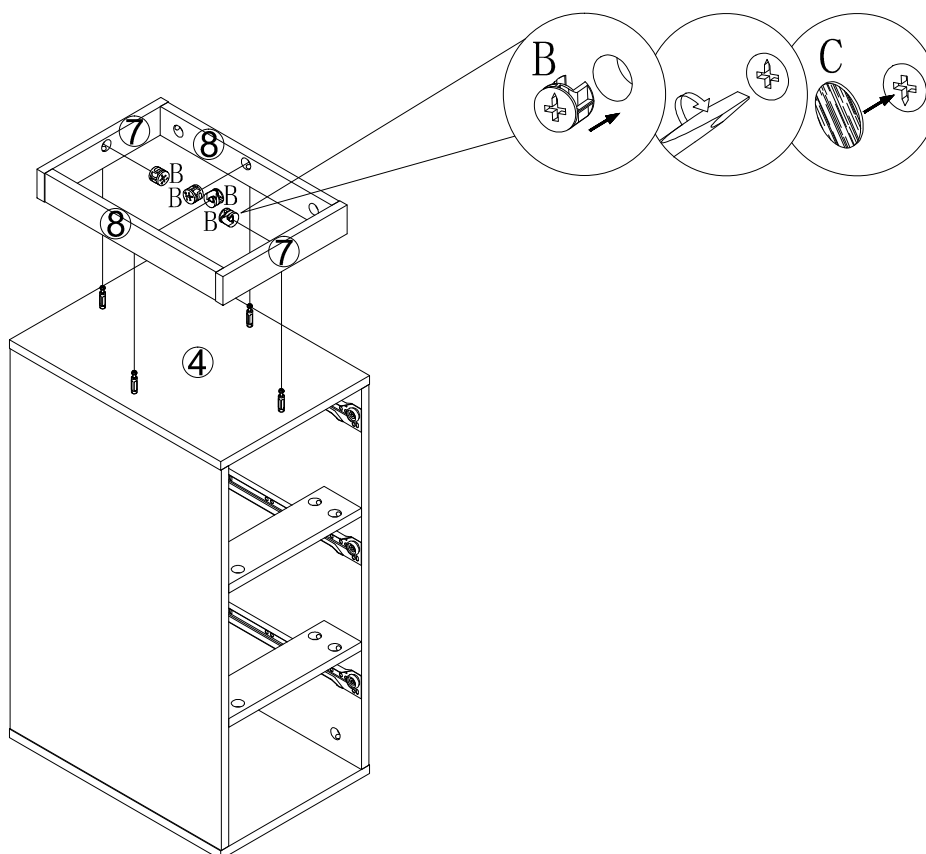


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




STEP 13

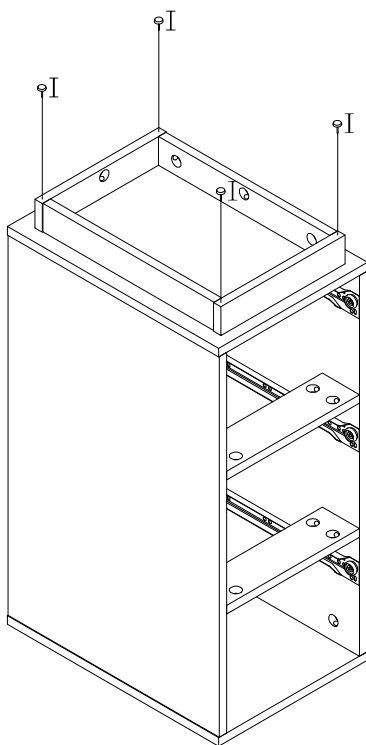

No. I
Quantity: 4 Pcs
Ø15




STEP 14

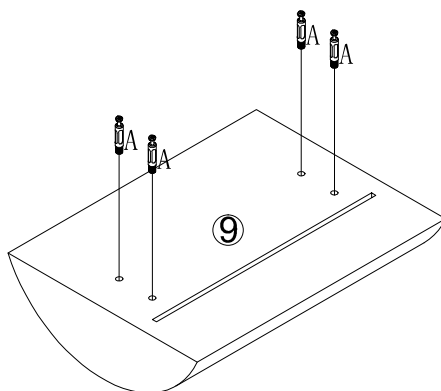


×3


No. A
Quantity: 12 Pcs
8*28 mm



STEP 15

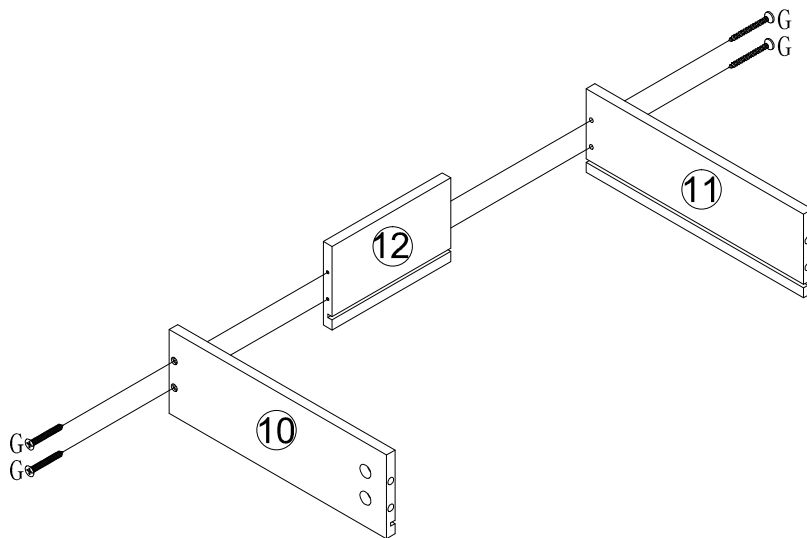


No. G
Quantity: 12 Pcs
M4*30mm



×3

STEP 16

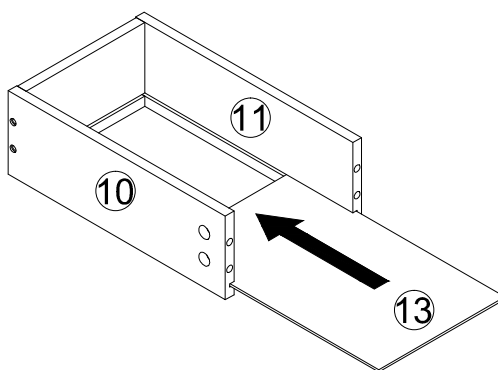


×3

STEP 17

No. B
Quantity: 12 Pcs
Ø15






No. C
Quantity: 12 Pcs
Ø20

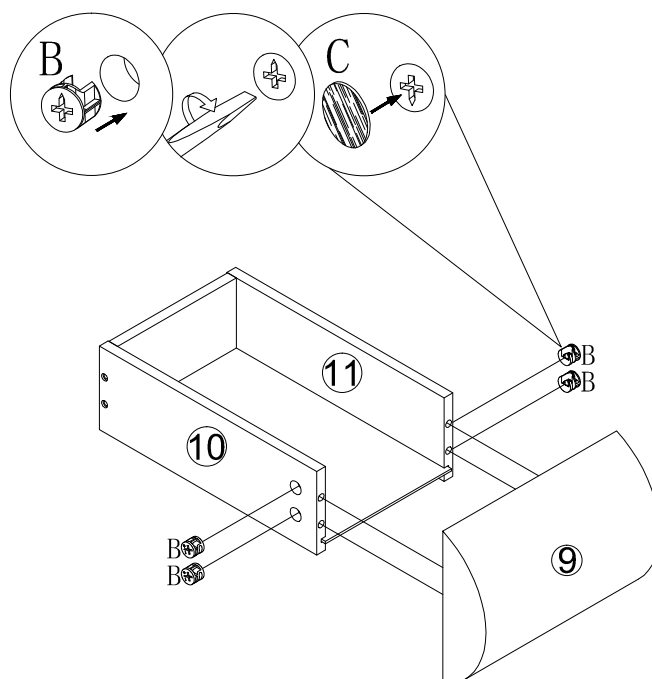


×3

STEP 18

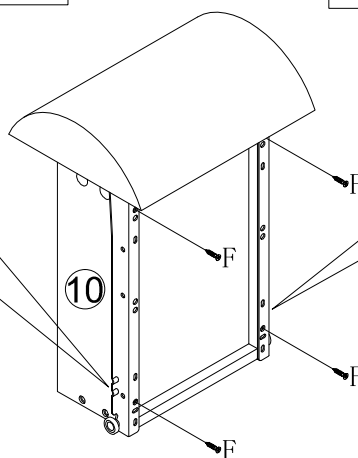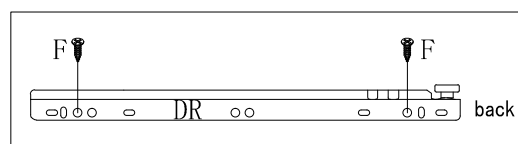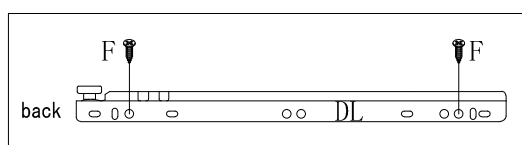

×3


No. E
Quantity: 3 Sets
12"




No. F
Quantity: 12 Pcs
M3.5*12mm



STEP 19

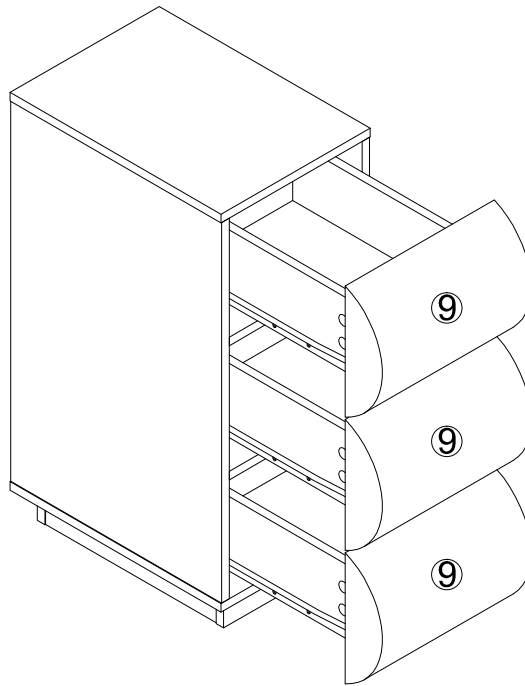


STEP 20

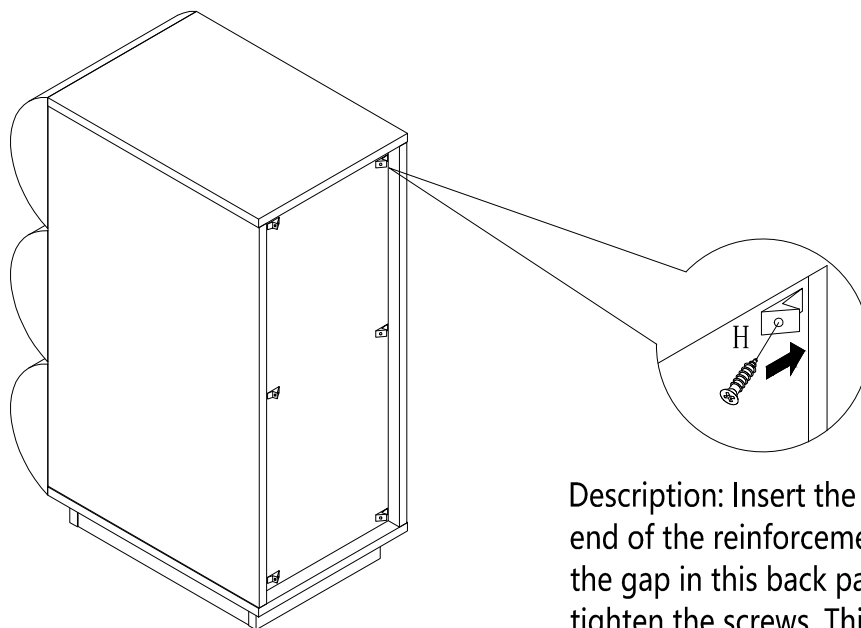


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. H
Quantity: 6 Sets



STEP 21

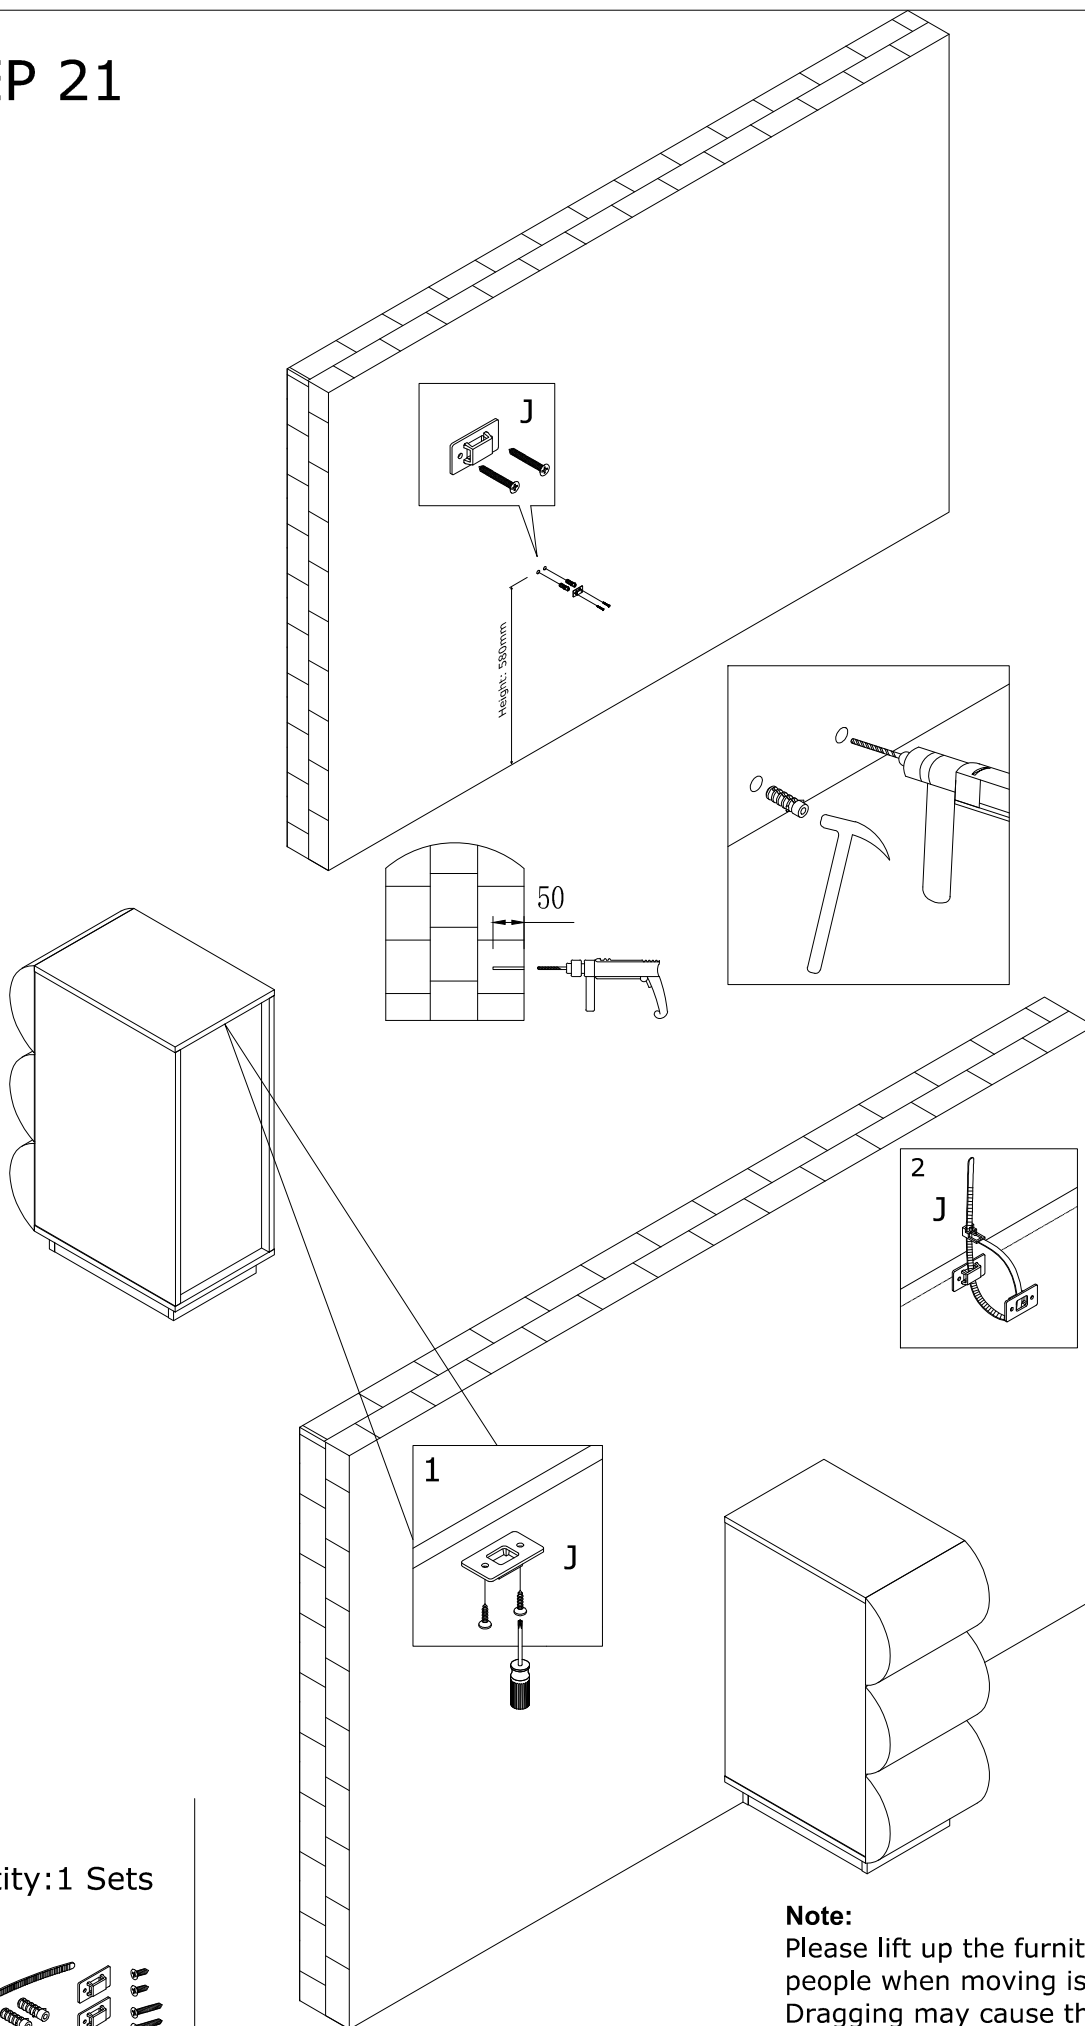

No. J

Quantity: 1 Sets

