











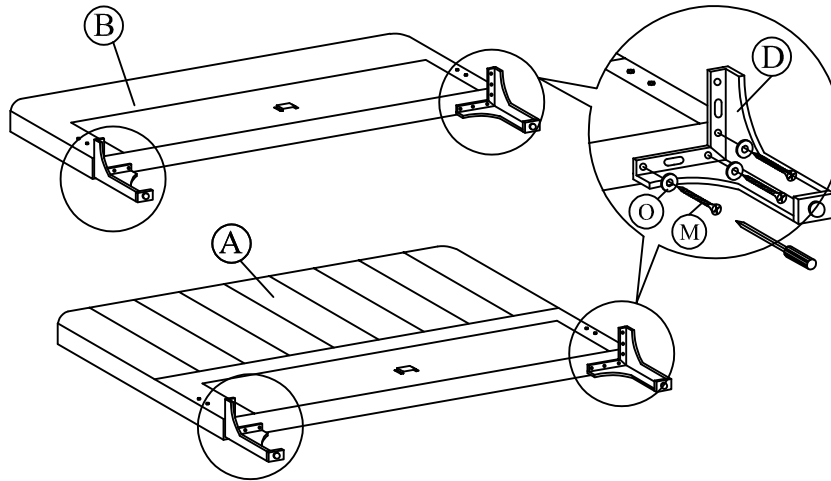



ASSEMBLY INSTRUCTION

| | | |
|---|---|--------|
| A |  | 1 pc |
| B |  | 1 pc |
| C |  | 2 pcs |
| D |  | 4 pcs |
| E |  | 1 pc |
| F |  | 2 pcs |
| G |  | 26 pcs |
| H |  | 13 pcs |
| I |  | 26 pcs |
| J |  | 2 pcs |
| K |  | 1 pc |
| L |  | 1 pc |
| M | | 14 pcs |
| N | | 4 pcs |
| O | | 12 pcs |
| P | | 2 pcs |
| Q | | 8 pcs |


Step 1 : Tighten the legs (D) to both headboard (A) and footboard (B) as shown.



Step 2 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

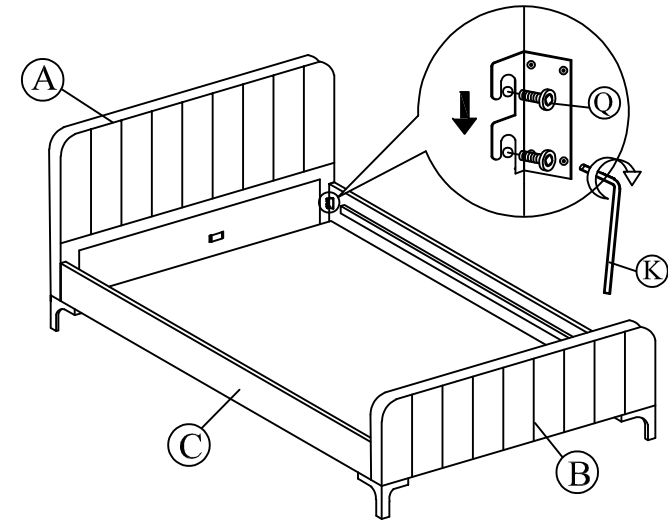


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

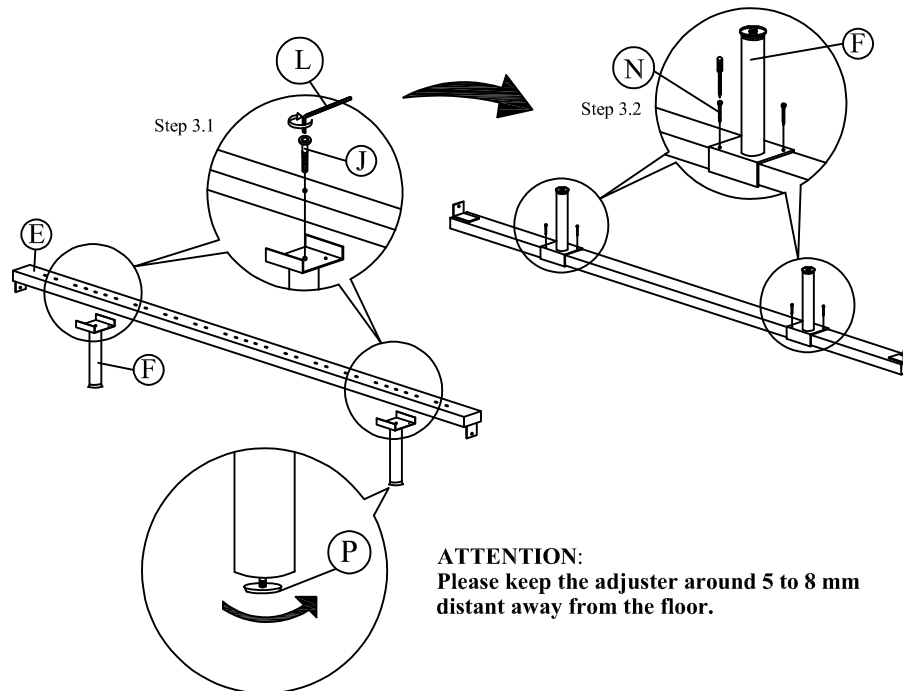

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (M) using screw driver (not included) to the headboard (A) and footboard (B).

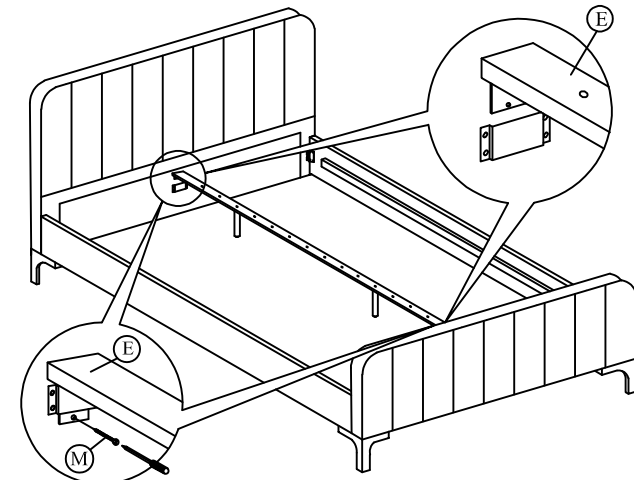

Attention : Please ensure that (M) screw is being attach as per the A.I shown to avoid base being collapse.

Step 5 : Tighten all the 4 corner, follow by assembly of the slat holders with L VL slats as shown.

