

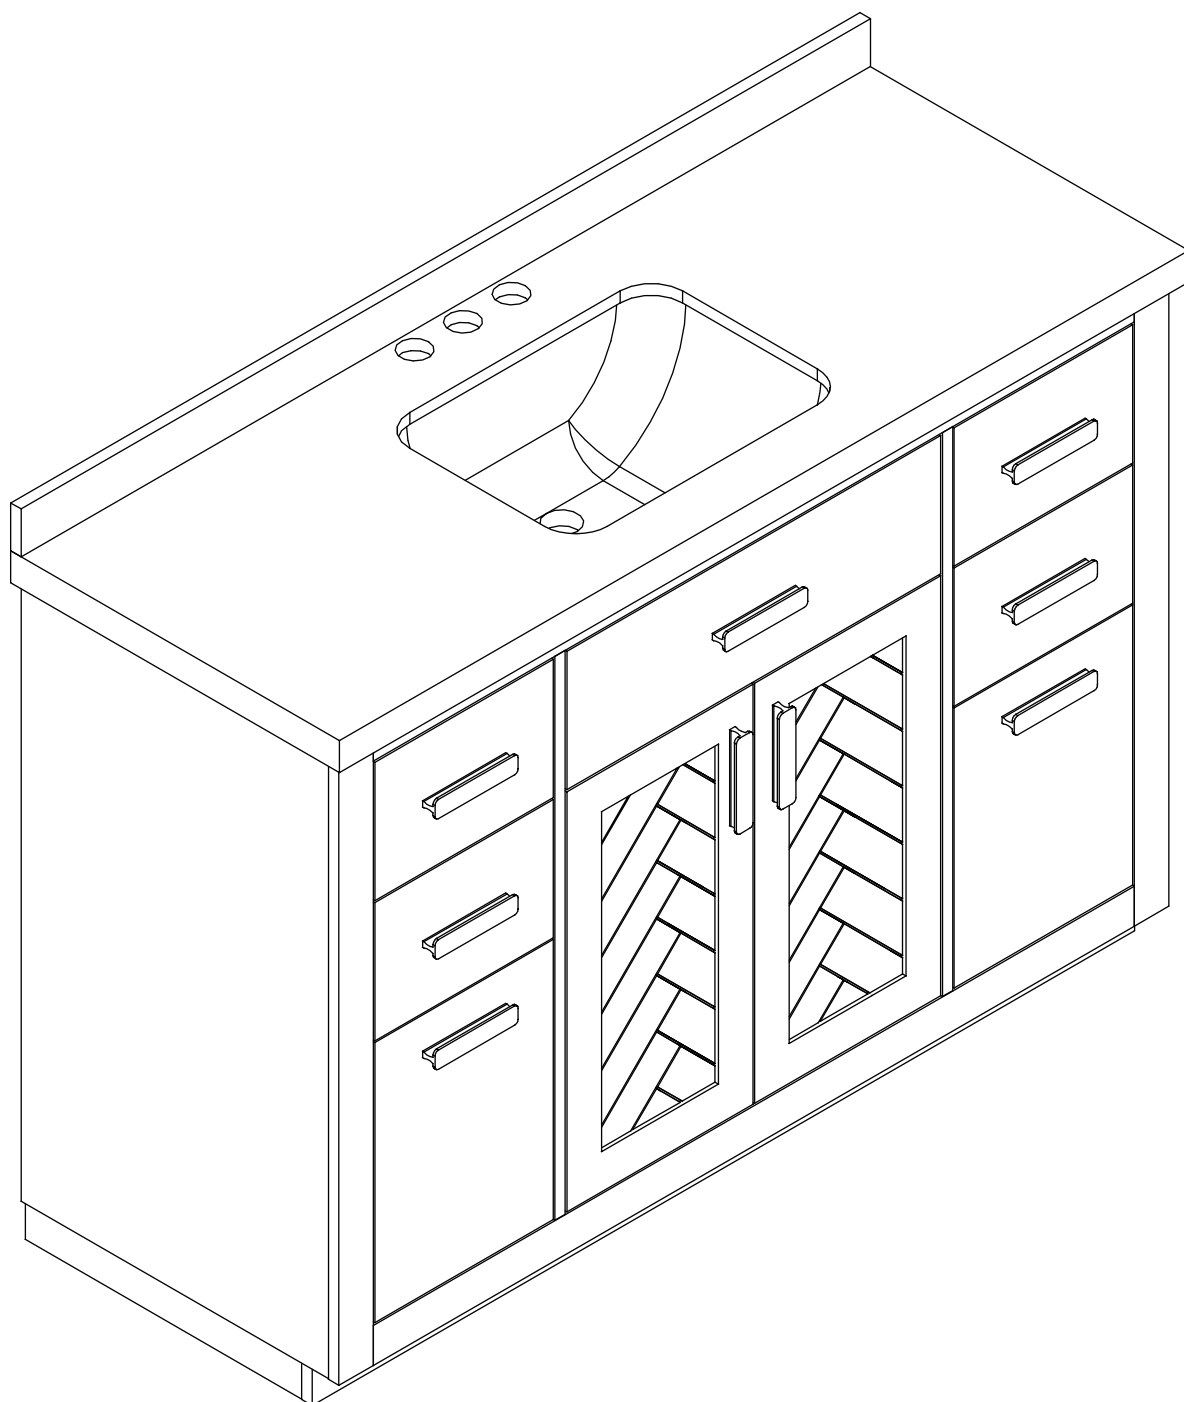
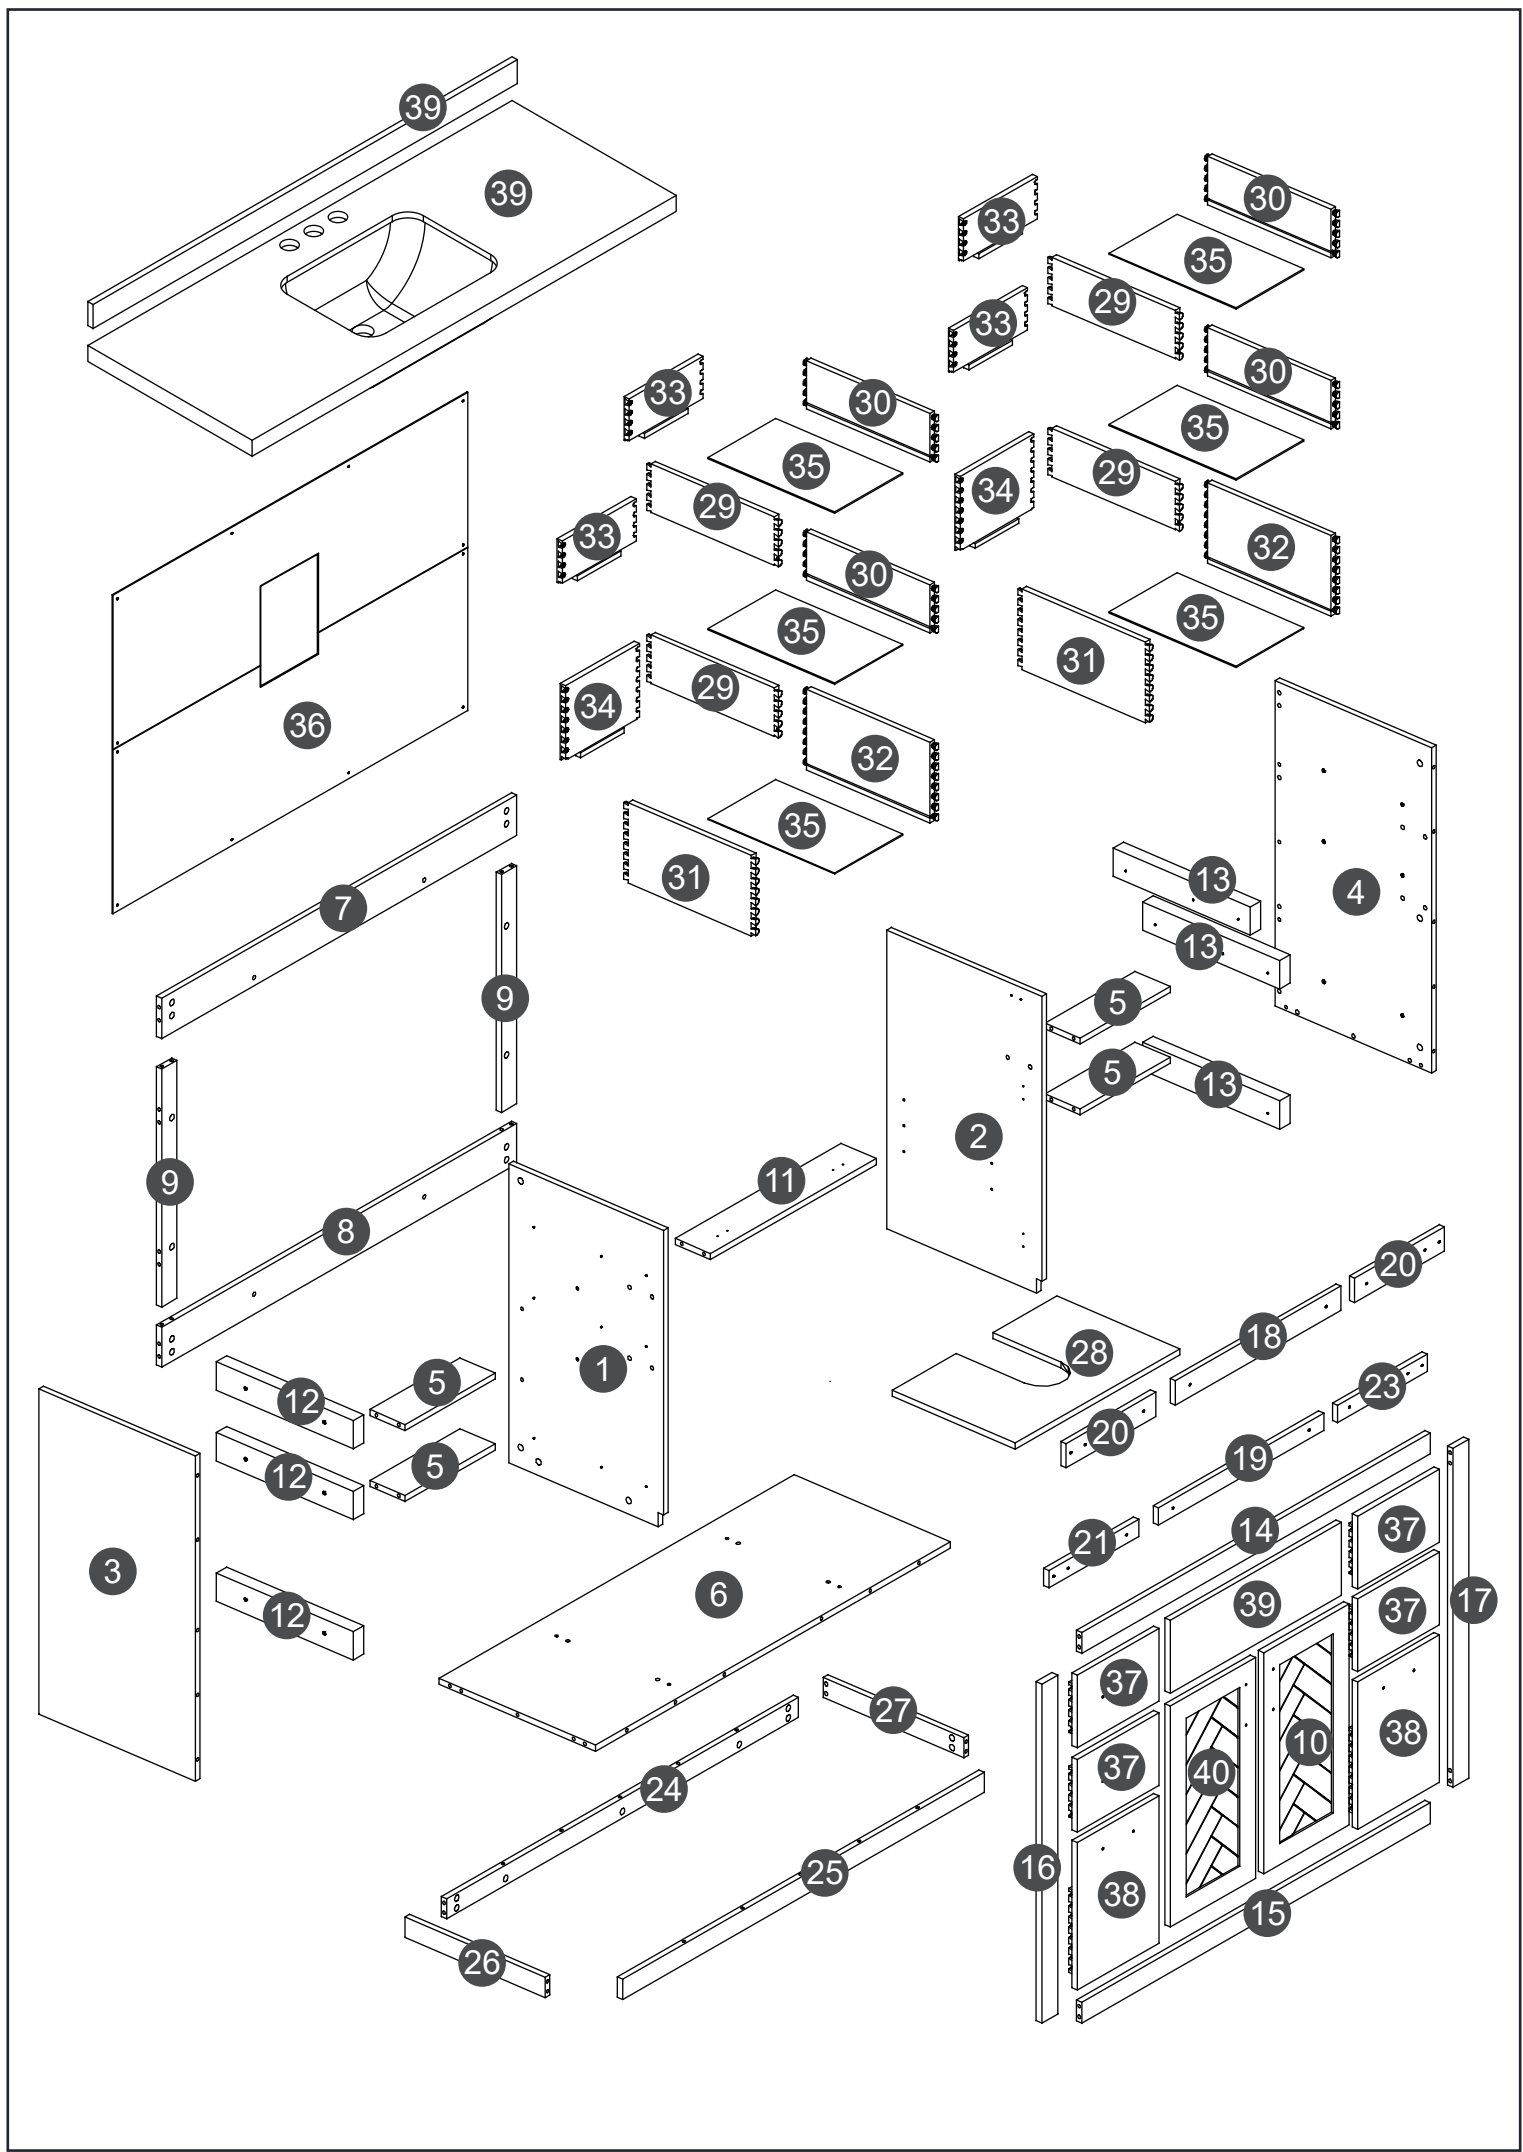
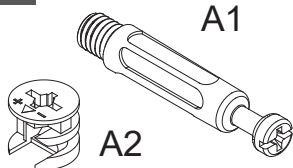
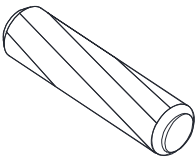
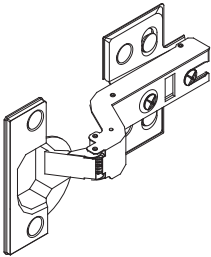
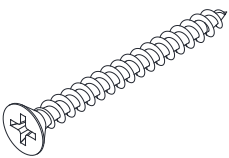
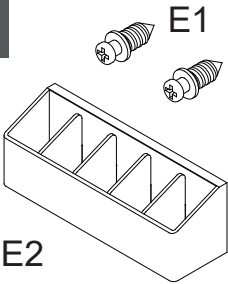

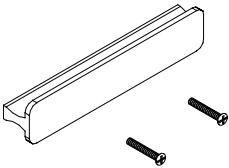
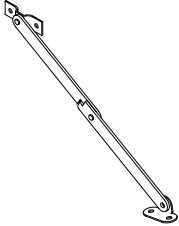
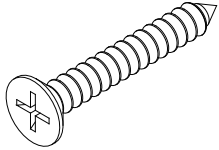
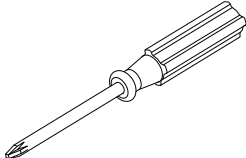



Installation & Assembly


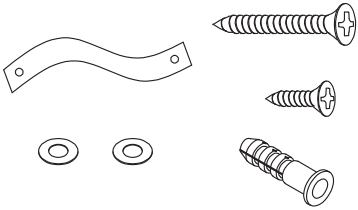


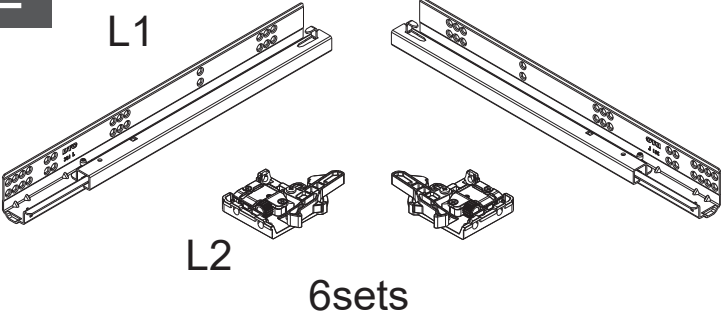


A  74+2sets	B Φ8*30  48+2pcs	C  6pcs
D 3.5*30  12+1pcs	E  2sets	F  4pcs
G  9sets	H 3.5*14  112+2pcs	I  1pcs
J 3.5*25  18+1pcs	K  1pcs	M  2sets
L  6sets		



1

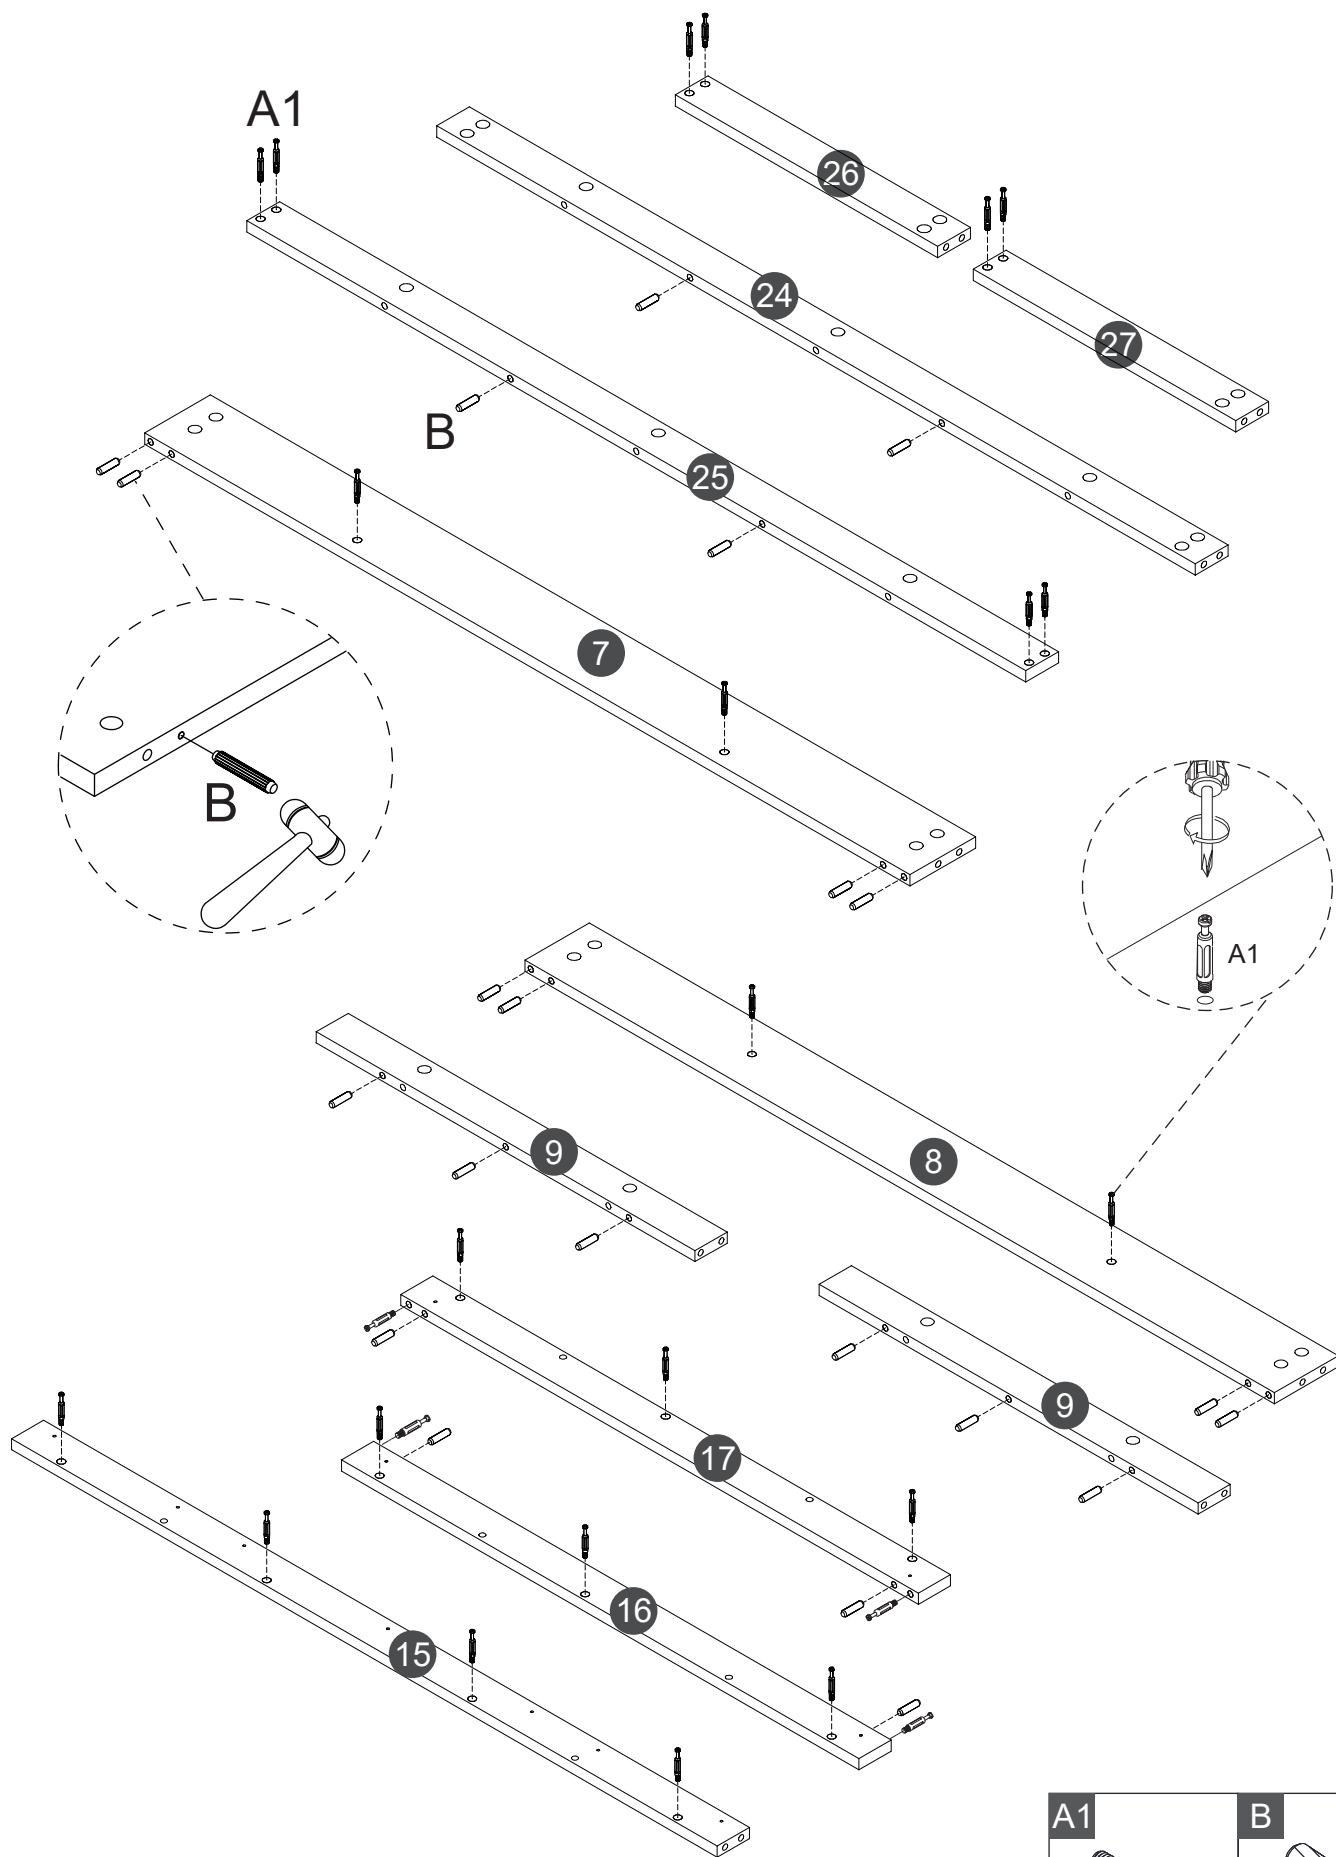


A1	B
 26pcs	 22pcs



2

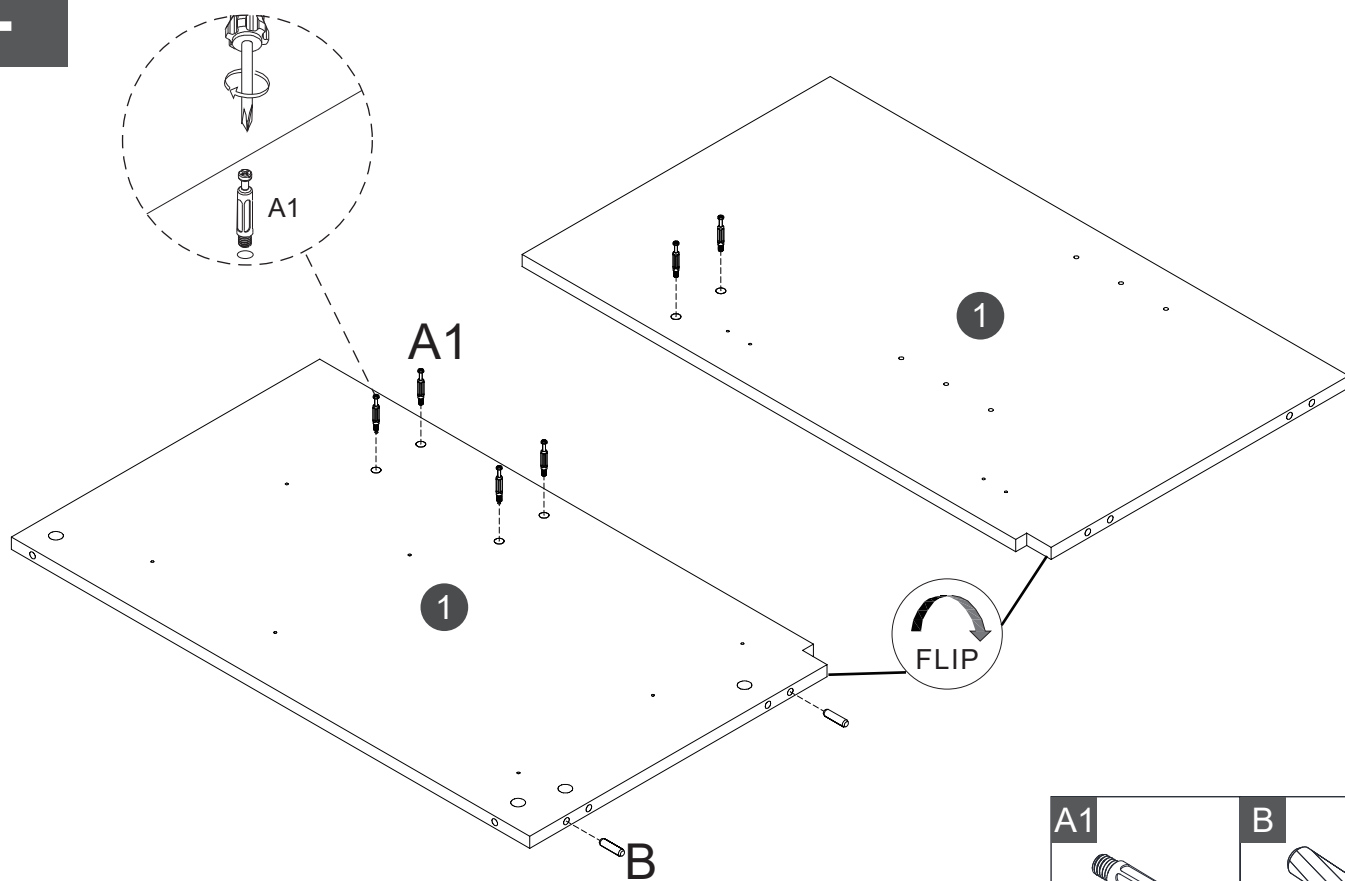


A1	B
	
6pcs	2pcs



3

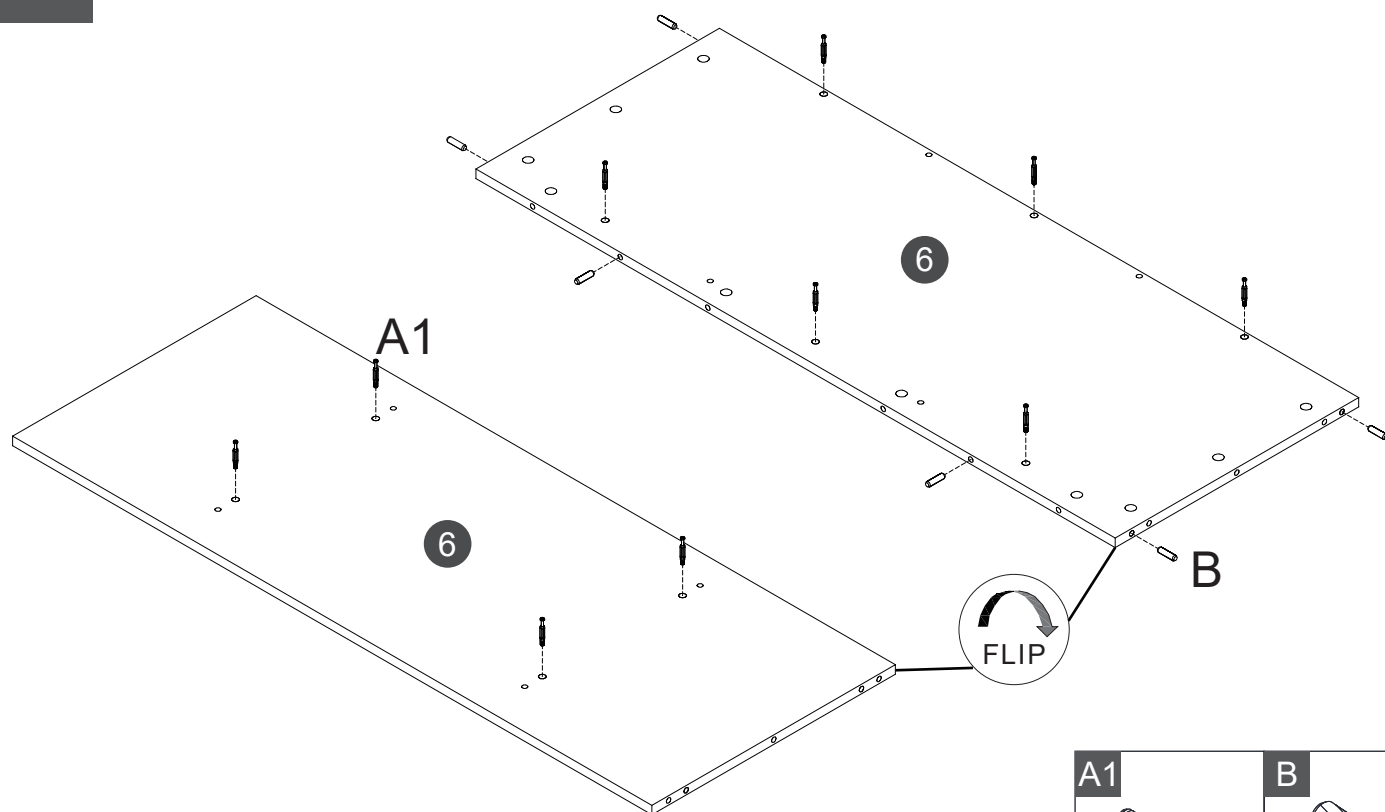


A1	B
	
10pcs	6pcs



4

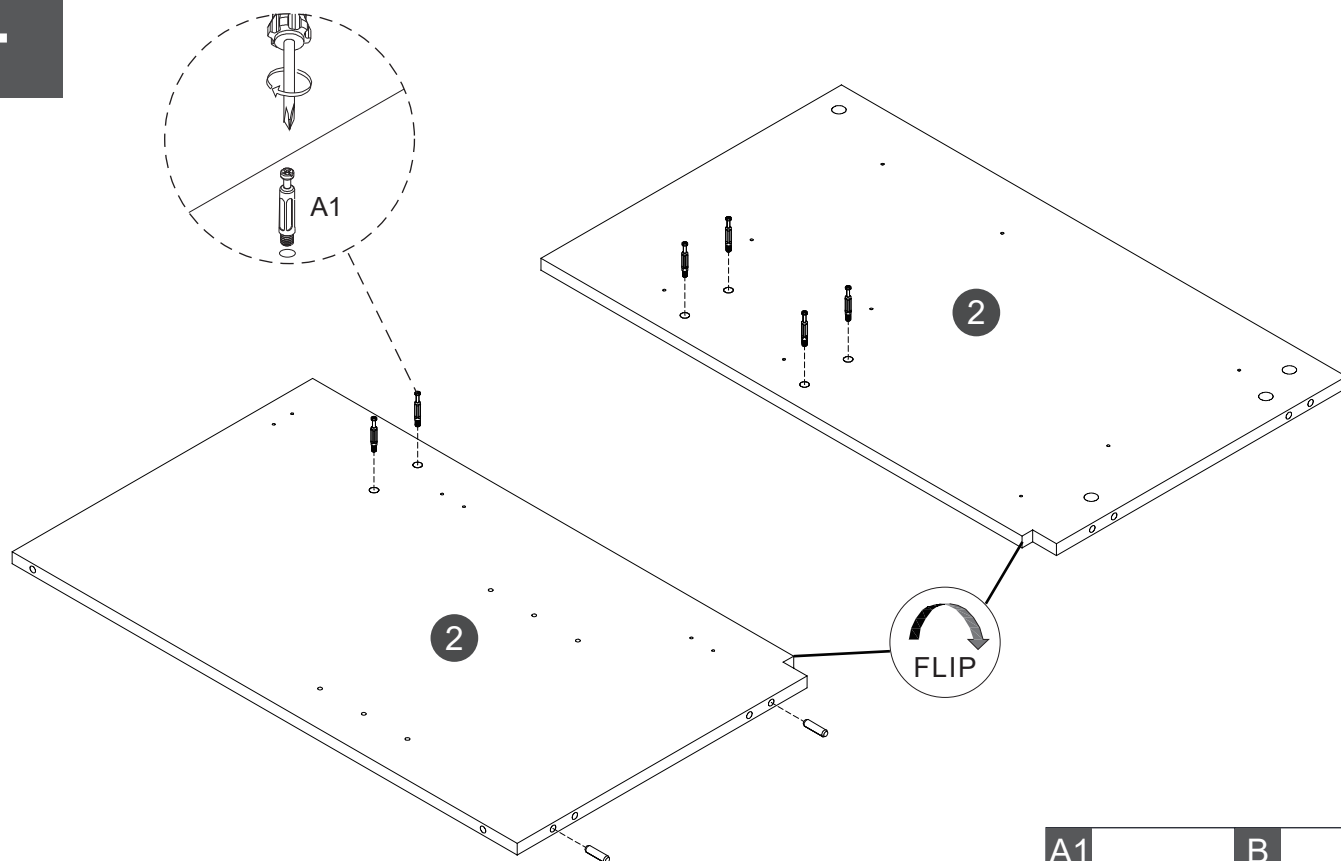


A1	B
	
6pcs	2pcs




5-1

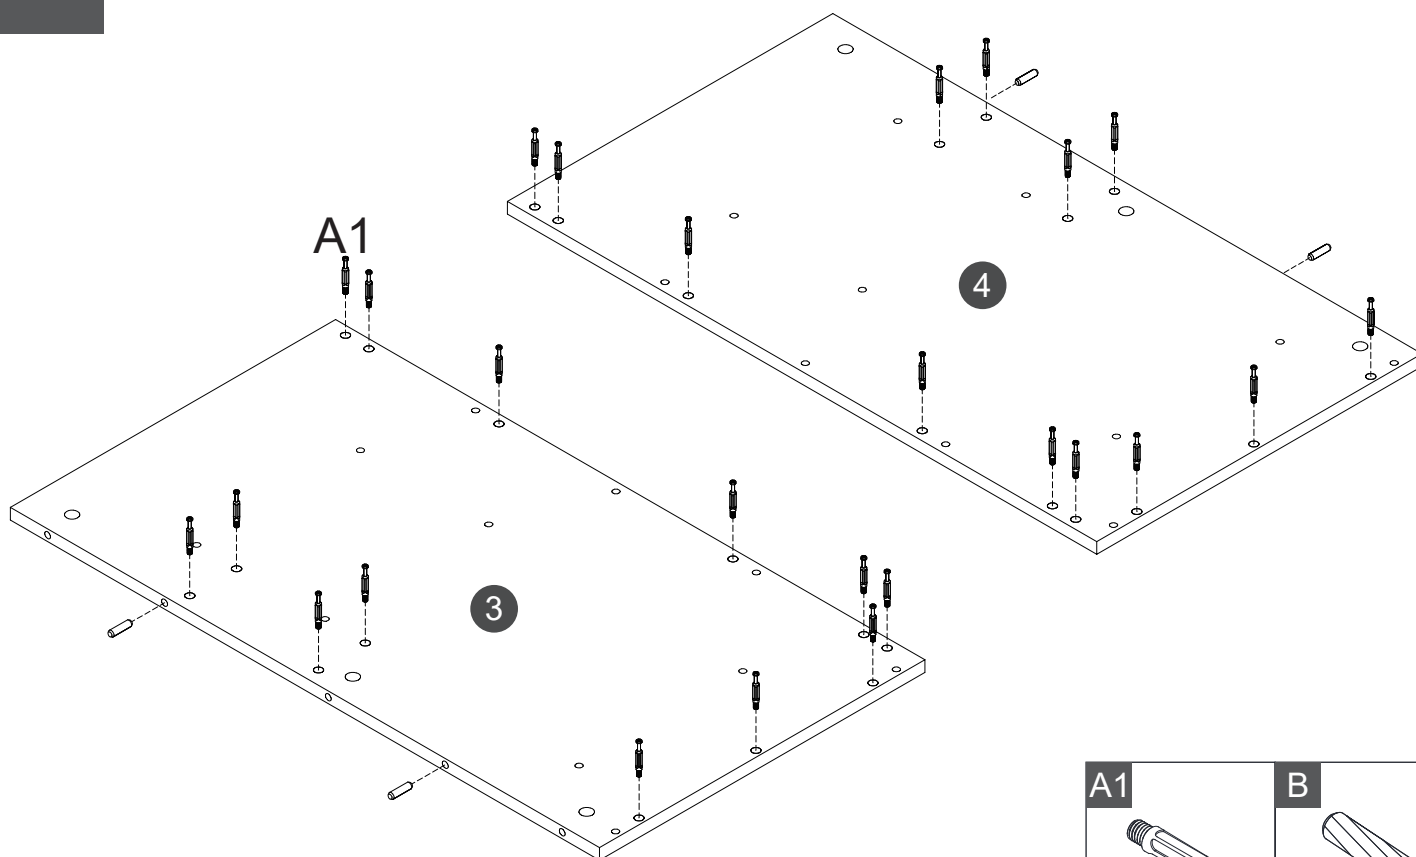


A1	B
	
26pcs	4pcs

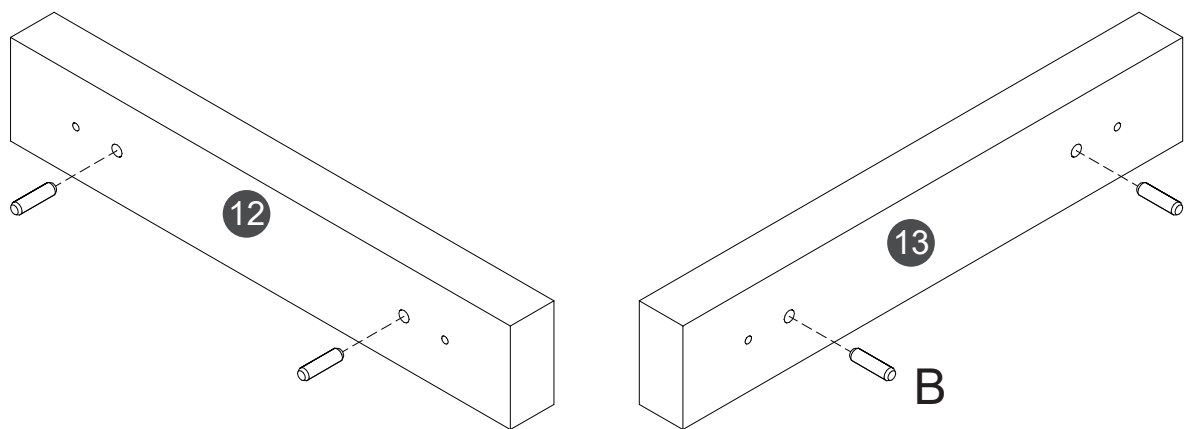

x3

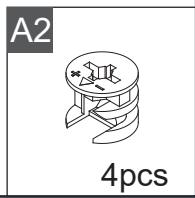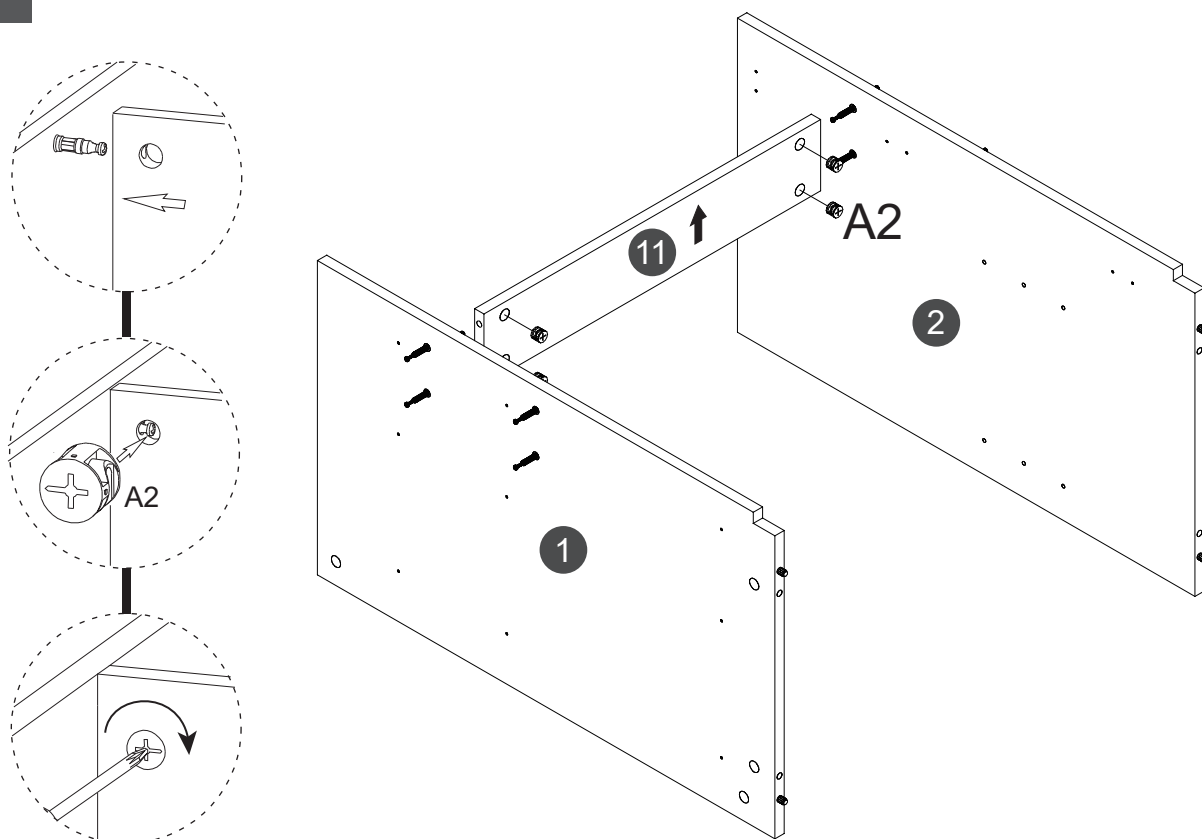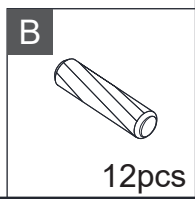

7

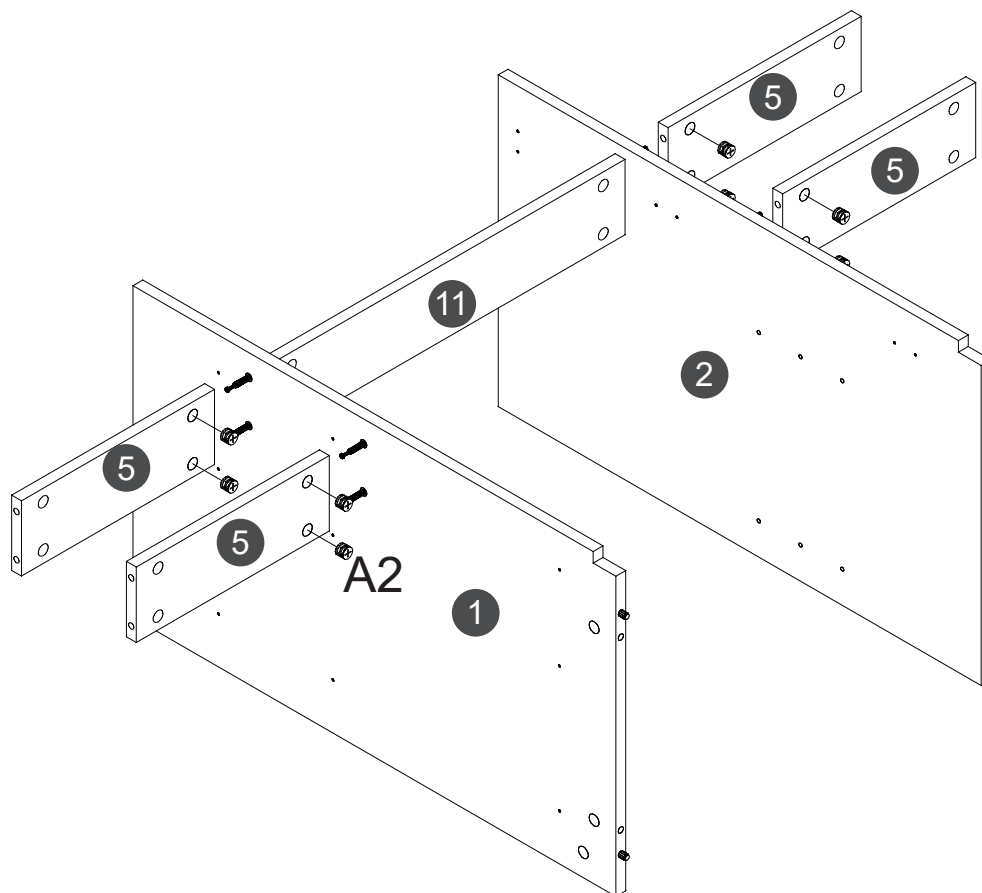


A2





8pcs

8

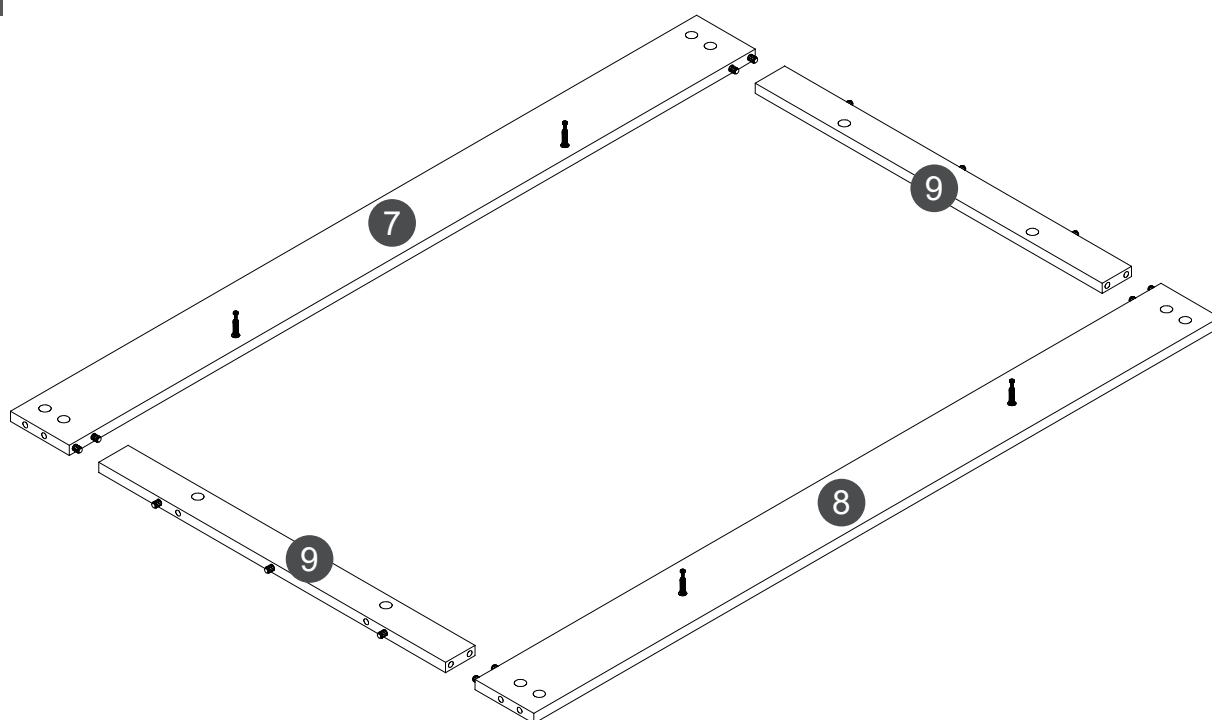

9

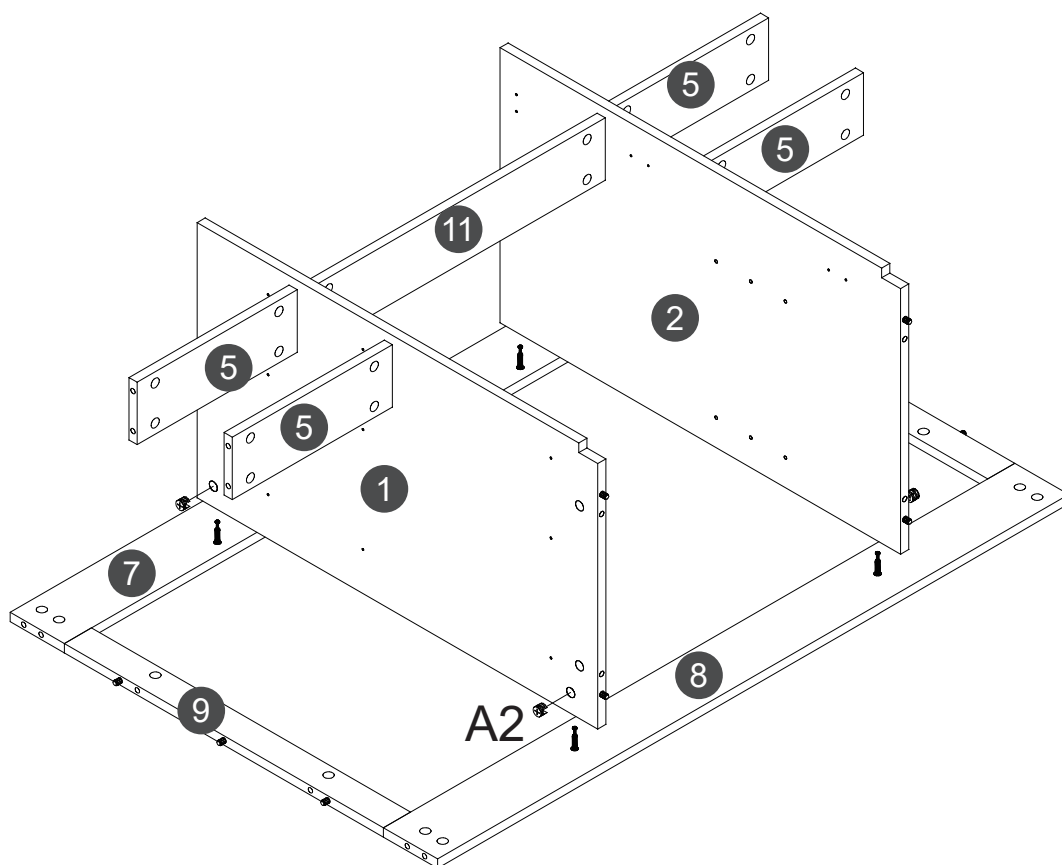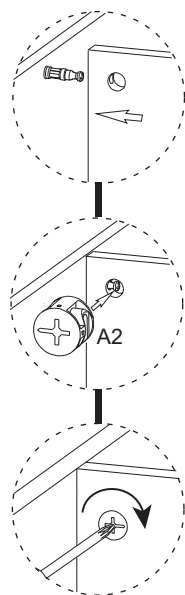


A2



4pcs

10


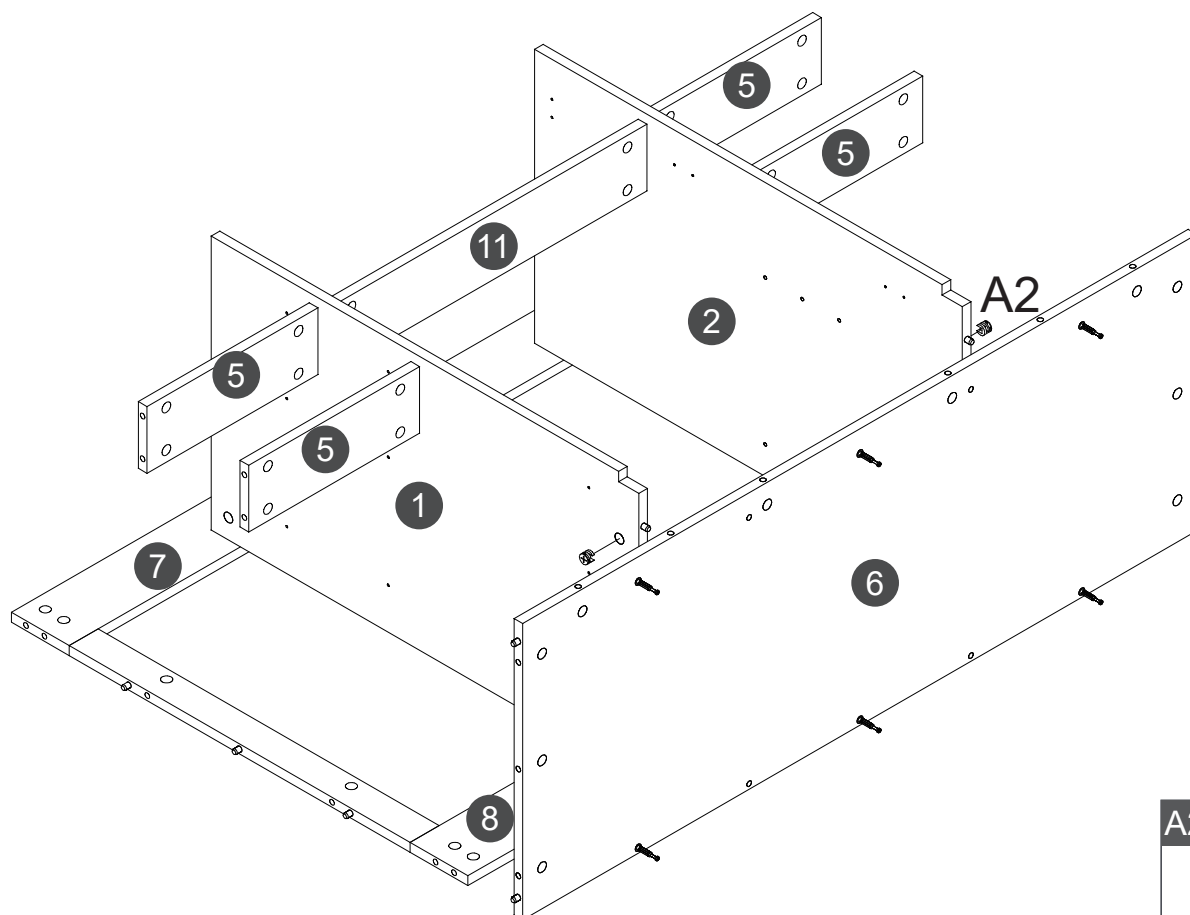


A2



4pcs

11

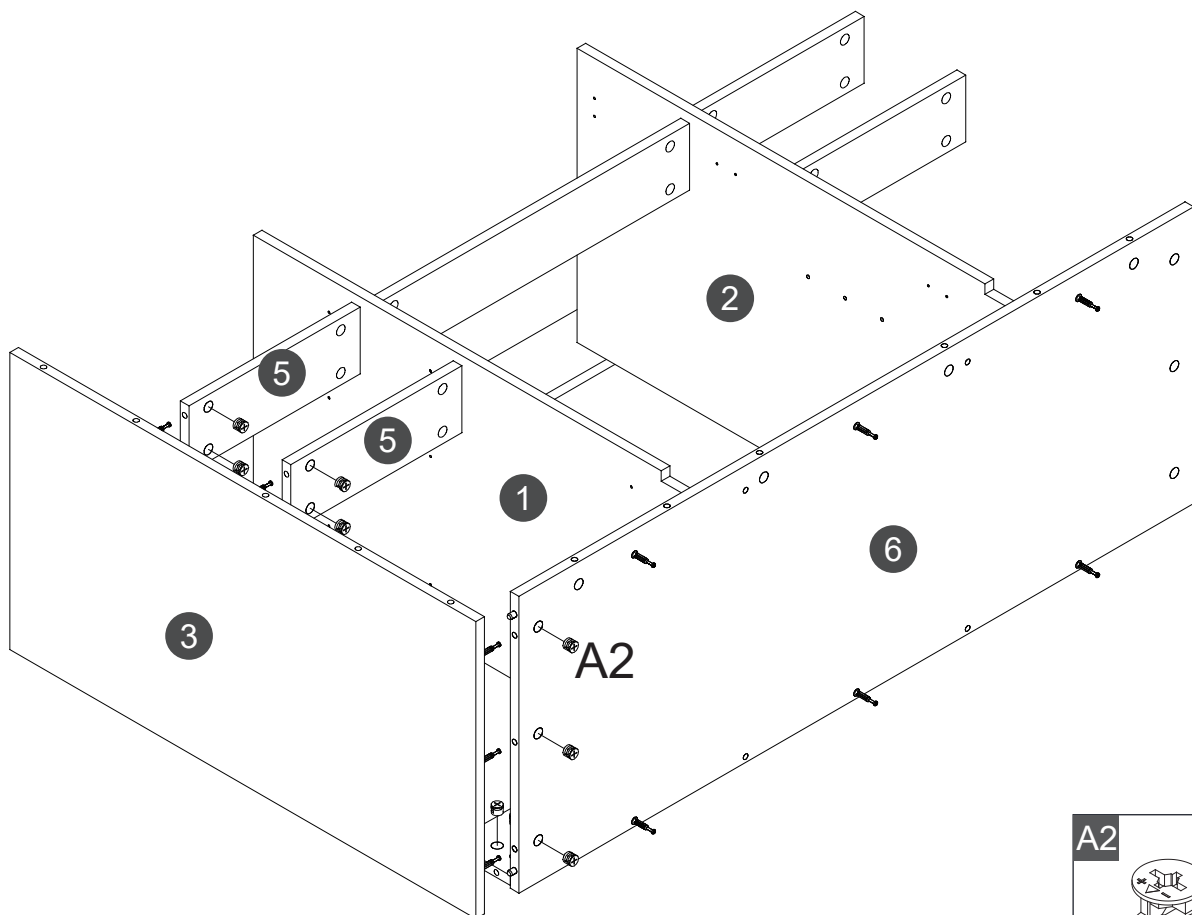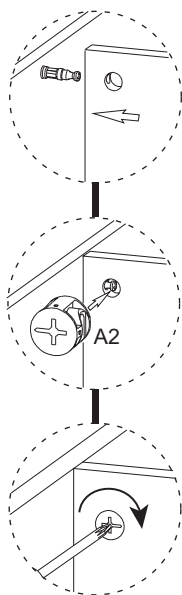


A2



13pcs

12


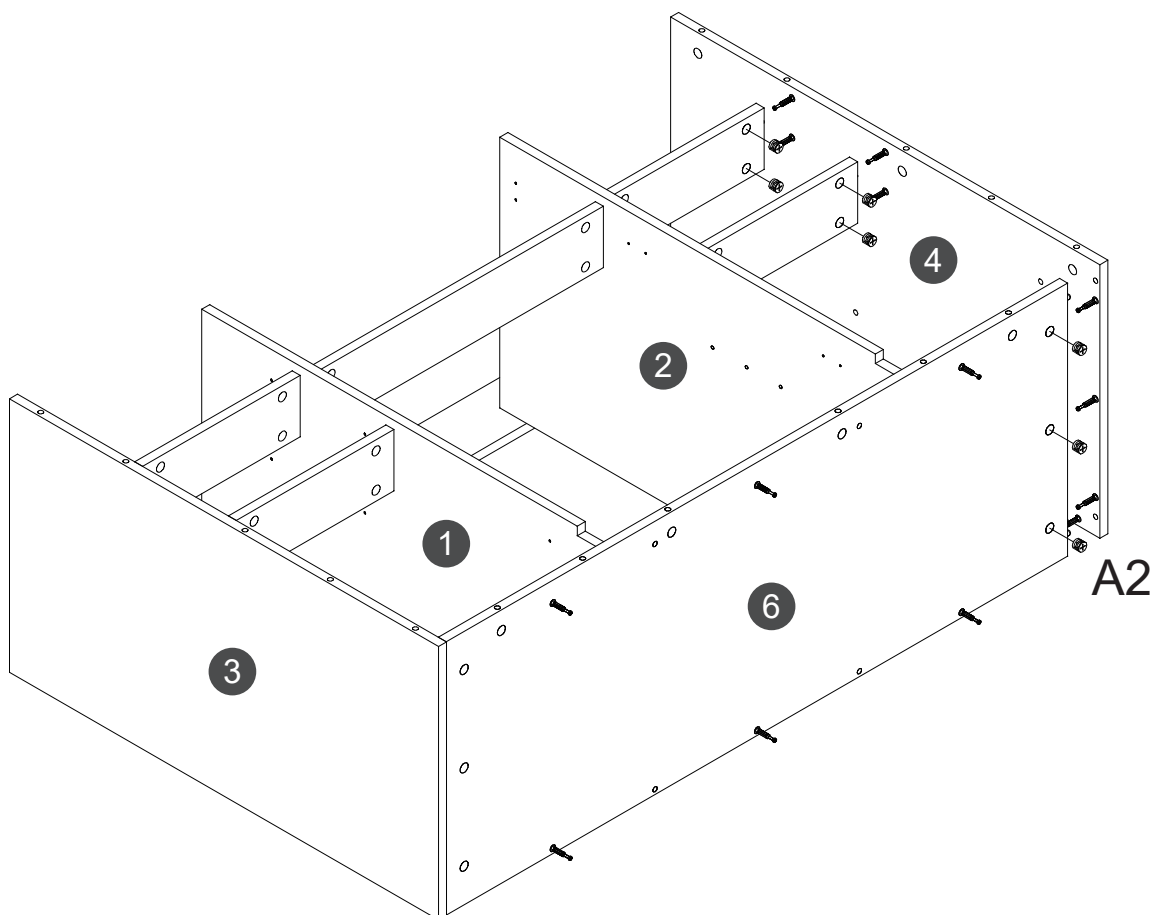


A2



13pcs

13

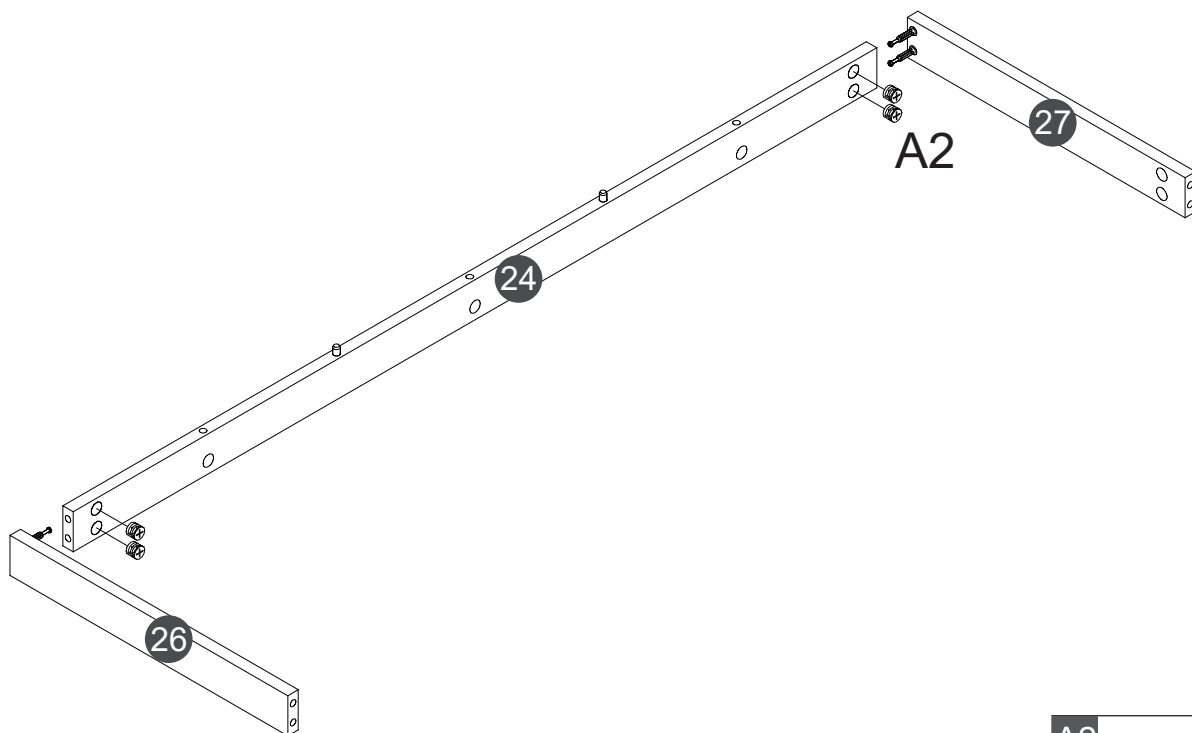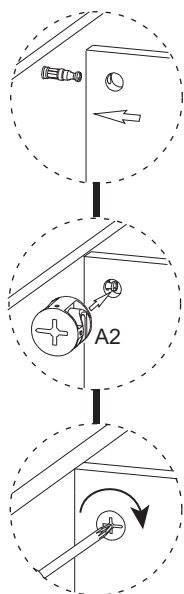


A2



4pcs

14

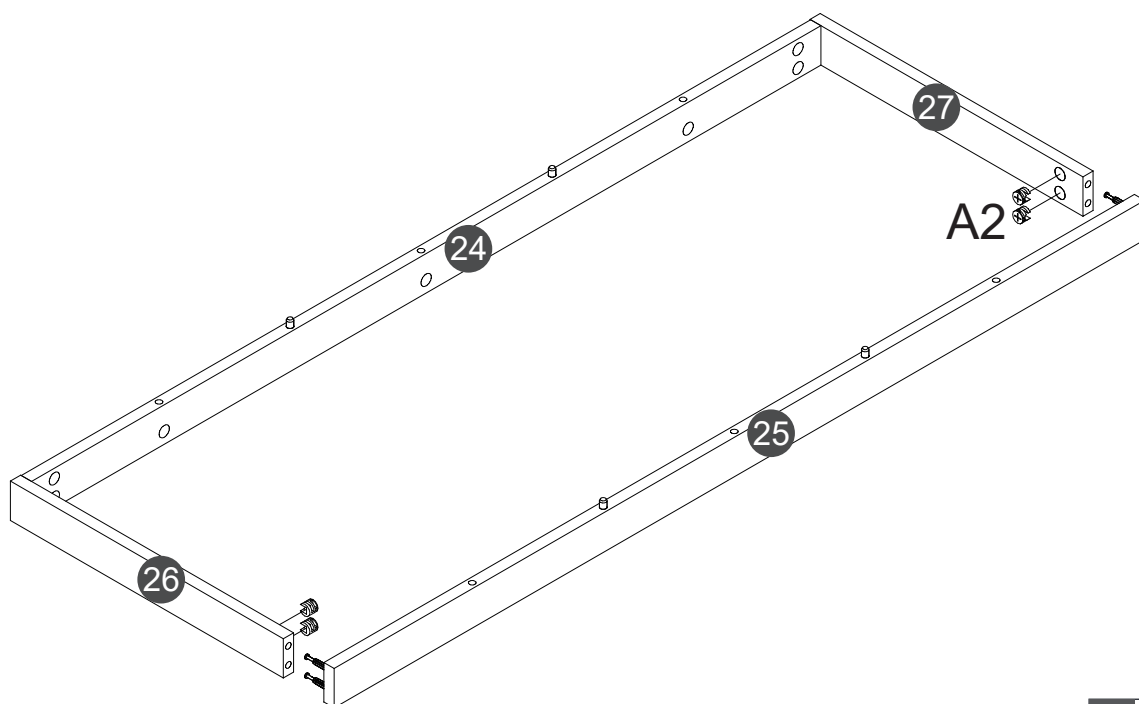


A2



4pcs

15

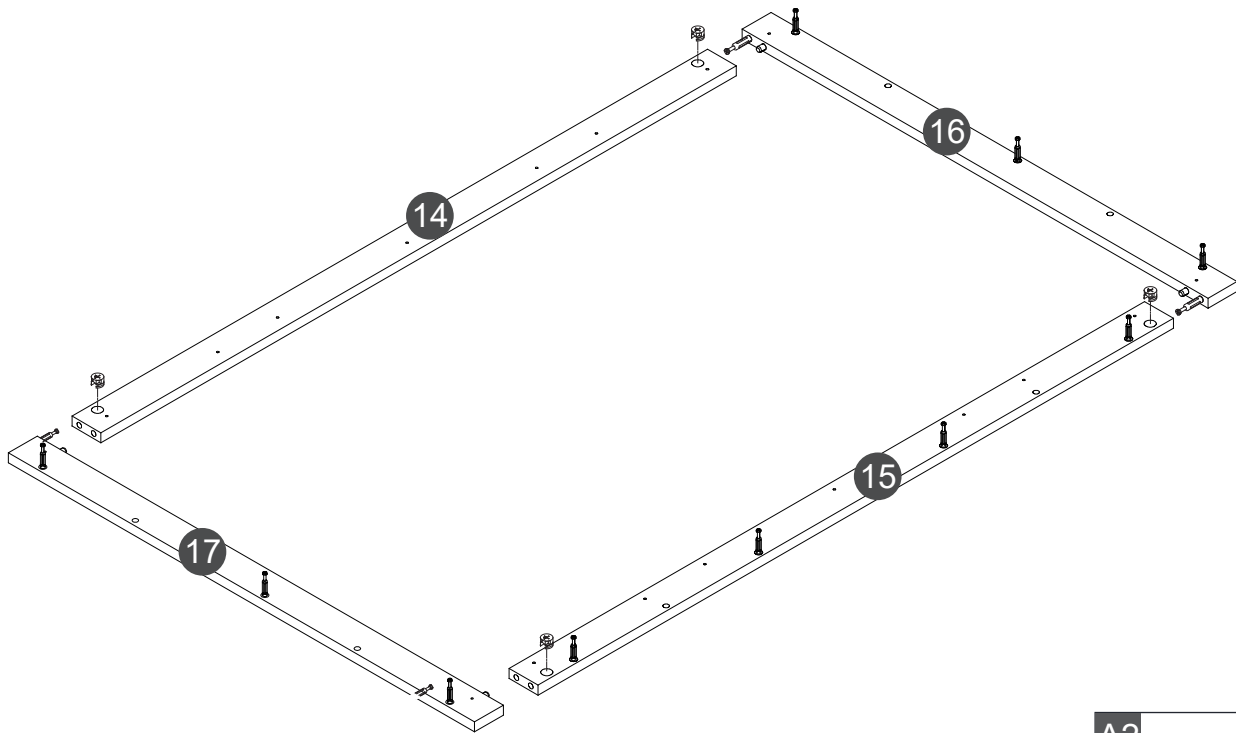

A2

4pcs

16




J 3.5*25



18pcs

17

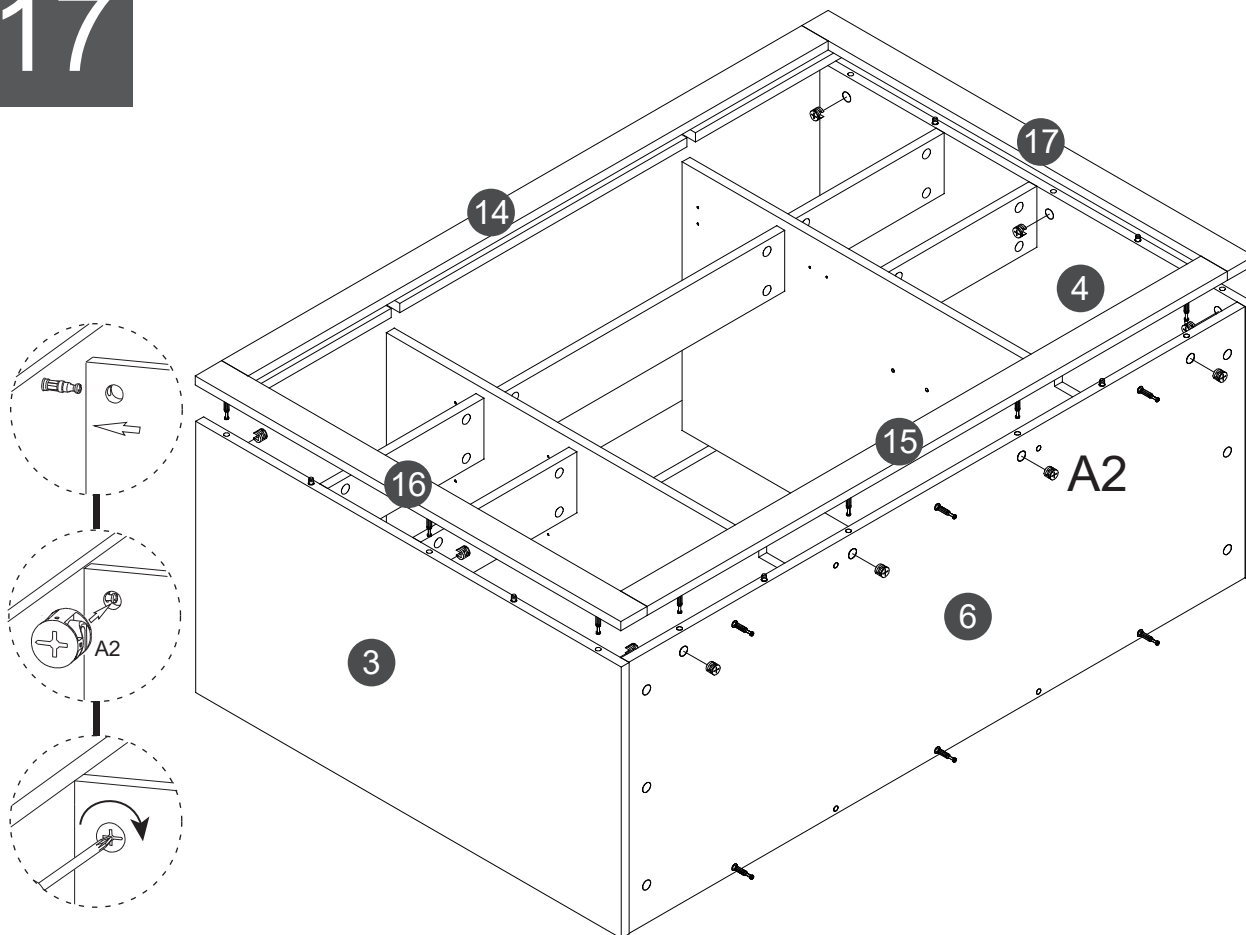


A2



10pcs

18

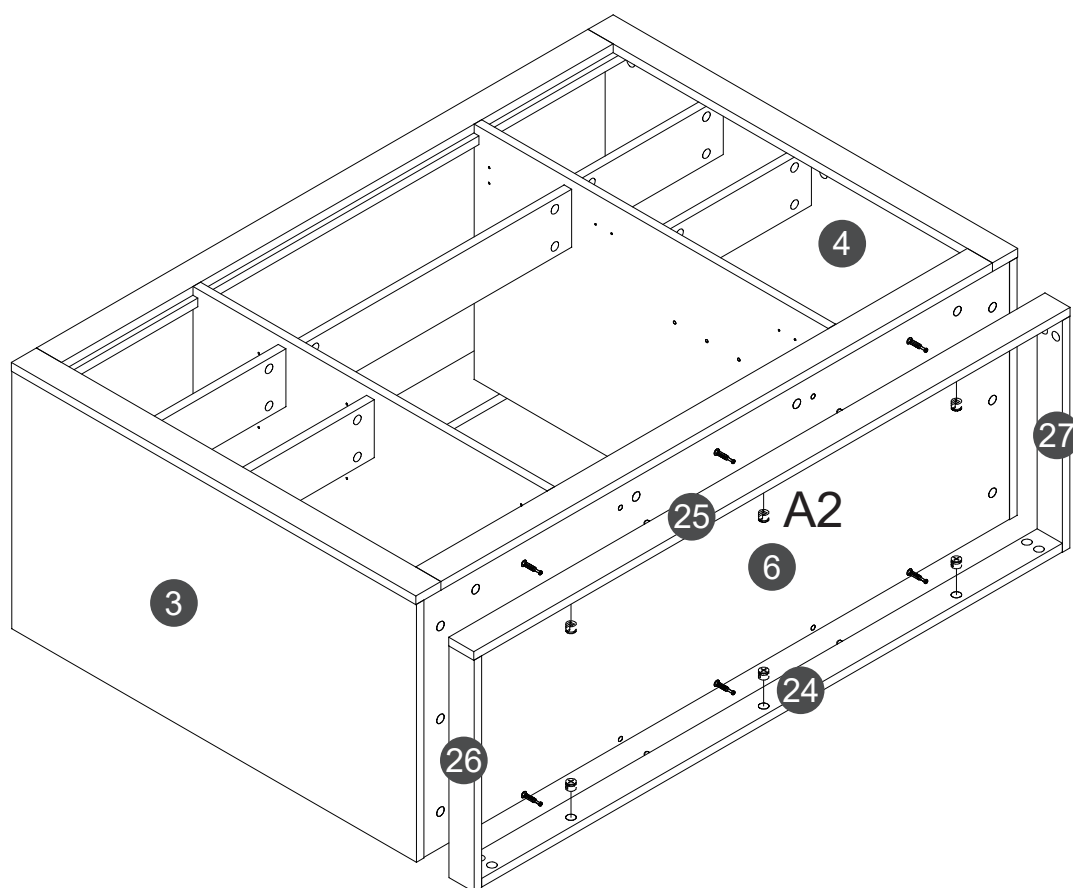


A2



6pcs


19

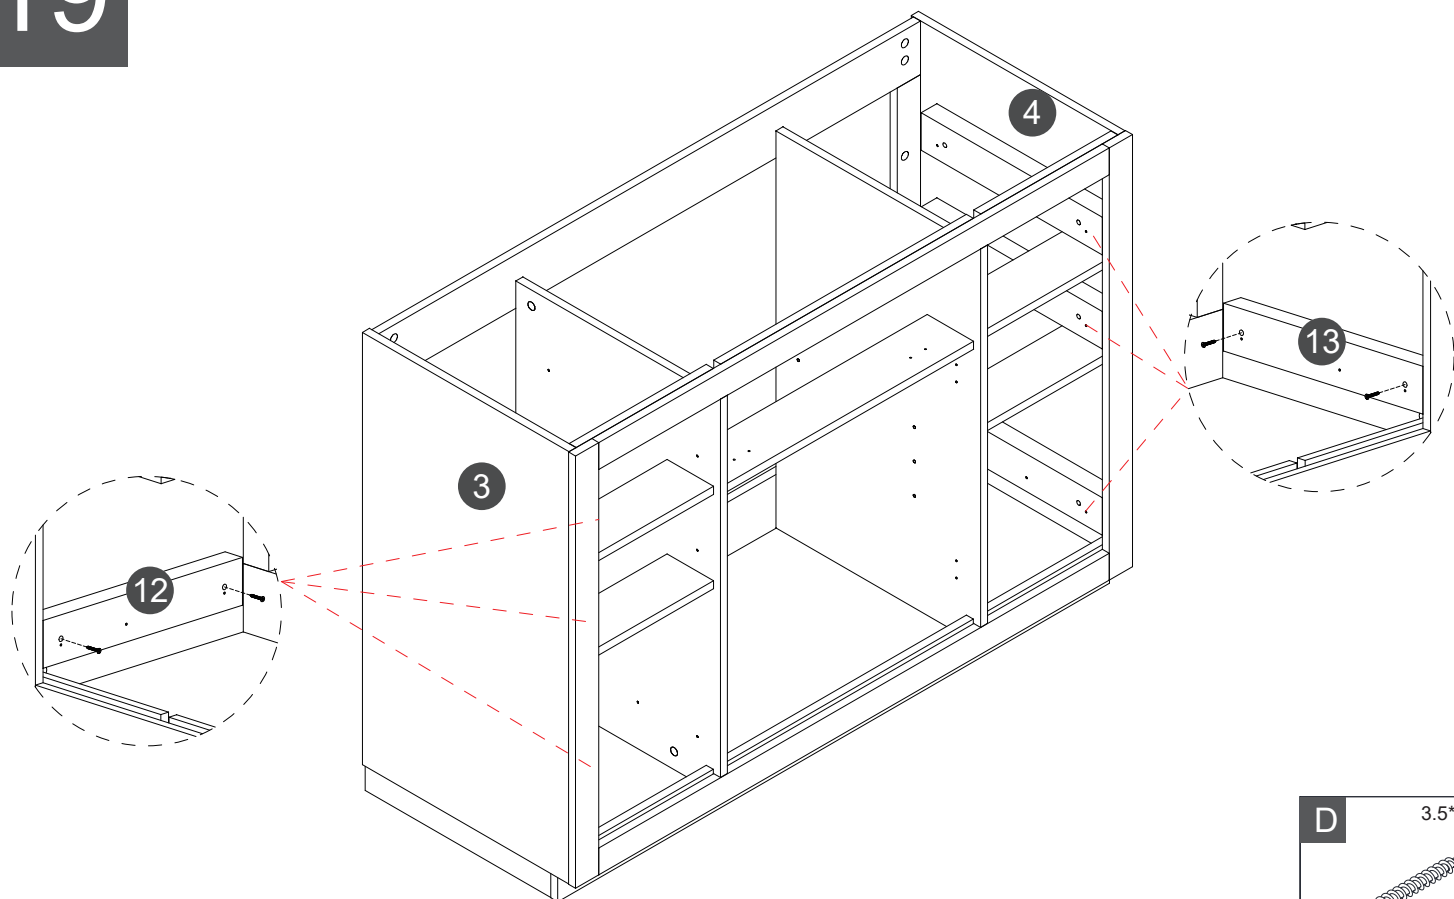


D 3.5*30

 12pcs

20

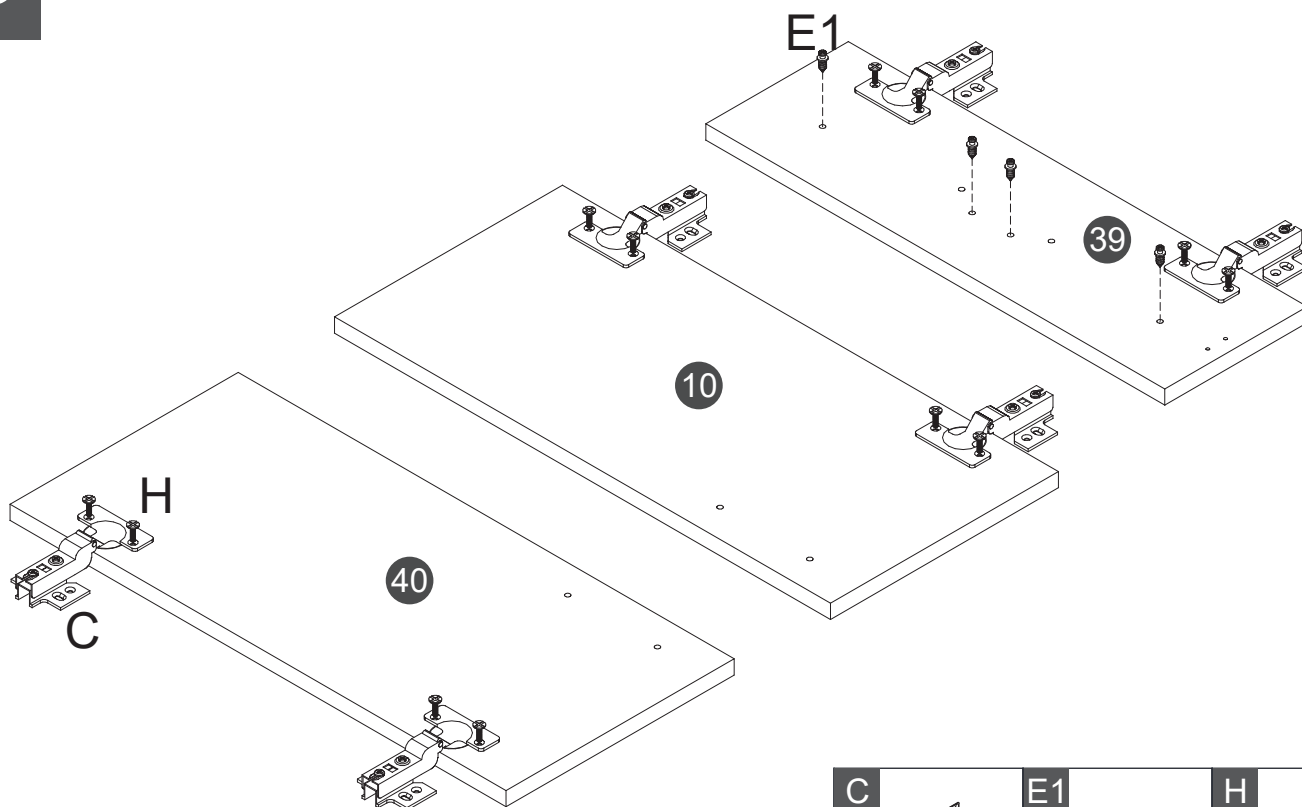


C

 6pcs


E1

 4pcs


H 3.5*14

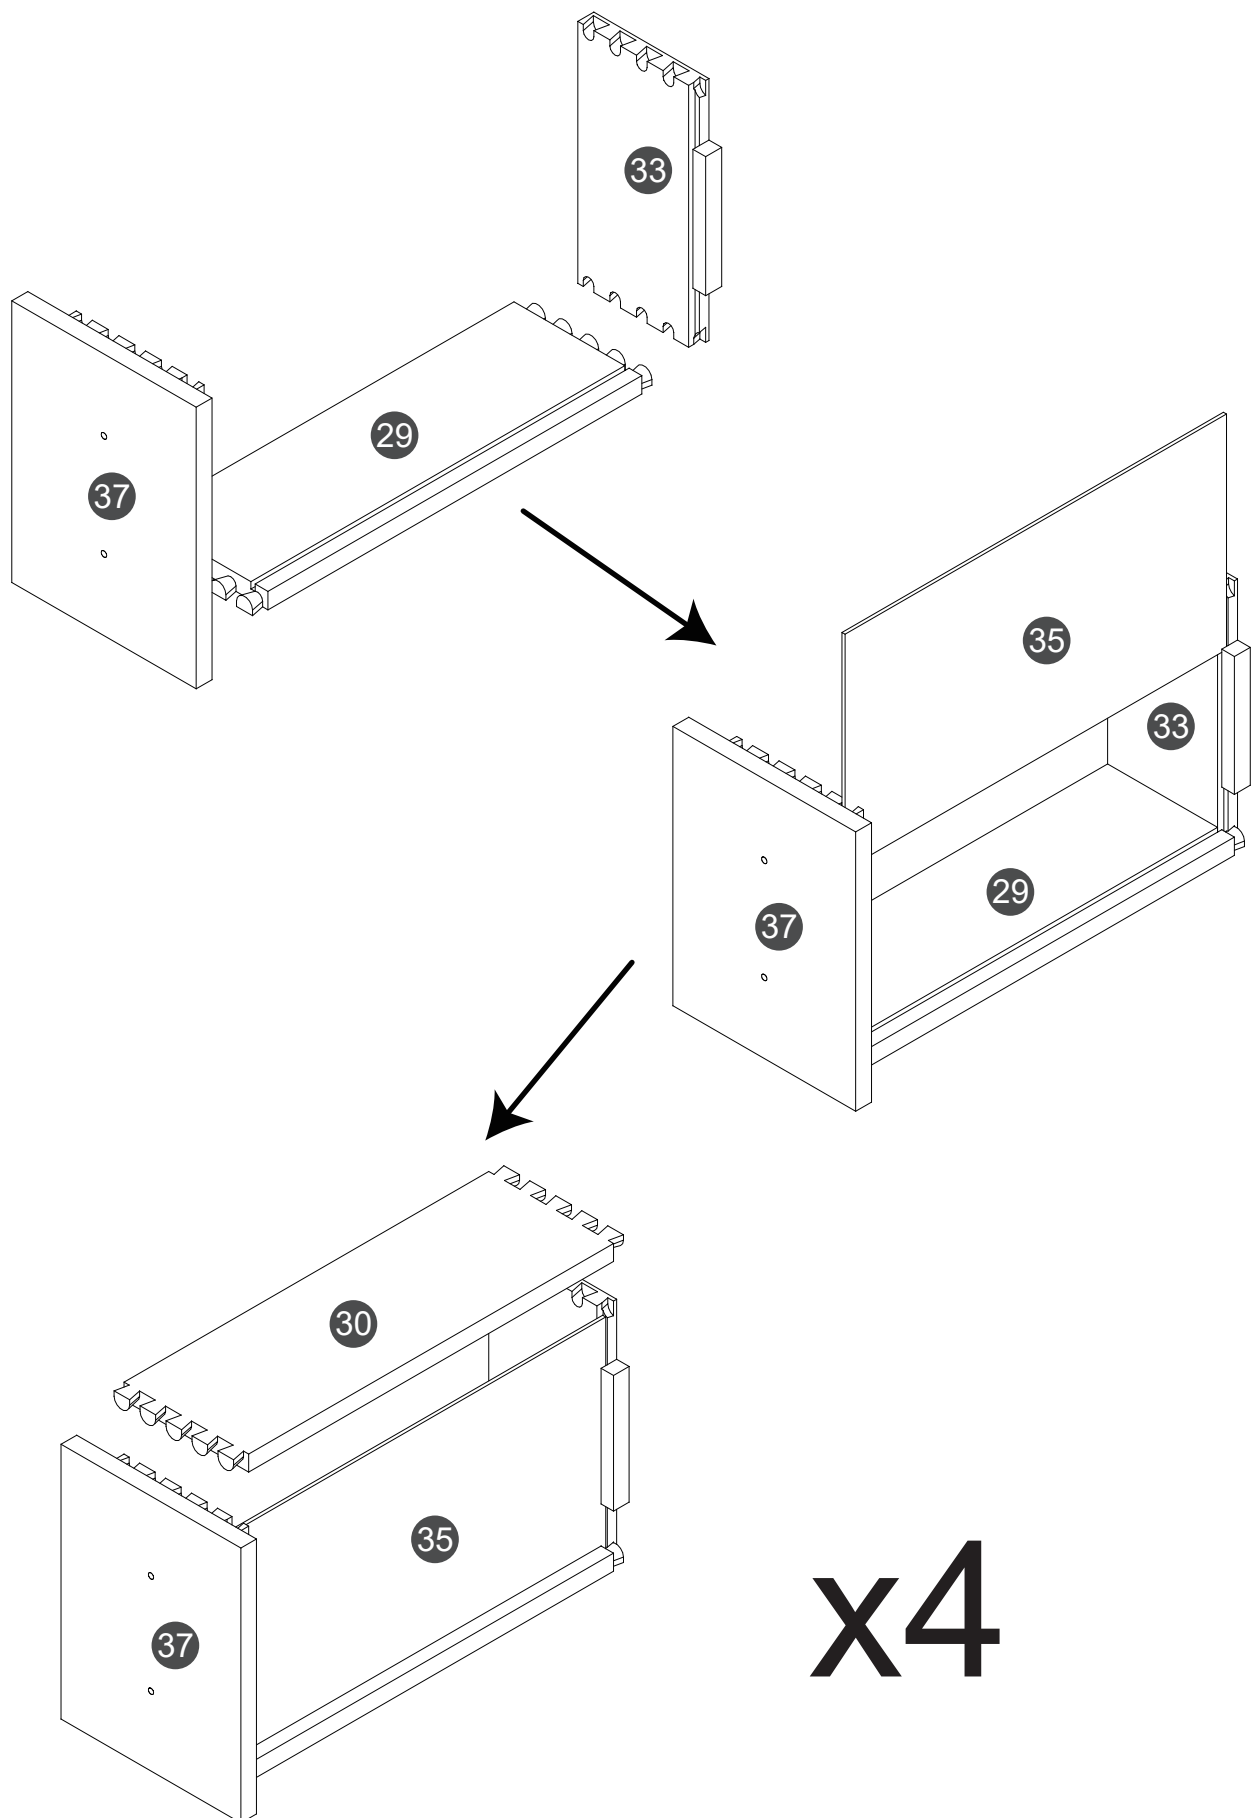 12pcs



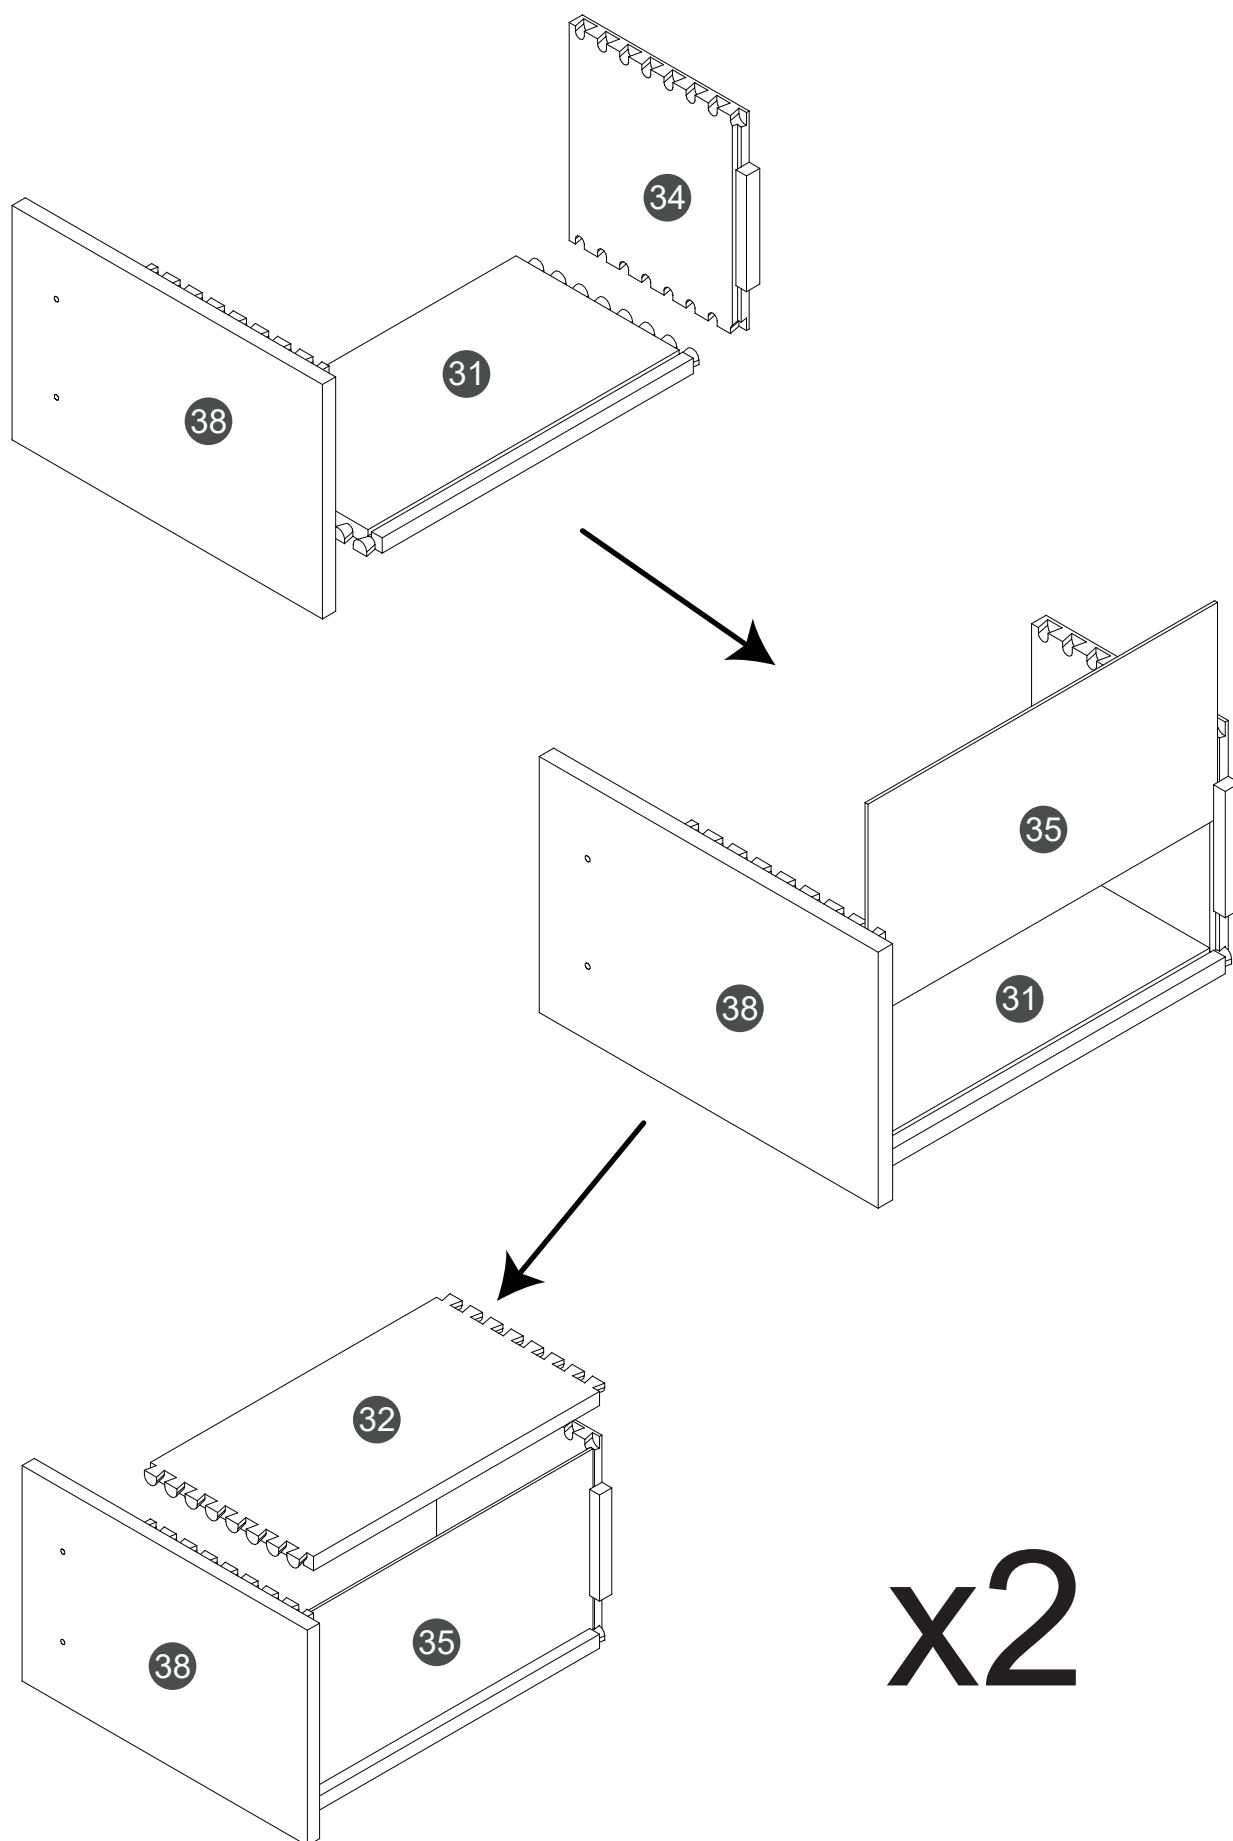


23

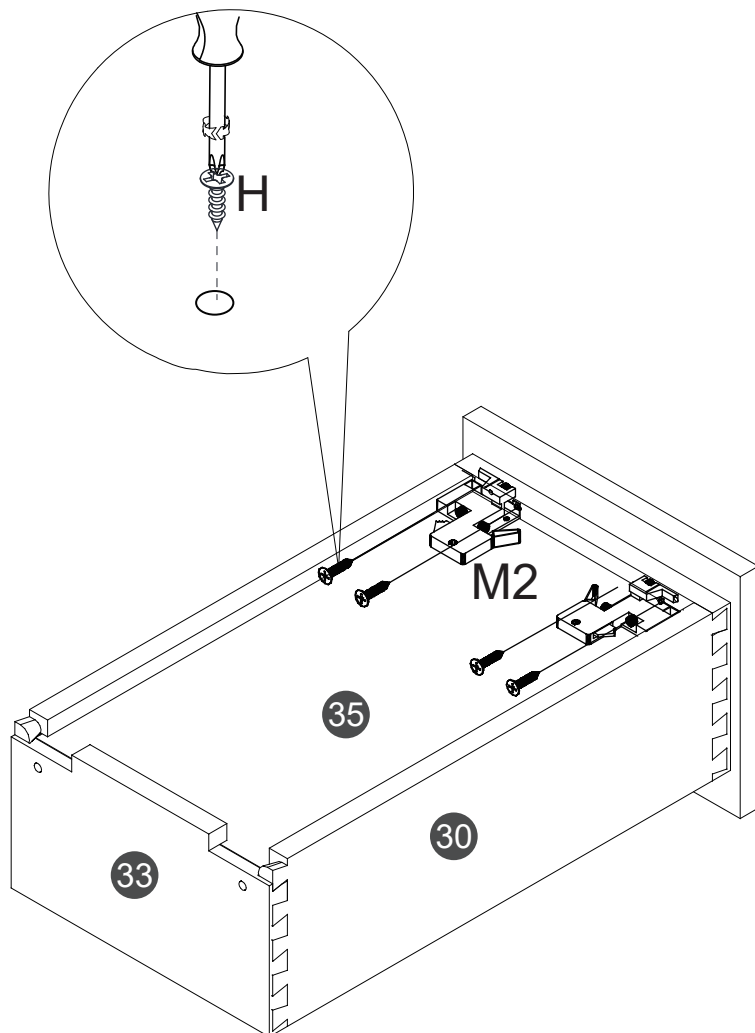

x4

L2



4sets


H

3.5*14




16pcs

24

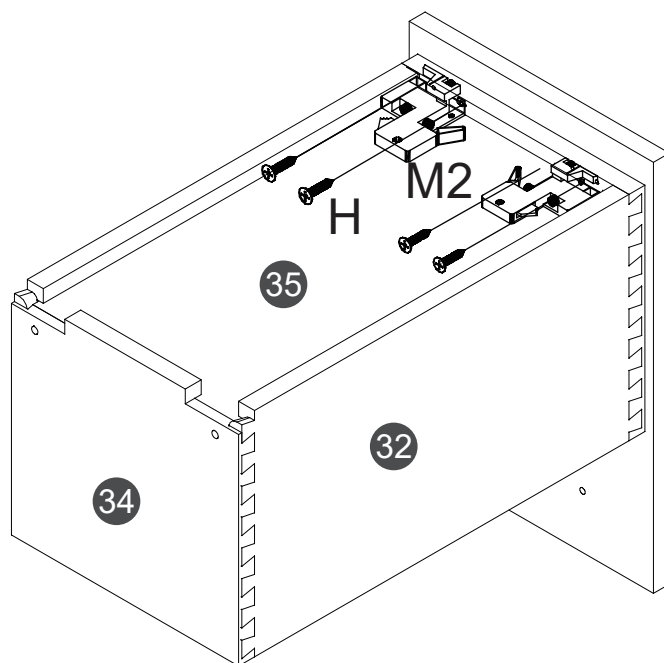

x2

L2



2sets


H

3.5*14



8pcs

25

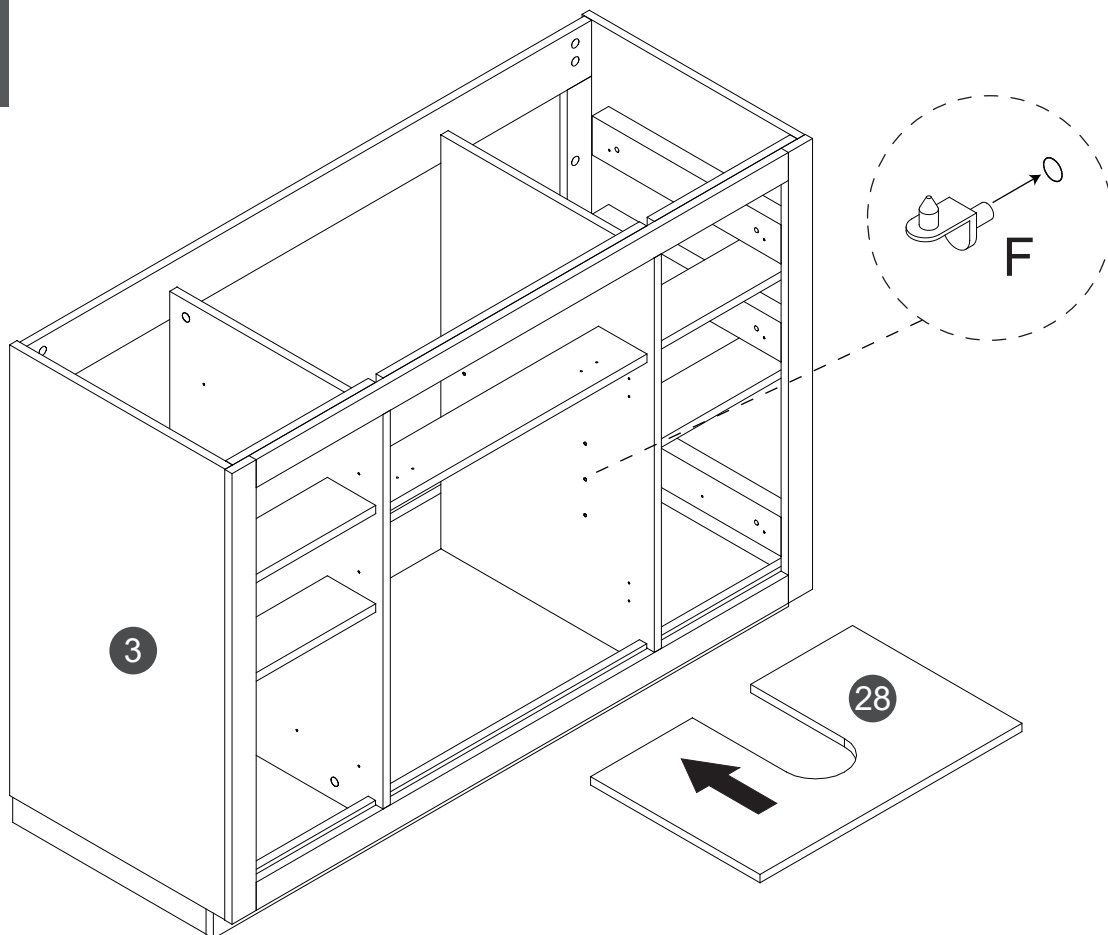







F




4pcs

26

First, install the two screws on the rear side, then adjust the height of the cabinet door. After that, install the two screws on the front side.

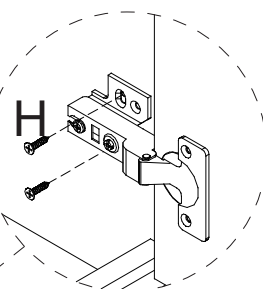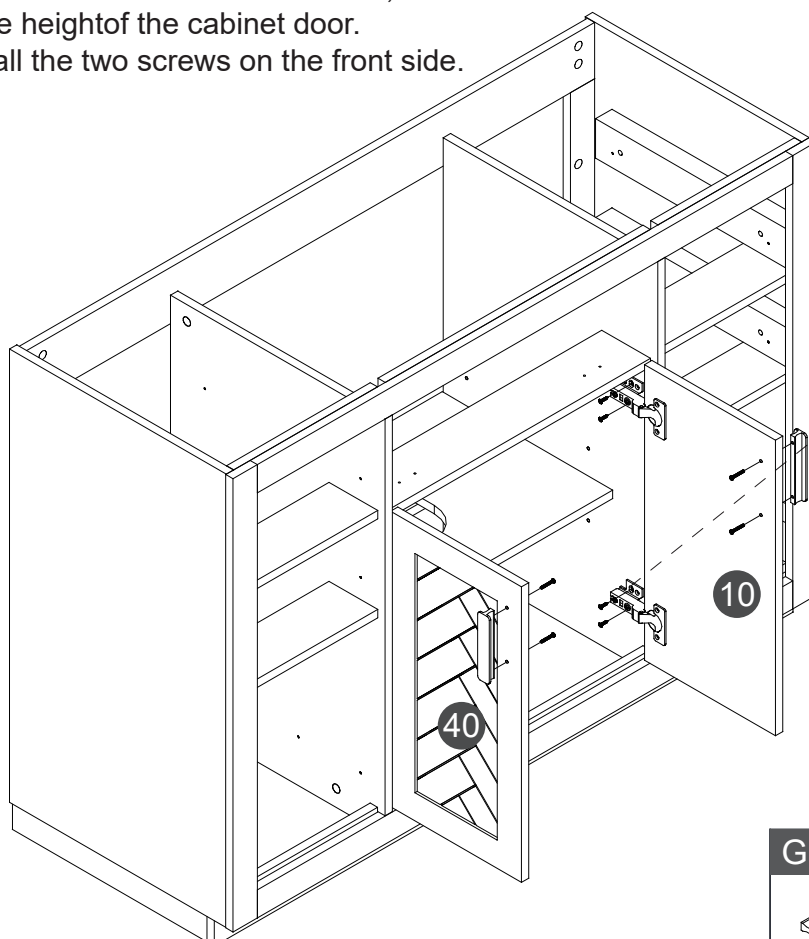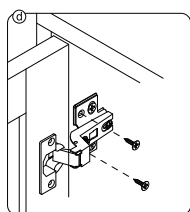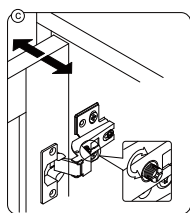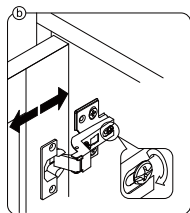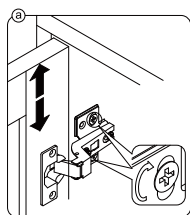

G



2sets

H













3.5*14



16pcs

27



First, install the two screws on the rear side, then adjust the height of the cabinet door. After that, install the two screws on the front side.

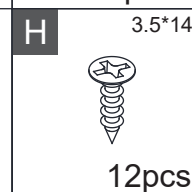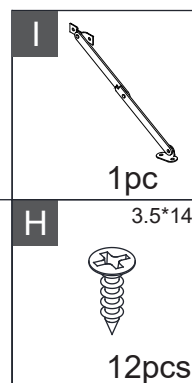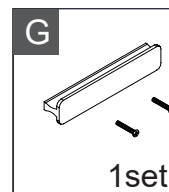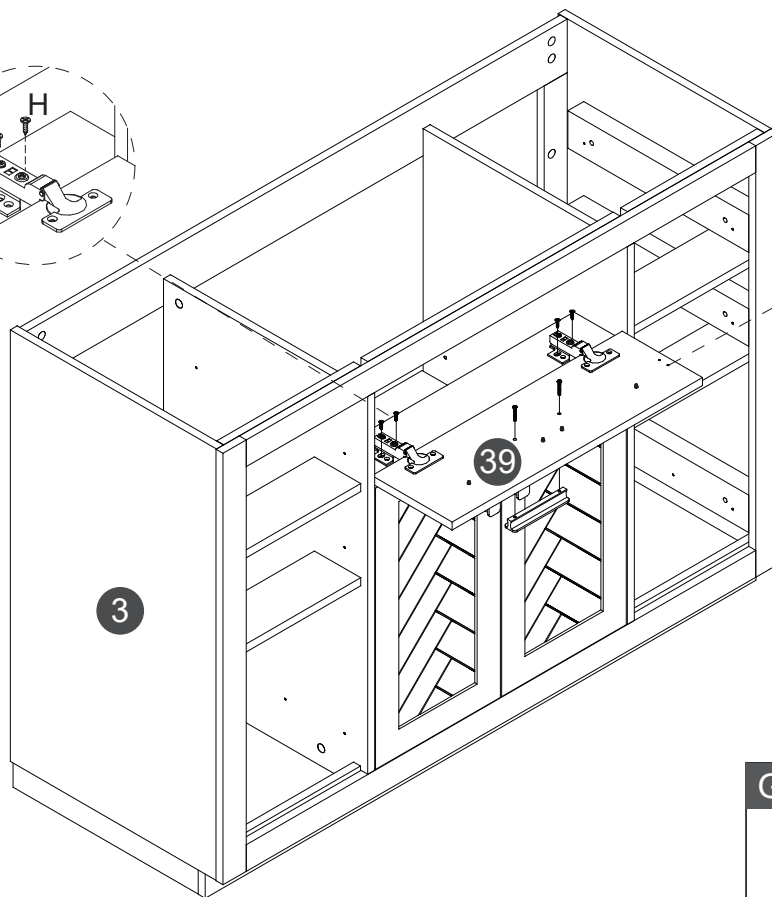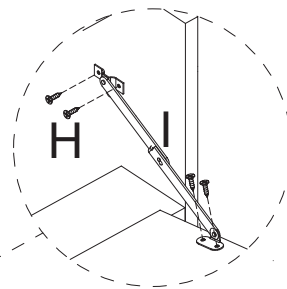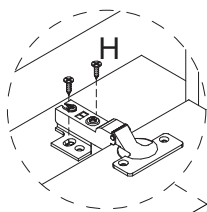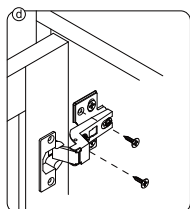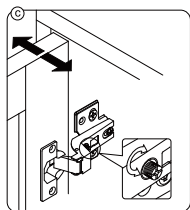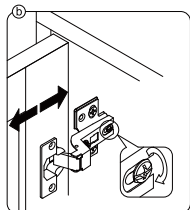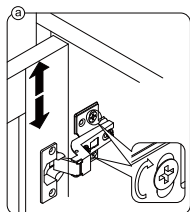



28

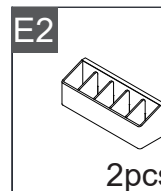
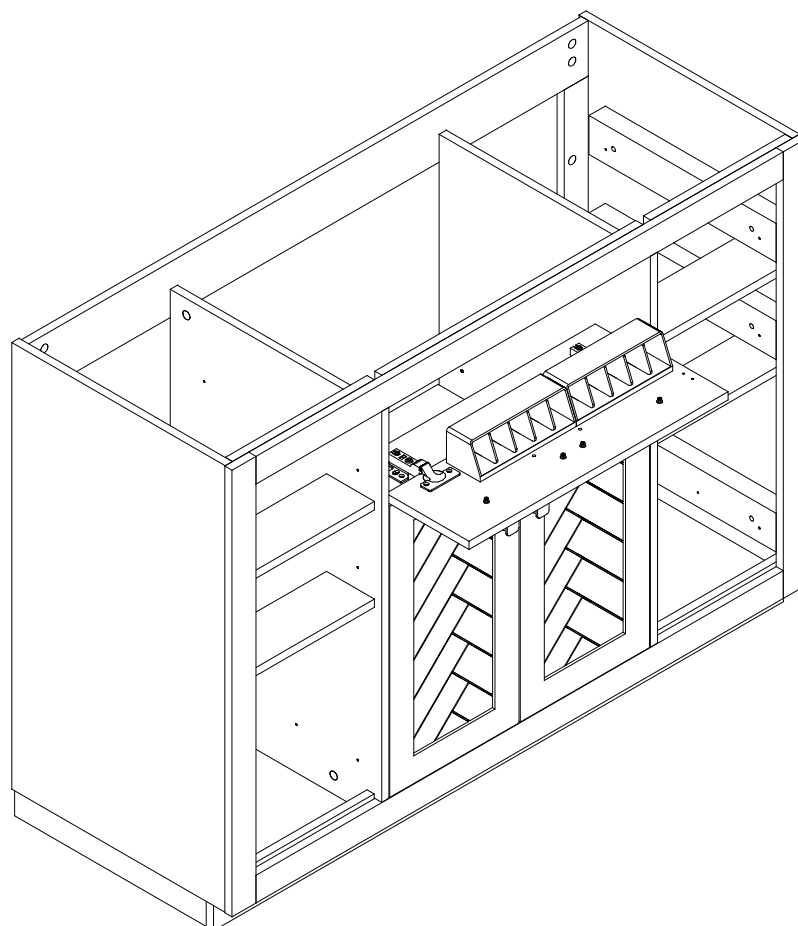



29

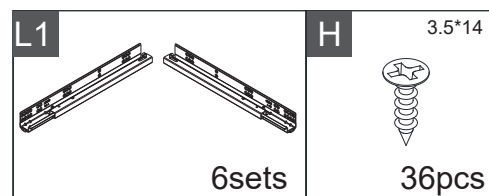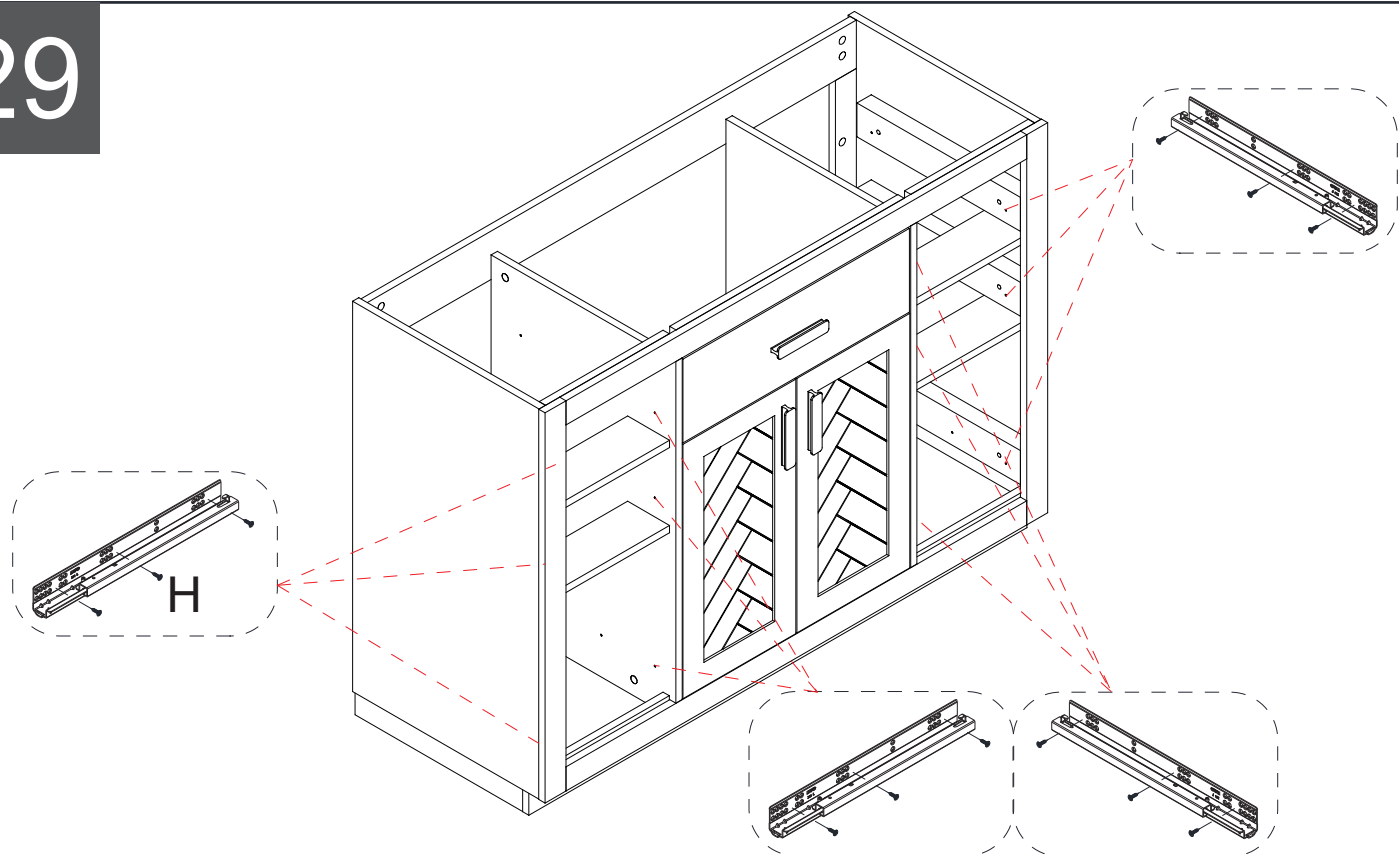

30

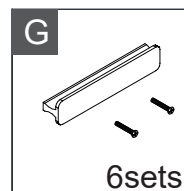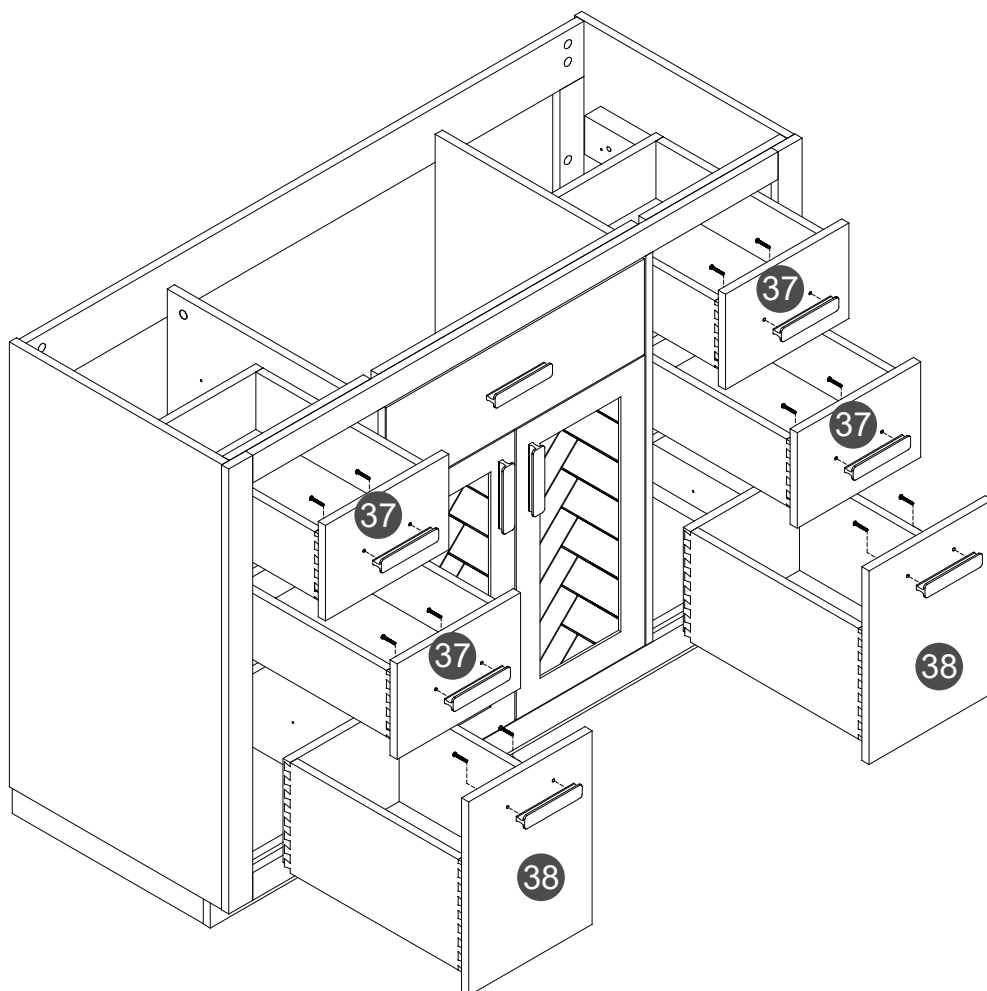

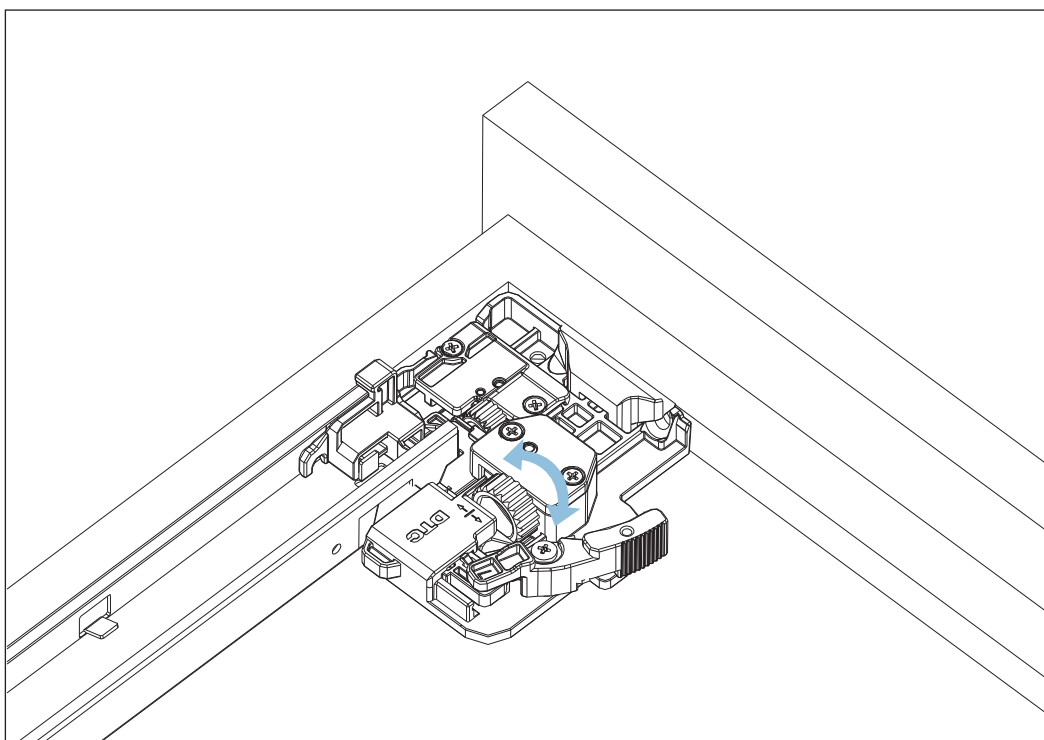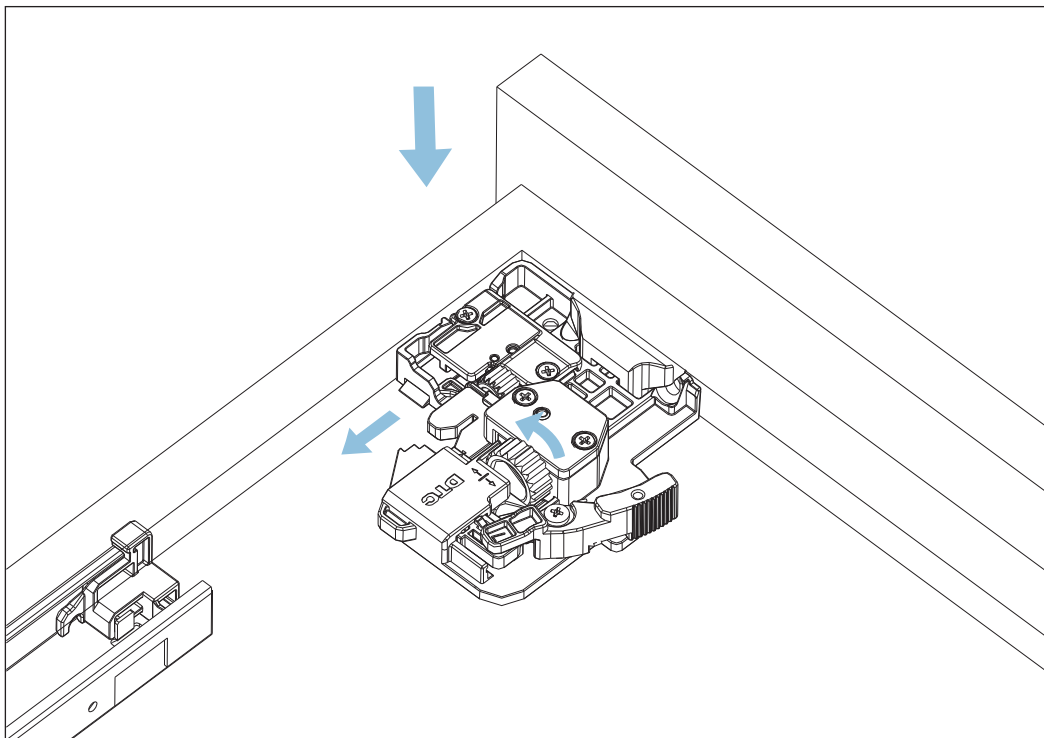

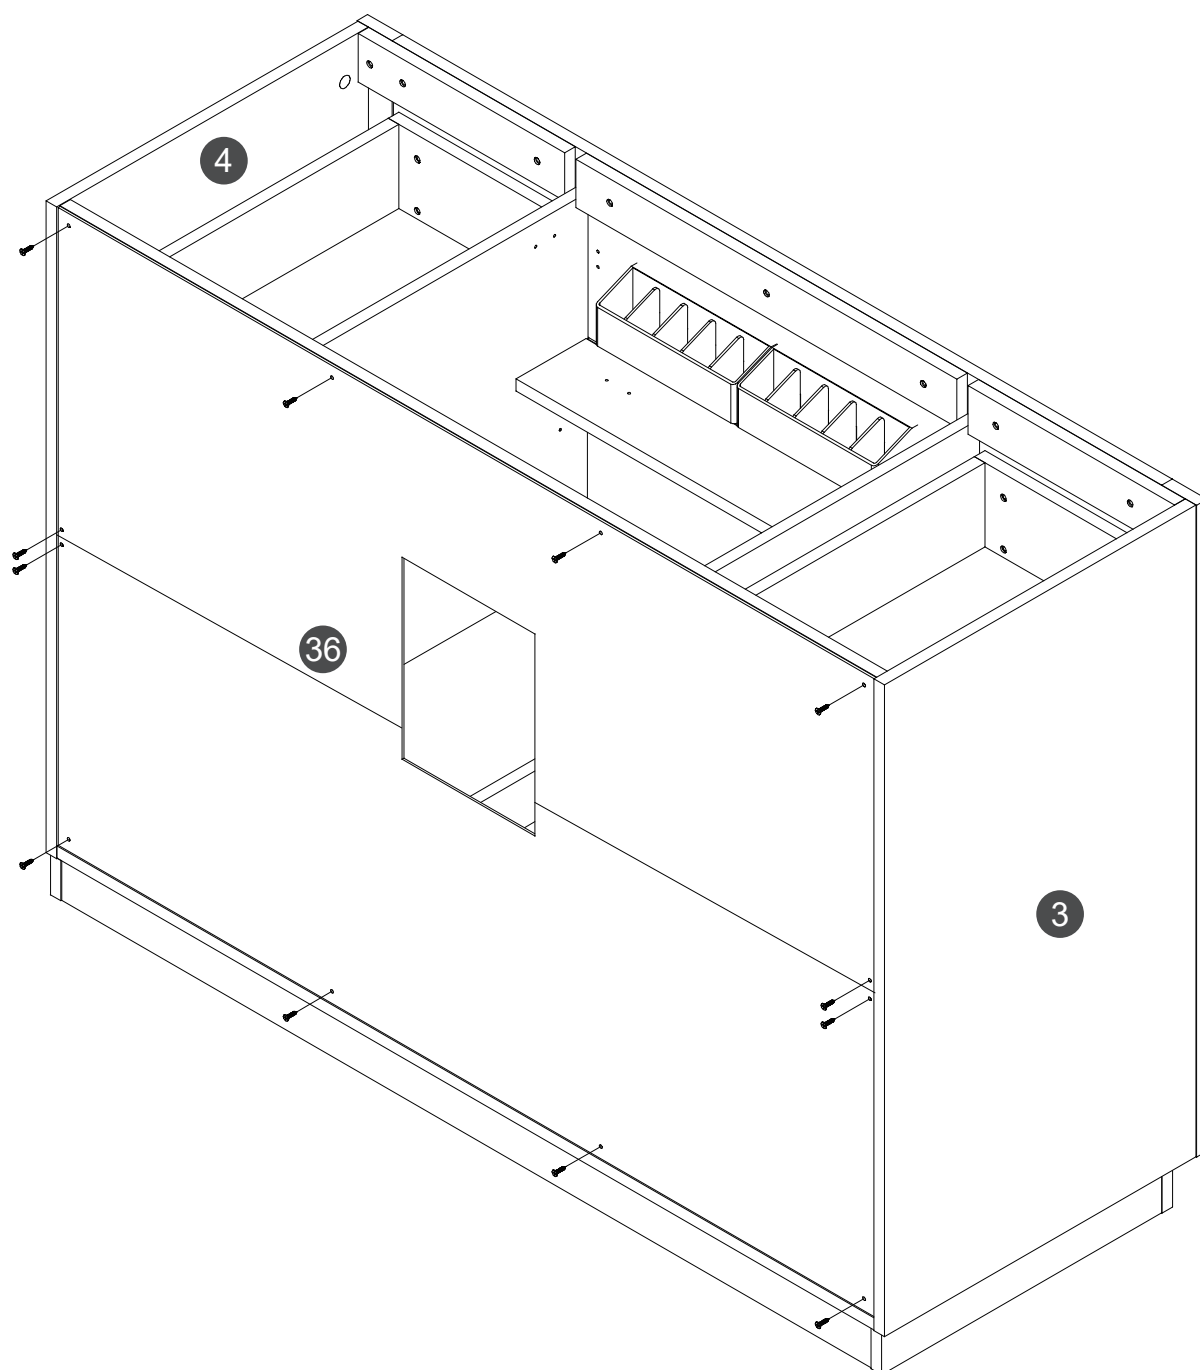


H


3.5*14




12pcs

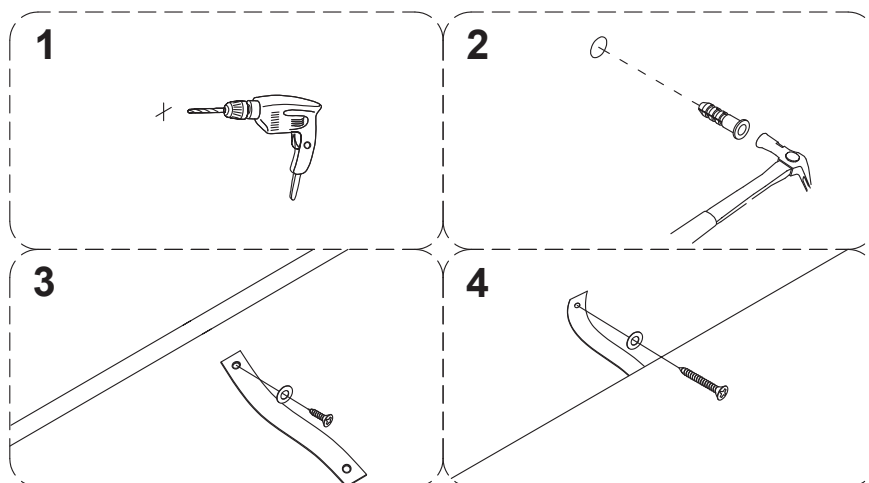

The anti-fall device is fixed to the wall at one end, and at the other end, it is securely attached to the appropriate position of component No. 7.

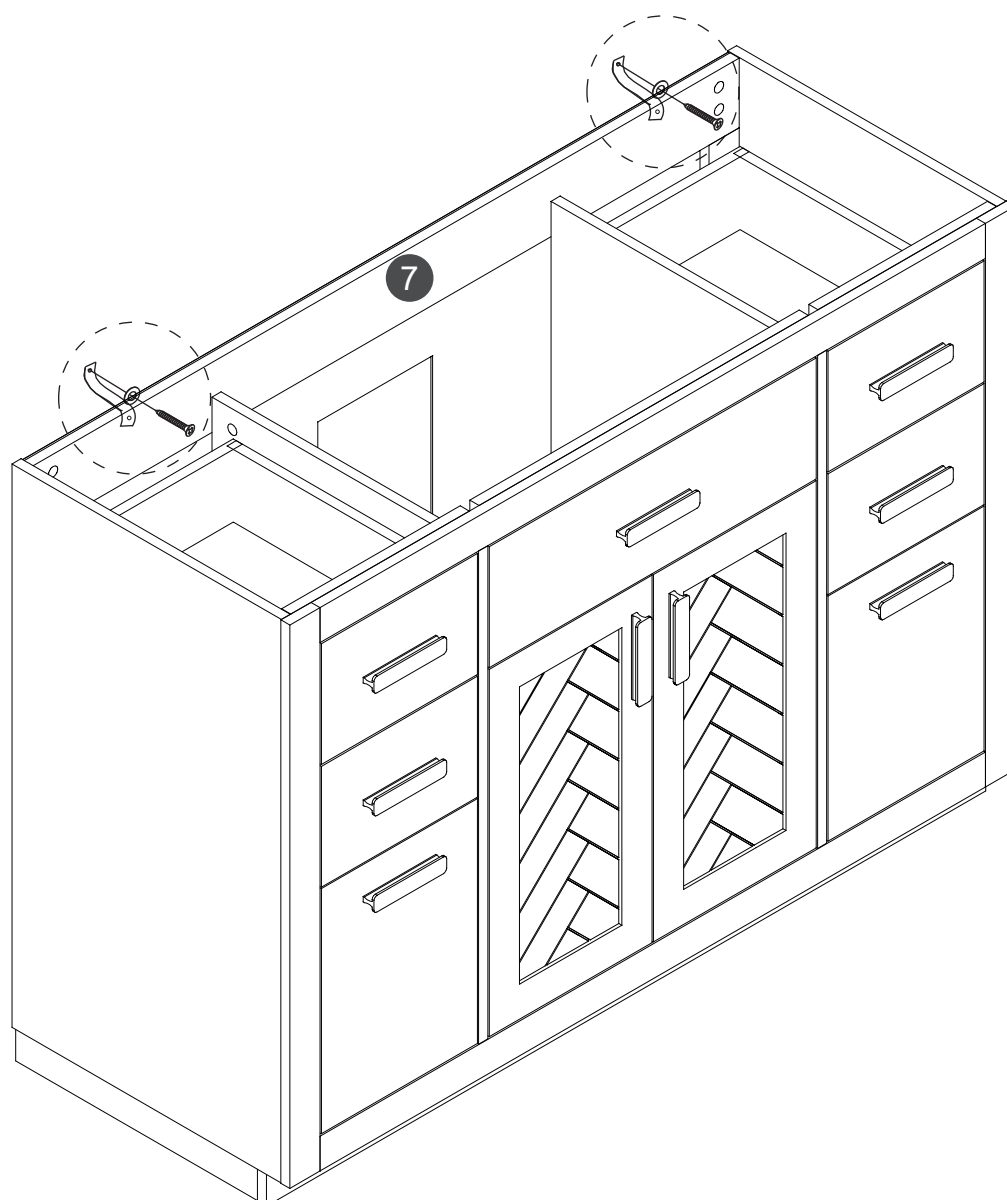

M

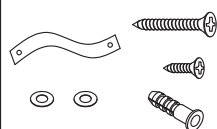

2sets

Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

