


<3>

Long spacing
between eyelets



<4>

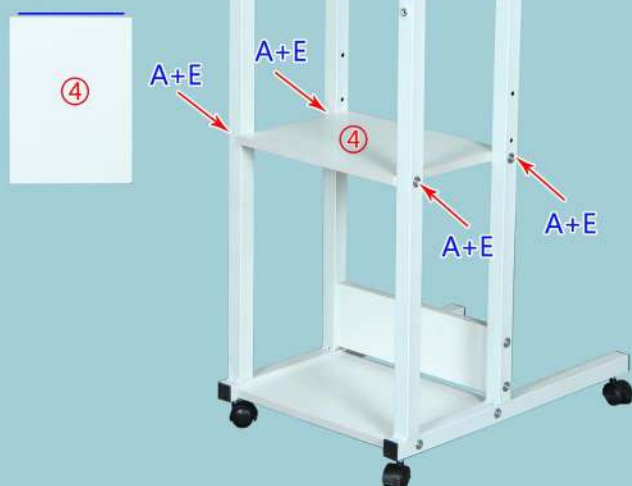

<5>



Adjust the height to parallel and
tighten the plum blossom screw

<6>



<7>



Installation completed!