

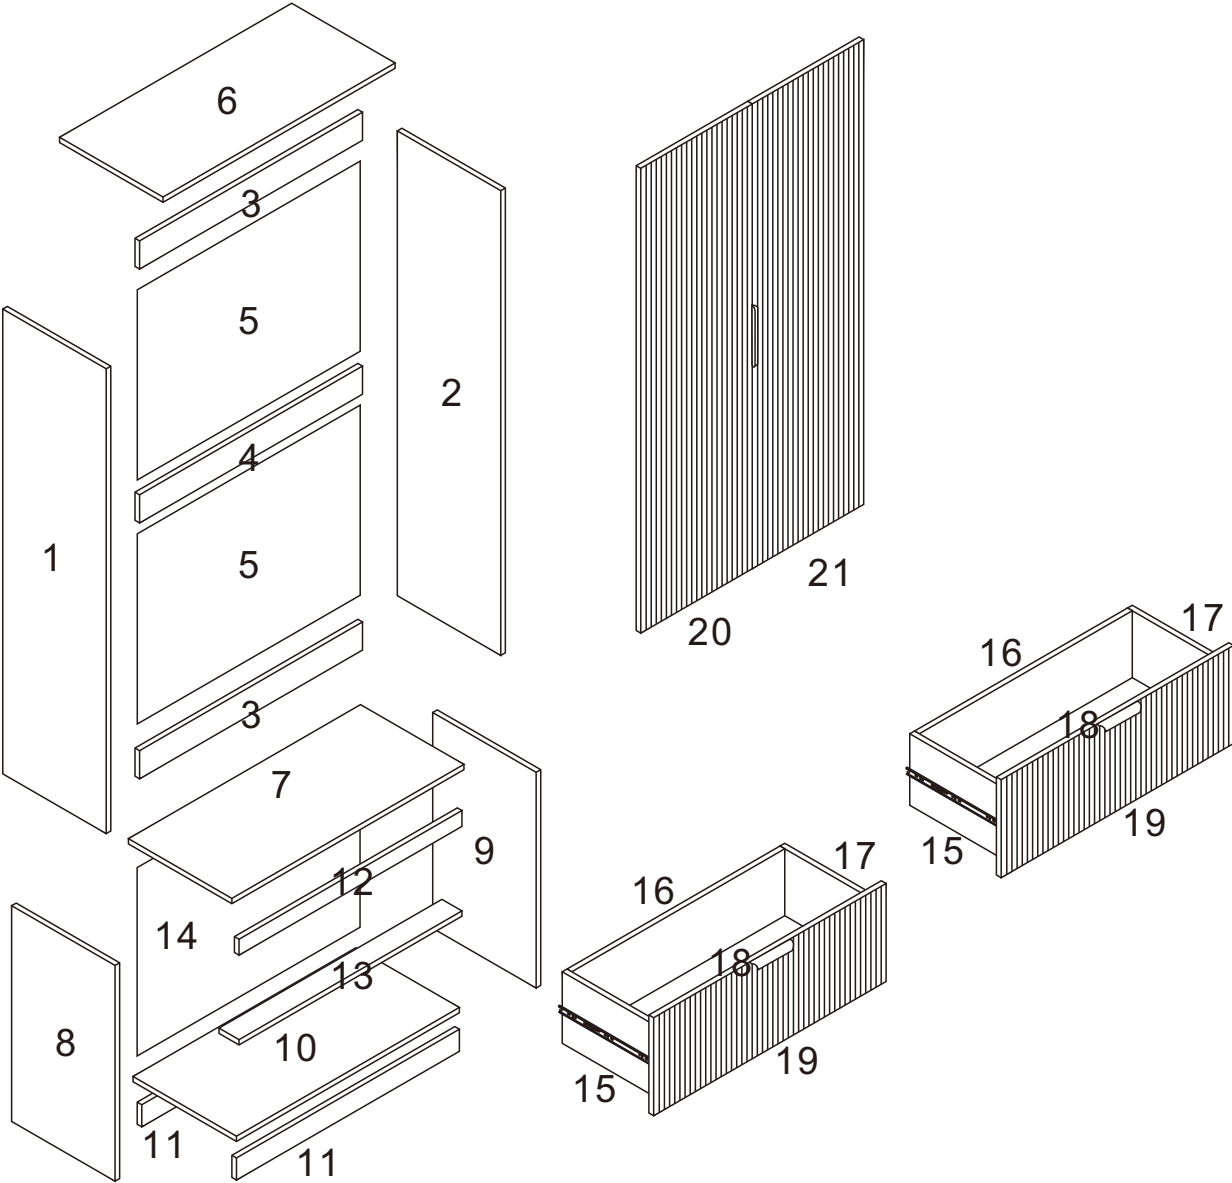
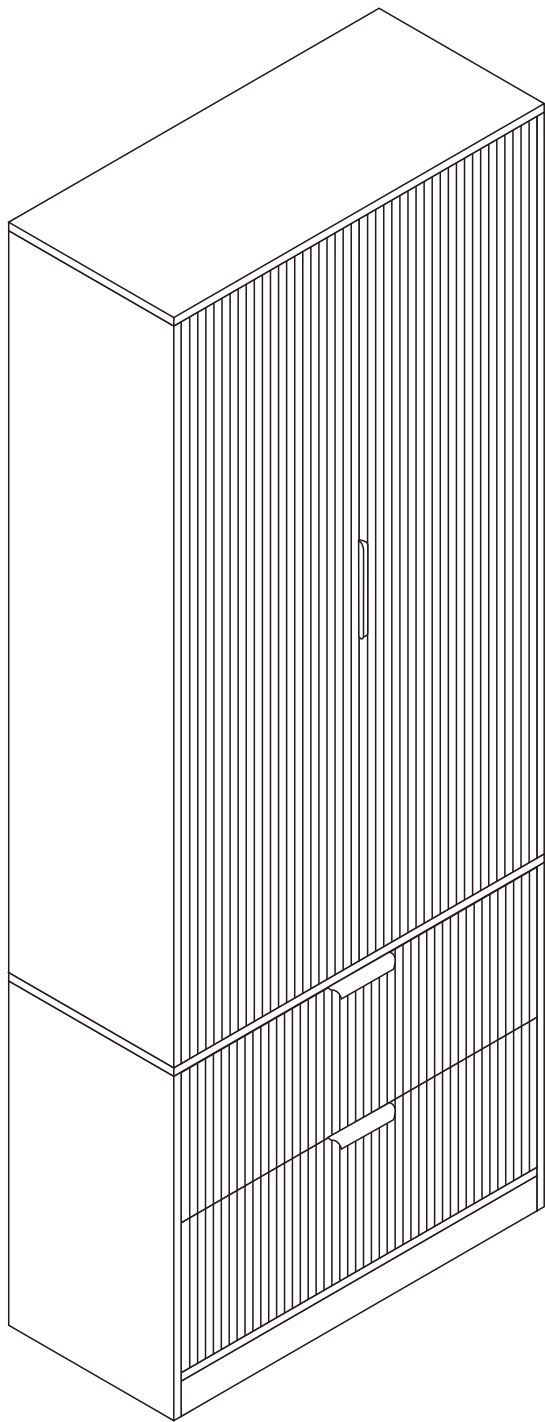



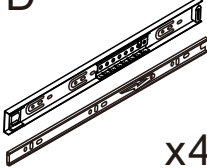


Assembly Instructions





A  3. 5x16mm x36	B  x6	C  3x14mm x52	D  x4	E  150mm x2	F  120mm x2
G  40mm x53	H  15mm x53	I  x4	J  x2	K  3x12mm x4	L  x12
M  x16	N  x1	O1  x2	P  x1	Q  x1	
KK  x2	LL  x2	OO  x2	NN  x4	MM  x2	




Hardware installation demonstration

- Please make sure G hardware tightened and can't be pulled out

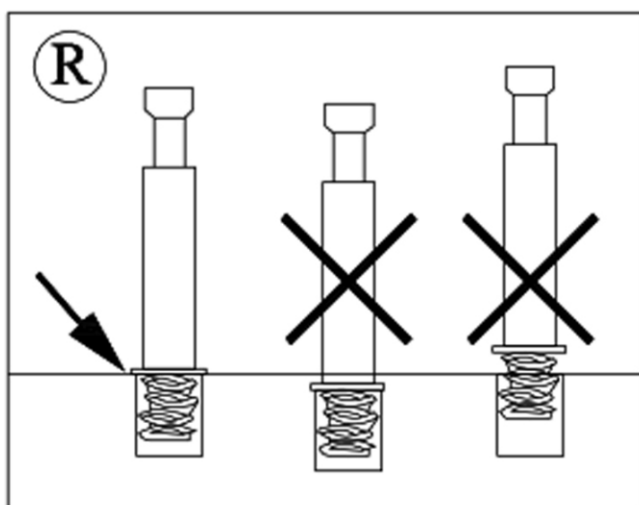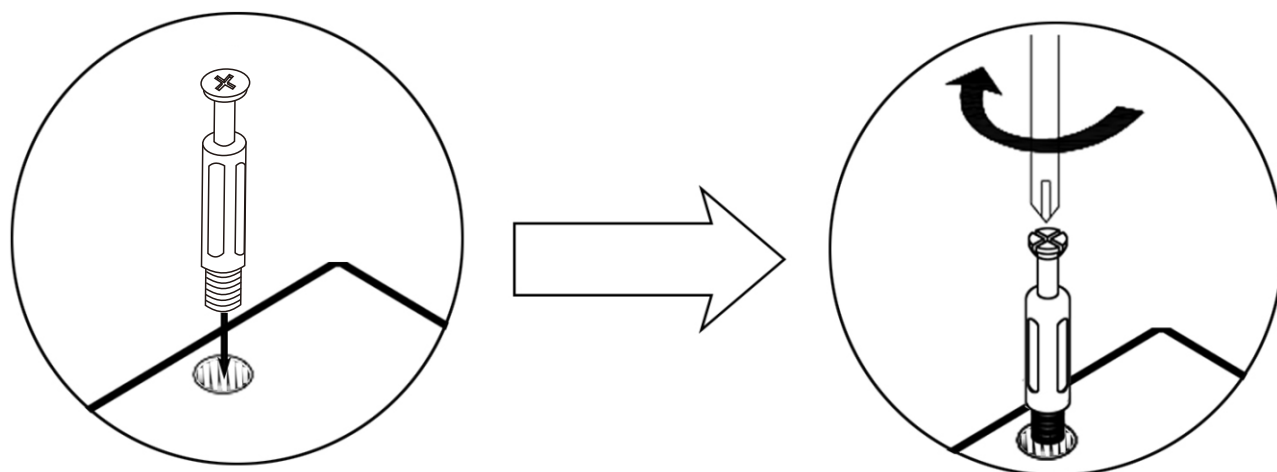

Hardware installation demonstration


- When inserting cam ensure arrowhead on cam points toward to the hole on the panel edge

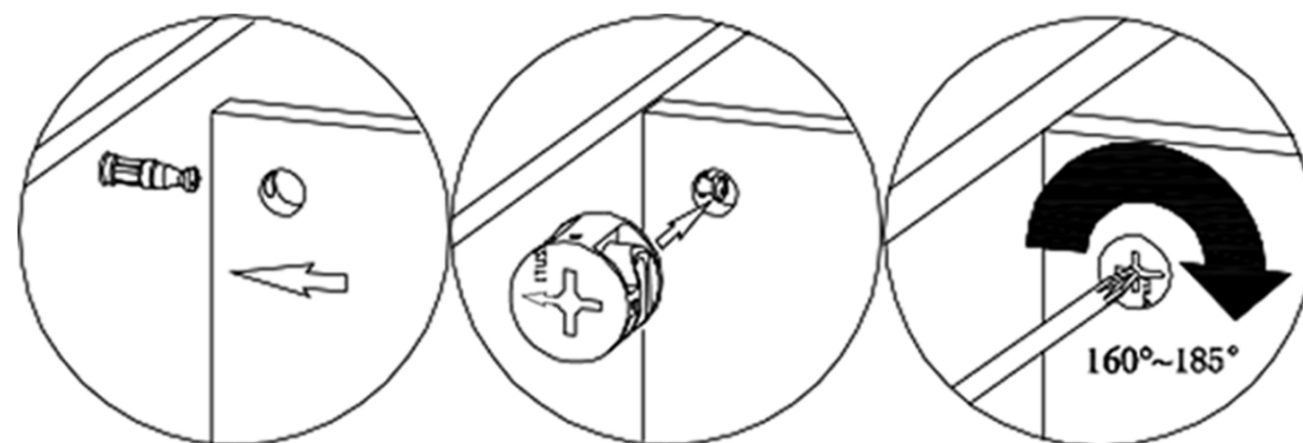



Hardware installation demonstration


- Before installing the drawer rail, you need to separate the D1 and D2 first.

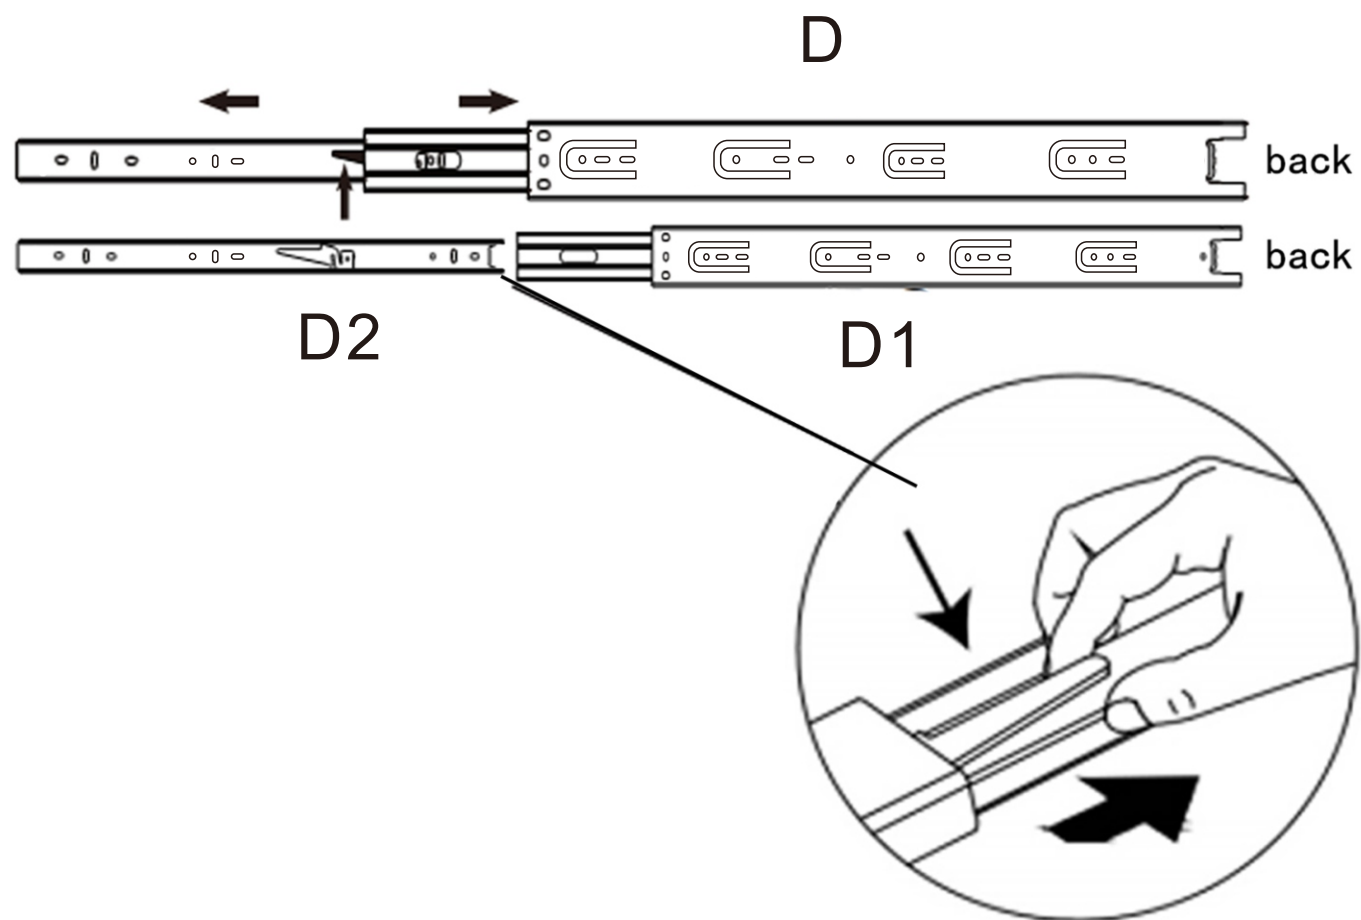


Warm Reminder: Press it and split




Hardware installation demonstration

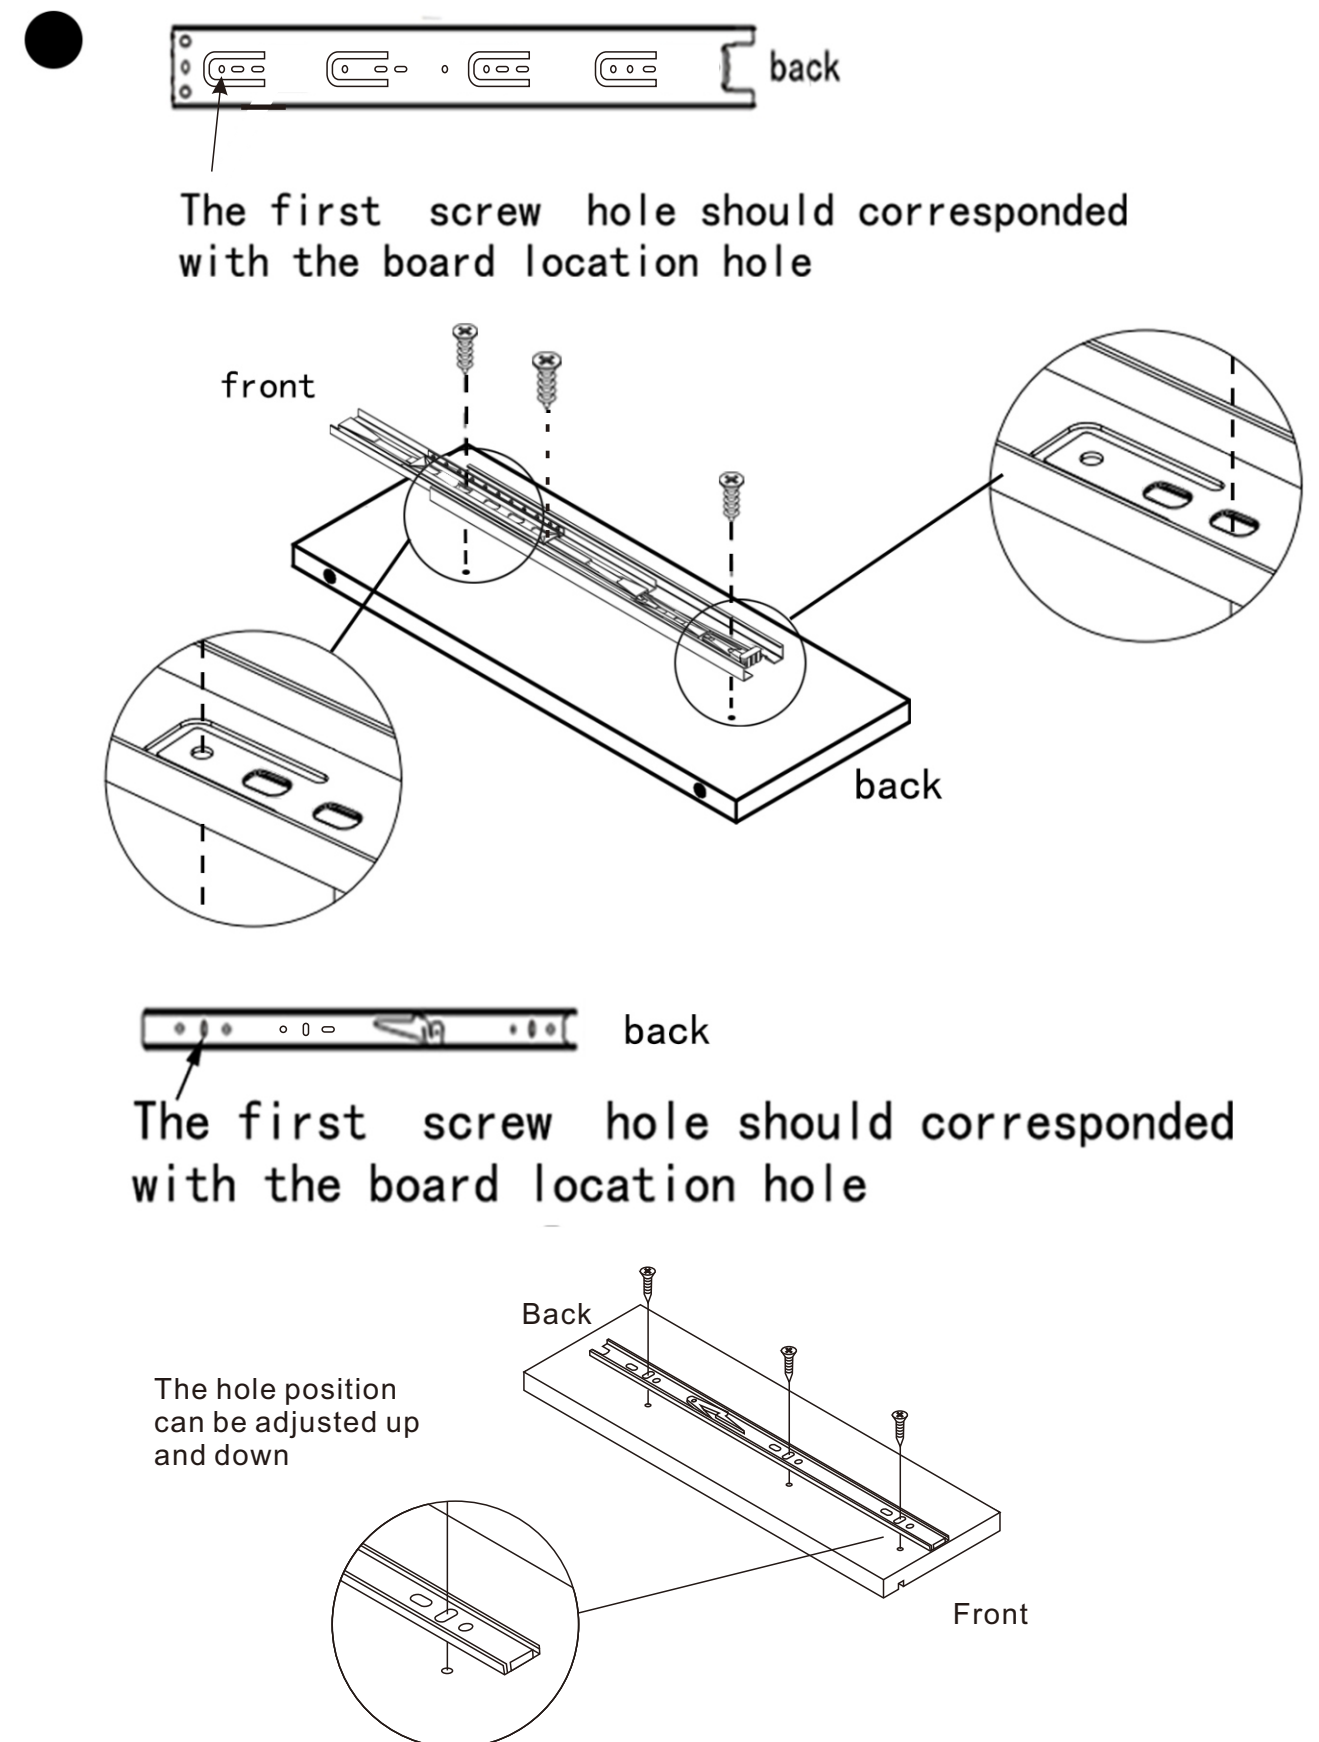


01

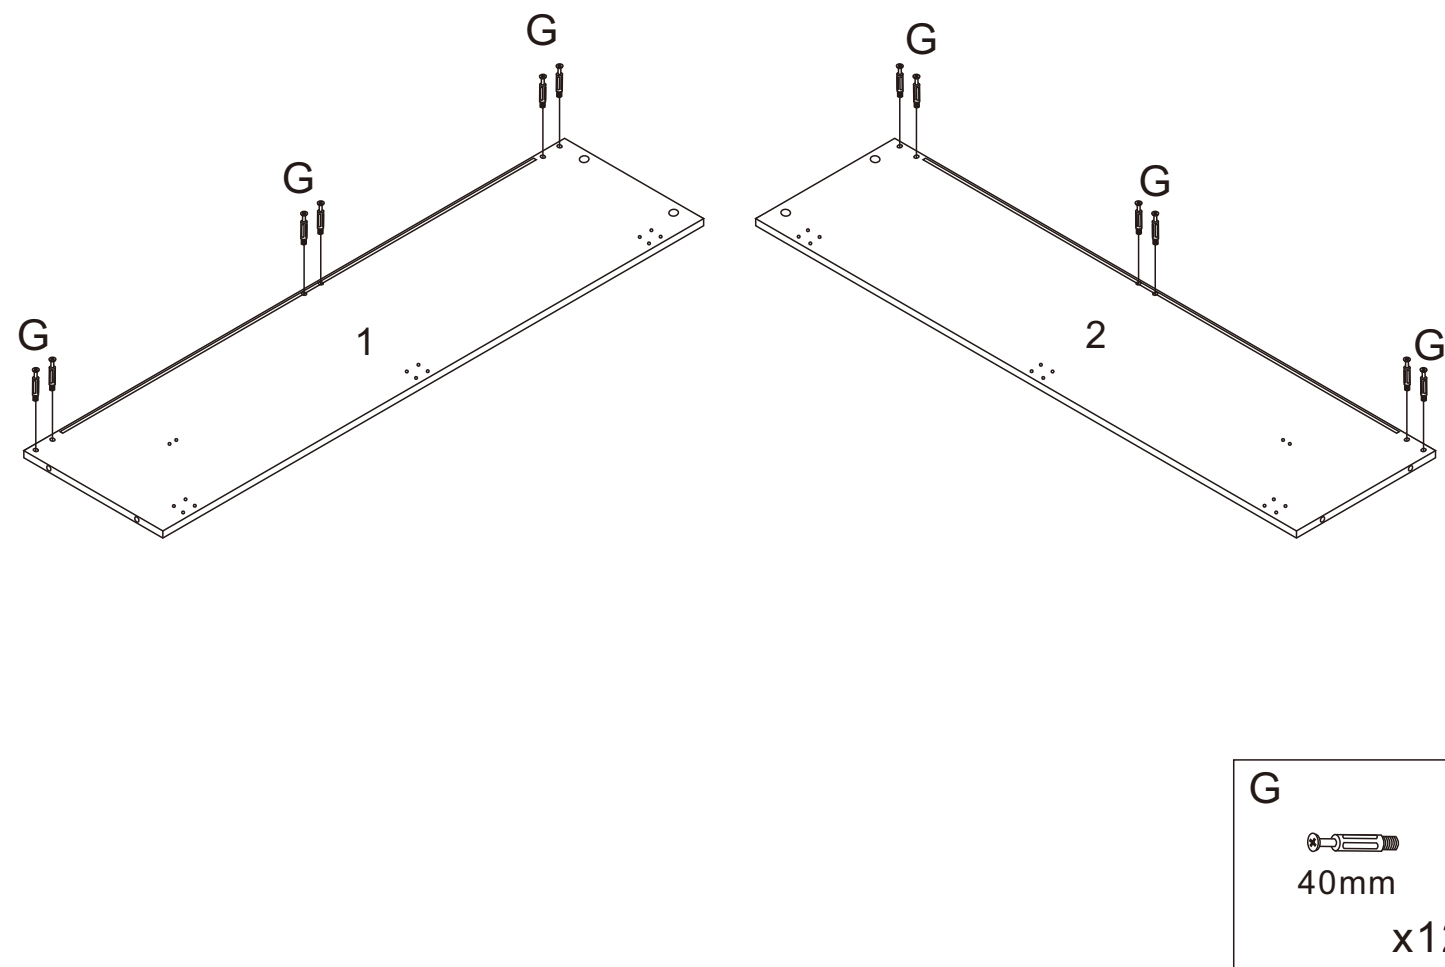


03

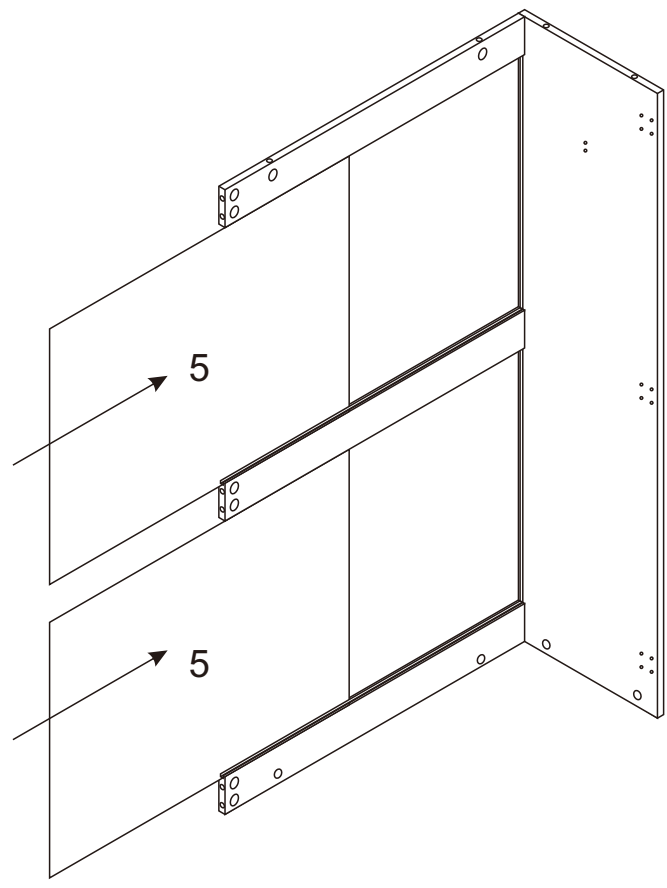


02

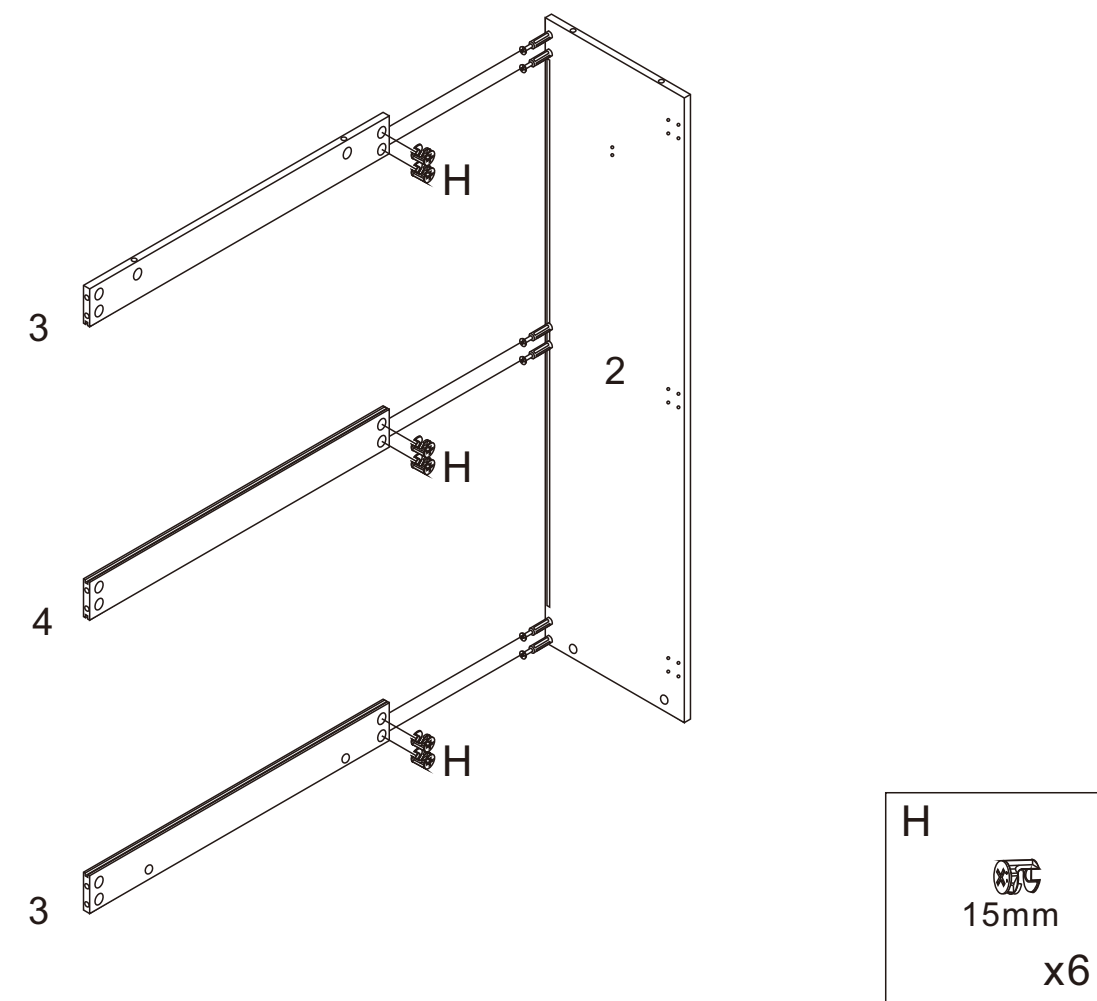

04

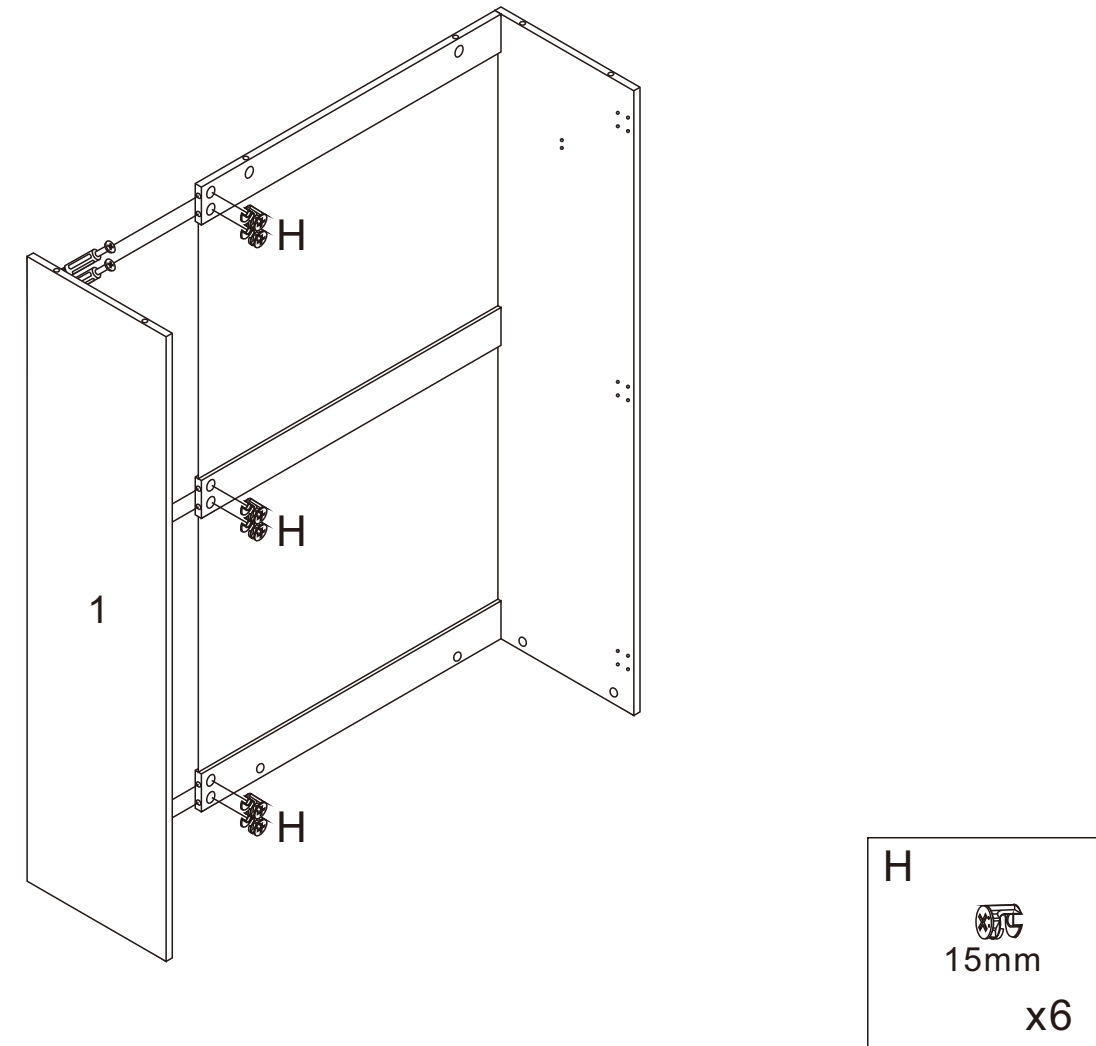


05

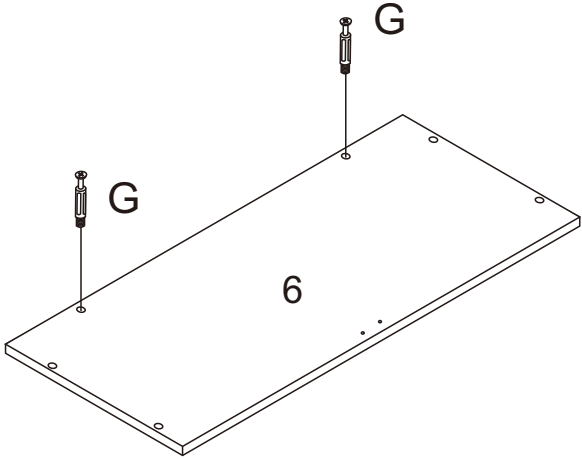

G
40mm
x2


06

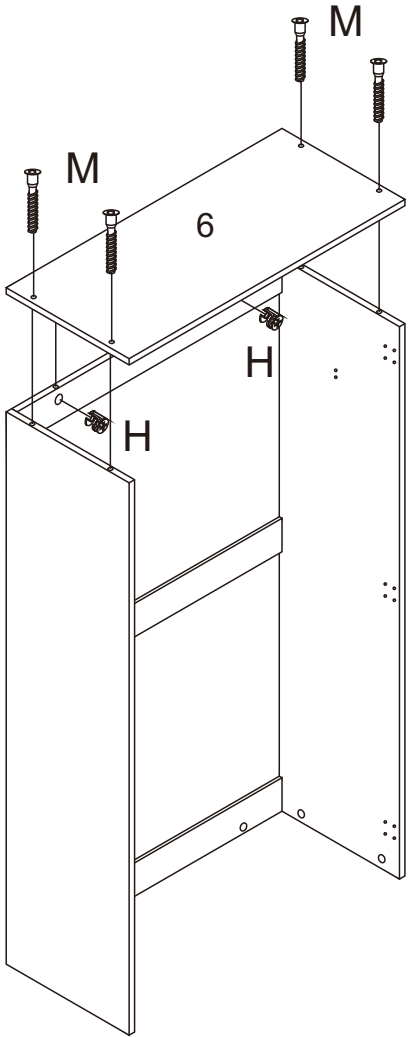

M
x4


H
15mm
x2

07

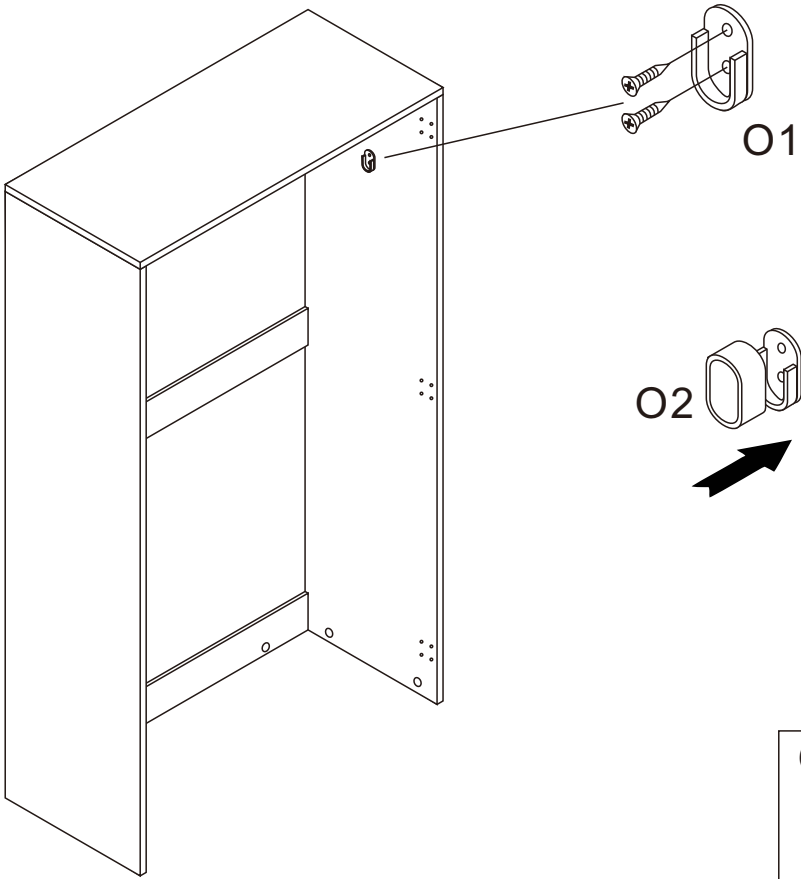

O1
x2


08

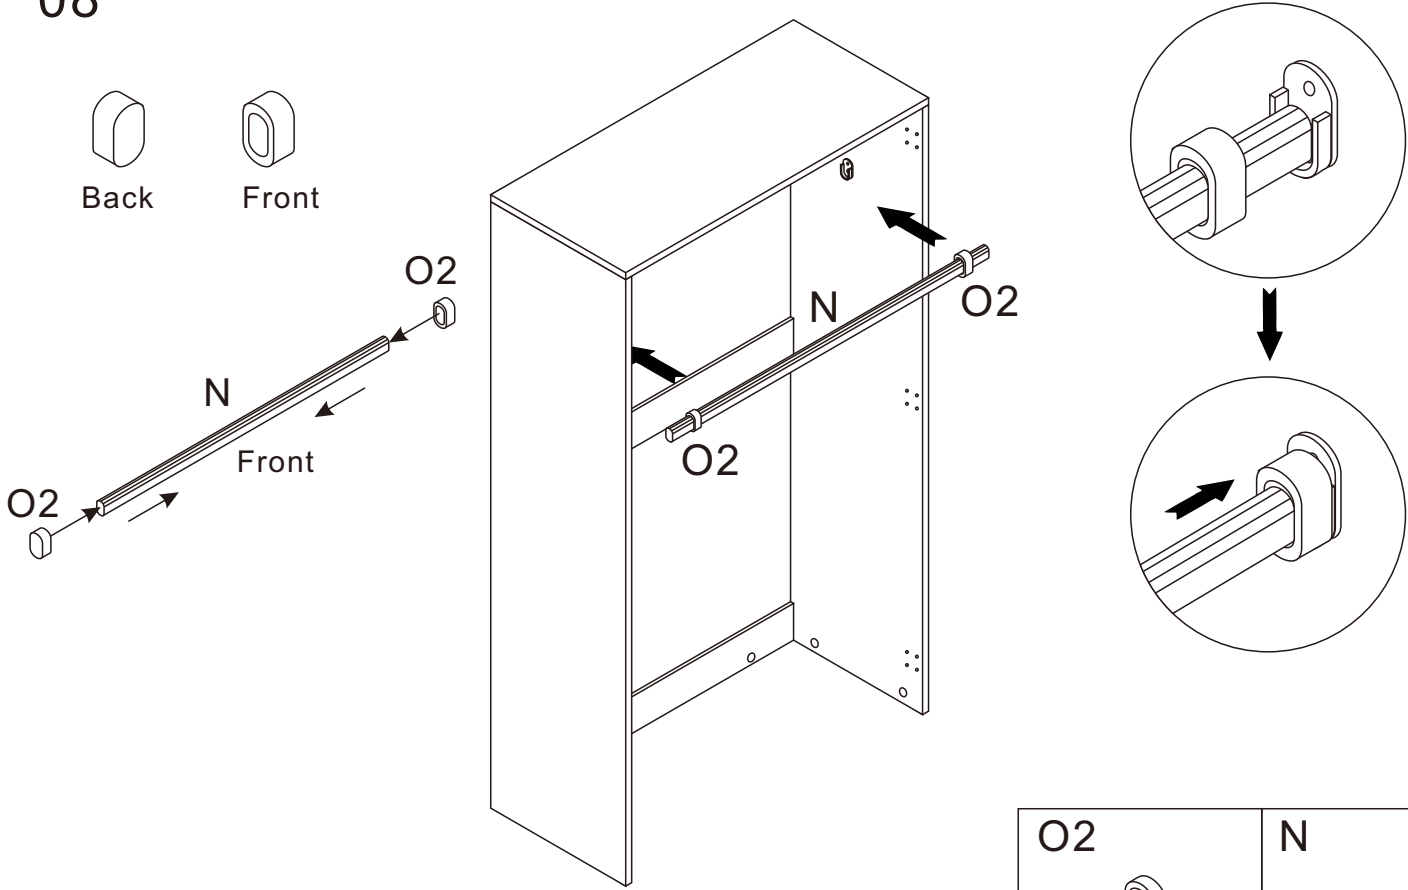

O2
x2

N
x1


09

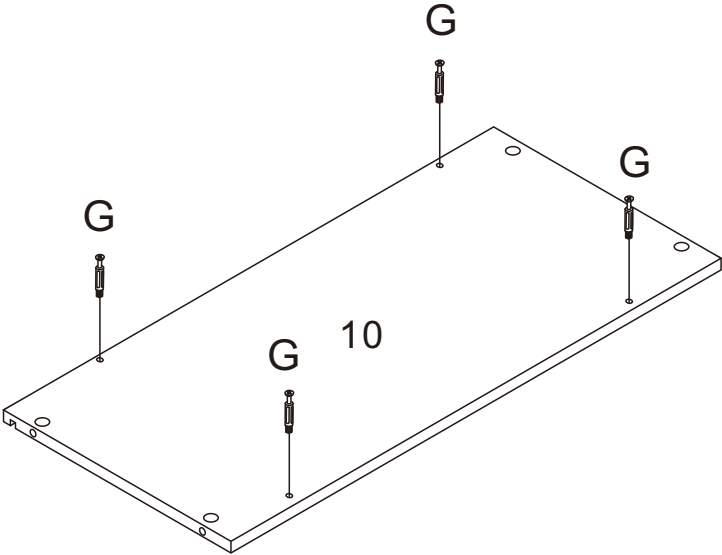

G

40mm
x4


11

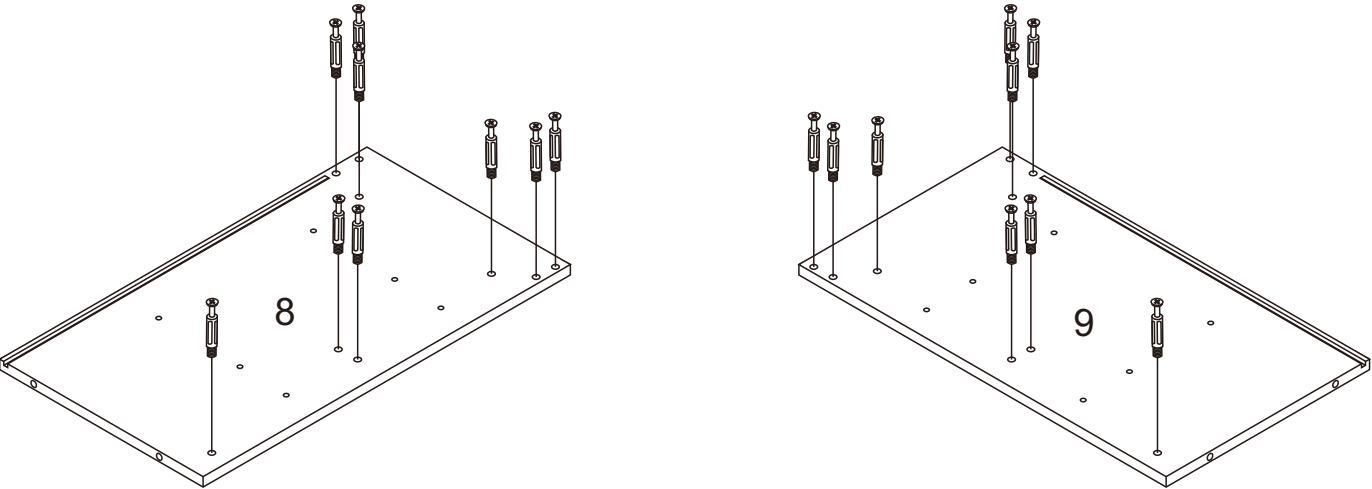

G

40mm
x18


10

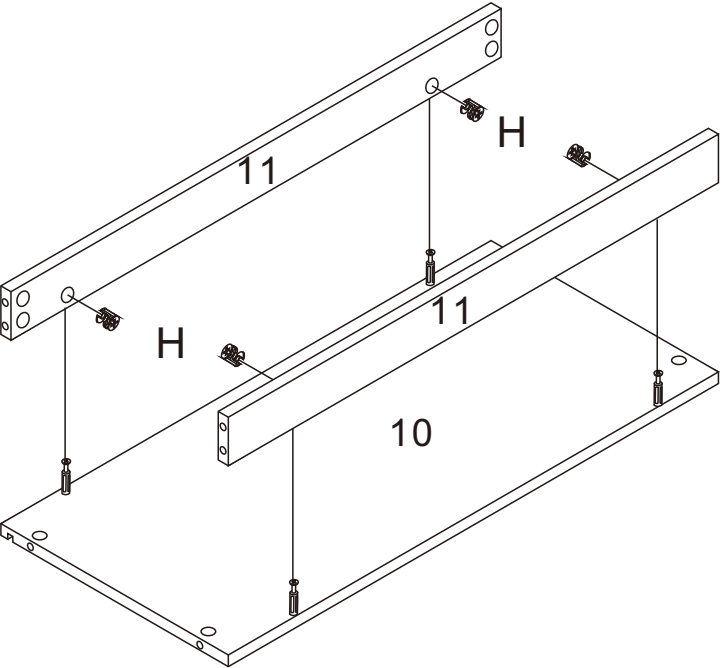


H

15mm
x4


12

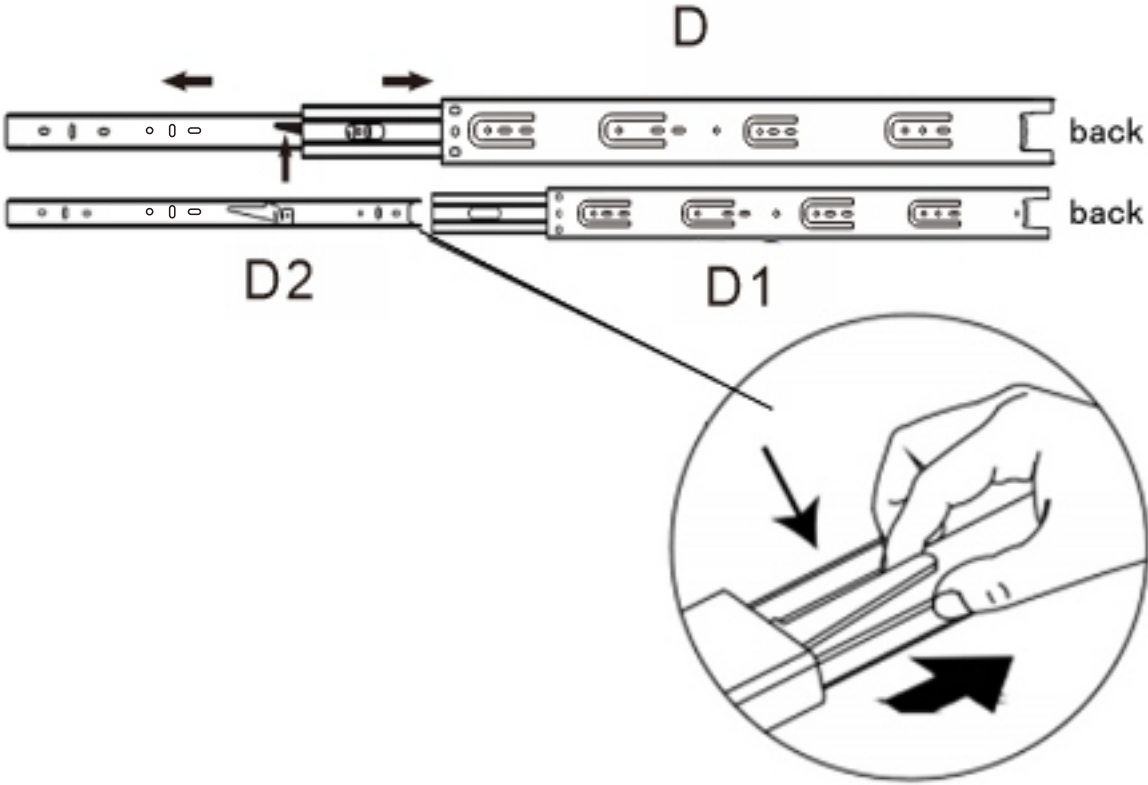

13

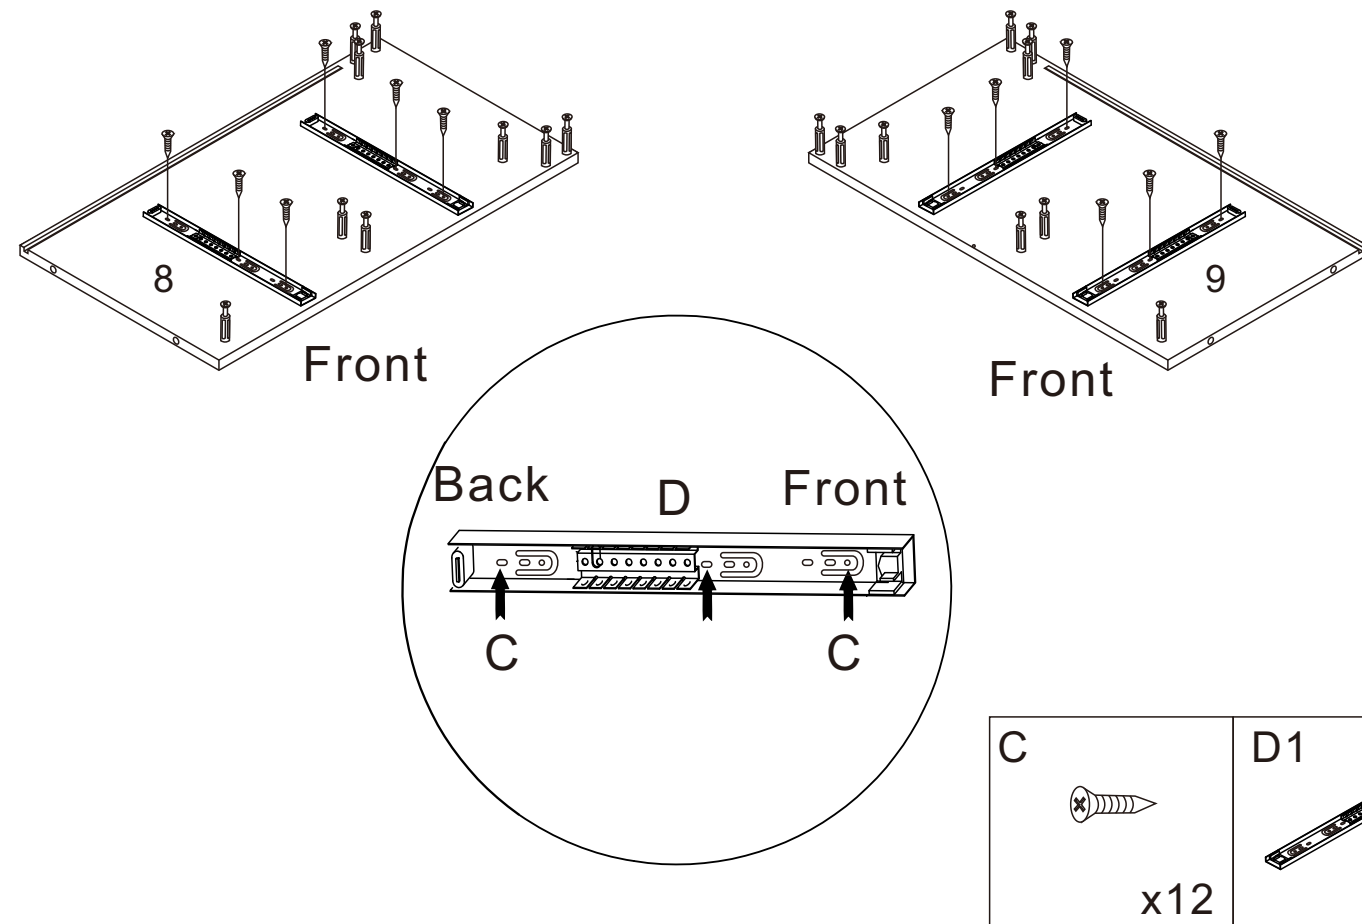


14

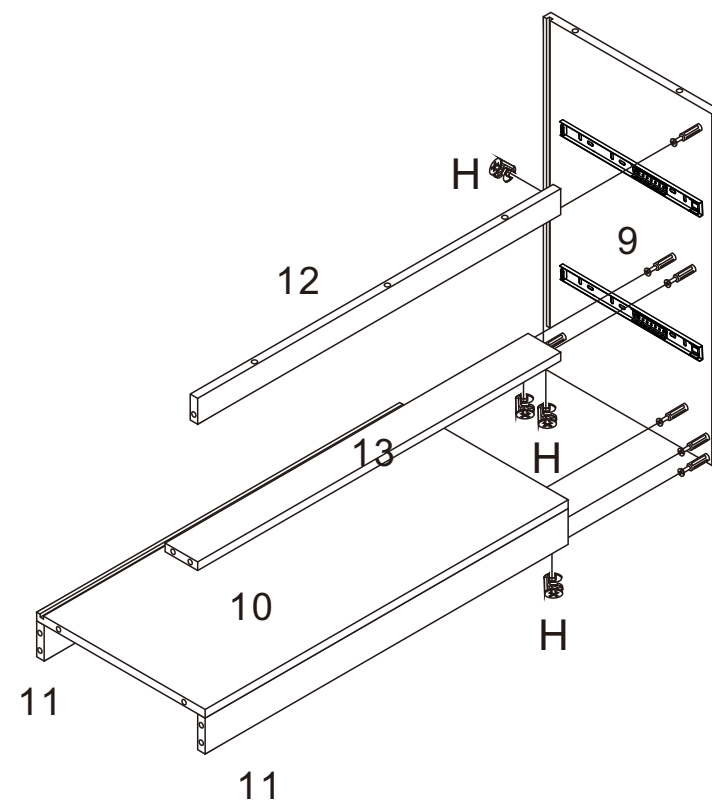

H


15mm
x9

15

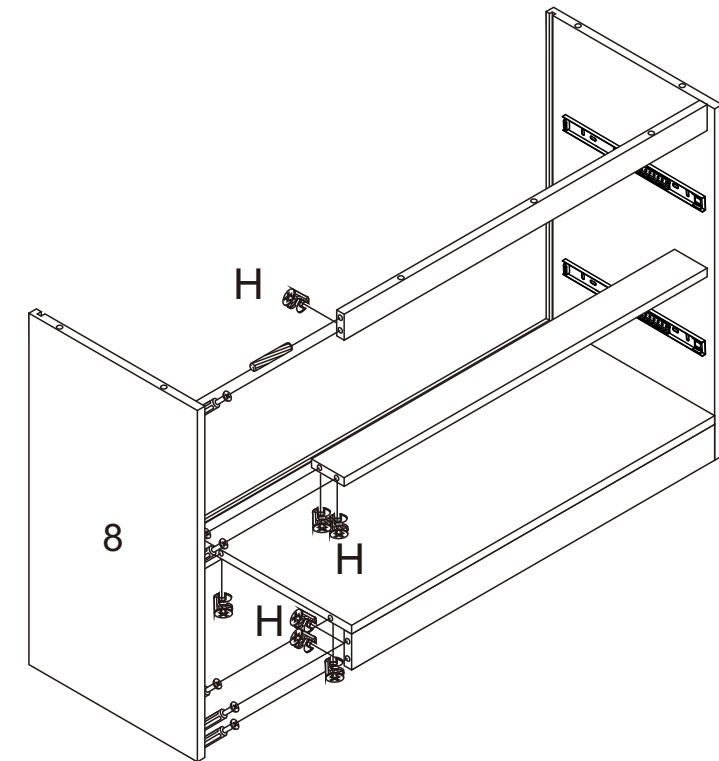


H
15mm
x9

16

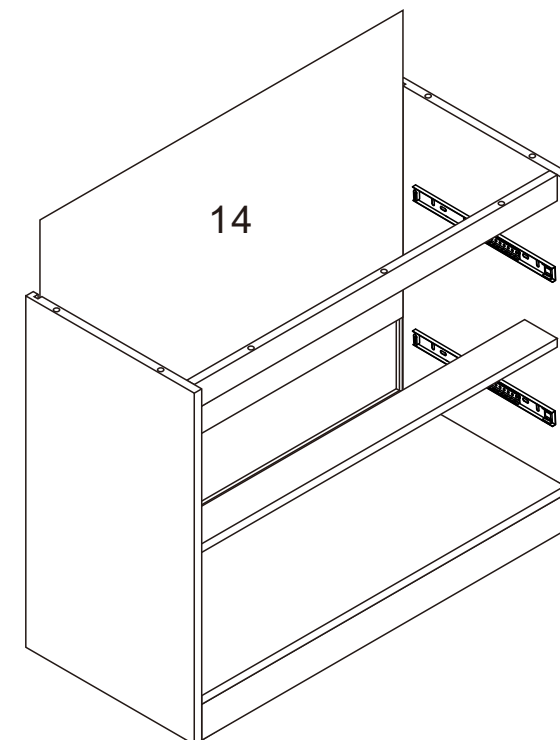

17

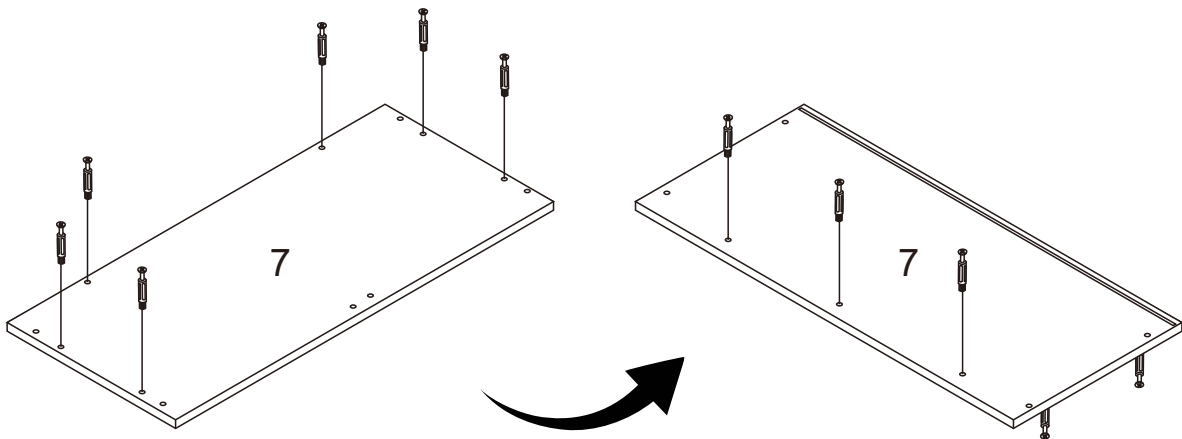


G



40mm

x9

19

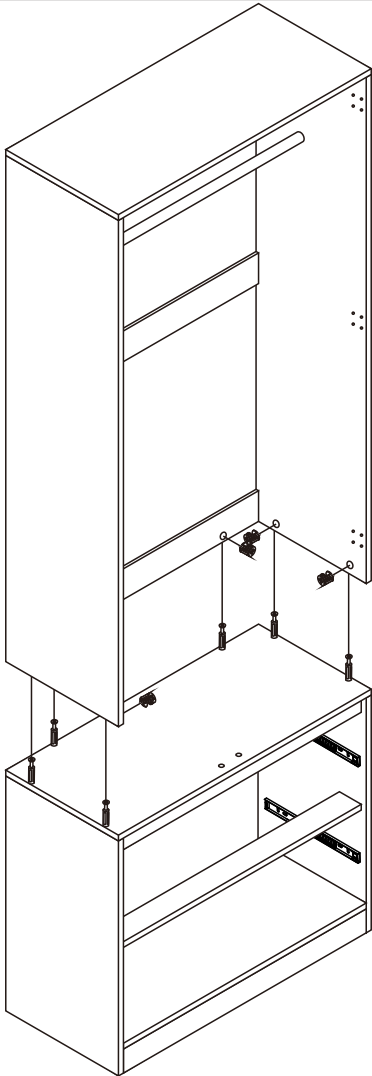


H



15mm

x6

18

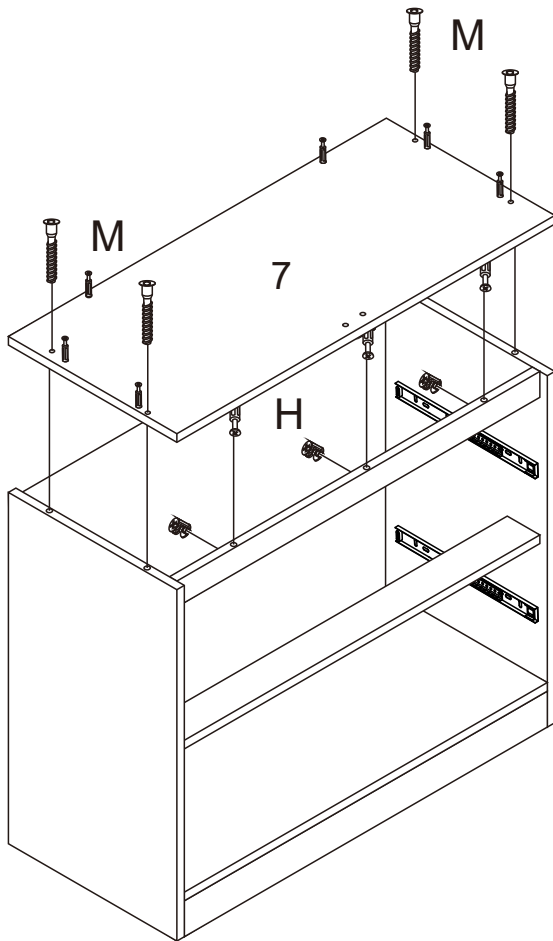

M



x4


H



15mm

x3

20

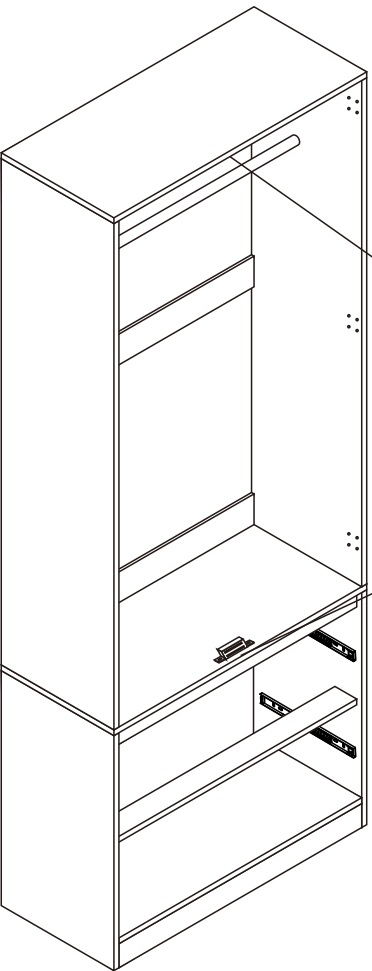

J



x2


K




3x12mm

x4


21

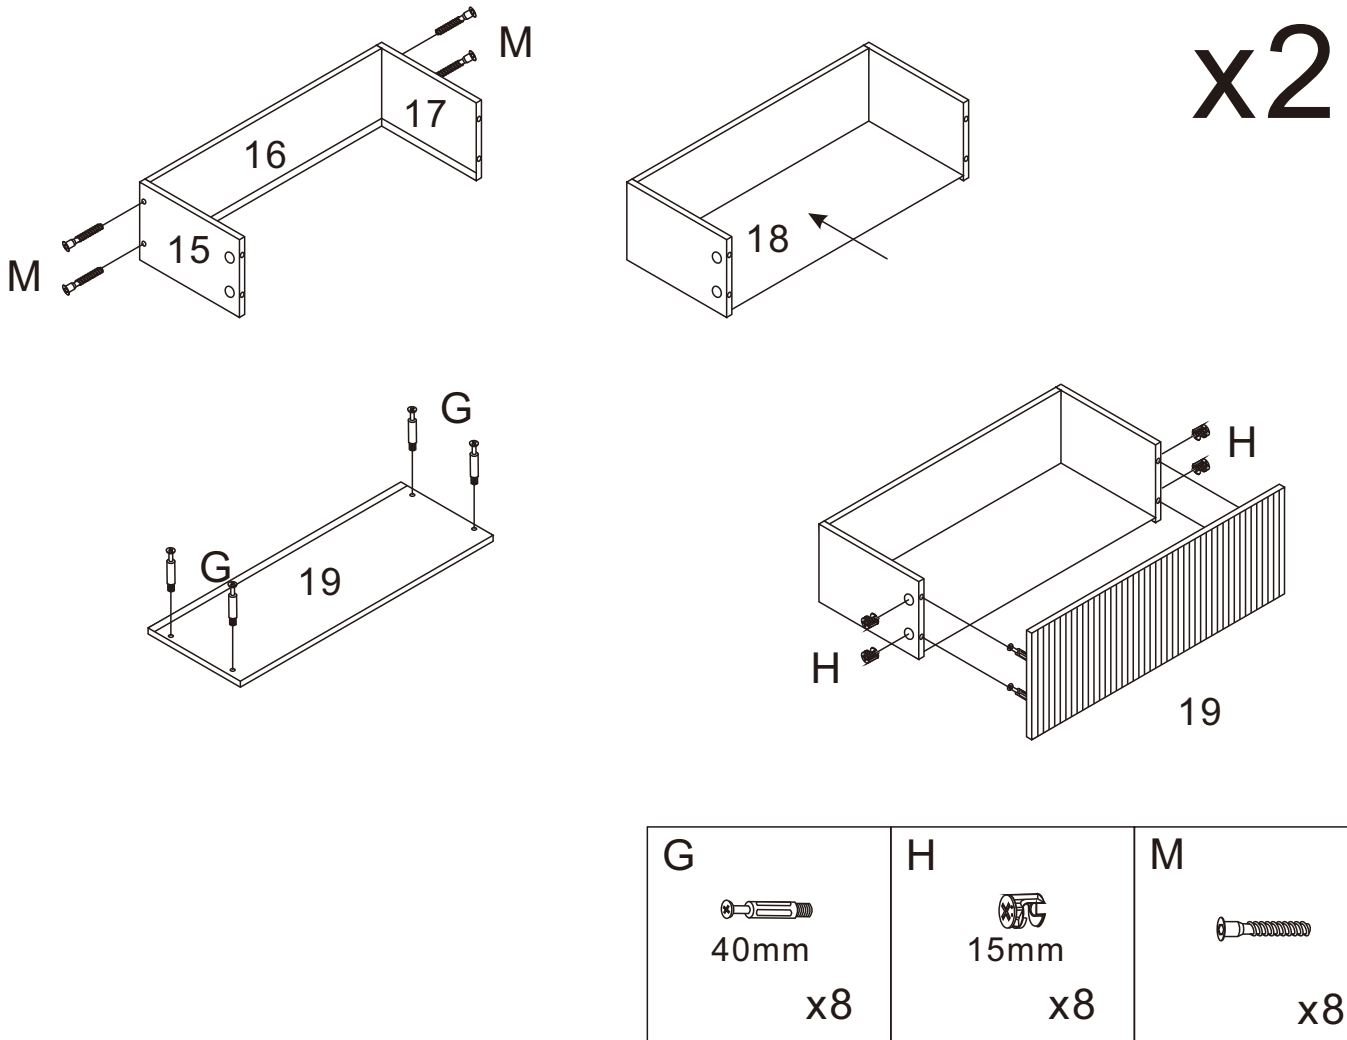


22

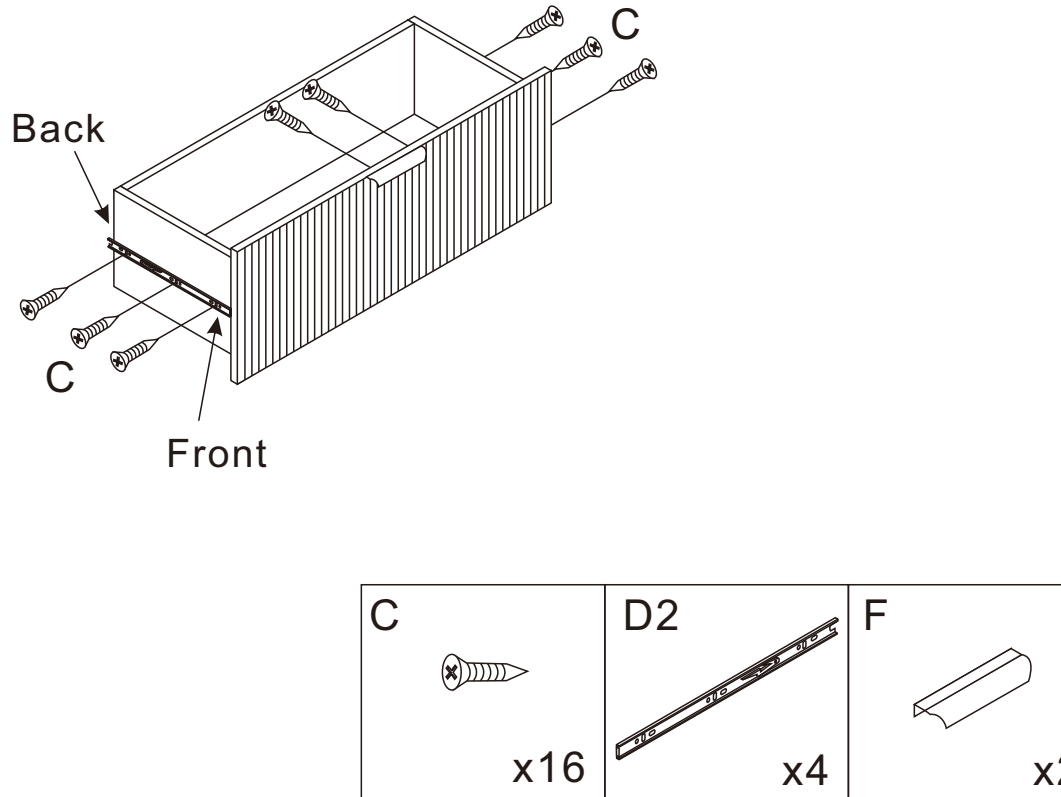


23

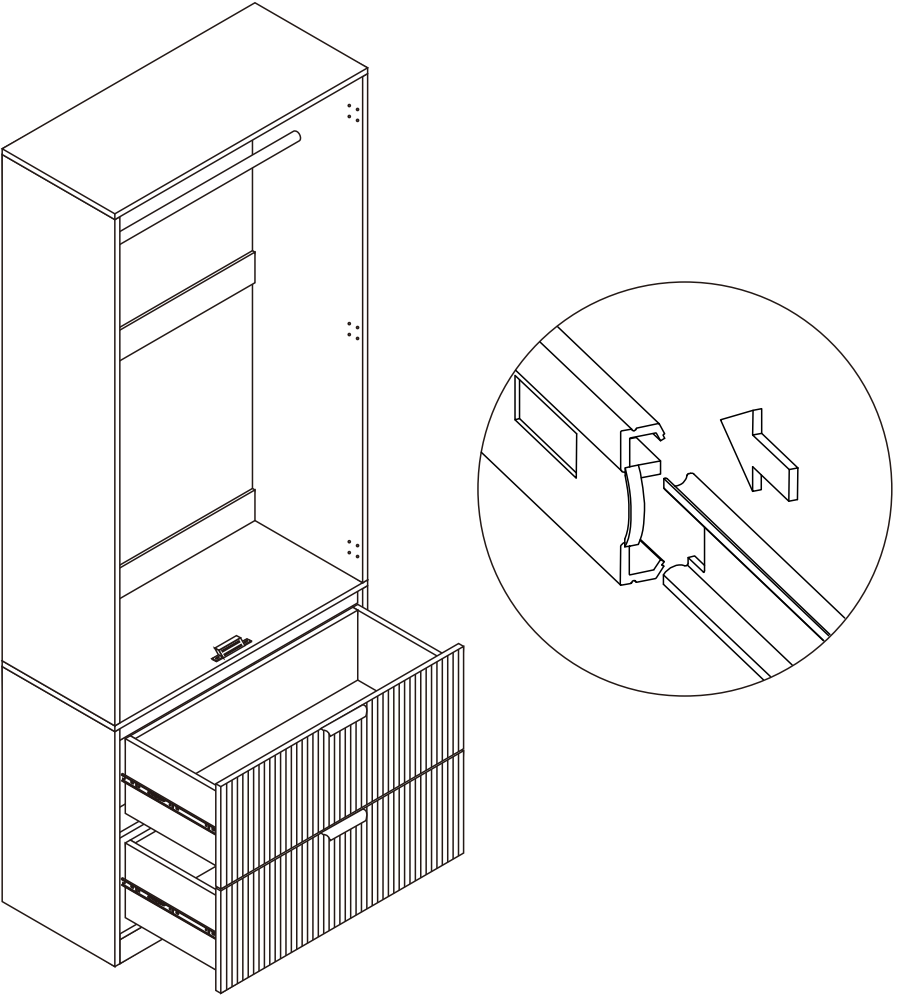


24

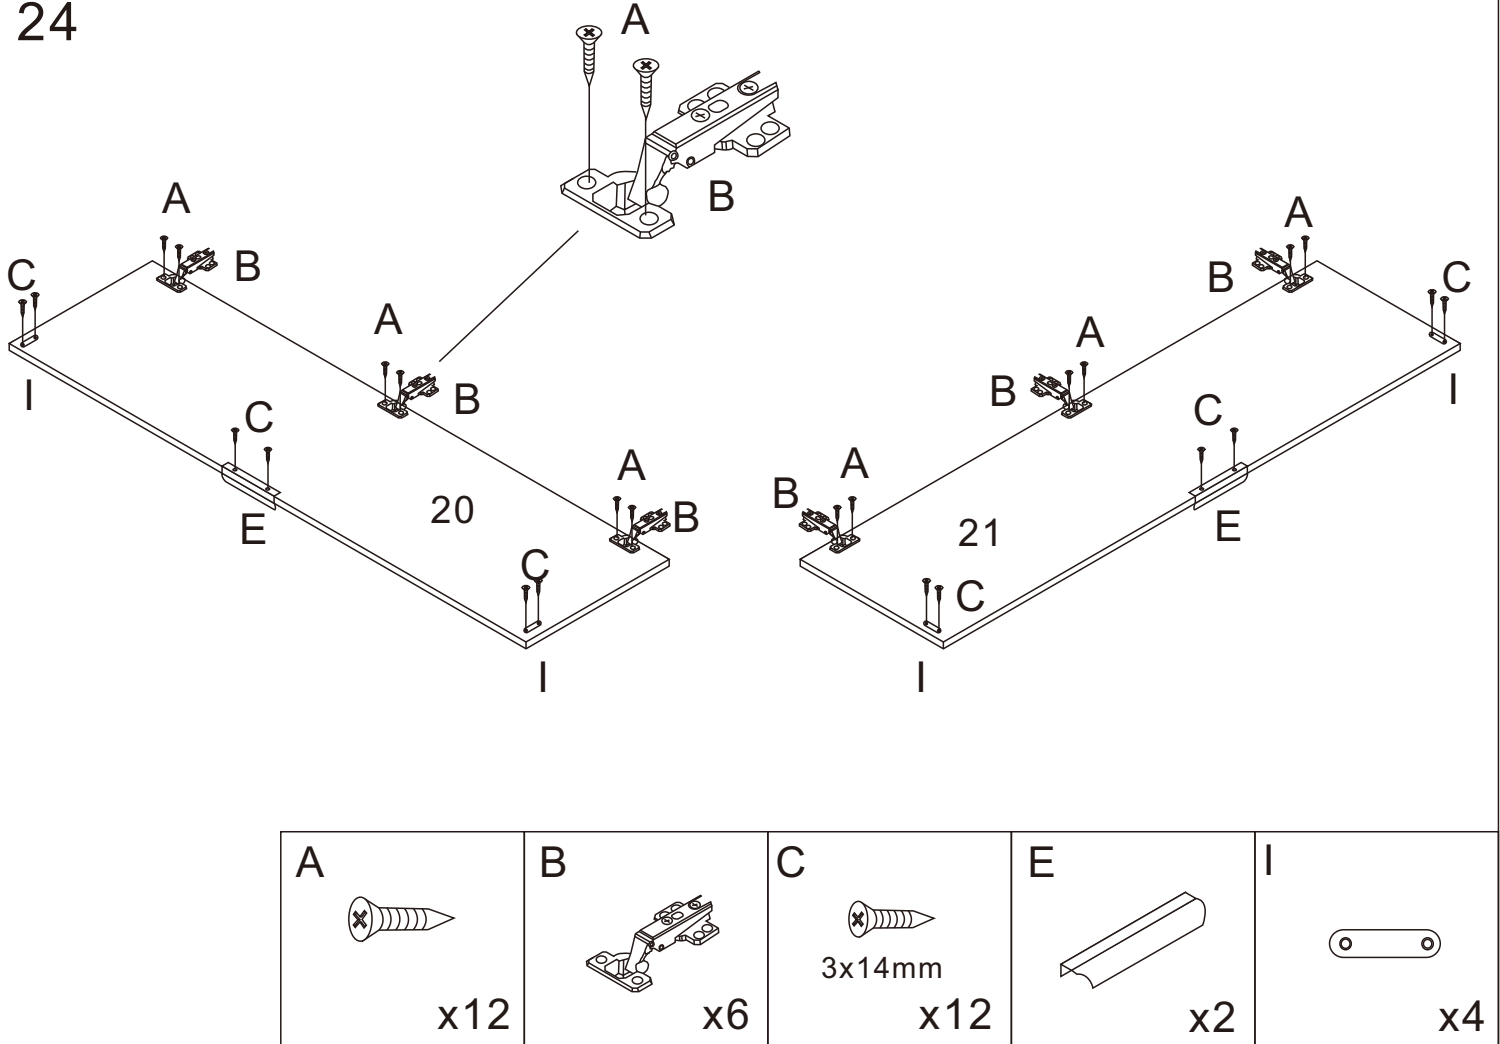

25

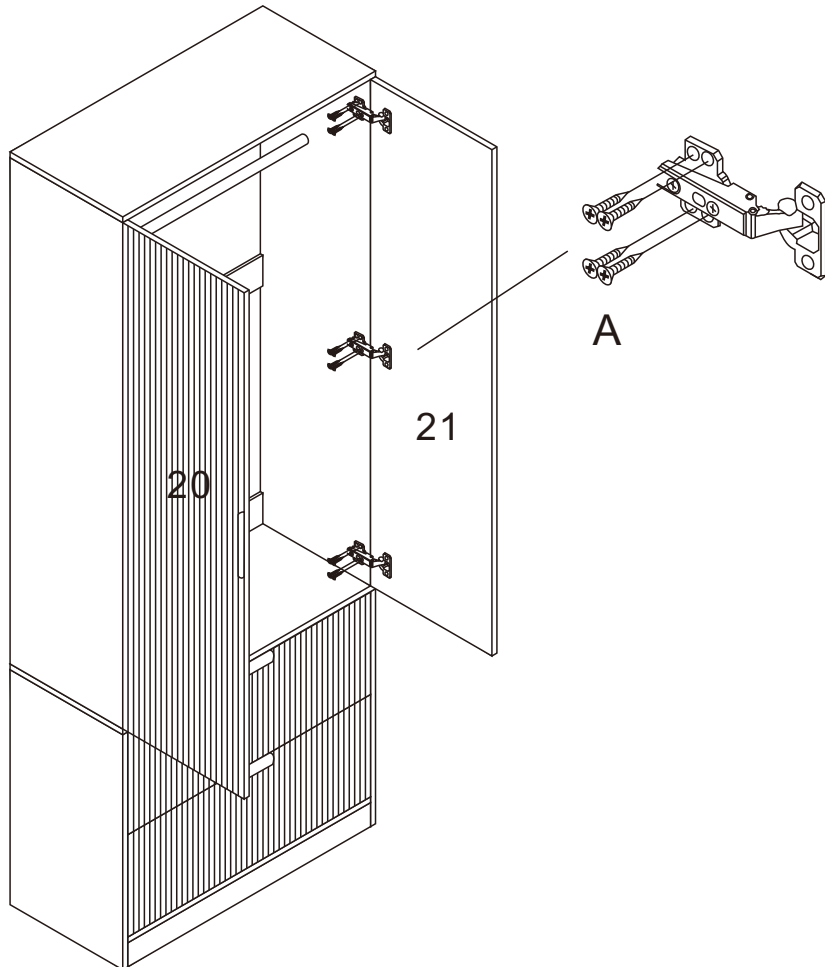


A




x24

27

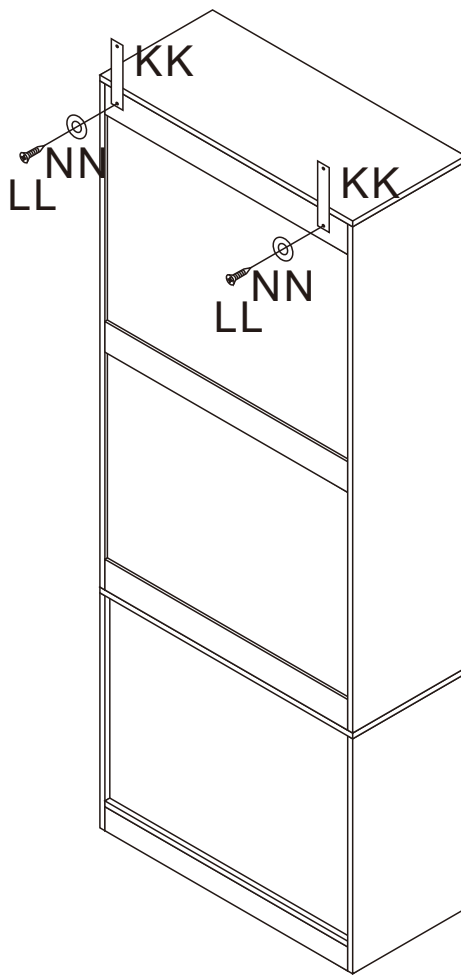


KK	LL	NN
		
x2	x2	x2

26

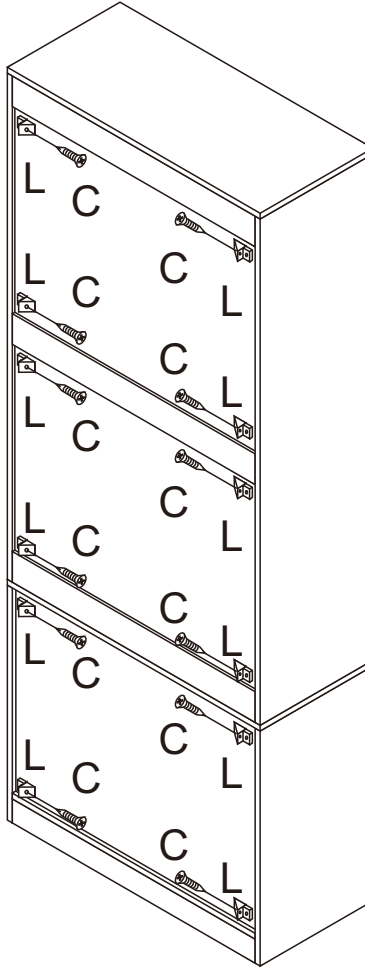

L	C
	
x12	x12

28

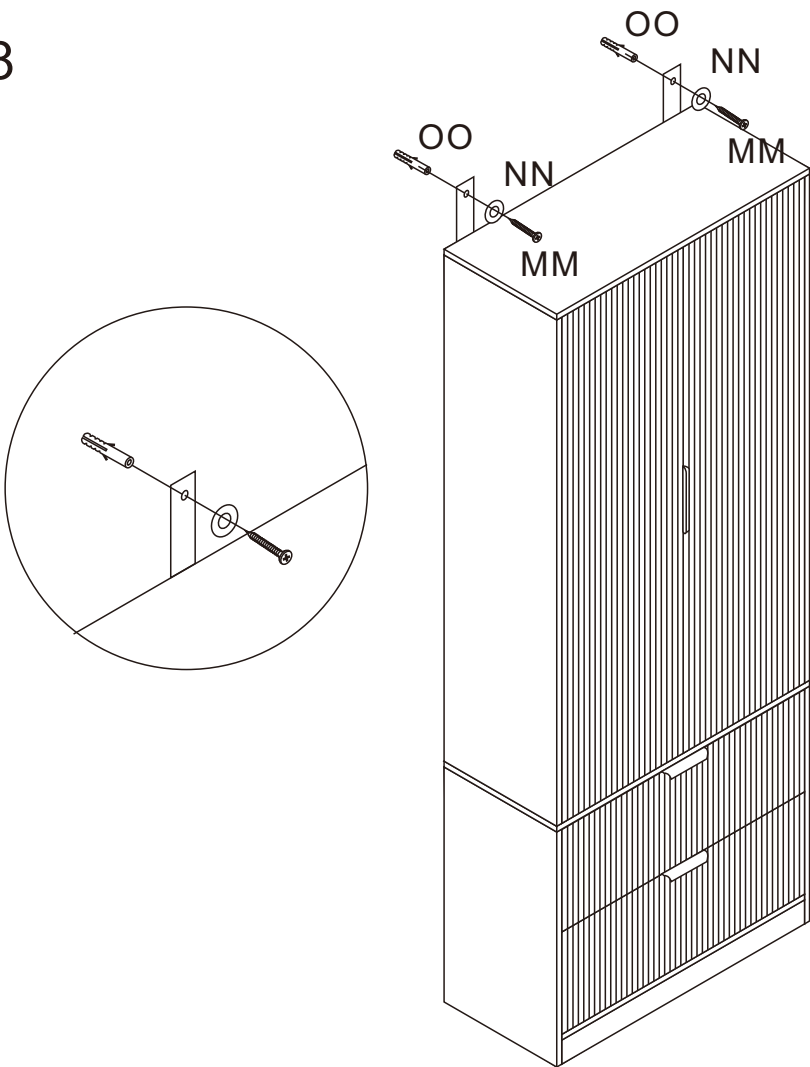

NN	MM
	
x2	x2

OO

x2