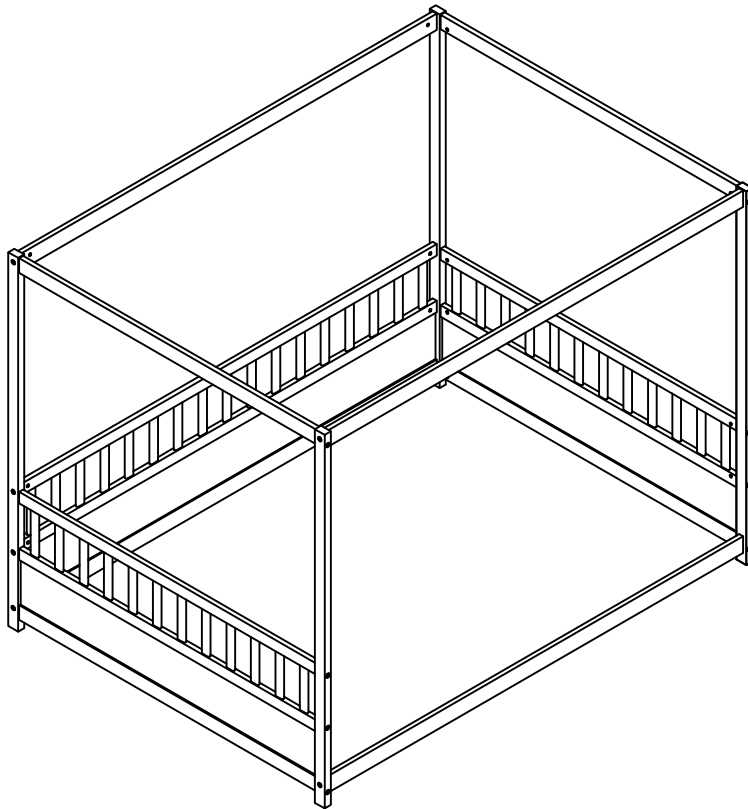
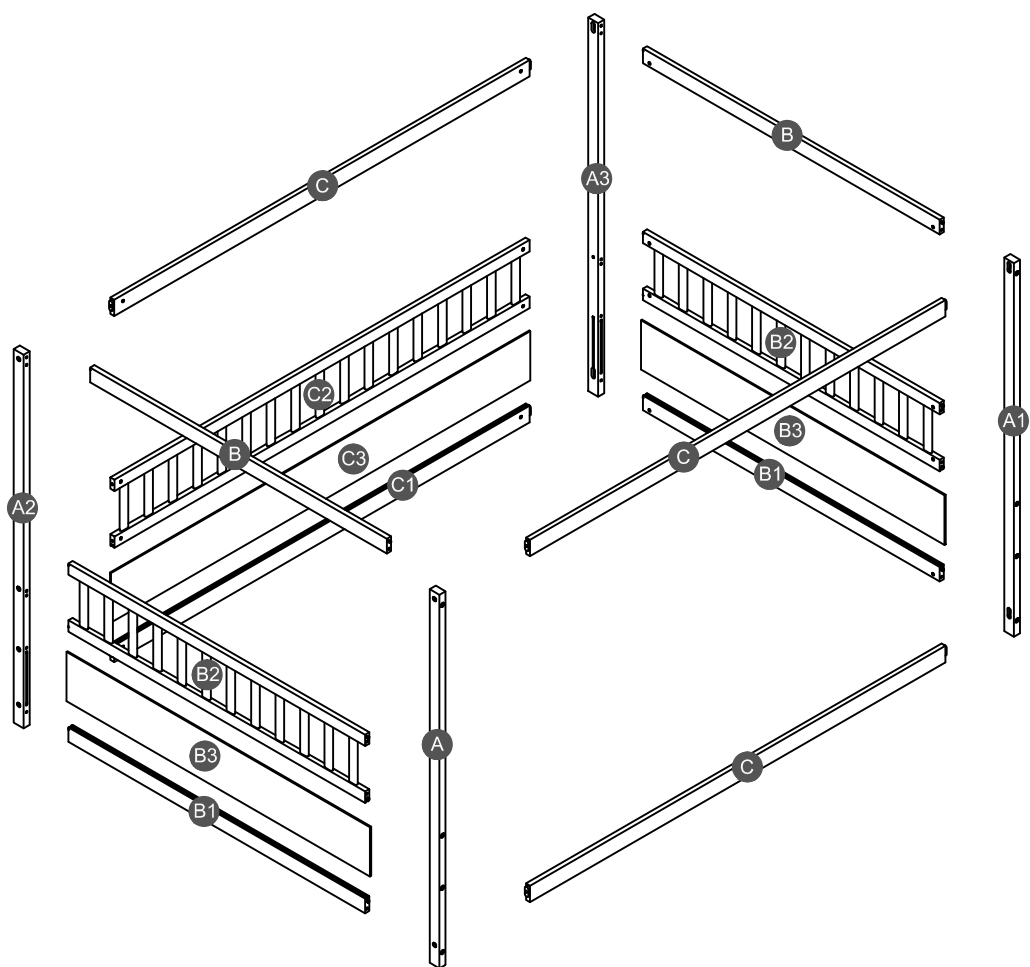


ASSEMBLY INSTRUCTIONS











FULL CANOPY FLOOR BED




Detail View




Part List

A  Leg (left front) - 1pc	A1  Leg (right front) - 1pc	A2  Leg (left back) - 1pc
A3  Leg (right back) - 1pc	B  Upper horizontal bar HB/FB - 2pcs	B1  Lower horizontal bar HB/FB - 2pcs
B2  Frame HB/FB - 2pcs	B3  Side panel HB/FB - 2pcs	C  Horizontal bar - 3pcs
C1  Low horizontal bar (back) - 1pc	C2  Guard rail (back) - 1pc	C3  Side panel (back) - 1pc

Hardware List


1  (Ø15)1/4"*80mm Hex-Head bolts (28pcs)	2  1/4"*15 (9.5mm) Horizontal-Hole bolts(28pcs)	3  (1/4")4.5*58mm Allen key (1pc)
---	--	--

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

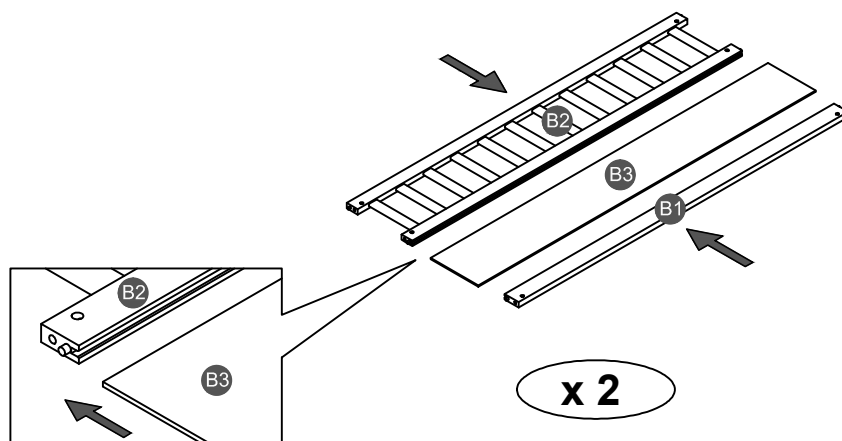STEP 1:




STEP 2:


1	2
16PCS	16PCS

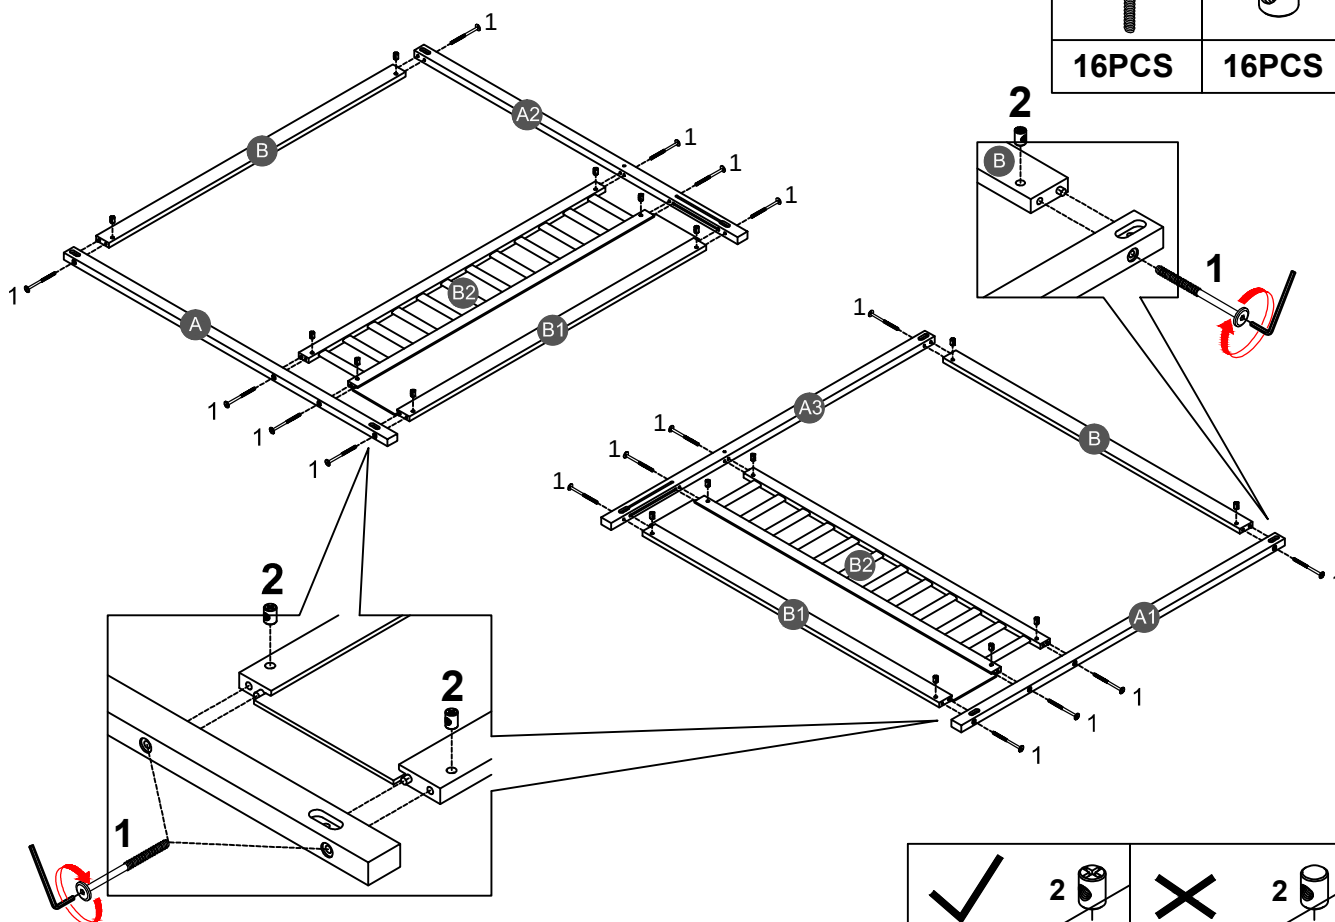

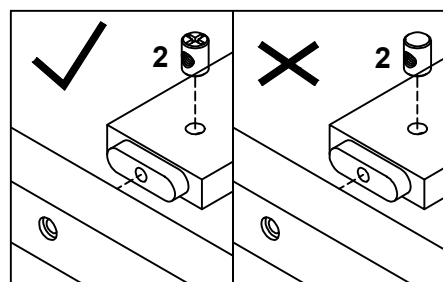Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened




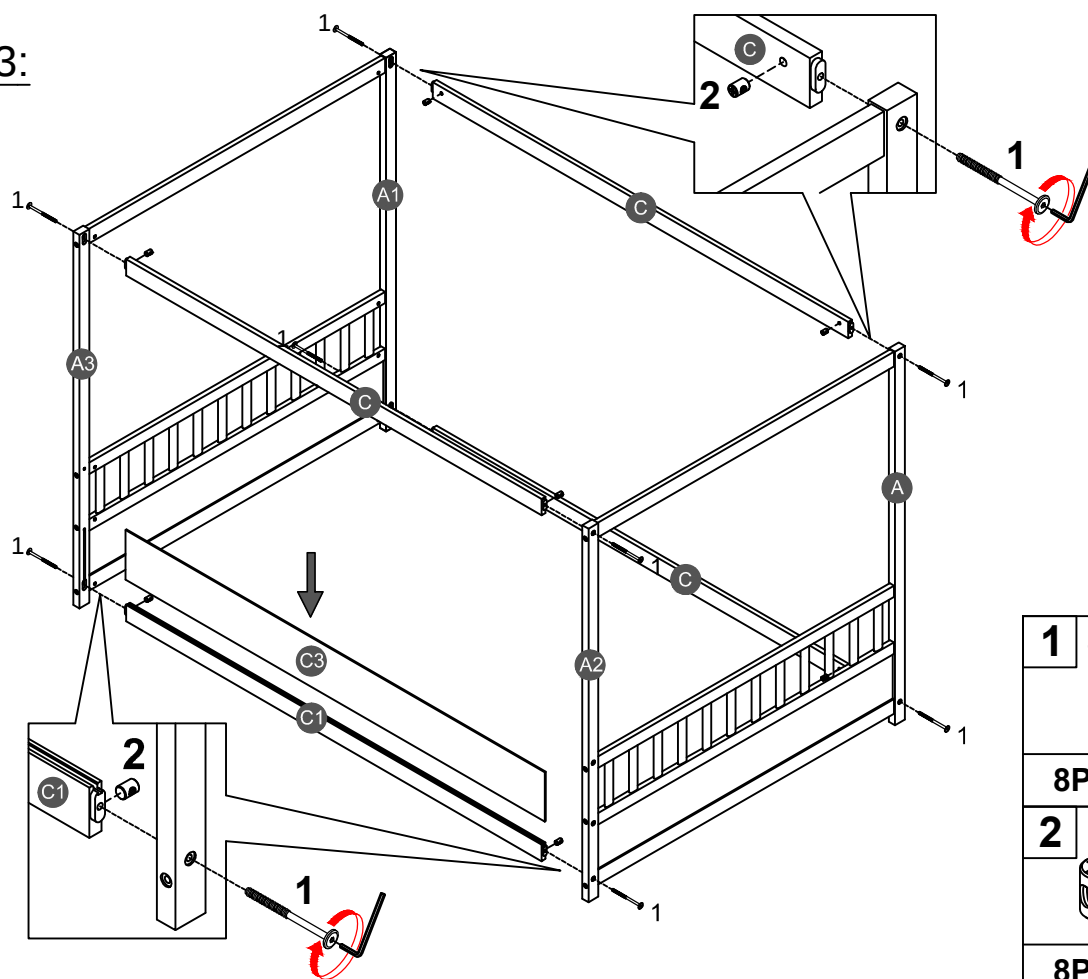STEP 3:



1	
8PCS	
2	
8PCS	

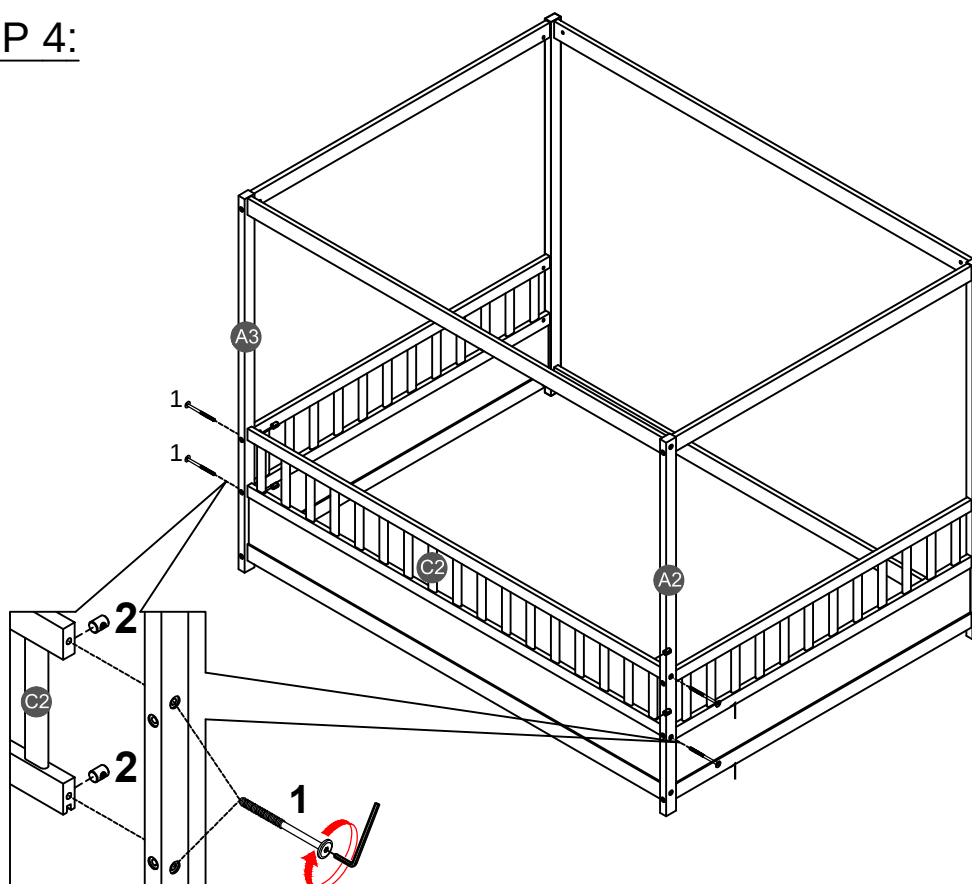STEP 4:



1	
4PCS	
2	
4PCS	

