

# **STANCE**<sub>TM</sub>

#### **Features**


- · Brass construction
- MasterClean™ spray nozzles prohibit mineral build-up
- Complements Stance™ Suite
- Push button diverter on bath and shower trim models [K-T14776, K-T14777]
- Requires a Rite-Temp<sub>®</sub> valve

### **Codes/Standards Applicable**

Specified model meets or exceeds the following:

- ASME A112.18.1/CSA B125.1
- ASSE 1016

BATH & SHOWER TRIM SET **K-T14776** ALSO K-T14777, K-T14778, K-14795

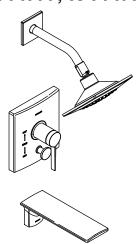

### Colors/Finishes

- CP: Polished Chrome
- Other: Refer to Price Book for additional colors/finishes

#### **Accessories**

NA: None applicable

## **Specified Model**

Model	Description	Colors/Finishes	
K-T14776-4	Bath and shower valve trim (shown)	□ CP	☐ Other
K-T14777-4	Shower trim only – with diverter button	□ CP	☐ Other
K-T14778-4	Shower trim only – without diverter button	□ CP	☐ Other
K-T14779-4	Mixing valve trim- with diverter button	□ CP	☐ Other
K-T14780-4	Mixing valve trim- without diverter button	□ CP	☐ Other
K-14795	Bath spout	□ CP	☐ Other

Required Accessories					
K-304-**	Rite-Temp pressure-balancing valve <b>OR</b>	□ NA			
K-305-*/K-305-**	Rite-Temp pressure-balancing valve with push-button diverter OR	□ NA			

## **Product Specification**

Bath & shower trim set shall be made of brass construction. Product shall have a push button diverter on bath and shower trim models [K-T14776, K-T14777]. Showerhead shall feature a MasterClean spray nozzle that prohibits mineral buildup. Product shall require a Rite-Temp valve. Product shall complement the Stance Suite. Bath & shower trim set shall be Kohler Model K-T\_\_\_\_- or K-\_\_\_- and Rite-Temp valving shall be K-\_\_\_--NA.

# **STANCETM**

	ories continued	
K-2971-KS**	HiFlow Rite-Temp valve with stops <b>OR</b>	□ NA
K-11748-**	Rite-Temp valve with push-button diverter	□ NA

Optional Accessories					
88526	Thin wall installation kit for K-2971-KS HiFlow Rite-Temp valve	□ CP	☐ Other		
1016453	Diverter button kit for K-305-K or K-305-KS Rite-Temp valve	□ CP	☐ Other		
1111613	Deep rough-in kit for Rite-Temp valve	□ CP	☐ Other		

### **Installation Notes**

Install this product according to the installation guide.

NOTICE: For K-305 valve: The diverter button kit


(1016453-C/F) is required.

**NOTICE: Risk of product damage.** Long screws, for installing trim, can damage the K-2971-KS valve. Consult the trim installation guide to verify if the thin wall installation kit (88526) is needed.

Avoid cross-flow conditions. Do not install a shut-off device on either valve outlet.

Cap the shower outlet if the deck-mounted spout, diverter, or handshower is connected to the spout outlet.

Install straight pipe or tube drop of 7" (178 mm) to 18" (457 mm) with single elbow between the valve and the wall-mount spout.

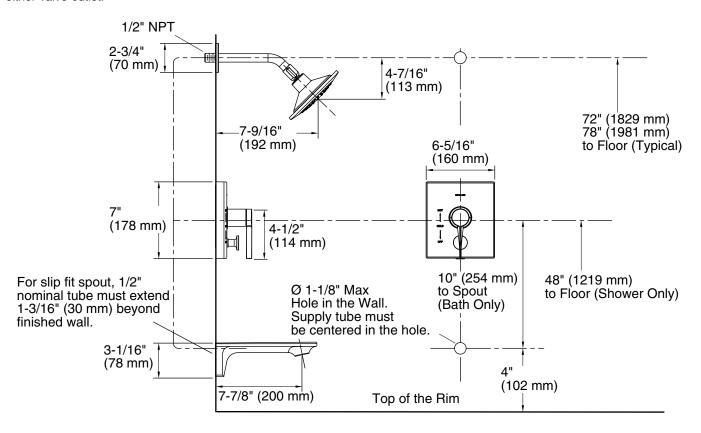

**Product Diagram** 

