

# ASSEMBLY INSTRUCTIONS

## QUEEN UPHOLSTERED HEADBOARD

ASSEMBLY  
REQUIREMENTS

Assembly Time  
(Approximate)

15 Minutes

2-Person  
Assembly

Thank you for purchasing our product. Please refer and use this assembly instruction to assemble the product.


Contact our customer servicedepartment in case there are any missing or damage parts or hardware.

Replacement parts are normally shipped within 2 or3 days.

**PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS**

We appreciate your business!

**THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY- NOT FOR COMMERCIAL USE.**

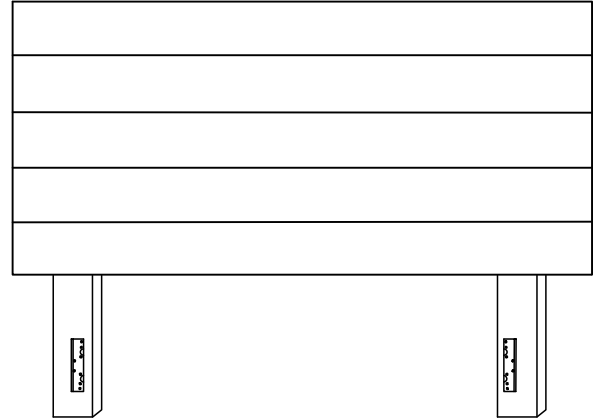

### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

1. Allow ample room for assembly and assemble the product close to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.


### CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

# UPHOLSTERED HEADBOARD

## Parts & Hardware List

**A** Headboard

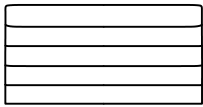

1 pc

**B** Left Leg  
(See diagram below)



1 pc

**C** Right Leg  
(See diagram below)



1 pc

**D** Bolt  
1/4 x 65mm



10 pcs

**E** Flat Washer



10pcs

**F** Lock Washer



10pcs

**G** Allen Wrench




1 pc

**H** Back Cover



1 pcs


Correct Orientation of  
Left and Right Leg of  
Headboard

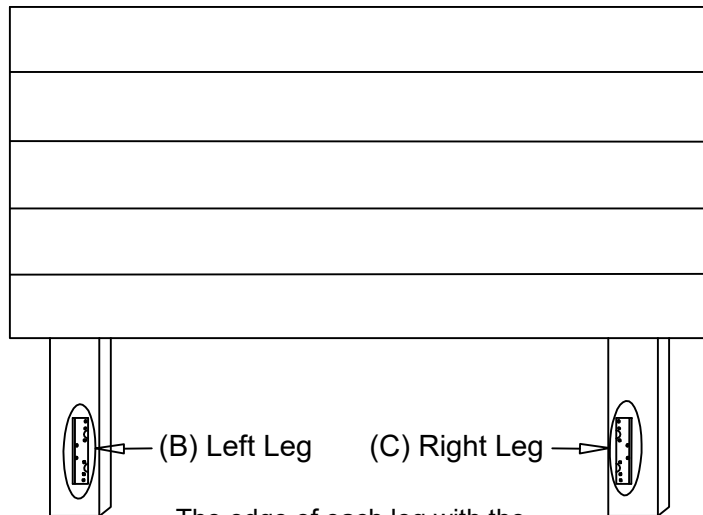

The edge of each leg with the  
off-set metal slot has to face  
inwards towards each other.



Wrong Orientation of  
Left and Right Leg of  
Headboard

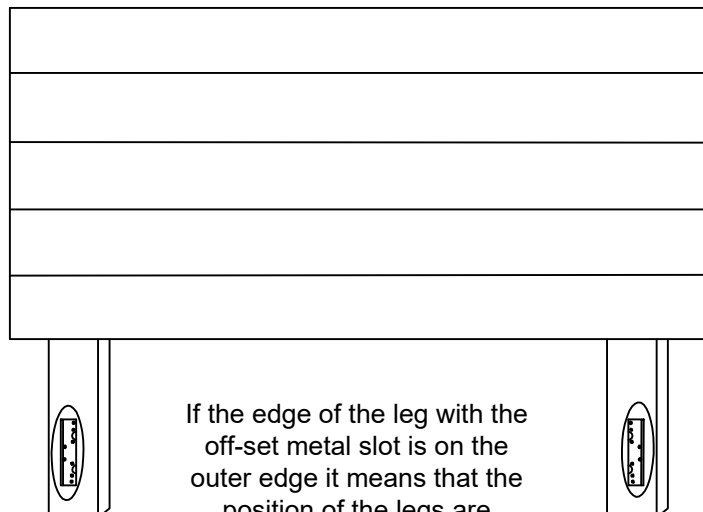

If the edge of the leg with the  
off-set metal slot is on the  
outer edge it means that the  
position of the legs are  
incorrect.




# UPHOLSTERED HEADBOARD

1

## IMPORTANT!


Please check the height of your box spring and / or mattress before assembly and use the table below to determine which T-match # to position Left and Right Leg.

Box Spring + Mattress	Adjustable Headboard Height
Under 14"	T match 5#
14"~18"	T match 4#
18"~22"	T match 3#
22"~26"	T match 2#
26"~UP	T match 1#

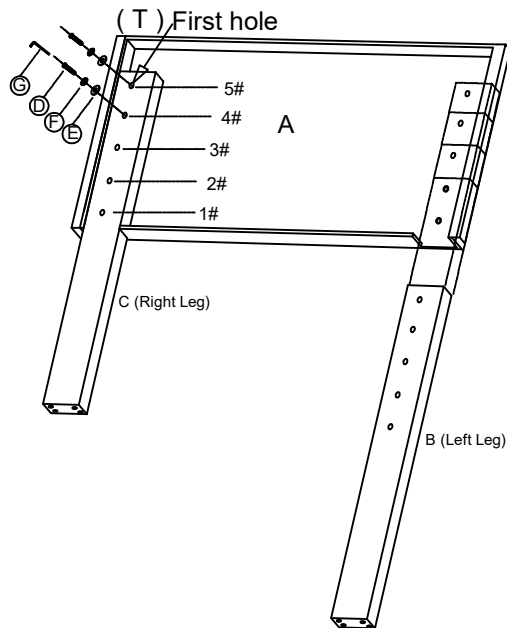

- With assistance, place Headboard (1) with the back facing up on a material that does not scratch or damage the part.
- Measure the thickness of the box-spring and/or mattress and consult the table above to determine the correct T match # to mount Left and Right Leg. Ensure the orientation of the legs are correct.
- Use Bolt (D) fitted with Lock Washer (F) and Flat Washer (E) to fasten Left and Right Legs.
- Use Allen Wrench to drive (D). Do not tighten bolts completely until both bolts are in place on each leg.

2

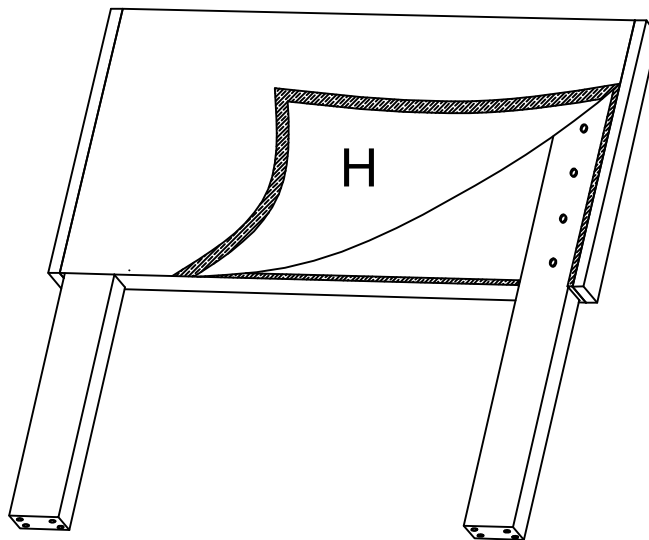

Use Back Cover (H) to cover the back of the headboard.

The assembly of the headboard is complete.