

Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance




- Not for commercial use.For residential use only.




- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.




- Do not place furniture under direct sunlight.




- Do not place furniture near heating or cooling vents.




- Do not write on furniture without a padded barrier to protect the surface.

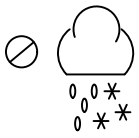


- Do not place furniture outside. For indoor use only.

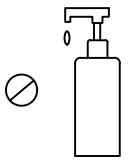

- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.








- Dust and pick-up spills using a clean,non-colored, lint-free cloth.

Please look in Seat frame for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.





DINING CHAIR

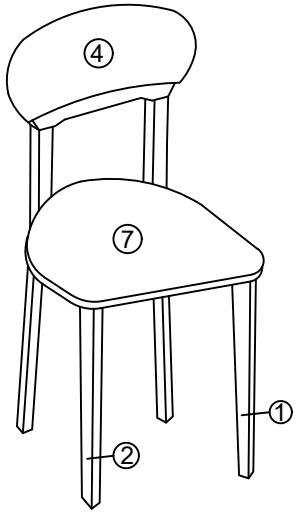

Parts List


Label	Picture	Description	QTY
A		FRONT LEG (L)	1
B		FRONT LEG (R)	1
C		CUSHION SUPPORT	1
D		BACK CUSHION	1
E		CORNER BLOCK - BACK (180MM)	1
F		CORNER BLOCK - L & R (307MM)	2
G		CORNER BLOCK - FRONT (343MM)	1
H		CUSHION SEAT	1

Hardware


Label	Picture	Description	QTY
①		JCBC SCREW (M6*30MM)	16
②		JCBC SCREW (M6*50MM)	7
③		JCBC W SCREW (M7*50MM)	3
④		FLAT WASHER (M6*13MM)	4
⑤		SPRING WASHER (M6)	7
⑥		WOOD DOWEL (M8*30MM)	2
⑦		ALLEN WRENCH (M4*100MM)	1
⑧		White Glue	1

Assembly Preparation

Before Beginning Assembly :



A




B




C



D



E



F



G




H



1 X 16 PCS



2 X 7 PCS



3 X 3 PCS



4 X 4 PCS



5 X 7 PCS



6 X 2 PCS



7 X 1 PC



8 X 1 PC




- Read instructions, cover to cover-




- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-


Assembly Steps

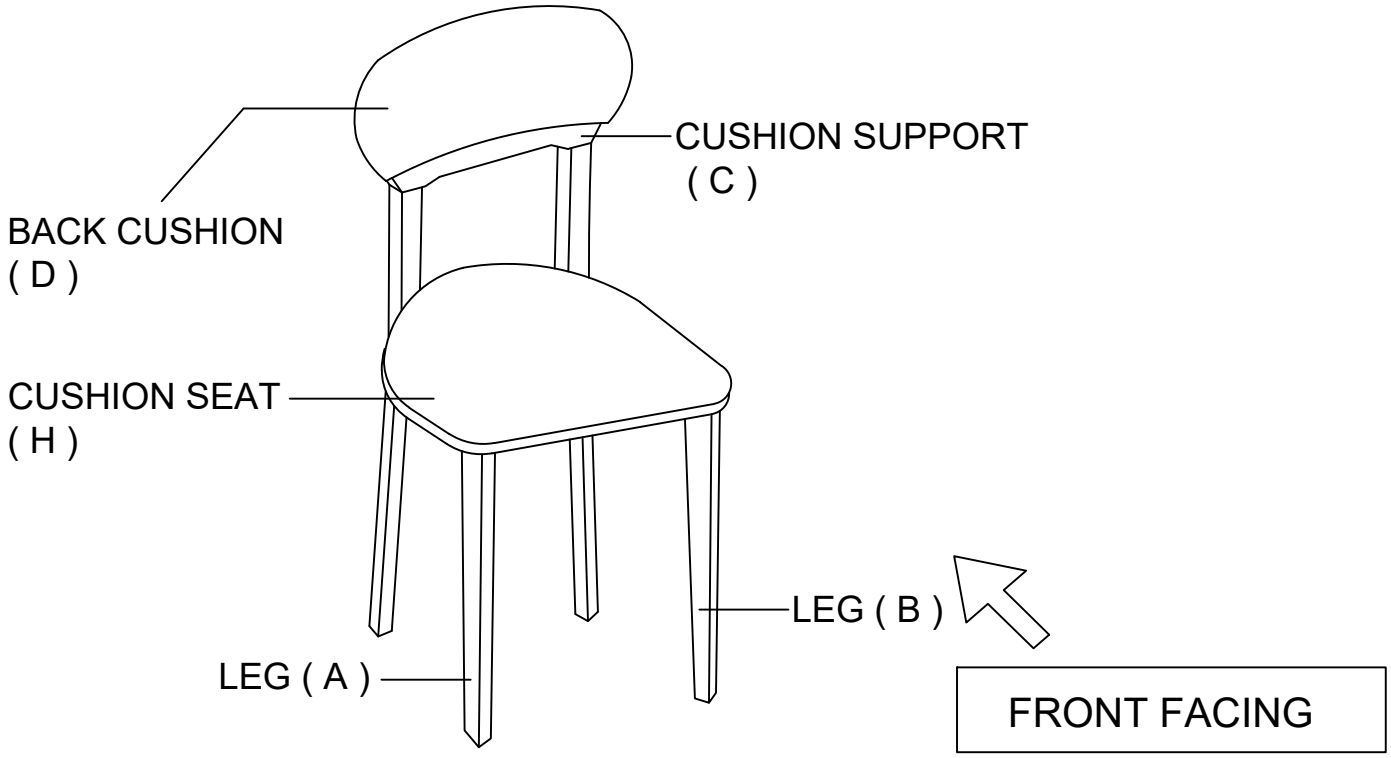

This Chair has multiple parts and may require to some 30 minutes to assemble. To give you an overview of the chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

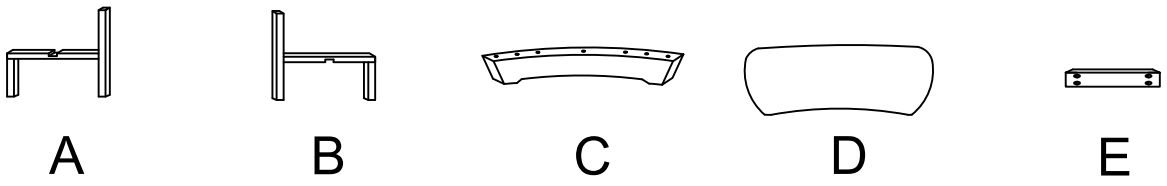




Place all Parts on a clean, flat surface.

Step 2

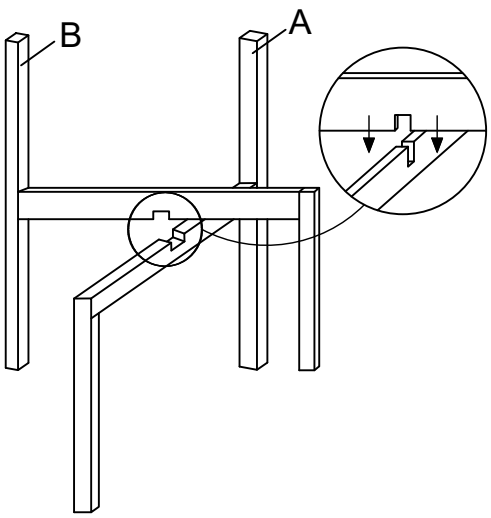


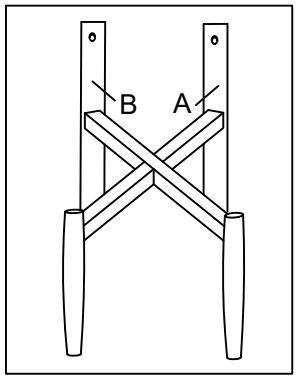


LEGS COMPLETE

Place the Leg (A), On a clean, non marring surface. Install the Leg (B) as pictured above.

Step 3

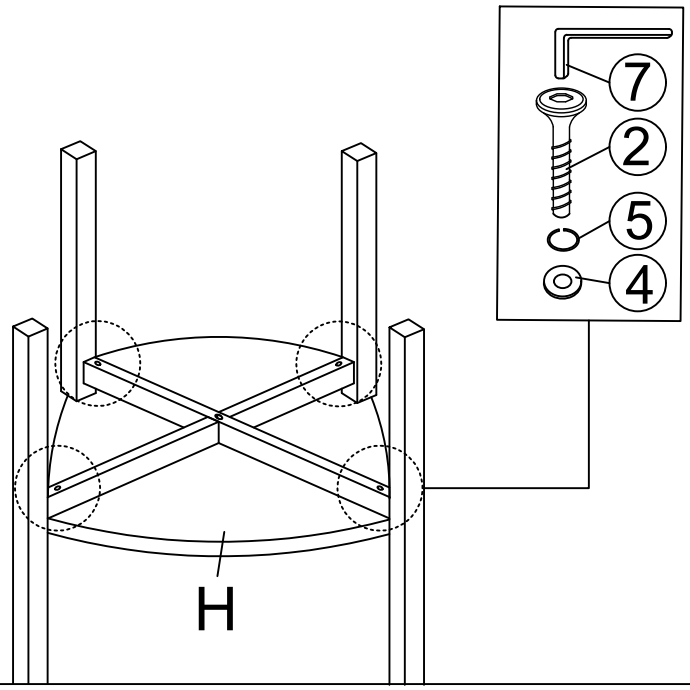


2		JCBC SCREW (M6*50MM)	4
5		SPRING WASHER (M6)	4
4		FLAT WASHER (M6*13MM)	4

Install Cushion Seat (H),using JCBC Screw (M6*50mm) ②, Spring Washer (M6) ⑤, Flat Washer (M6*13mm) ④, with Allen Key (M4*100mm) ⑦ as pictured above.

NOTE : Do not fully tighten the Bolts in this step.


Step 4

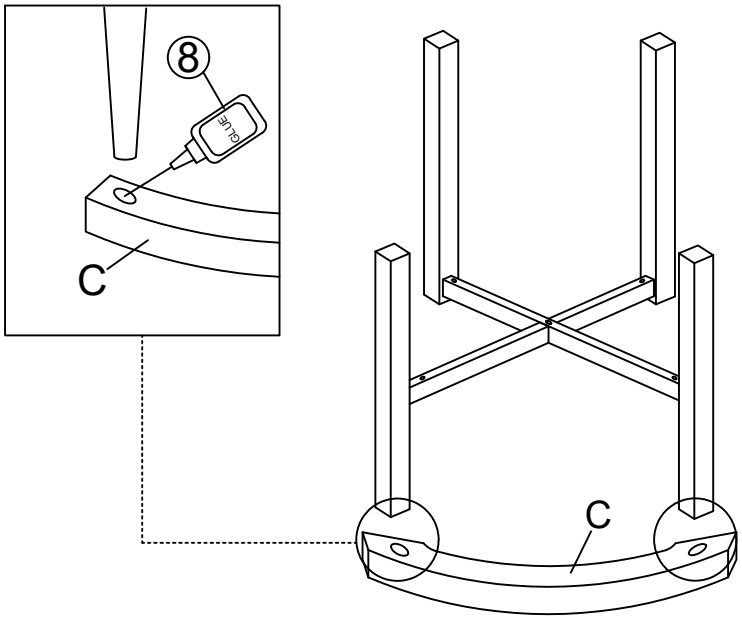


2		White Glue	1

Install the Cushion Support (C), into Leg (A) and Leg (B), using White Glue ⑧.

Step 5

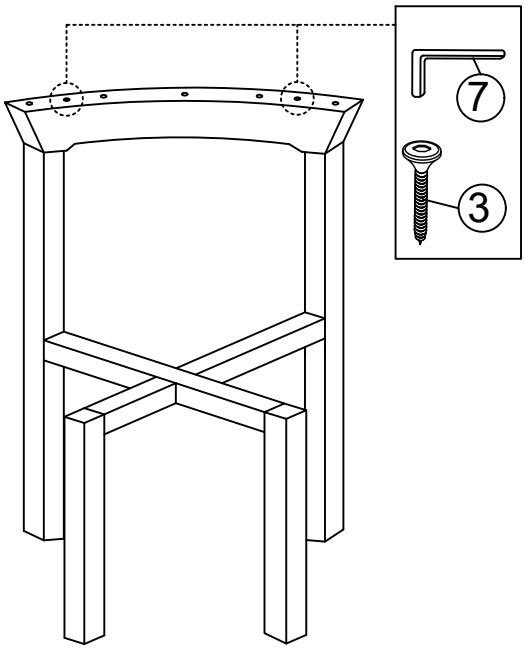


3		JCBC W SCREW (M7*50MM)	2

Place the assembled chair as shown.Using JCBC W SCREW (M7*50MM) ③ , Allen Key (M4*100mm) ⑦, as pictured above.

NOTE : Fully tighten the Bolts in this step.


Step 6

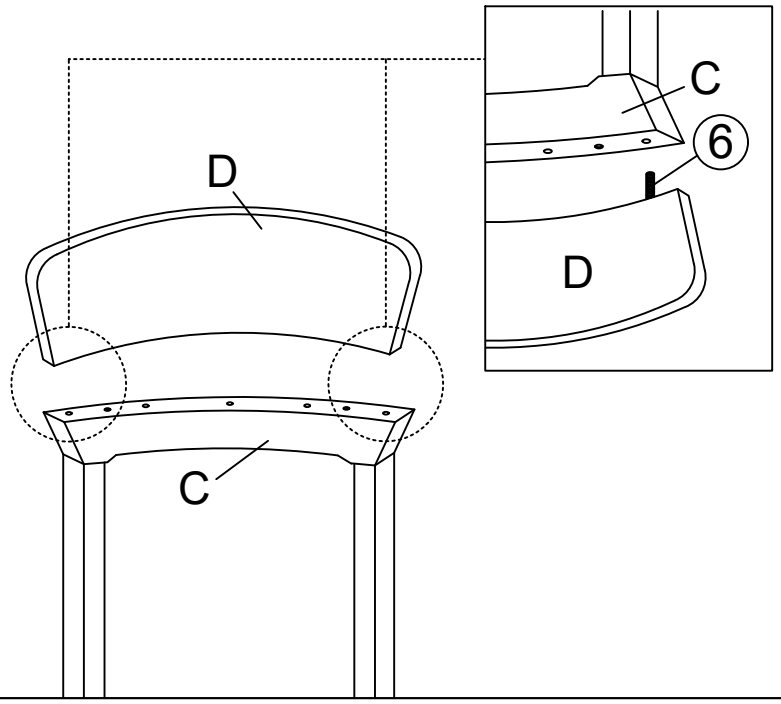

6		WOOD DOWEL (M8*30MM)	2

Place the assembled chair as shown. Install Wood Dowel ⑥ into Back Cushion (D), after that , fixed it into the Cushion Support (C) as pictured above.


Step 7

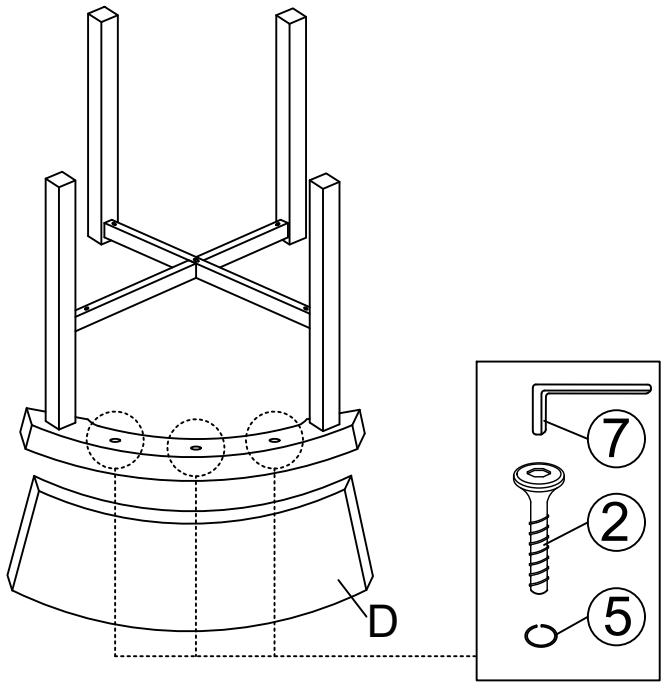


2		JCBC SCREW (M6*50MM)	3
5		SPRING WASHER (M6)	3

Place the assembled chair as shown.Using JCBC Bolts (M6*50MM) ②, Spring Washer (M6) ⑤, with Allen Key (M4*100mm) ⑦
, Allen Key (M4*100mm) ⑦, as pictured above.
NOTE : Fully tighten the Bolts in this step.

Step 8

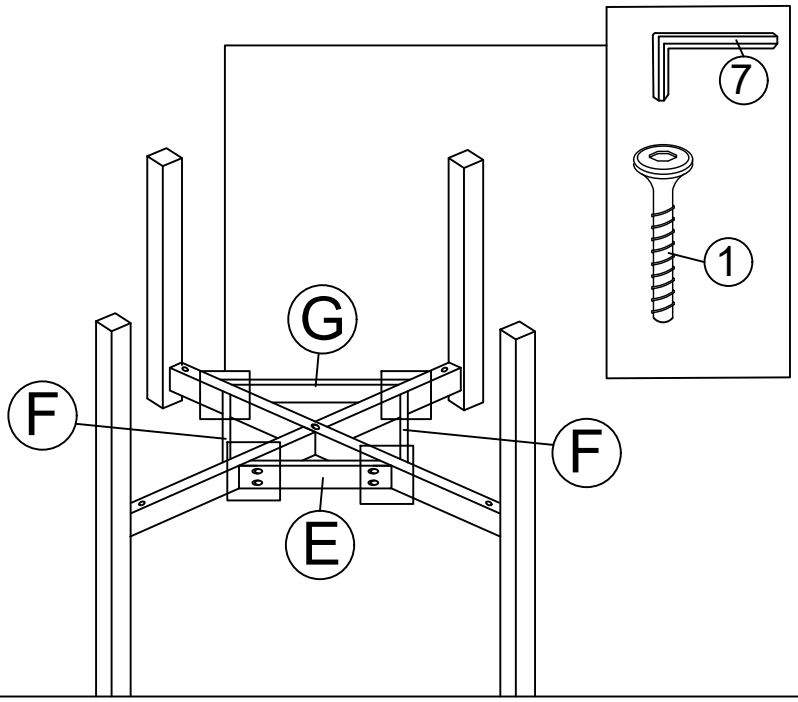


1		JCBC SCREW (M6*30MM)	16

Place the assembled chair as shown. Install Corner Block - Back 180MM (E) , Corner Block L & R 307MM (F).Corner Block Front 343MM (G).with using JCBC Screw (M6*30mm) ①,with Allen Key (M4*100mm) ⑦, as pictured above.

NOTE : Once the assembly is completed, proceed to tighten all Bolts sequentially.

Step 9

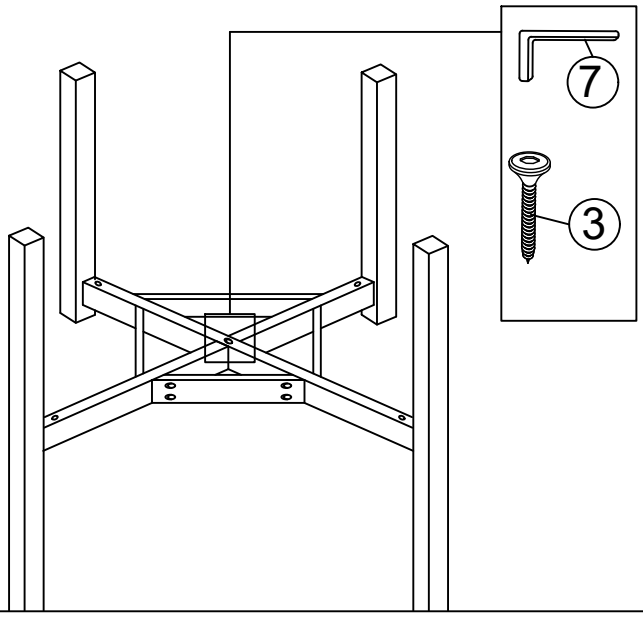


3		JCBC W SCREW (M7*50MM)	1

Place the assembled chair as shown. Using JCBC W Screw (M7*50mm) ③, with Allen Key (M4*100mm) ⑦, as pictured above.

NOTE : Once the assembly is completed, proceed to tighten all Bolts sequentially.

Step 10

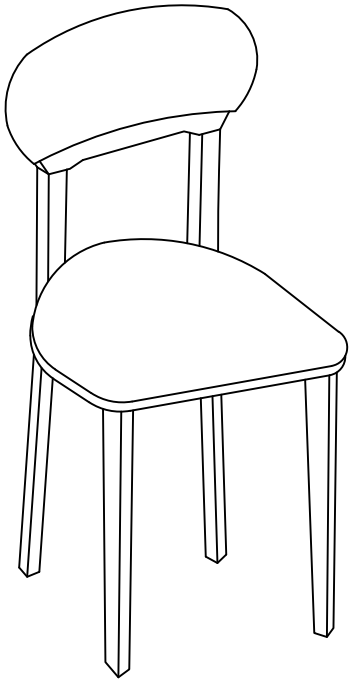

Place the chair on a LEVEL SURFACE to see if it wobble**s.**
CAUTION 1 : When tightening the screws and bolts, tighten sequentially.
If there are any wobbles after tightening,loosen the screws and bolts and execute this same process.
Ensure all screws and bolts are fully locked into position**.**
CAUTION 2 : This chair can only be used on a flat, level surface.
Your Chair is ready for use.