
Assembly Instructions

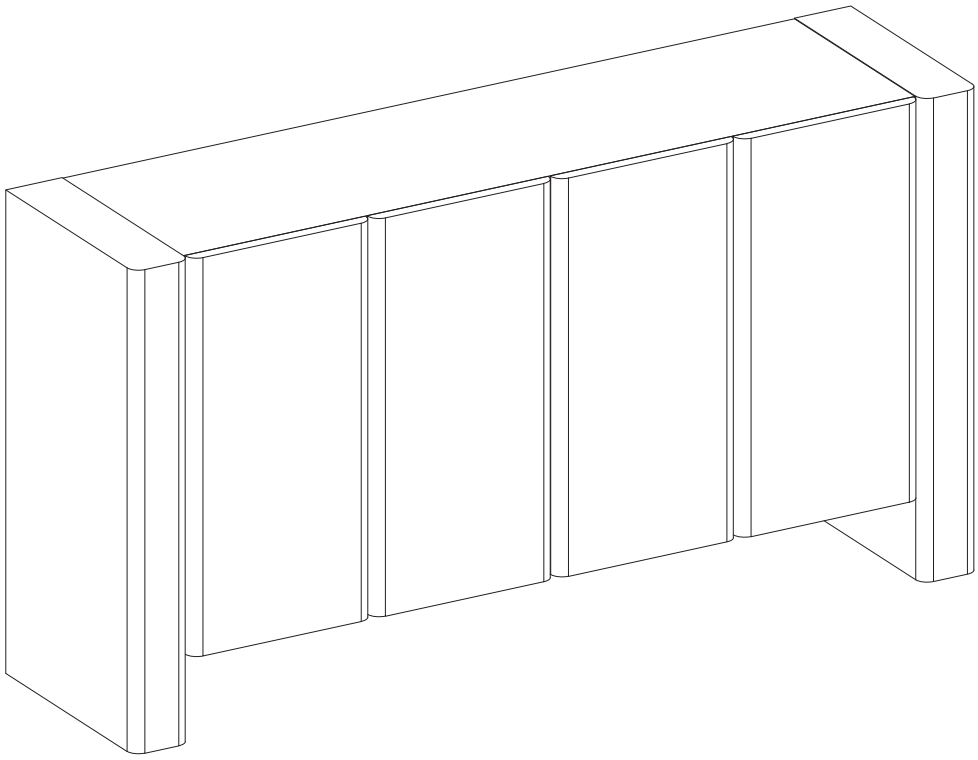


SKU:
DWL-G9164A150-GJ
WOC-G9164A150-GK

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

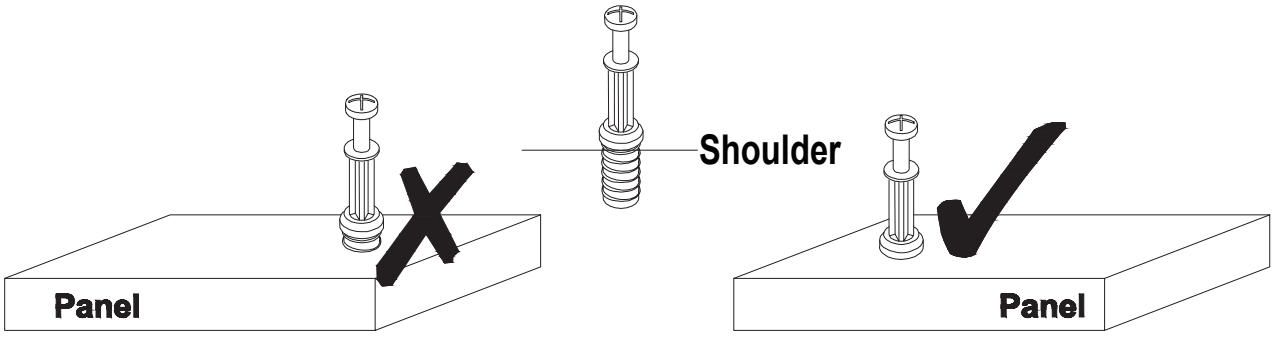

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

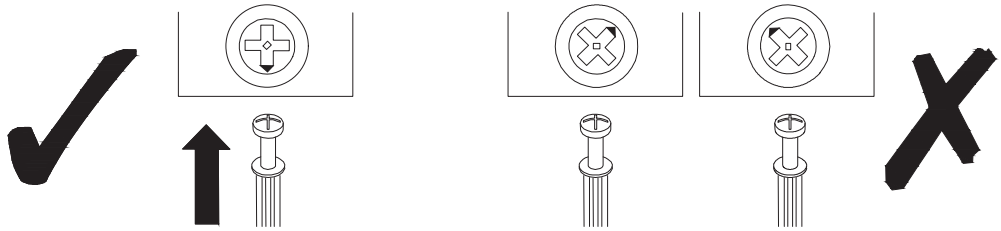

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT
















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

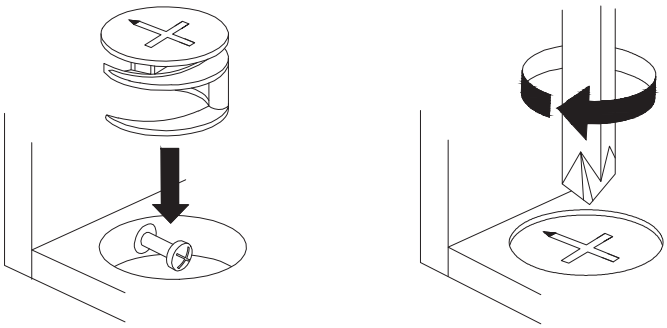


Turn cam lock clockwise to tighten.

Part List

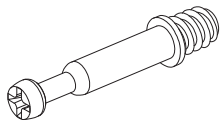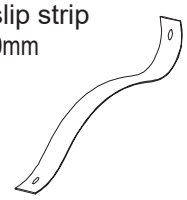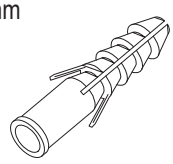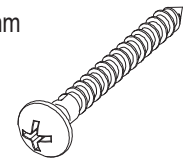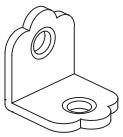
No. A Quantity: 28+2 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 28+2 PCS Cam ø15x9.5mm 	No. C Quantity: 28+2 PCS Sticker ø20mm 	No. D Quantity: 24+2 PCS Dowel ø6x30mm 
No. E Quantity: 4 PCS Hinge ø35mm 	No. F Quantity: 4 PCS Hinge ø35mm 	No. G Quantity: 48+2 PCS Screw ø4x14mm 	No. H Quantity: 8+1 PCS Screw ø5x18mm 
No. I Quantity: 8 PCS Screw ø3x16mm 	No. J Quantity: 8 PCS Back Buckle 15x15x10mm 	No. K Quantity: 2 PCS Anti-slip strip 190x20mm 	No. L Quantity: 2 PCS Plastic Expansion ø8x40mm 
No. M Quantity: 2 PCS Screw ø4x16mm 	No. N Quantity: 2 PCS Screw ø4x38mm 	No. O Quantity: 4 PCS L-shaped iron 	No. P Quantity: 8+1 PCS Screw ø3.5x12mm 


Tip: To ensure greater product stability, please install Accessory J during Step 10. Do not omit this step.

Product structure

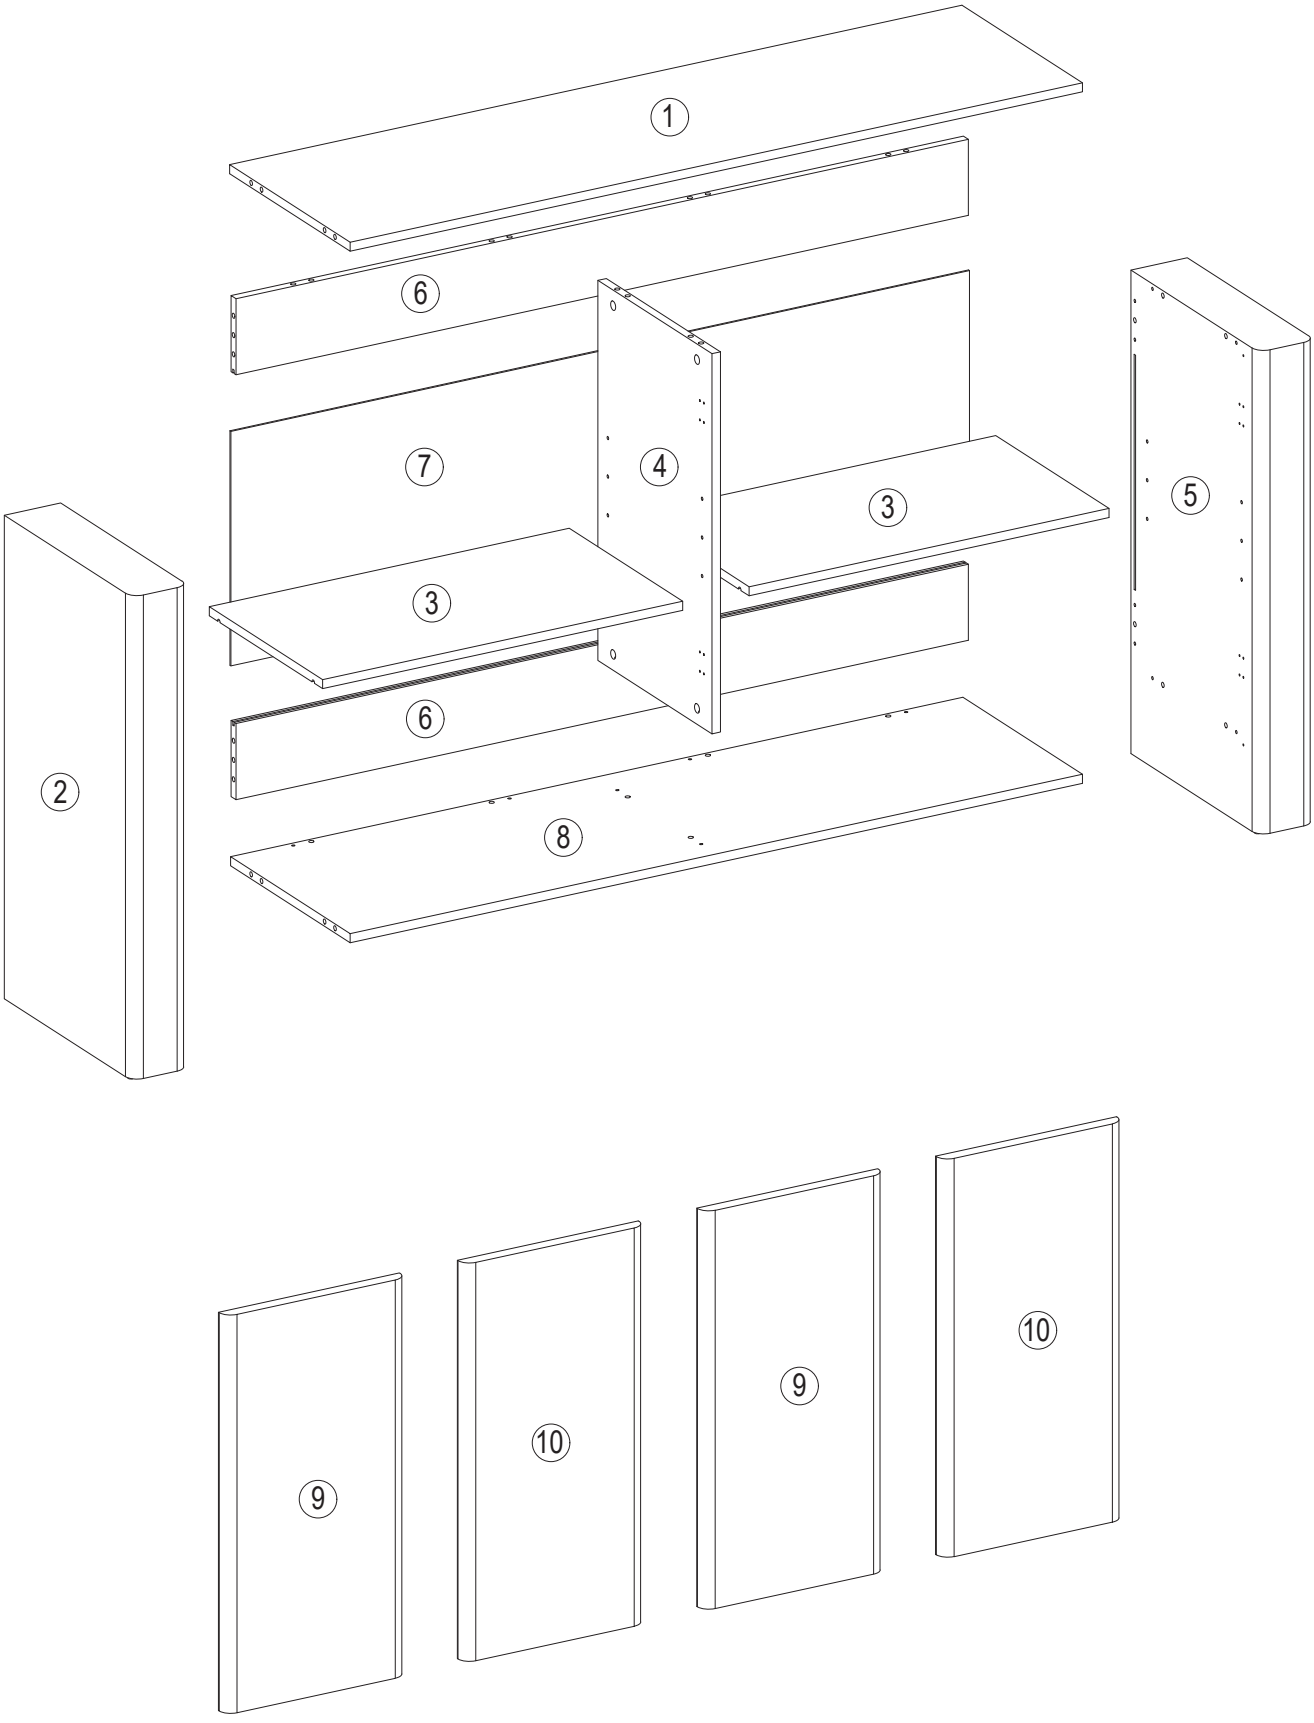


Step 1

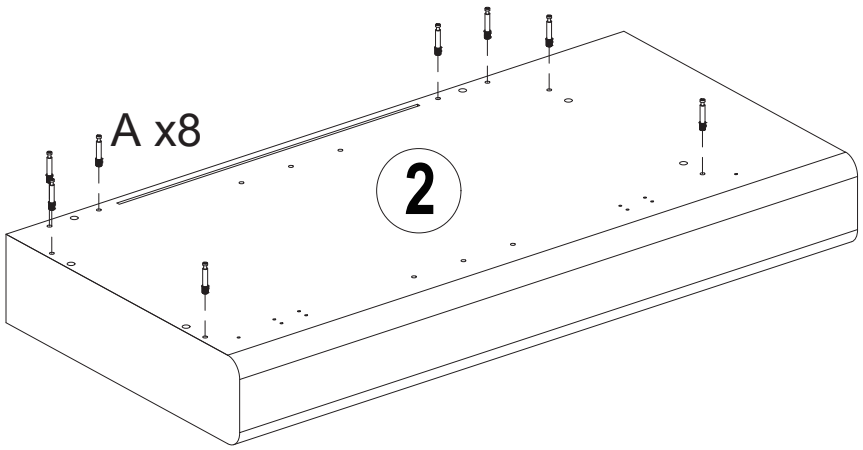


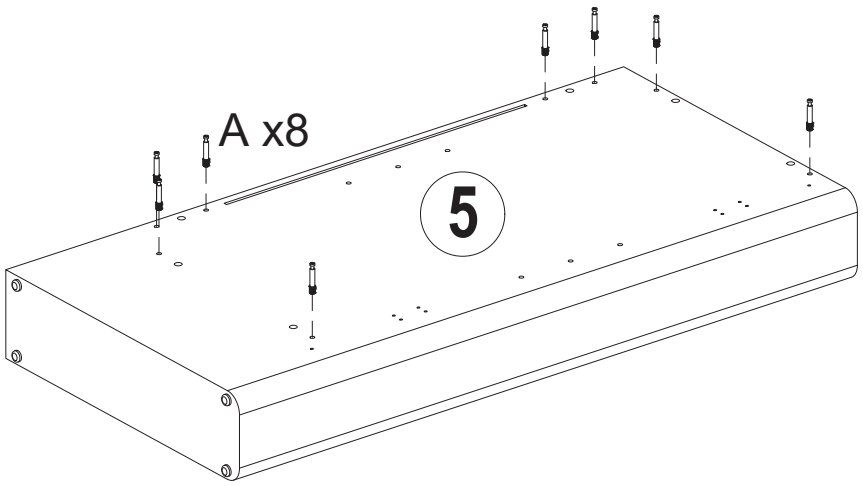


No. A
Quantity: 16 PCS
Cam Bolt
ø6x33.5mm

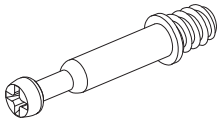


Step 2

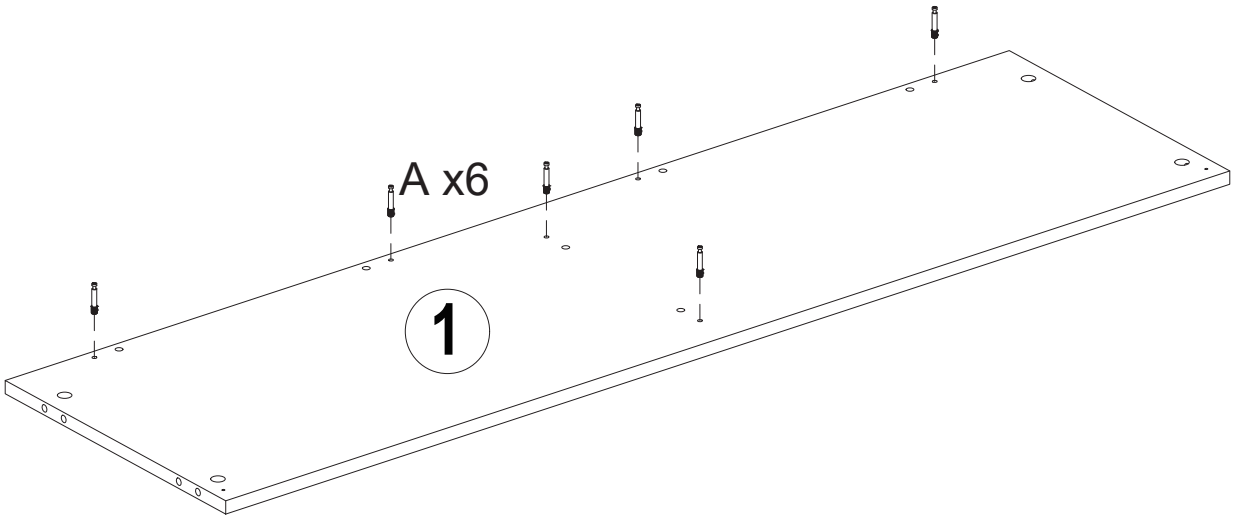


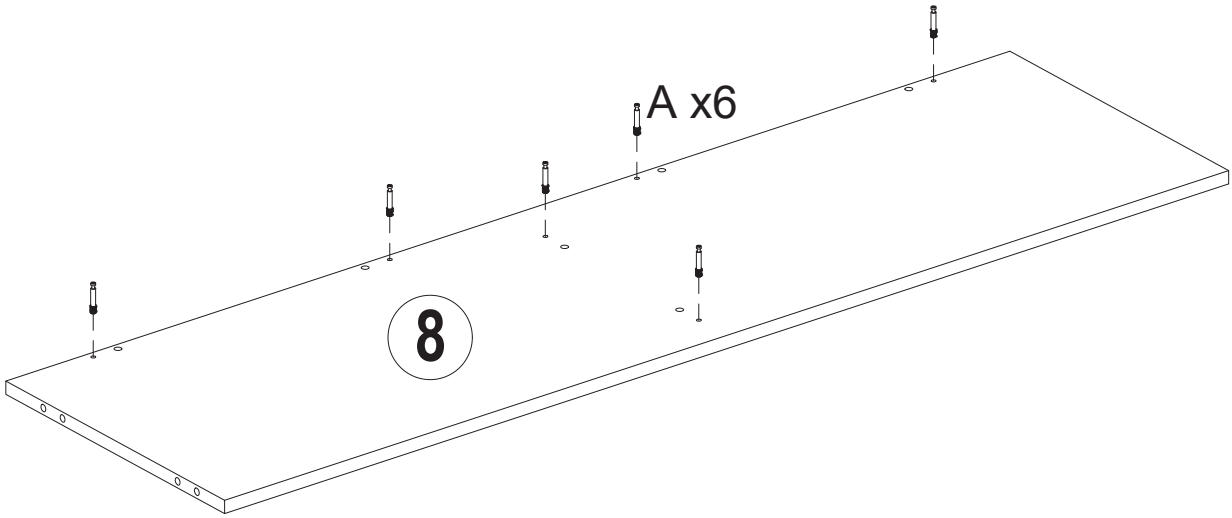



No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm

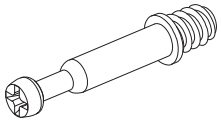


Step 3

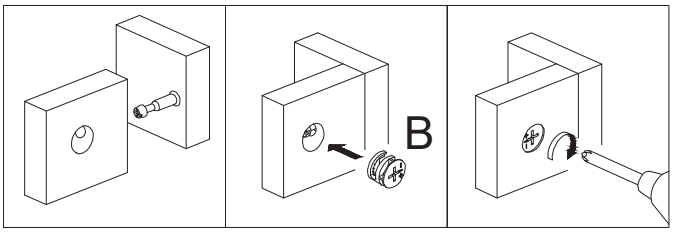

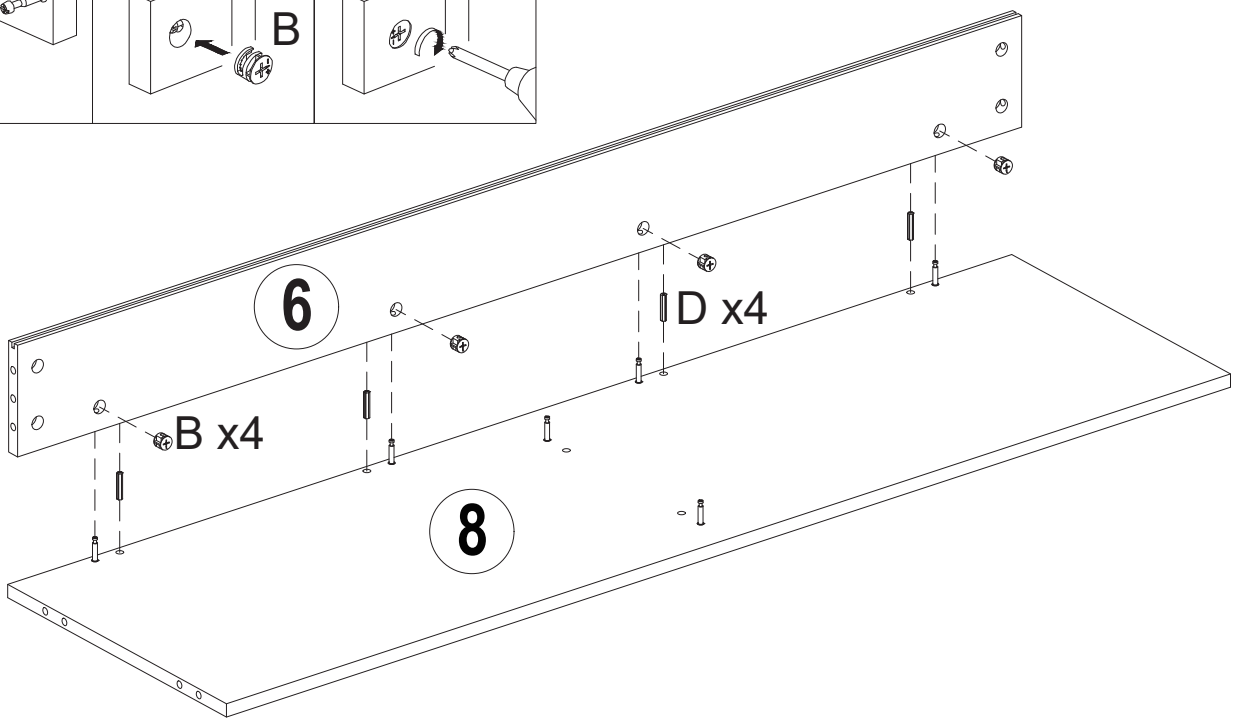


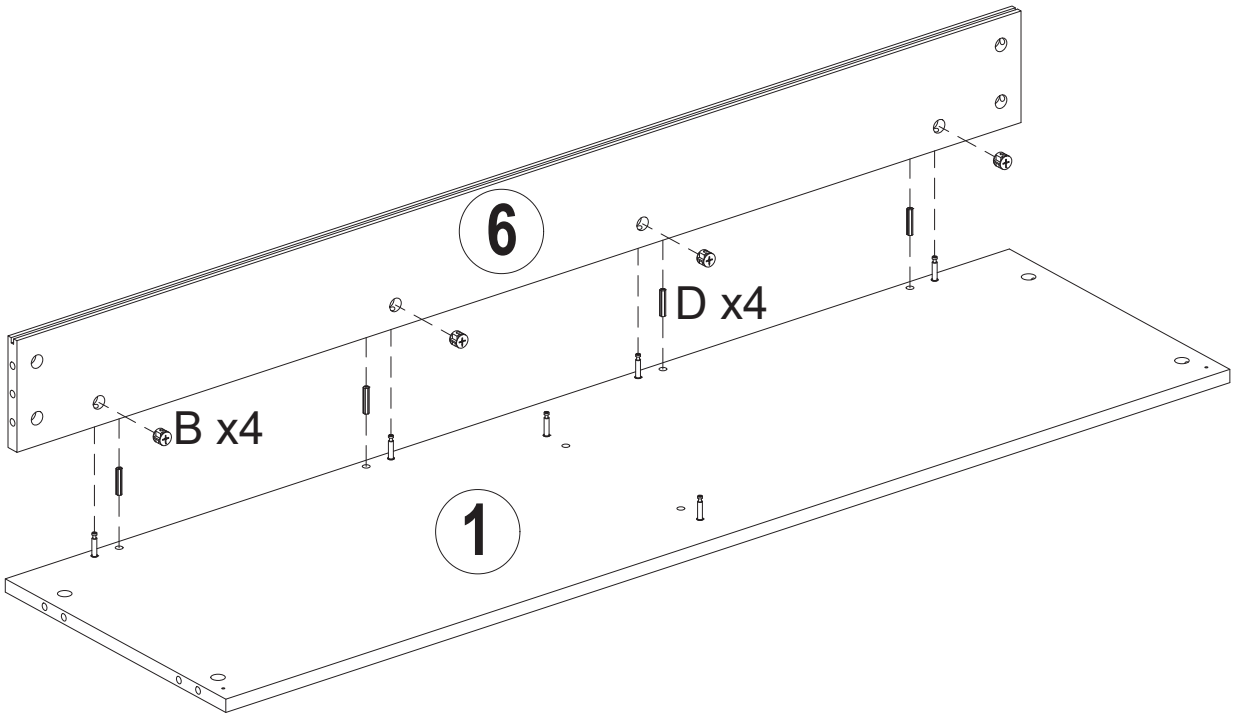


No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. D
Quantity: 8 PCS
Dowel
ø6x30mm




Step 4

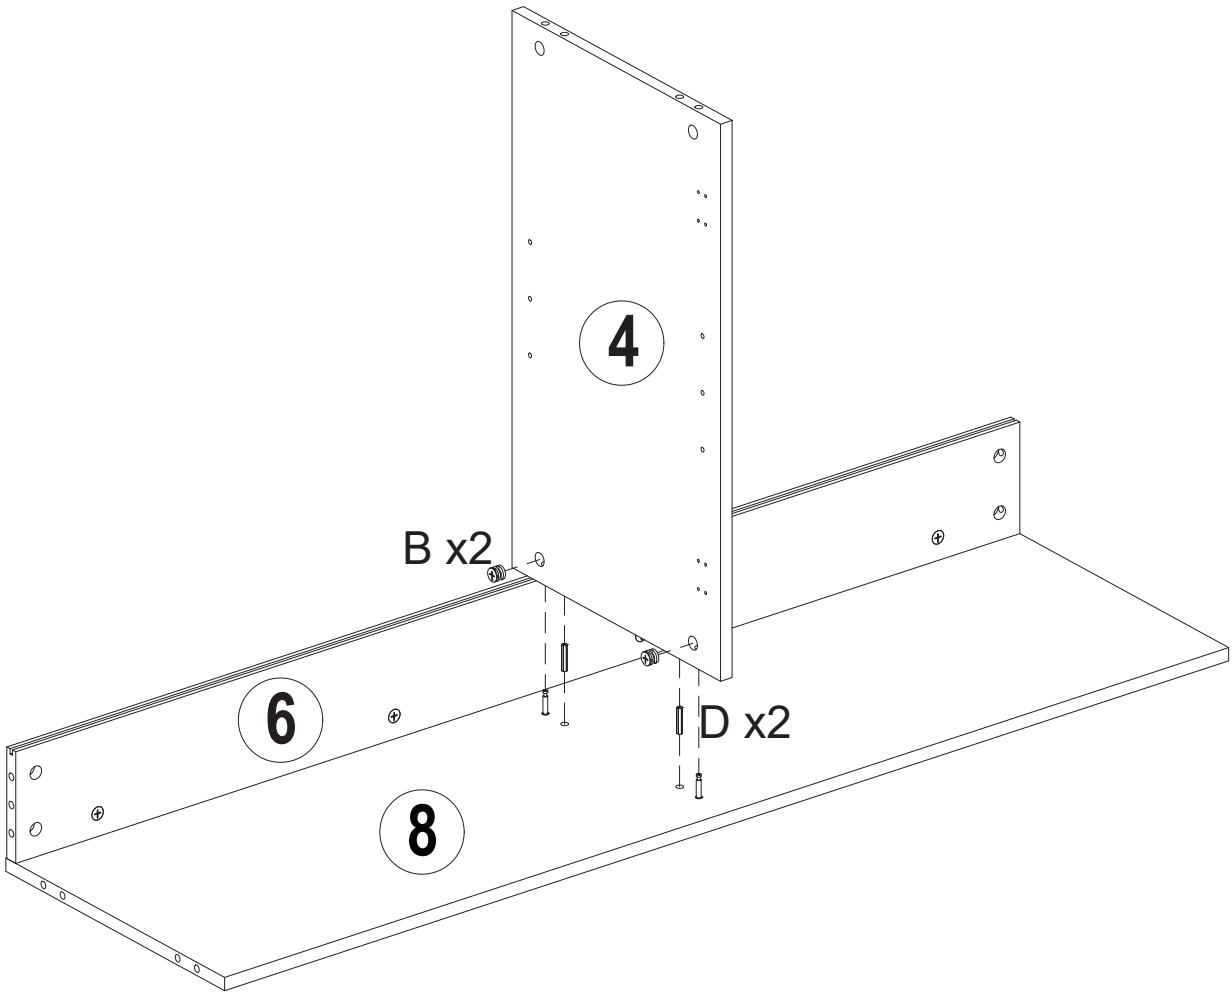


No. B
Quantity: 2 PCS
Cam
ø15x9.5mm




No. D
Quantity: 2 PCS
Dowel
ø6x30mm




Step 5

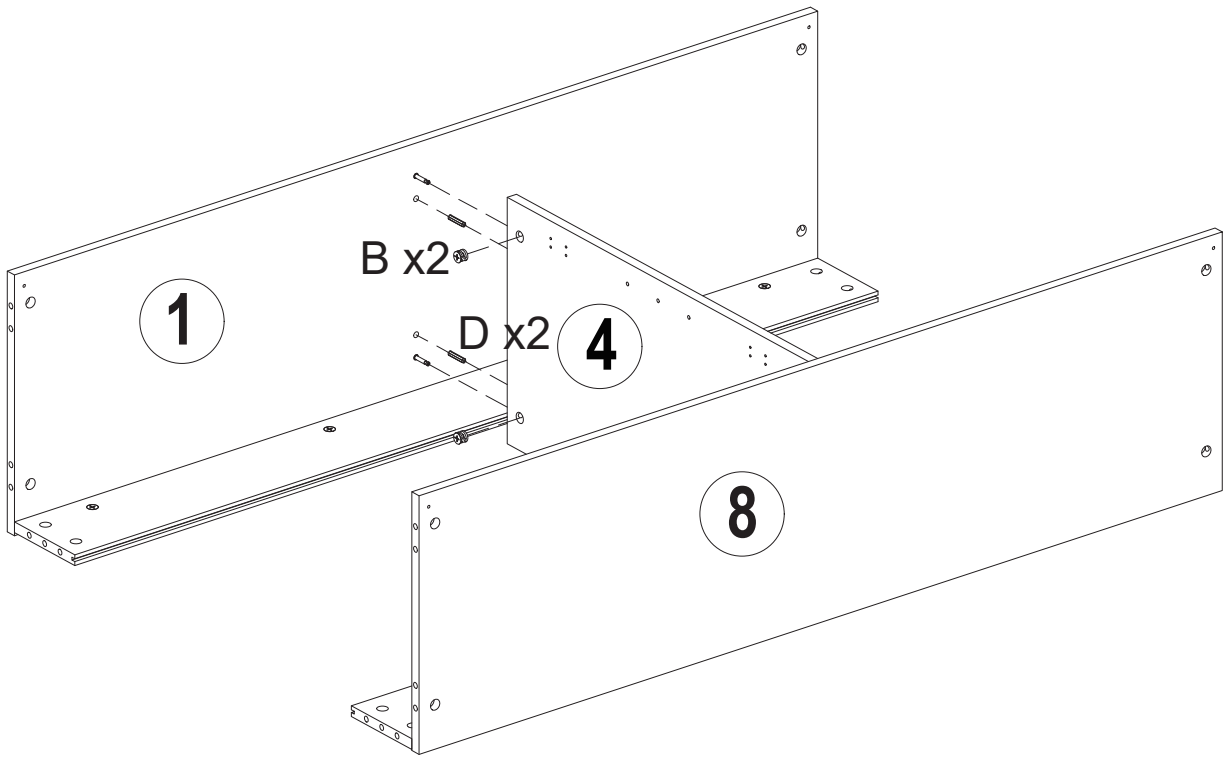


No. B
Quantity: 2 PCS
Cam
ø15x9.5mm




No. D
Quantity: 2 PCS
Dowel
ø6x30mm




Step 6

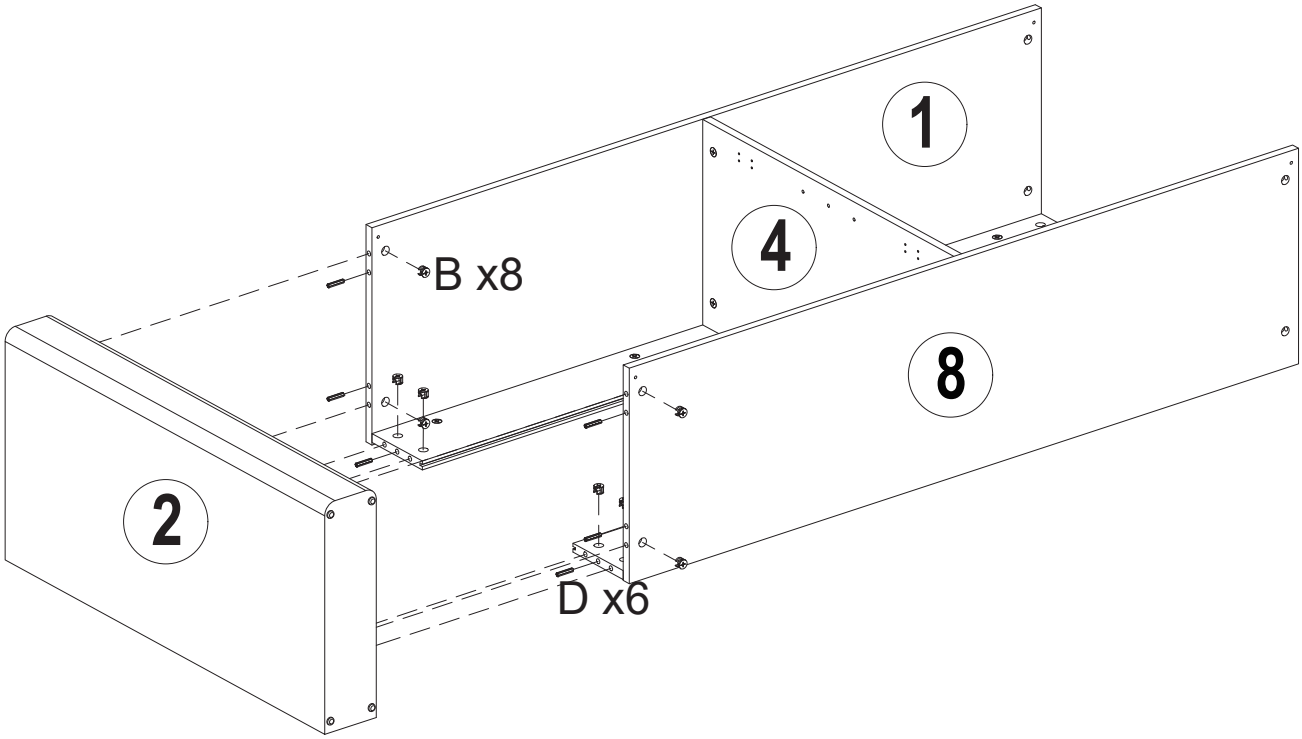

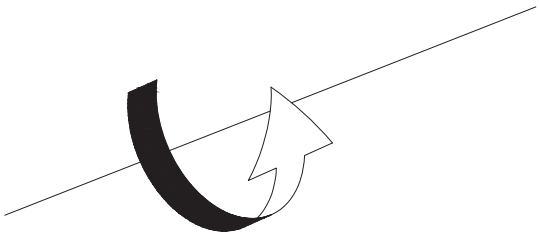


90°


No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. D
Quantity: 6 PCS
Dowel
ø6x30mm




Step 7

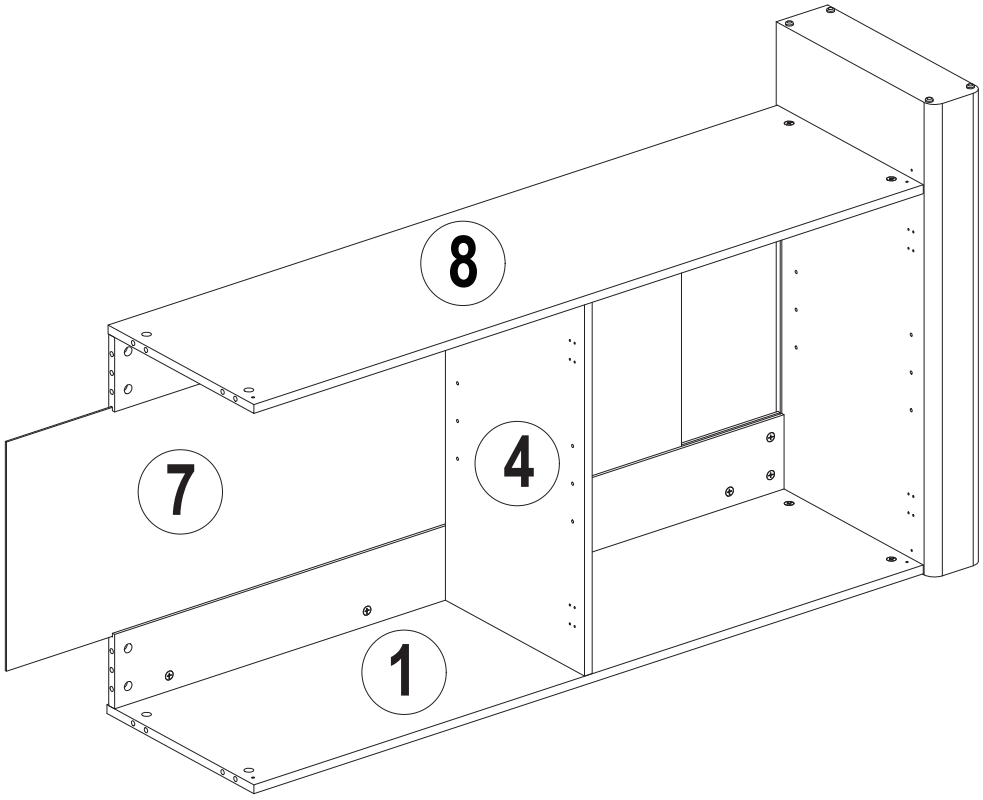


Step 8

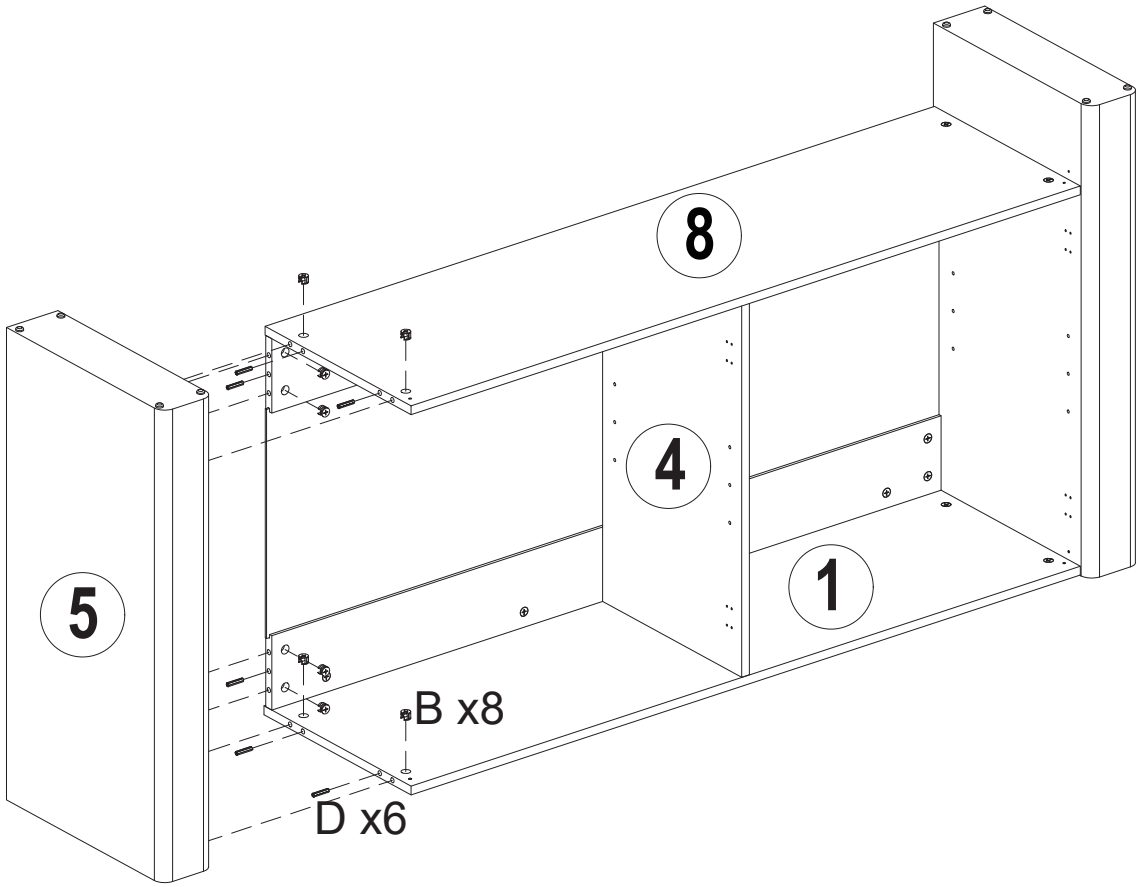


No. B
Quantity: 8 PCS
Cam
ø15x9.5mm




No. D
Quantity: 6 PCS
Dowel
ø6x30mm




Step 9

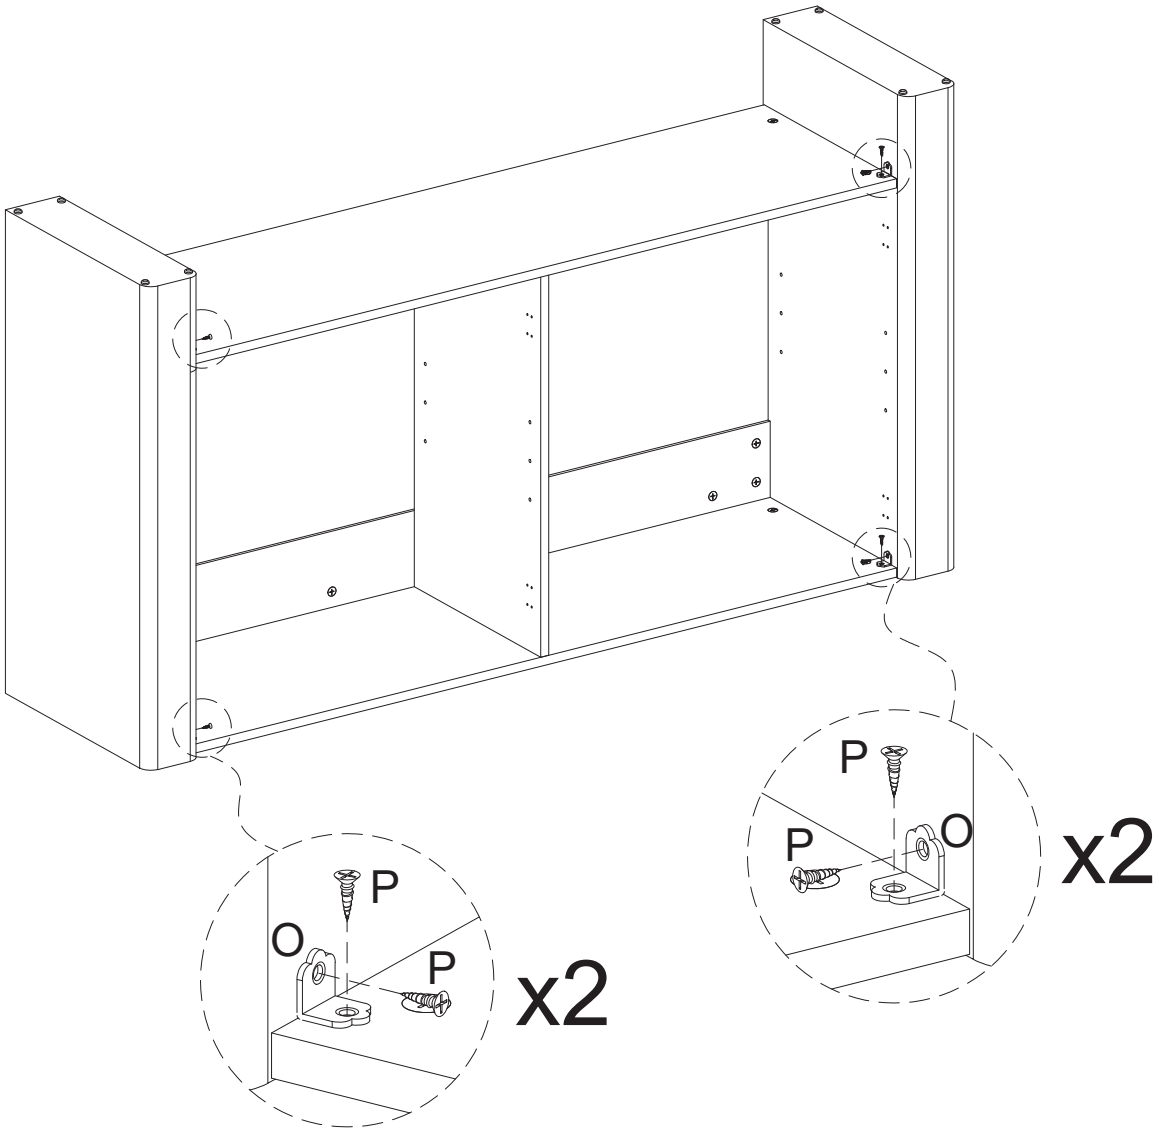


No. P
Quantity: 8 PCS
Screw
ø3.5x12mm




No. O
Quantity: 4 PCS
L-shaped iron

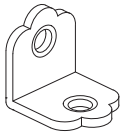


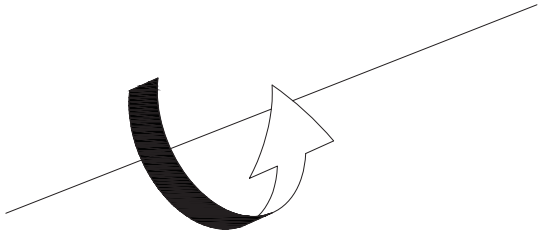

180°


Step 10

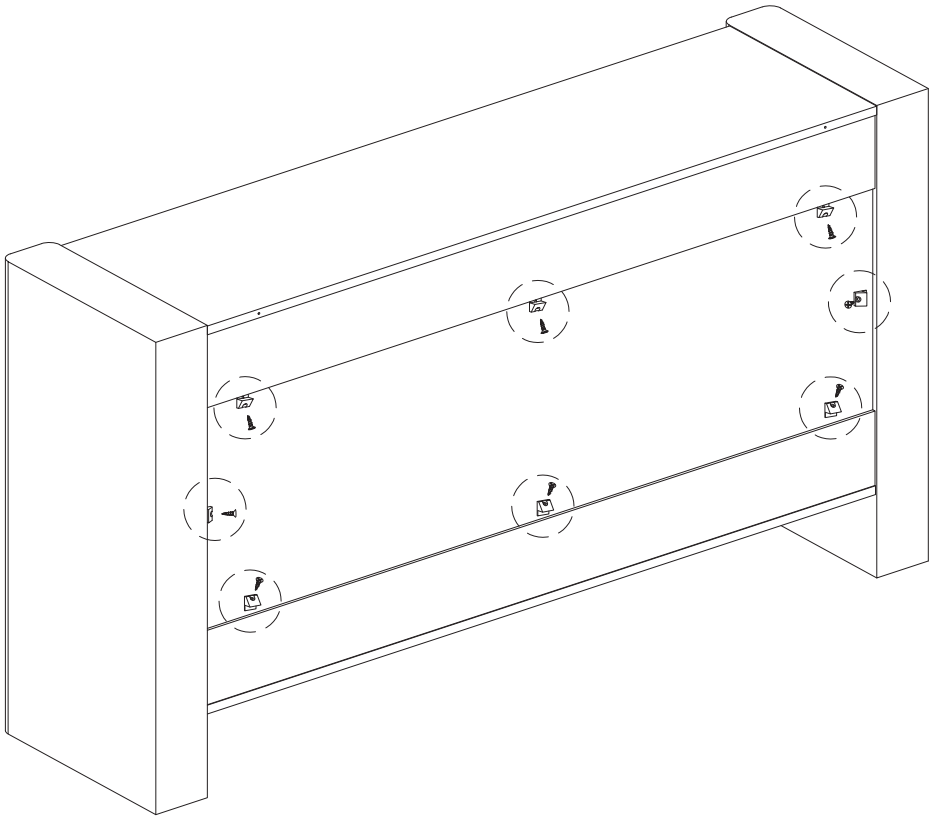

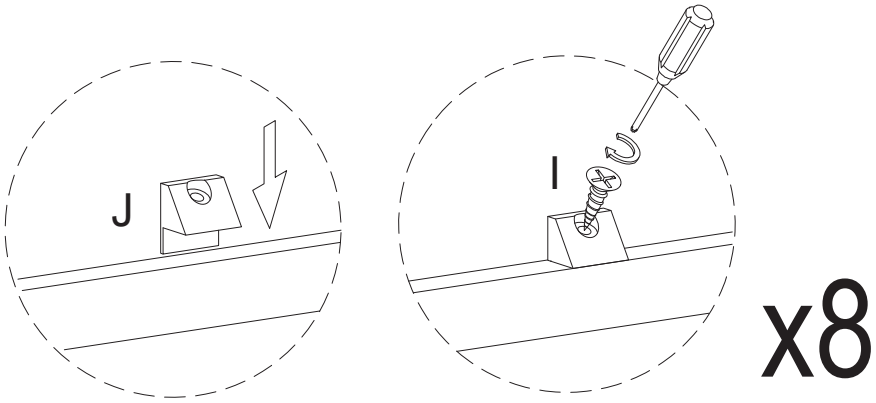


x8


No. I
Quantity: 8 PCS
Screw
ø3x16mm




No. J
Quantity: 8 PCS
Back Buckle
15x15x10mm




Step 11

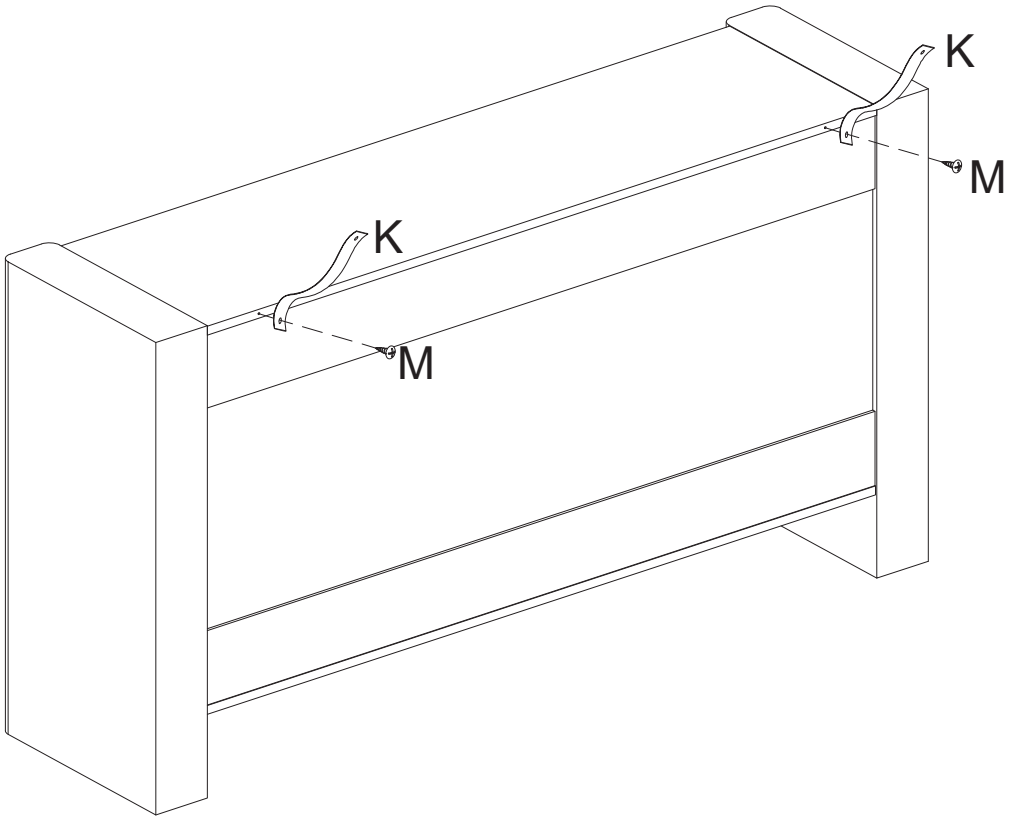


No. K
Quantity: 2 PCS
Anti-slip strip
190x20mm

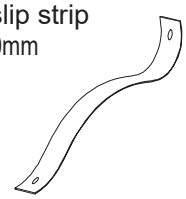


No. M
Quantity: 2 PCS
Screw
ø4x16mm





Step 12

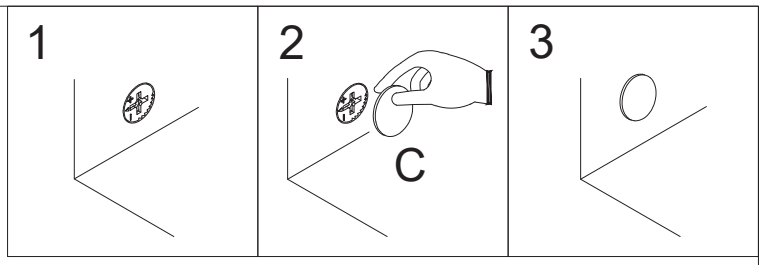


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

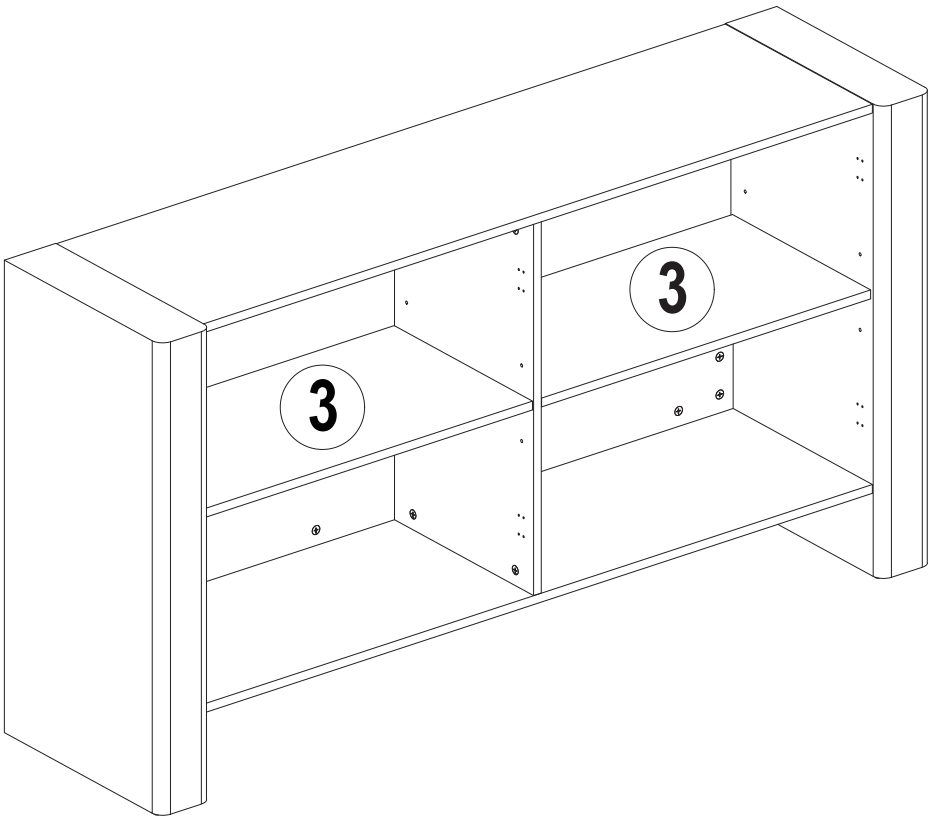

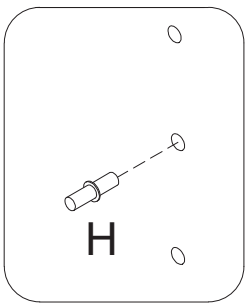

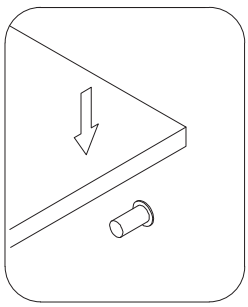


No. H
Quantity: 8 PCS
Screw
ø5x18mm





No. C
Quantity: 28 PCS
Sticker
ø20mm




Step 13

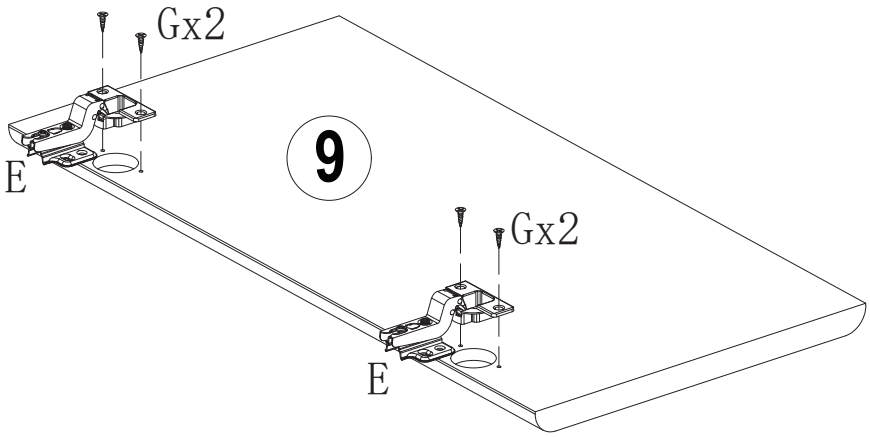

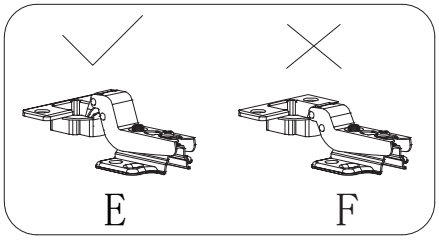


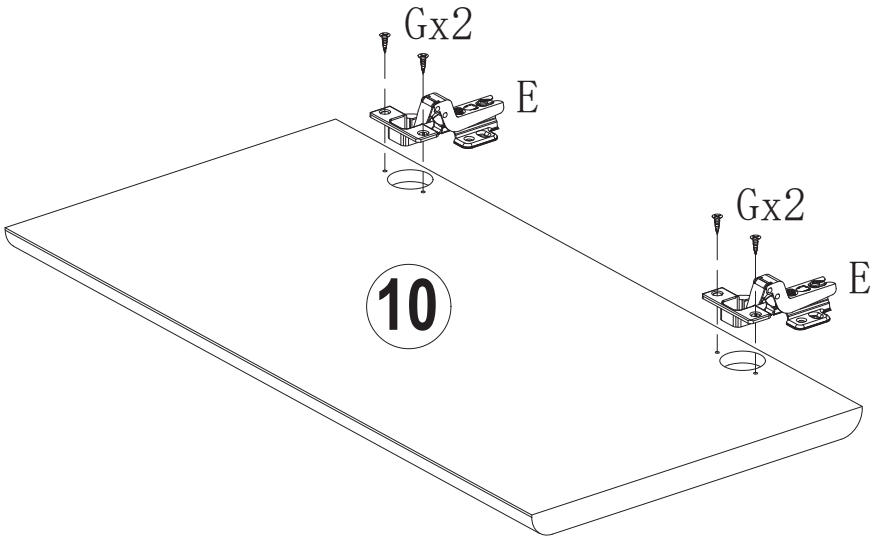


No. E
Quantity: 4 PCS
Hinge
ø35mm




No. G
Quantity: 8 PCS
Screw
ø4x14mm




Step 14

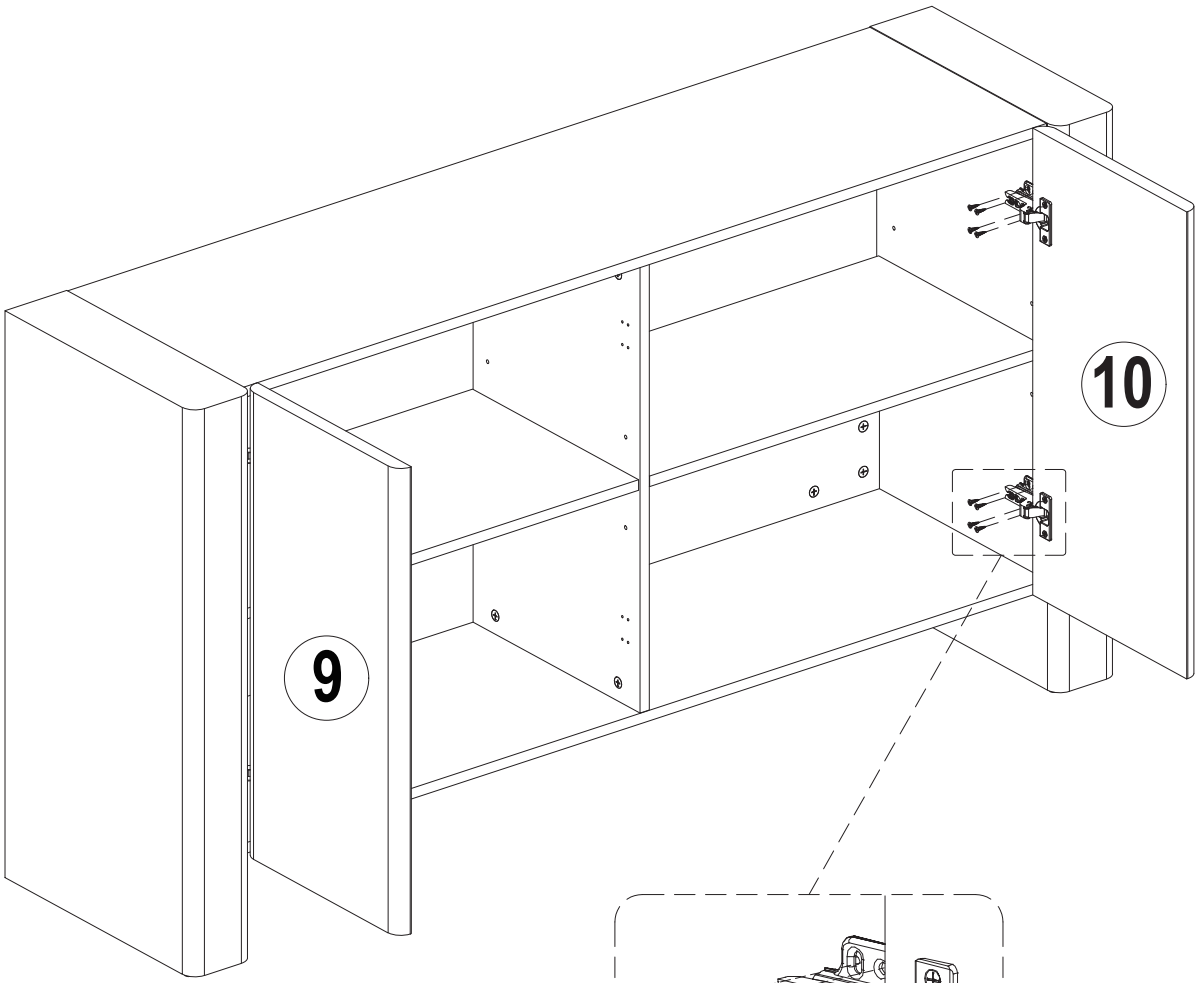

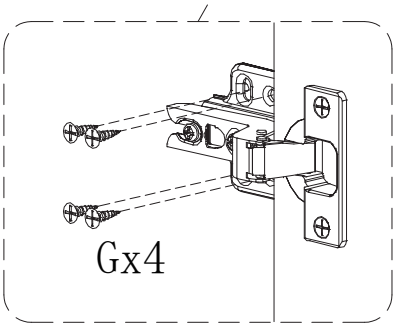



x4


No. G
Quantity: 16 PCS
Screw
ø4x14mm




Step 15

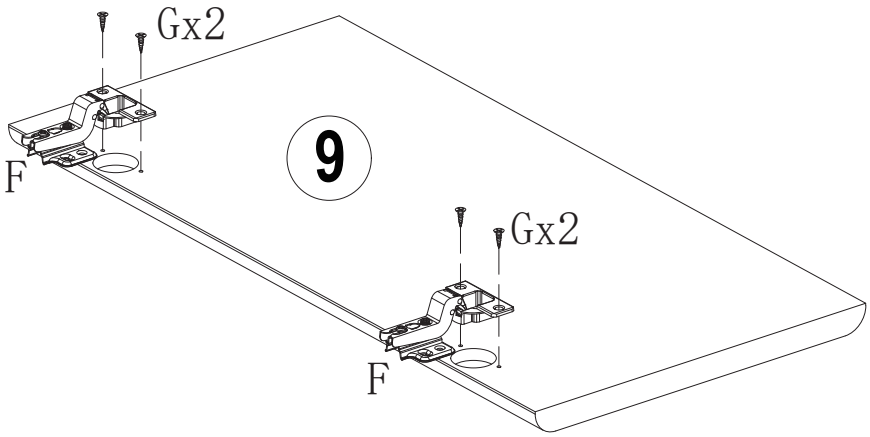

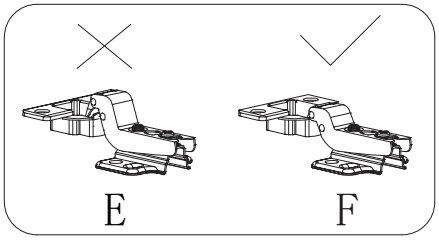


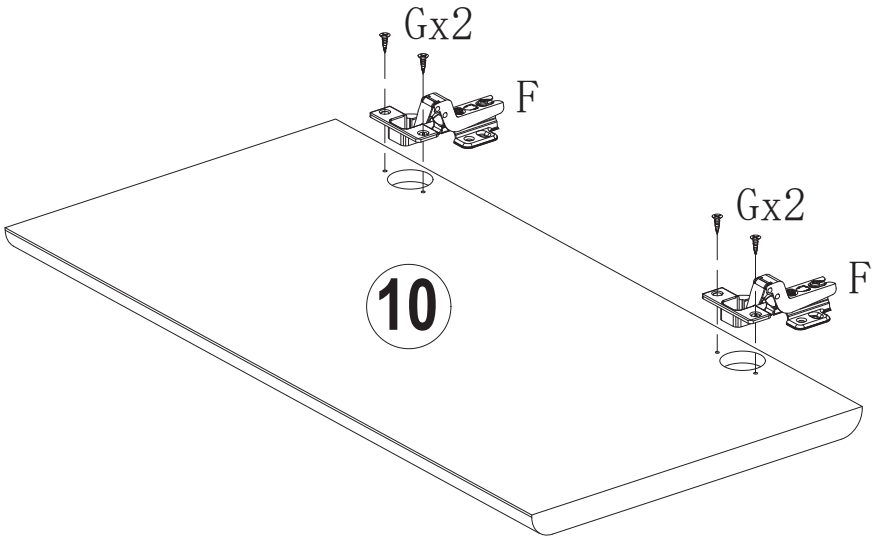


No. F
Quantity: 4 PCS
Hinge
ø35mm




No. G
Quantity: 8 PCS
Screw
ø4x14mm




Step 16

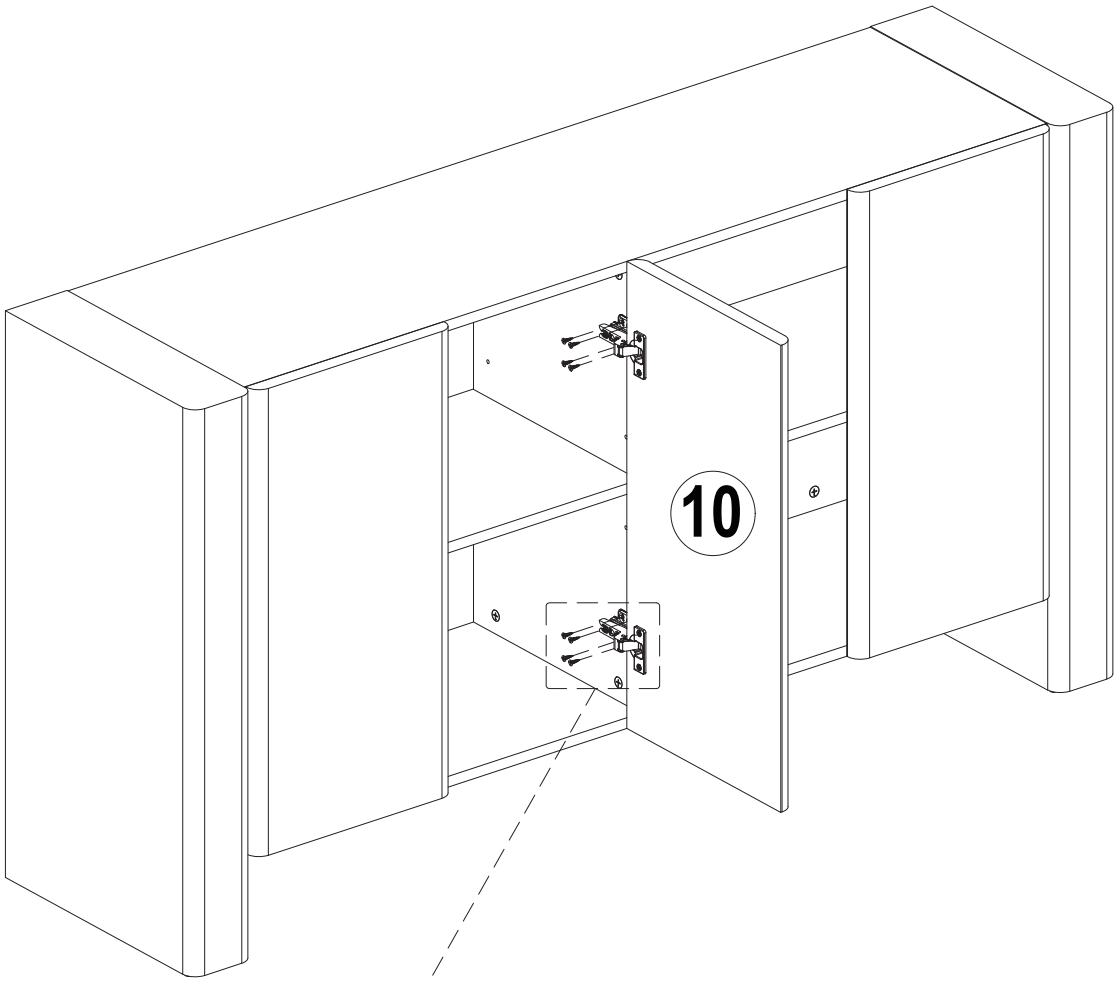

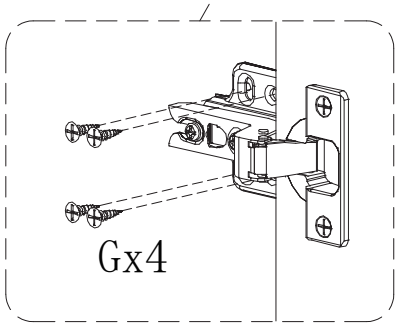


x2


No. G
Quantity: 8 PCS
Screw
ø4x14mm




Step 17

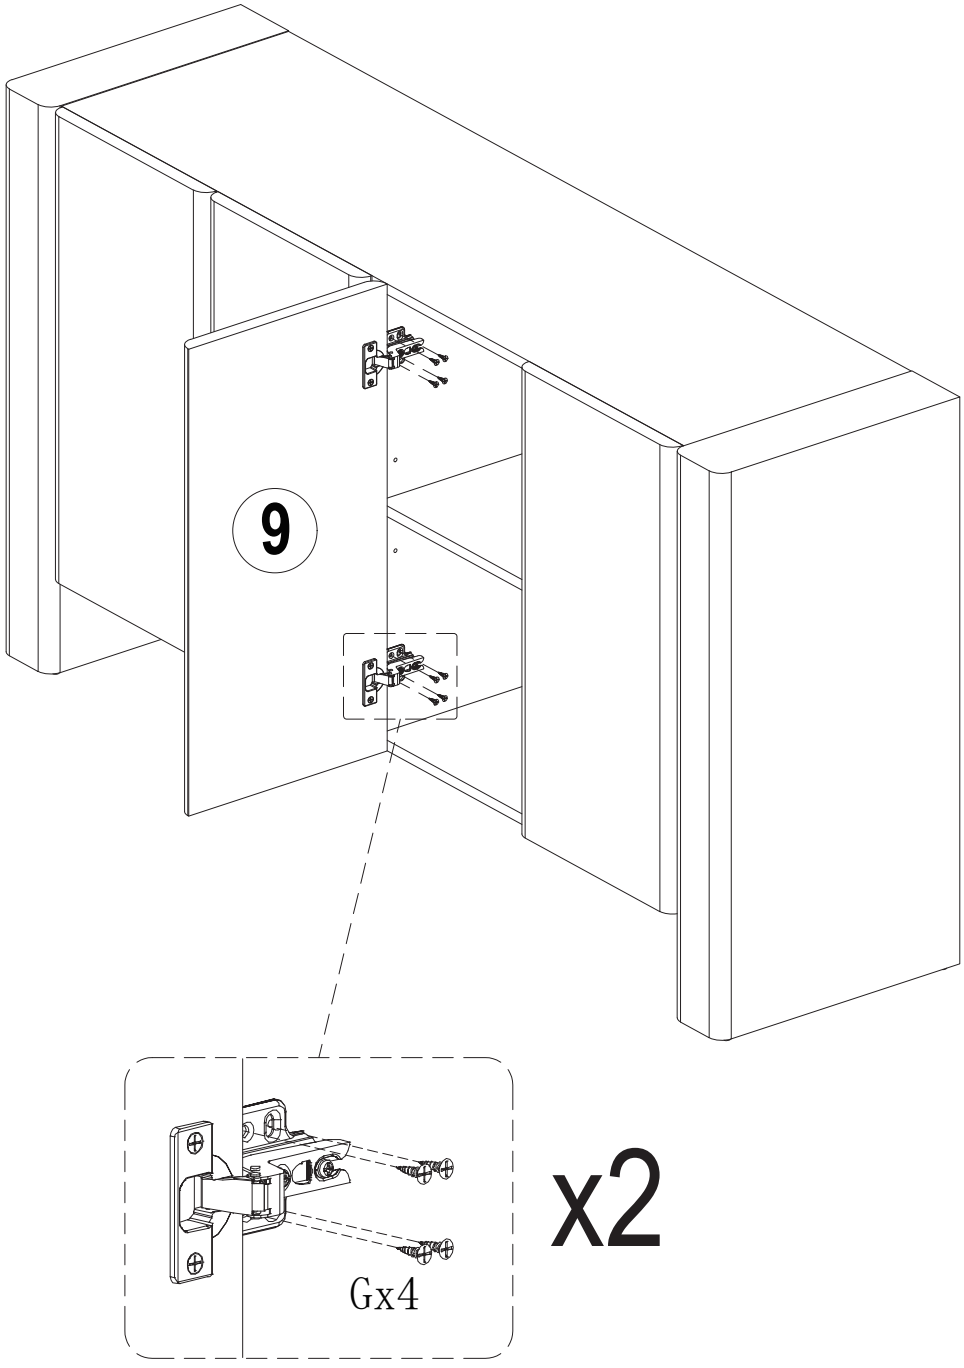


No. G
Quantity: 8 PCS
Screw
ø4x14mm




Step 18

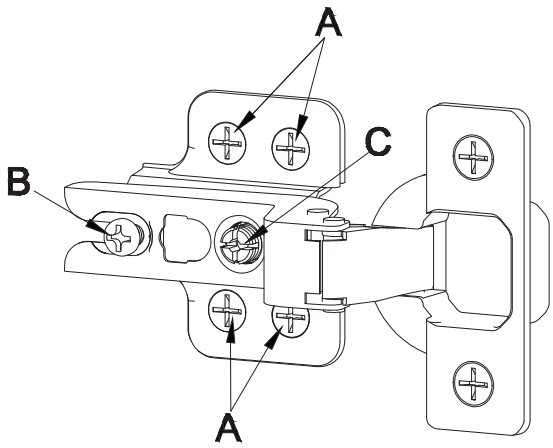


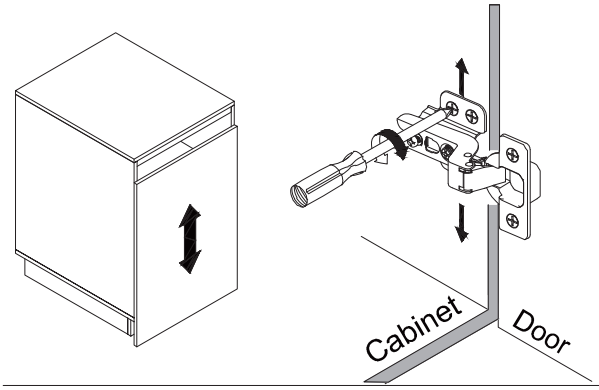

To adjust the vertical height.
Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

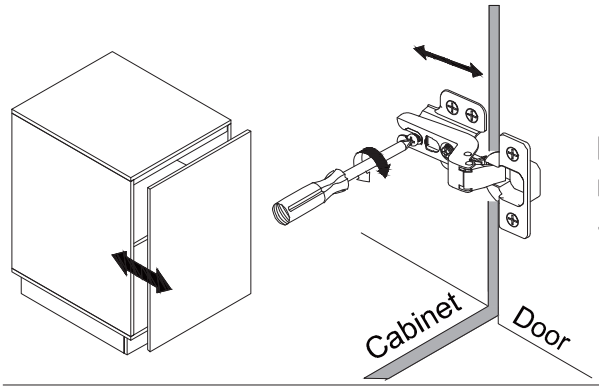


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

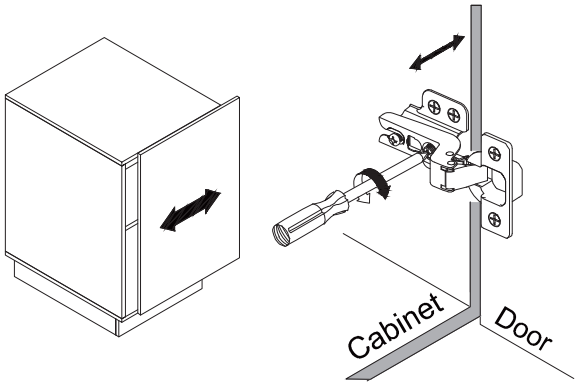

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.


Step 19

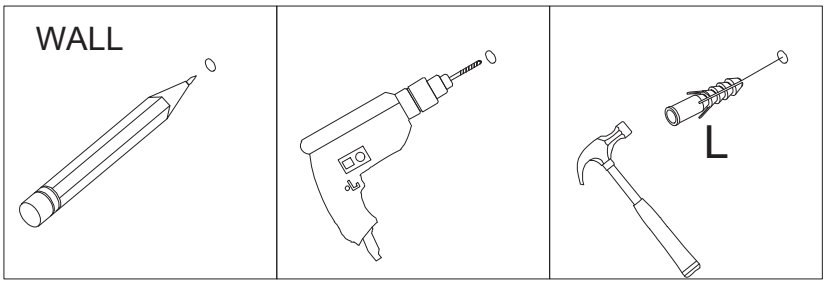


1.The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.

2. Use a hammer to tap the two plastic expansion anchors into the wall.


3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

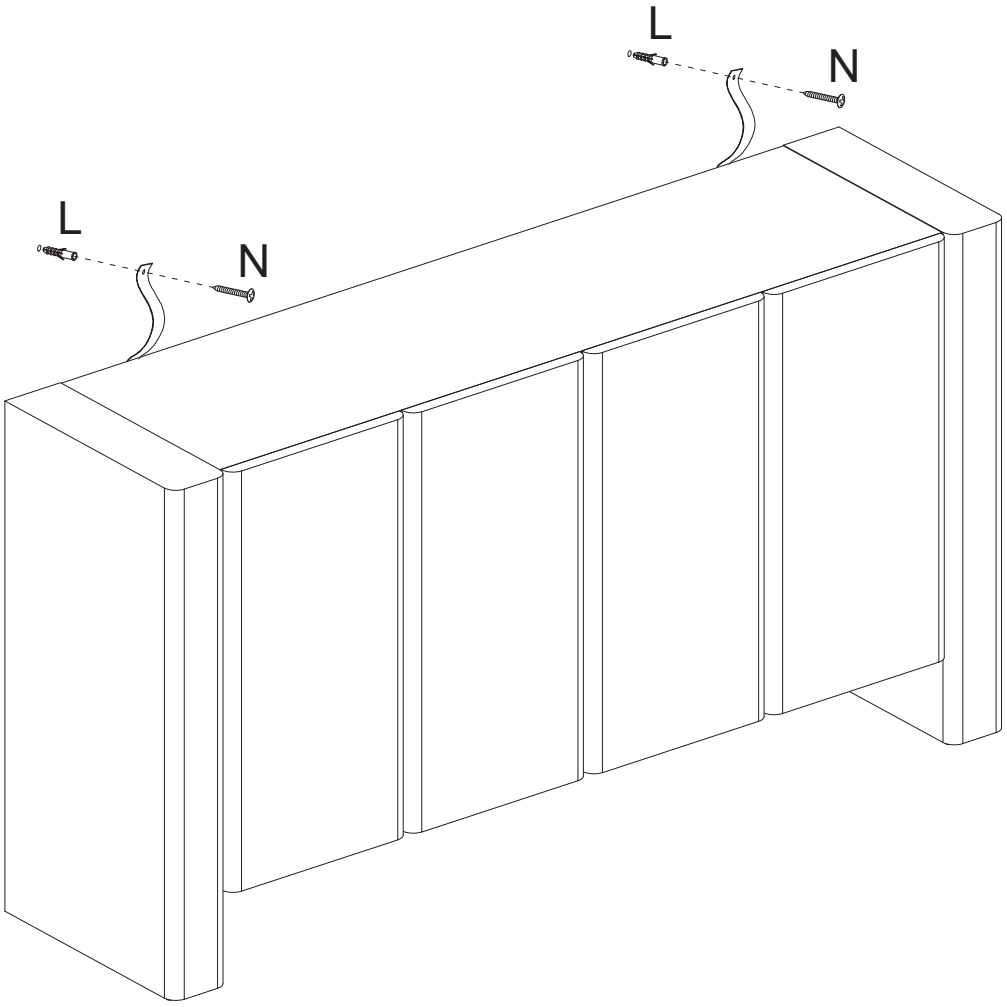

No. L
Quantity: 2 PCS
Plastic Expansion
ø8x40mm

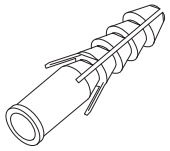

No. N
Quantity: 2 PCS
Screw
ø4x38mm

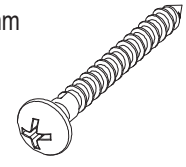

Step 20

