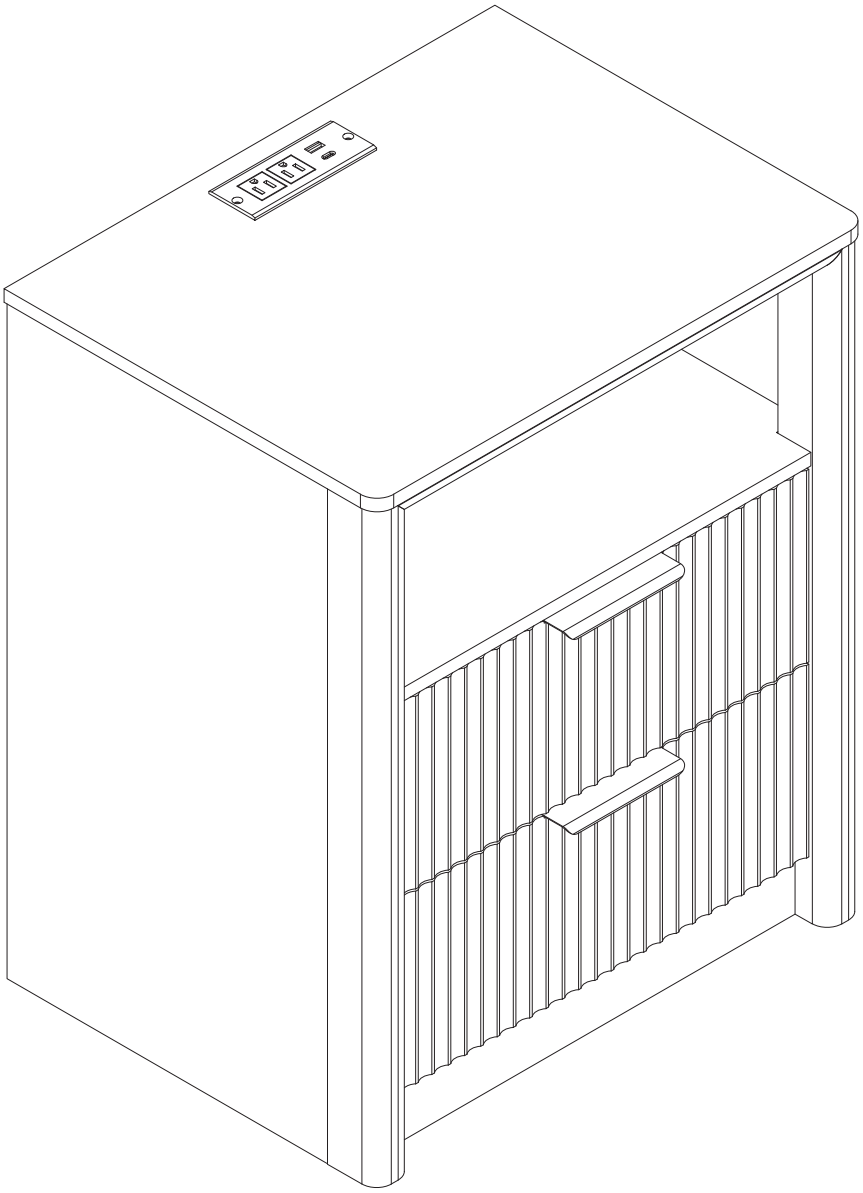
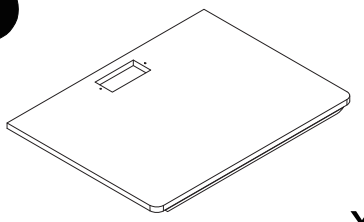
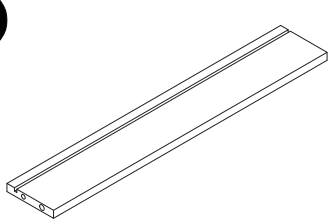
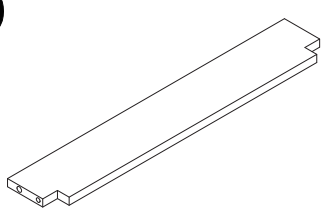


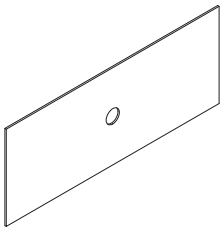
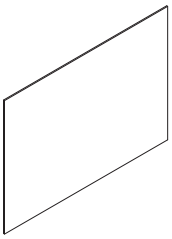
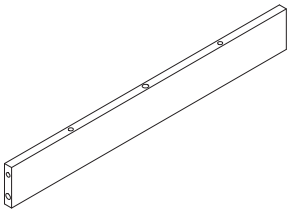
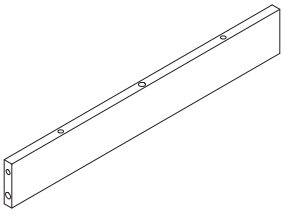
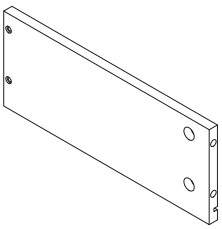
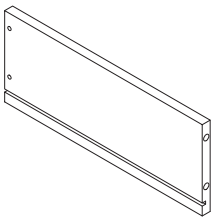
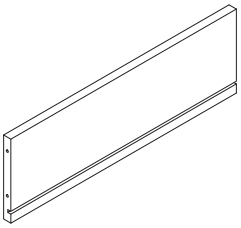
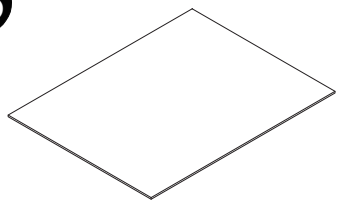
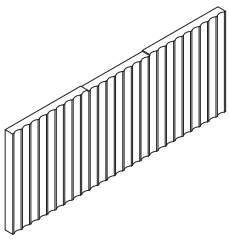
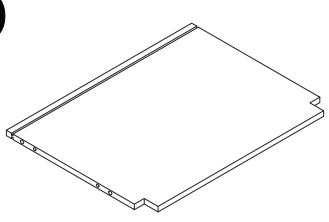
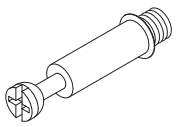


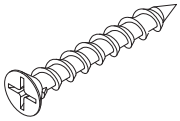
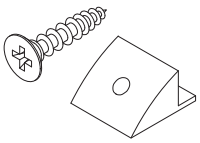

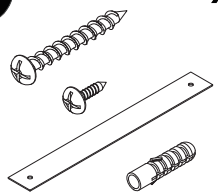
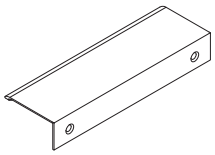

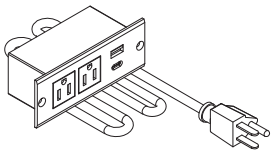
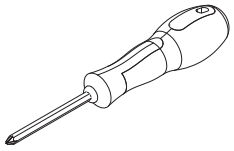
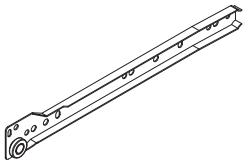
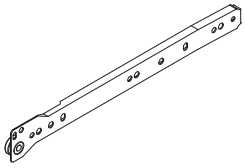
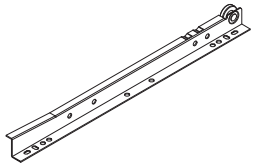
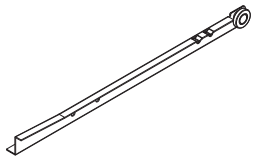


LHNS174

LHNS174 ASSEMBLY INSTRUCTION


THANKS for buying our products,read it carefully before installation(Attention:Don't tighten the screws before all screws are in place.). If the screws and holes don't match.Pls carefully check whether there is an error or loosen some associated screws to rectify. Thanks for your patience!


1  x1	2  x1	3  x1
4  x1	5  x1	6  x1
7  x1	8  x1	9  x1
10  x1	11  x1	12  x2
13  x2	14  x2	15  x2
16  x2	17  x1	


A x32  M6x35mm	B x32  M15x9mm	C x24  M6x30mm	D x26  M3.5x12mm
E x8  M4x35mm	F x6 	G x4  M4x12mm	H x2 
I x2 	J x14 	K x1 	L x1 
CL x2 	CR x2 	DL x2 	DR x2 

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

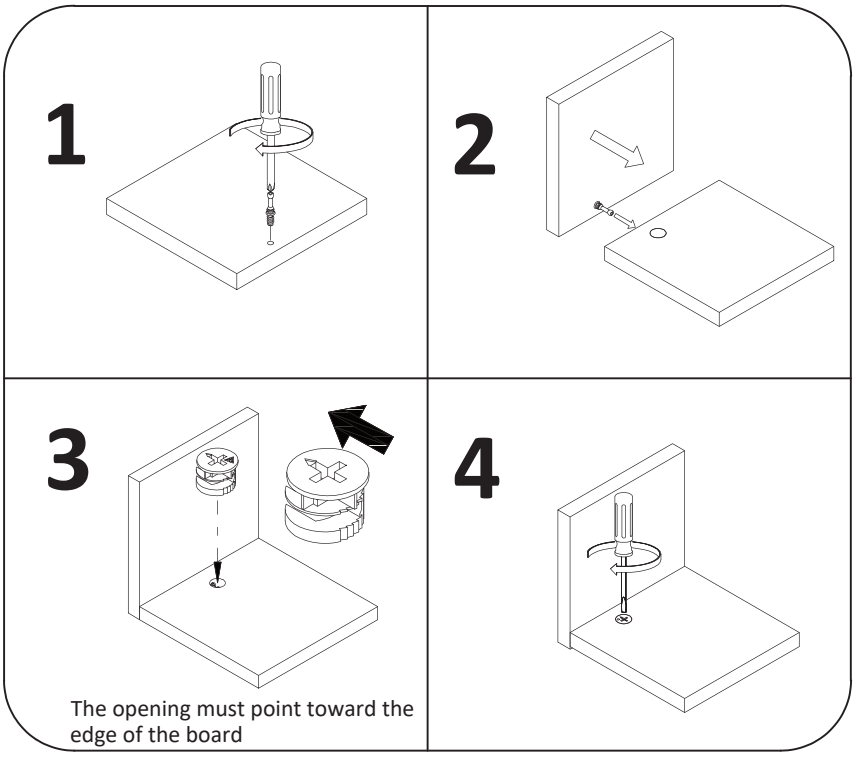


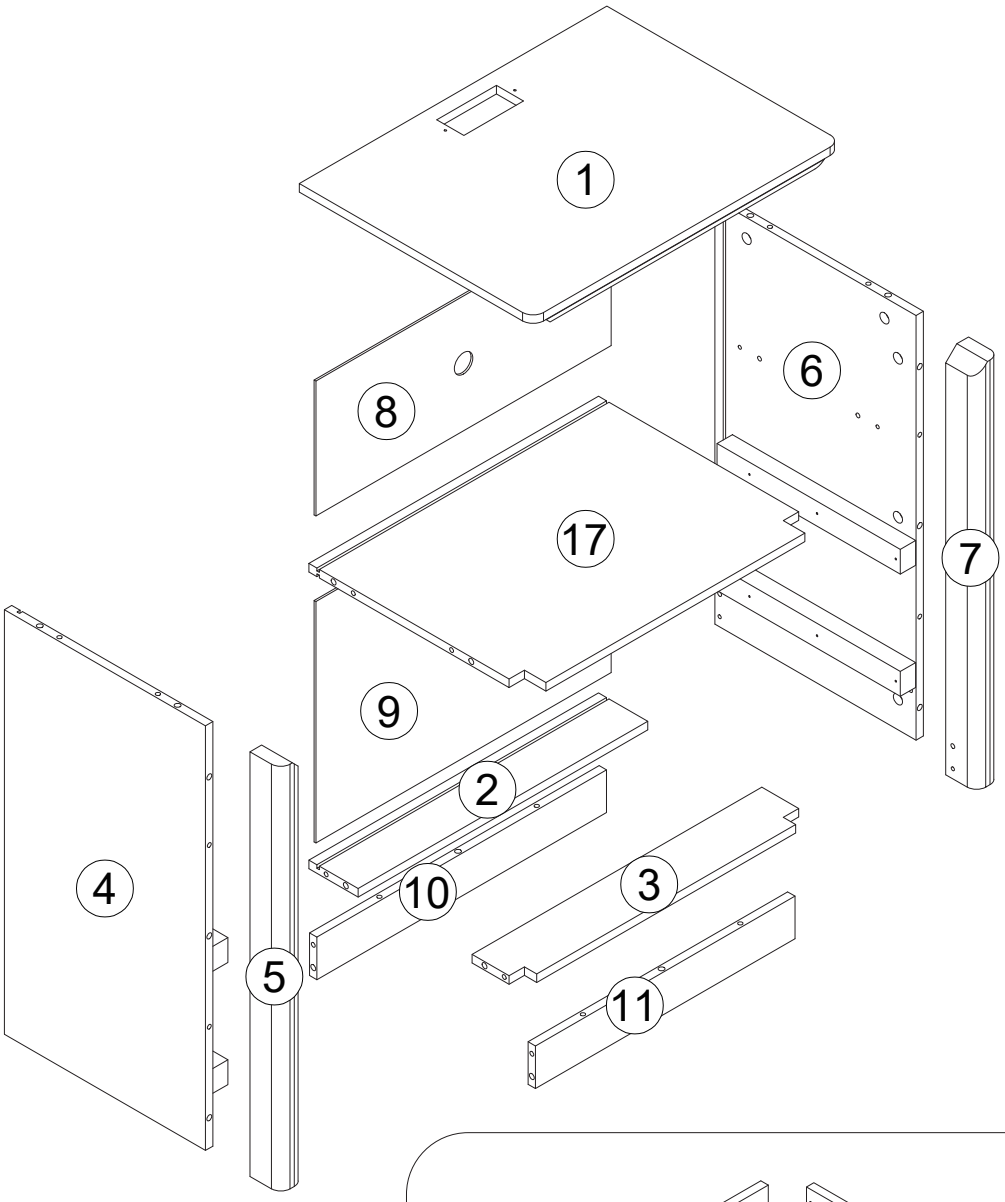
1
8
6
17
7
9
2
4
10
3
5
11

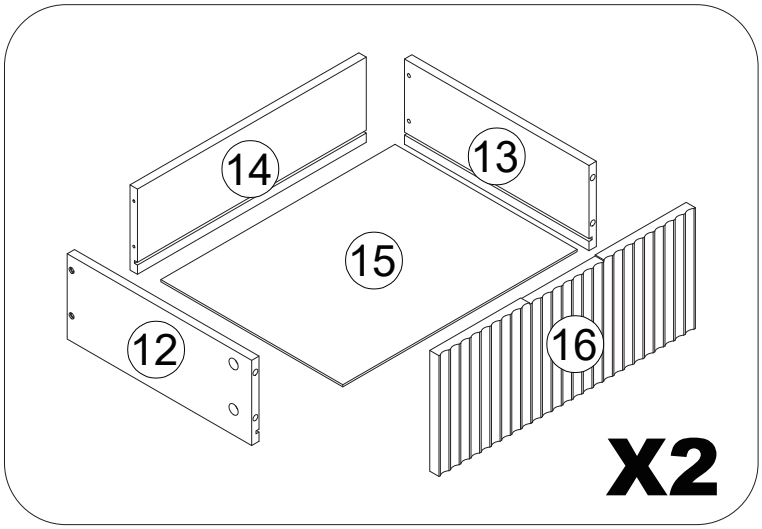

14
13
15
12
16
X2

STEP 1

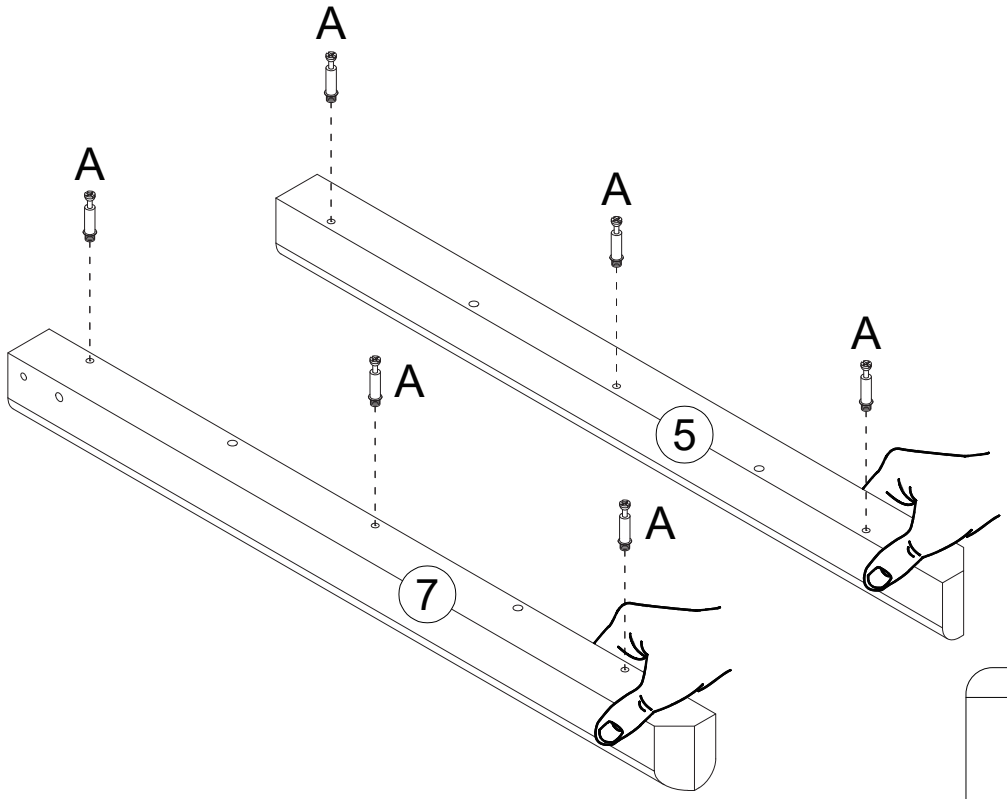


A	x6
	
M6x35mm	


STEP 2

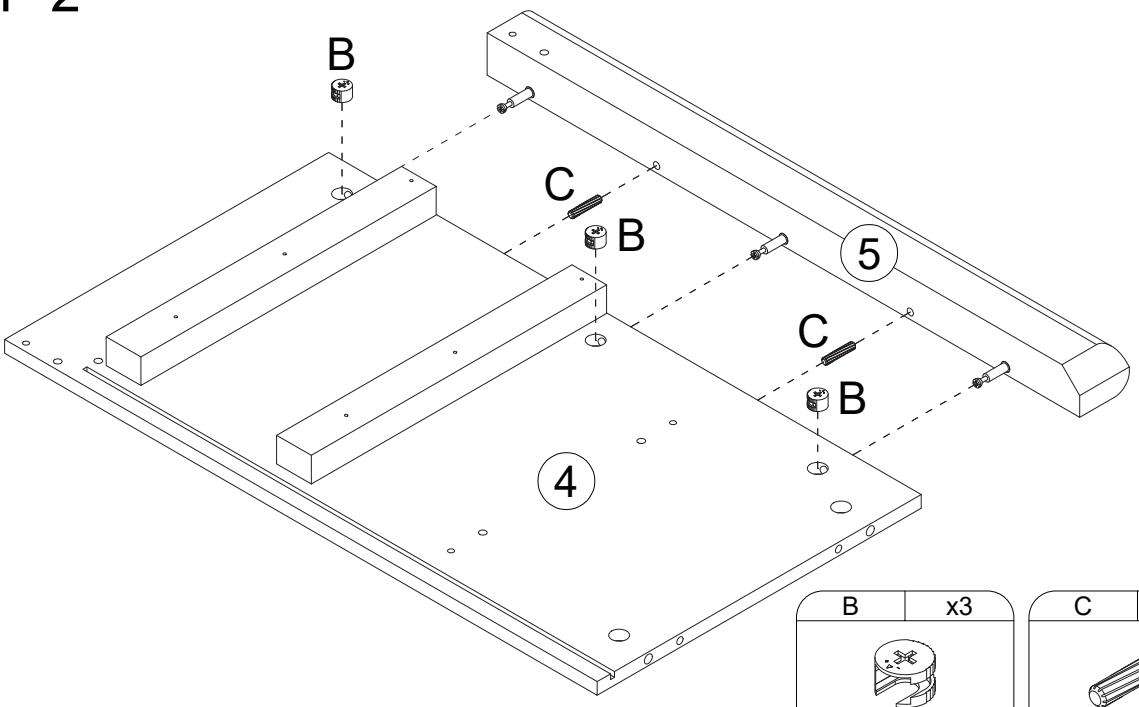

B	x3
M15x9mm	

C	x2
	
M6x30mm	


STEP 3

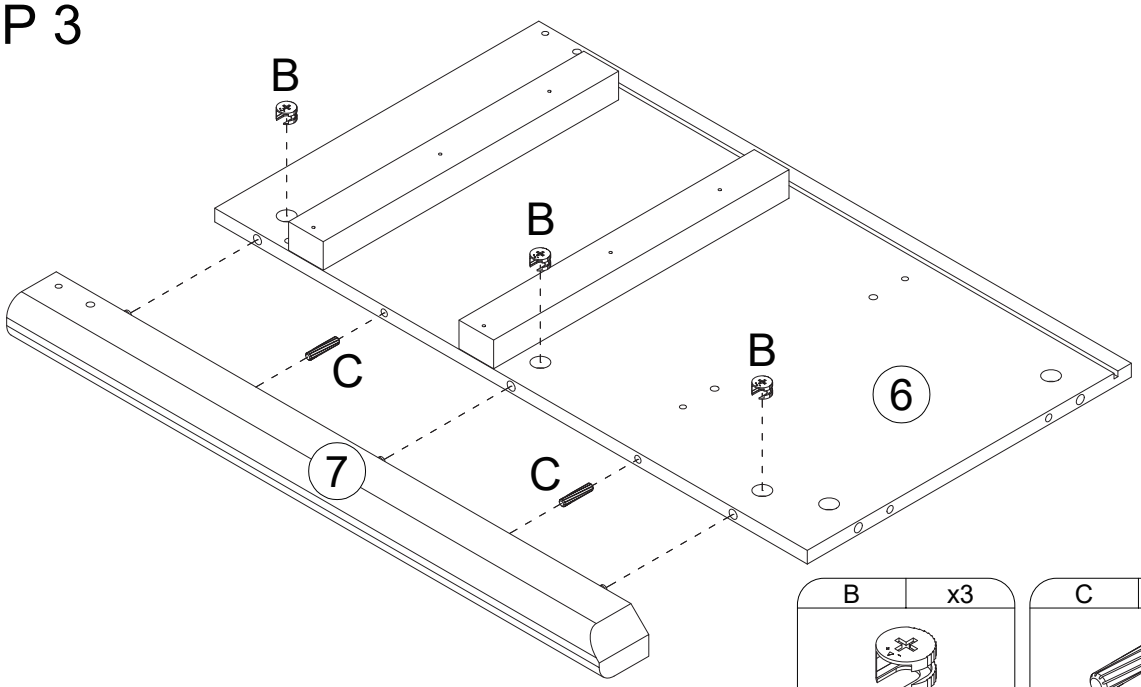

B	x3
M15x9mm	

C	x2
M6x30mm	

STEP 4

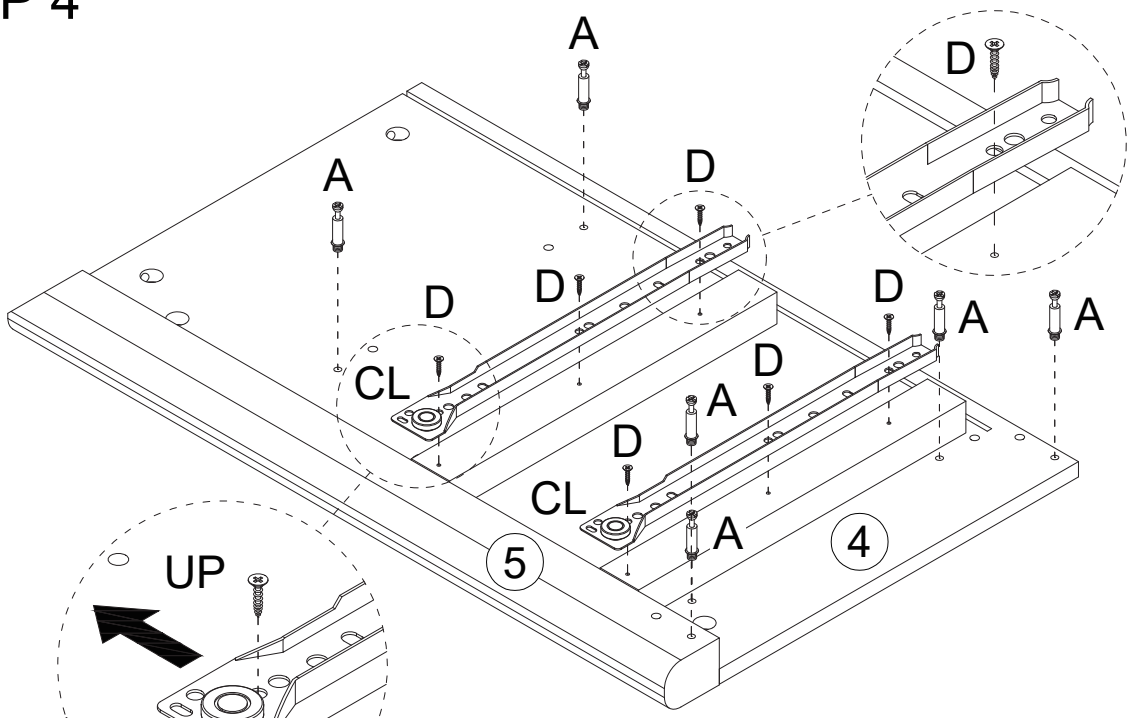


A	x6
M6x35mm	

D	x6
M3.5x12mm	


CL	x2

STEP 5

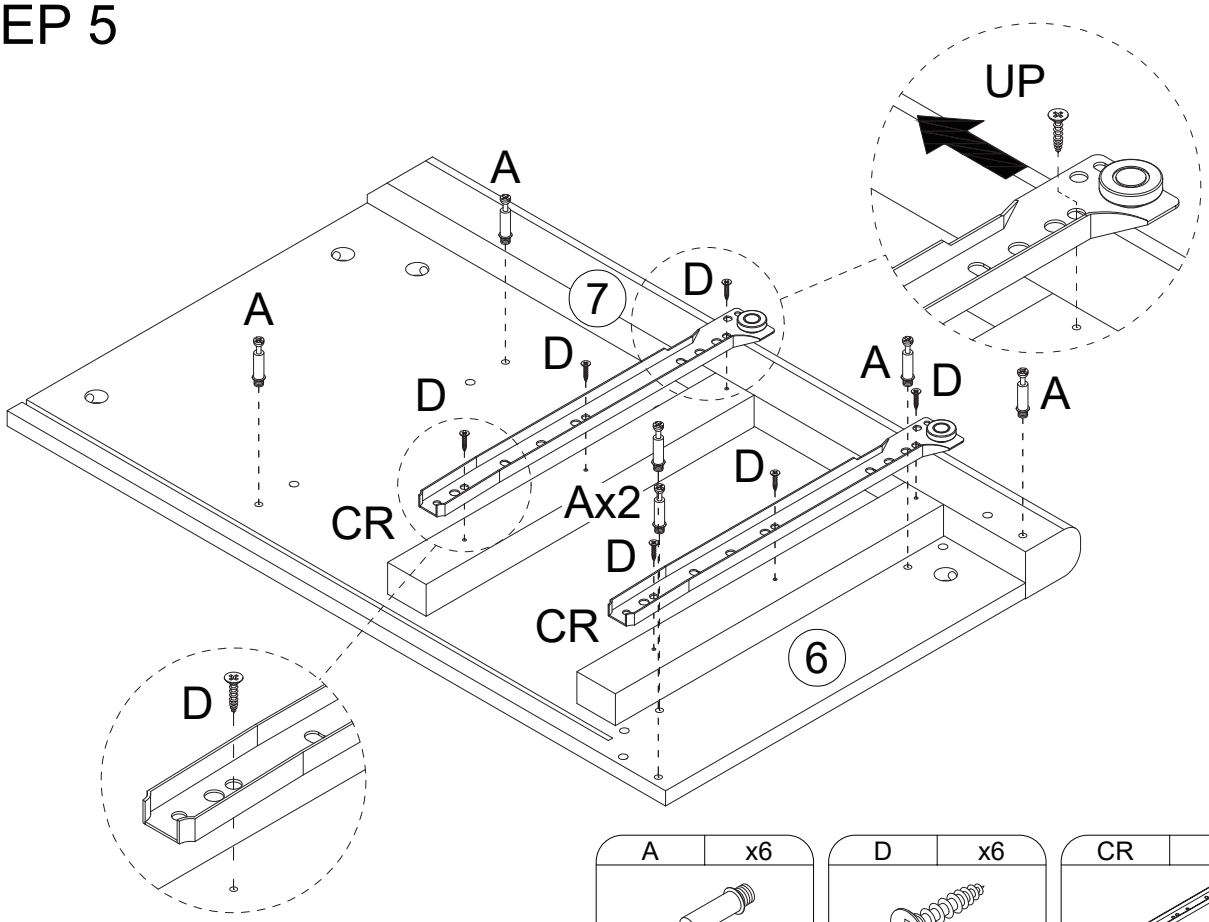



A	x6
M6x35mm	

D	x6
M3.5x12mm	


CR	x2
	

STEP 6

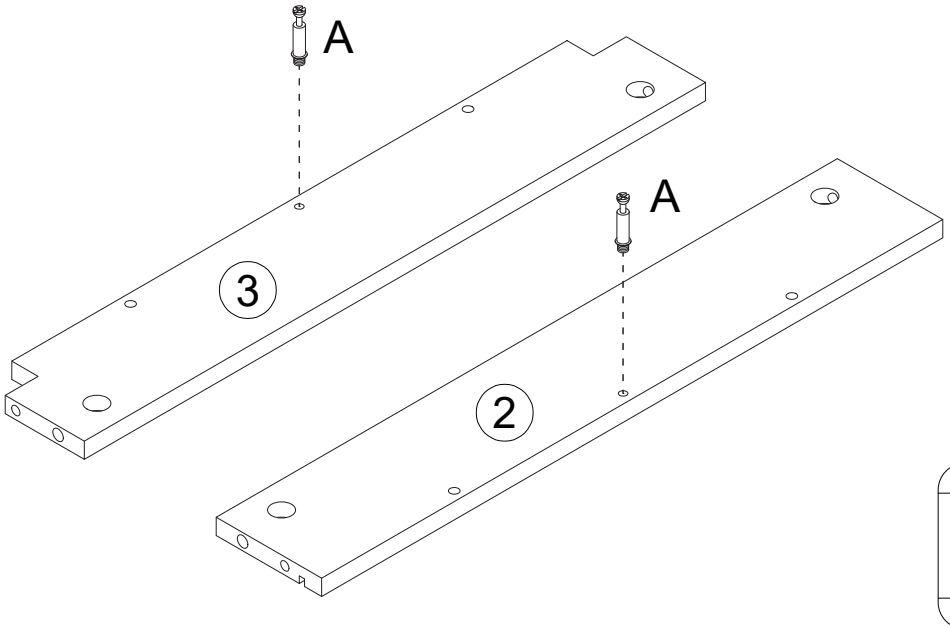


A	x2
	
M6x35mm	


STEP 7

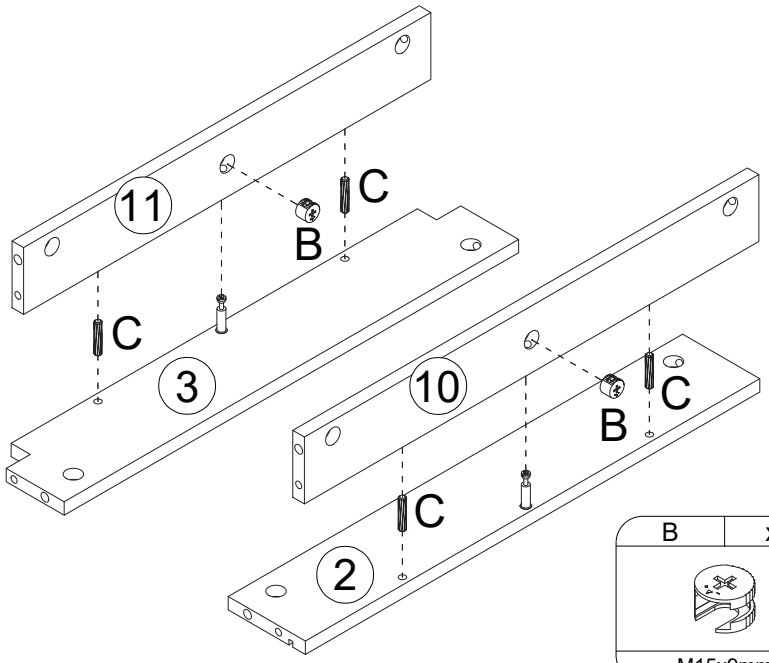


B	x2
M15x9mm	

C	x4
	
M6x30mm	


STEP 8

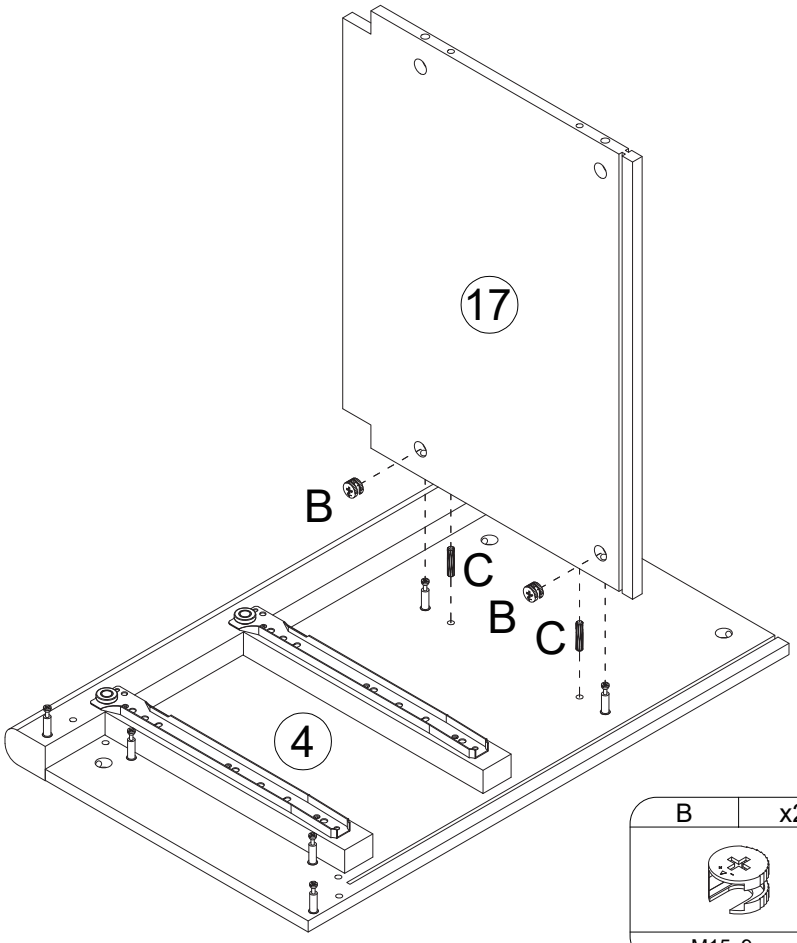

B	x2
M15x9mm	

C	x2
	
M6x30mm	


STEP 9

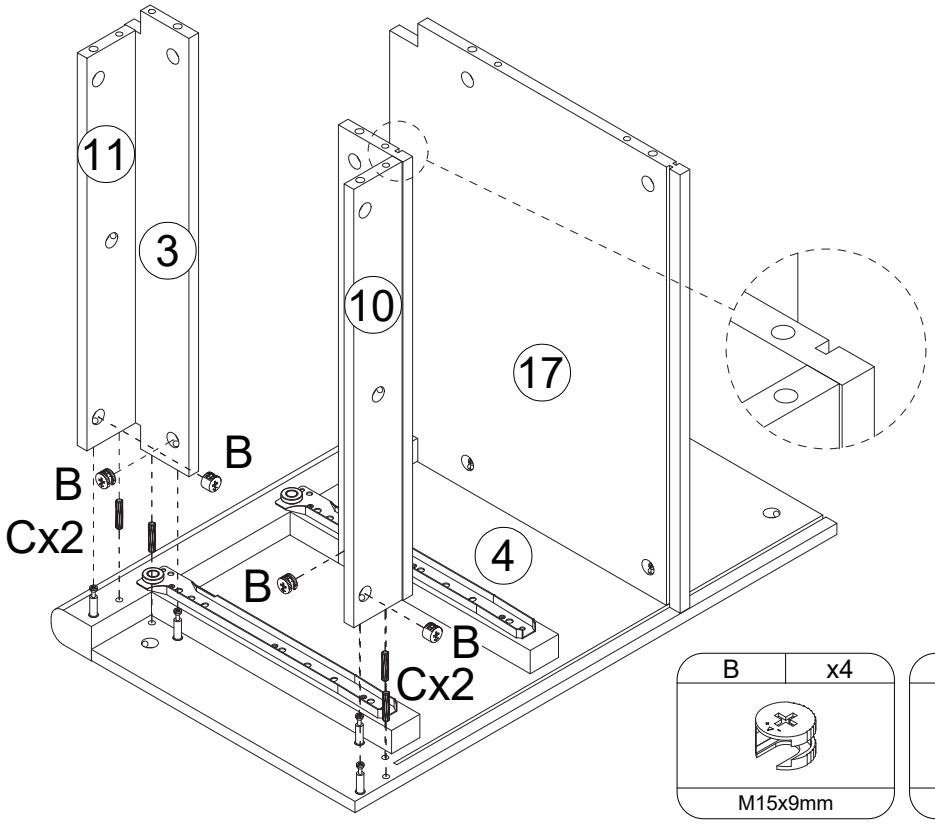


B	x4
M15x9mm	

C	x4
M6x30mm	


STEP 10

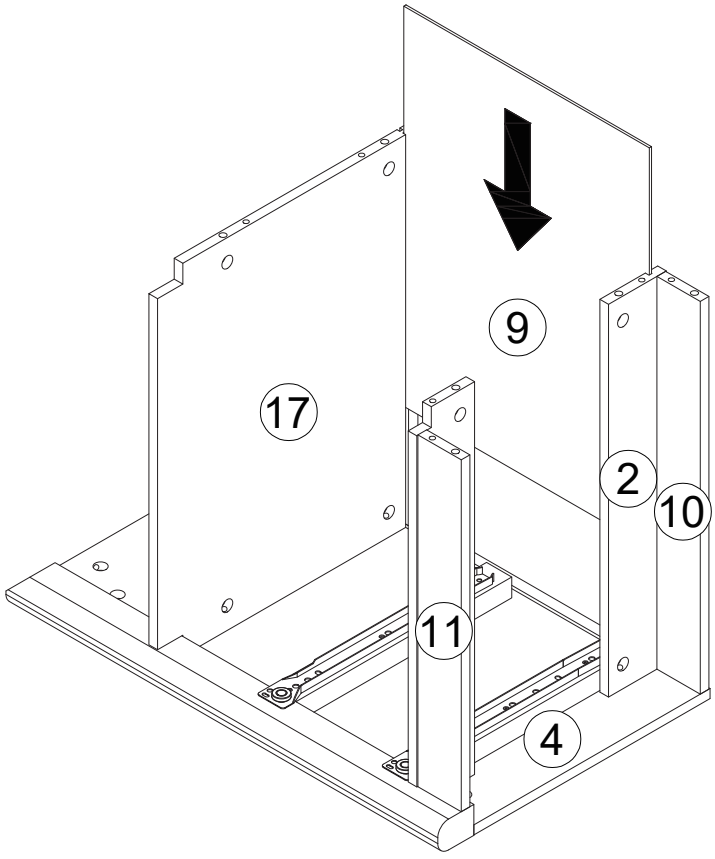


STEP 11

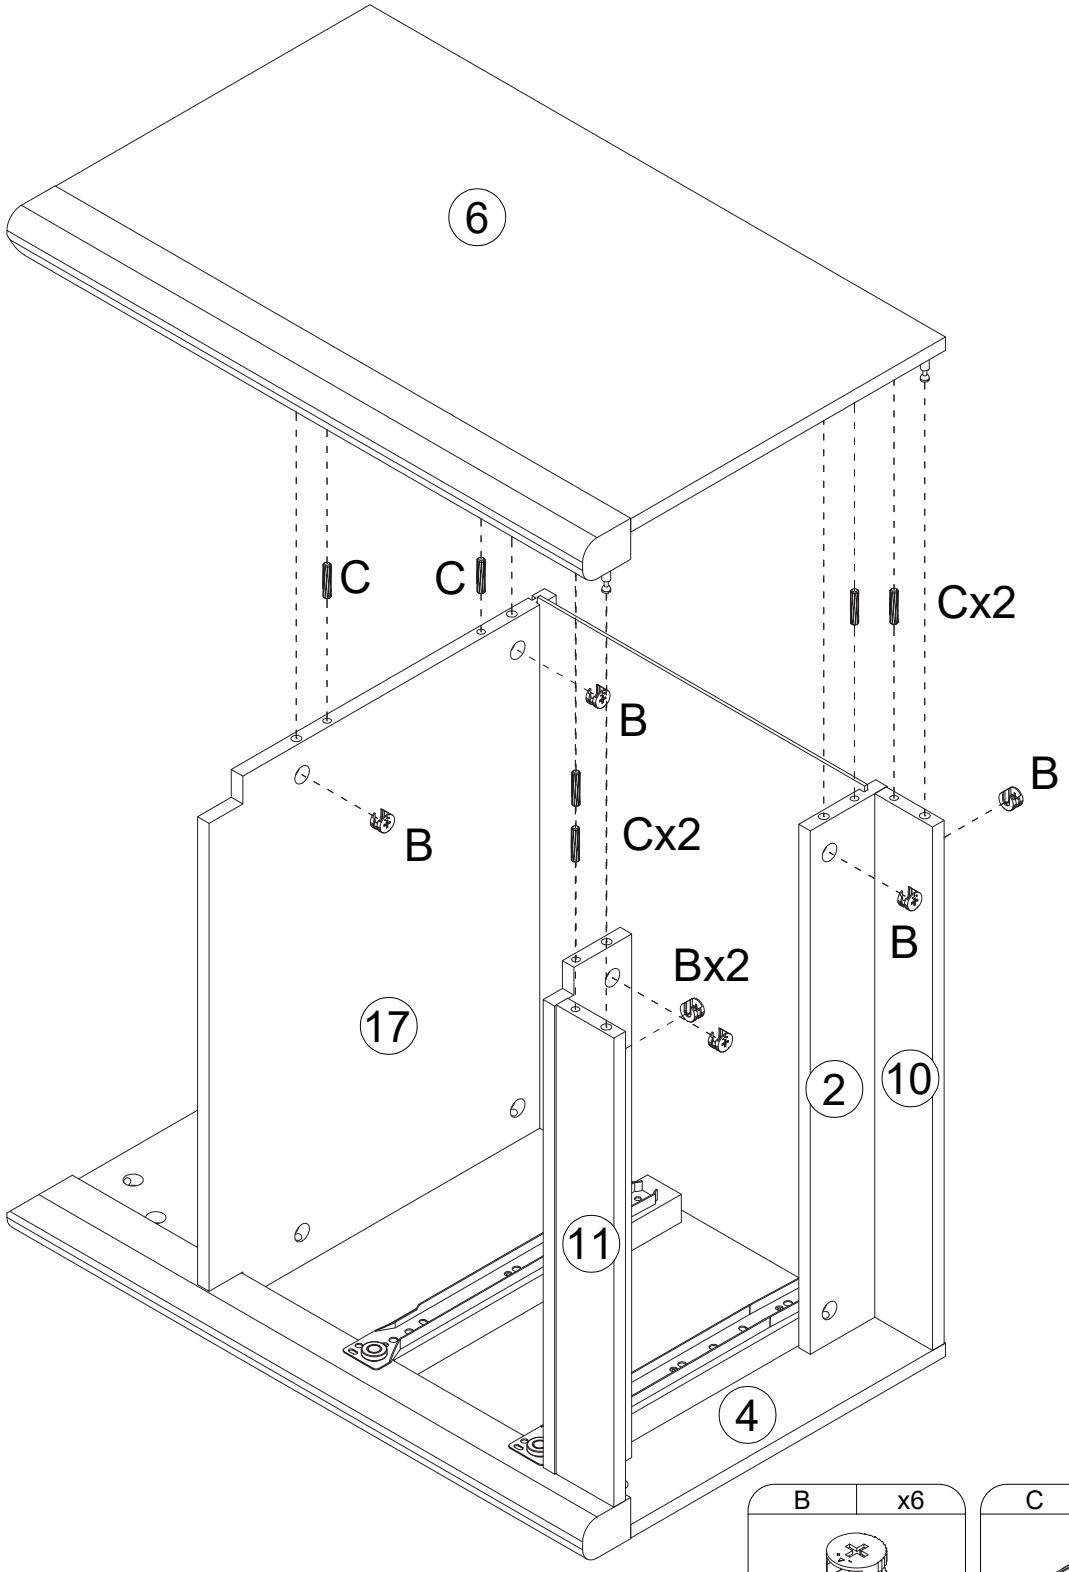


B	x6
	
M15x9mm	

C	x6
	
M6x30mm	

STEP 12

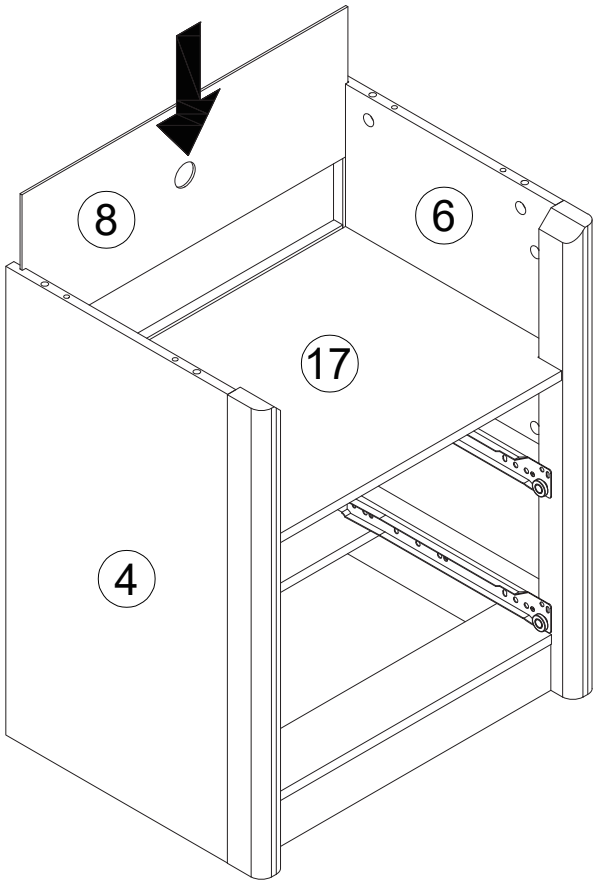


STEP 13

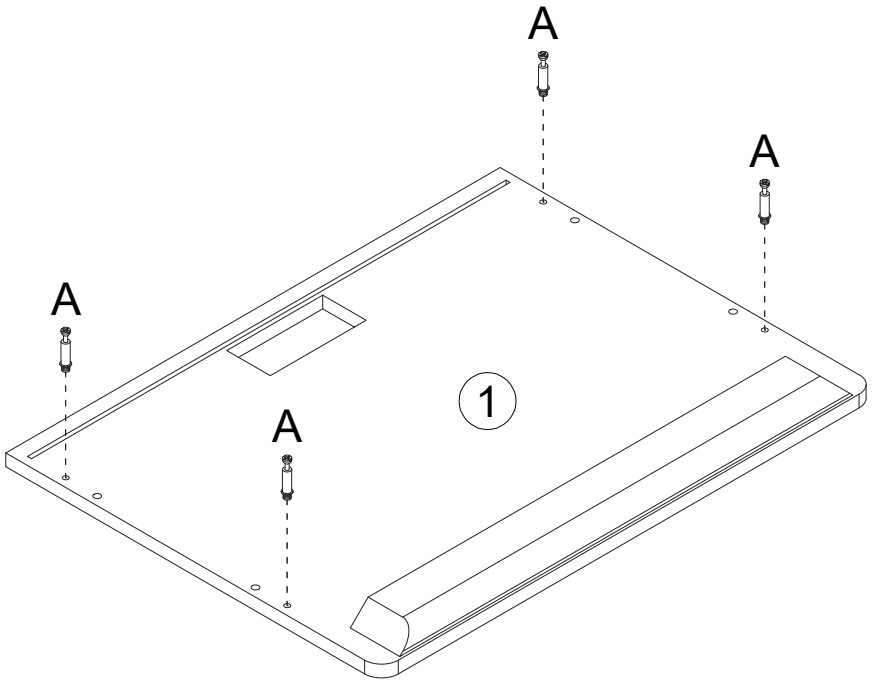

A	x4
M6x35mm	


STEP 14

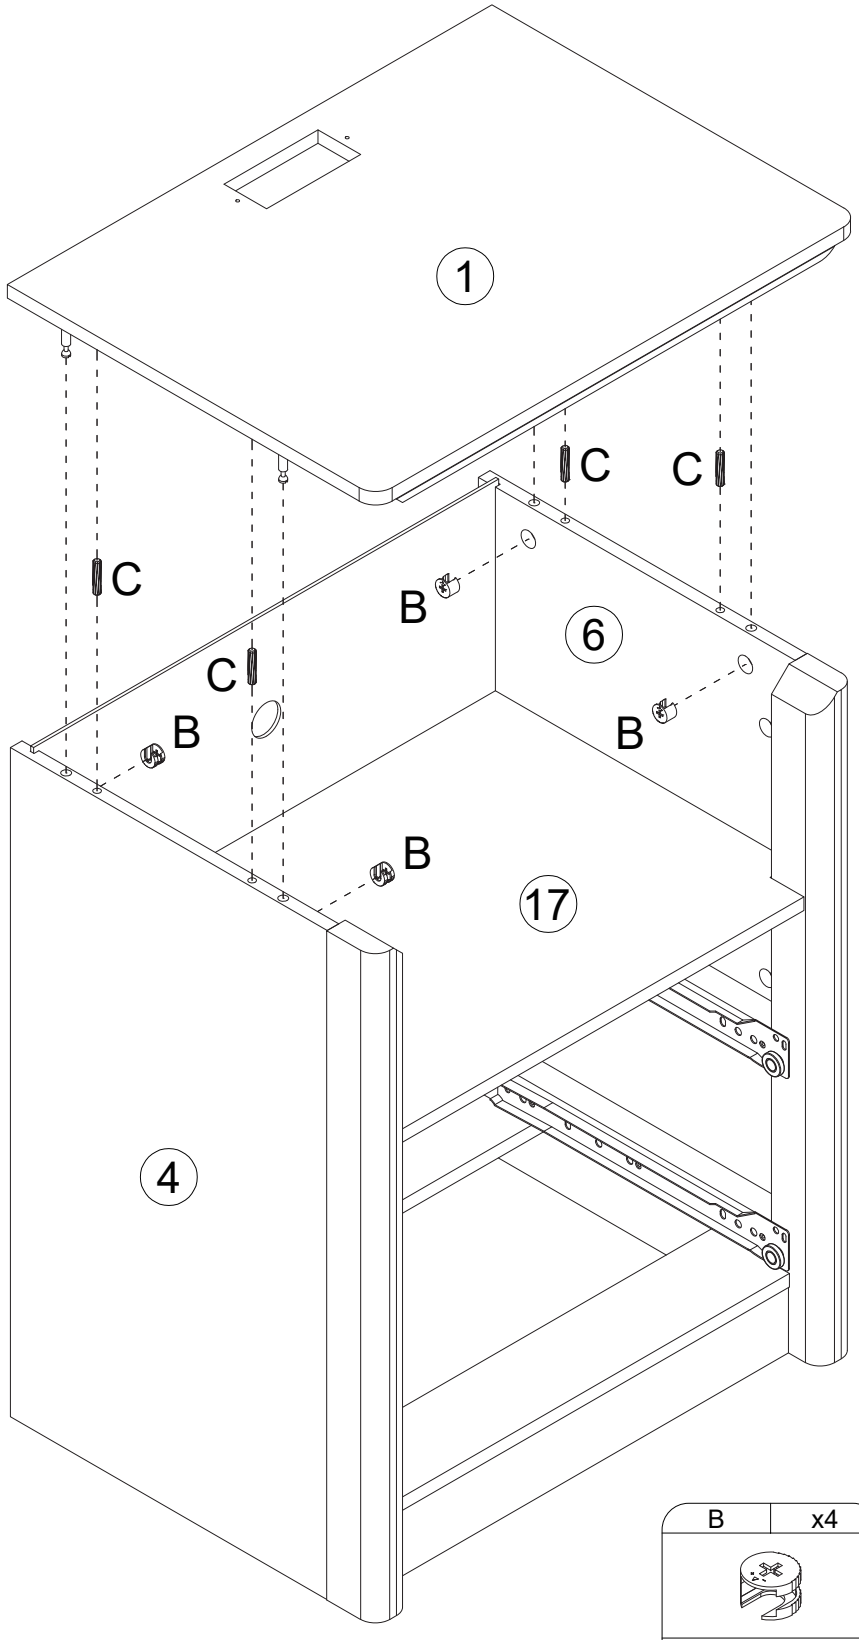


B	x4
M15x9mm	


C	x4
M6x30mm	

STEP 15

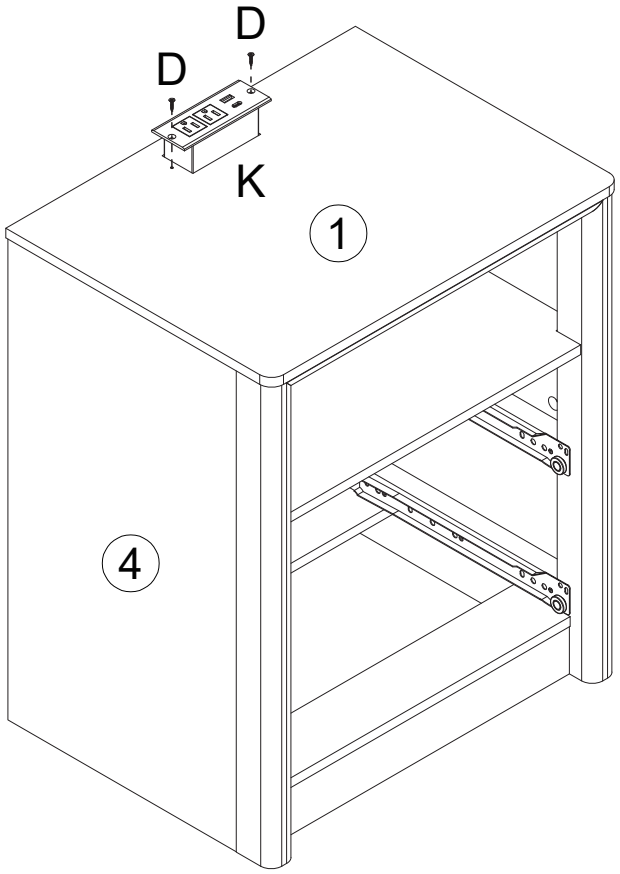


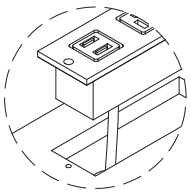


1. Pass the USB socket wire through the panel slot.

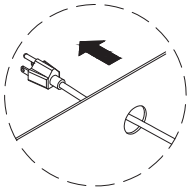


2. The plug end is then passed through the back plate hole and pulled to the back of the cabinet.

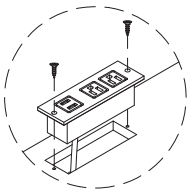



3. Fix the USB socket to the panel.

D	x2
	
M3.5x12mm	


K	x1
	

STEP 16

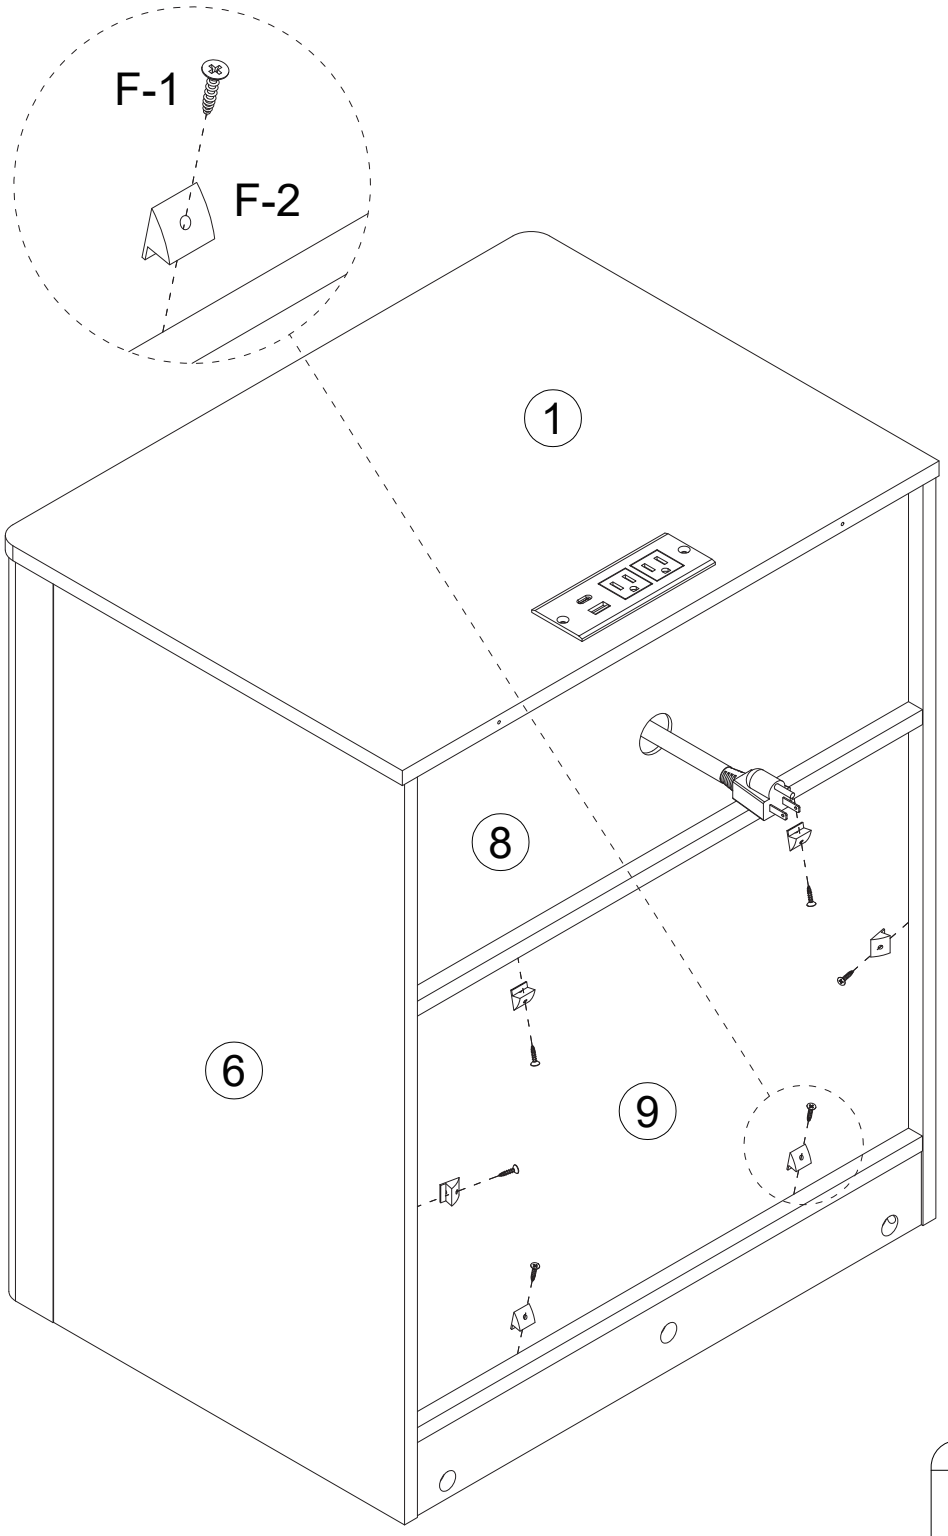


F	x6
F-1  F-2	

STEP 17

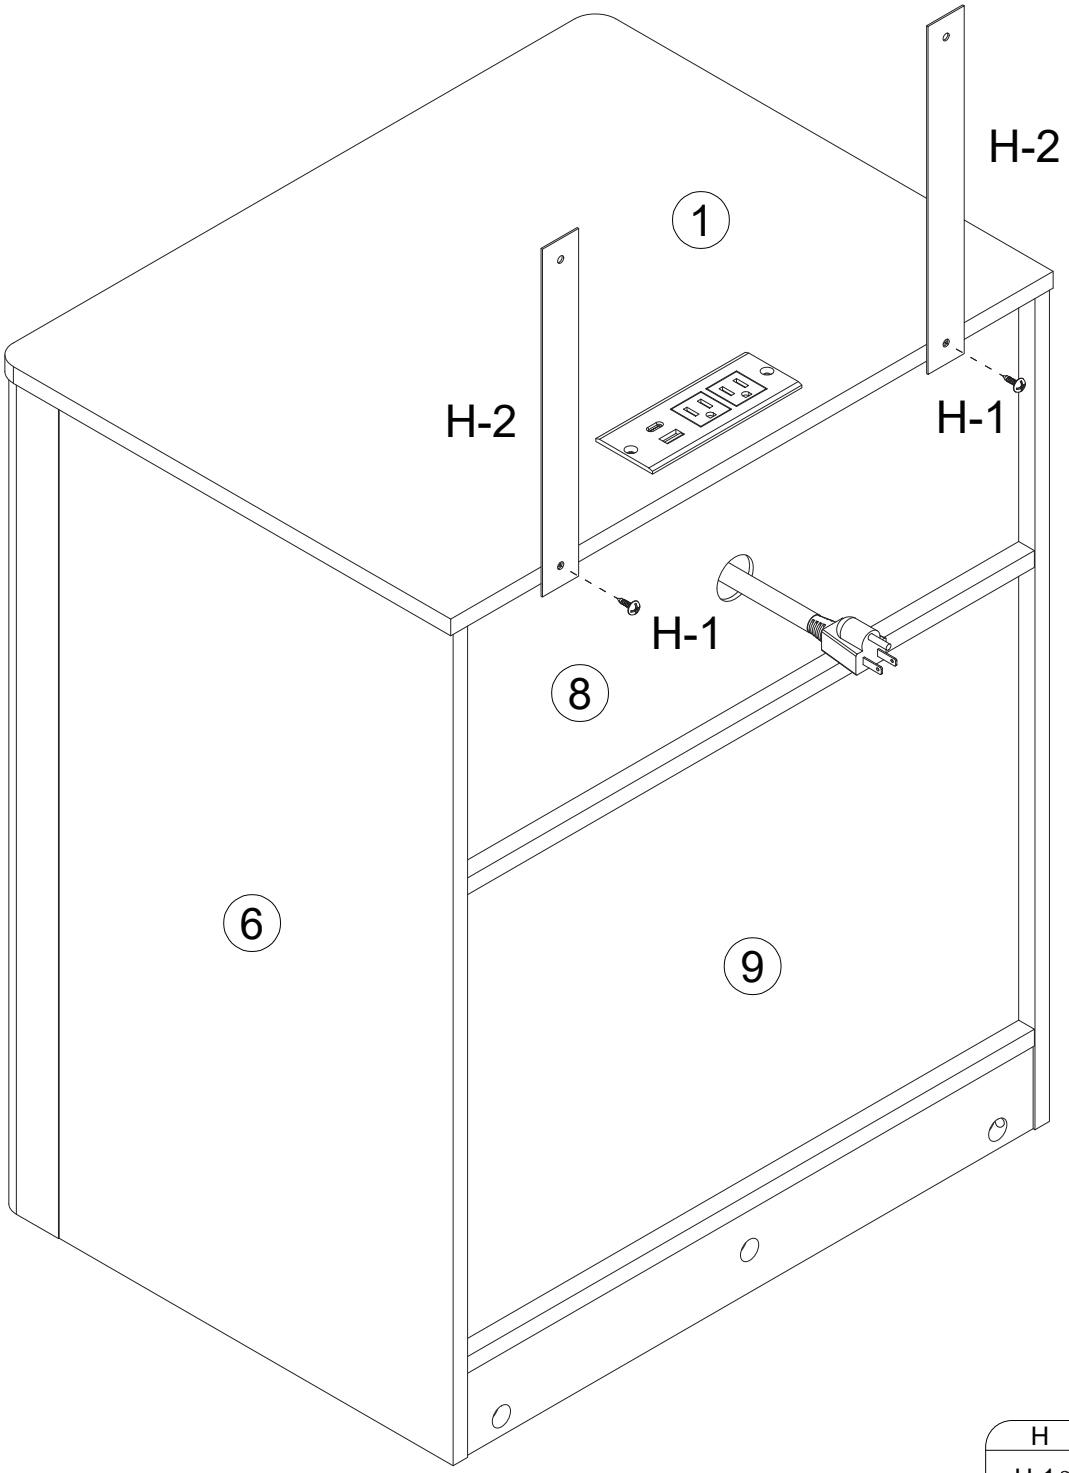


H	x2
H-1 H-2	

STEP 18

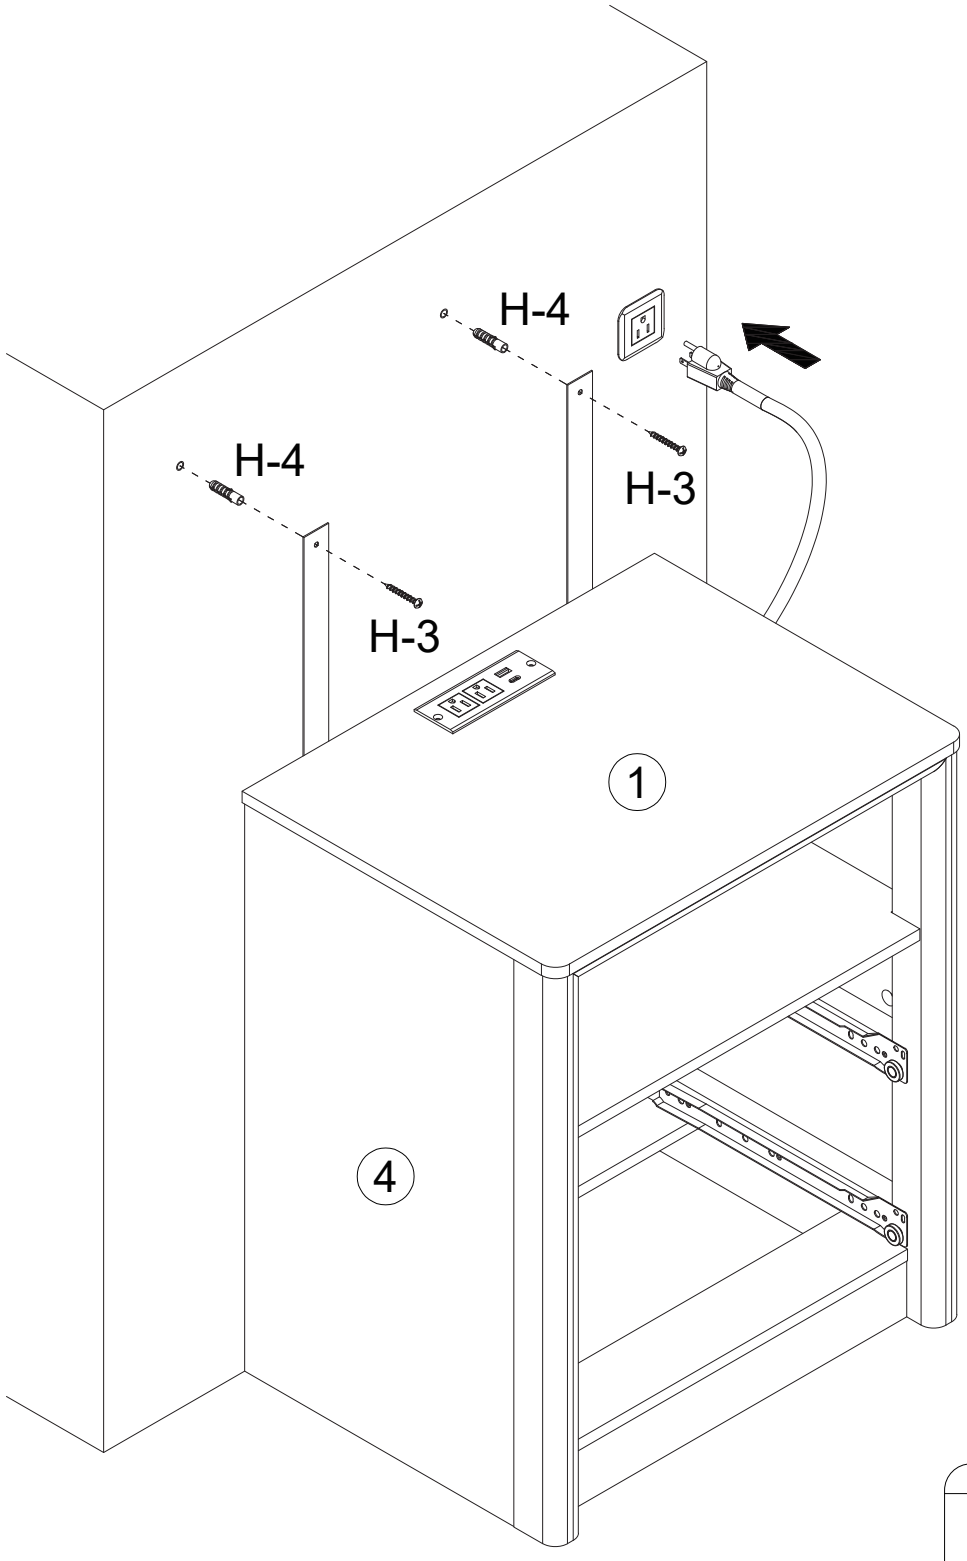

H	x2
H-3 H-4	


STEP 19

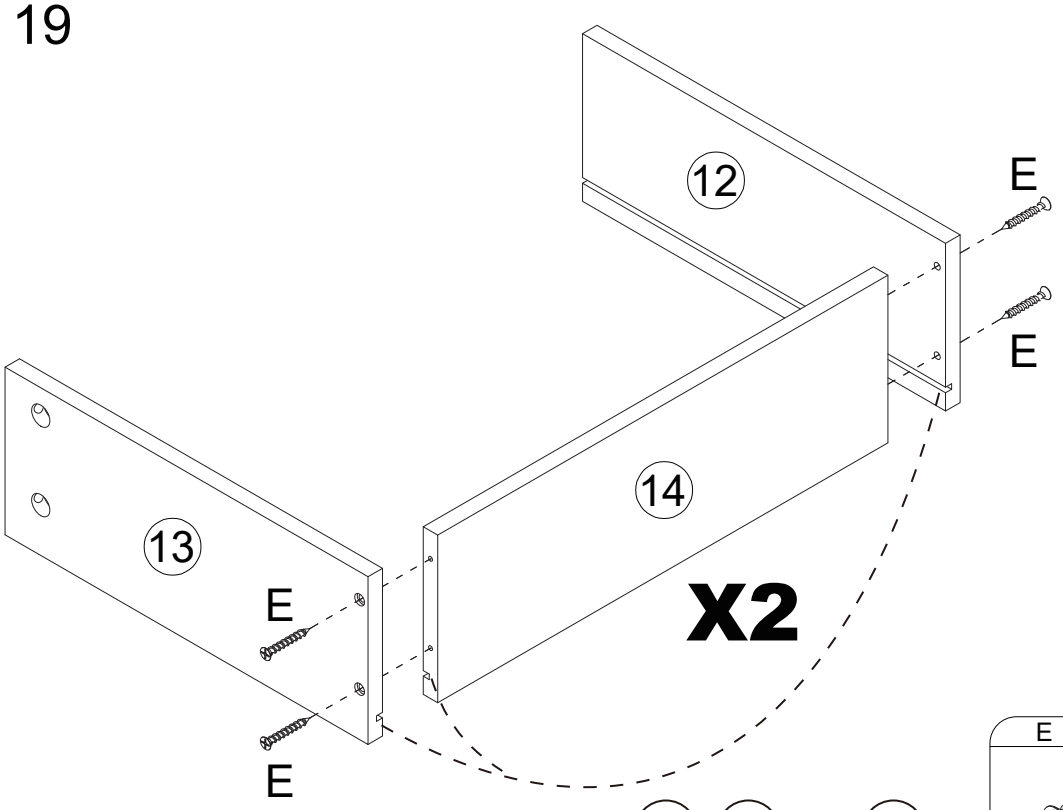


Align the grooves of accessories (12) (13) and (14) .

E	x8
	
M4x35mm	

STEP 20

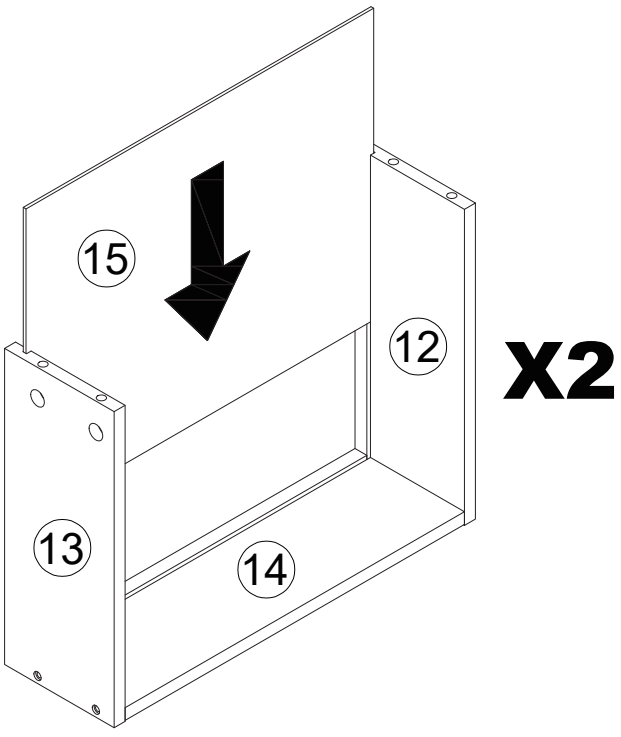

STEP 21

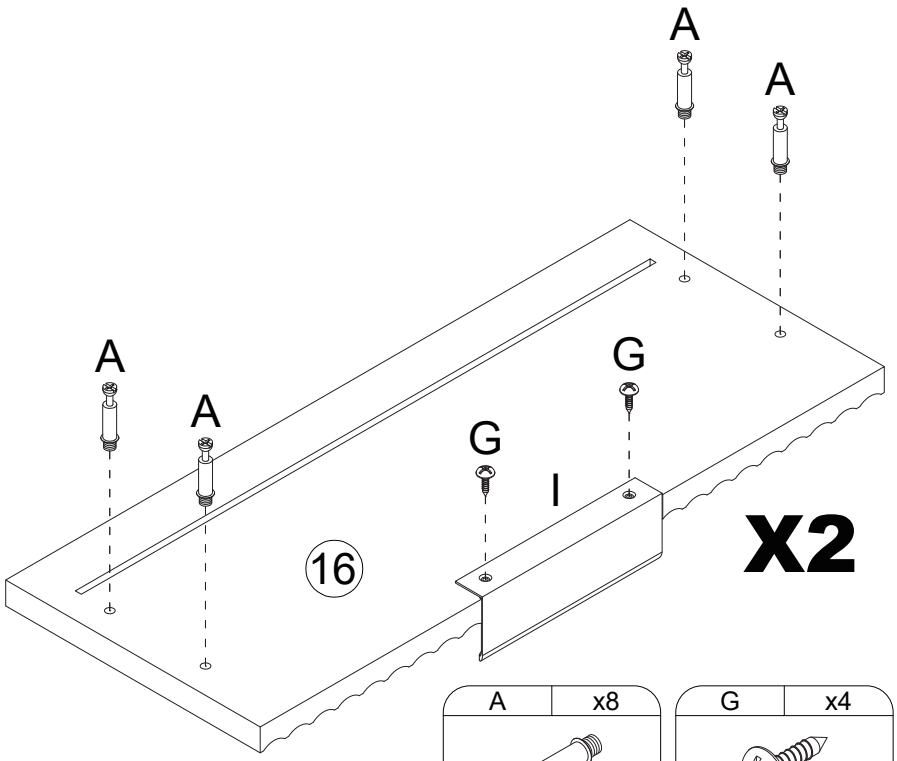


A	x8
M6x35mm	

G	x4
M4x12mm	


I	x2

STEP 22

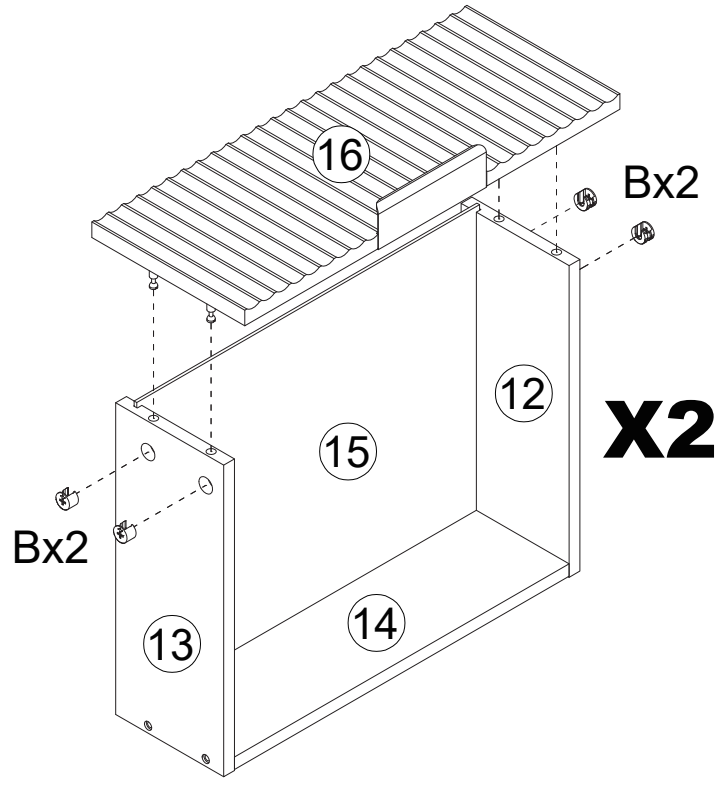

B	x8
M15x9mm	

STEP 23

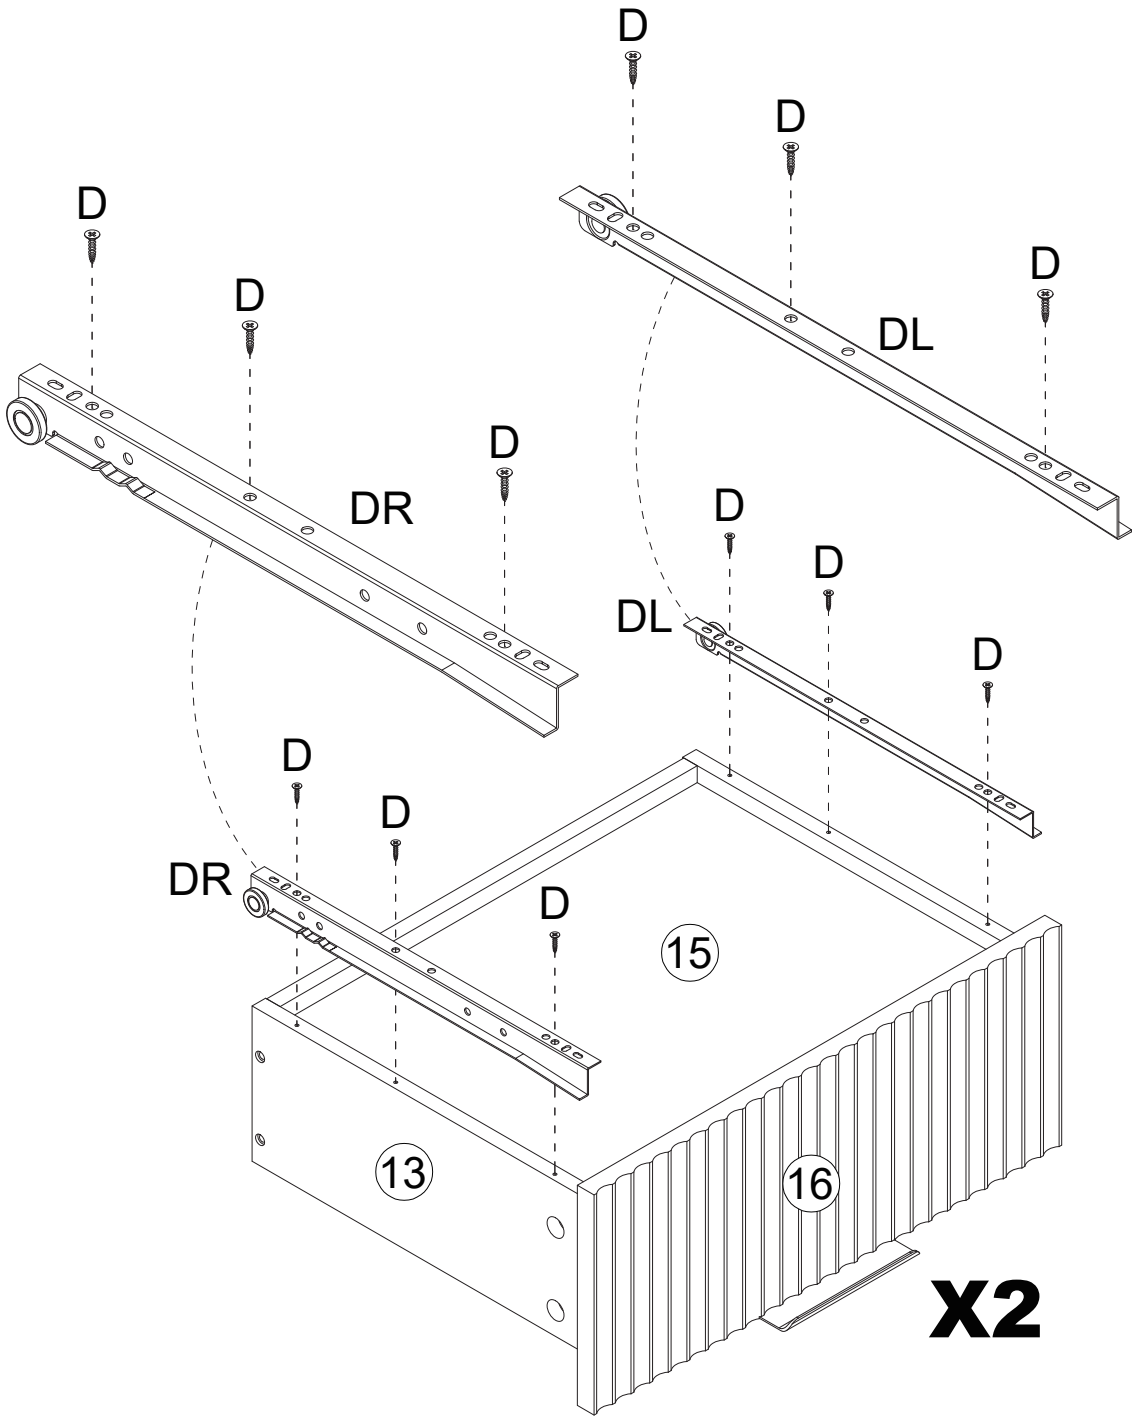


D	x12
M3.5x12mm	

DL	x2

DR	x2

STEP 24

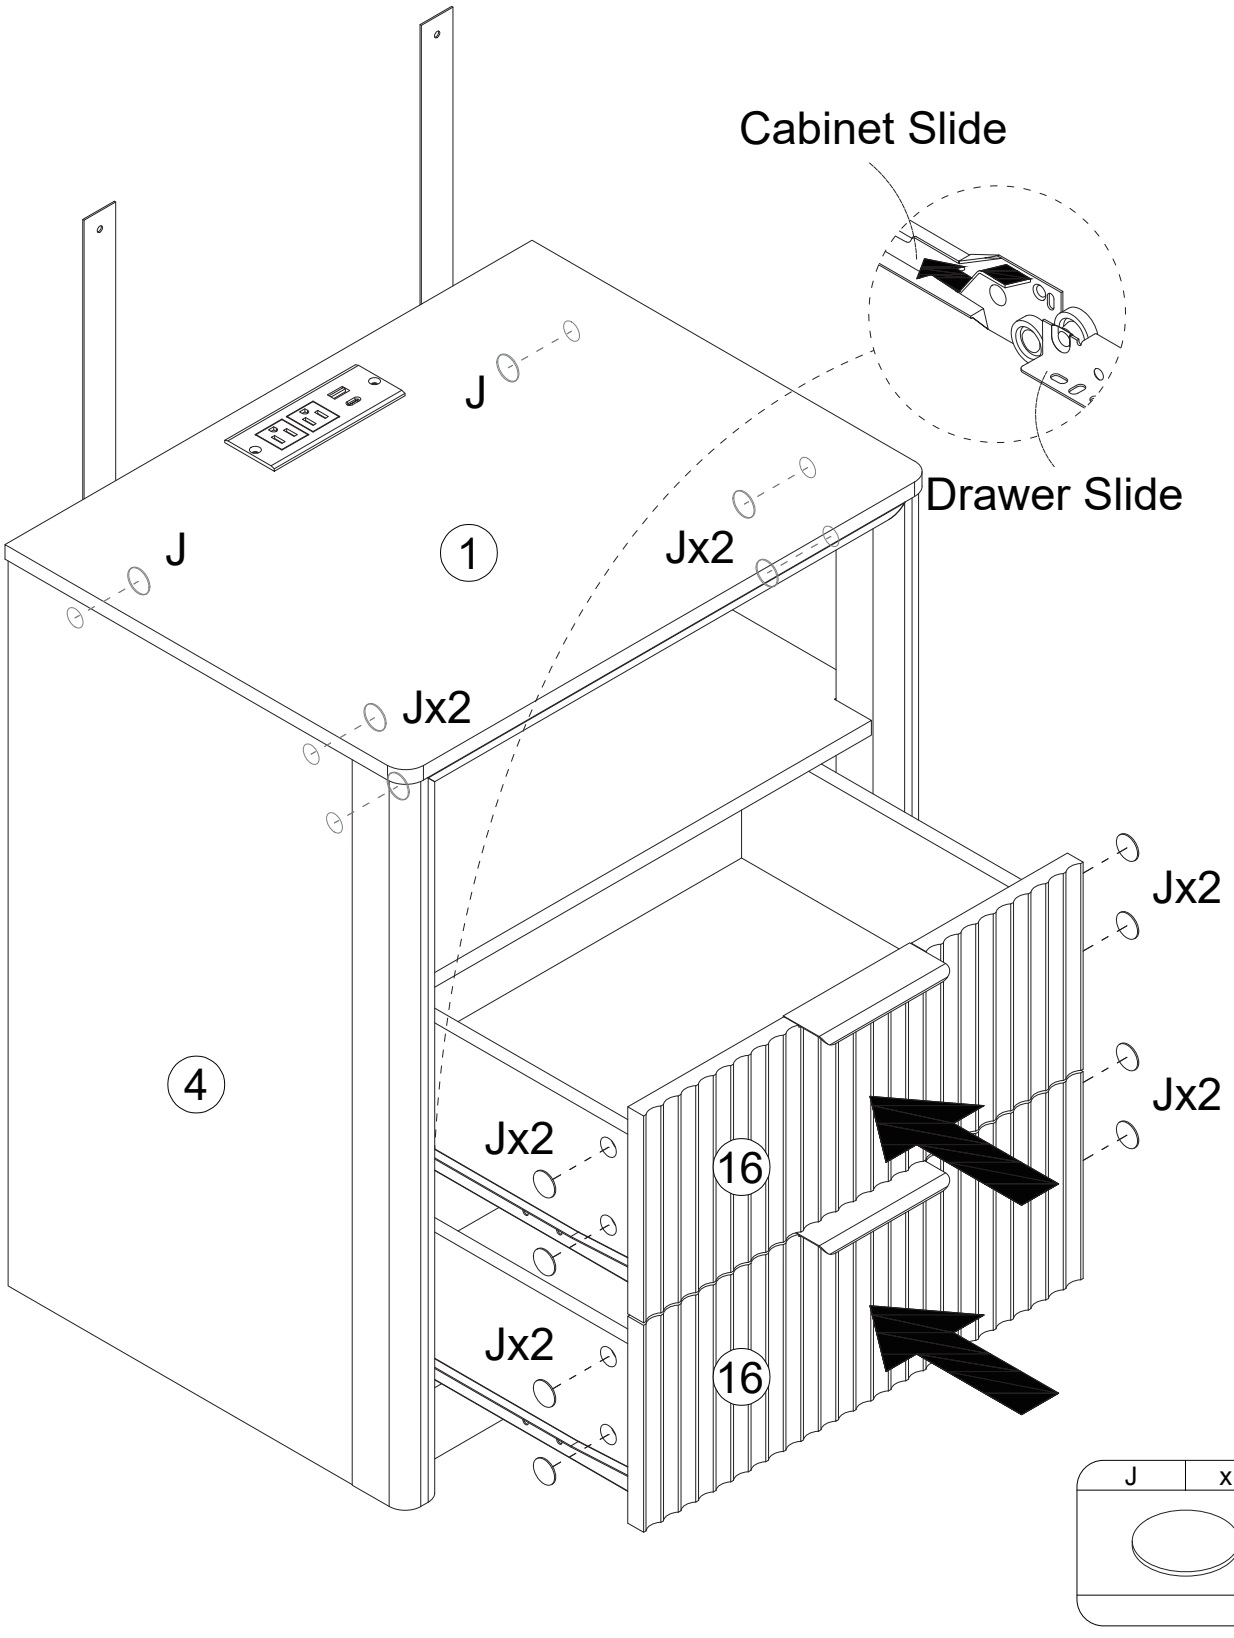
Cabinet Slide
Drawer Slide
J
J
1
Jx2
Jx2
Jx2
Jx2
Jx2
4
16
16
J
x14