
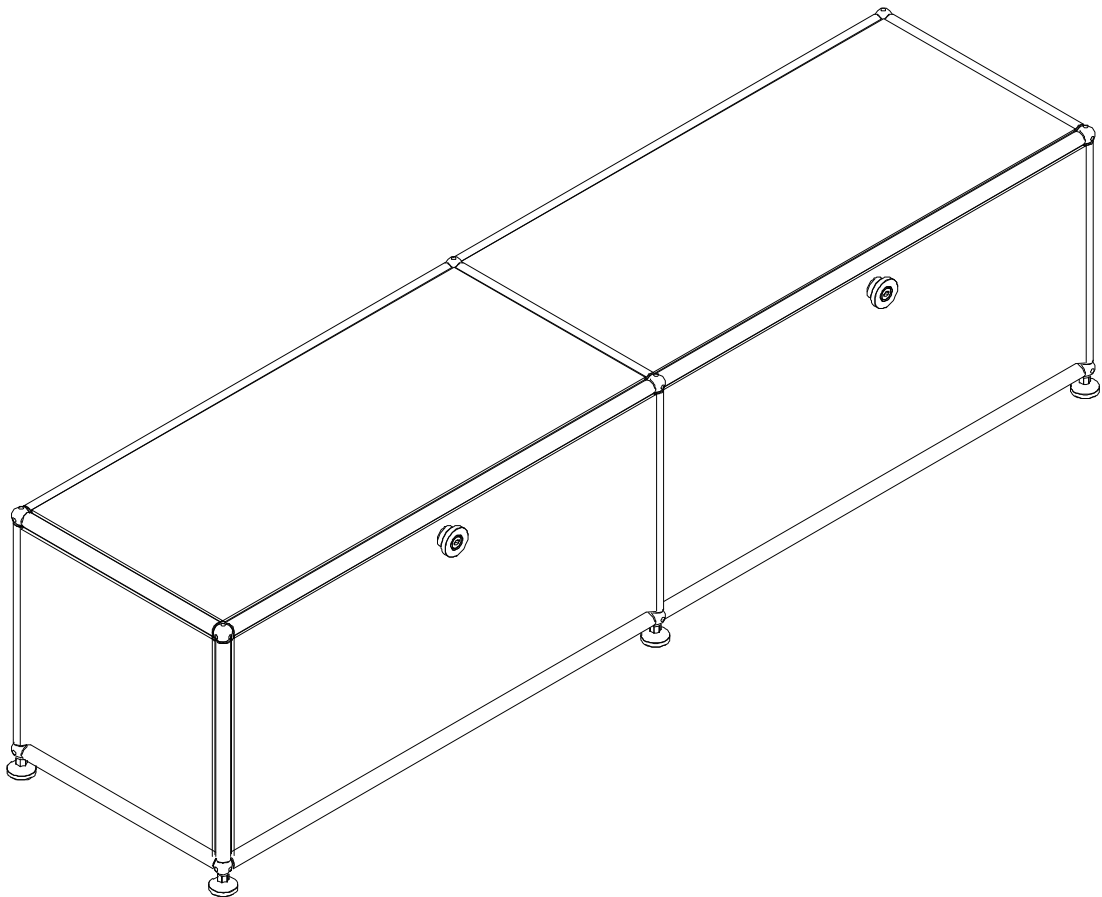











ASSEMBLY INSTRUCTIONS







Storage Cabinets Type B




Part List


①	②	③	④	⑤	⑥	⑦	⑧
							
L	R						
x1	x2	x2	x1	x1	M3x28 x4	M4x25 x3	M4x14 x4

A	B	C	D	E1	E2	F	G
							
x6	x2	x2	x1	Long x8	Short x12	x2	x6

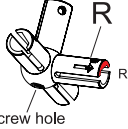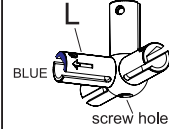H1	H2	J1	J2	K1	K2	M	N
							
x4	x4	x1	x1	x1	x1	x40	x1


II	W
	
x1	x2

Step1

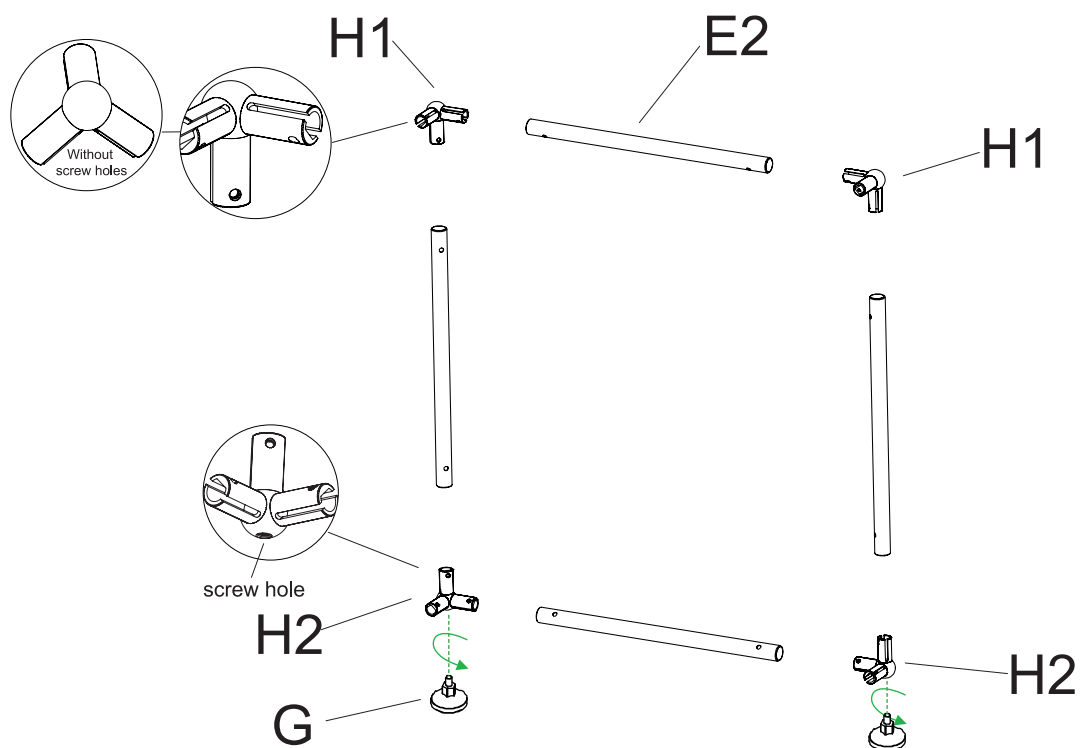

Gx2
H1x2
H2x2
E2x4


Step2

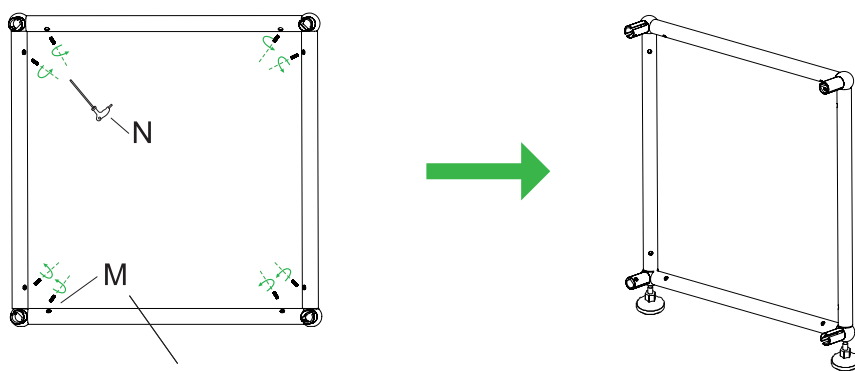

Do not tighten the **M** screws completely, otherwise it will not be possible to adjust the overall product later.


Mx8
Step2x2

Step3

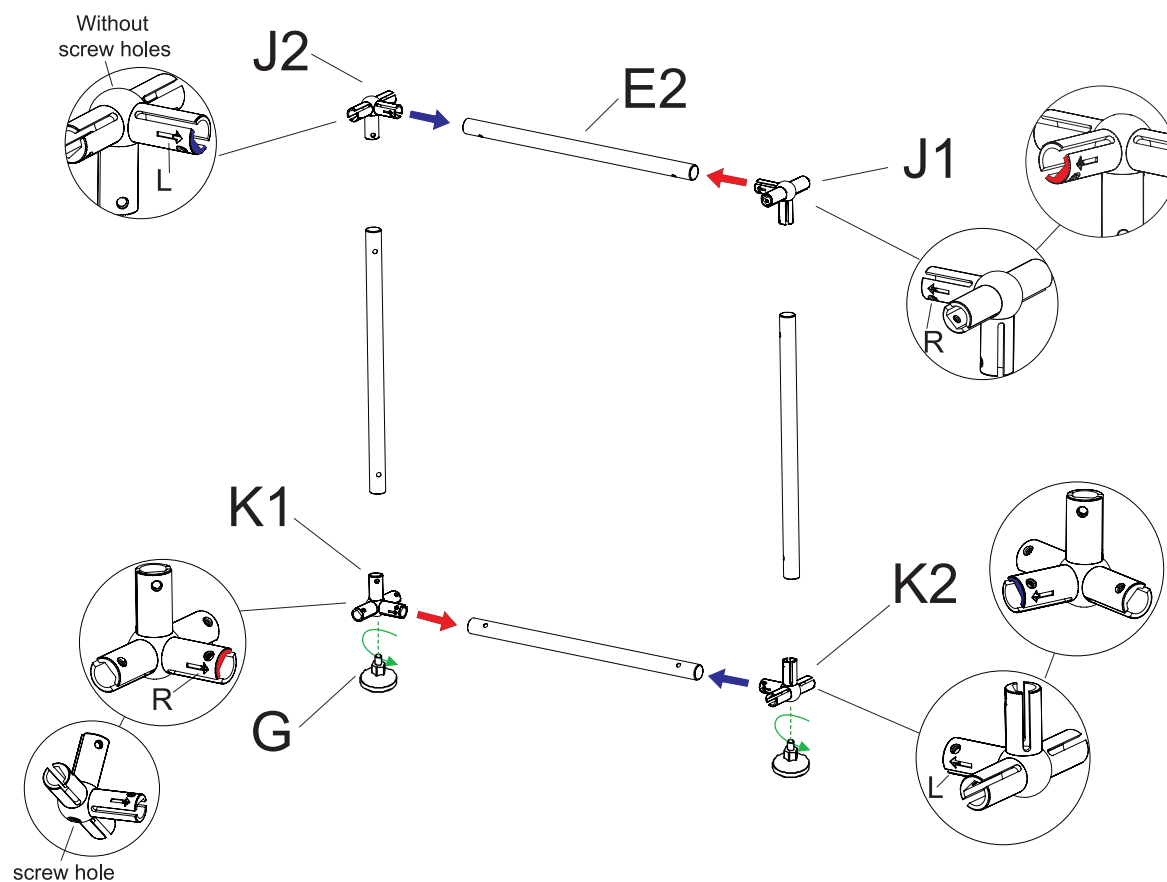


J1x1
J2x1
K1x1
K2x1
E2x4
Gx2

Step4

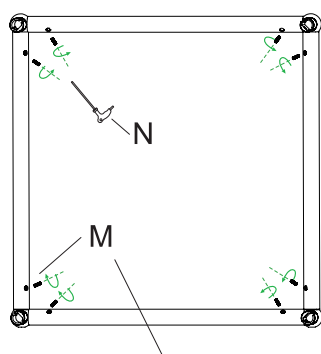


Do not tighten the **M** screws completely, otherwise it will not be possible to adjust the overall product later.

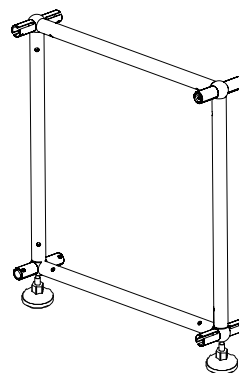


Mx8
Step4x1

Step5

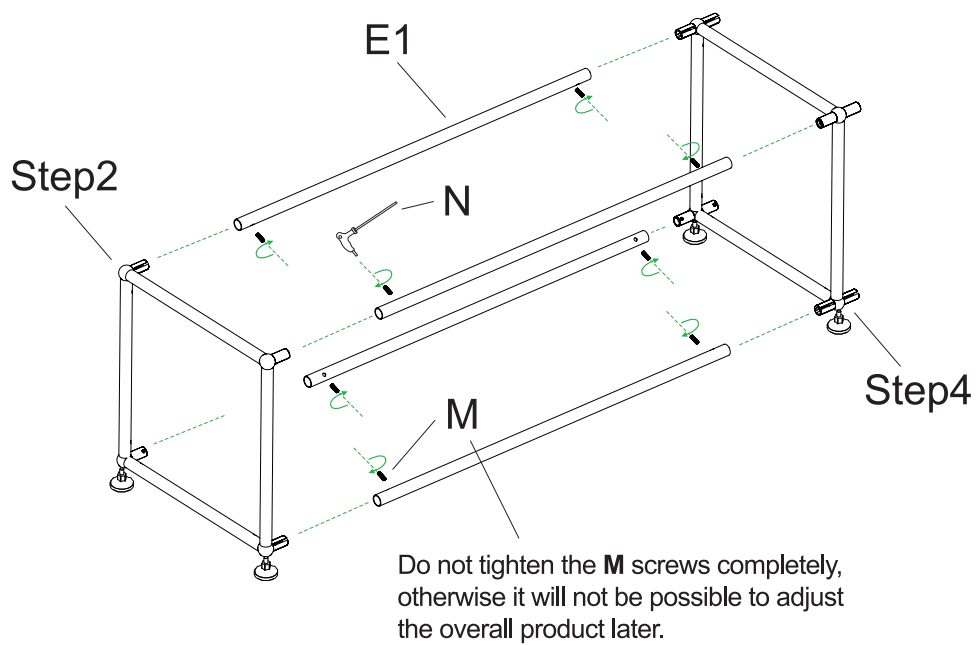


Mx8
E1x4
Step2x1
Step4x1

Step6

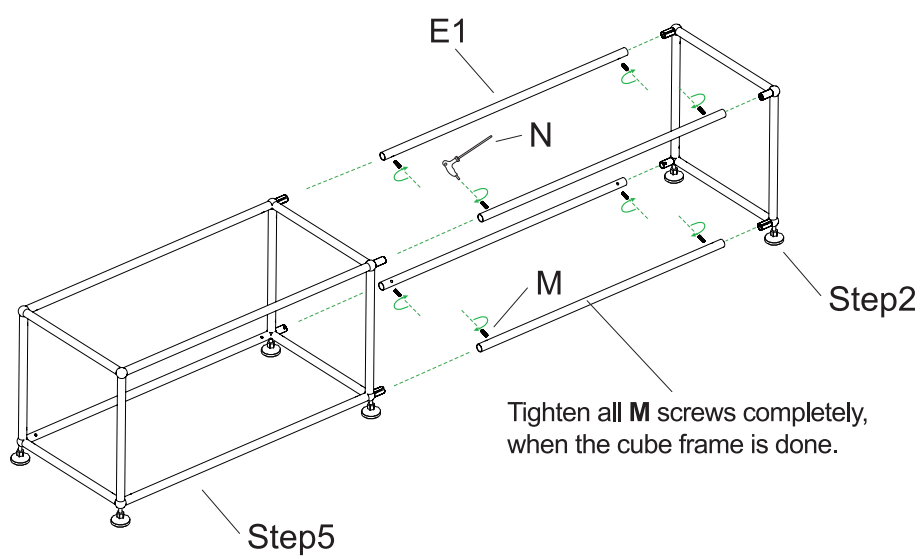


Mx8
E1x4
Step2x1
Step5x1

Step7

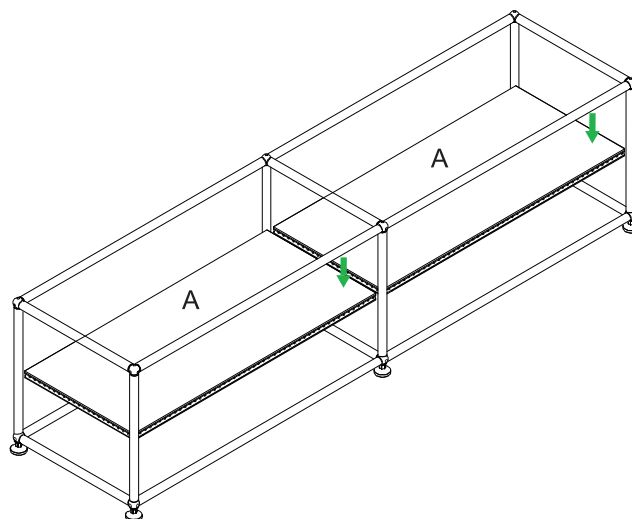

Ax2


Step8

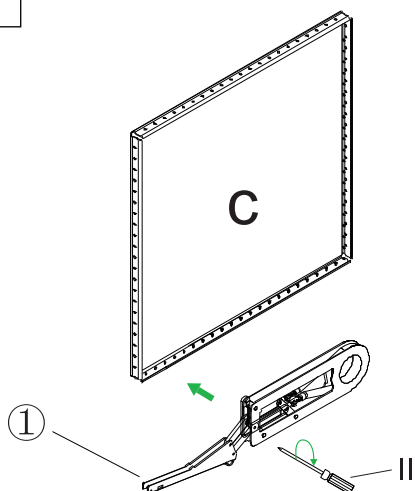

Partially unscrew the three screws in ① before installing it on the metal panel.

Cx1
①x1
Step8x1


Step9

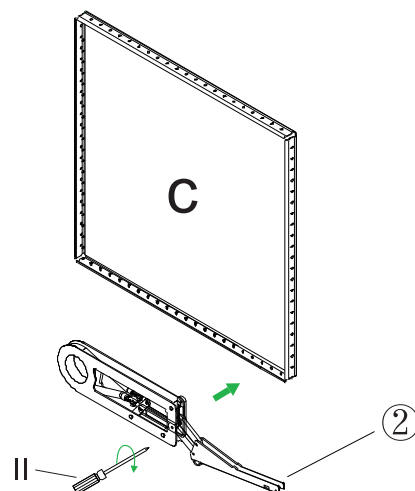

Partially unscrew the three screws in ② before installing it on the metal panel.

Cx1
②x1
Step9x1


Step10

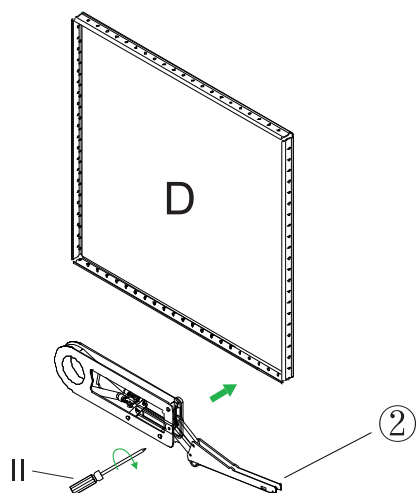

Partially unscrew the three screws in ② before installing it on the metal panel.


Dx1
②x1
Step10x1

Step11

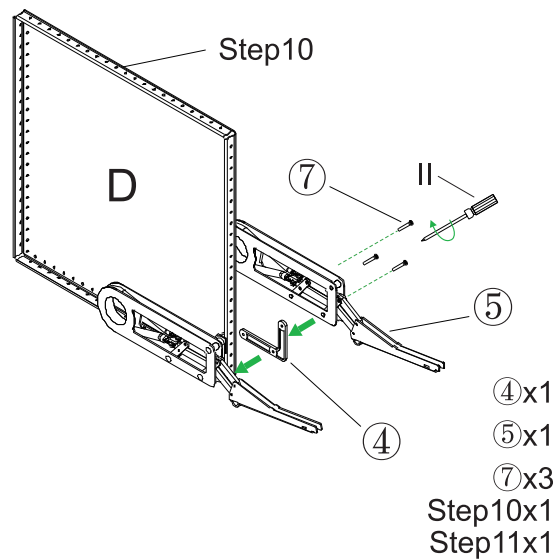


④x1
⑤x1
⑦x3
Step10x1
Step11x1

Step12

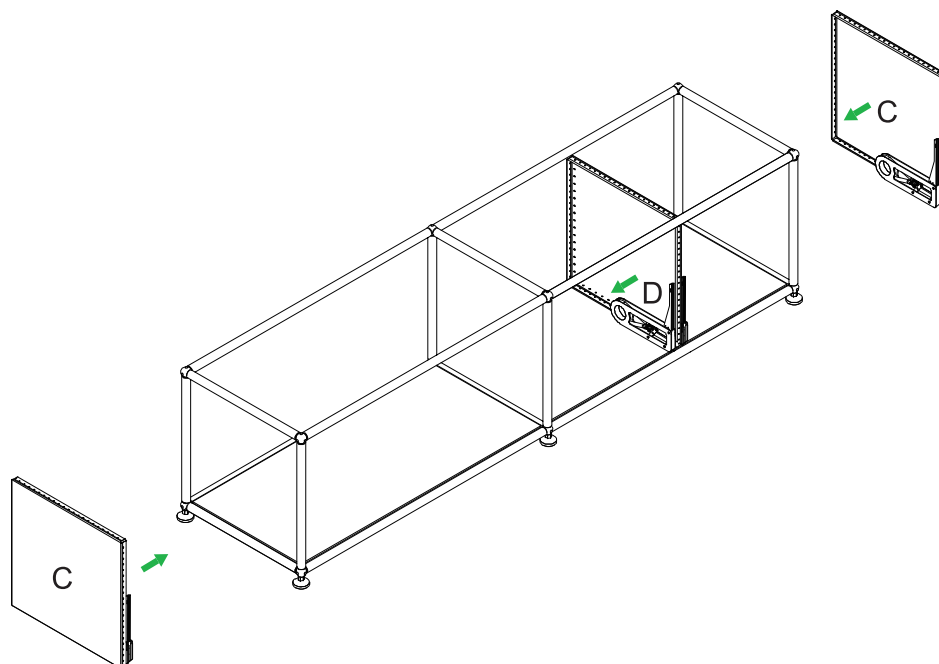


Step8x1
Step9x1
Step11x1

Step13

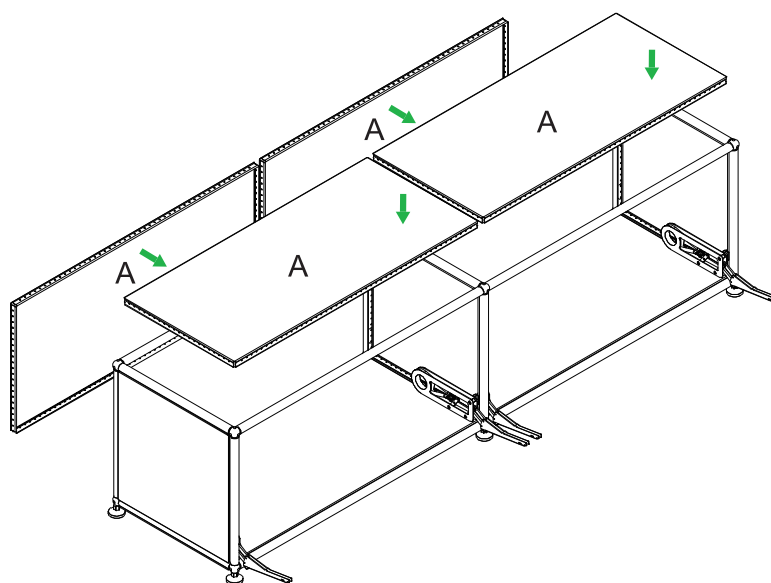


Ax4


Step14

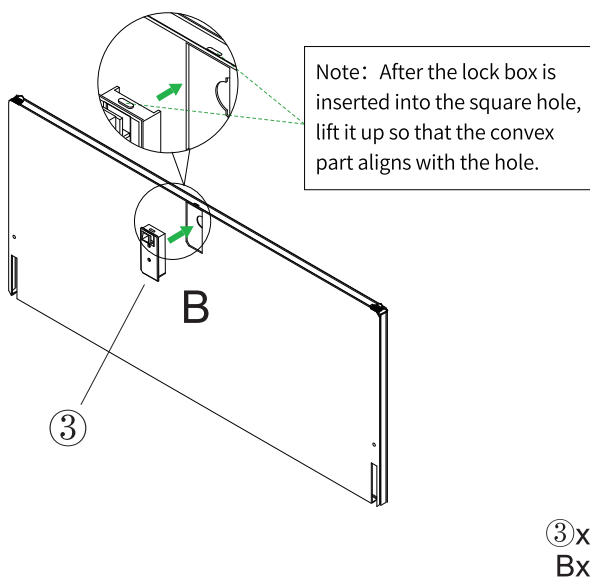


Step15

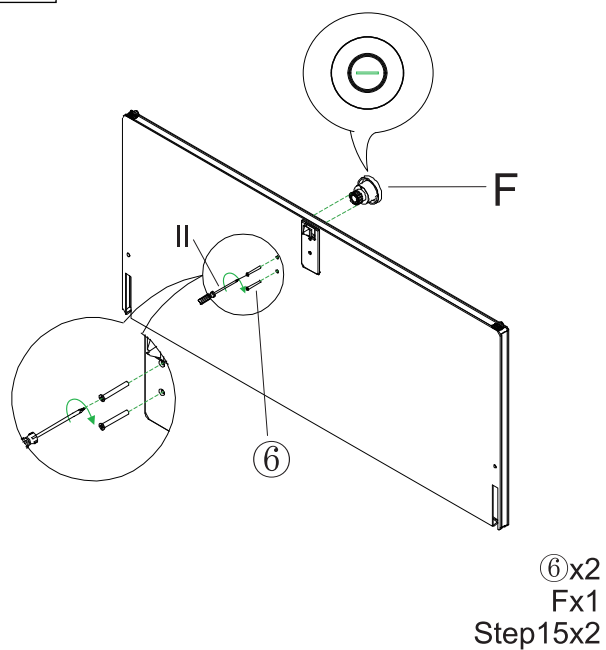


Step16

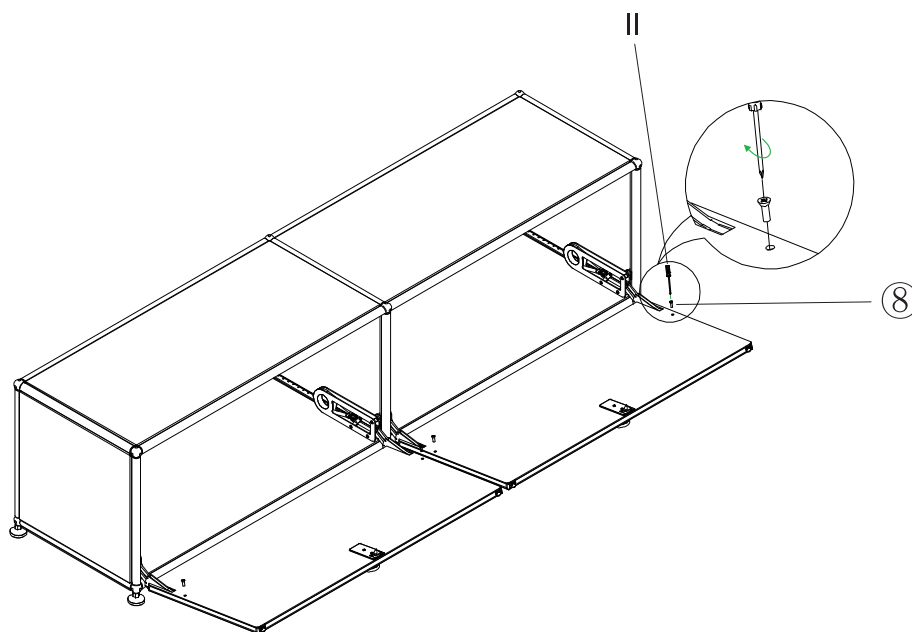


How to use the lock

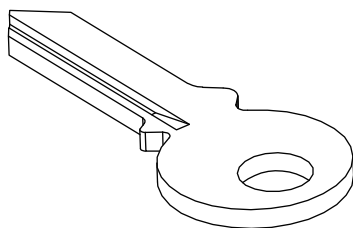

Including 2 keys

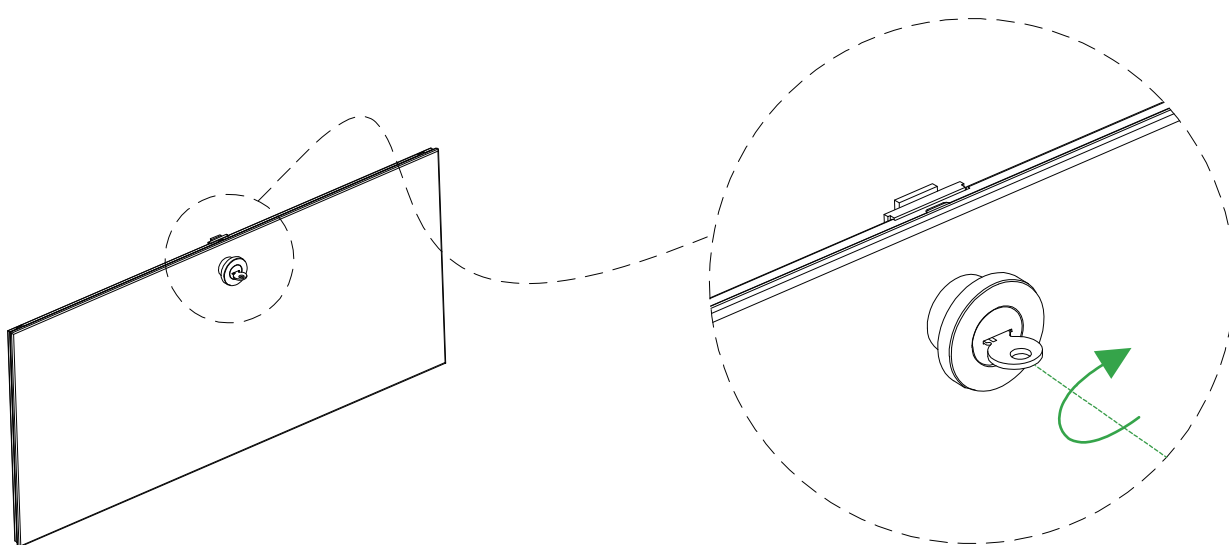

Turn clockwise to unlock

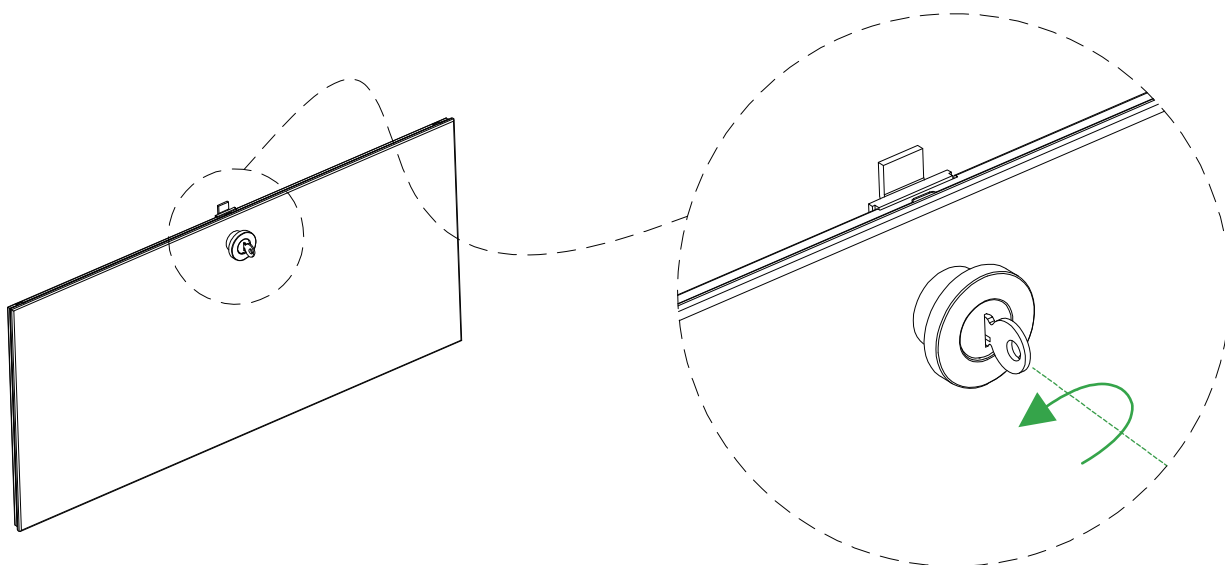

Turn counterclockwise to lock