
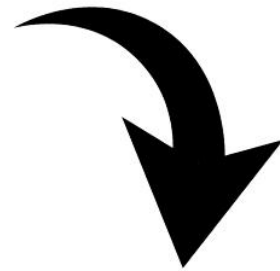


Installation Instructions for Modern Sintered Stone Desk


1. Pre-installation Preparation

Check parts: 1× sintered stone tabletop, 1× stainless steel curved support, 1× cylindrical storage cabinet, 1× screw pack.

2. Installation Steps

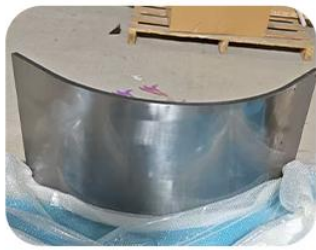

Secure the curved support: Lay the stainless steel curved support flat, align with the pre-drilled holes on the right side of the tabletop, and fasten with screws initially.

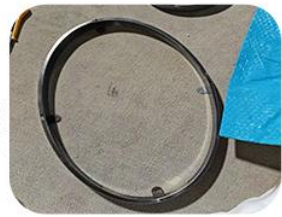

Install the storage cabinet: Place the cylindrical storage cabinet on the left side of the tabletop, align with the mounting holes at the bottom, and tighten the screws to secure.



3. Notes

Handle the sintered stone tabletop with care during installation to avoid chipping the edges.