
ASSEMBLY INSTRUCTIONS:

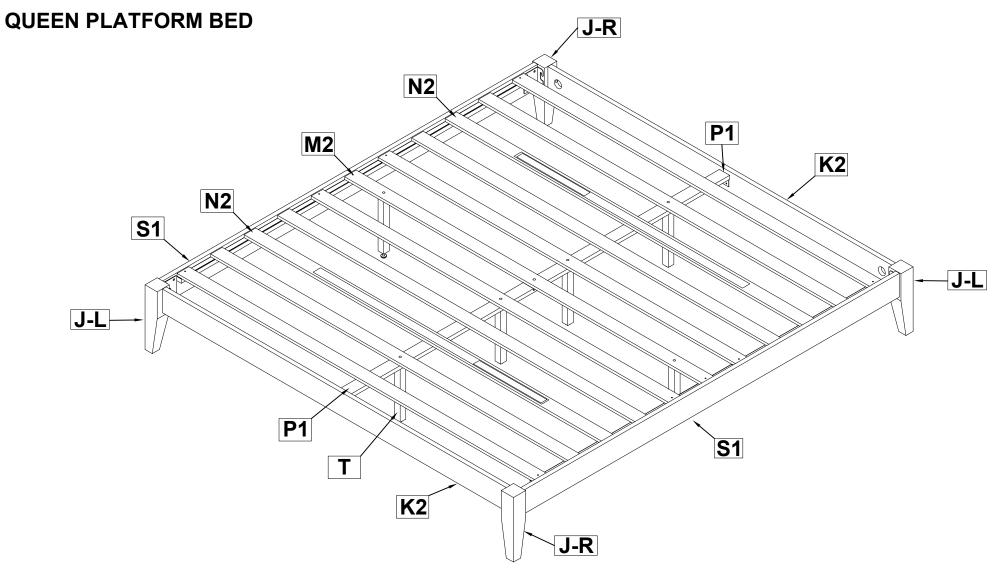

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.

Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

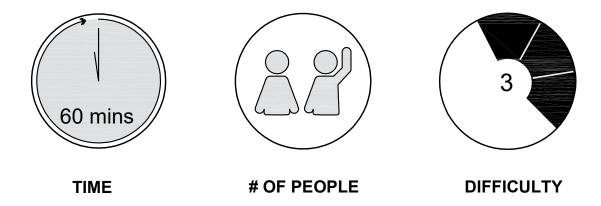


Important: Use hand tools for assembly. Power tools can lead to over-tightening and damage.


Parts List

		- 41.00			
CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
K2 Footboard	0 0	2 pcs	P1 Middle Cross S	lats	2 pcs
S1 Side Rails		2 pcs	N2 Slats		2 rolls
J-L Left Leg		2 pcs	M2 Slat	· · ·	1 pc
J-R Right Leg		2 pcs	T Support Legs		6 pcs


Hardware List


CODE	DESCRIPTION	QTY	CODE DES	CRIPTION	QTY
1 Dowel Ø10x1-5/8"		9 pcs	9 Allen Key		1 pc
2 Bolt Ø5/16"x2"		6 pcs	10 Screw #8x1/2"		8 pcs
3 Bolt Ø5/16"x1"	(a)))))))))))	8 pcs	11 Screw #8x1-1/4"		10 pcs
4 Bolt Ø1/4"x1"	(b))))))))))))	1 pc	12 Bolt Ø5/16"x3"		4 pcs
5 Nut Ø1/4"		1 pc	13 Curved Washer Ø5/16"		4 pcs
6 Spring Washer Ø5/	16"	12 pcs	14 Nut Ø5/16"		4 pcs
7 Flat Washer Ø5/16"	/x3/4"	14 pcs	15 Wrench		1 pc
8 L Bracket		2 pcs	16 Philips Head Screwdrive	r •	1 pc

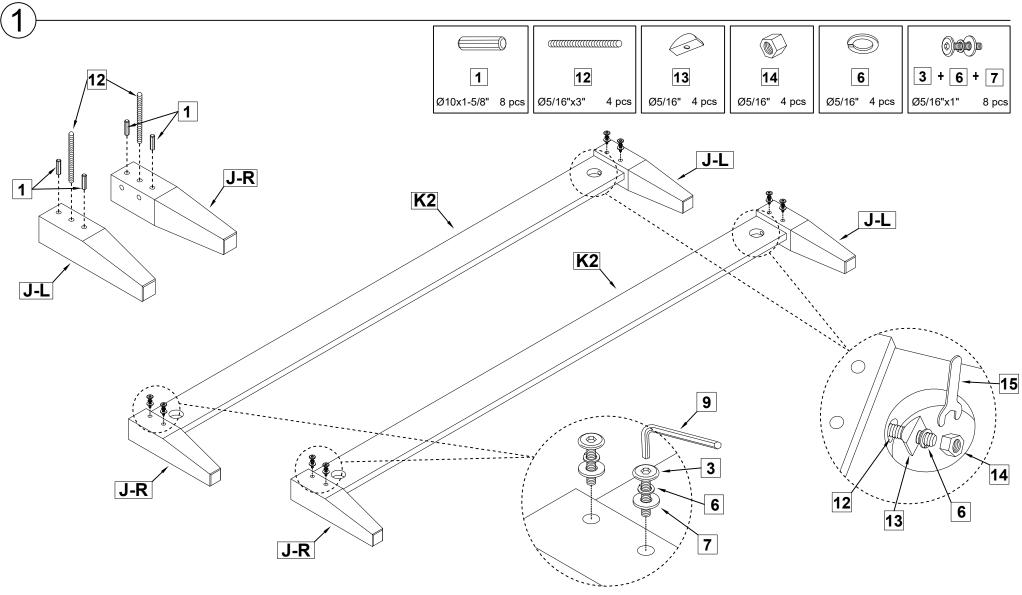

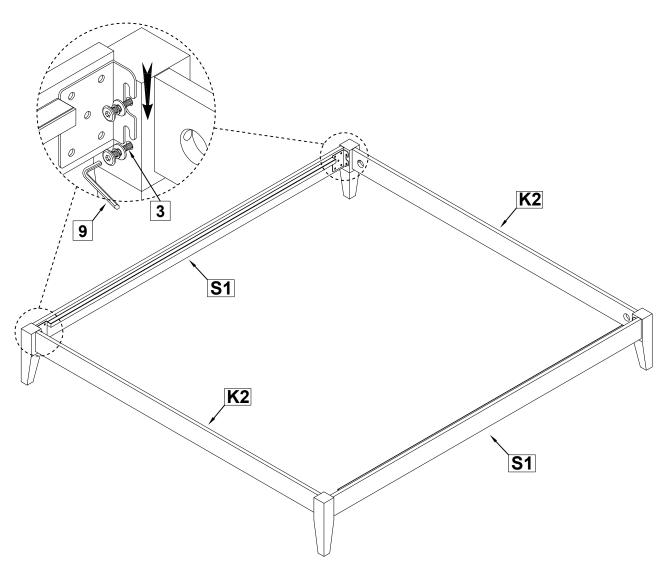


(3)

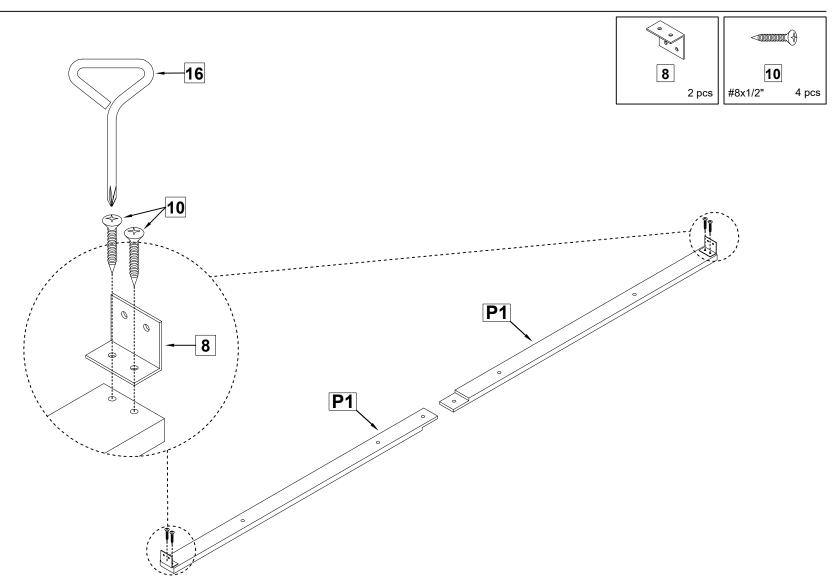

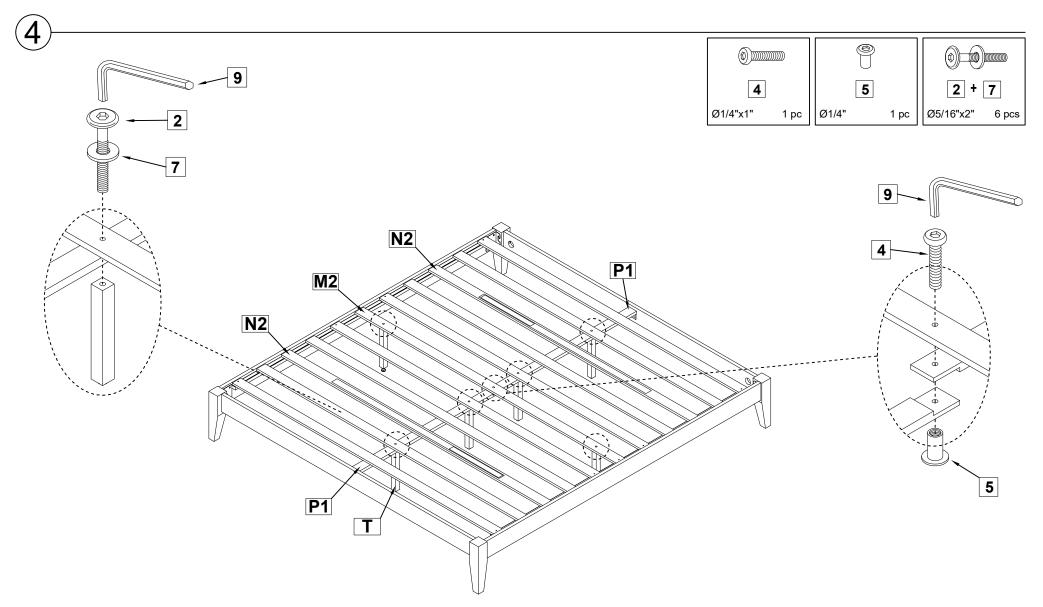



If you're having difficulty, our friendly Customer Care team is always here to help.

After the slat system is assembled, place the slats into the frame of the bed as shown, and velcro the slats to the cleat of side rail as shown below.

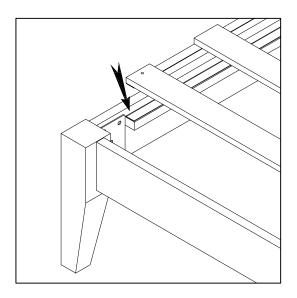

Velcro the ends of slat to the cleats of side rail

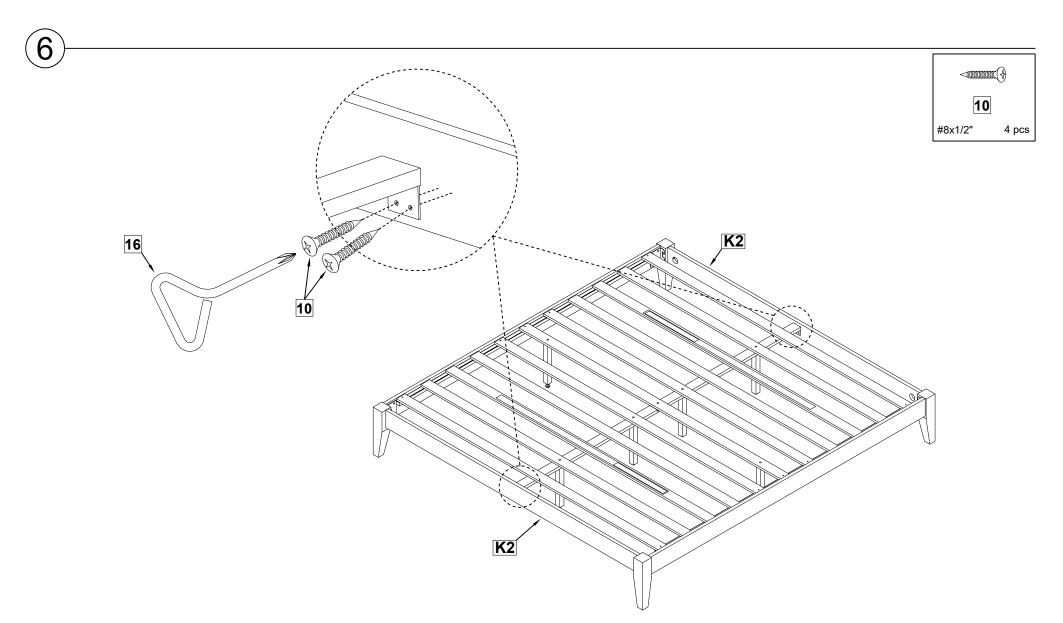

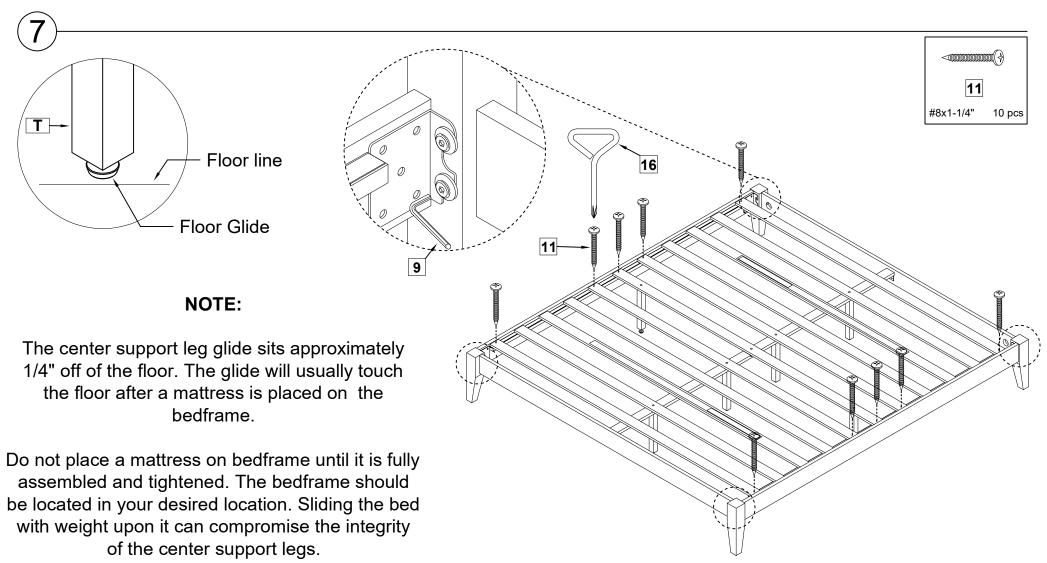

You're all finished! Sweet dreams!