


ASSEMBLY INSTRUCTIONS

HZQD-V2


FTOFOD-6006
FTOFOD-6033
FTOFOD-6034
FTOFOD-6035





























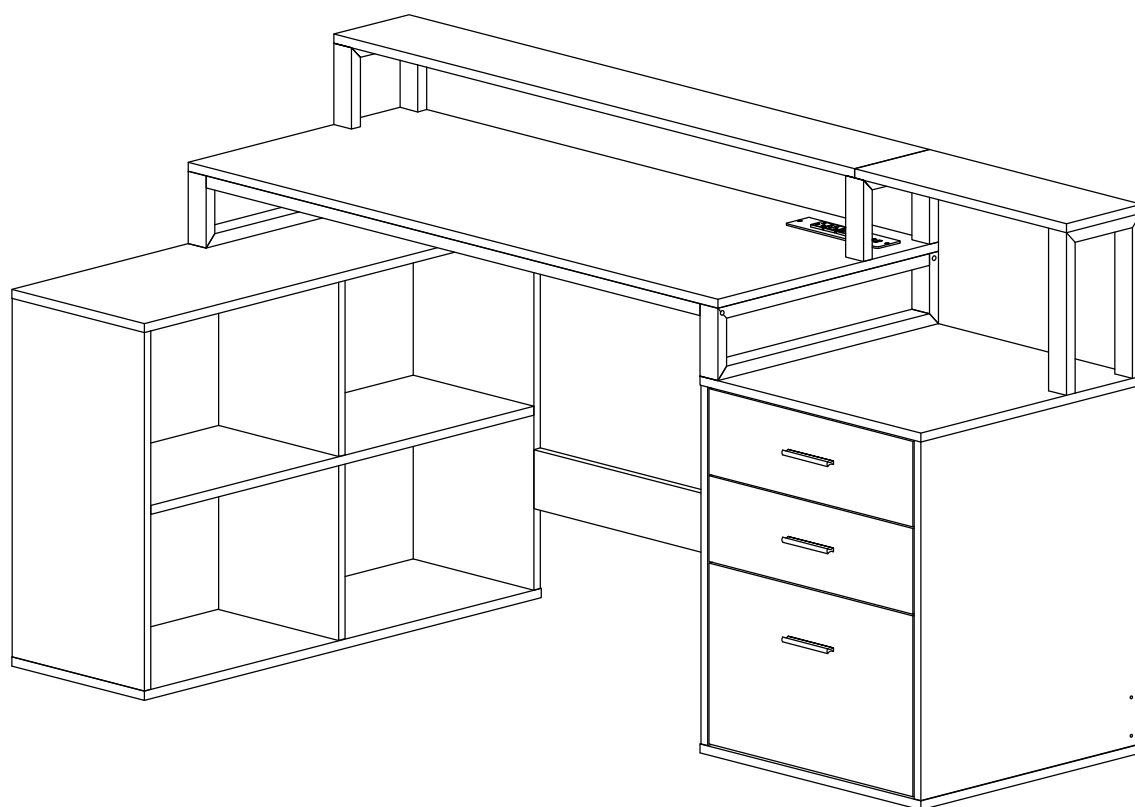















COMPUTER DESK

Notice:

1. Follow the installation instructions. Please confirm all accessories are present before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only after all pieces are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

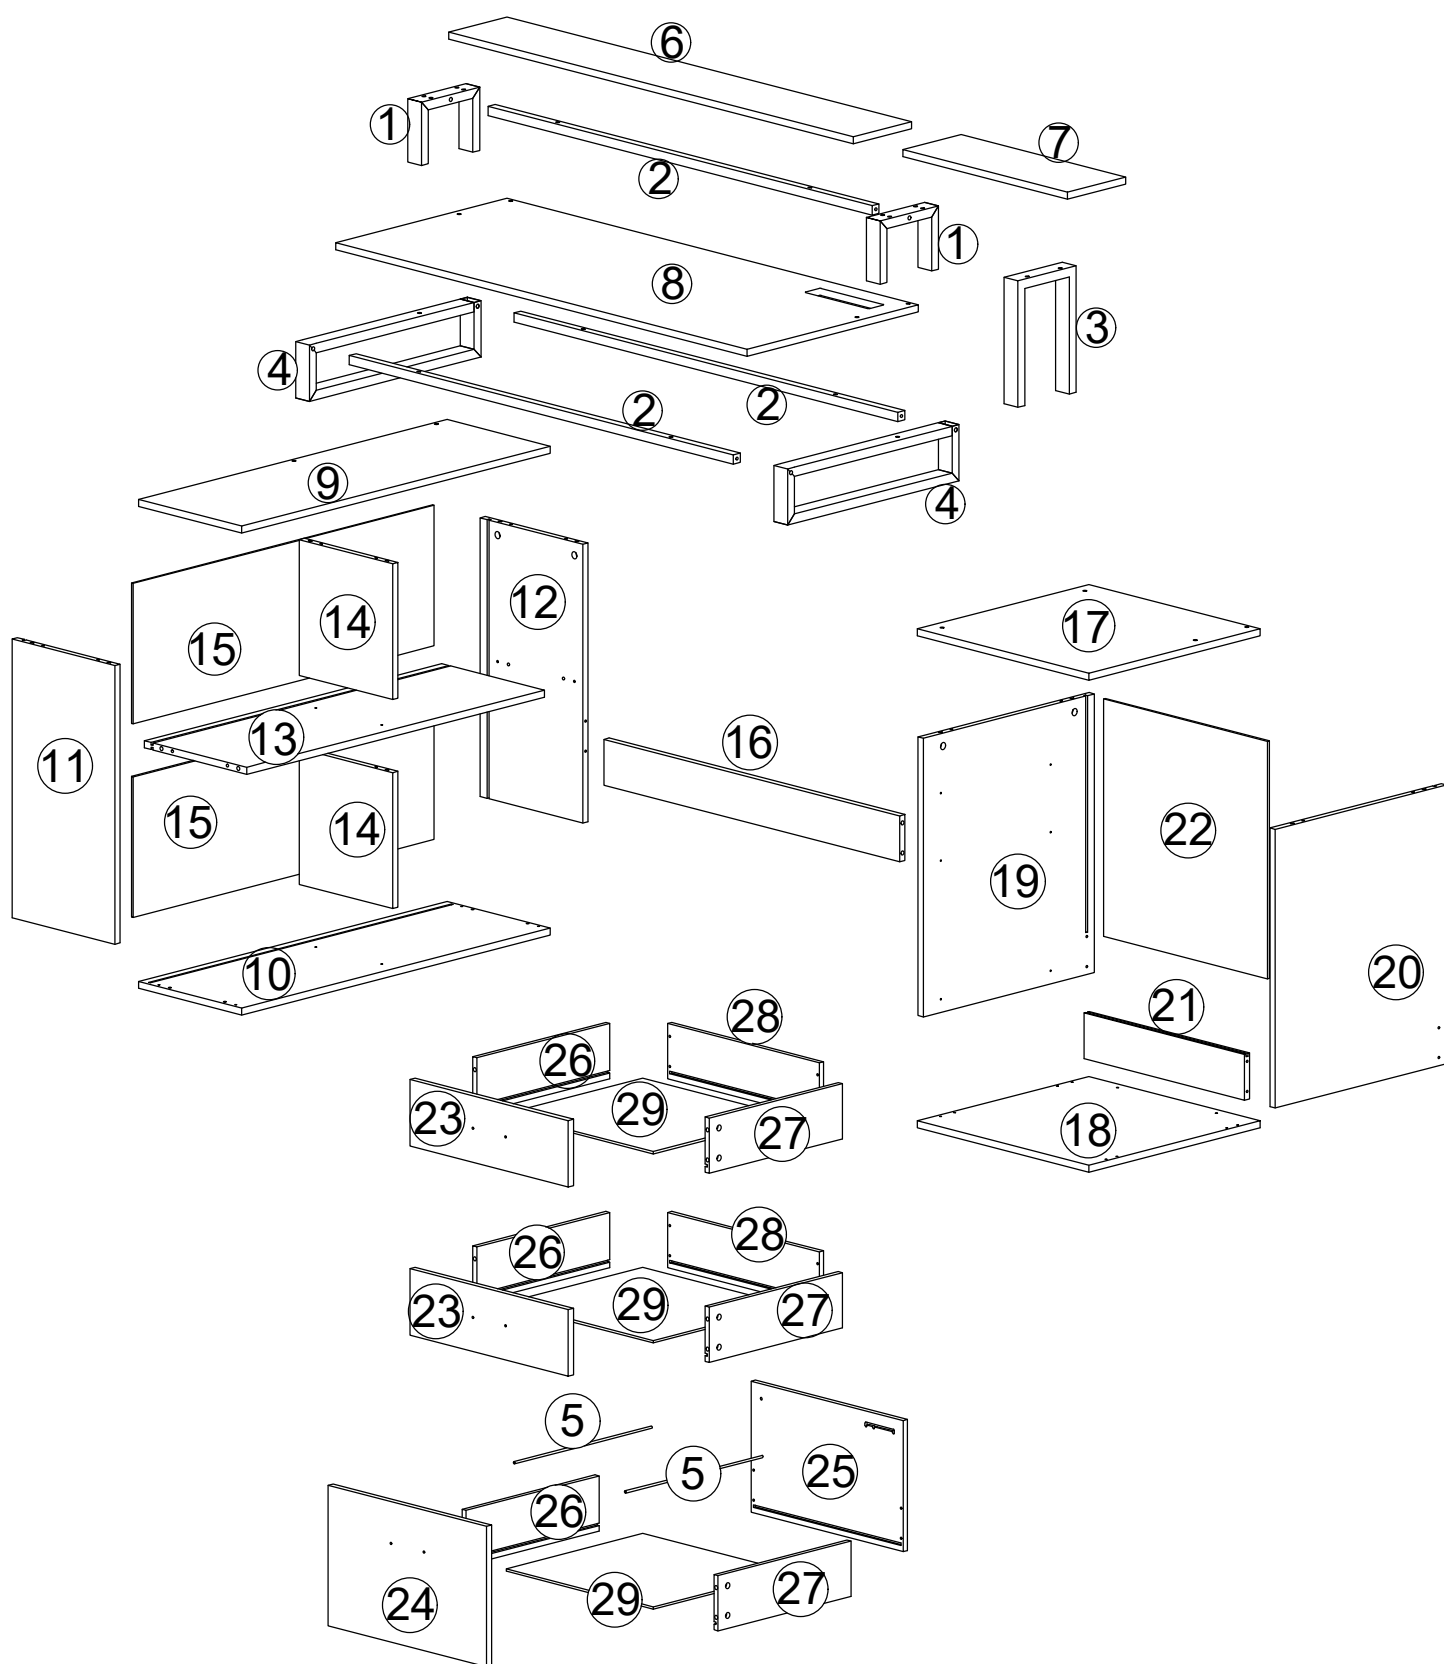


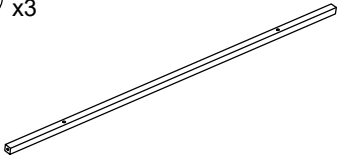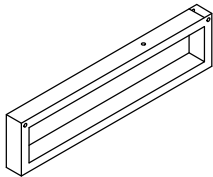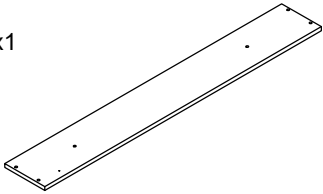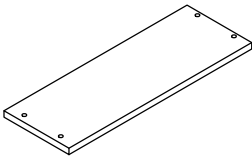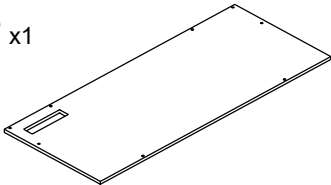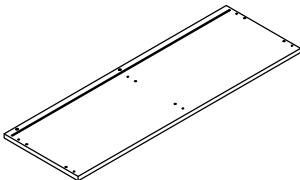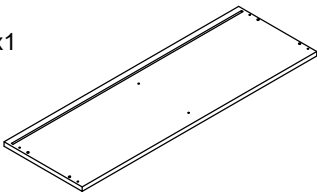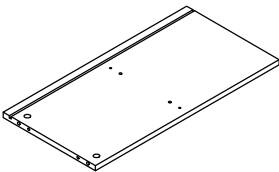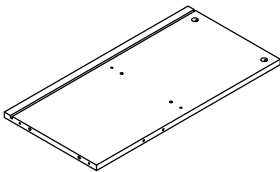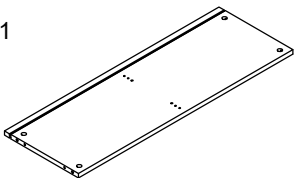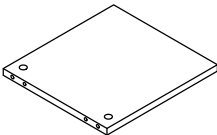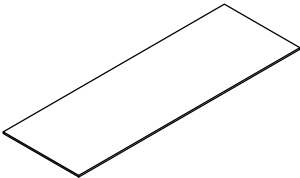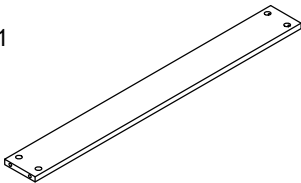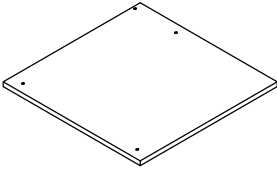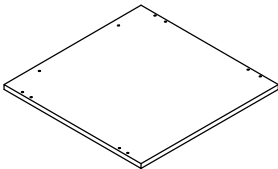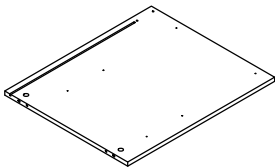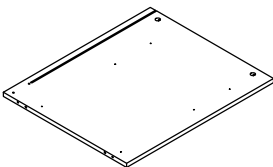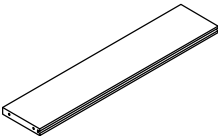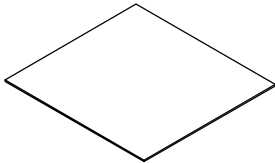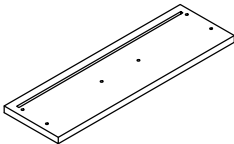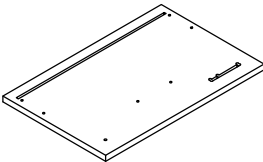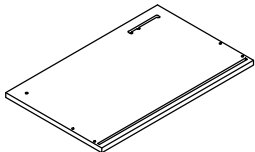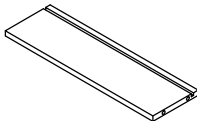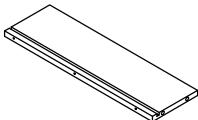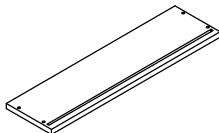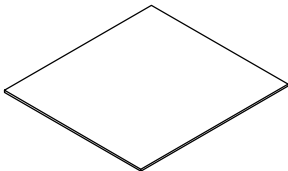① x2 	② x3 	③ x1 
④ x2 	⑤ x2 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x2 	⑮ x2 
⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 
㉒ x1 	㉓ x2 	㉔ x1 
㉕ x1 	㉖ x3 	㉗ x3 
㉘ x2 	㉙ x3 	

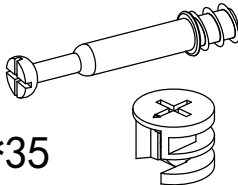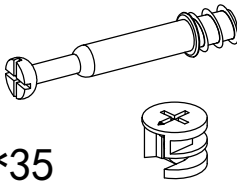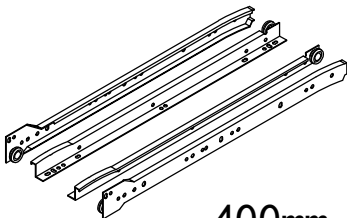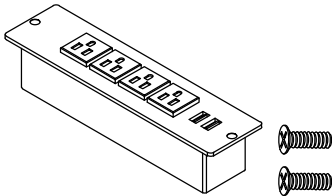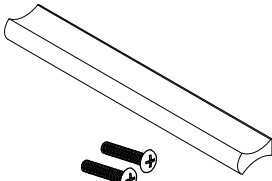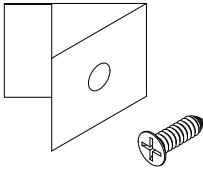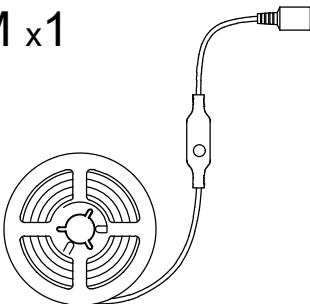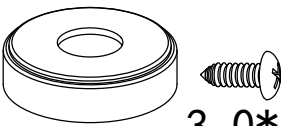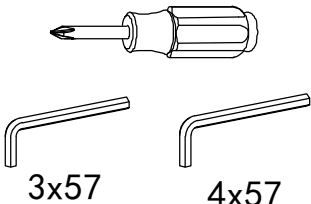
A x30+2  ø5*40	B x8+1  M6*60	C x4+1  M6*35	D x18+2  M6*28
E x24+2  ø6*35	F x20+2  6*35 ø15*11.5	G x12+2  6*35 ø12*9.5	H x 3  400mm
I x31+4  3.5*12	J x 1  M4*10=2	K x3  M4*18=6	L x 12+2  3.0*14
M x1 	N x10  3.0*12	O x1  6.4mm	TOOL  3x57 4x57

Don't confuse left and right hardware.

CL+DL

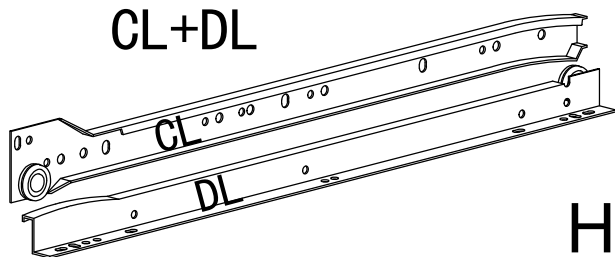


CR+DR

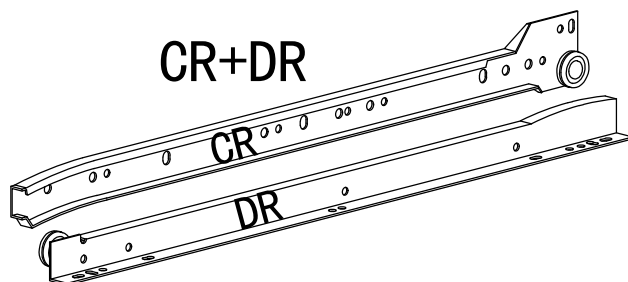


H x 3

Attention

Be sure to use the proper screws to avoid damaging the parts

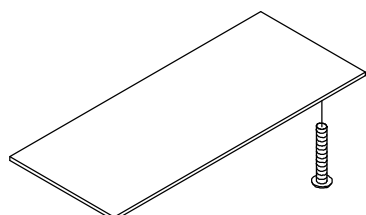


example

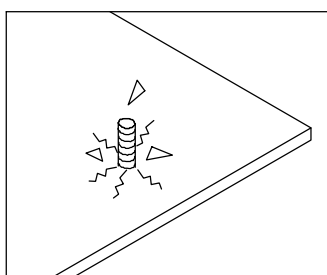

×



Wrong screws can cause the plank to crack

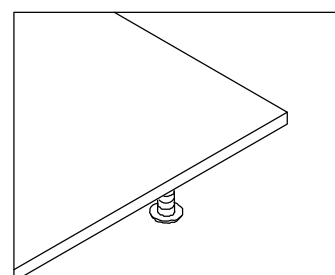



✓

The right screw is the right size


STEP 1

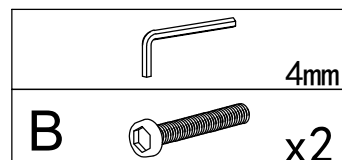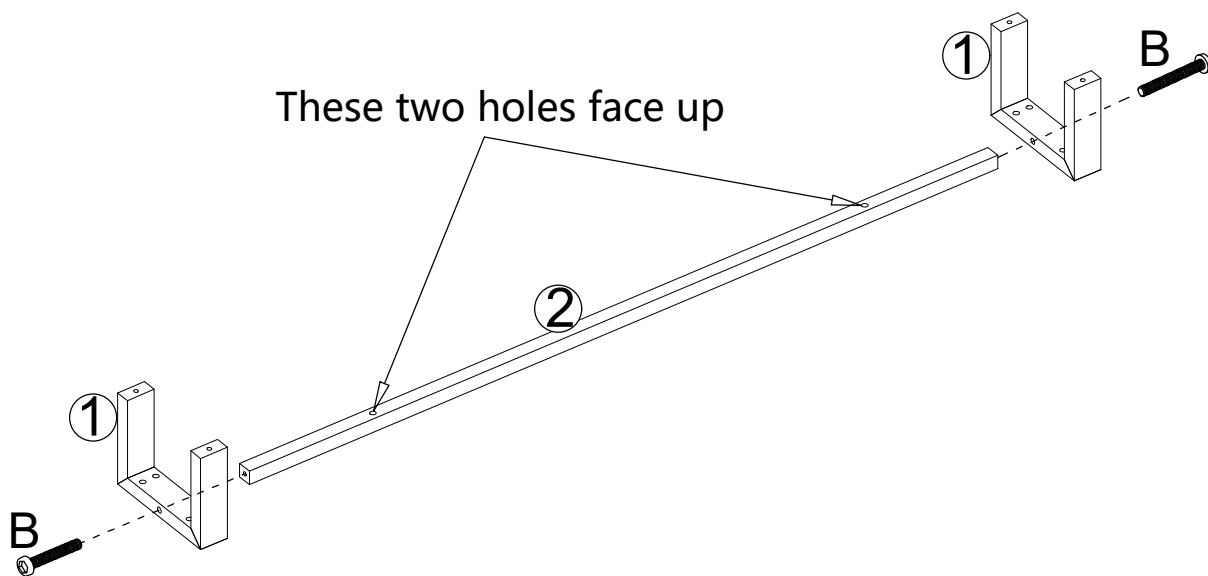



STEP 2

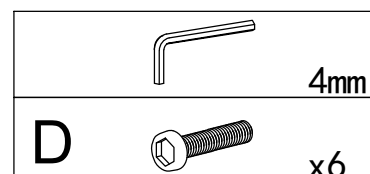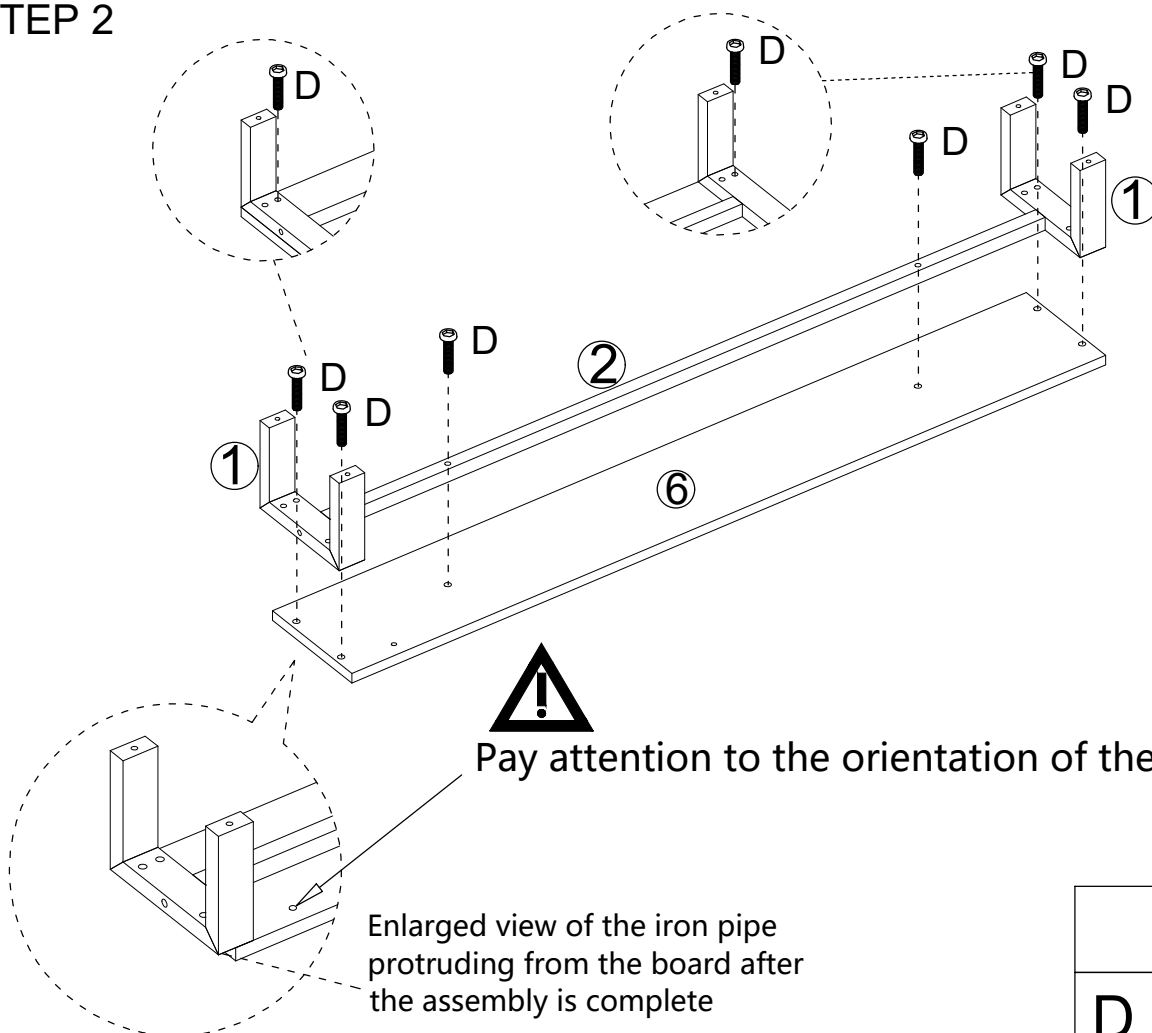


STEP 3

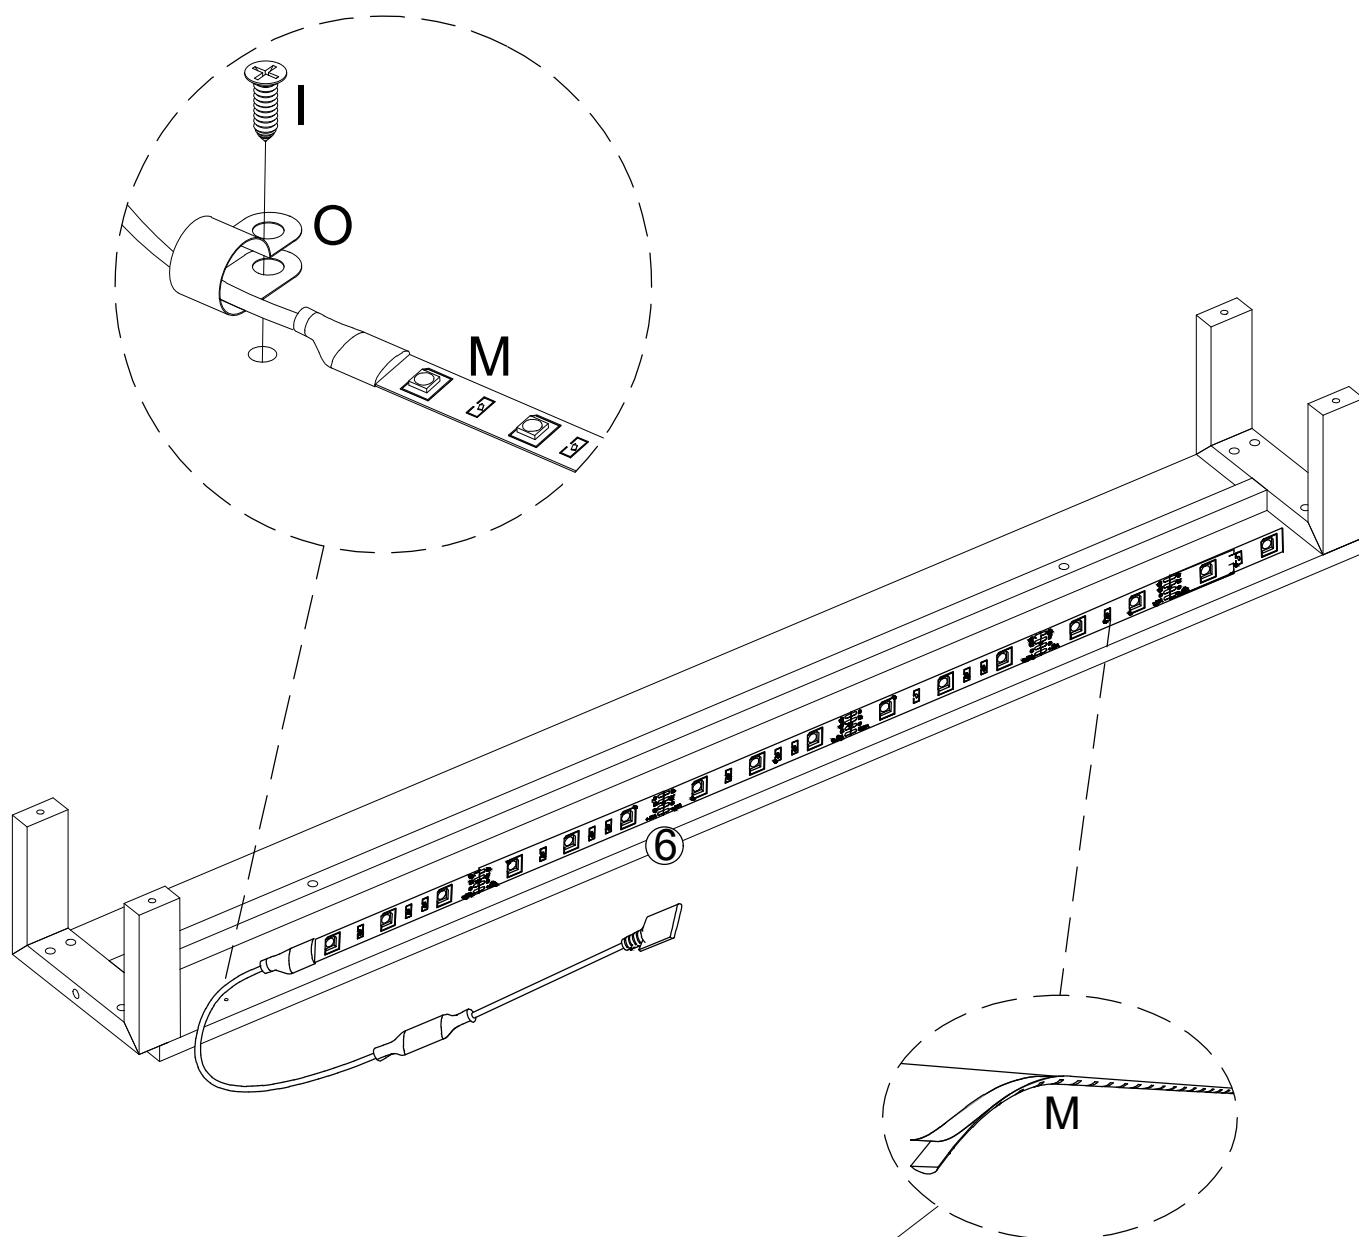

Tear off the adhesive tape, put the sticky side upward, and apply it to the back of No. 6 board.

		
I		x1
O		x1
M		x1


STEP 4

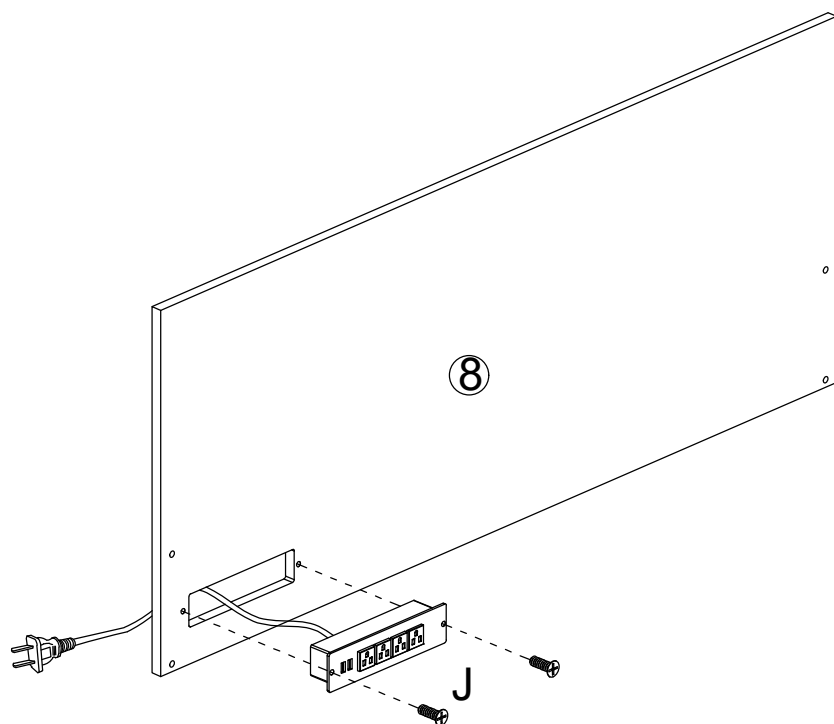

J		x1
J		x2

STEP 5


The iron pipe protrudes on the same side as the electrical outlet


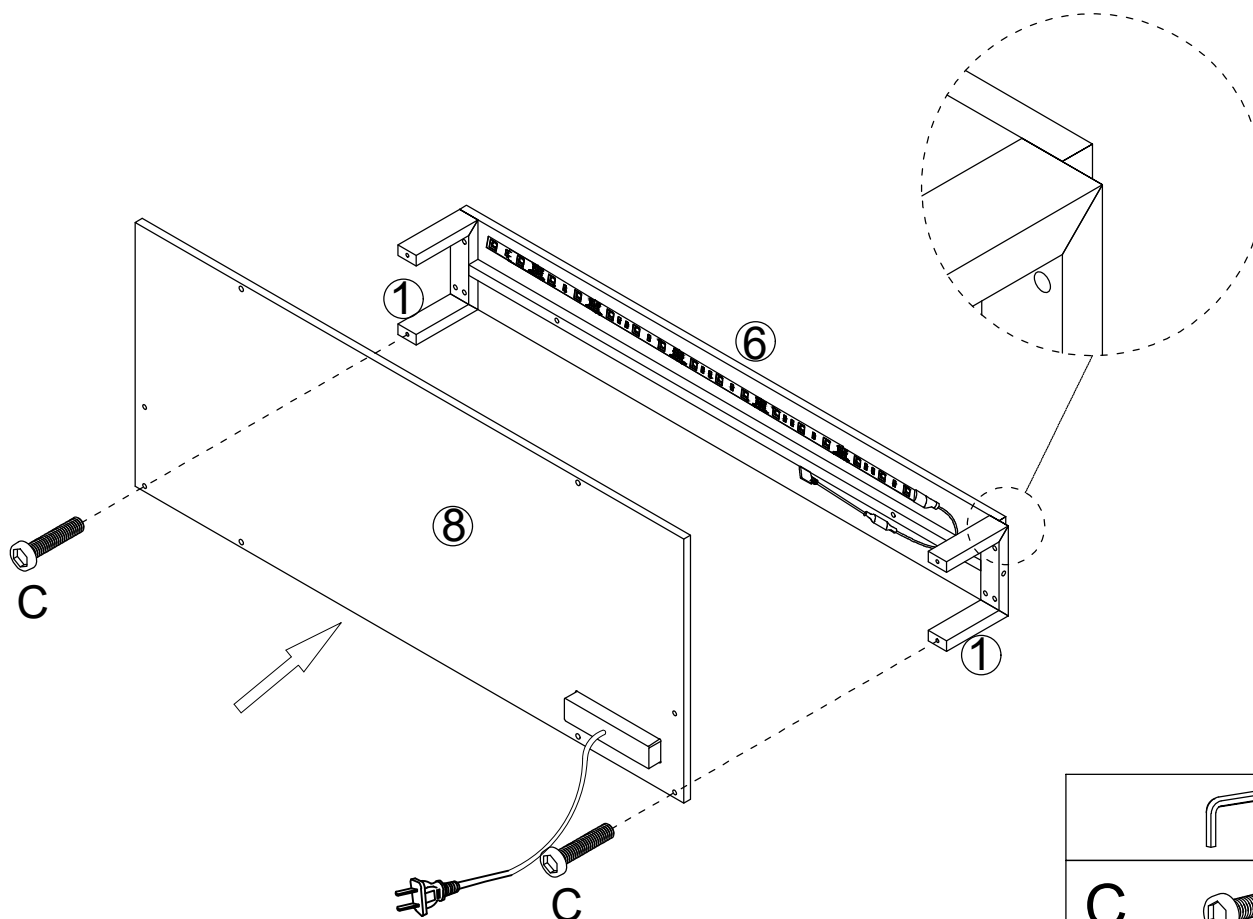


		4mm
C		x2


STEP 6




Note: This location is empty.

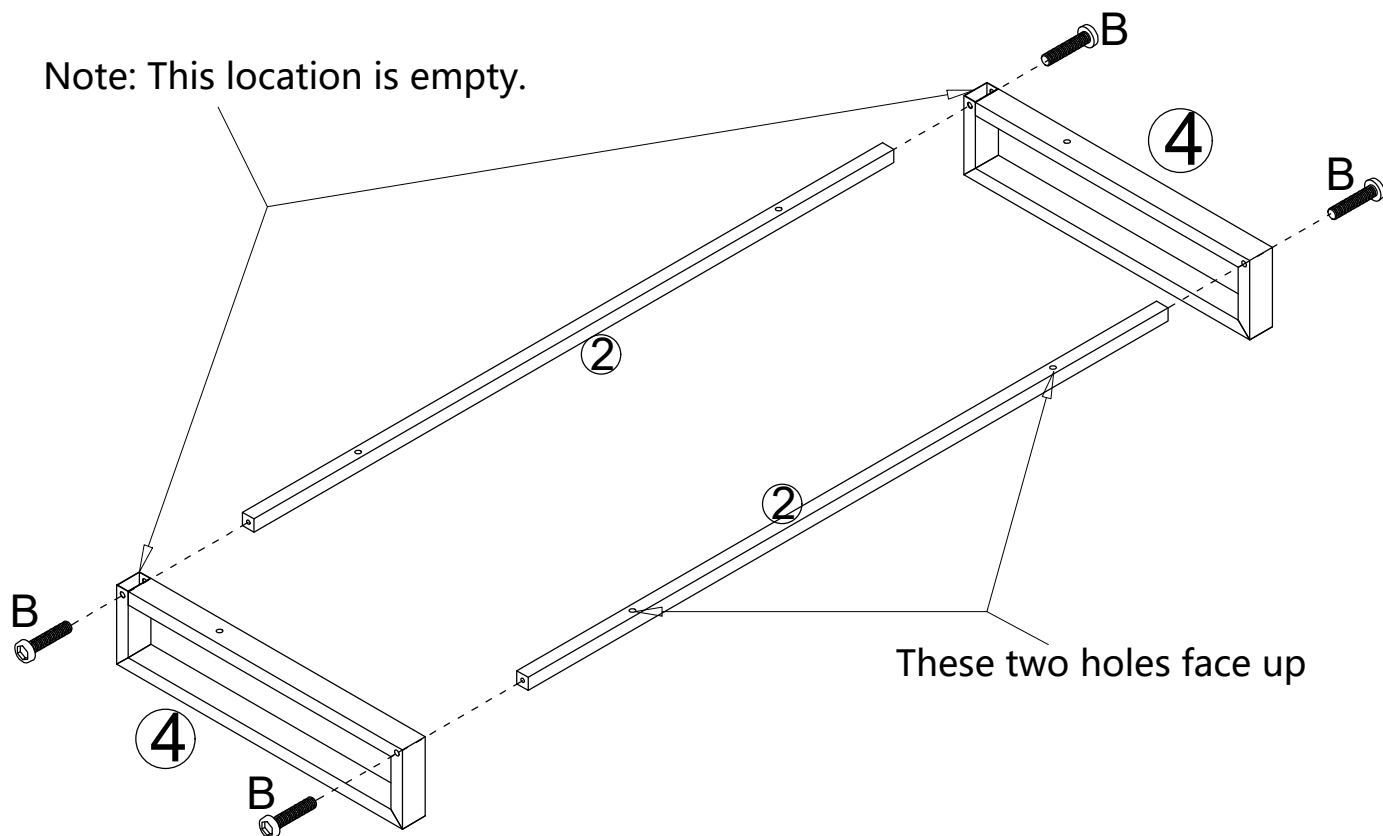


		4mm
B		x4

STEP 7

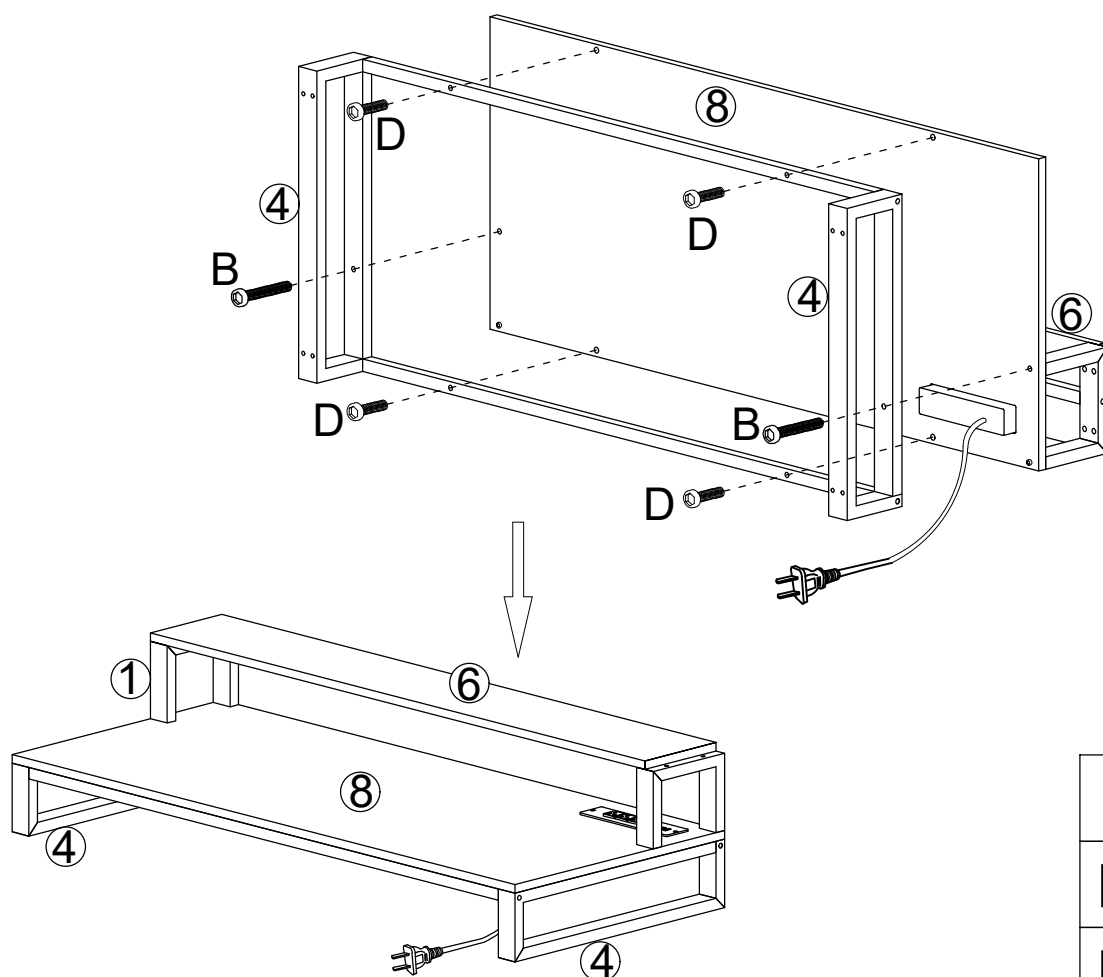


		4mm
D		x4
B		x2



STEP 8

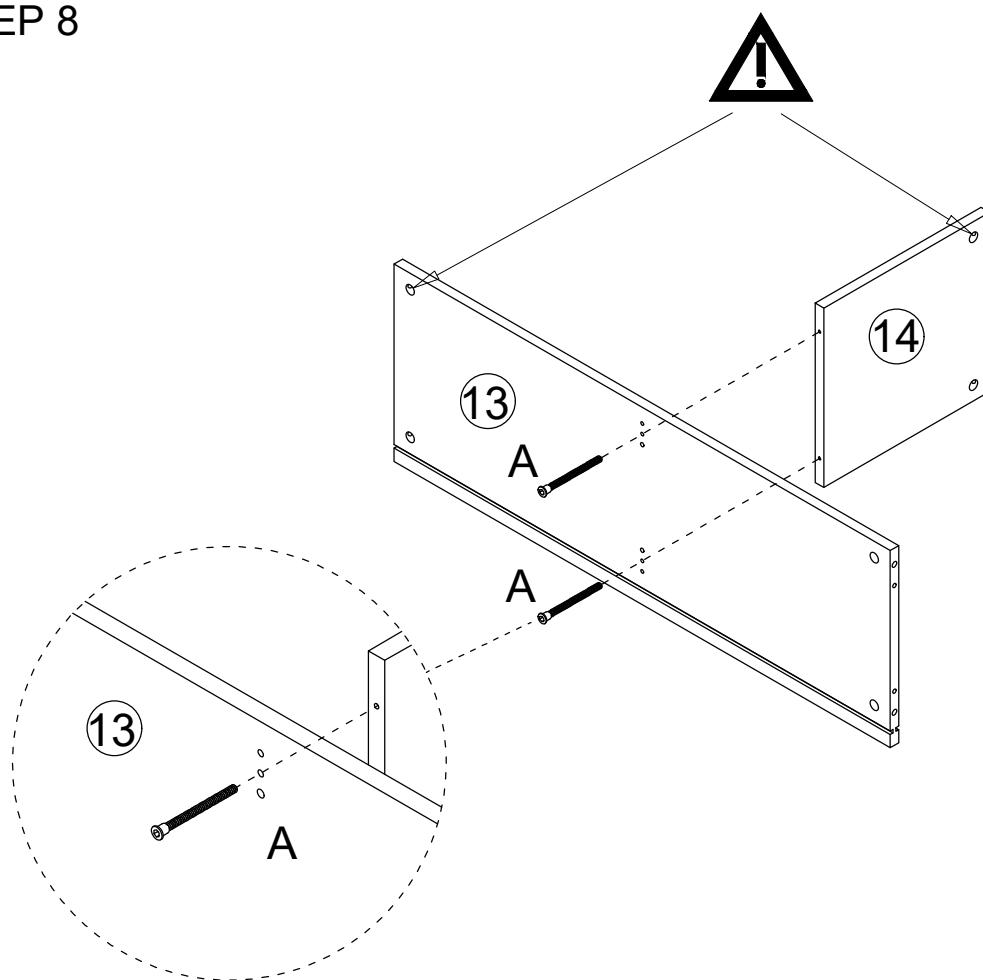

		3mm
A		x2

STEP 9

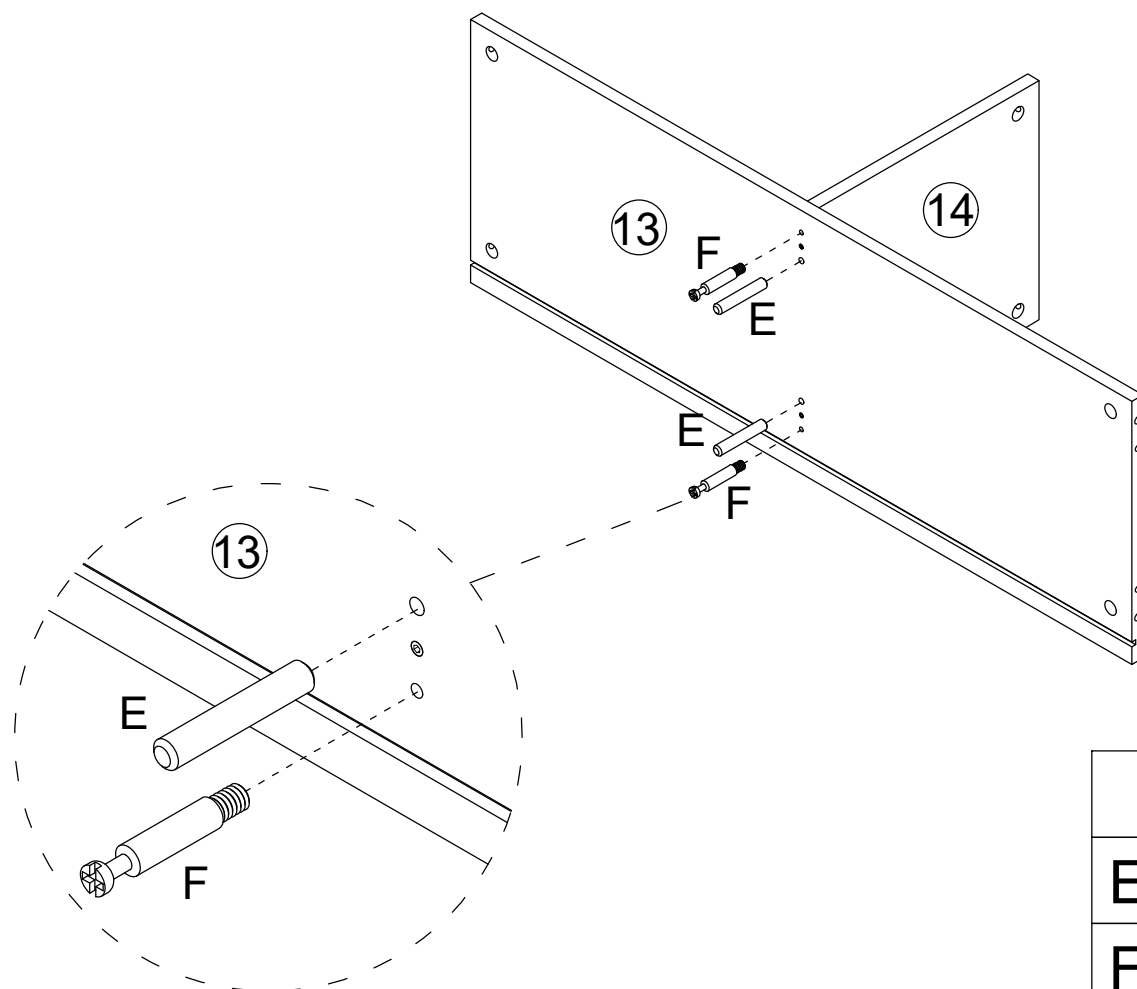


		
E		x2
F		x2

STEP 10



Pay attention to the orientation of the holes

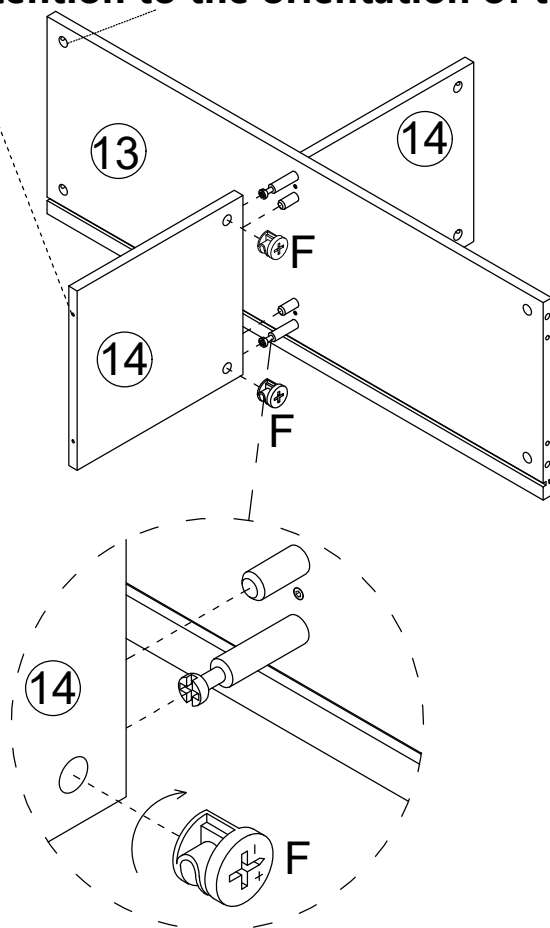


F




x2

STEP 11

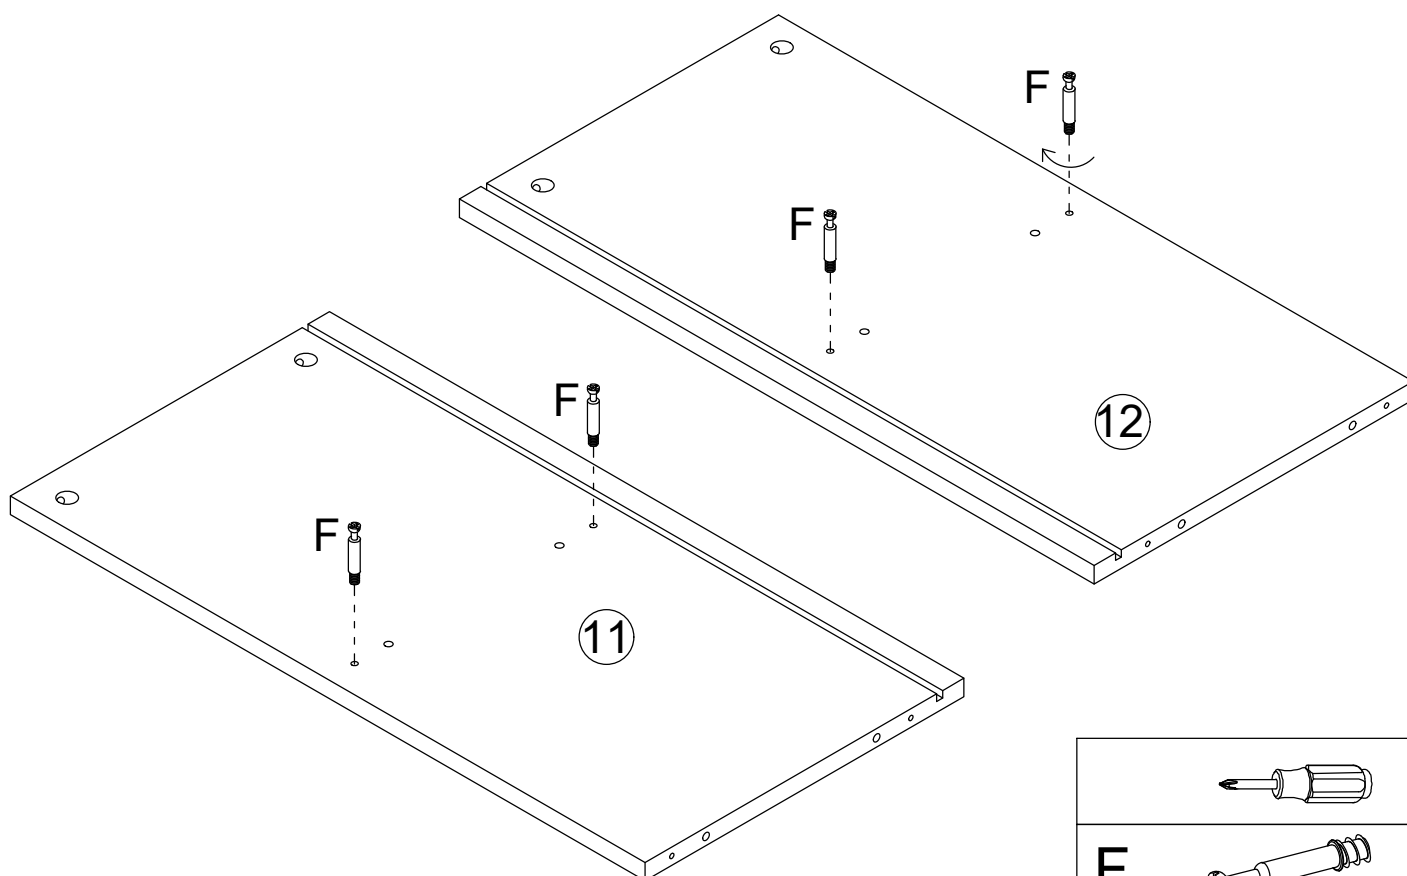


F




x4



STEP 12

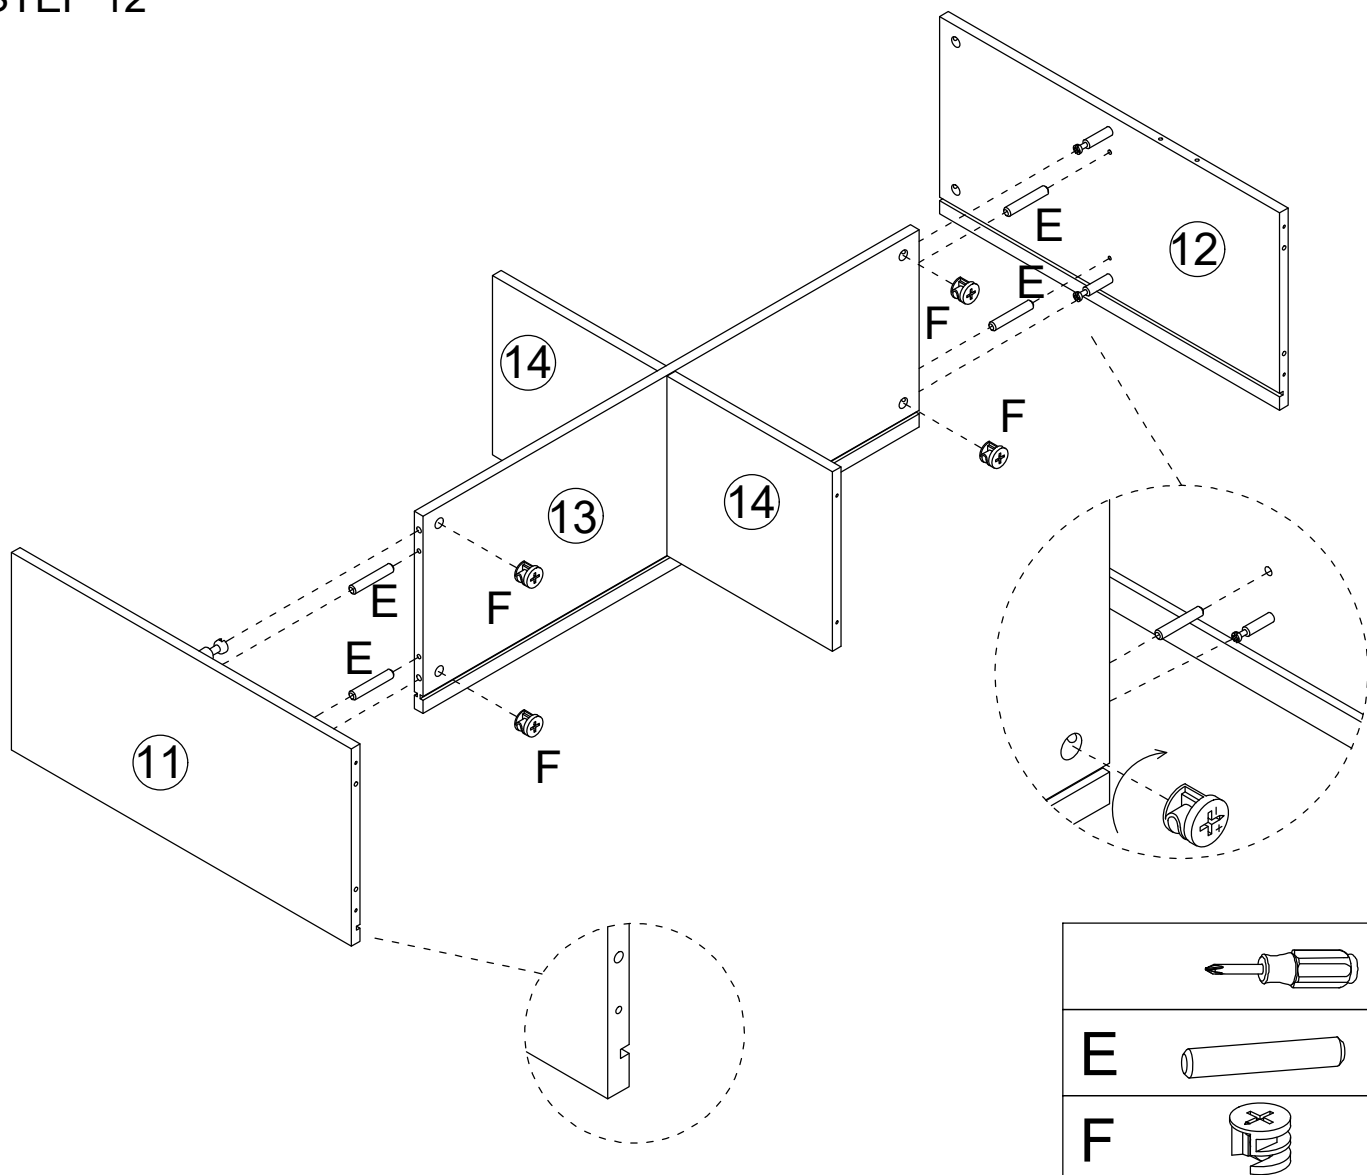

STEP 13

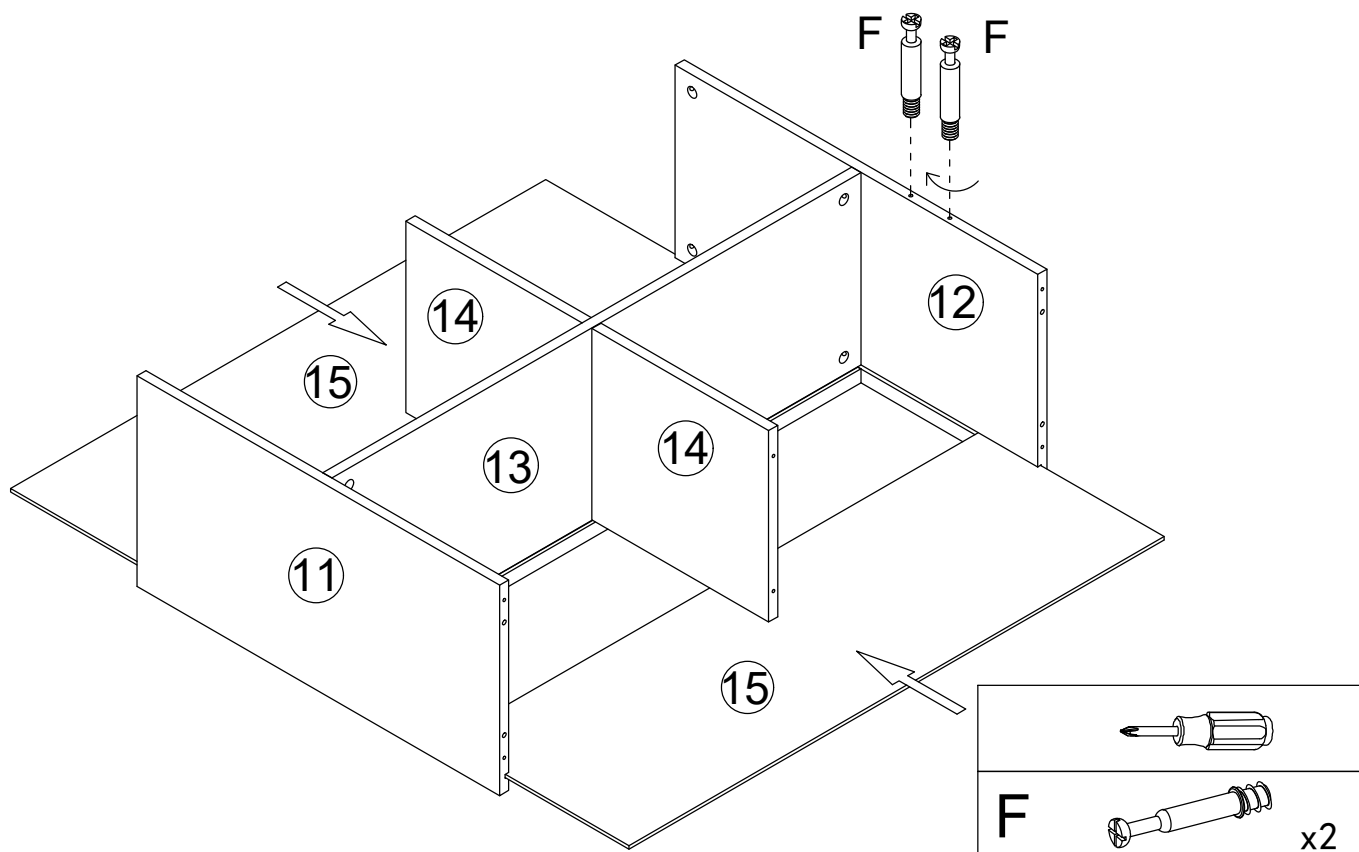

STEP 14

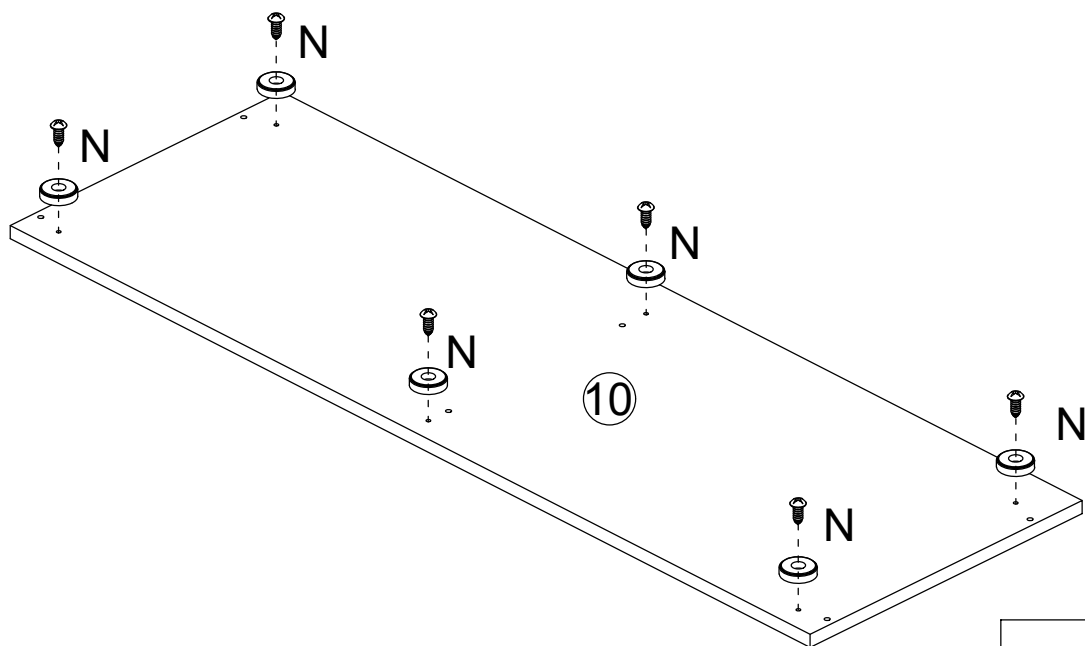


N



x6

STEP 15

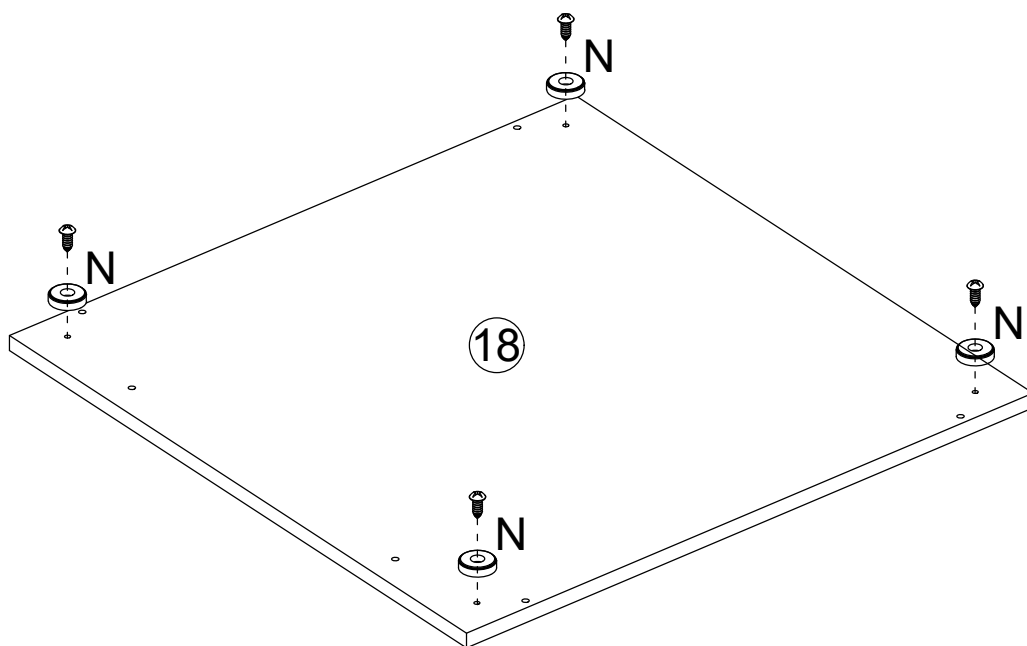



N




x4

STEP 16

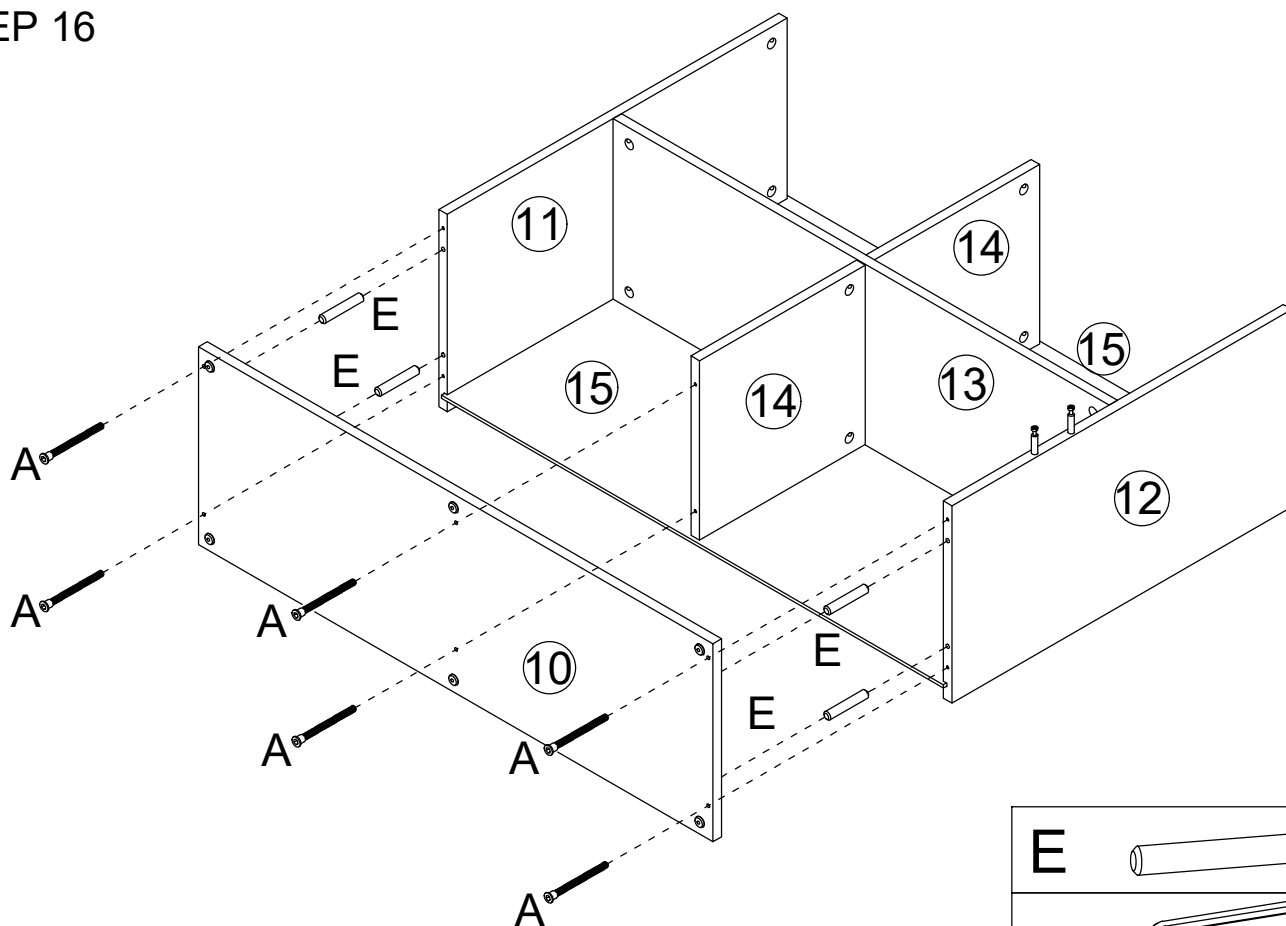


E		x4
		3mm
A		x6

STEP 17

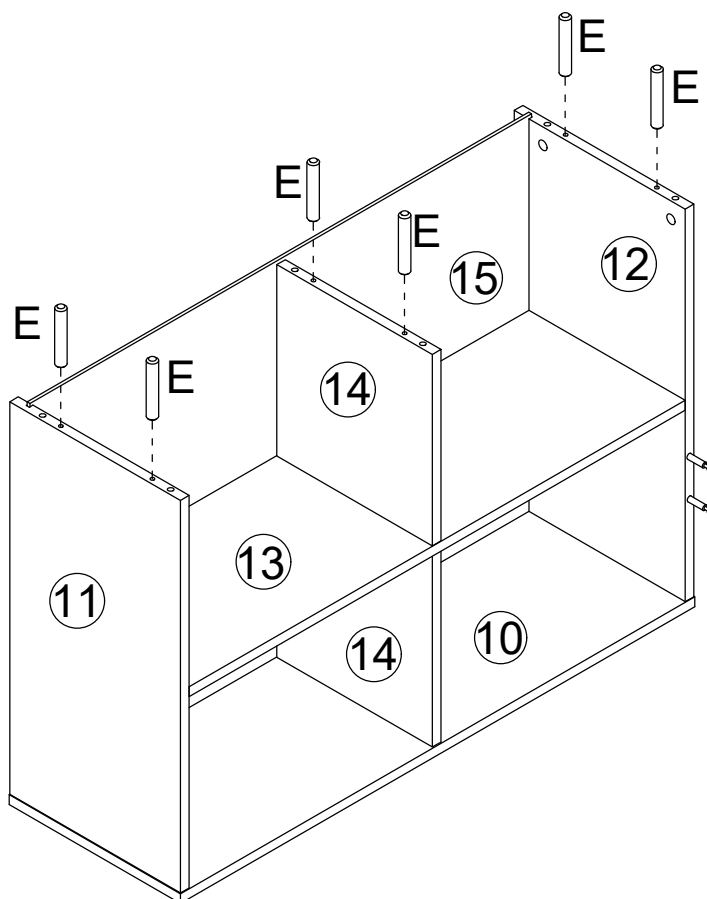


E		x6
---	---	----

STEP 18


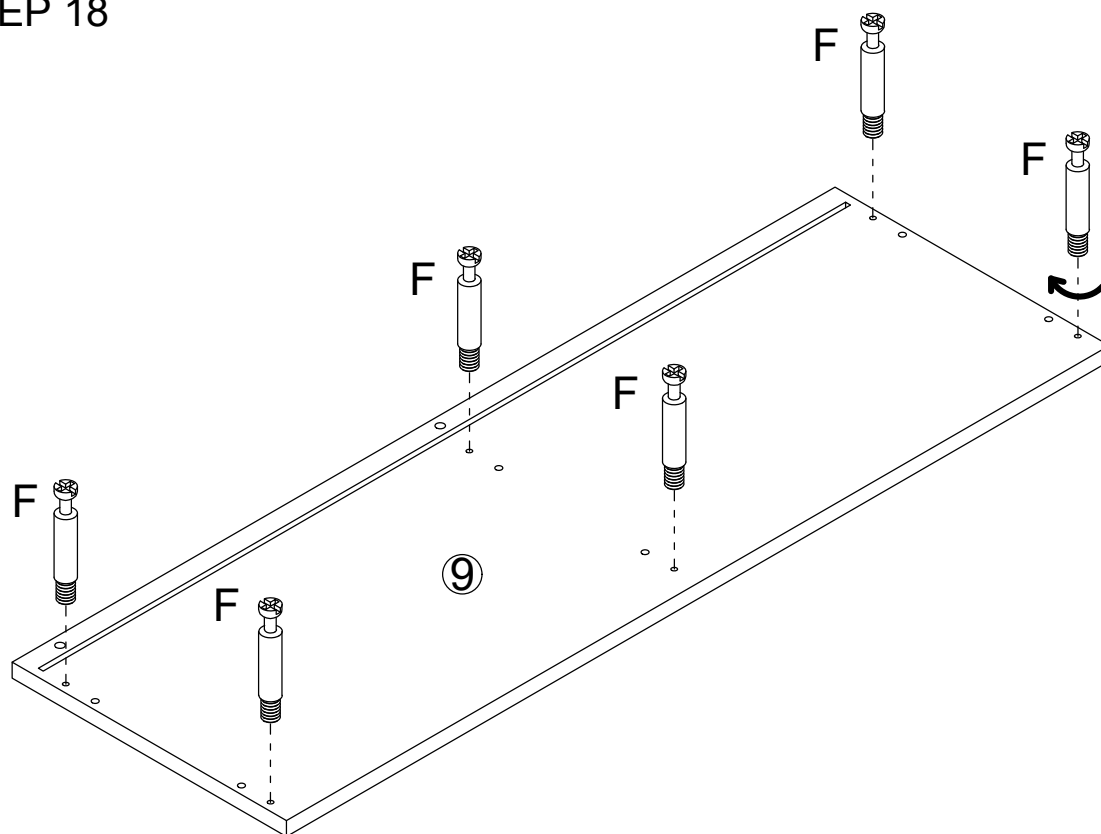


F



x6

STEP 19




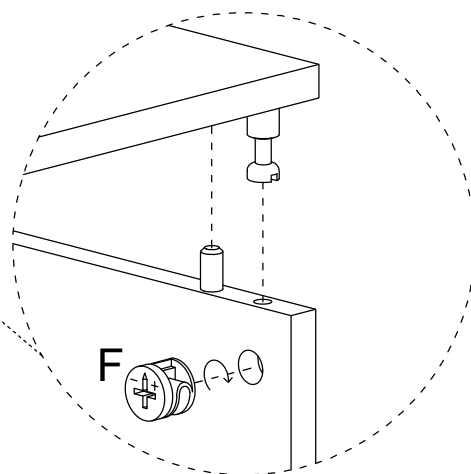
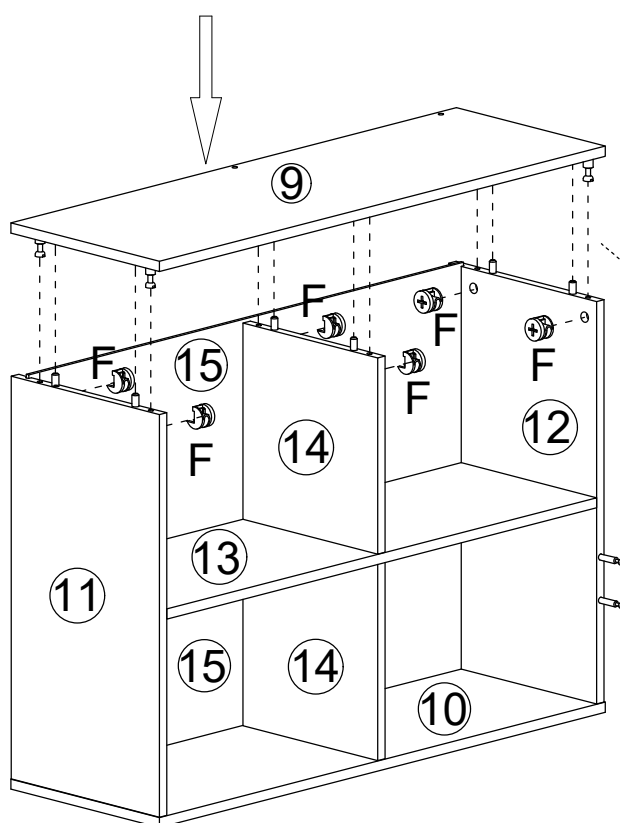


F




x6

STEP 20

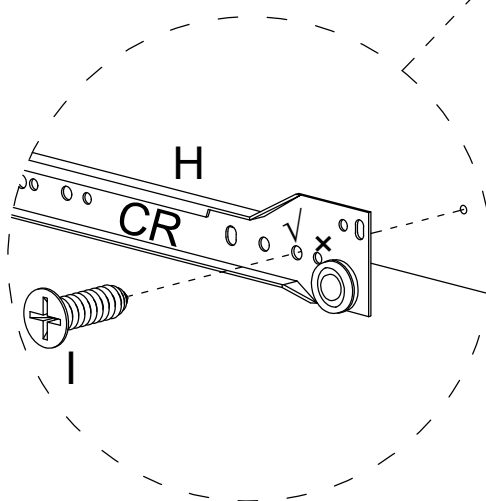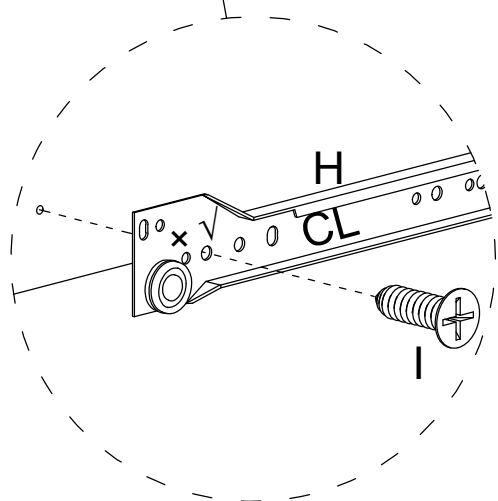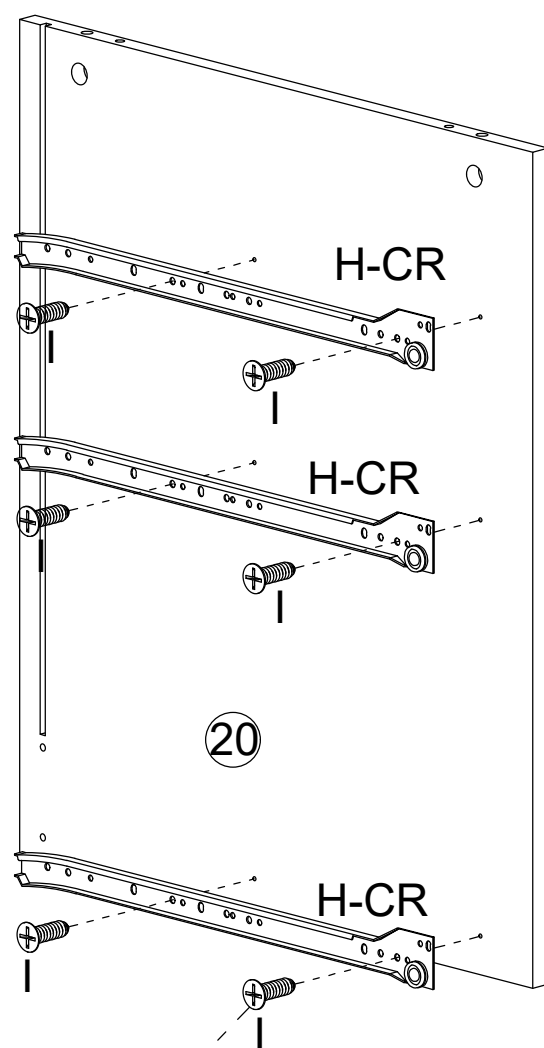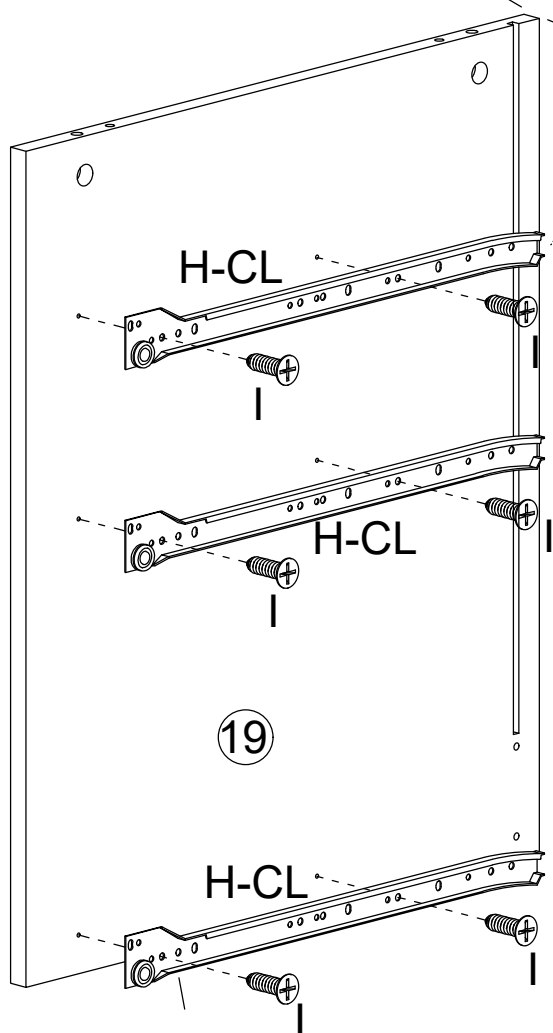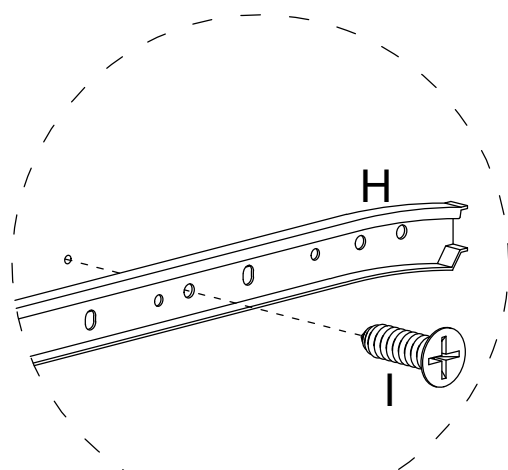


I		x12
H		x3


STEP 21

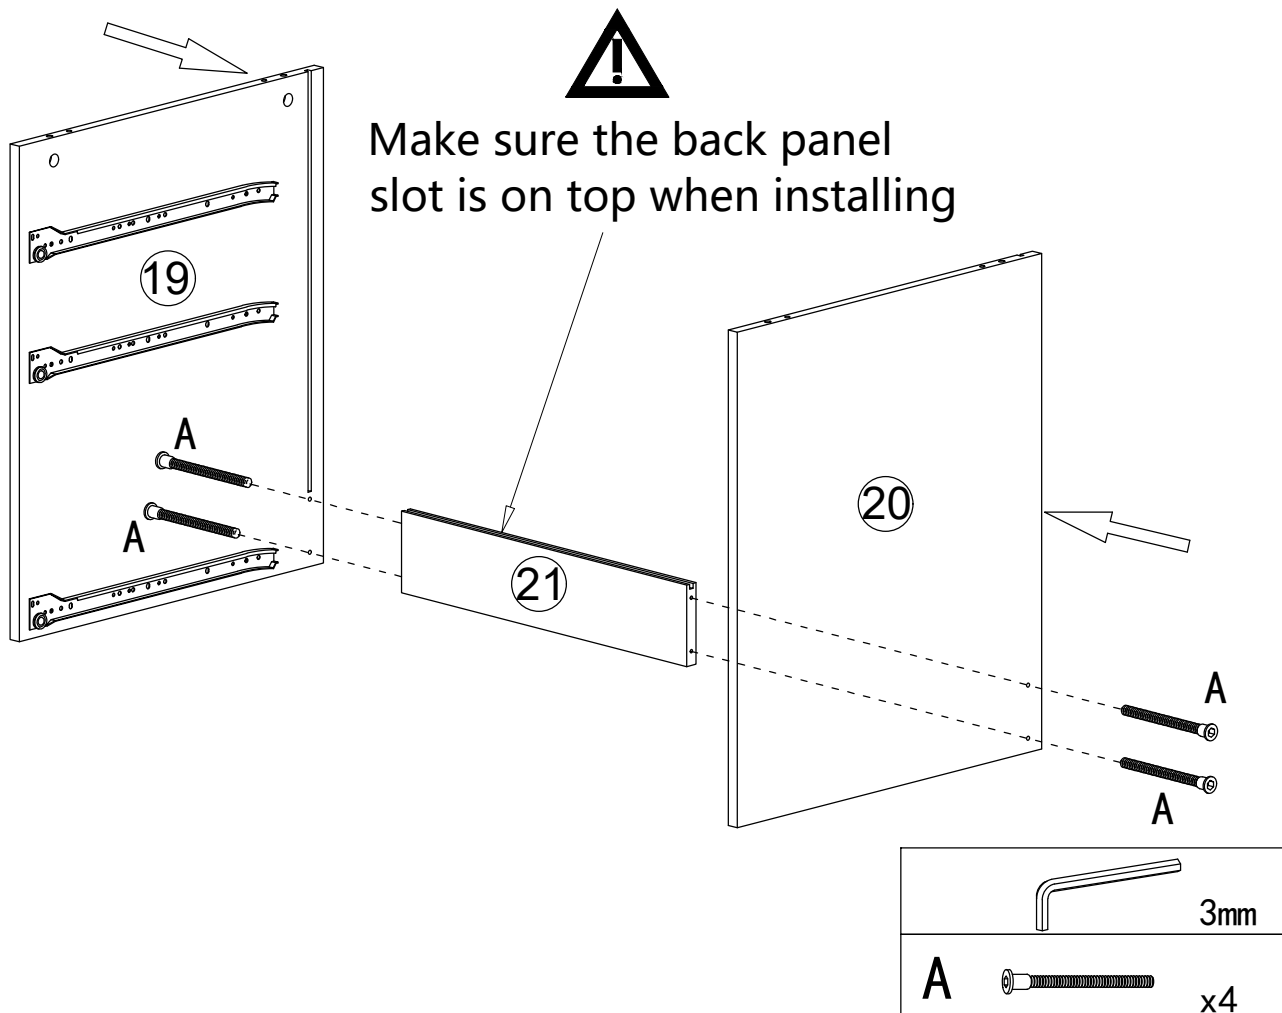


STEP 22

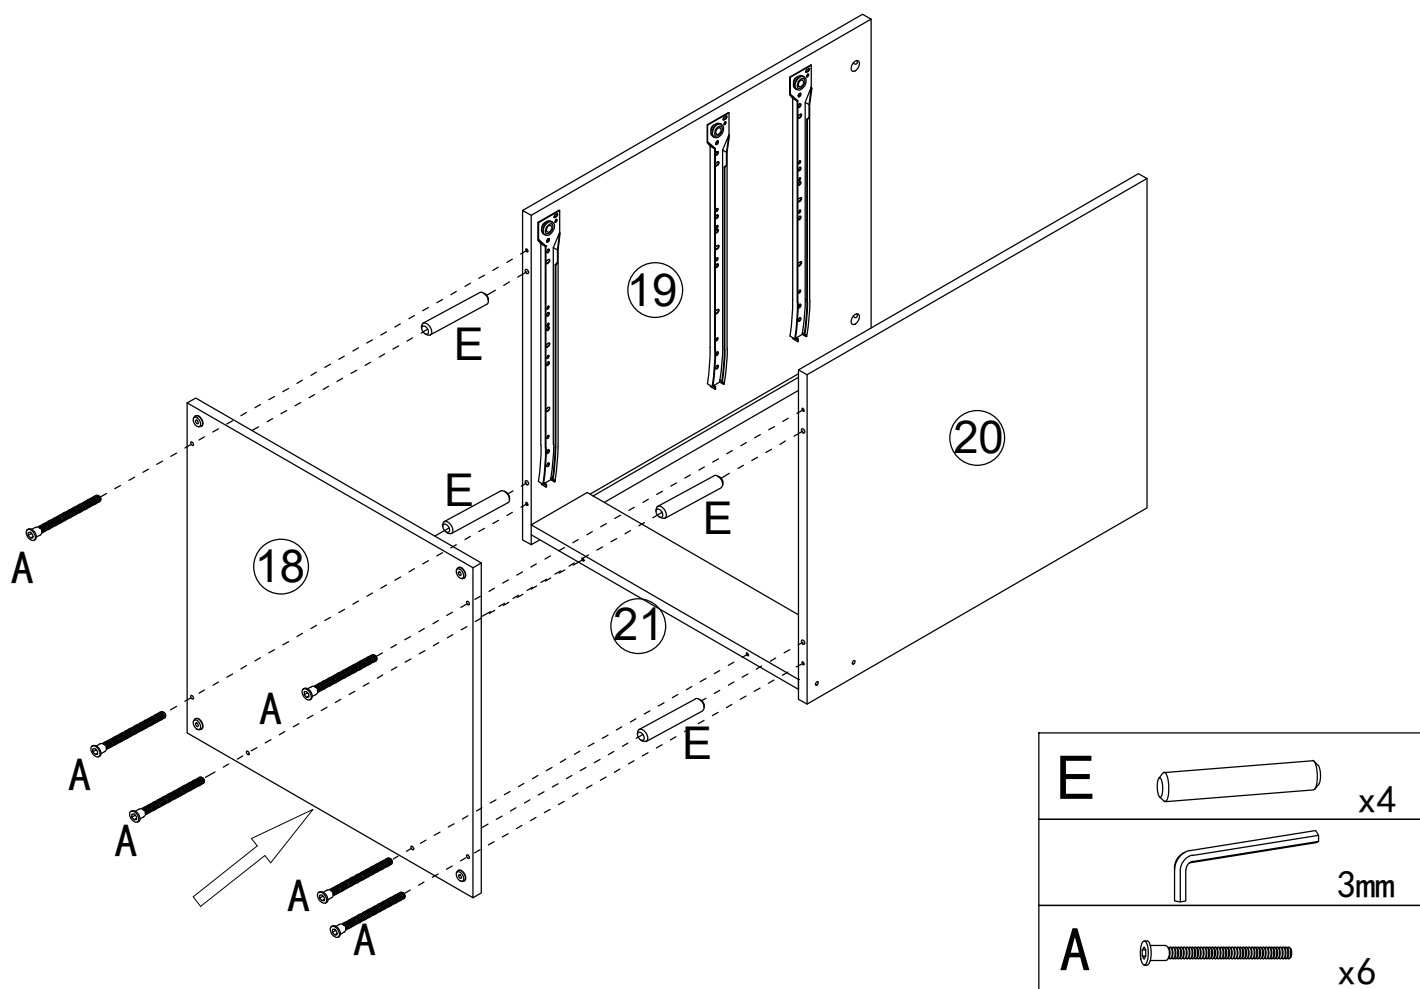


STEP 23

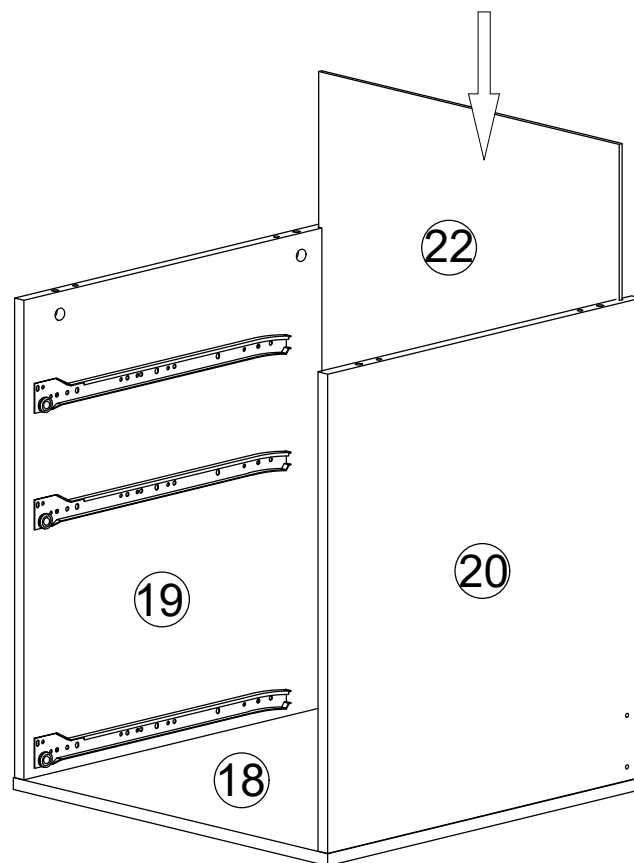

STEP 24


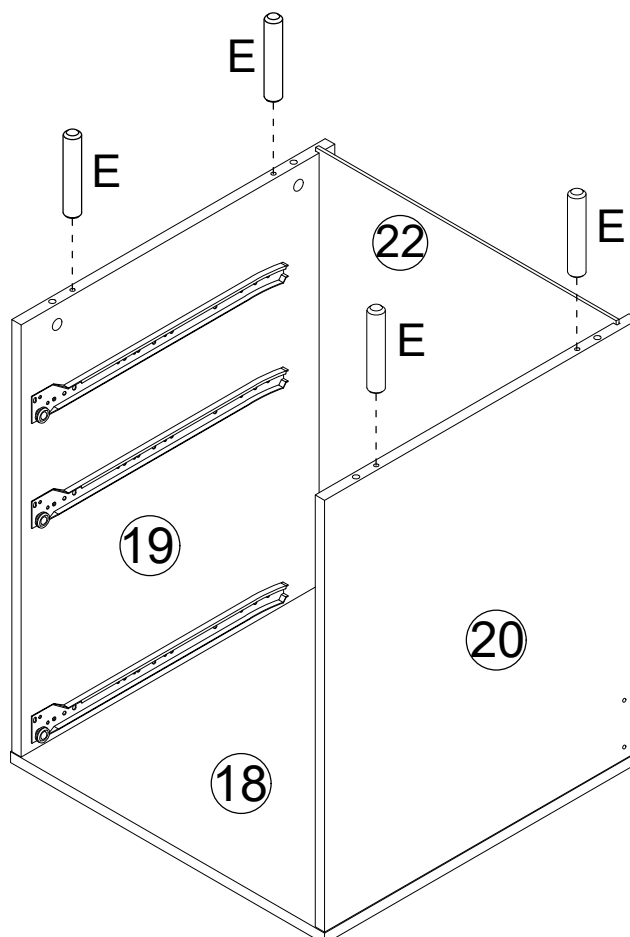


E






x4



STEP 25

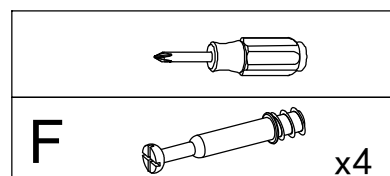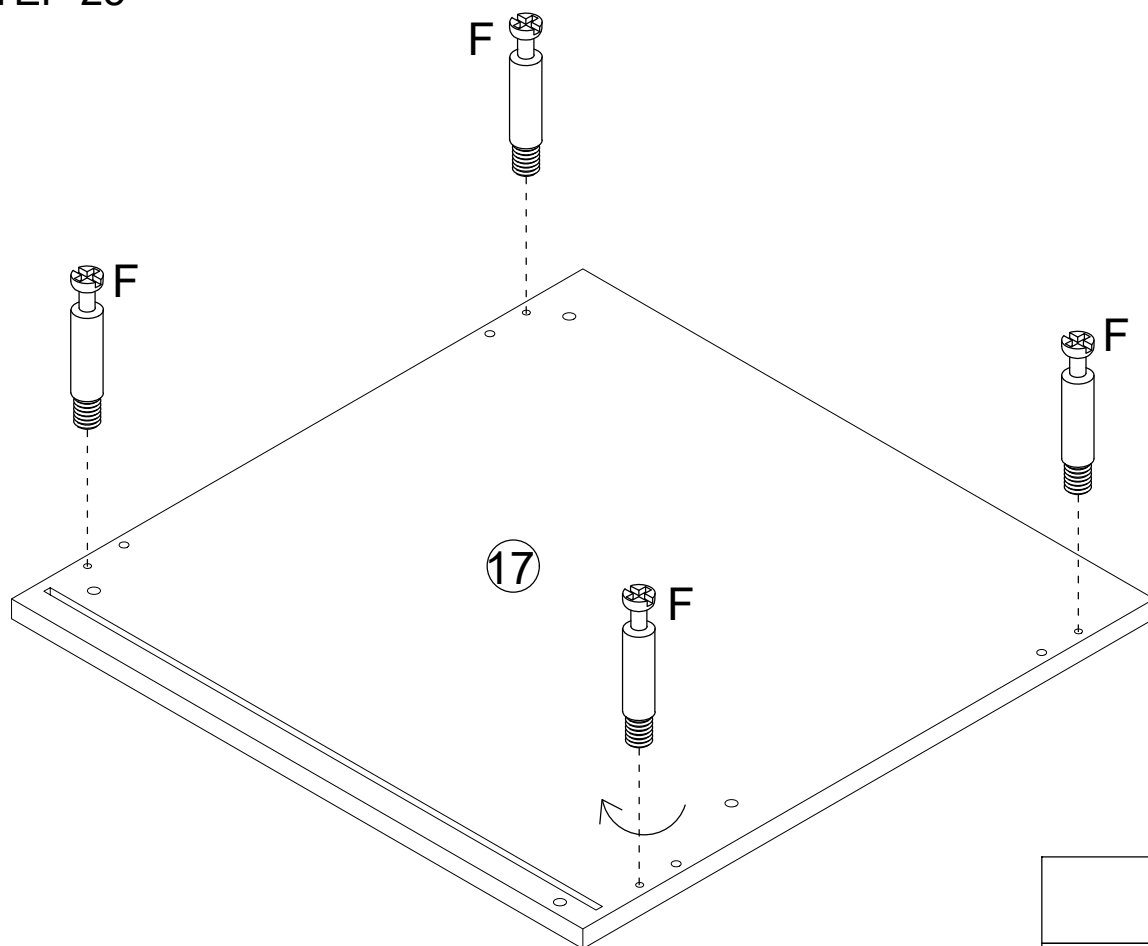



STEP 26

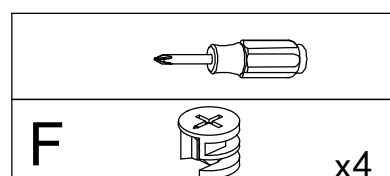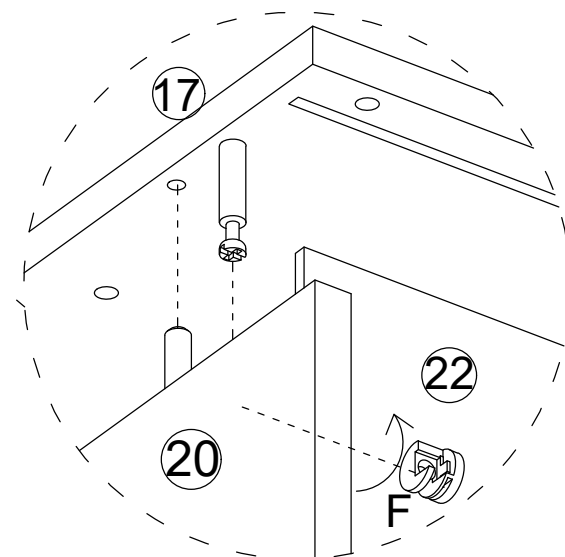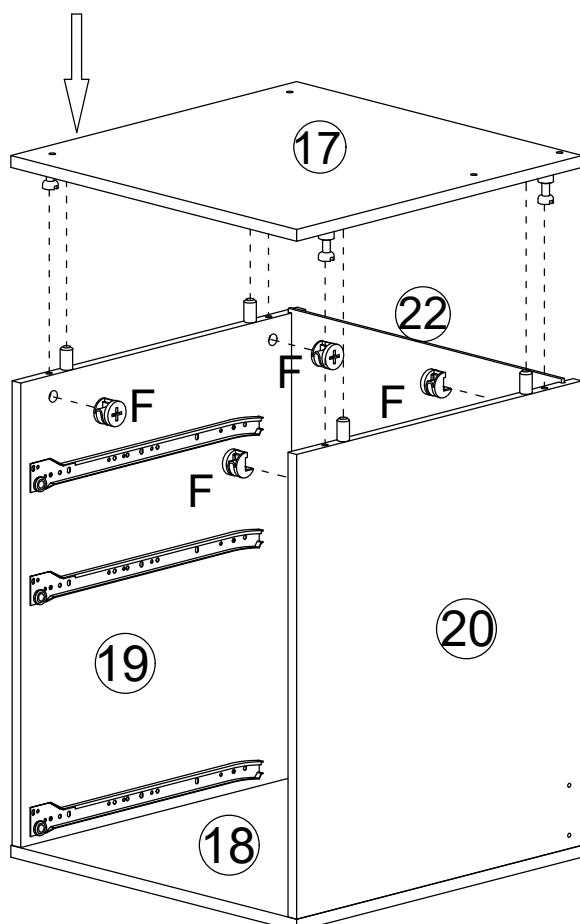


STEP 27

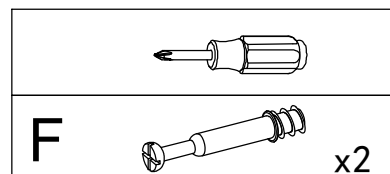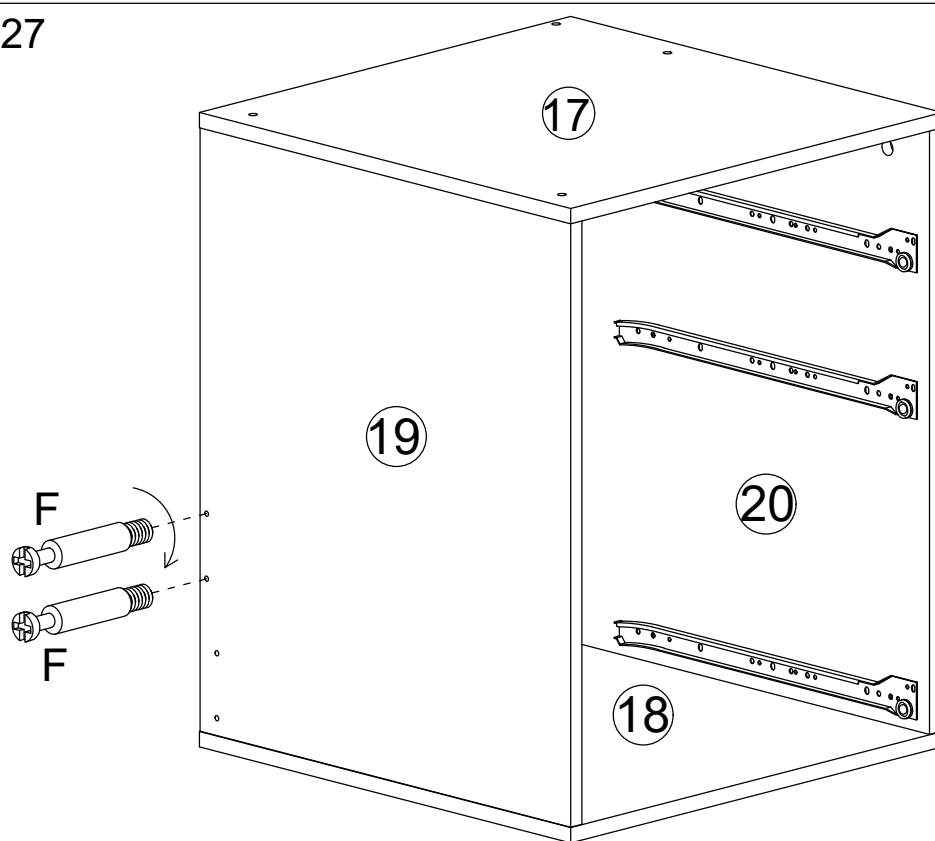



STEP 28

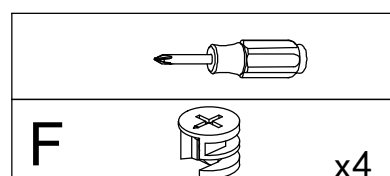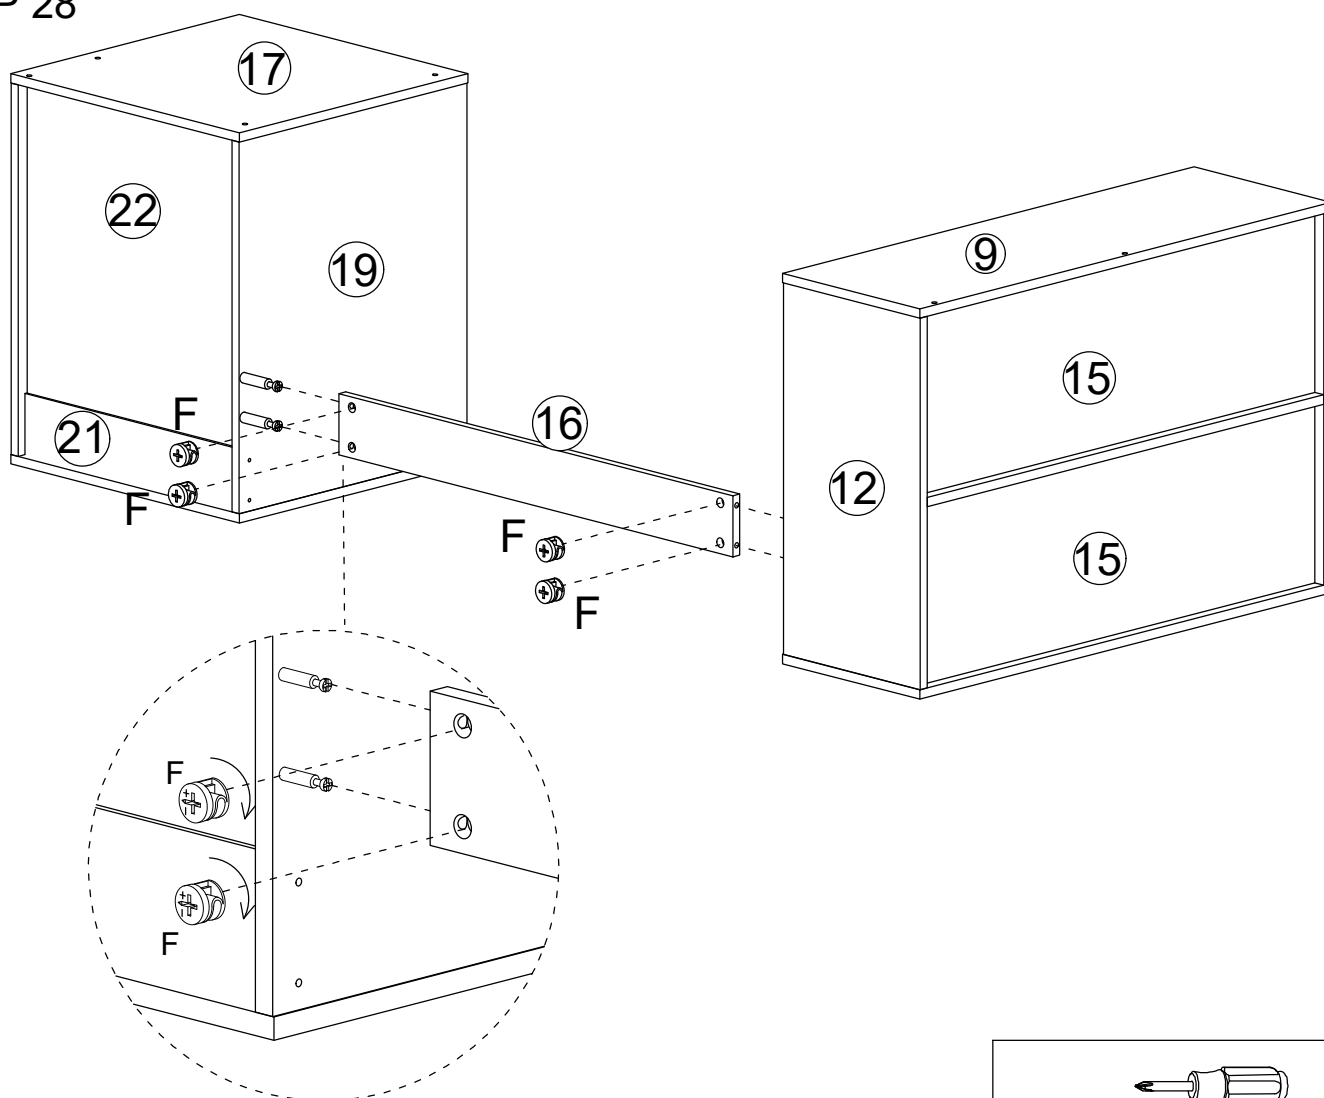



STEP 29

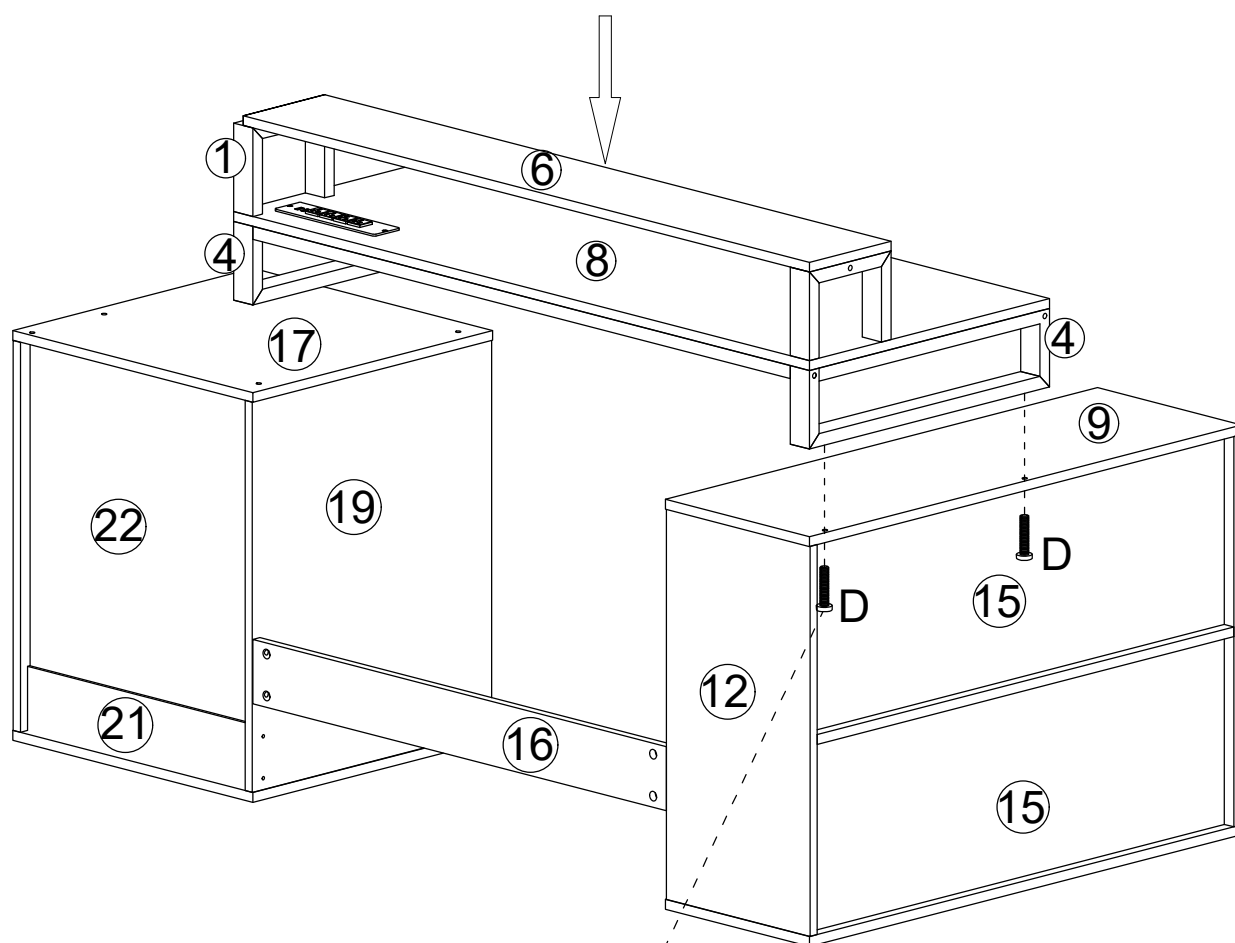



The edge of pipe 4 should be flush with the edge of board 9

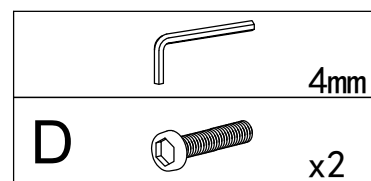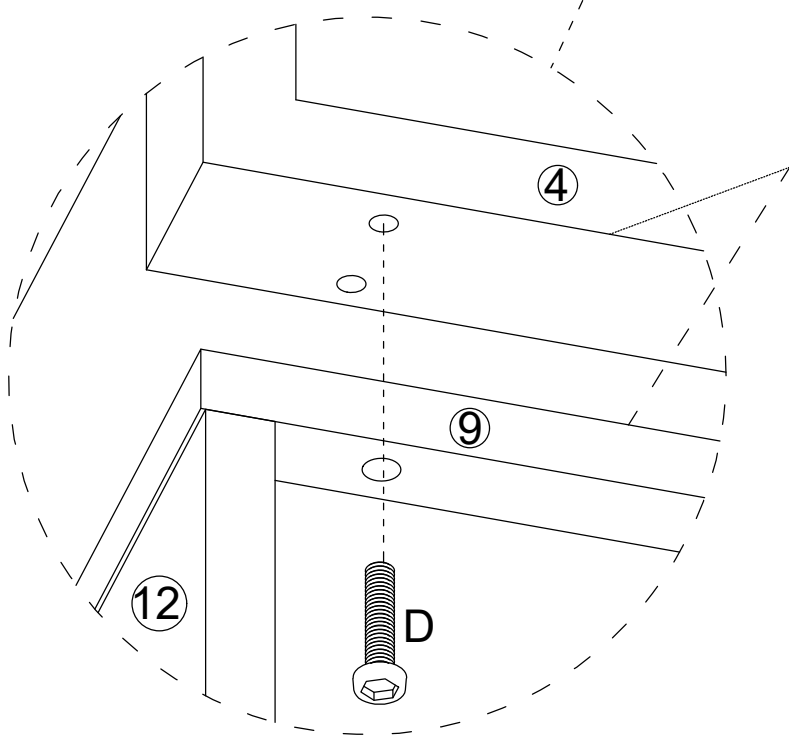


STEP 30

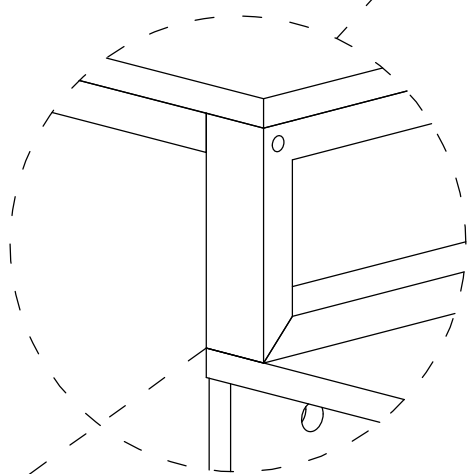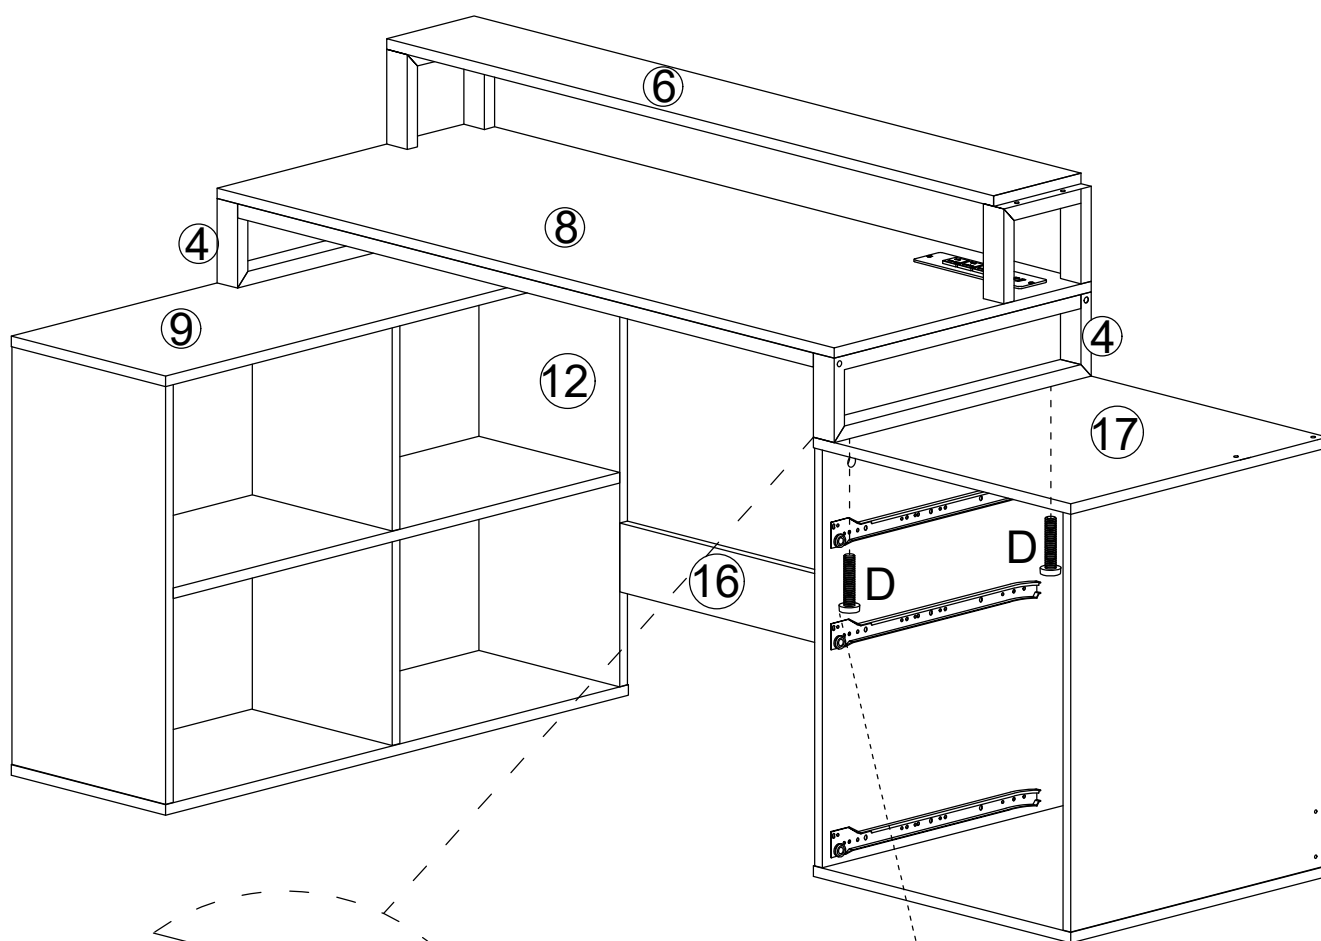


The edge of pipe 4 should be flush with the edge of board 17

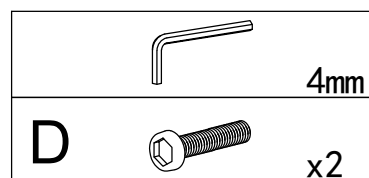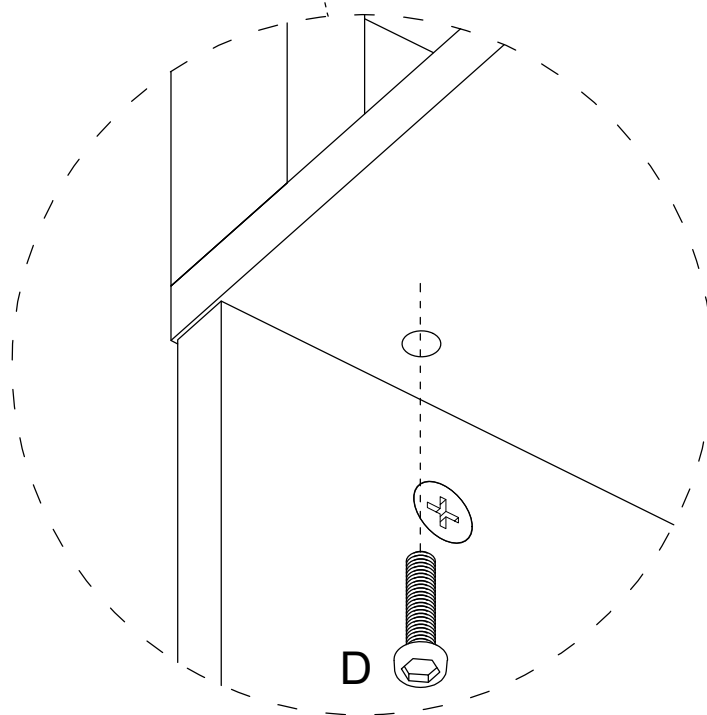



STEP 31

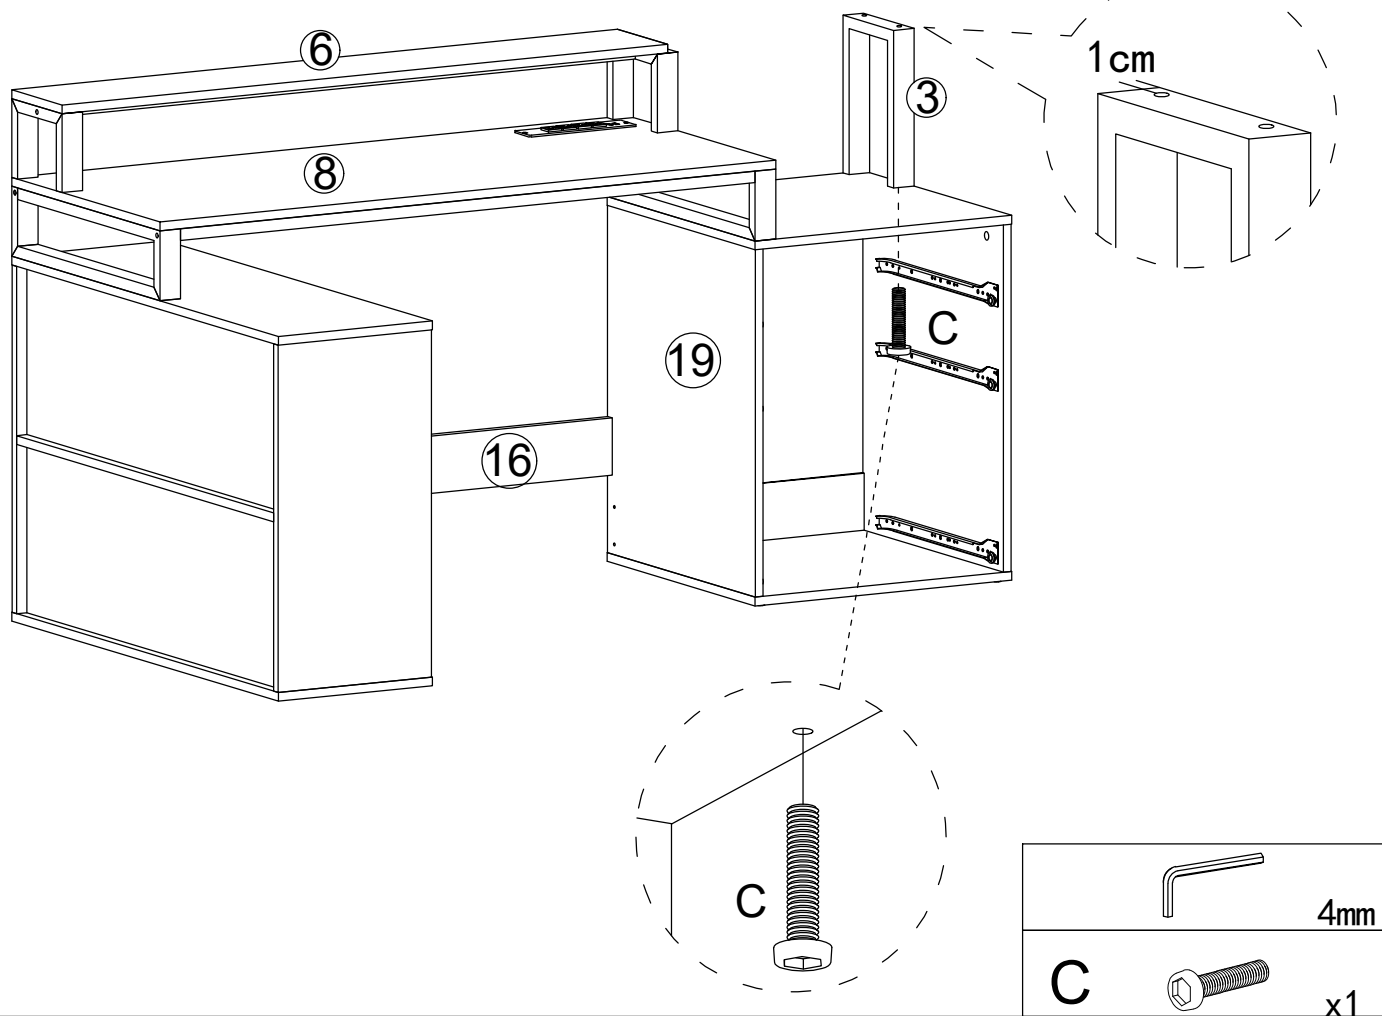



STEP 32

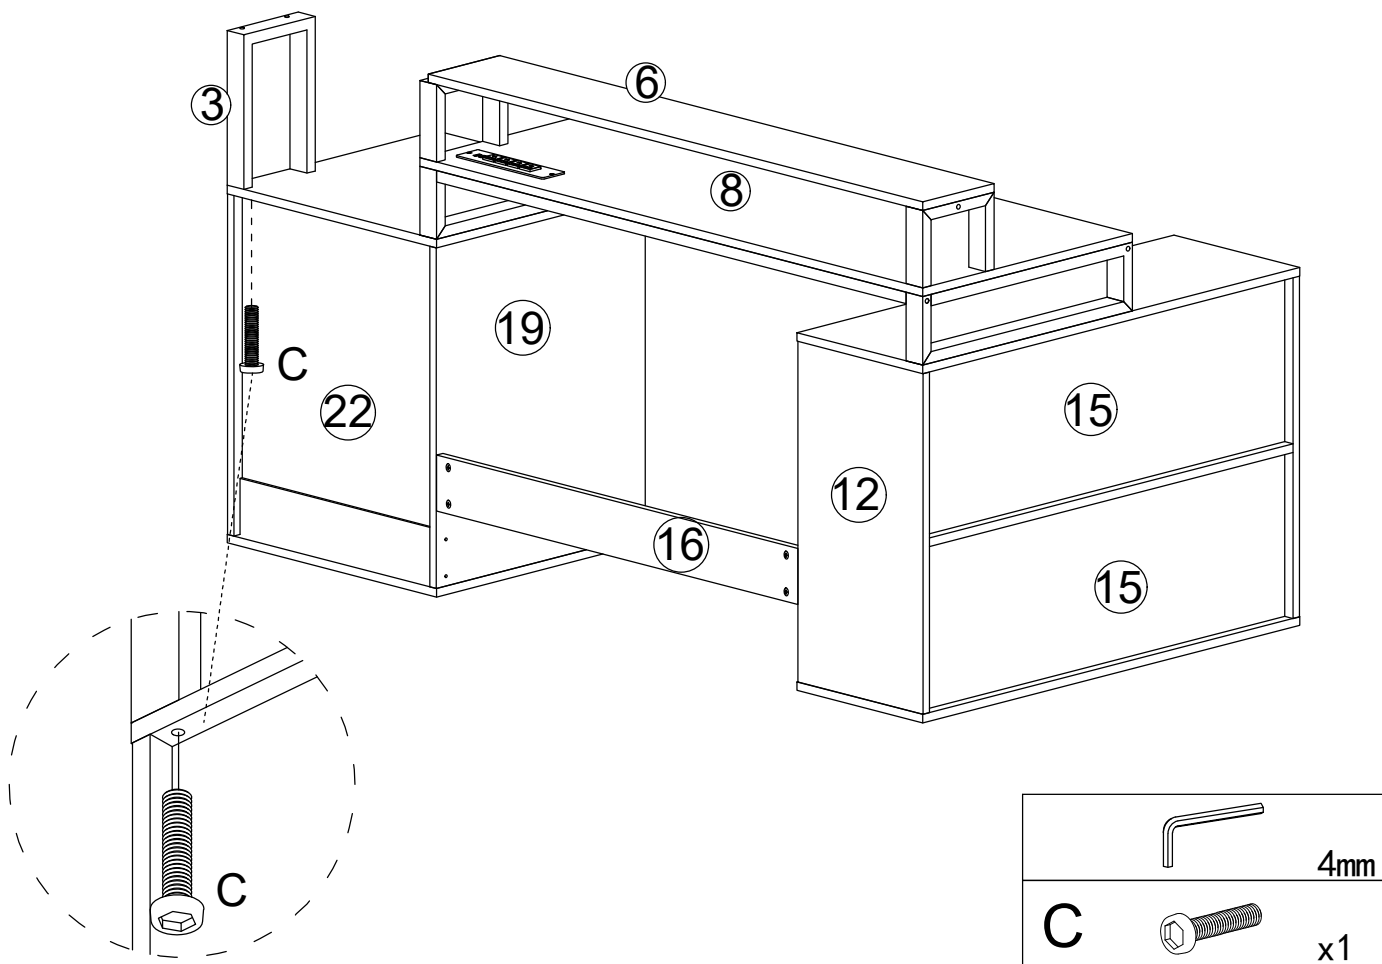


STEP 33

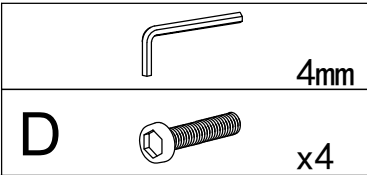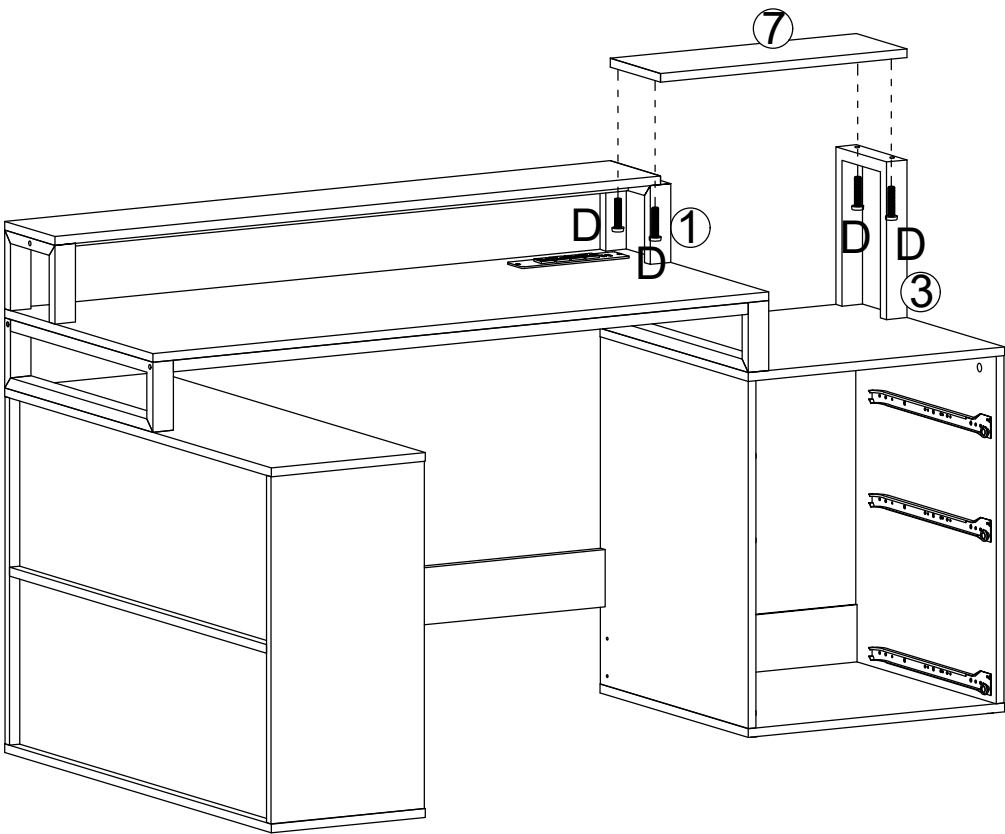


STEP 34

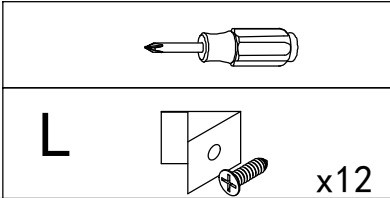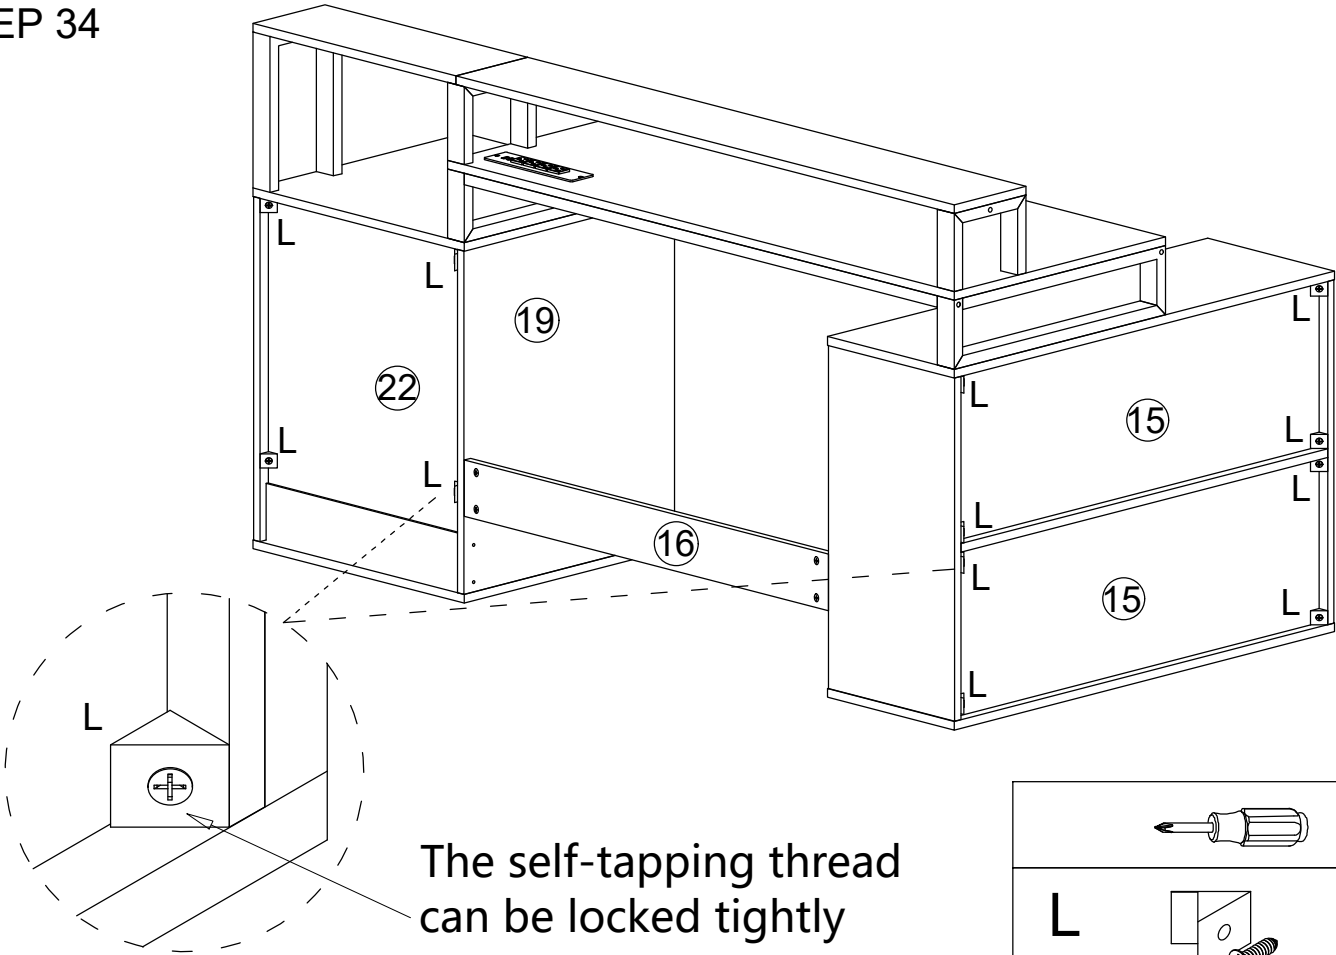

Steps 32 through 37 are the two-drawer installation

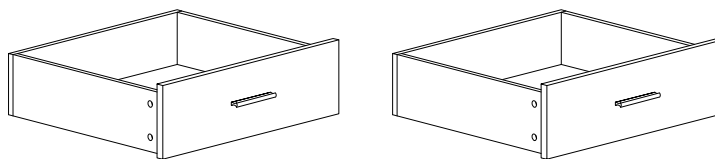


STEP 35

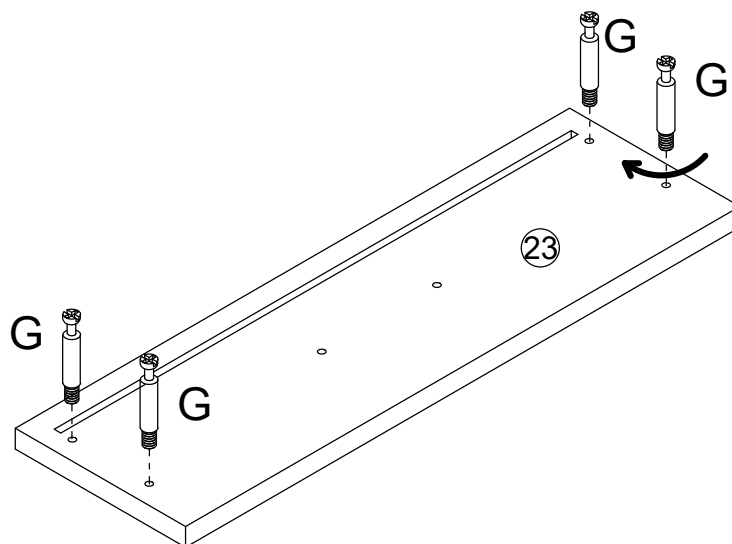

x2




G




x8

STEP 36

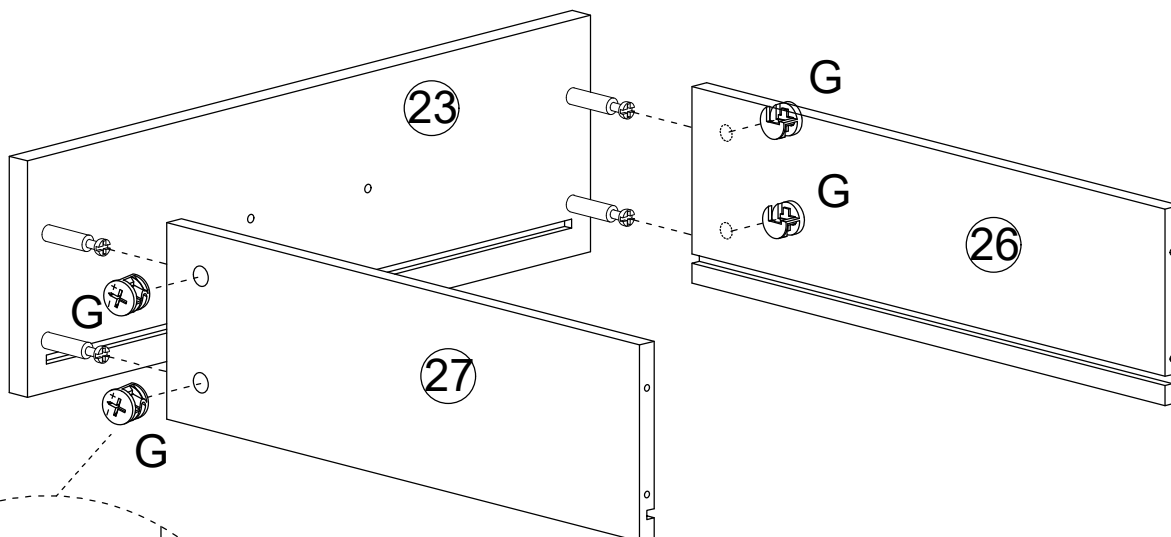

x2

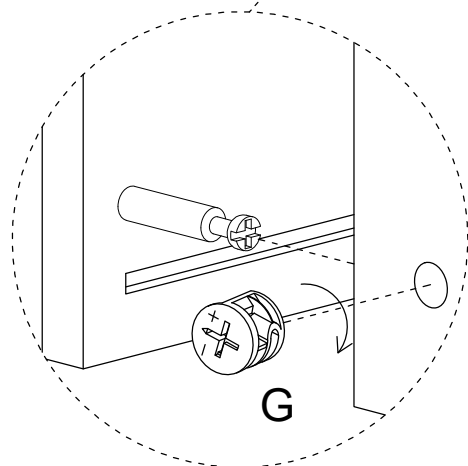


G




x8

STEP 37

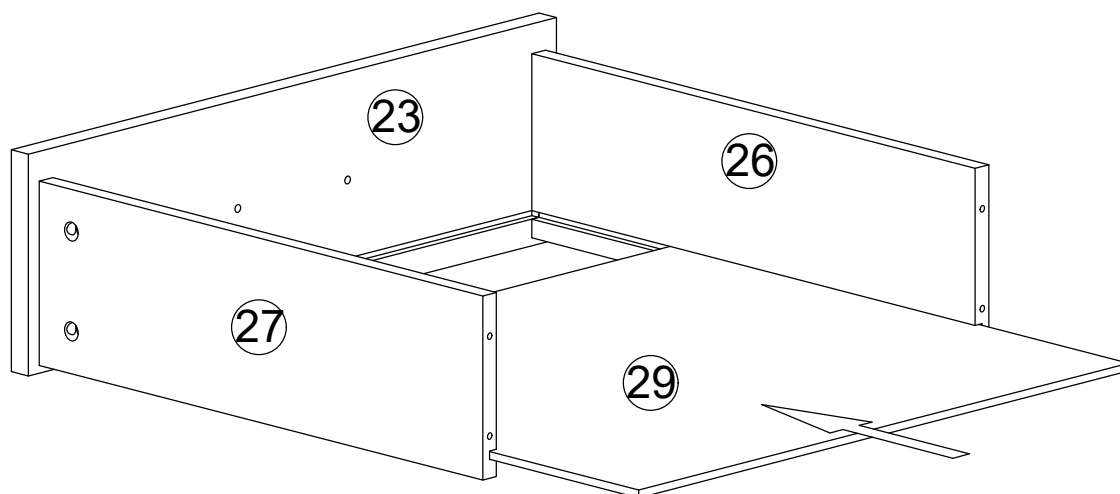


x2



STEP 38

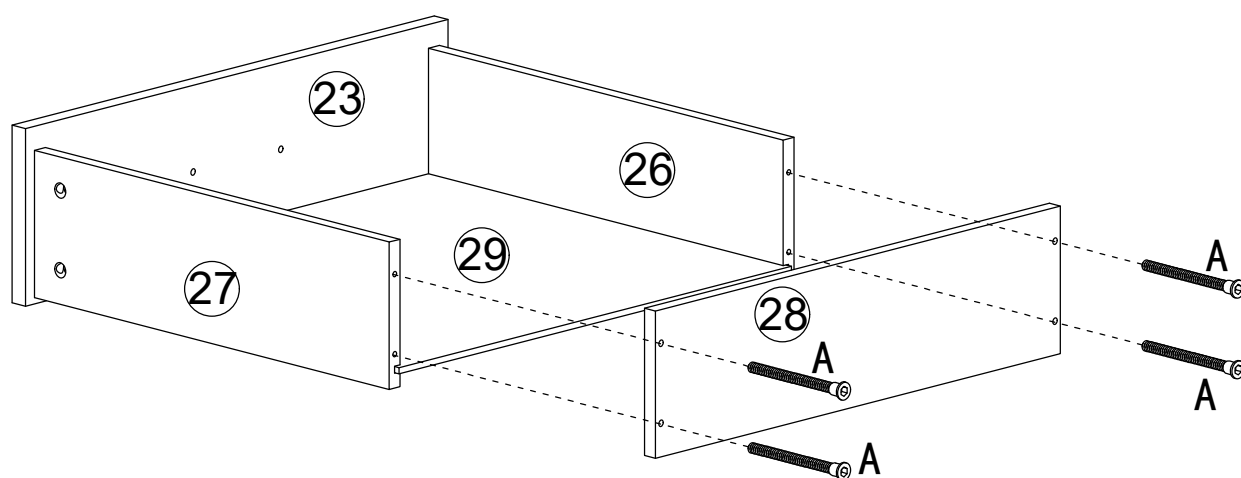


x2

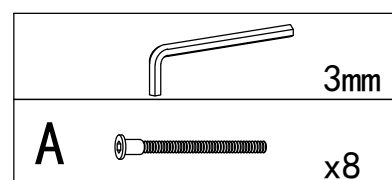



STEP 39

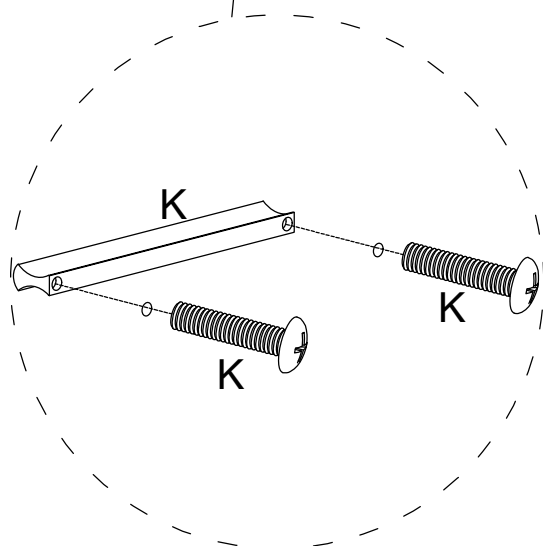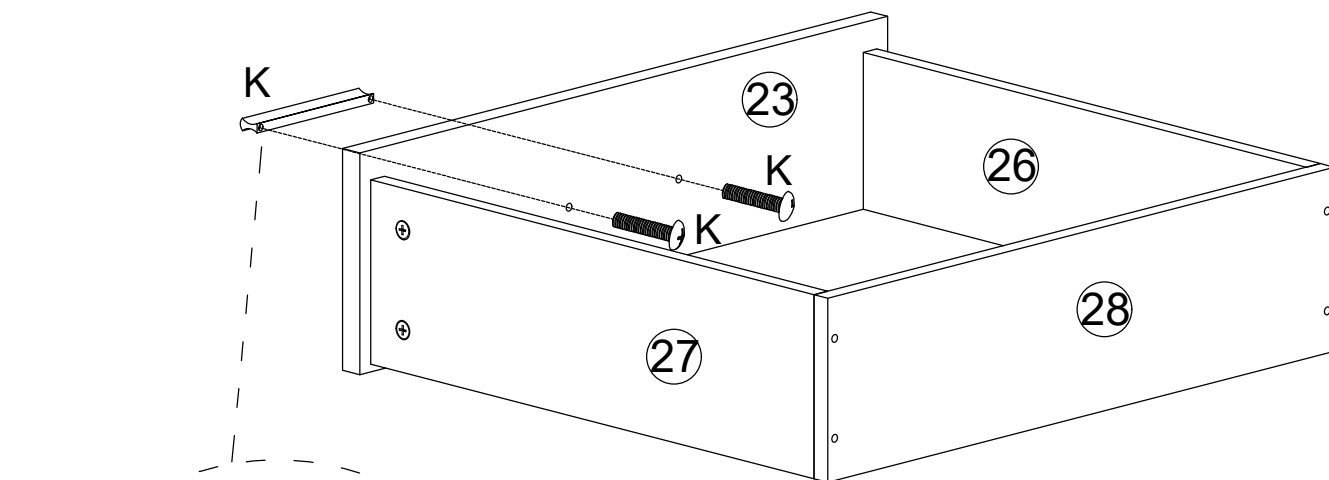


x2

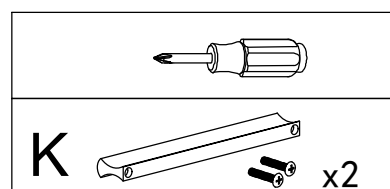



STEP 40

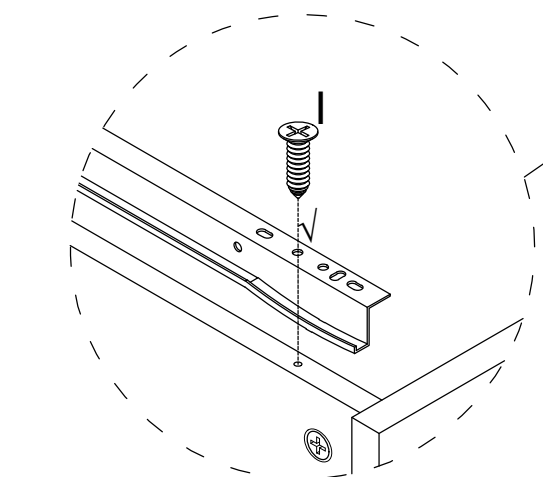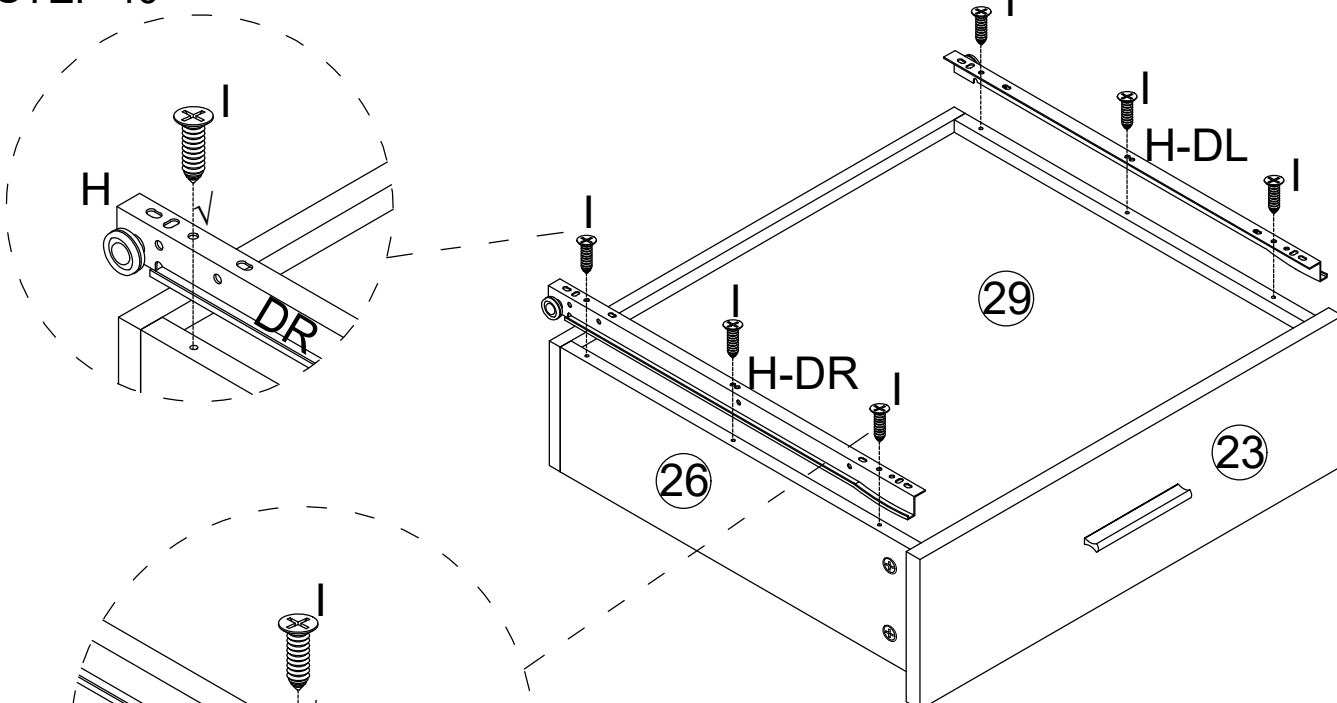




x2

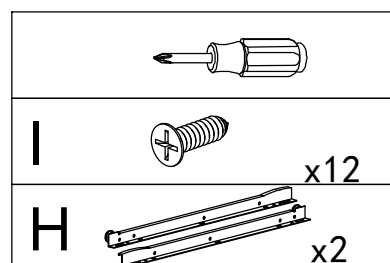


STEP 41

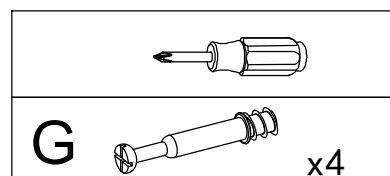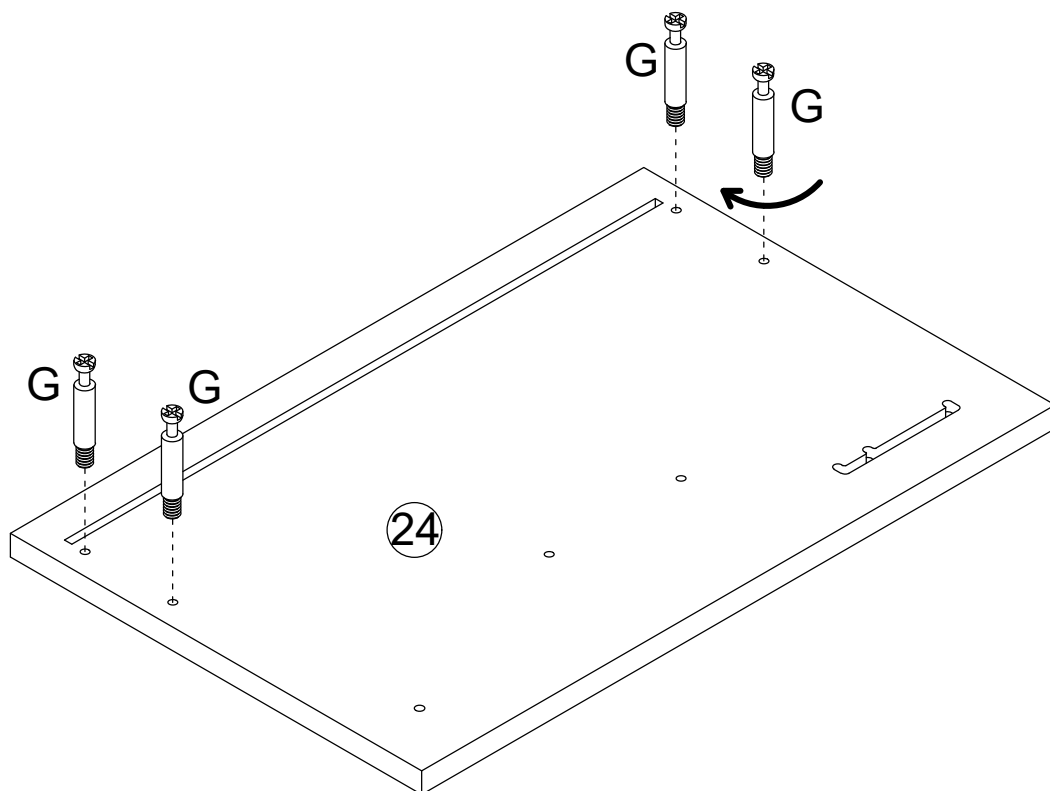


STEP 42

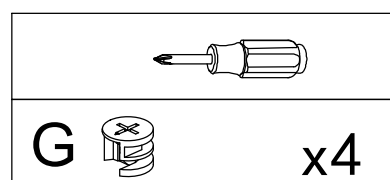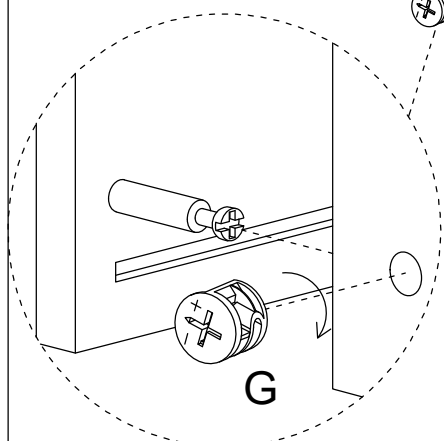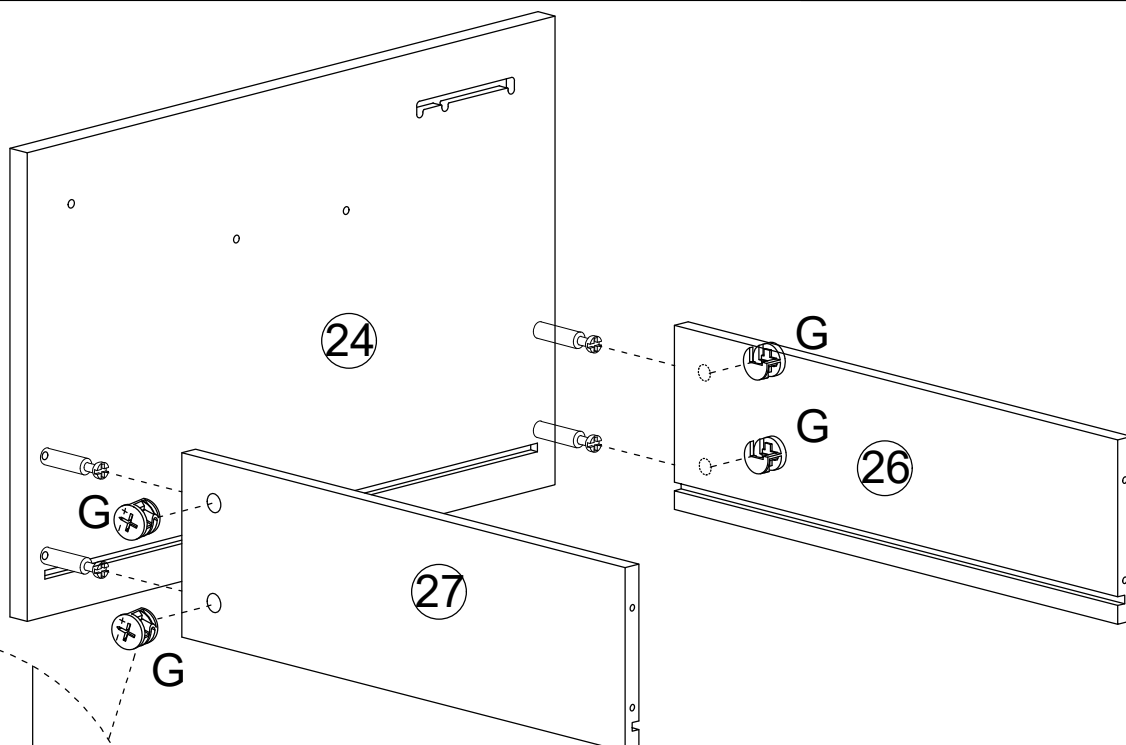


STEP 43

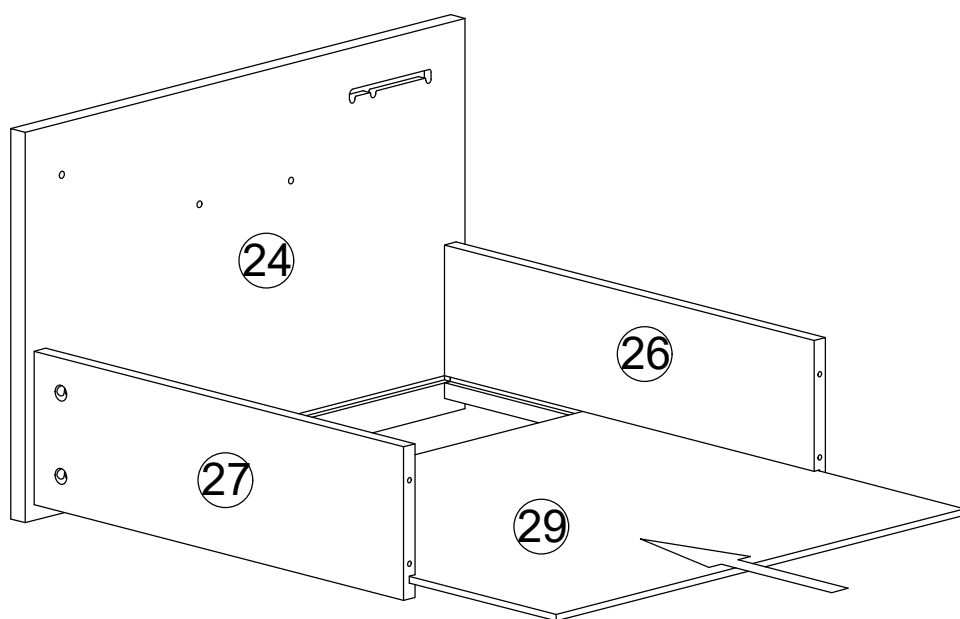



STEP 44

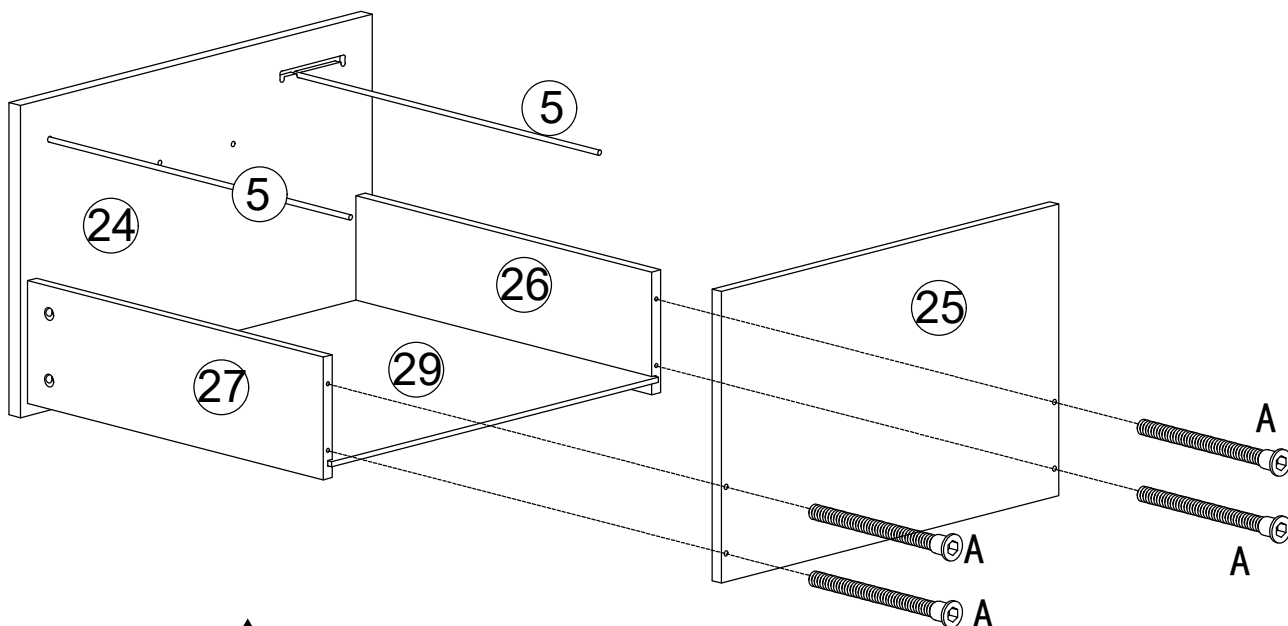



Put in the accessory "5" first

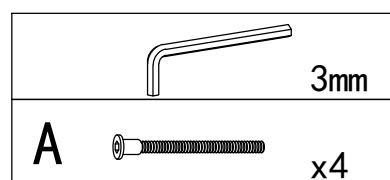



STEP 45

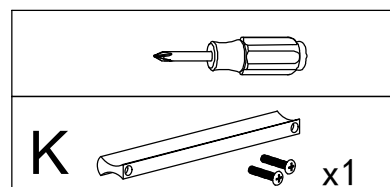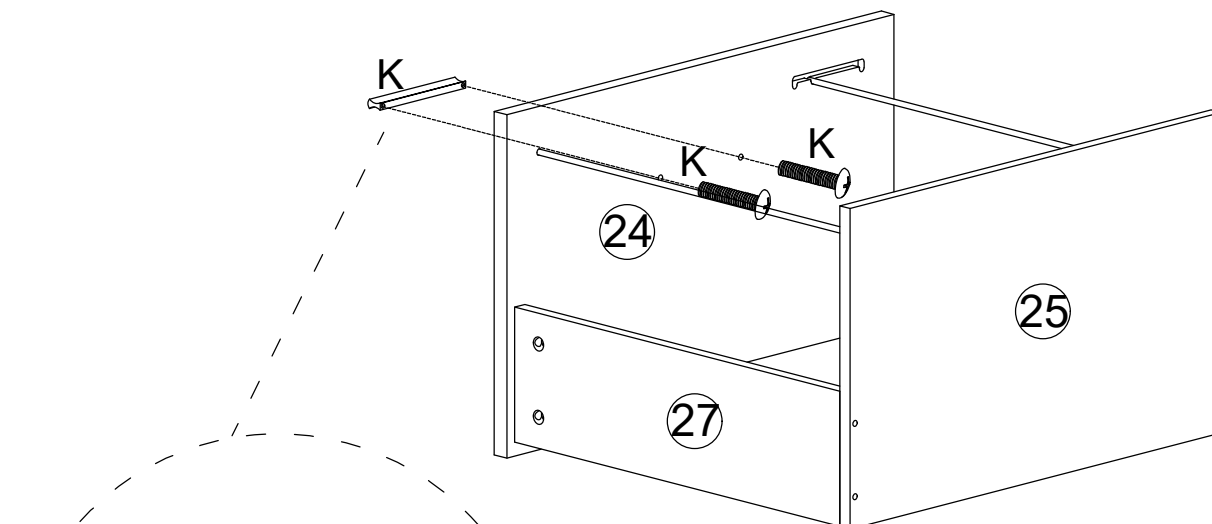

STEP 46

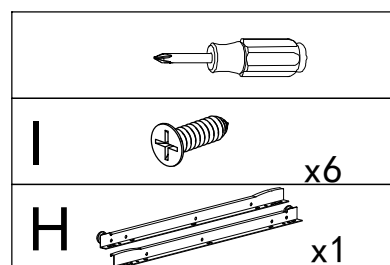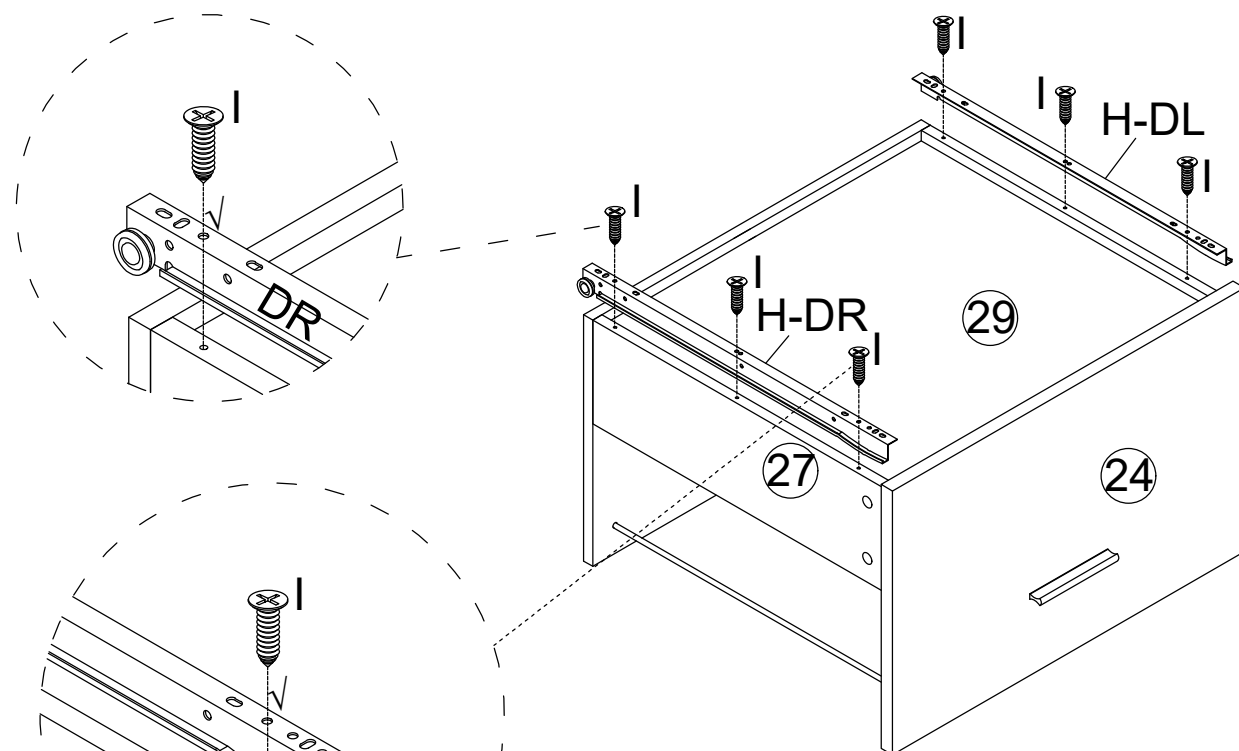

STEP 47

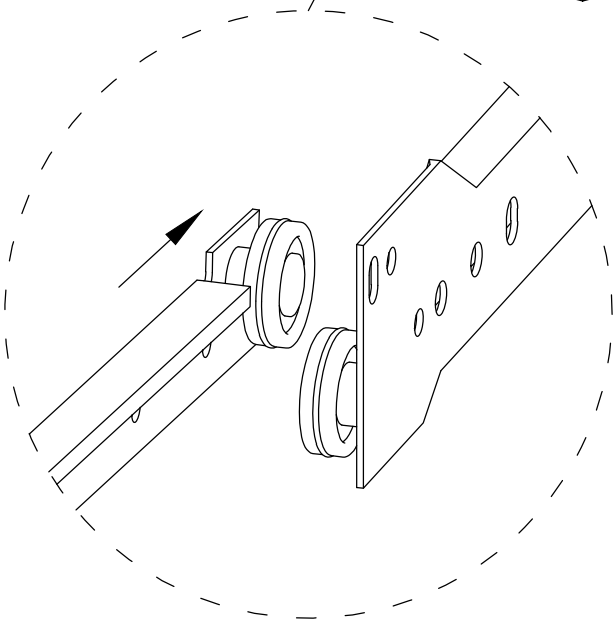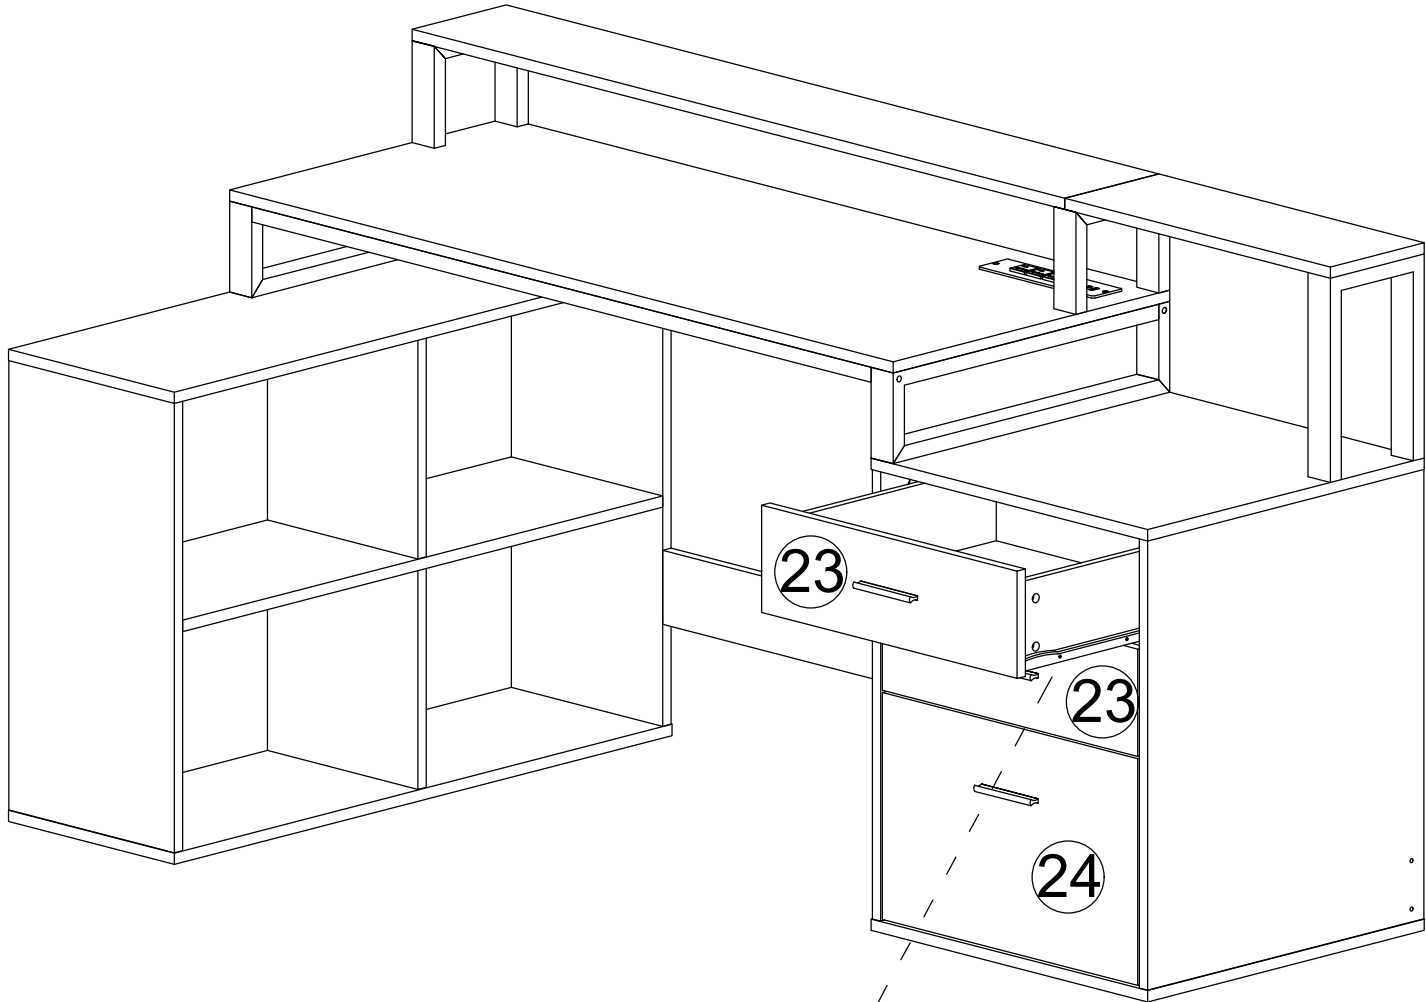

Installation Completed