


# Assembly Instructions

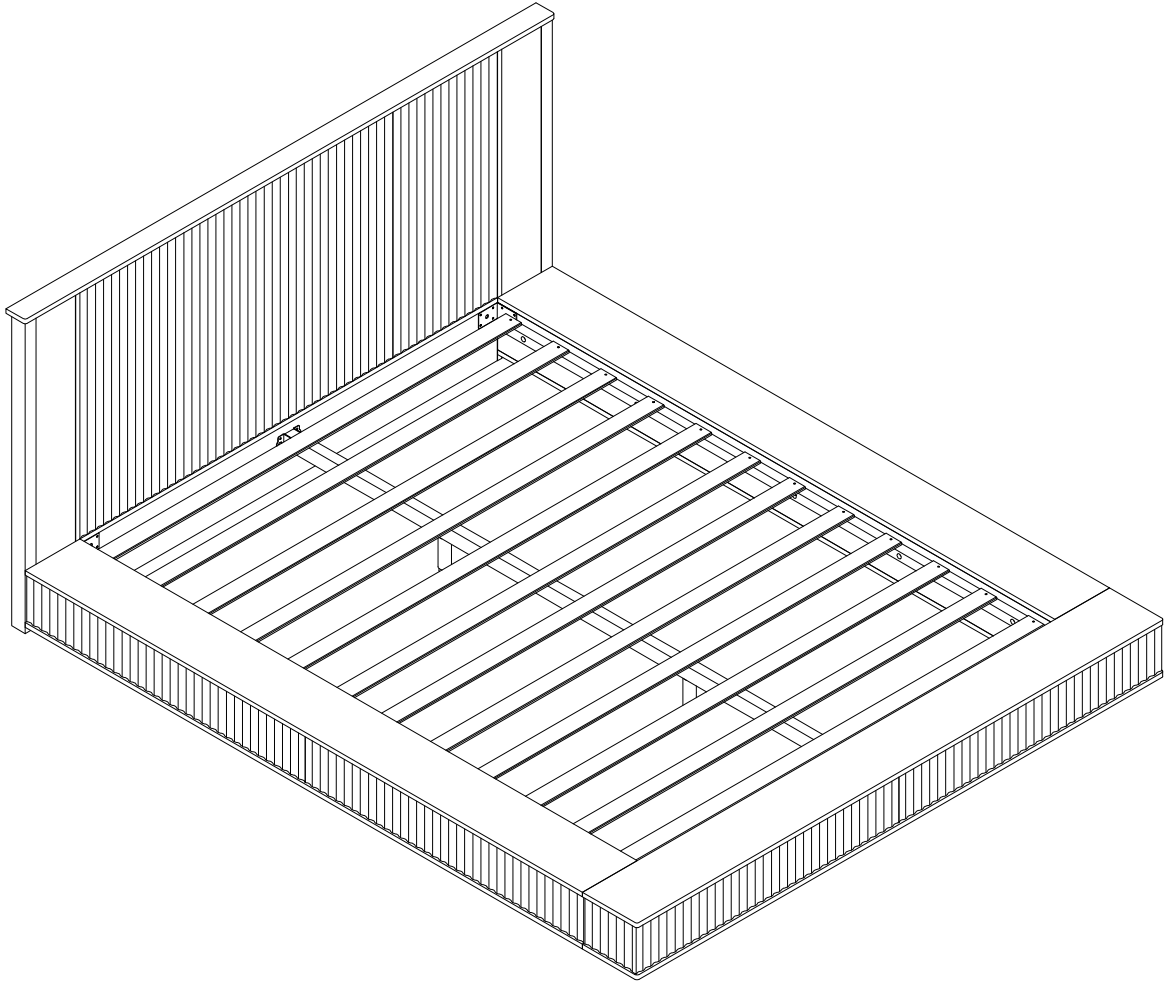

The product is packed in 2 boxes. If only a box was received, please wait for several business days or contact us for further help.

## General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


## Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.


## Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.


# Parts List (EN)

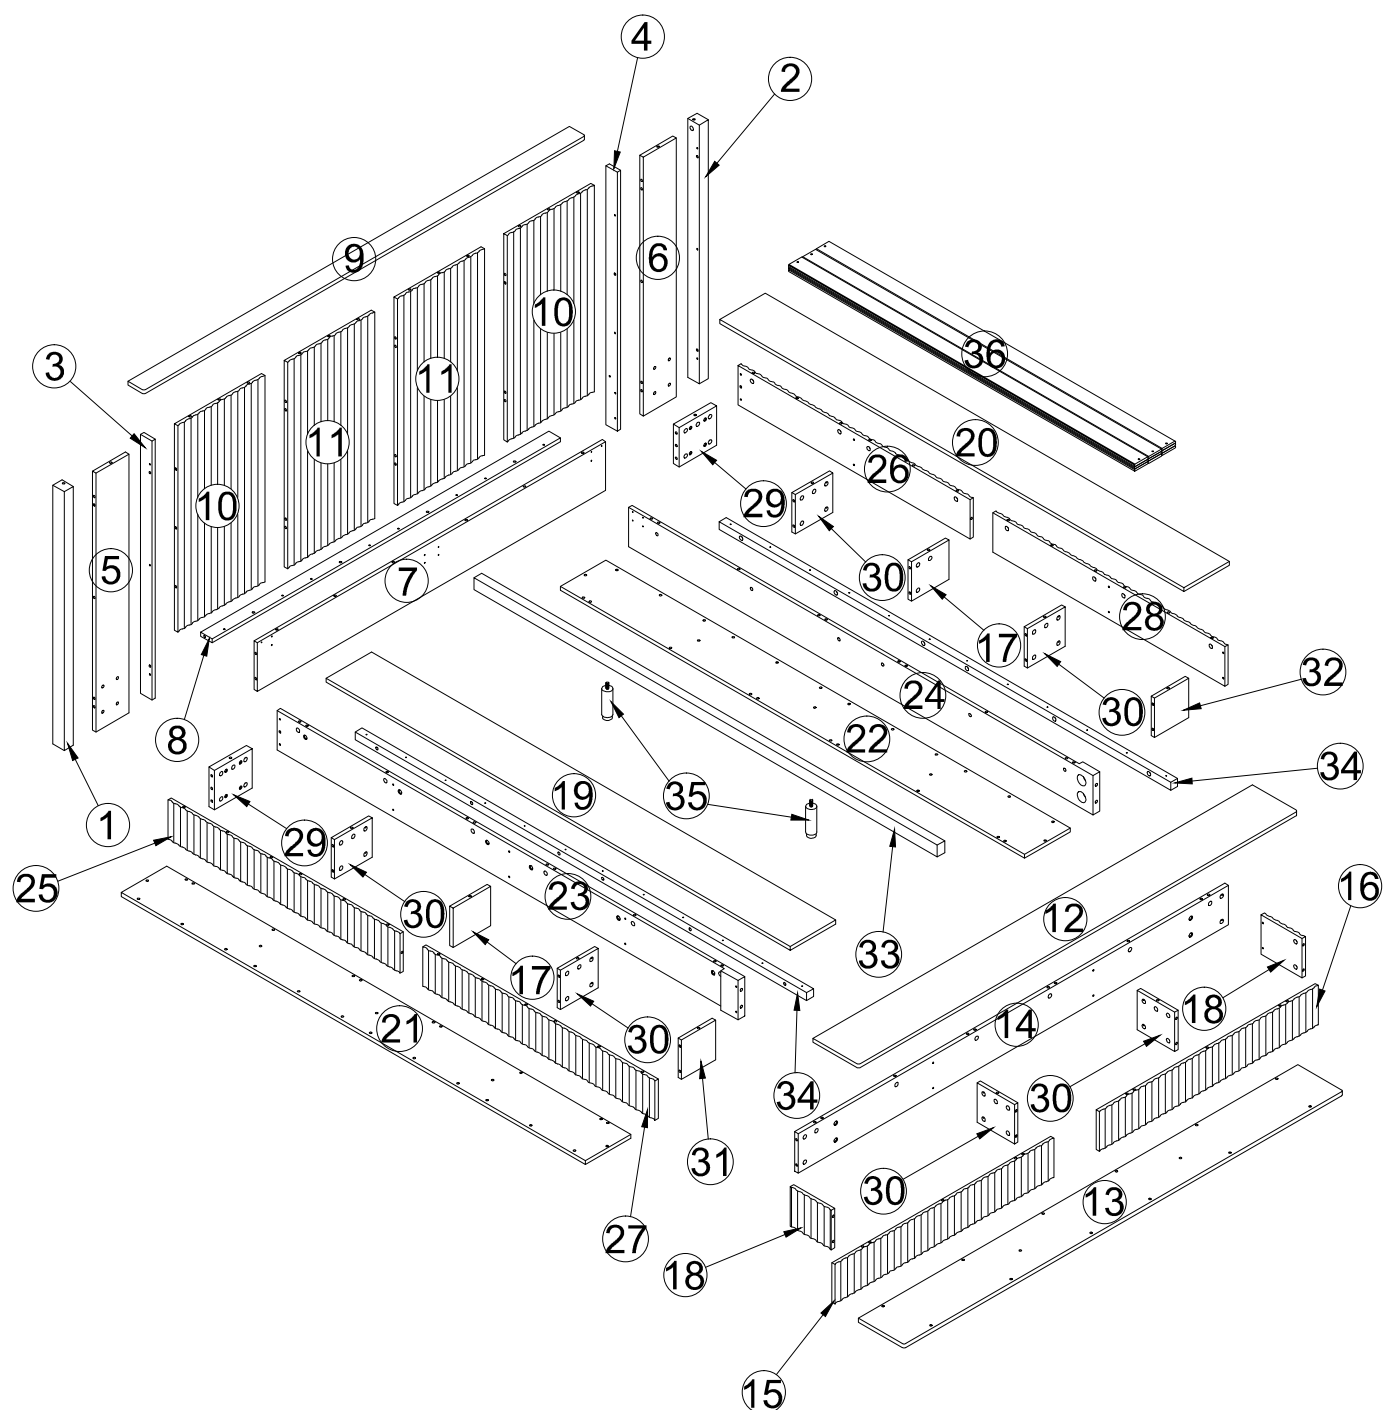


# Parts List (EN)

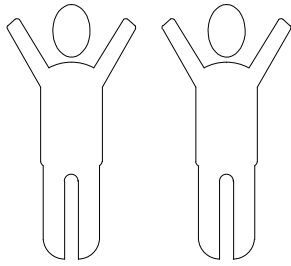


It takes two people to work together to assemble the product.

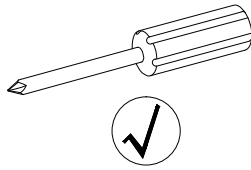

Recommended to use a screwdriver to assemble the product

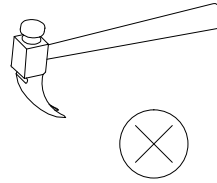

Do not use a hammer, it might damage the board.



















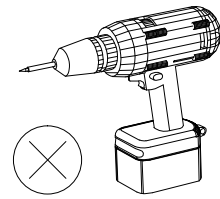


The use of an electric wrench is not recommended. If used, please set the torque to the minimum.















|                     |                      |                      |                     |
|---------------------|----------------------|----------------------|---------------------|
| <p>①</p> <p>1PC</p> | <p>②</p> <p>1PC</p>  | <p>③</p> <p>1PC</p>  | <p>④</p> <p>1PC</p> |
| <p>⑤</p> <p>1PC</p> | <p>⑥</p> <p>1PC</p>  | <p>⑦</p> <p>1PC</p>  | <p>⑧</p> <p>1PC</p> |
| <p>⑨</p> <p>1PC</p> | <p>⑩</p> <p>2PCS</p> | <p>⑪</p> <p>2PCS</p> | <p>⑫</p> <p>1PC</p> |
| <p>⑬</p> <p>1PC</p> | <p>⑭</p> <p>1PC</p>  | <p>⑮</p> <p>1PC</p>  | <p>⑯</p> <p>1PC</p> |






# Parts List (EN)
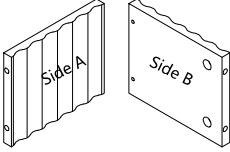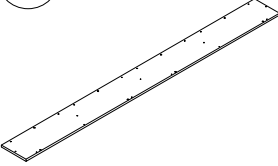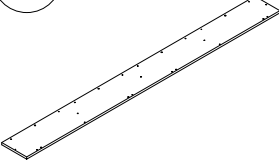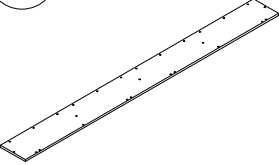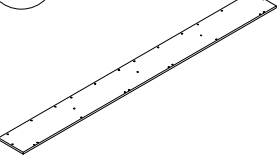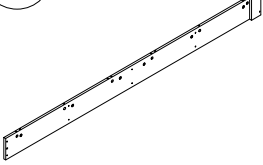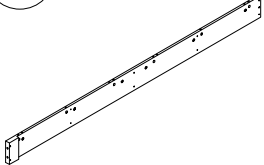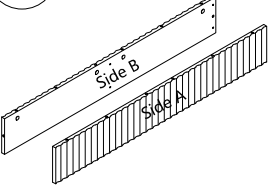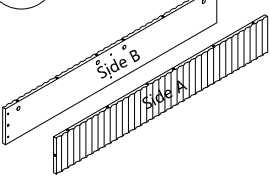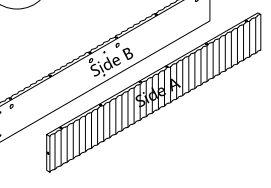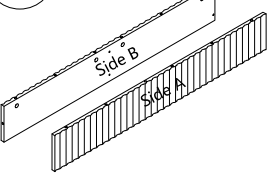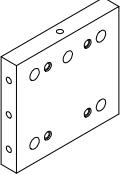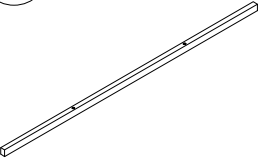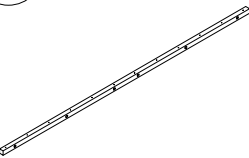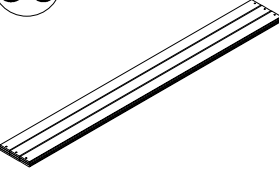
|                                                                                                           |                                                                                                           |                                                                                                           |                                                                                                              |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <p>17</p>  <p>2PCS</p>   | <p>18</p>  <p>2PCS</p>   | <p>19</p>  <p>1PC</p>   | <p>20</p>  <p>1PC</p>     |
| <p>21</p>  <p>1PC</p>    | <p>22</p>  <p>1PC</p>    | <p>23</p>  <p>1PC</p>   | <p>24</p>  <p>1PC</p>     |
| <p>25</p>  <p>1PC</p>  | <p>26</p>  <p>1PC</p>  | <p>27</p>  <p>1PC</p> | <p>28</p>  <p>1PC</p>   |
| <p>29</p>  <p>2PCS</p> | <p>30</p>  <p>6PCS</p> | <p>31</p>  <p>1PC</p> | <p>32</p>  <p>1PC</p>   |
| <p>33</p>  <p>1PC</p>  | <p>34</p>  <p>2PCS</p> | <p>35</p>  <p>2PCS</p> | <p>36</p>  <p>12PCS</p> |


# Parts List (EN)
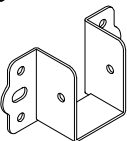
|                                                                                                                                                               |                                                                                                                                                               |                                                                                                                                                      |                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>No. A</b><br/>Quantity:150+7 Pcs<br/>Cam Lock Dowel<br/>8*28mm</p>     | <p><b>No. B</b><br/>Quantity:162+7 Pcs<br/>Cam<br/>φ15</p>                   | <p><b>No. C</b><br/>Quantity:12+1 Pcs<br/>Sticker<br/>Ø20</p>      | <p><b>No. D</b><br/>Quantity:77+4 Pcs<br/>Dowel<br/>8*30mm</p>     |
| <p><b>No. E</b><br/>Quantity:6+1 Pcs<br/>Double-ended rod<br/>6*64mm</p>     | <p><b>No. F</b><br/>Quantity:22+2 Pcs<br/>Screw<br/>M3.5*14mm</p>            | <p><b>No. G</b><br/>Quantity:2+2 Pcs<br/>Screw<br/>M3.5*25mm</p>   | <p><b>No. H</b><br/>Quantity:24+2 Pcs<br/>Screw<br/>M4*30mm</p>    |
| <p><b>No. I</b><br/>Quantity:24 Pcs<br/>Foot Pad<br/>Ø25*20</p>            | <p><b>No. J</b><br/>Quantity:2 Pcs<br/>Adjust The Foot</p>                 | <p><b>No. K</b><br/>Quantity:48+4 Pcs<br/>Screw<br/>M6*40mm</p>  | <p><b>No. L</b><br/>Quantity:20+2 Pcs<br/>Screw<br/>M8*35mm</p>  |
| <p><b>No. M</b><br/>Quantity:2 Pcs<br/>U-shaped hardware<br/>85*45*30</p>  | <p><b>No. N</b><br/>Quantity:2 Pcs<br/>L Shape Part</p>                    | <p><b>No. O</b><br/>Quantity:4 Pcs<br/>Gasket<br/>29*15*7</p>    | <p><b>No. P</b><br/>Quantity:4 Pcs<br/>Hex nut<br/>M8</p>        |
| <p><b>No. Q</b><br/>Quantity:4 Pcs<br/>Glove</p>                           | <p><b>No. R</b><br/>Quantity:4+1 Pcs<br/>Full tooth screw<br/>M8*70mm</p>  | <p><b>No. S</b><br/>Quantity:8+1 Pcs<br/>Gasket</p>              | <p><b>No. T</b><br/>Quantity:1 Pc<br/>Screwdriver</p>            |


# Parts List (EN)
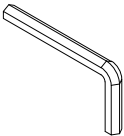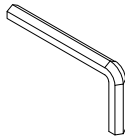
|                                                                                                                              |                                                                                                                                       |                                                                                                                                        |  |
|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--|
| <b>No. U</b><br>Quantity:1 Pc<br>Wrench<br> | <b>No. V</b><br>Quantity:1 Pc<br>Allen Key<br>4#<br> | <b>No. W</b><br>Quantity:1 Pc<br>Allen Key<br>5#<br> |  |
|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--|

# Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




## INSERTING AND TIGHTENING CAM-BOLT

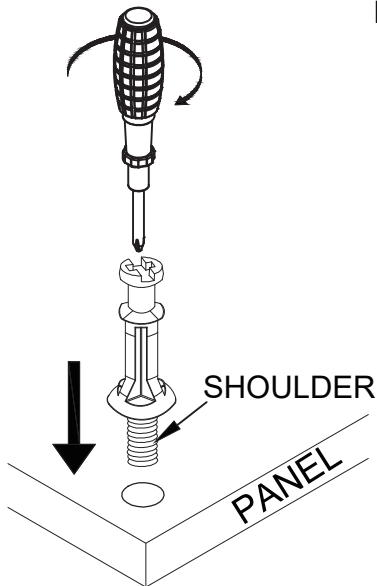

Place Cam-bolt on pre-drilled hole and screw in vertically

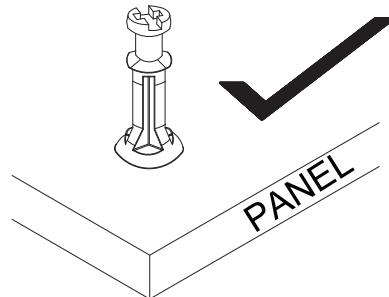


Shoulder is flushed (on the same level) with the panel.

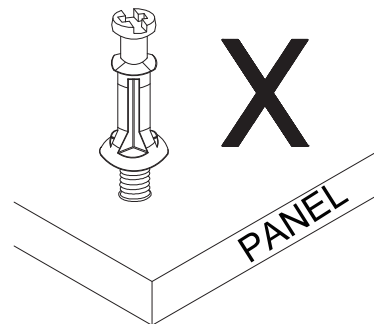

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


## INSERTING CAM-LOCK

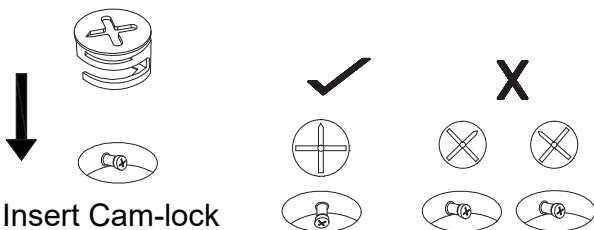

Insert Cam-lock with arrow align to Cam-bolt head **CORRECT** **WRONG**


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

## TIGHTENING CAM-LOCK

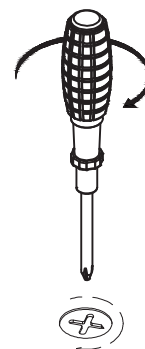


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


# Installation Instructions for Hardware Labeled 'R' and Accessories Labeled 'O' and 'P'

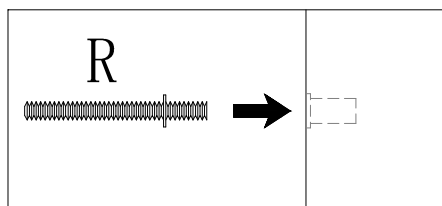


In the previous step, please screw the parts labeled 'R' into the holes.

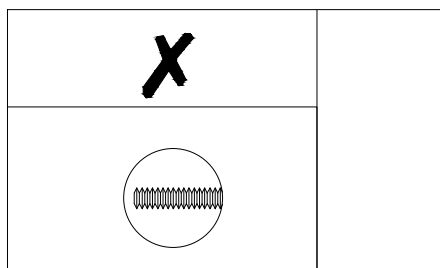


When installing, please do not fully push the footboard or headboard with the already installed 'R' accessory into the side panels, otherwise it will make it inconvenient to install the accessories marked 'O' and 'P'.

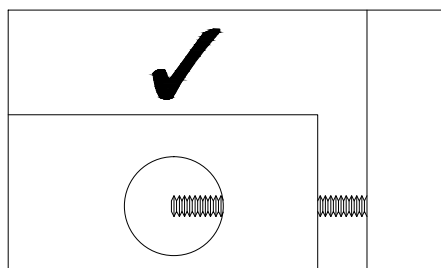

During installation, please push the bed footboard or headboard with the installed 'R' accessories into the side panels 80% to facilitate the installation of the accessories marked 'O' and 'P'.

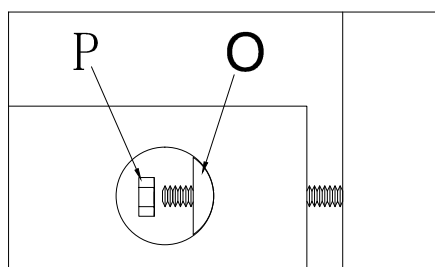


Please first push the accessory marked 'O' into the accessory marked 'R', then screw in the accessory marked 'P'.


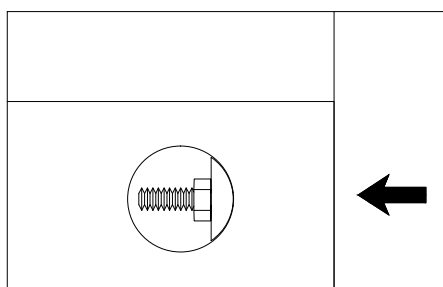



After screwing in the parts marked 'P' to prevent 'O' and 'P' from falling out, fully push the footboard or headboard into the side panels, and finally lock 'P' in place.

# STEP 1






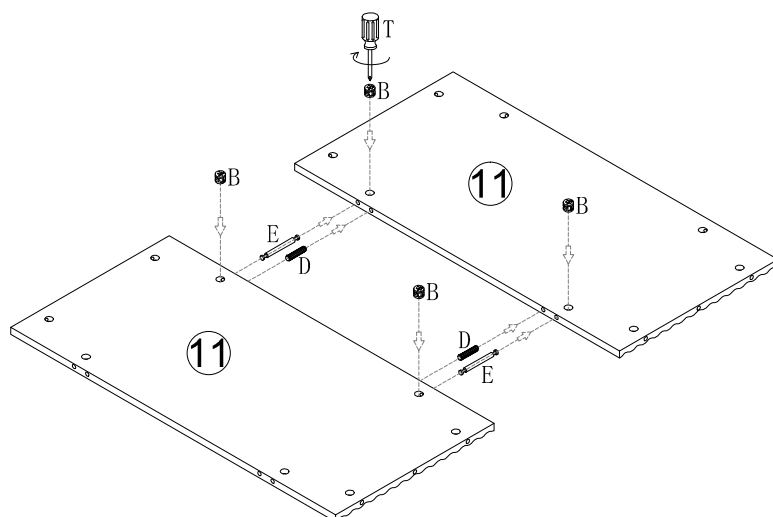


 Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

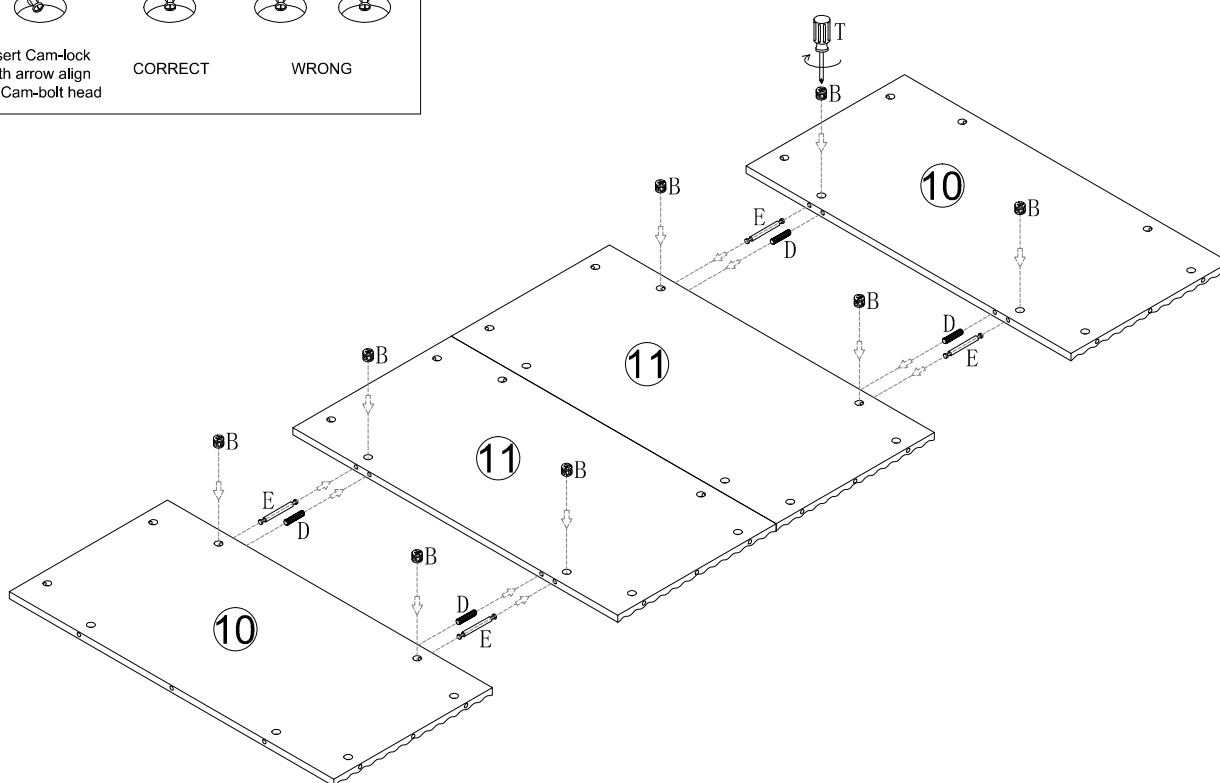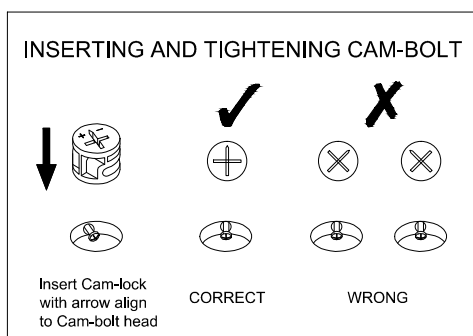



|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
|  | B×12PCS |
|  | D×6PCS  |
|  | E×6PCS  |

# STEP 2

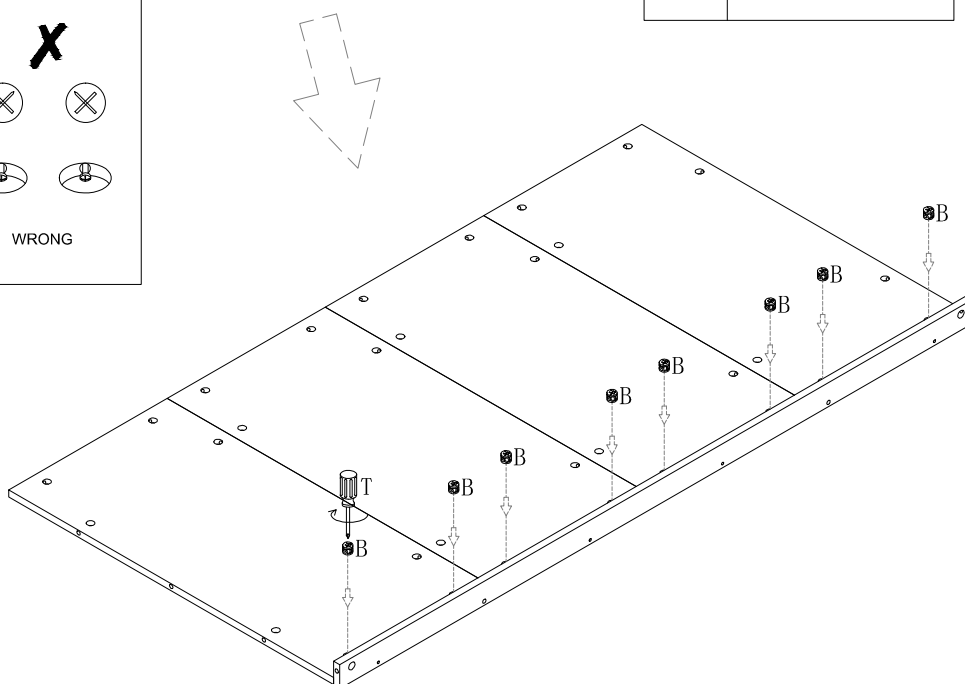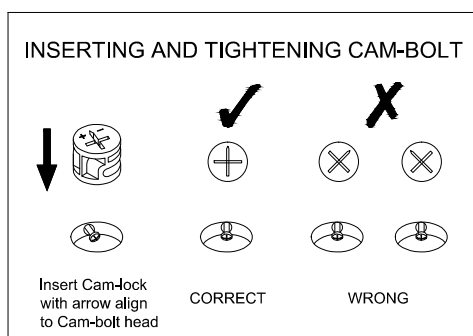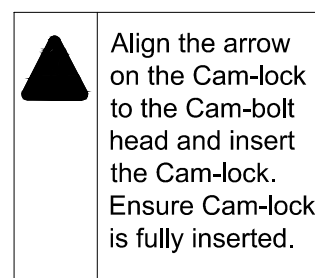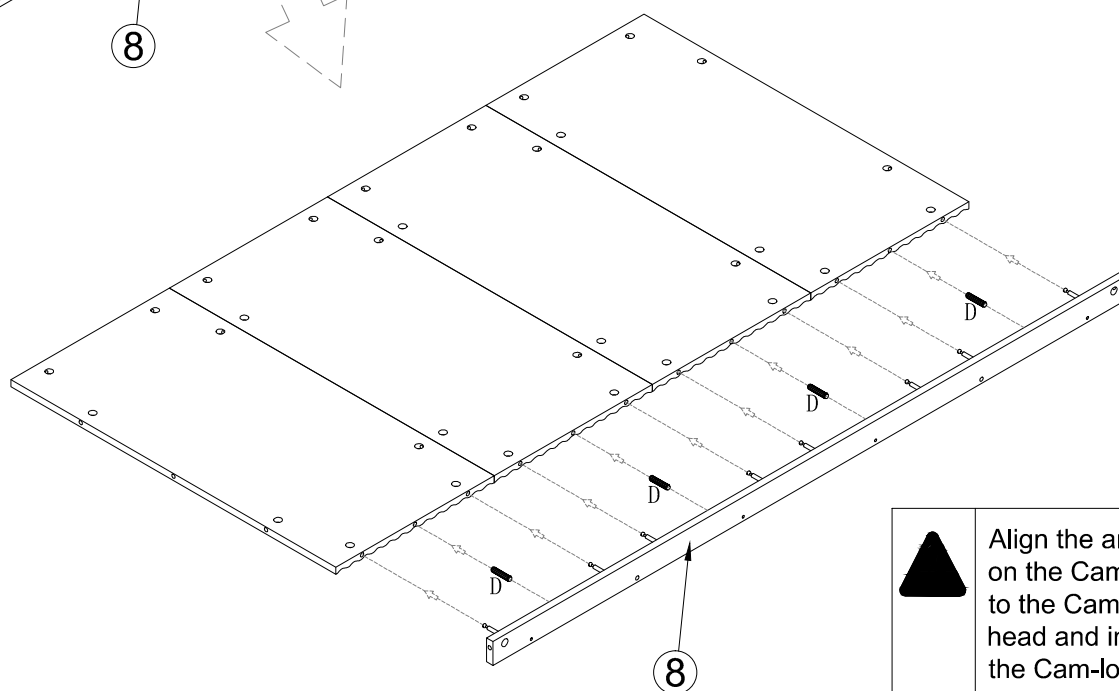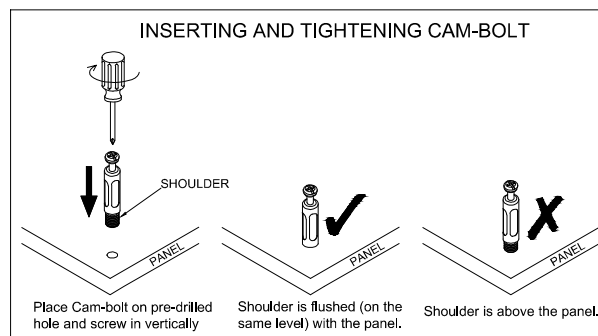
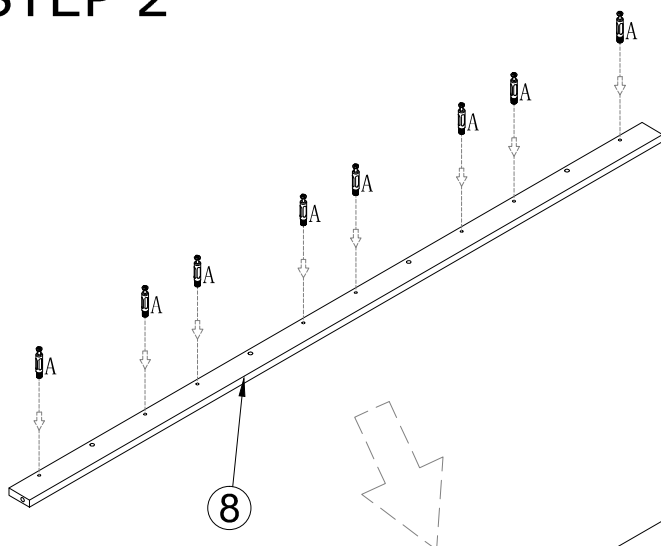


|  |        |
|--|--------|
|  | A×8PCS |
|  | B×8PCS |
|  | D×4PCS |

# STEP 3

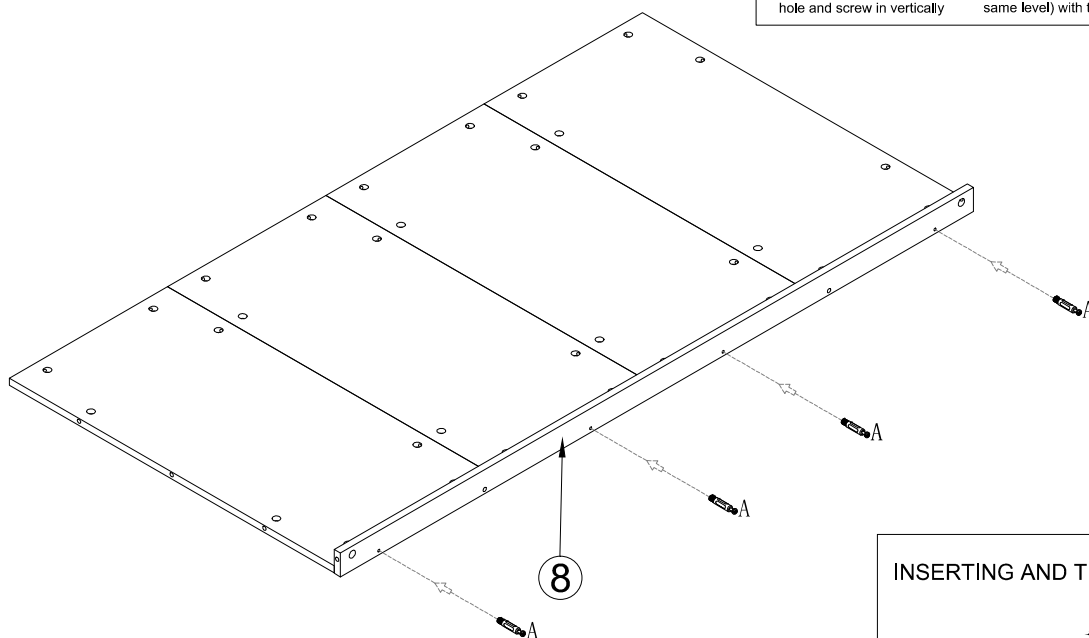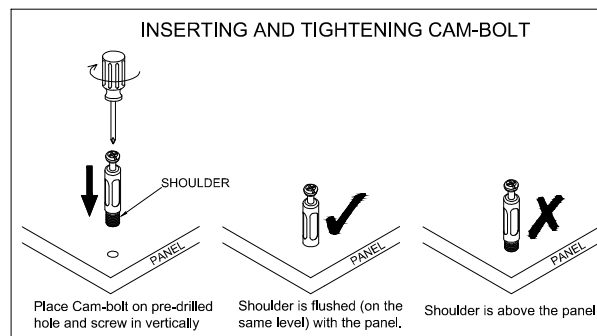







Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

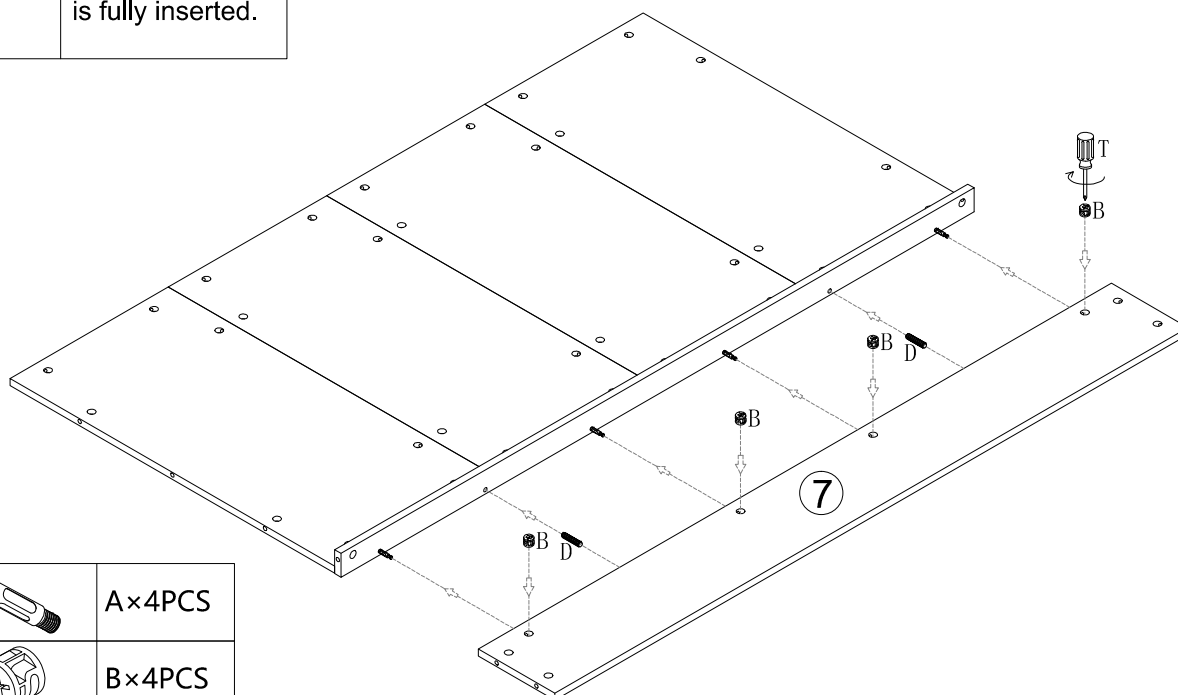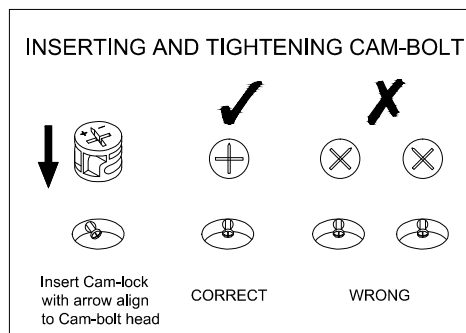

|  |        |
|--|--------|
|  | A×4PCS |
|  | B×4PCS |
|  | D×2PCS |









# STEP 4

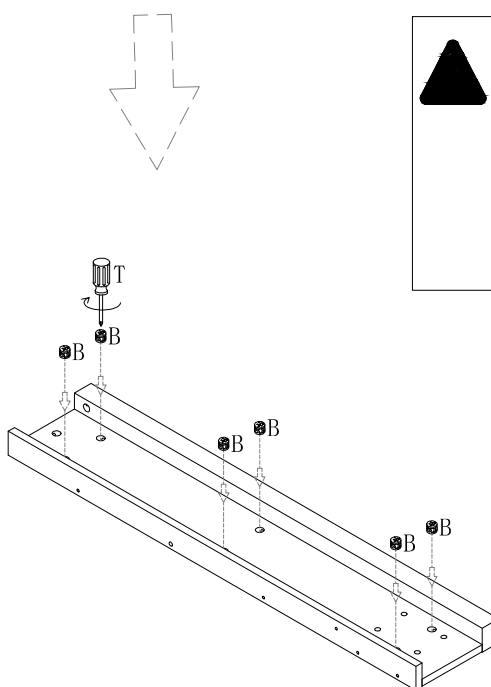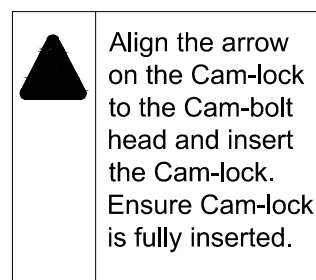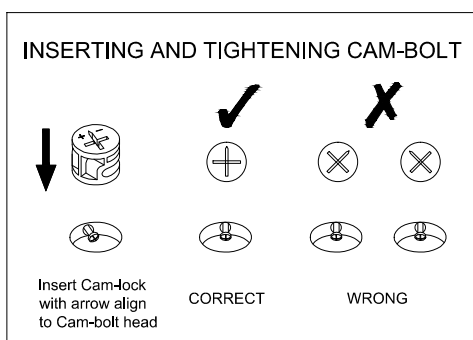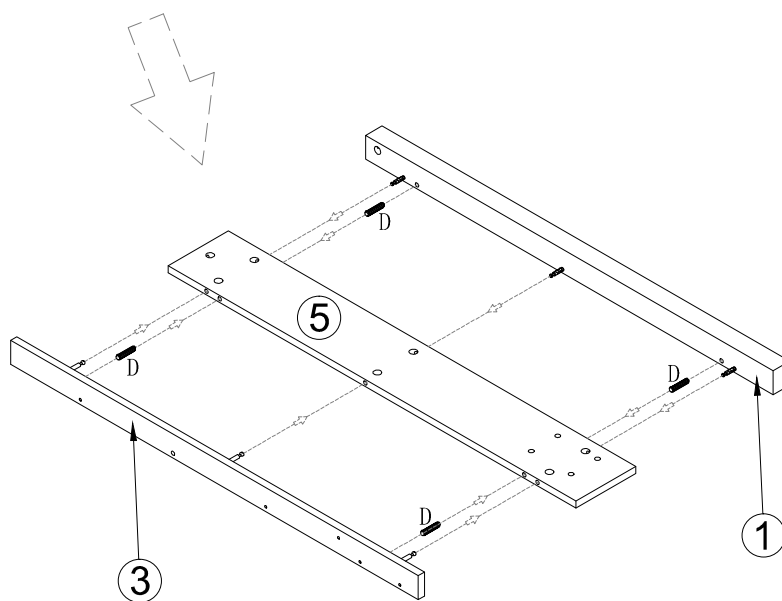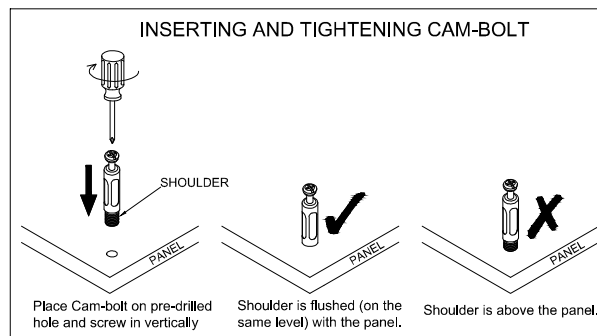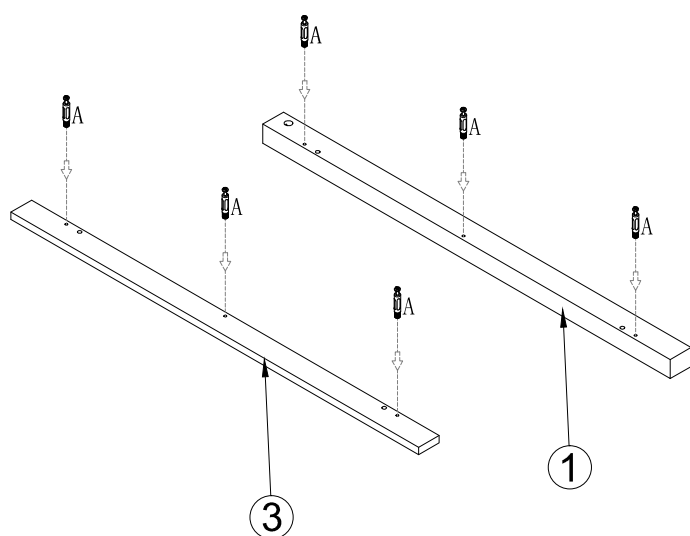







|  |        |
|--|--------|
|  | A×6PCS |
|  | B×6PCS |
|  | D×4PCS |

# STEP 5

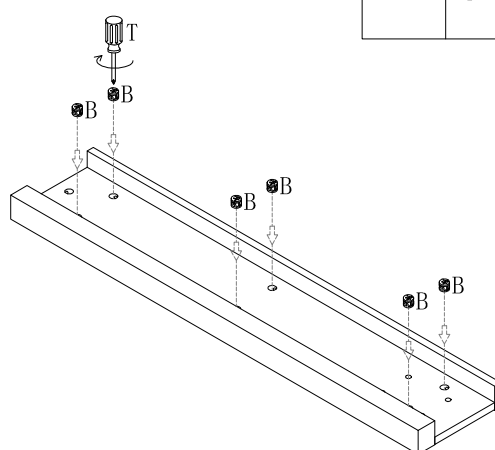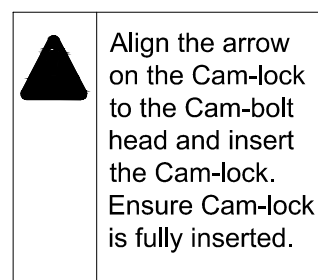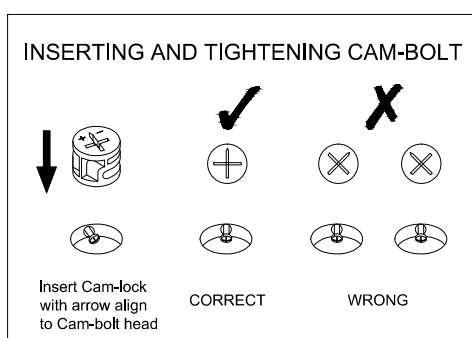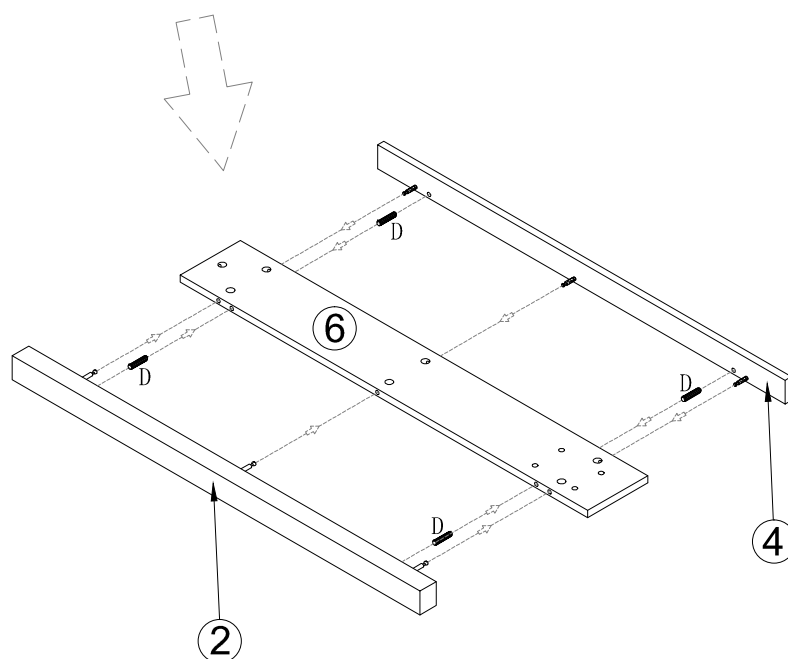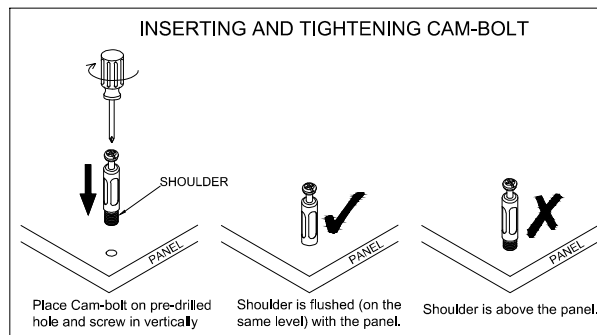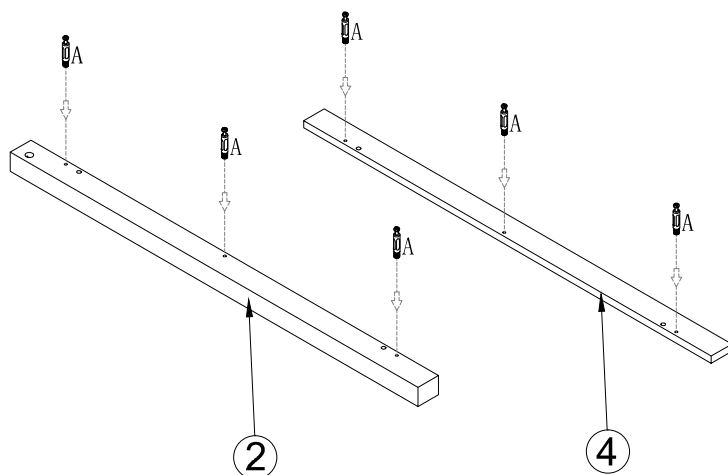







|  |        |
|--|--------|
|  | A×6PCS |
|  | B×6PCS |
|  | D×4PCS |

# STEP 6

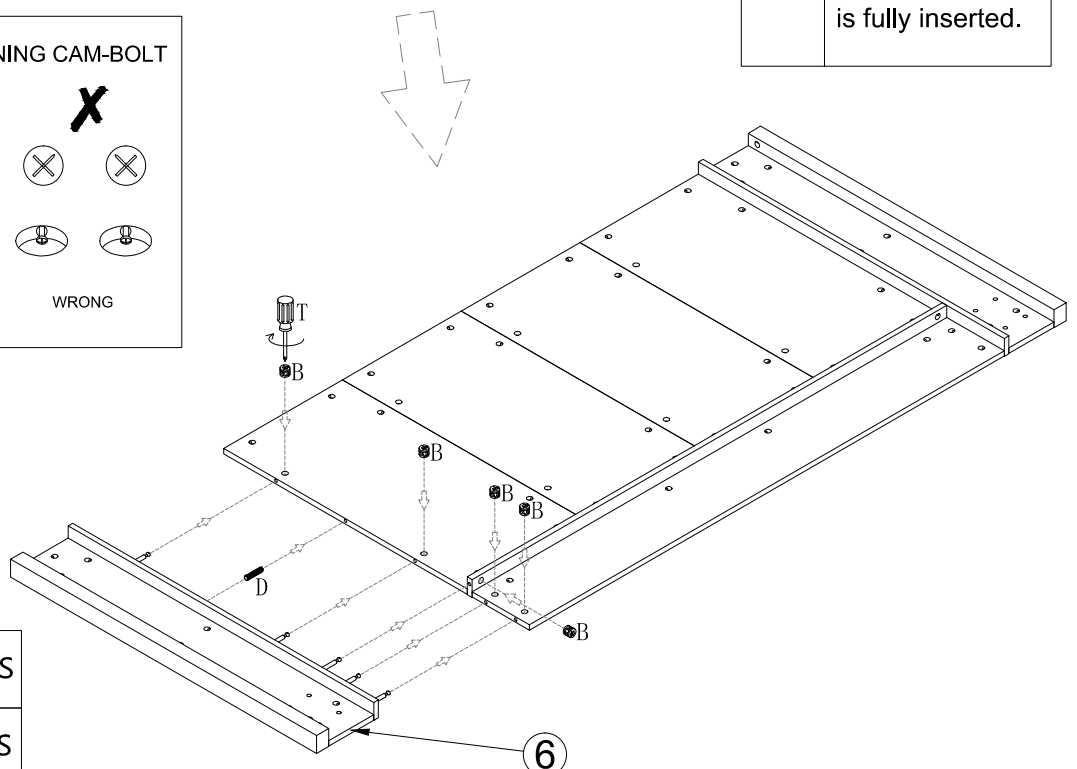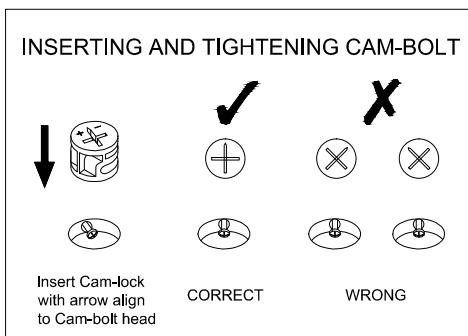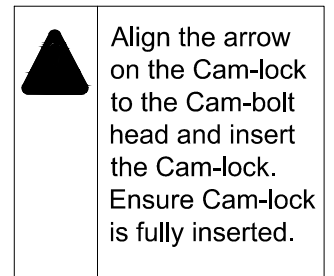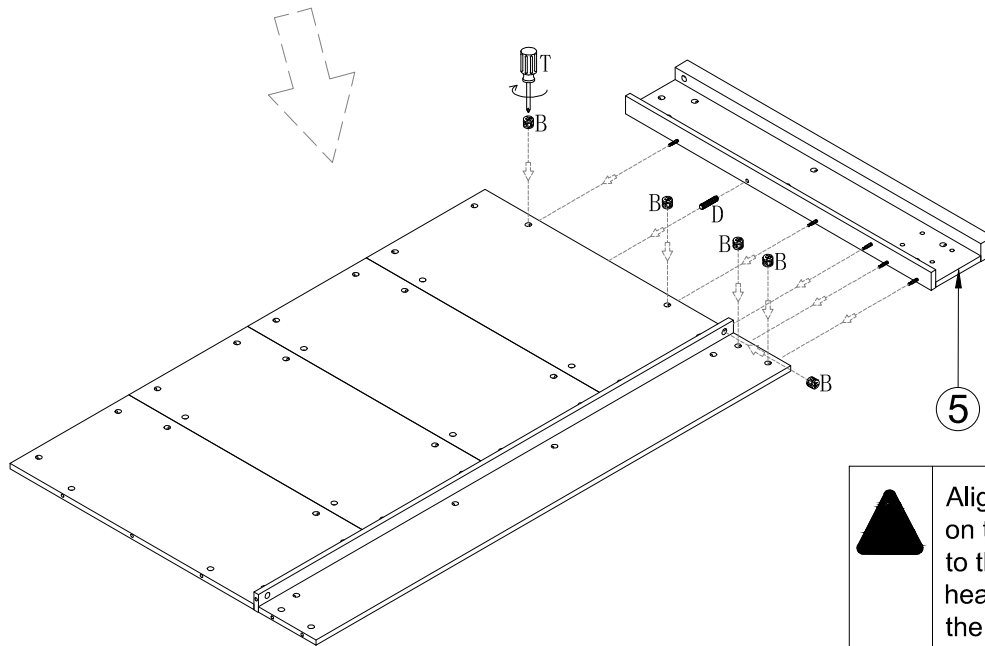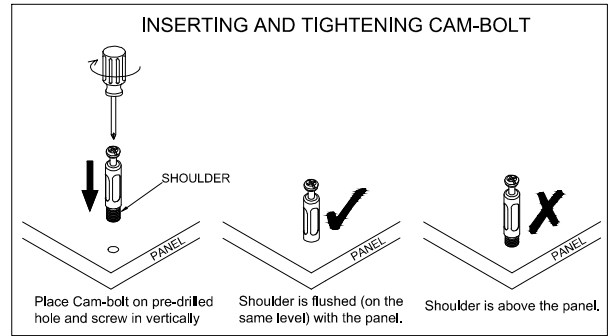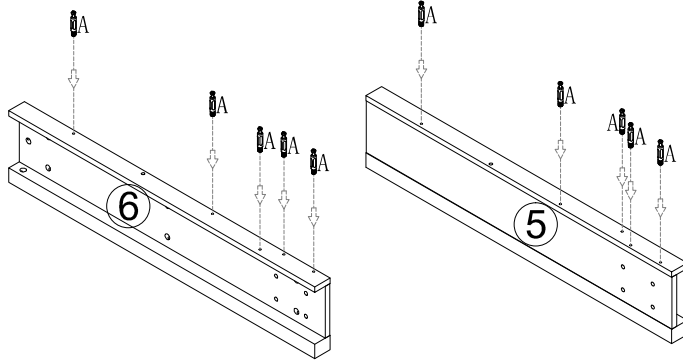







|  |         |
|--|---------|
|  | A×10PCS |
|  | B×10PCS |
|  | D×2PCS  |

# STEP 7

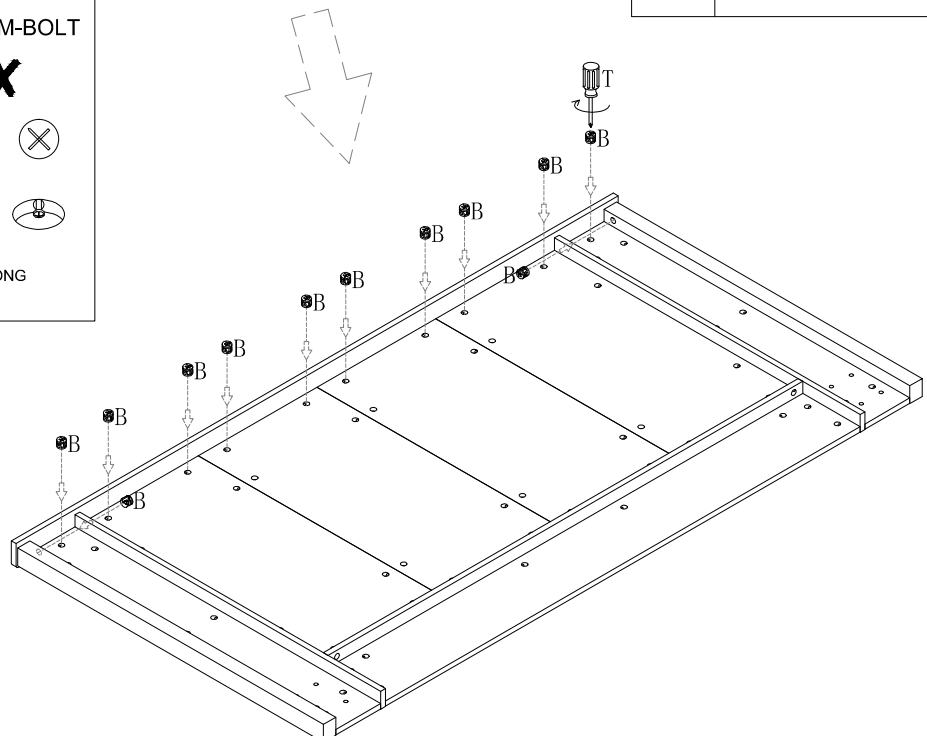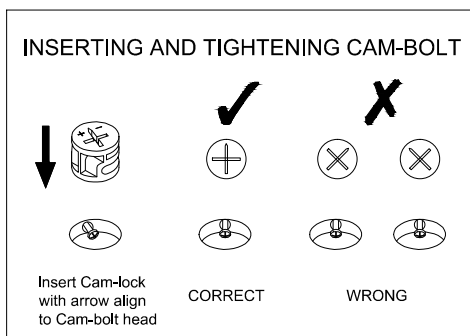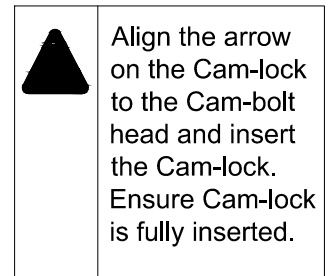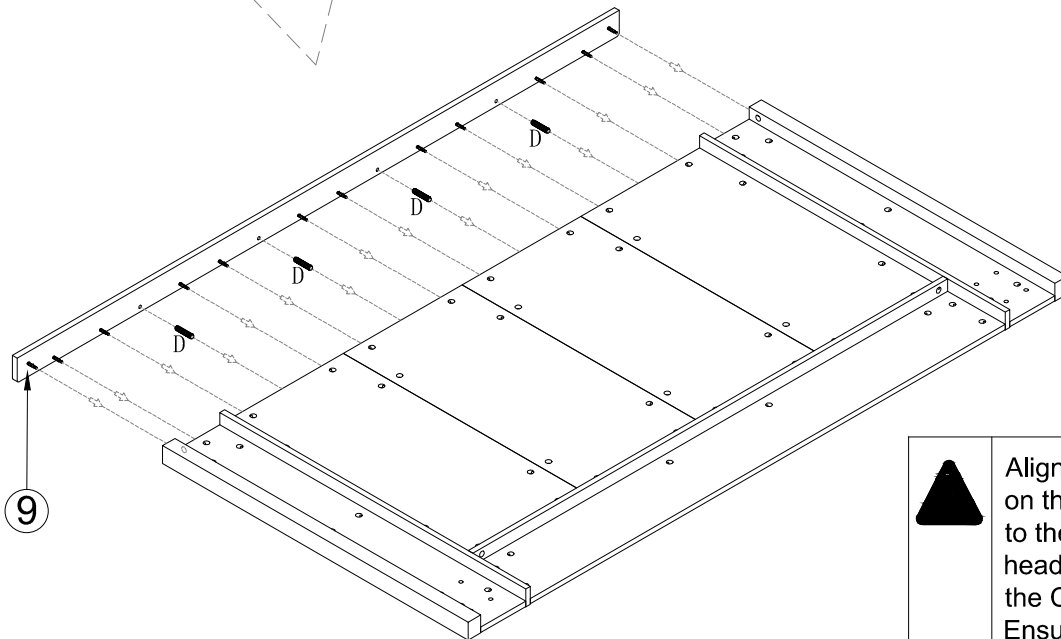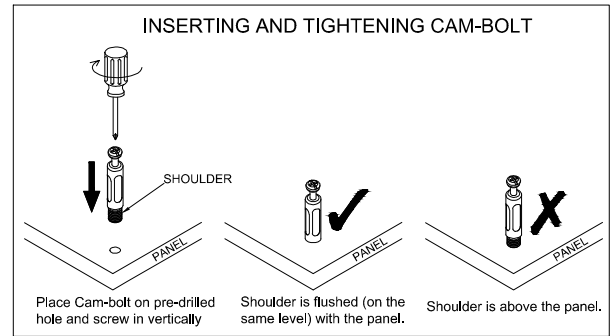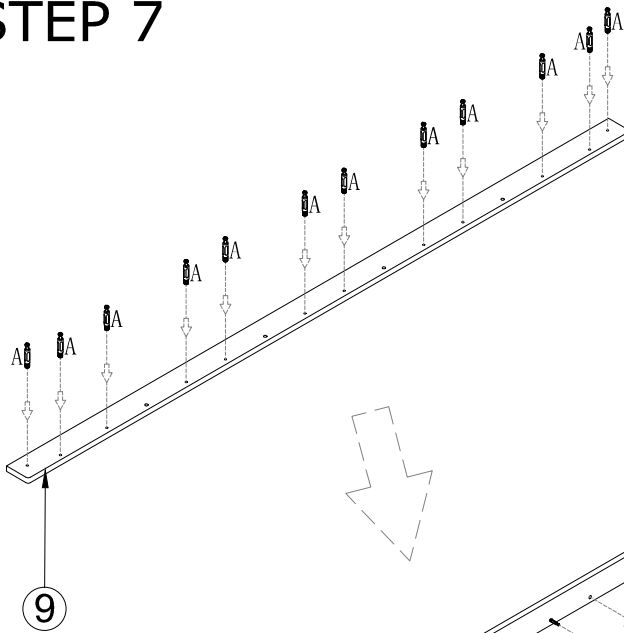







|  |         |
|--|---------|
|  | A×12PCS |
|  | B×12PCS |
|  | D×4PCS  |

# STEP 8

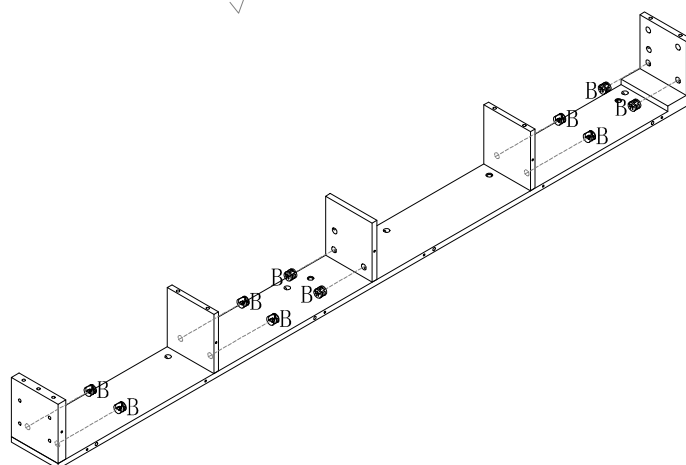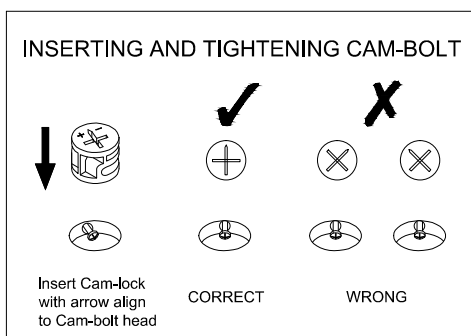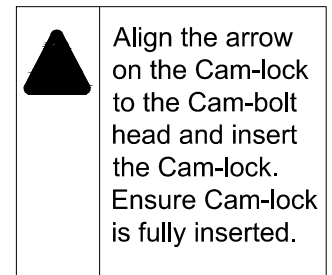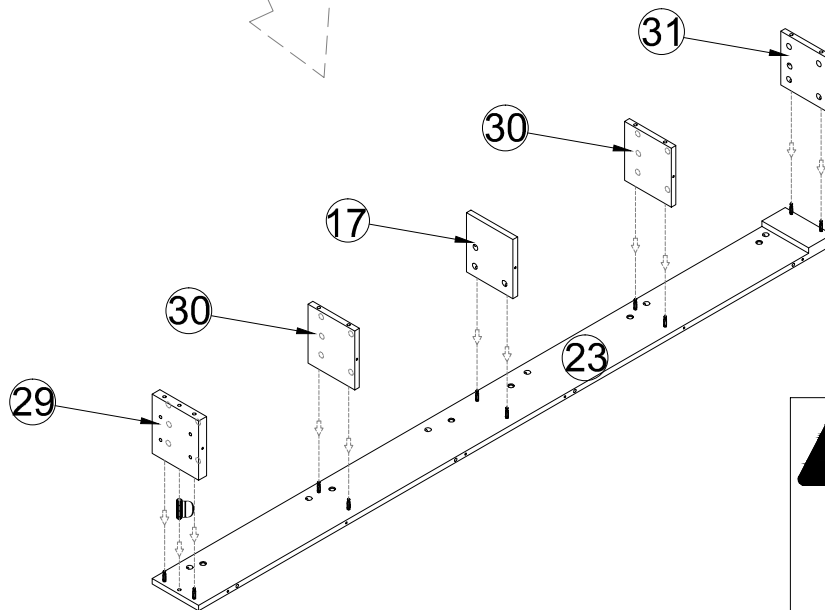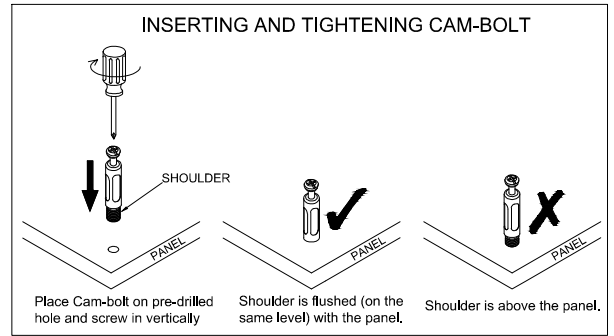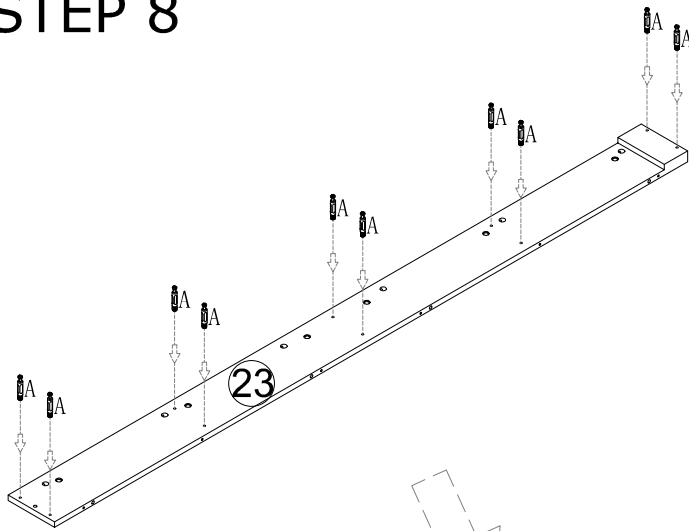







|  |         |
|--|---------|
|  | A×10PCS |
|  | B×10PCS |
|  | D×1PCS  |

# STEP 9

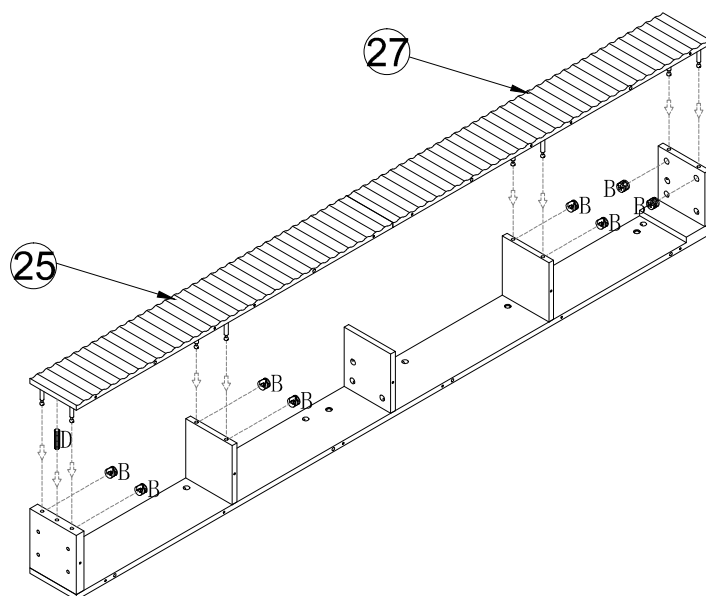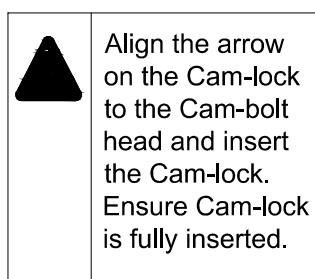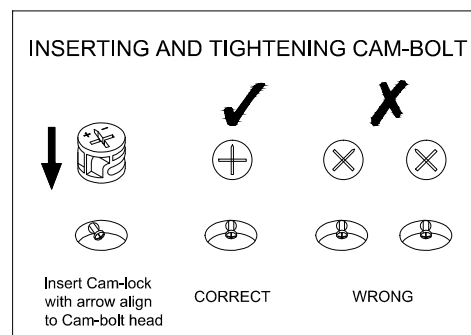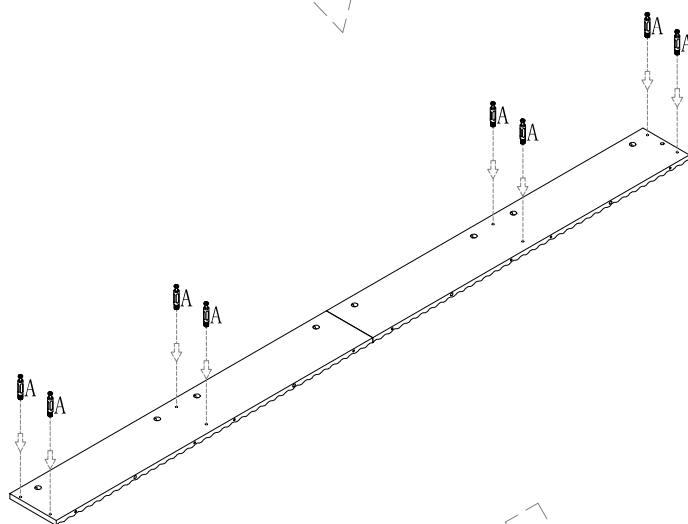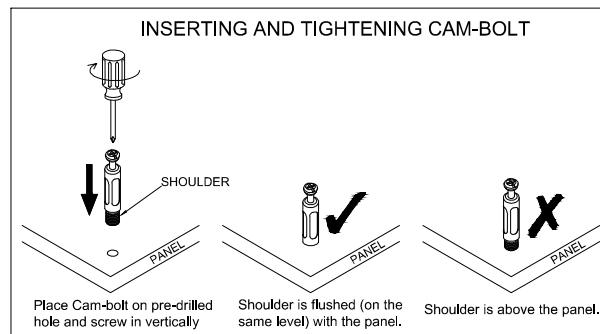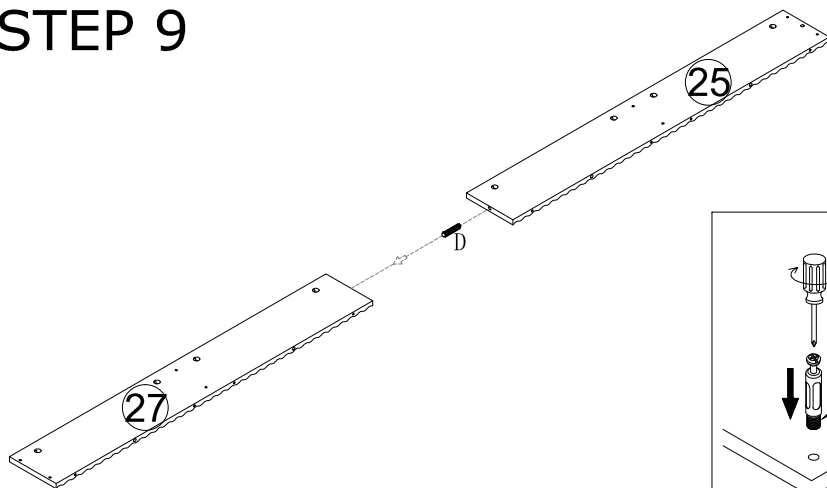


|  |        |
|--|--------|
|  | A×8PCS |
|  | B×8PCS |
|  | D×2PCS |



# STEP 10

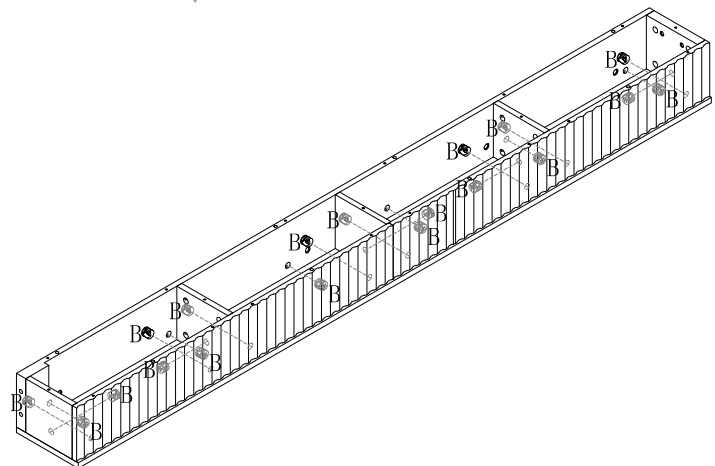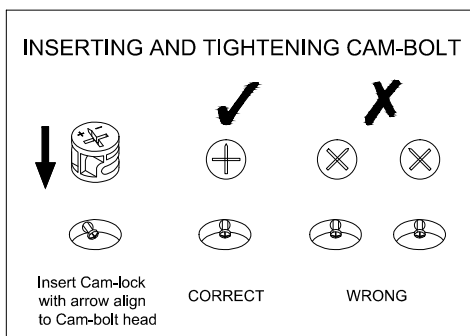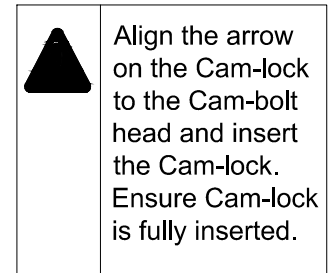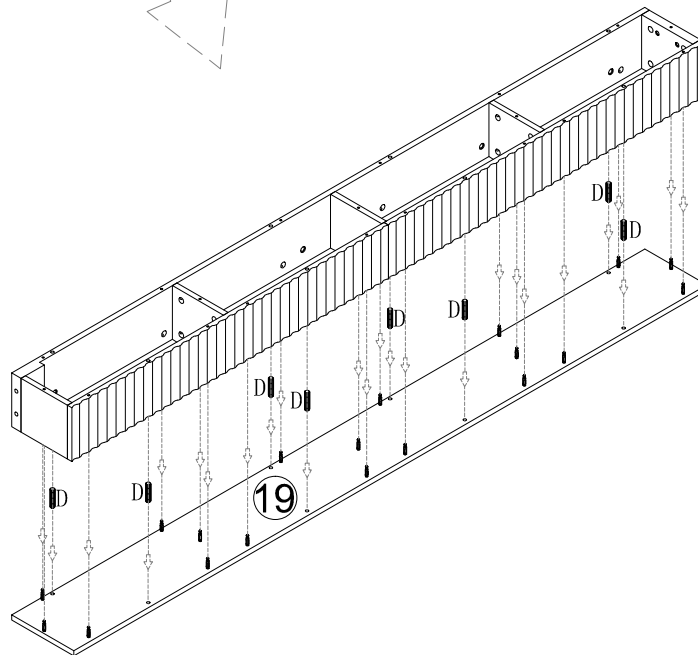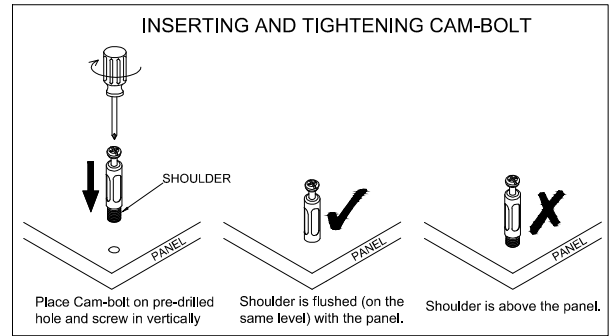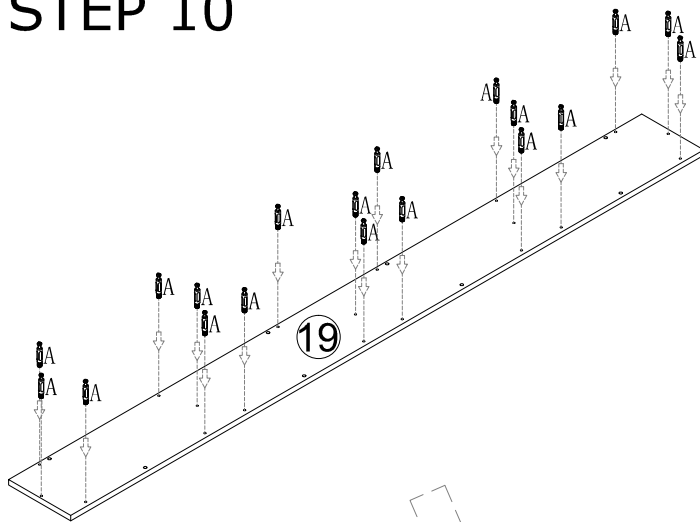

|  |         |
|--|---------|
|  | A×19PCS |
|  | B×19PCS |
|  | D×8PCS  |







STEP 11

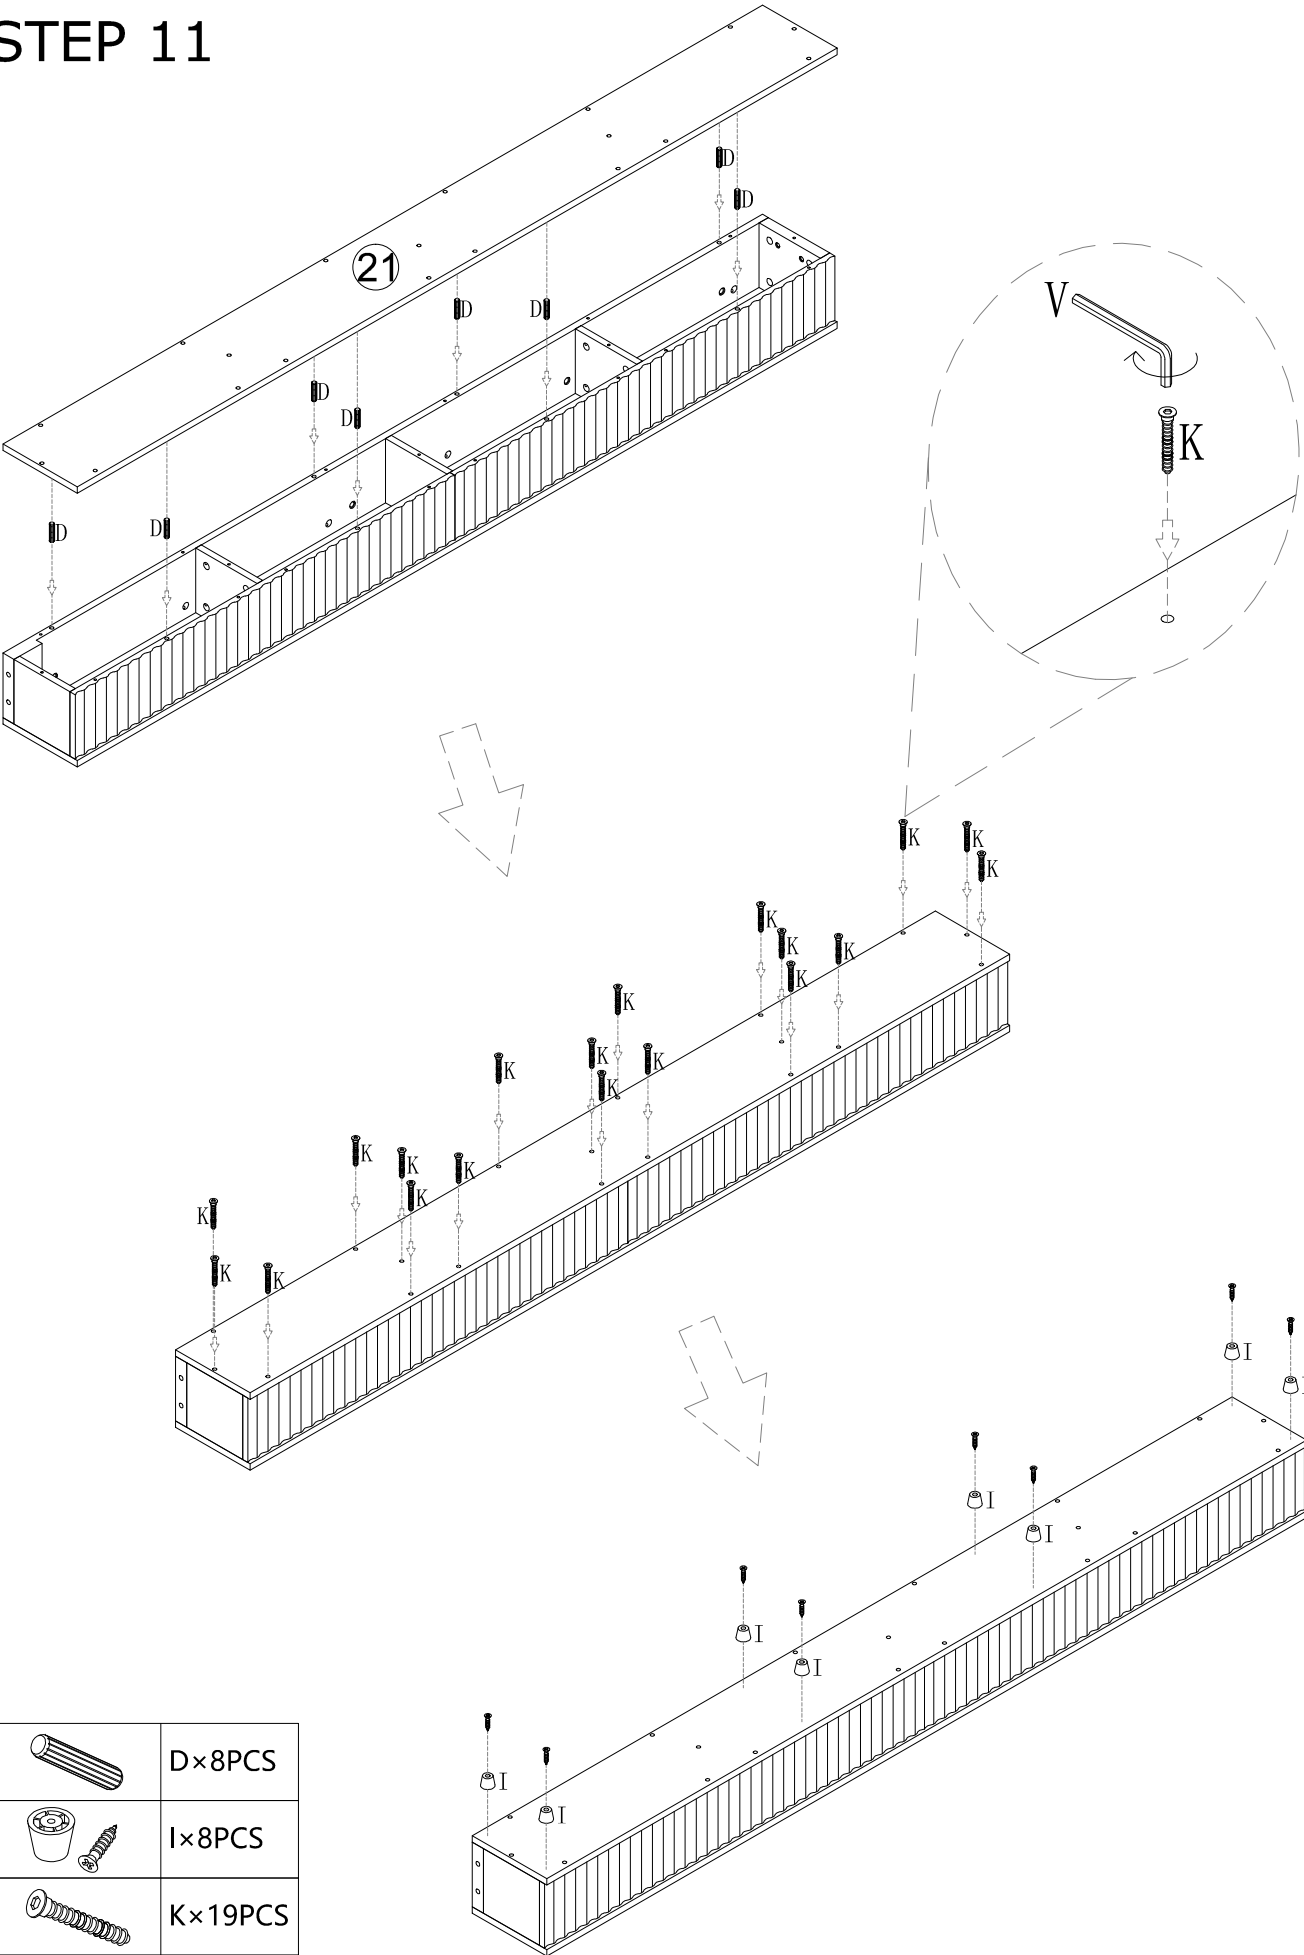

|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
|  | D×8PCS  |
|  | I×8PCS  |
|  | K×19PCS |
|  | V×1PC   |









# STEP 12

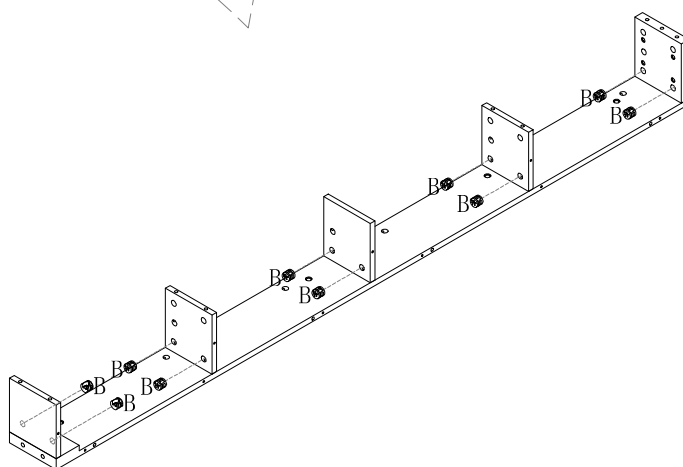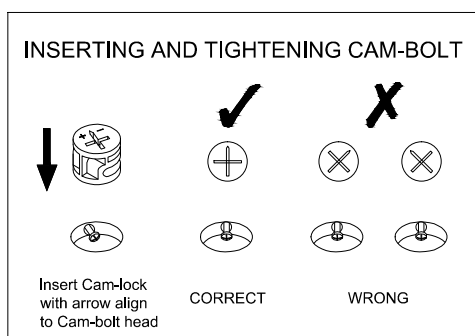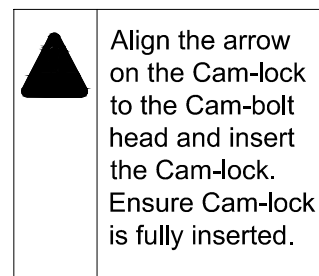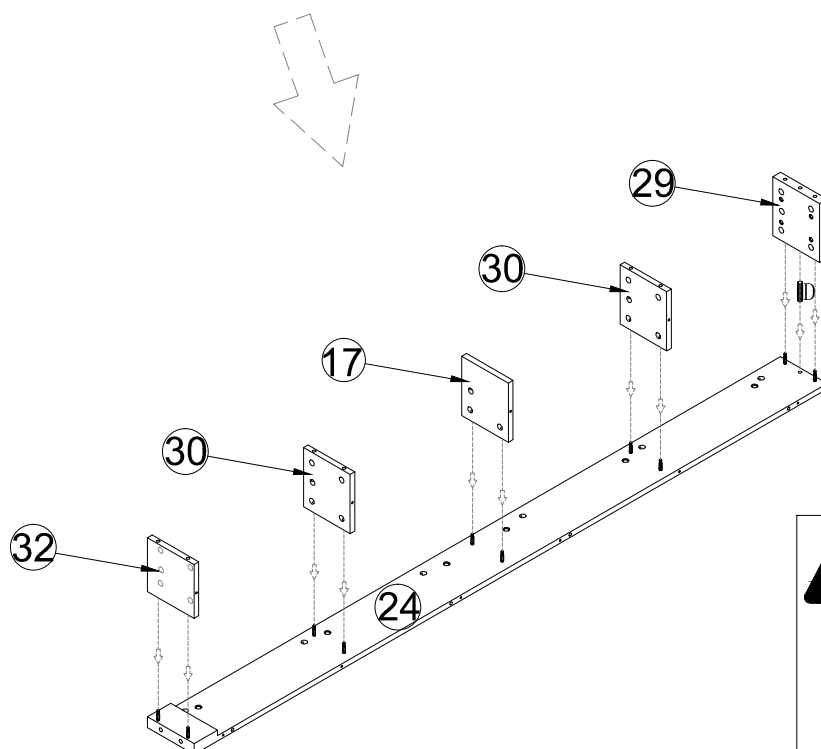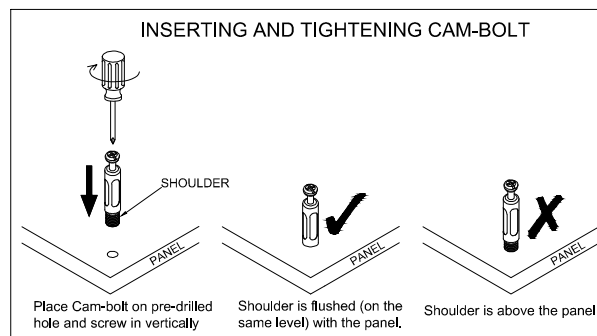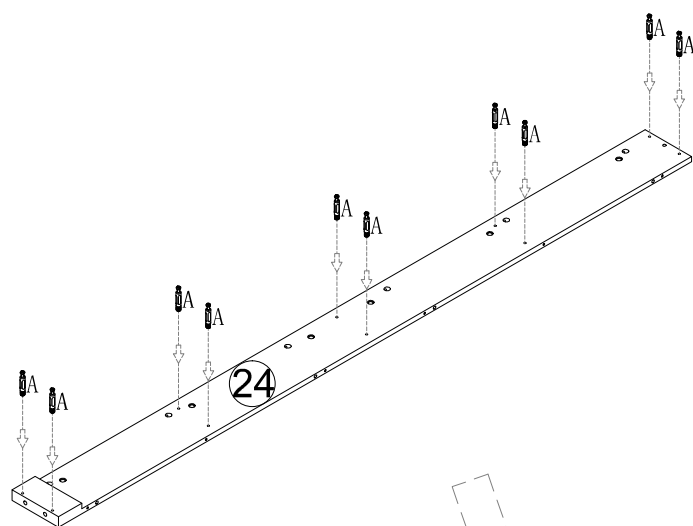







|  |         |
|--|---------|
|  | A×10PCS |
|  | B×10PCS |
|  | D×1PCS  |

# STEP 13

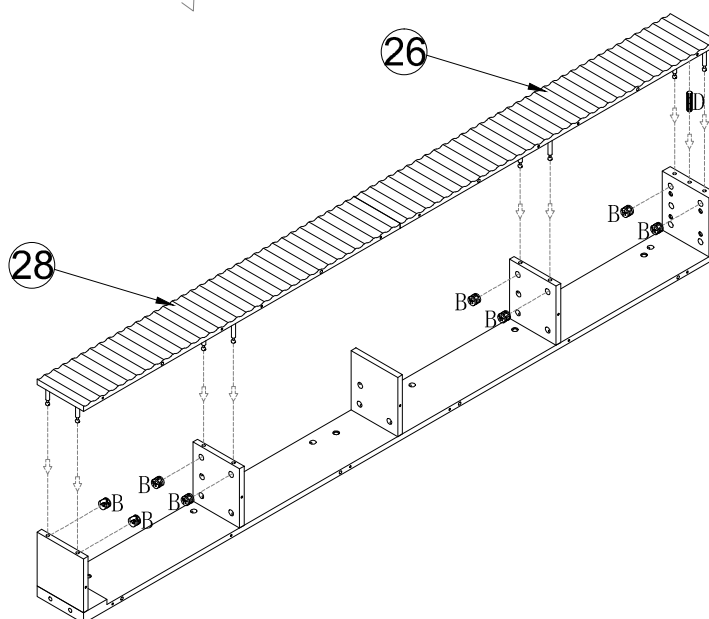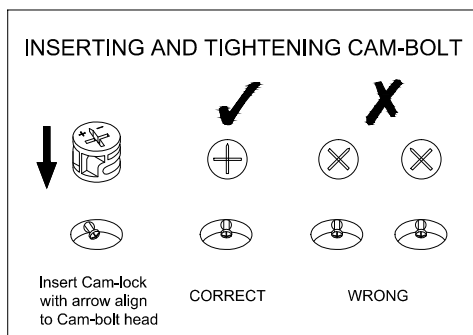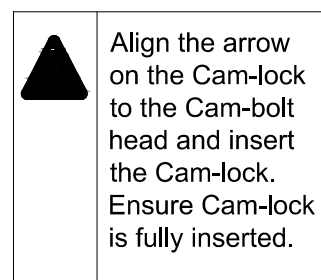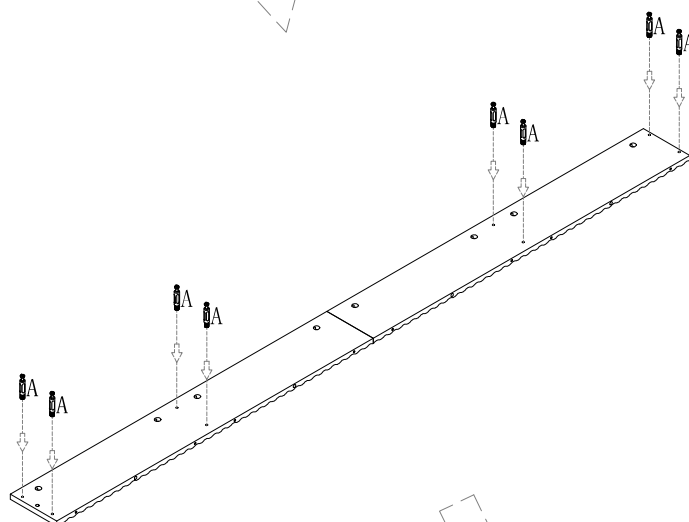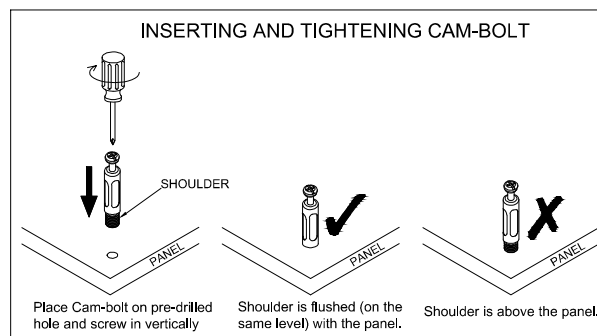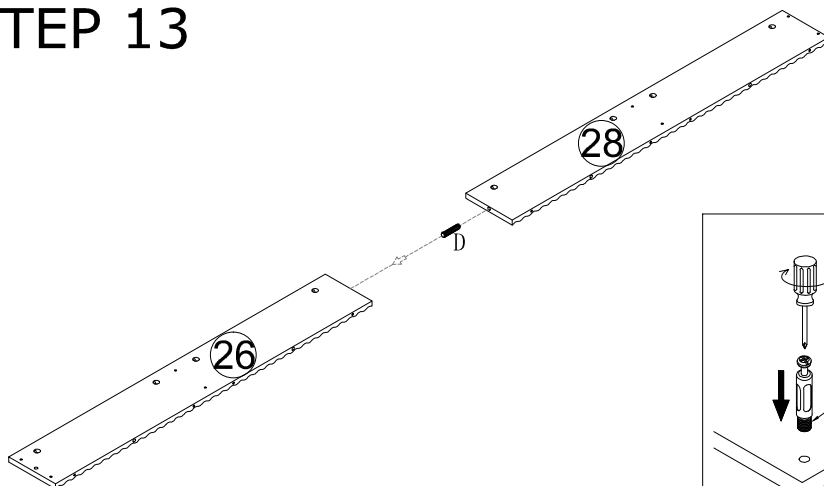


|  |        |
|--|--------|
|  | A×8PCS |
|  | B×8PCS |
|  | D×2PCS |


# STEP 14

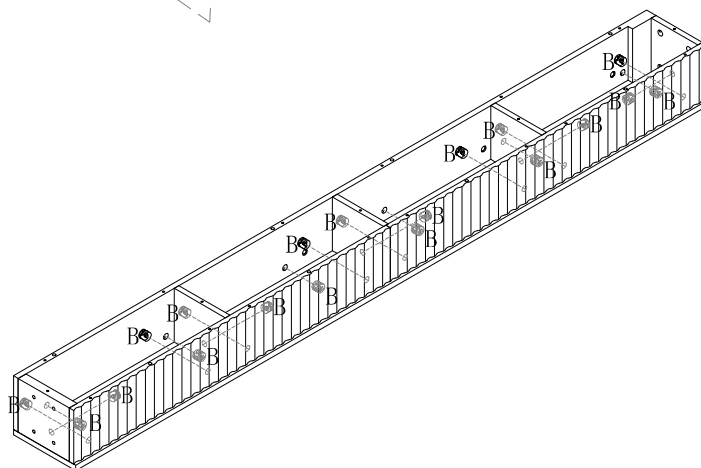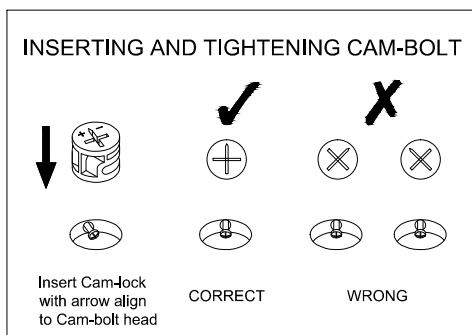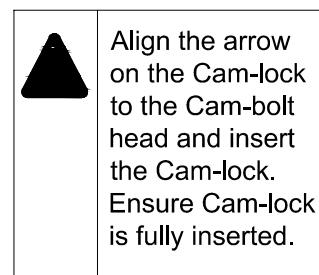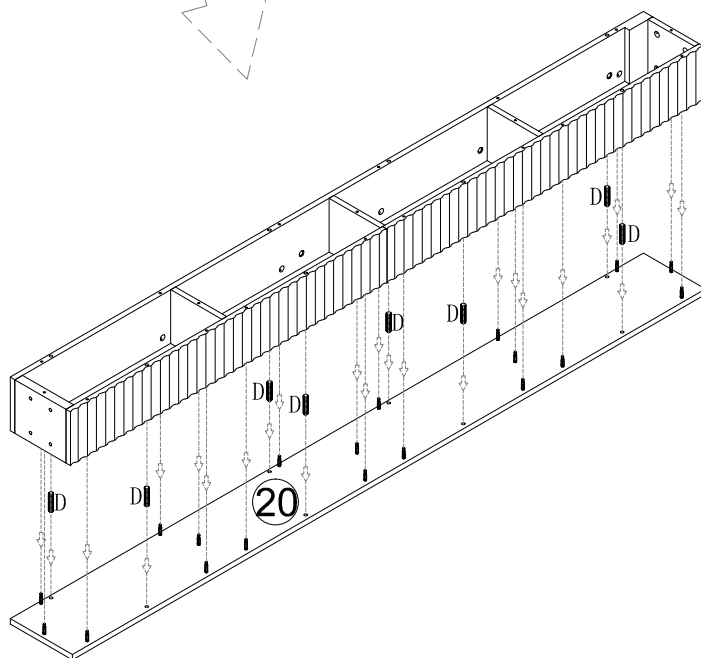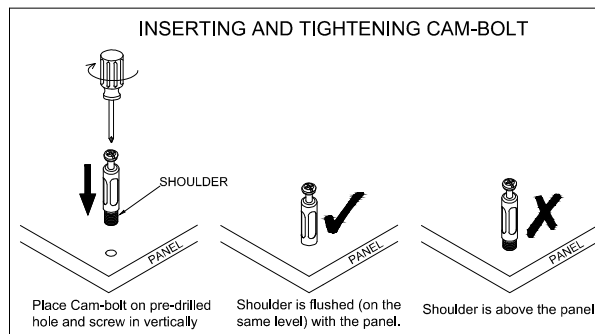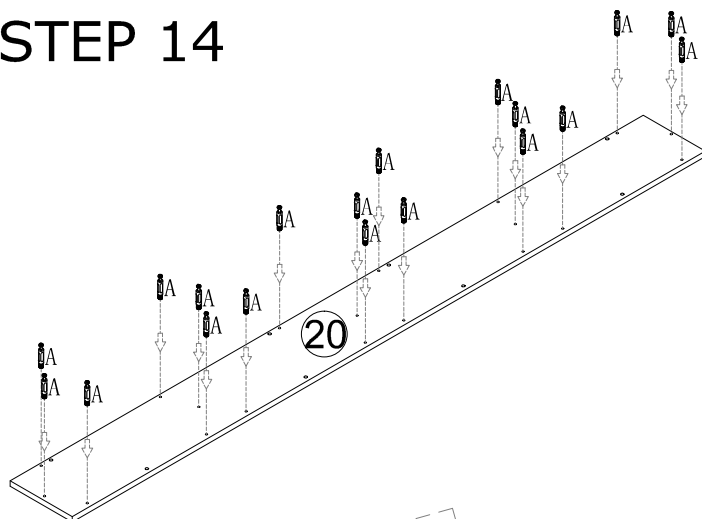







|  |         |
|--|---------|
|  | A×19PCS |
|  | B×19PCS |
|  | D×8PCS  |

STEP 15

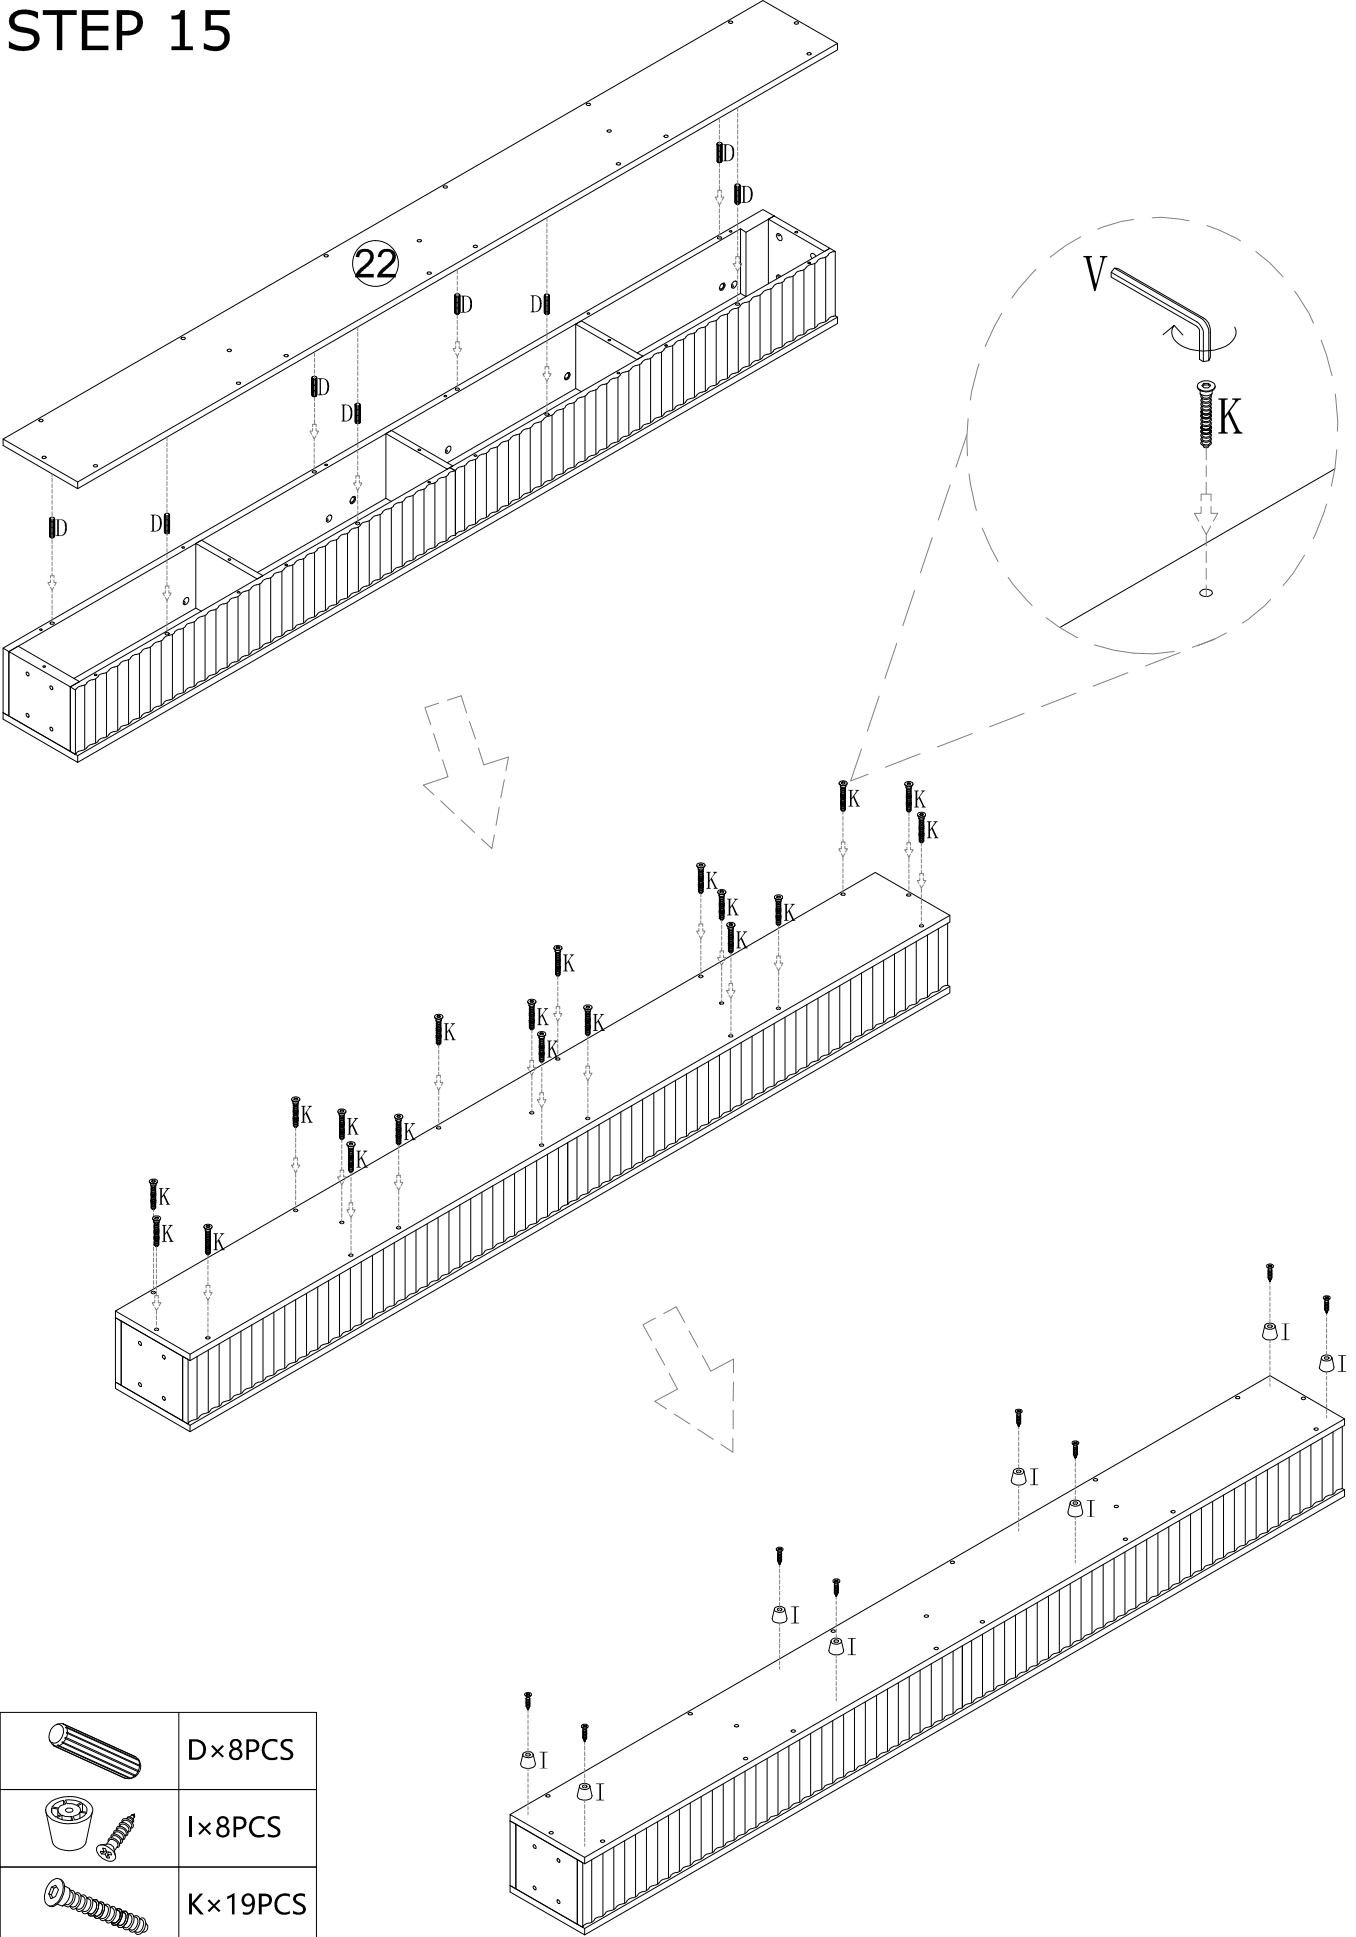







|                                                                                     |                   |
|-------------------------------------------------------------------------------------|-------------------|
|  | D×8PCS            |
|  | I×8PCS<br>K×19PCS |
|  | V×1PC             |

# STEP 16

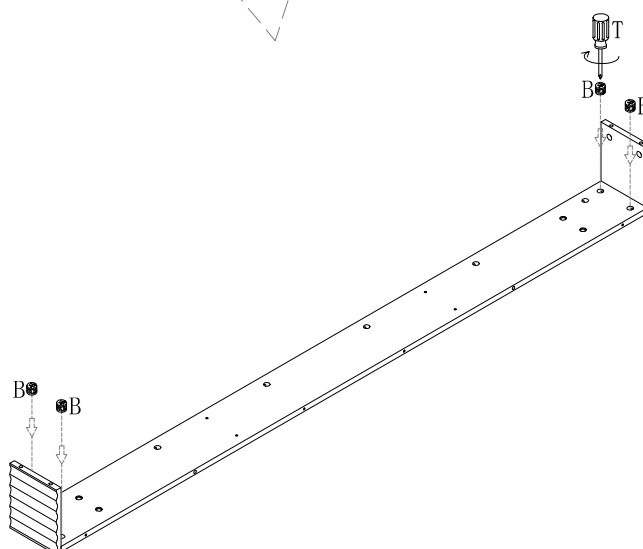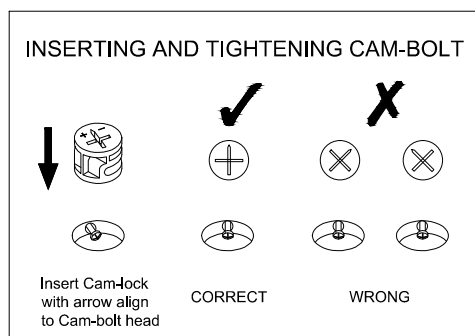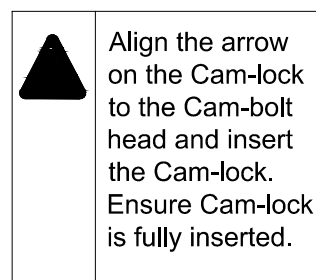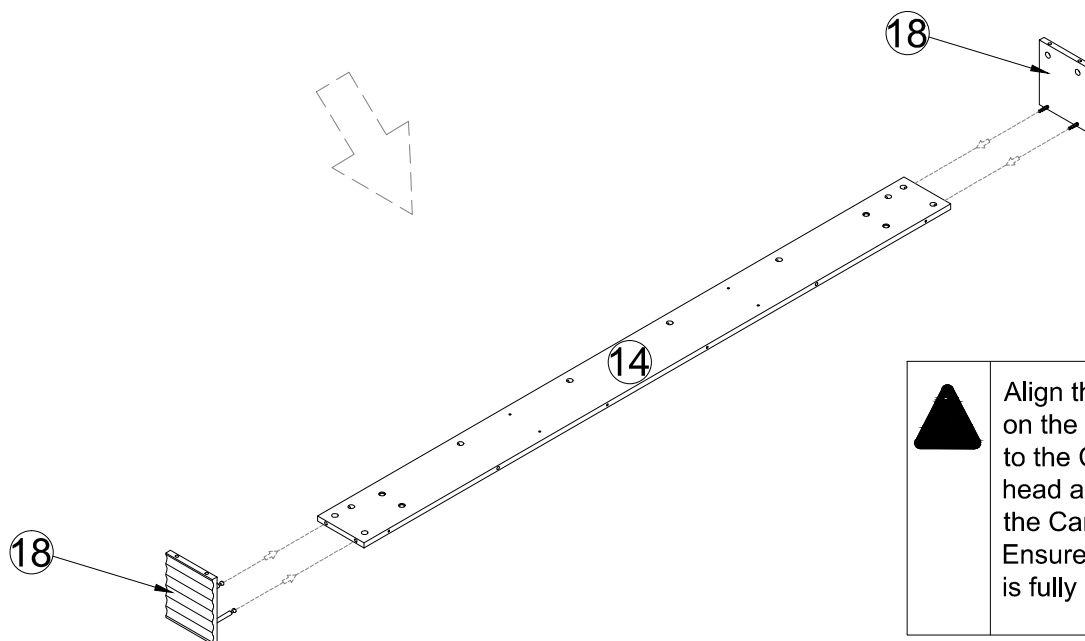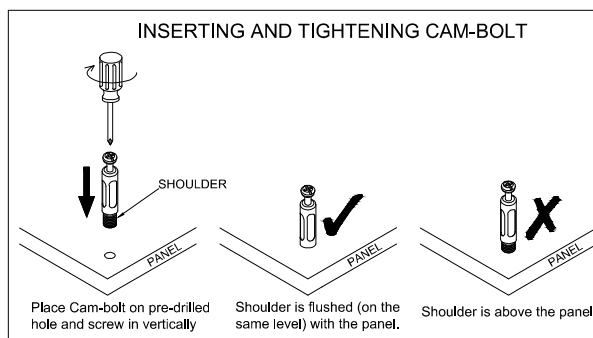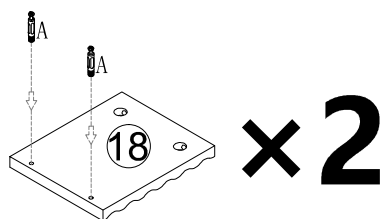







|  |           |
|--|-----------|
|  | A x 4 PCS |
|  | B x 4 PCS |

# STEP 17

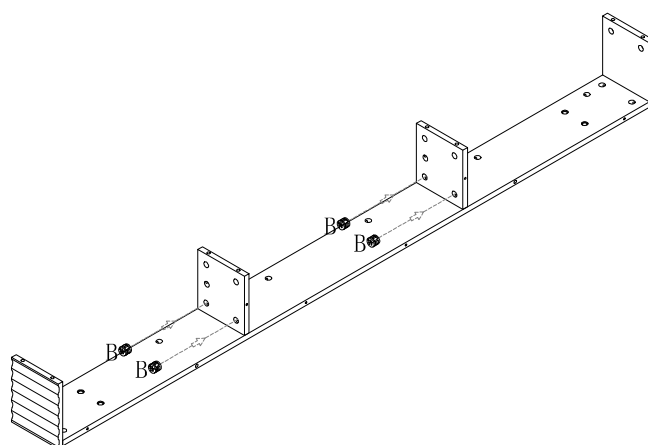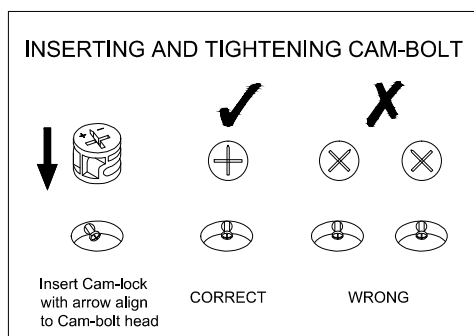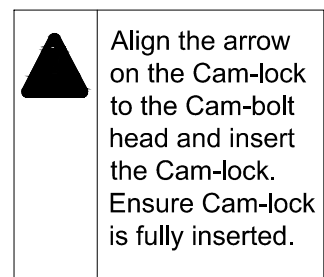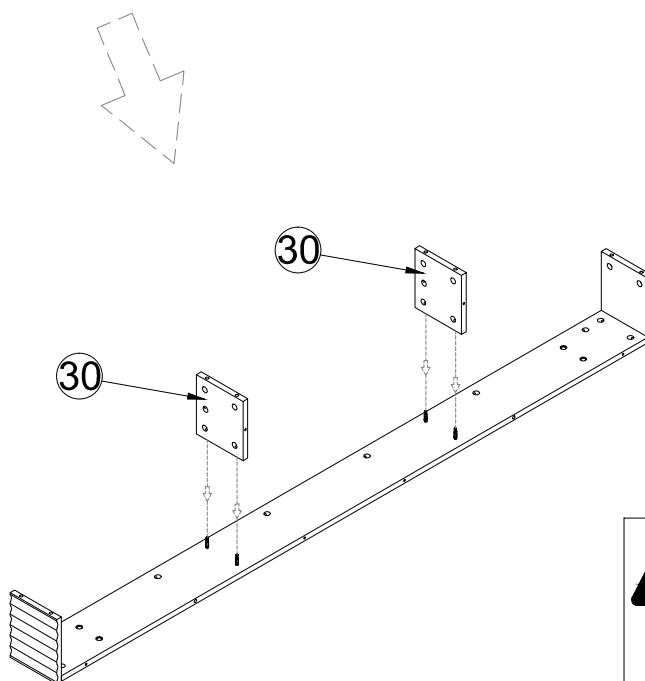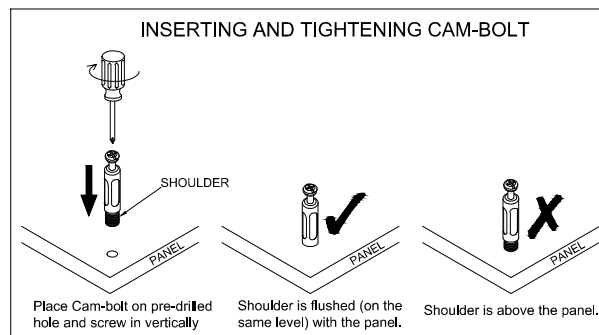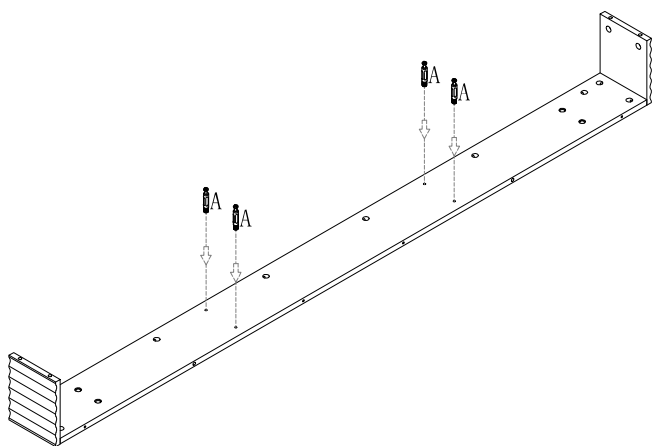







|  |        |
|--|--------|
|  | A×4PCS |
|  | B×4PCS |

# STEP 18

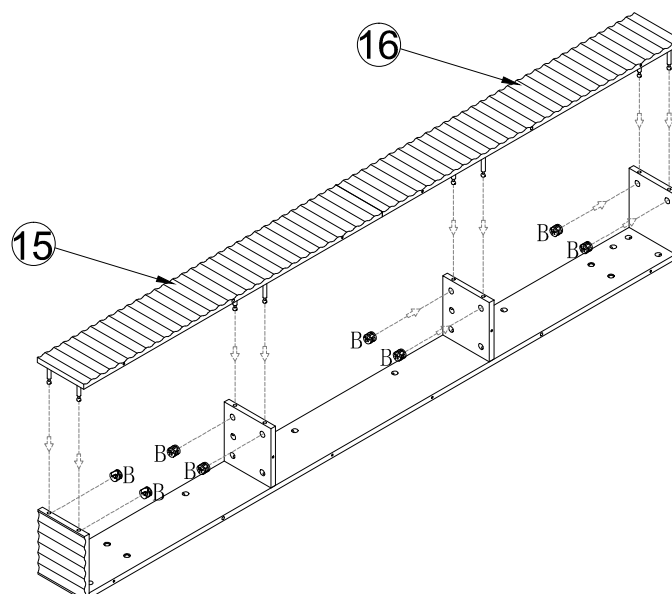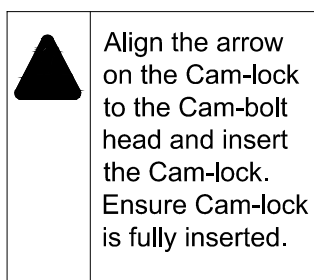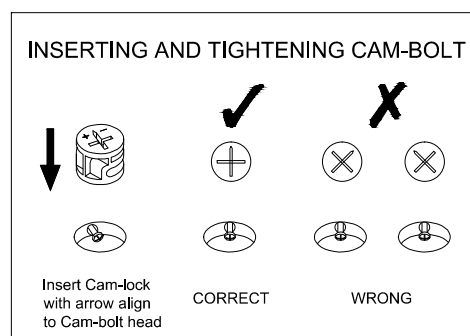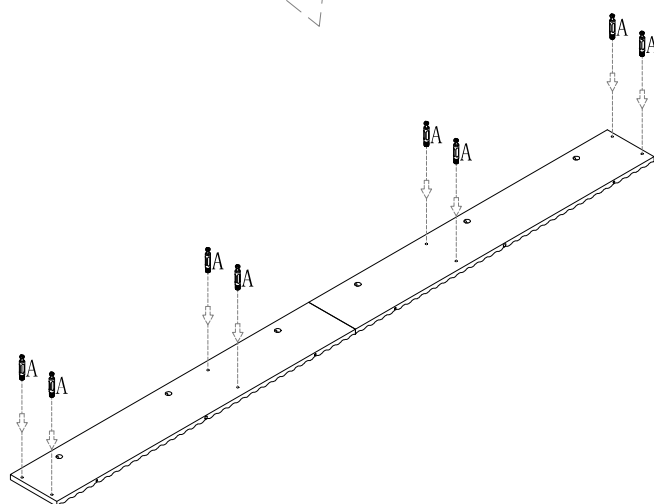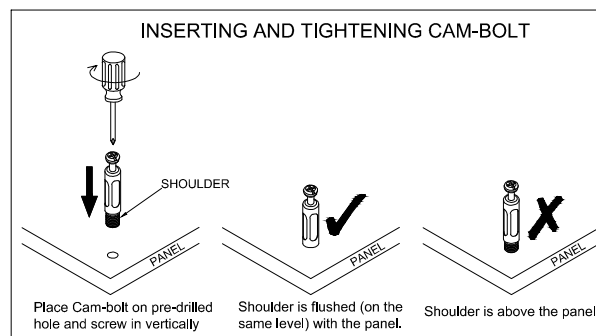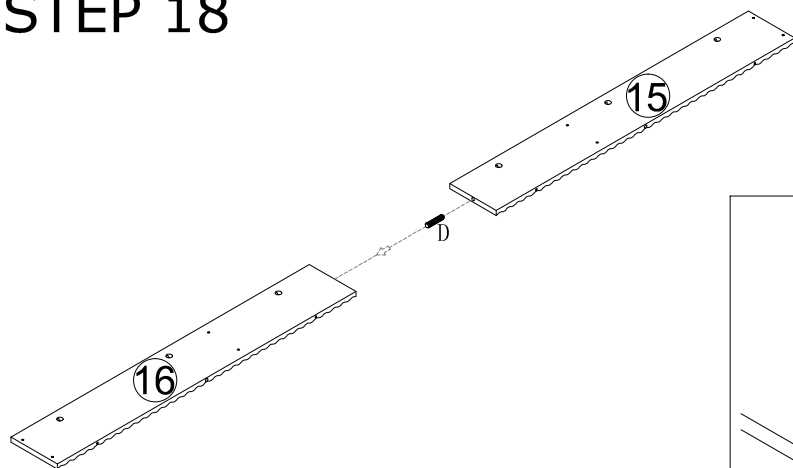

|  |        |
|--|--------|
|  | A×8PCS |
|  | B×8PCS |
|  | D×1PCS |

# STEP 19

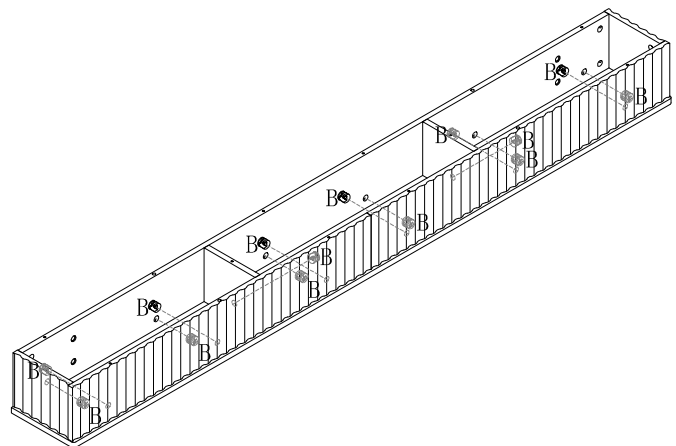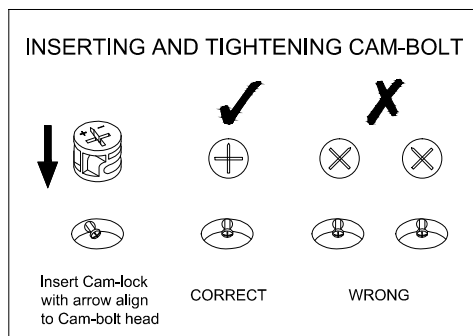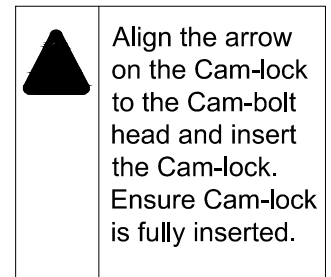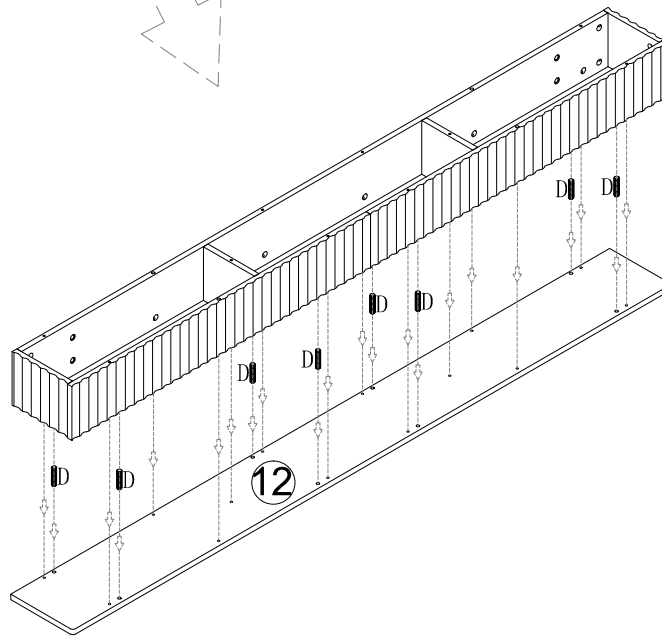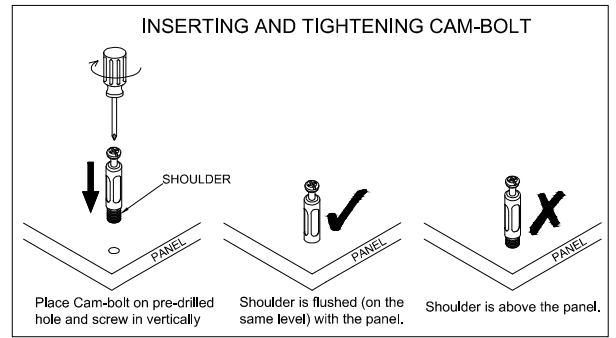
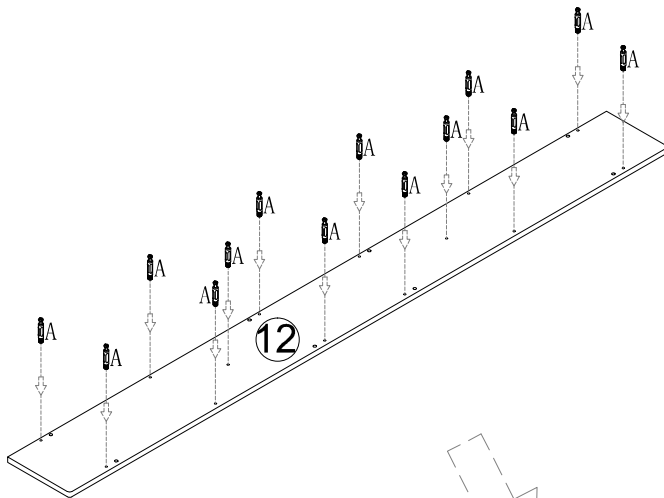


|  |         |
|--|---------|
|  | A×14PCS |
|  | B×14PCS |
|  | D×8PCS  |



# STEP 20

This diagram illustrates the final step of the assembly process. A long, thin rectangular panel, labeled with a circled '13', is being positioned above a base structure. The base structure consists of a long, narrow frame with a series of vertical slats or dividers. Dashed lines with circular arrows indicate the placement of screws (labeled 'D') to secure the top panel to the base. The panel has pre-drilled holes along its length, corresponding to the screw locations. A dashed arrow at the bottom right points towards the next step.

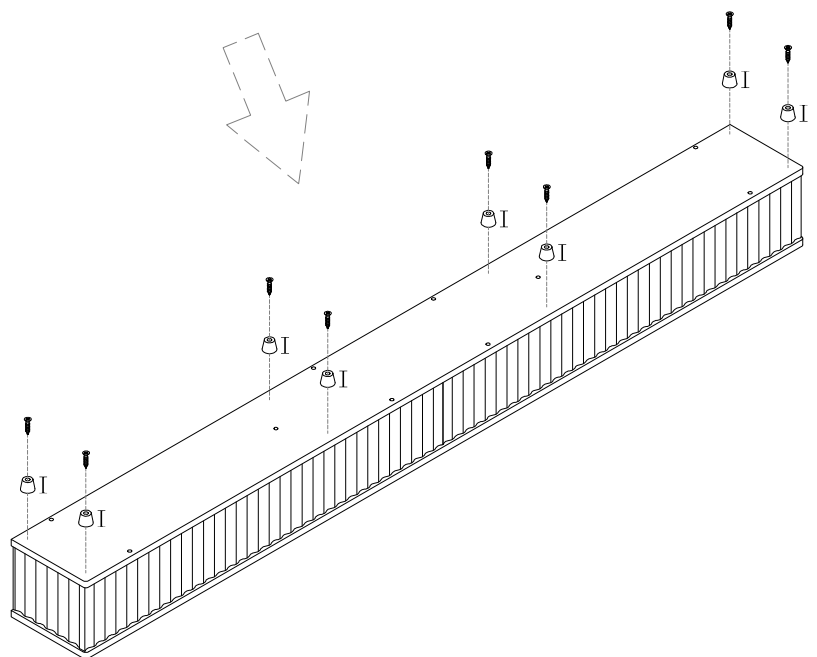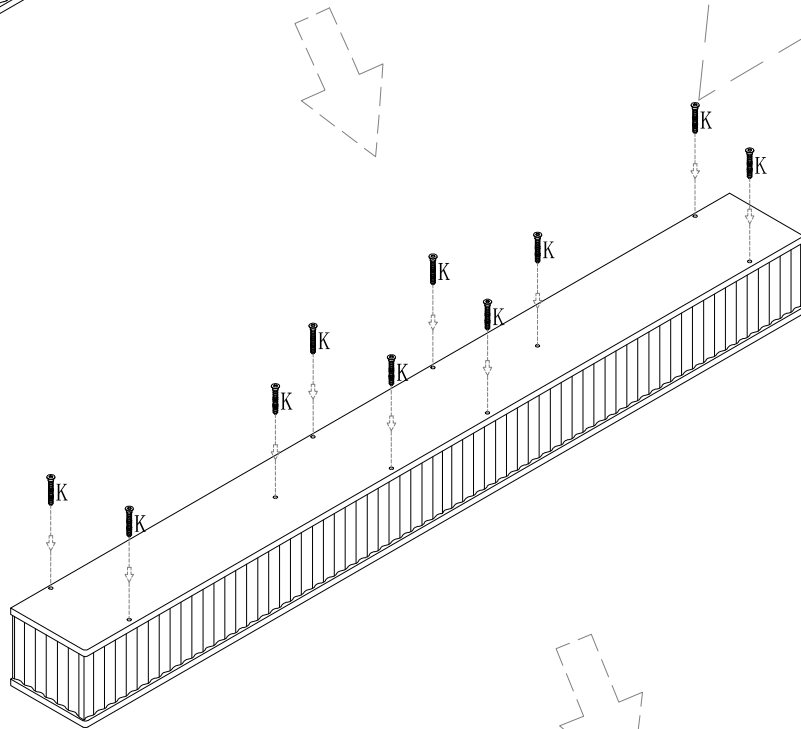


|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
|  | D×4PCS  |
|  | I×8PCS  |
|  | K×10PCS |
|  | V×1PC   |


# STEP 21






Reminder: The bed frame is heavy. From this step on, please place the accessories in the area where the bed will eventually be placed, and then proceed with subsequent assembly operations.

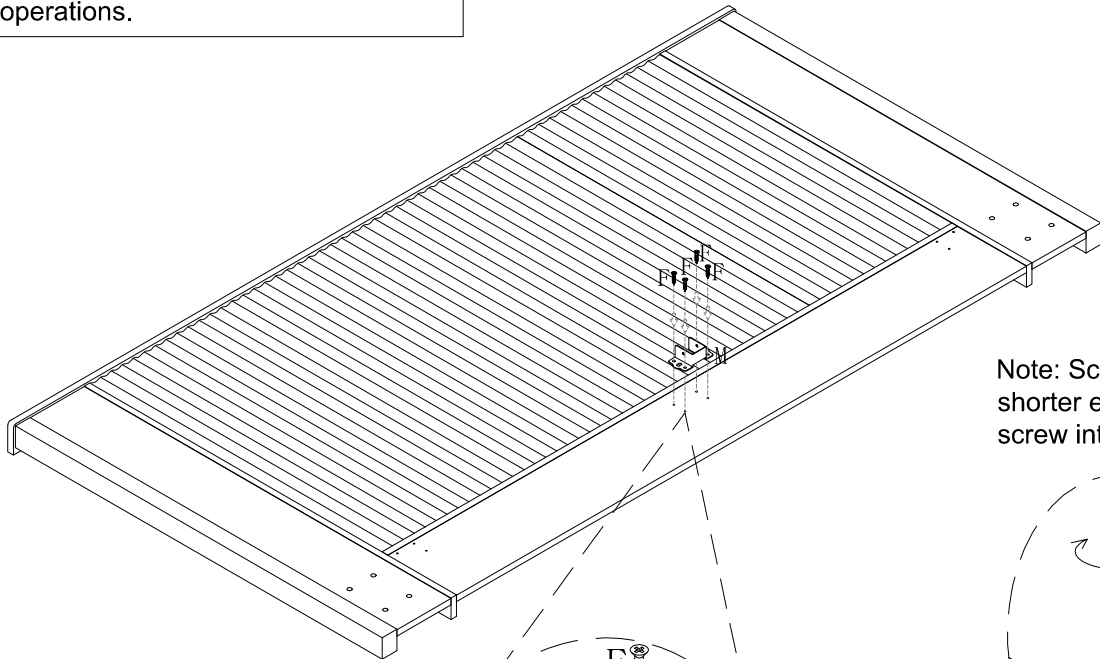

Note: Screw the shorter end of the screw into the board.

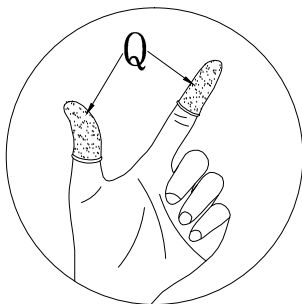


When installing the screw R, please wear finger cots for better grip and finger protection.

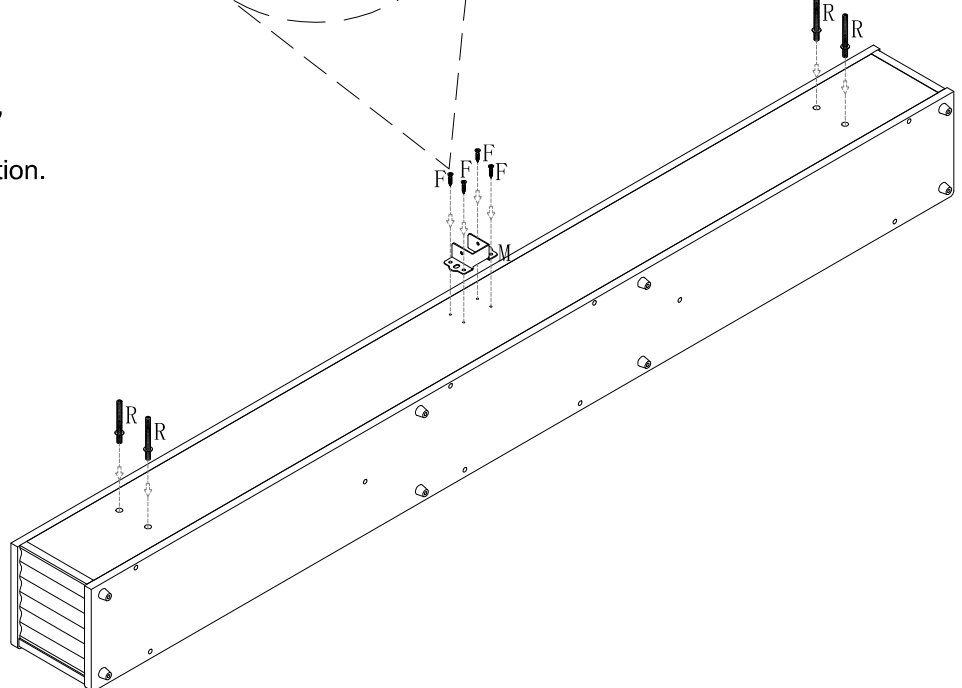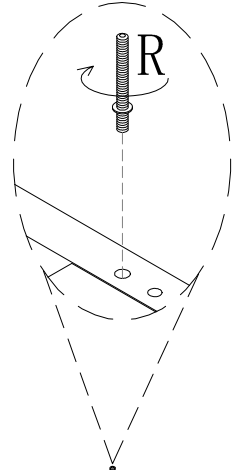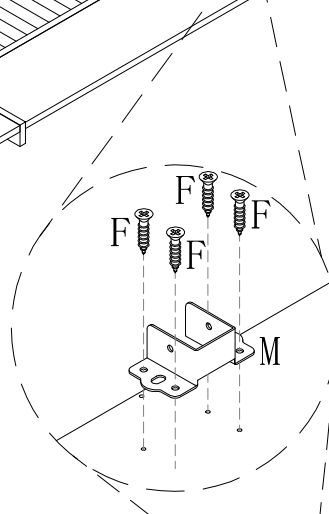



|                                                                                     |        |
|-------------------------------------------------------------------------------------|--------|
|  | F×8PCS |
|  | M×2PCS |
|  | Q×4PCS |
|  | R×4PCS |


# STEP 22

When installing the footboard to the bed side components, do not push it all the way in directly, otherwise attaching the accessory labeled 'O' will be difficult. First, push it in about 80%, then attach the accessory labeled 'O', and then push the footboard all the way in, and secure the accessory labeled 'P'.

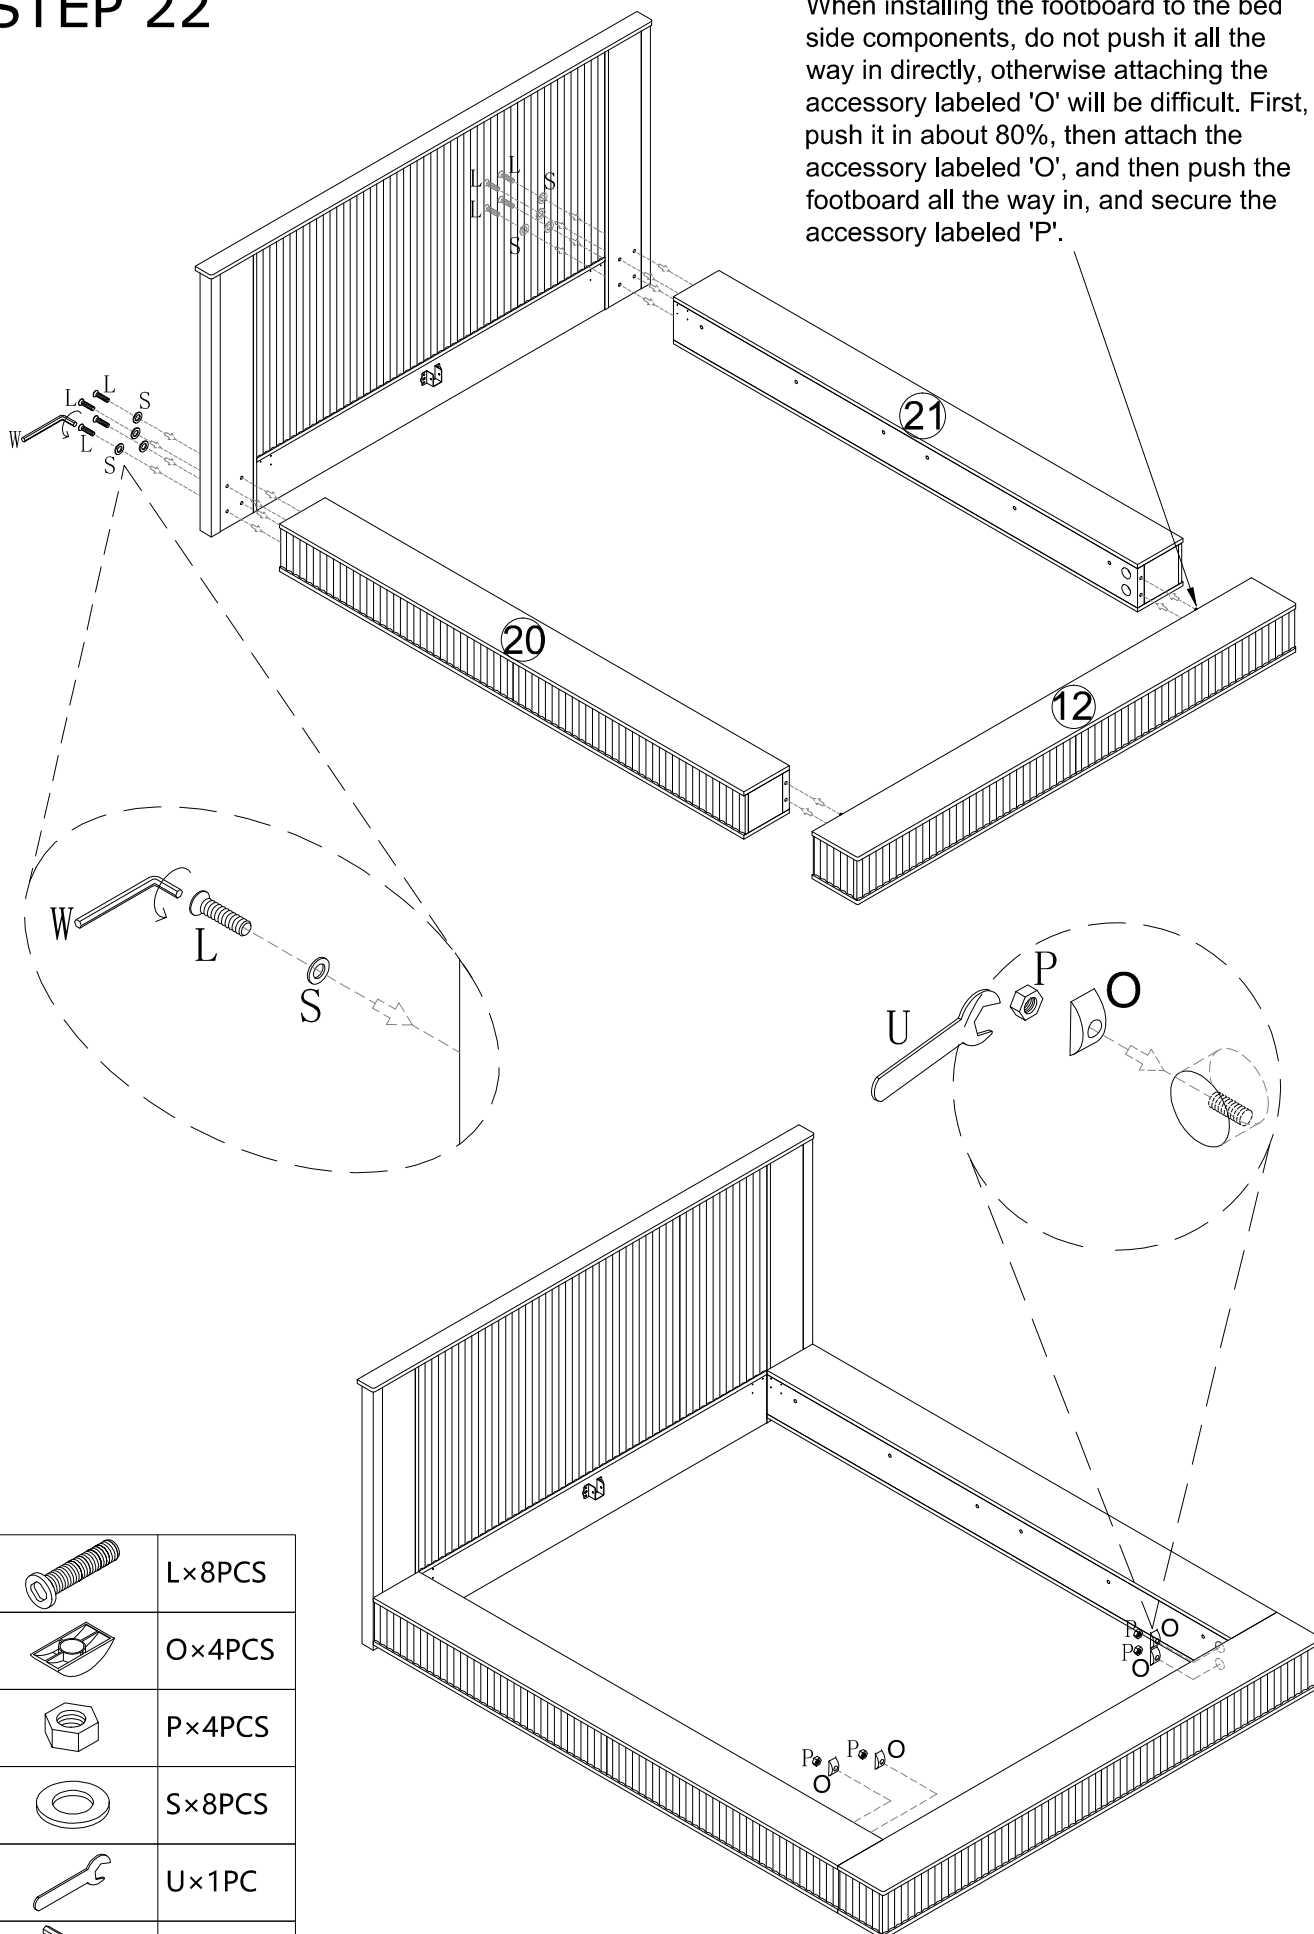


# STEP 23

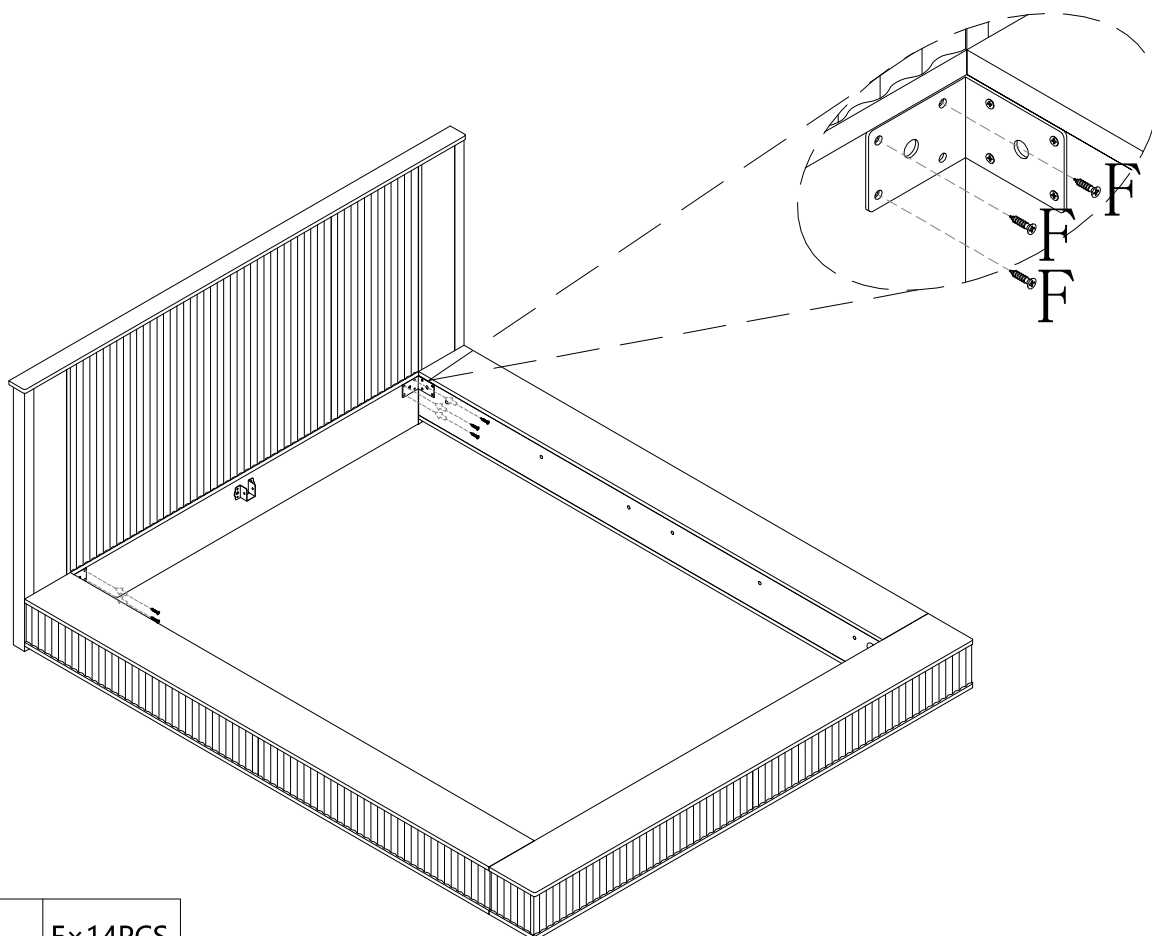
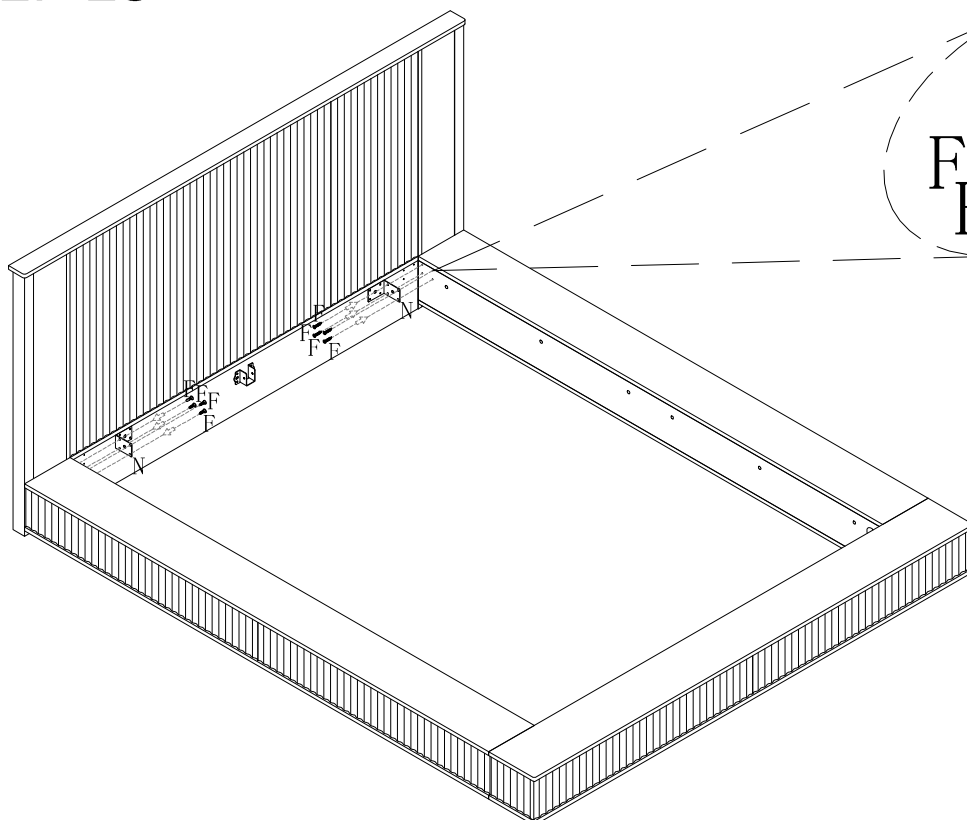


|                                                                                     |         |
|-------------------------------------------------------------------------------------|---------|
|  | F×14PCS |
|  | N×2PCS  |



## STEP 24

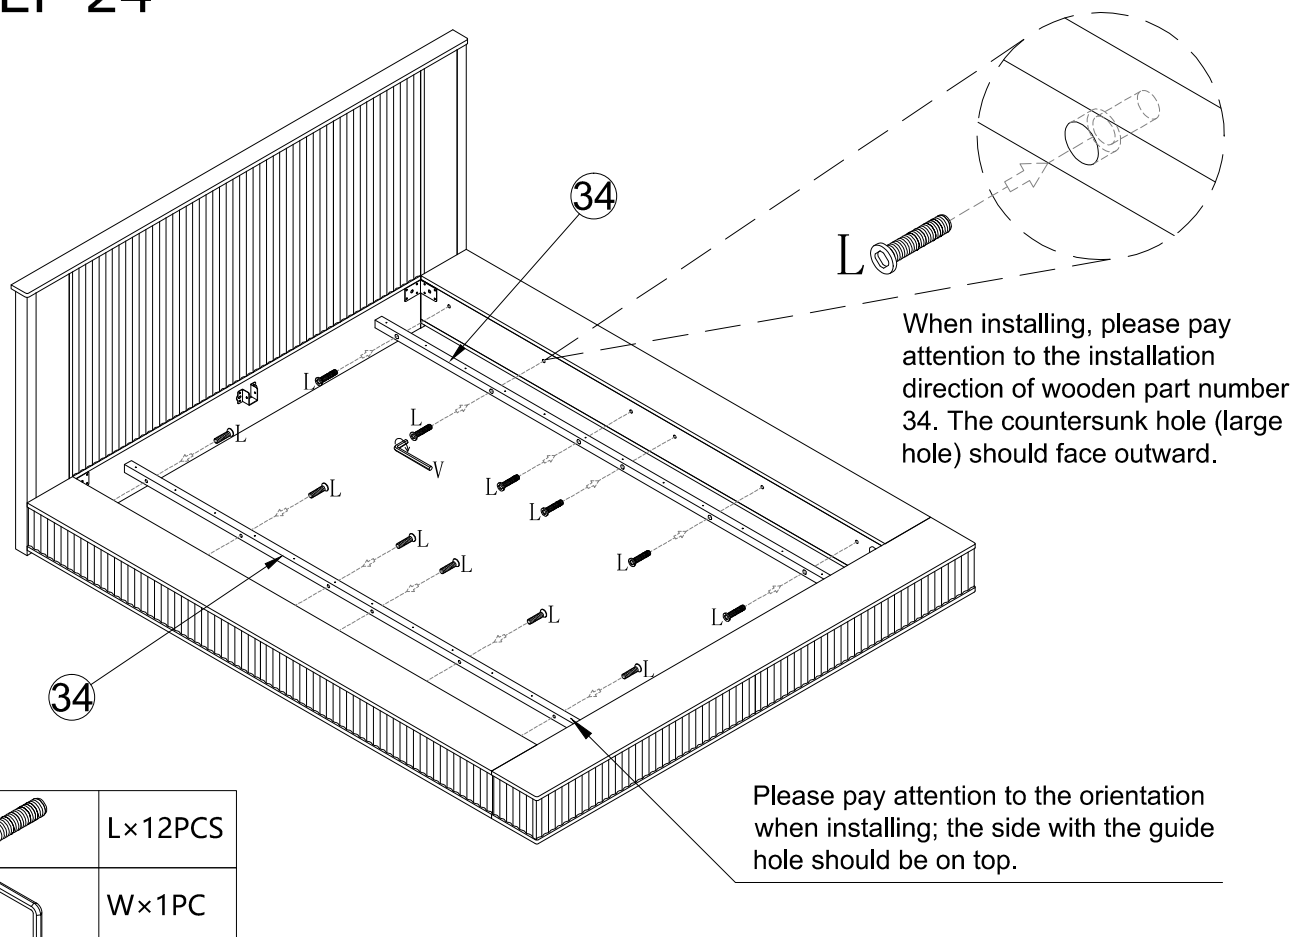


## STEP 25

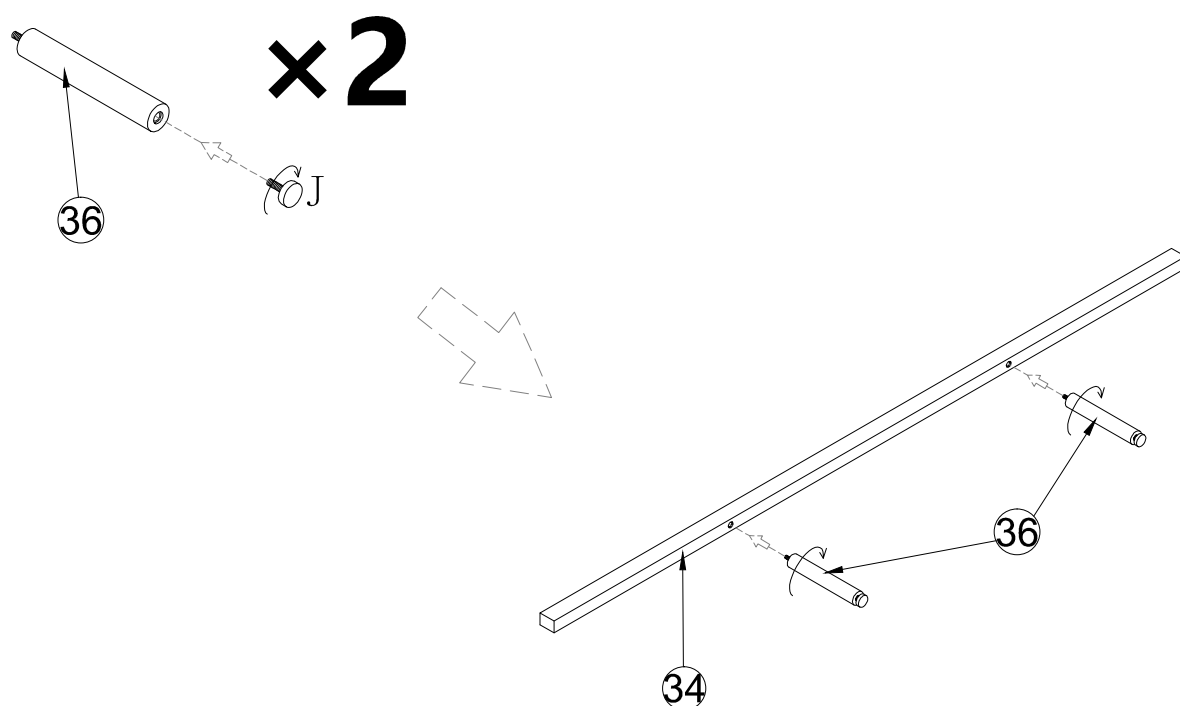

## STEP 26

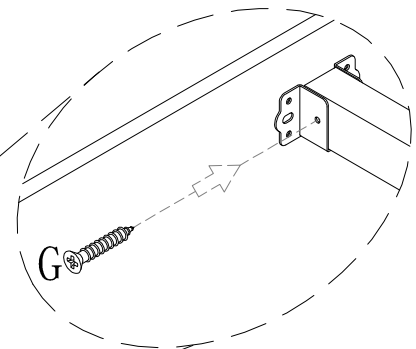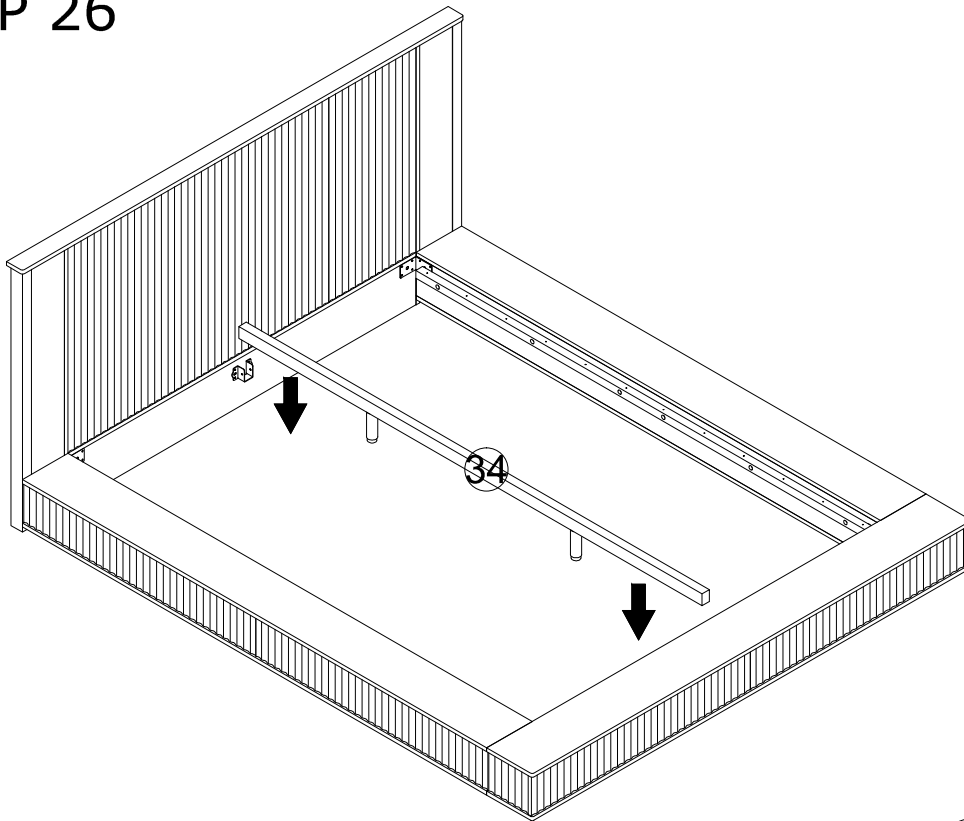


Make sure the wooden slats are fully resting on the metal bracket before tightening the screws. If there is a gap between the bottom of the wooden slats and the metal bracket, adjust the feet to lower the slats before tightening the screws.


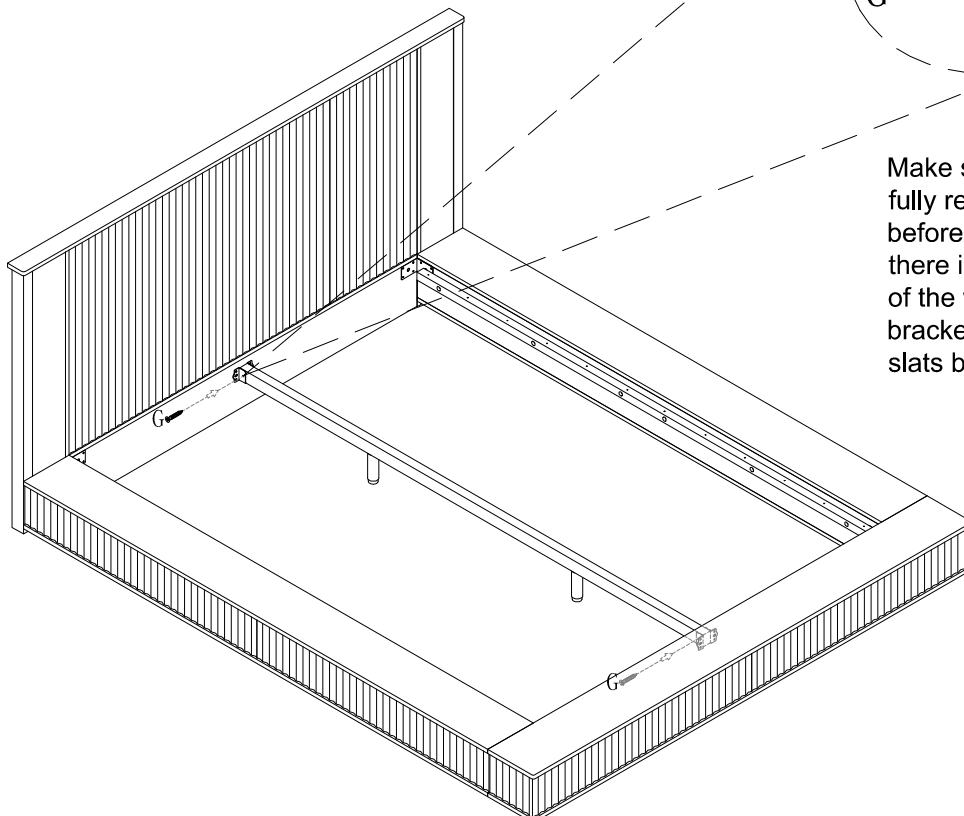


G×2PCS

## STEP 27

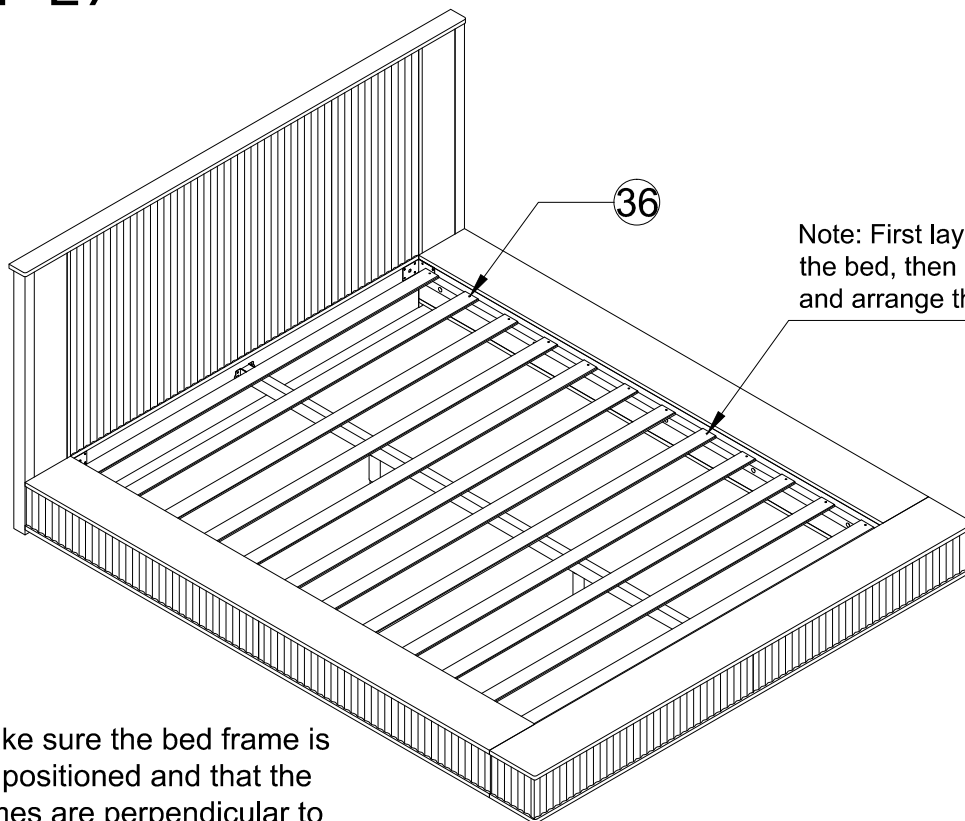


First, make sure the bed frame is properly positioned and that the side frames are perpendicular to the headboard and footboard before installing the slats.

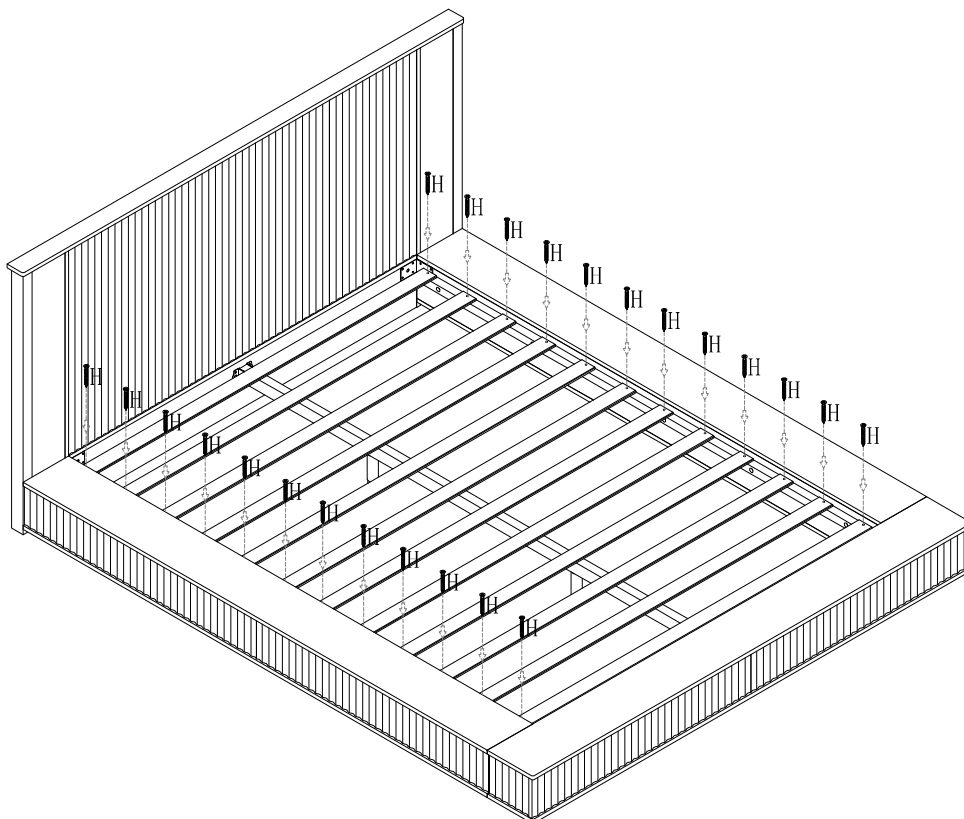

H×24PCS

## STEP 28

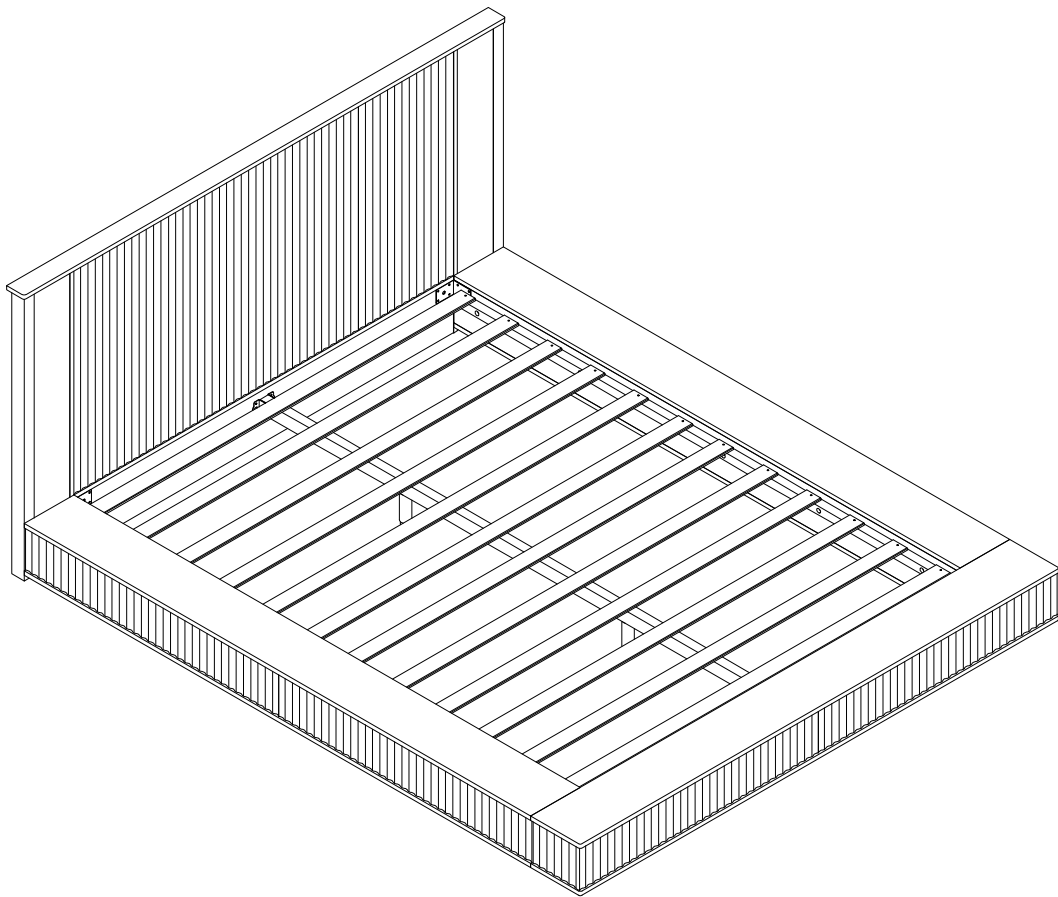

Assembly complete