










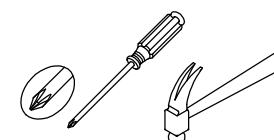
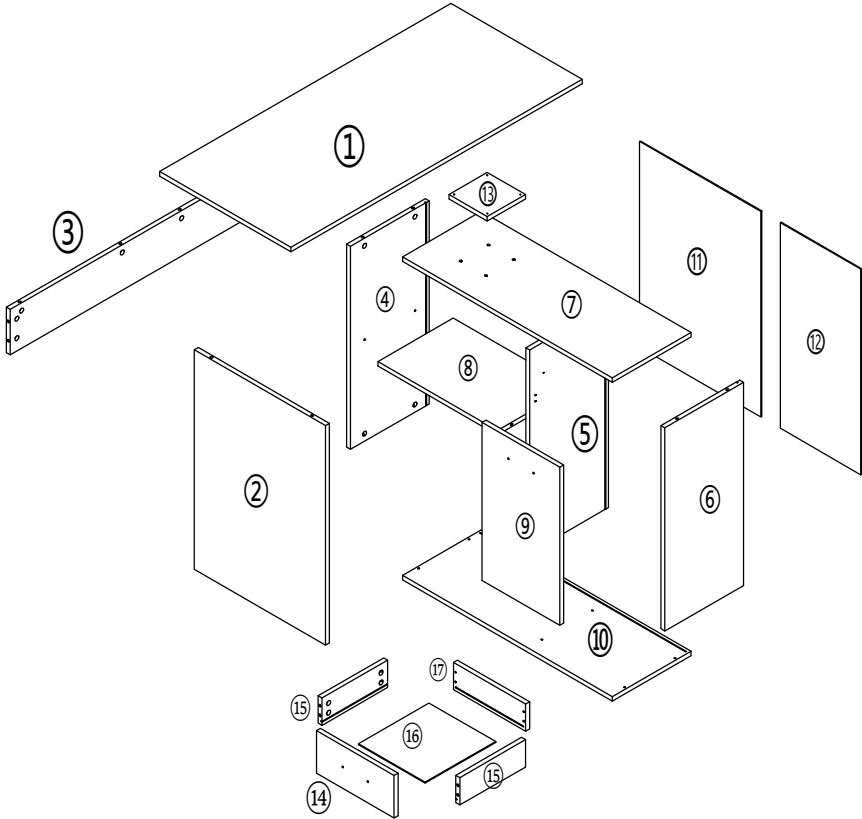


No.	LINEDRAWING	QTY	
A		34	F 7*31
B		34	F 15*11
C		24	F 3.5*12
D		1	250mm
E		2	
F		2	
G		1	
H		4	F 6*25
I		1	
L		8	
J		9	F 4*12




PARTS LIST








NO.	QTY.
①	1
②	1
③	1
④	1
⑤	1
⑥	1
⑦	1
⑧	1
⑨	1
⑩	1
⑪	1
⑫	1
⑬	1
⑭	1
⑮	2
⑯	1
⑰	1

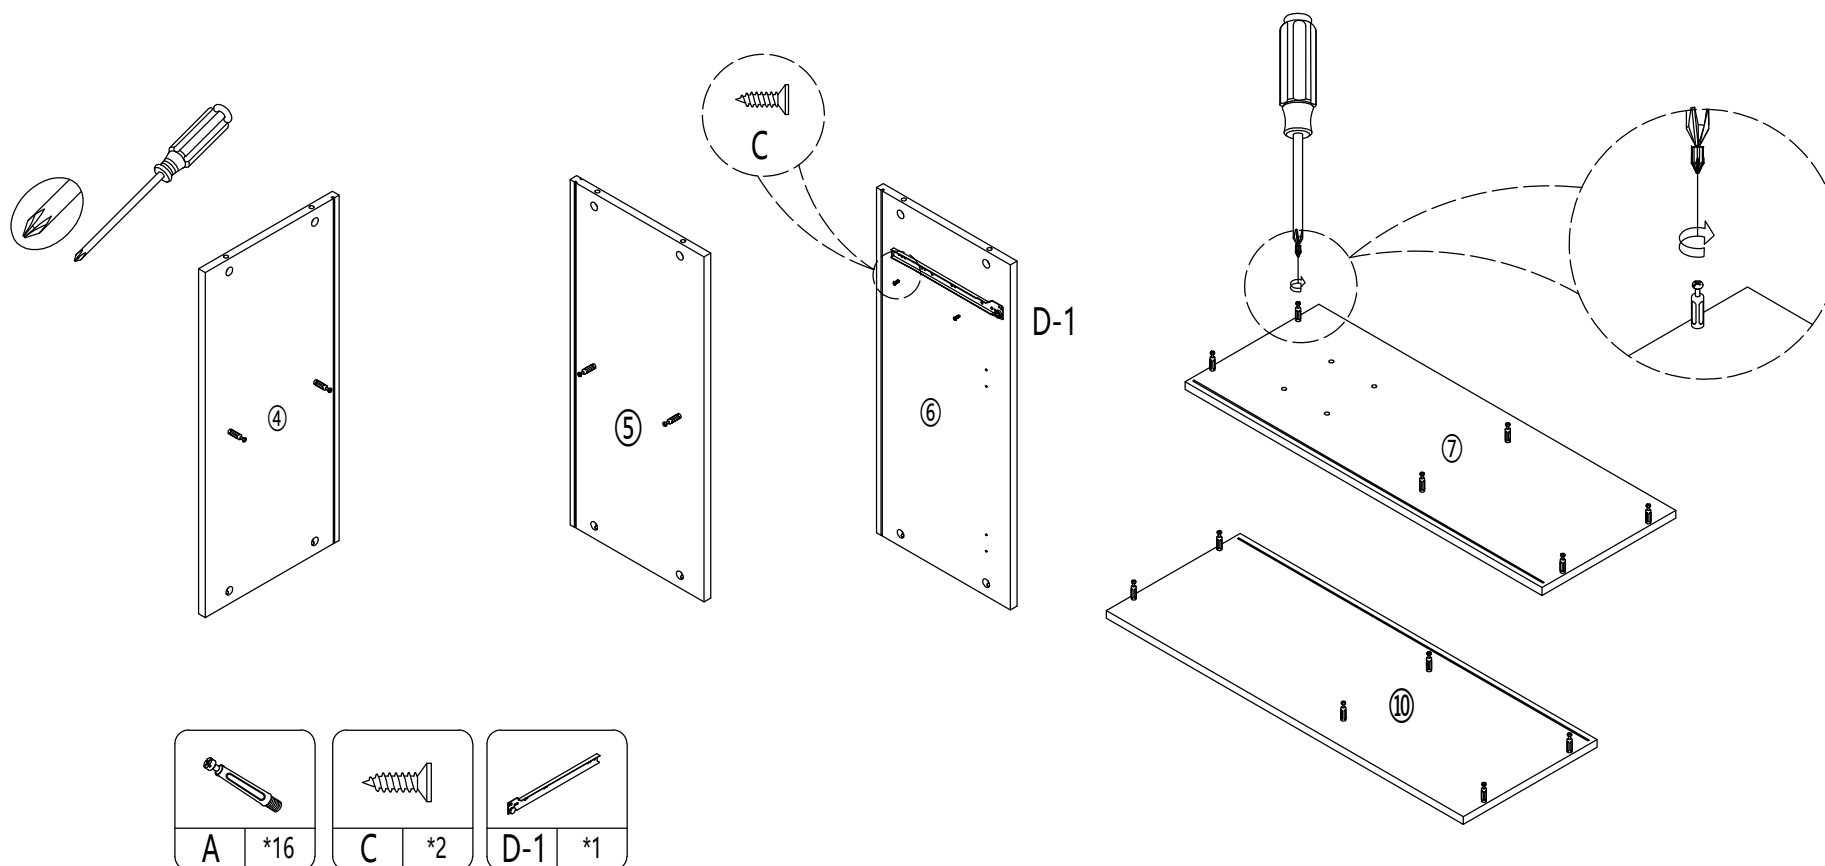- Turn screw (A) into (4&5&6&7&10) as shown below
- Put the track (D-1) on the vertical plate (6), as shown below

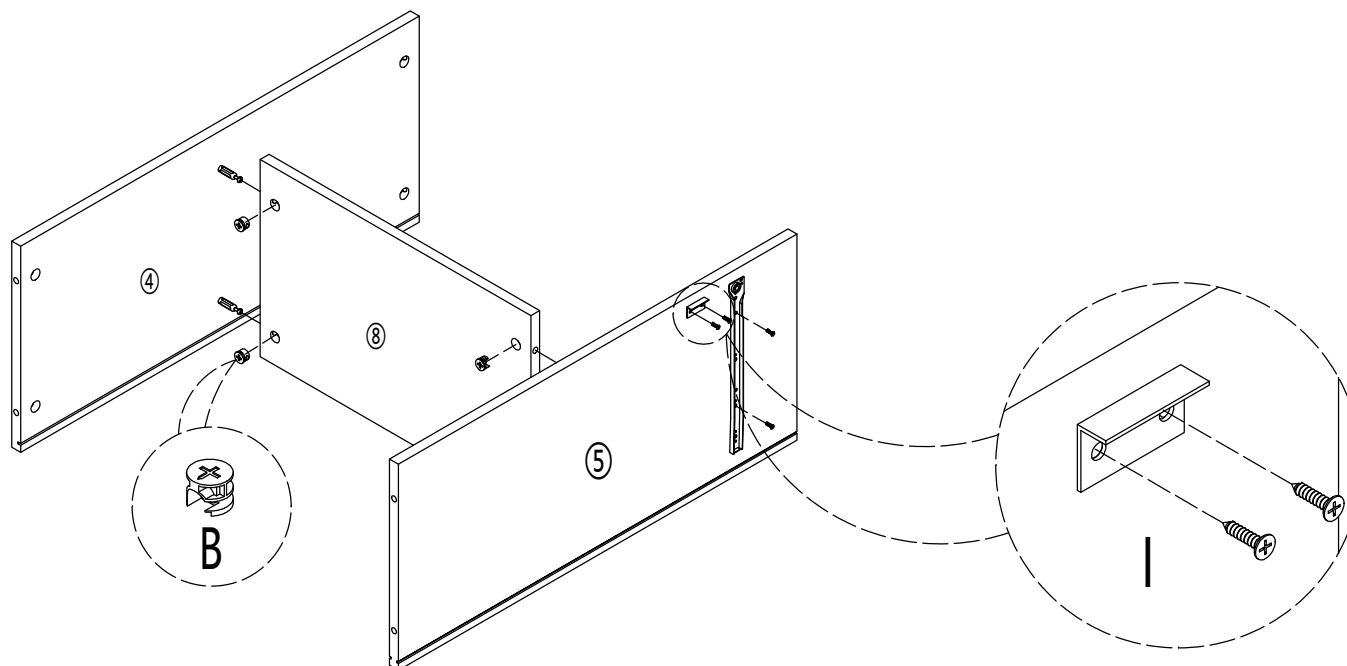


- Connect the vertical plate (4&5) to the laminate plate (8), as shown below
- The track (D-1) and the iron plate (I) are mounted on the vertical plate (5), as shown below




			
B	*4	D-1	*1




-Load the bottom plate (10) onto the vertical plate (4&5&6), as shown below

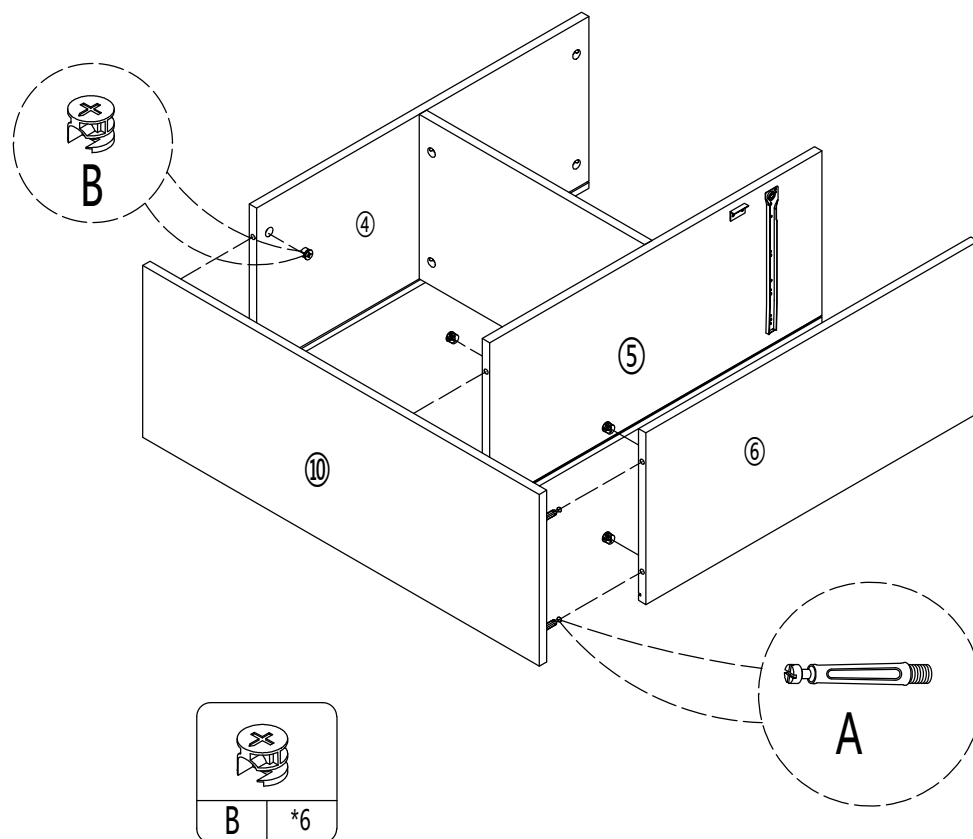



-Hammer the foot nail (L) 'into the bottom plate (10) as shown below

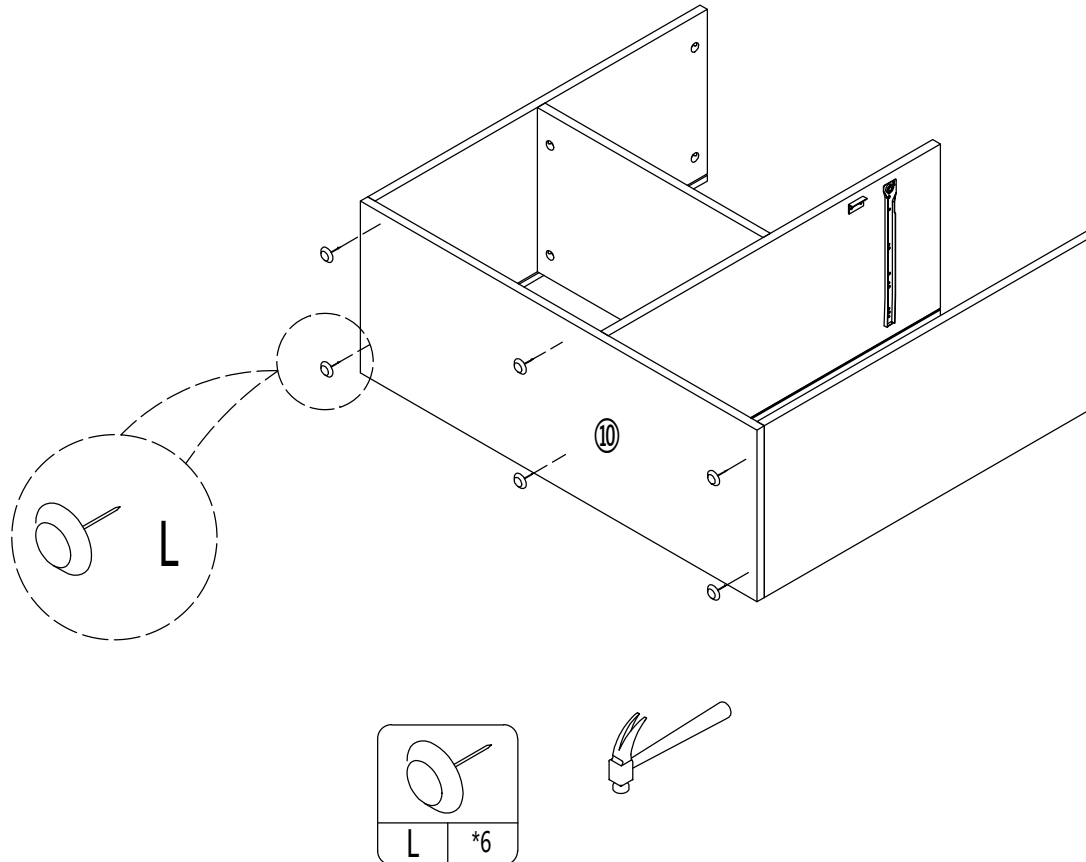

- Insert the back plate (11&12) into the (4&5&6) slot as shown below
- Load the panel (7) into the vertical panel (4&5&6), as shown below


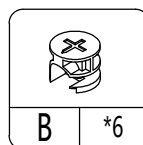
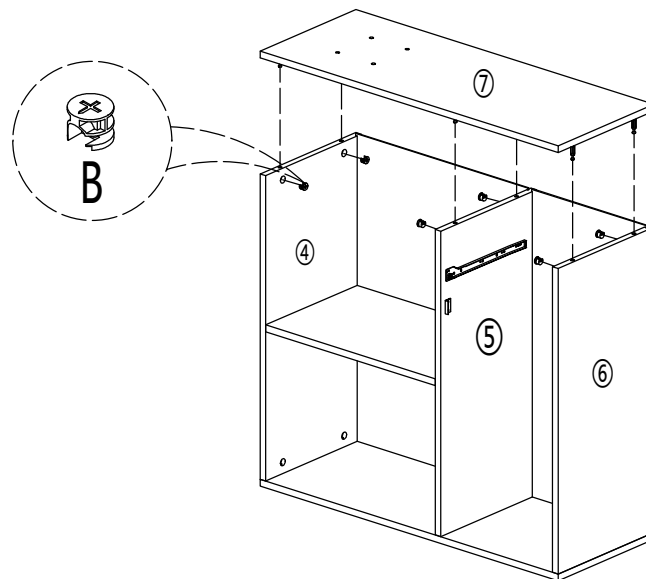
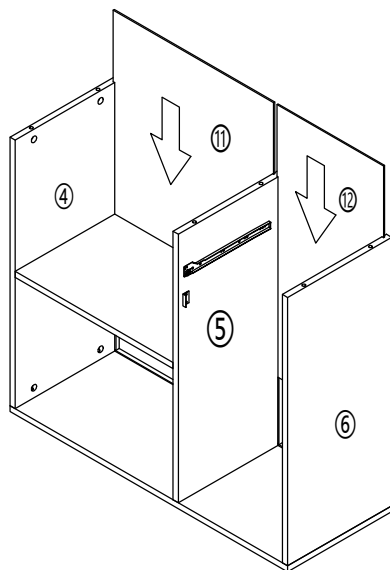


- Place the handle (E) on the noodle (14), then with (15&16&17).As shown below.
- Rotate the installed scoop to reverse mount track (D-2), as shown below.
- Push the drawer into the cabinet as shown below

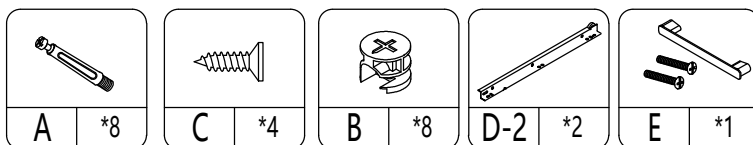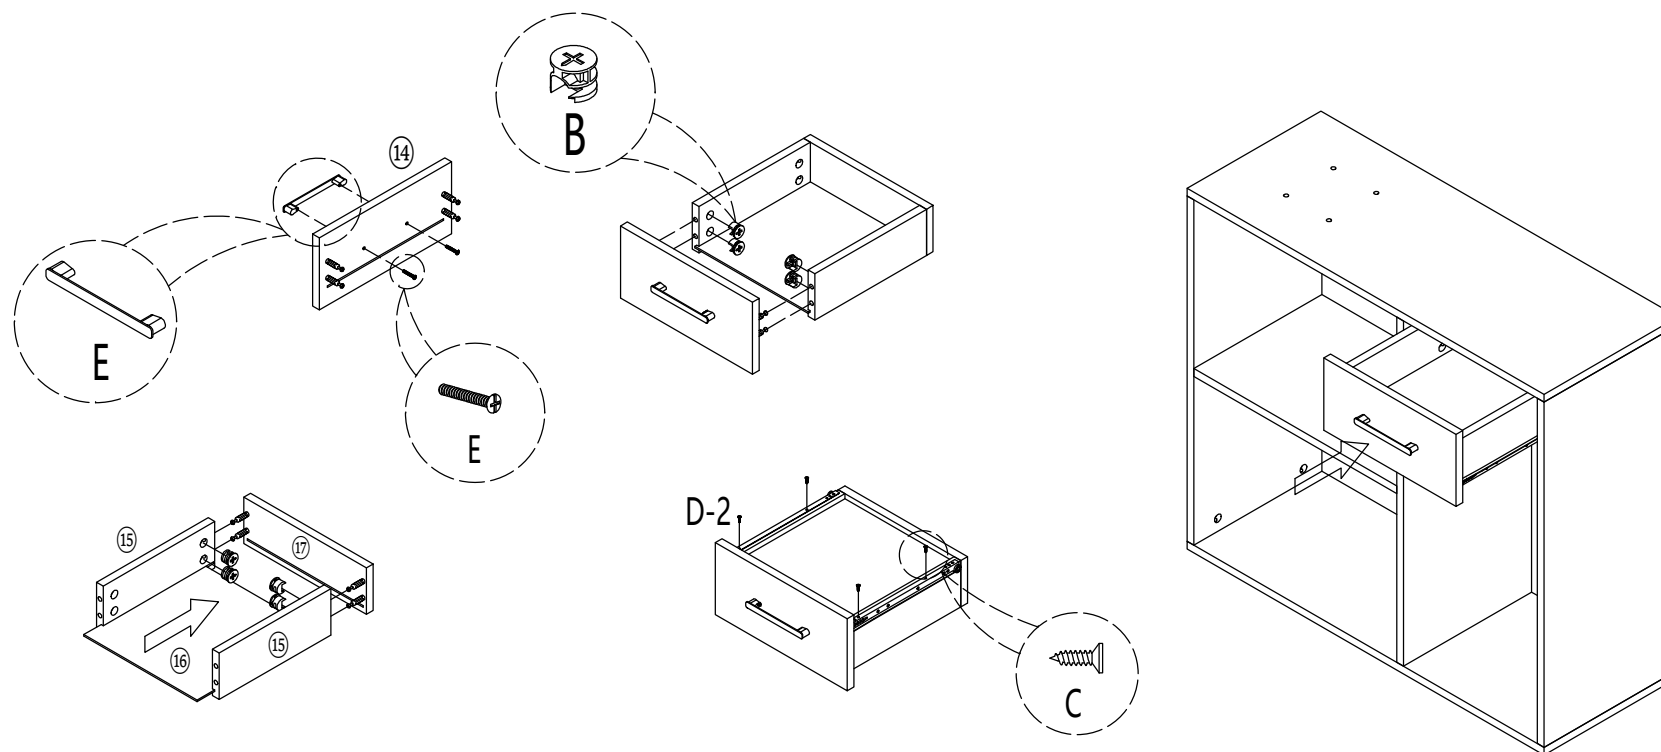




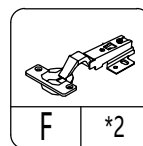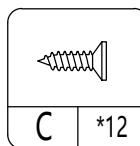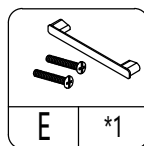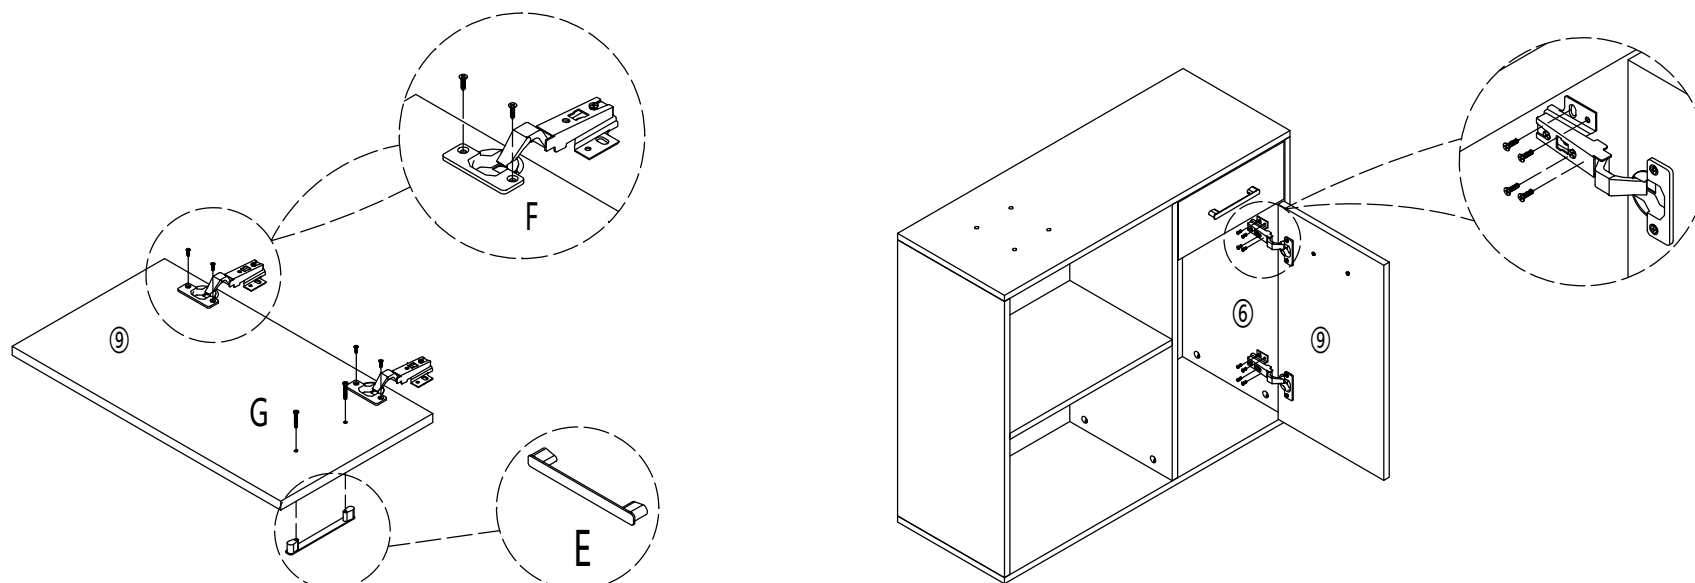

-Place the hinge (F) in the door plate (9) and connect the handle (E) to the door plate. As shown below.

-Load the door plate (9) into the vertical plate (6), as shown below.


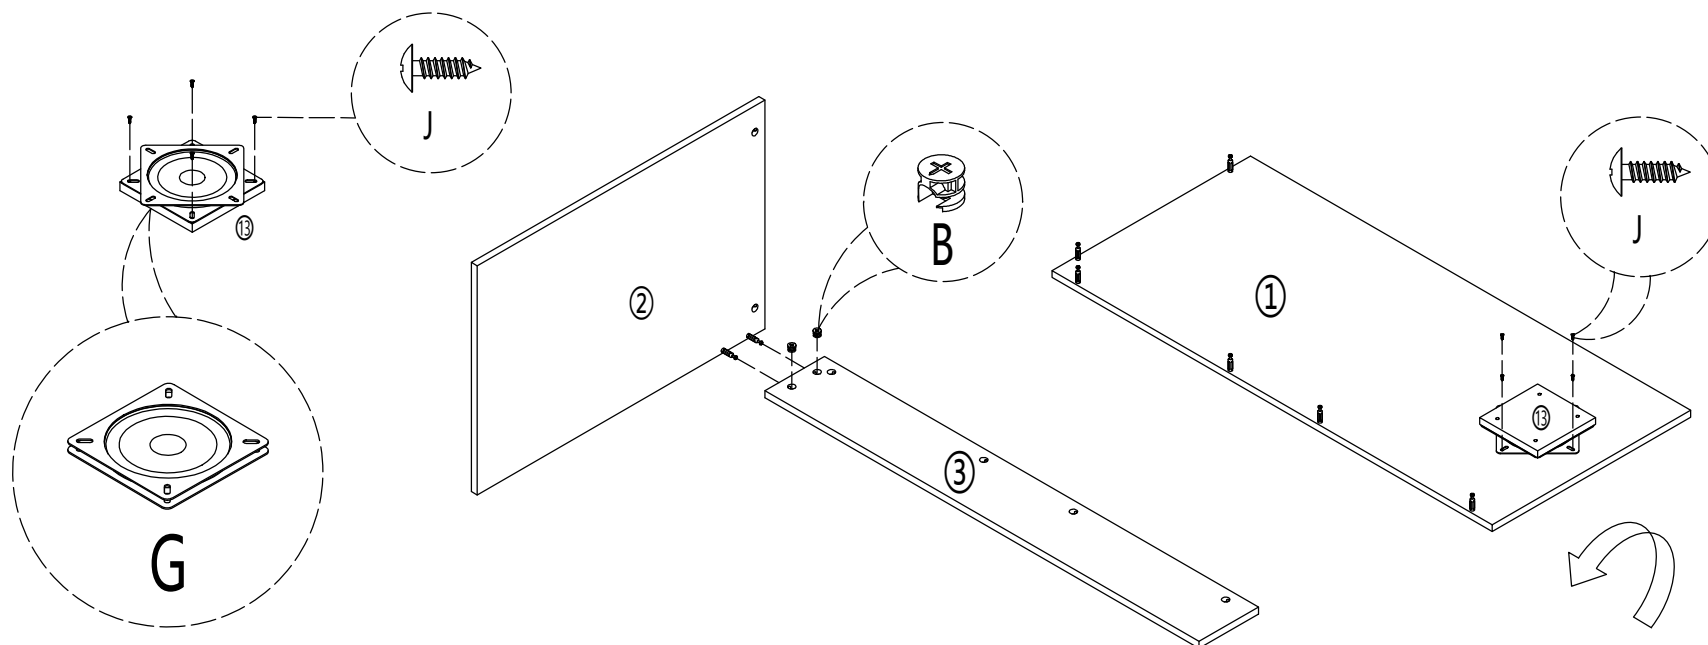


- Mount the turntable (G) on (13) as shown below
- Rotate the bolt (A) into (2) and then connect it with the drawplate (3).As shown below.
- Rotate bolt (A) into panel (1) as shown below



			
A	B	G	J
*8	*2	*1	*8

- Cover panel (1) over (2&3) as shown below
- Hammer the foot nail (L) into the side plate (2) as shown below

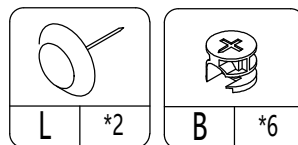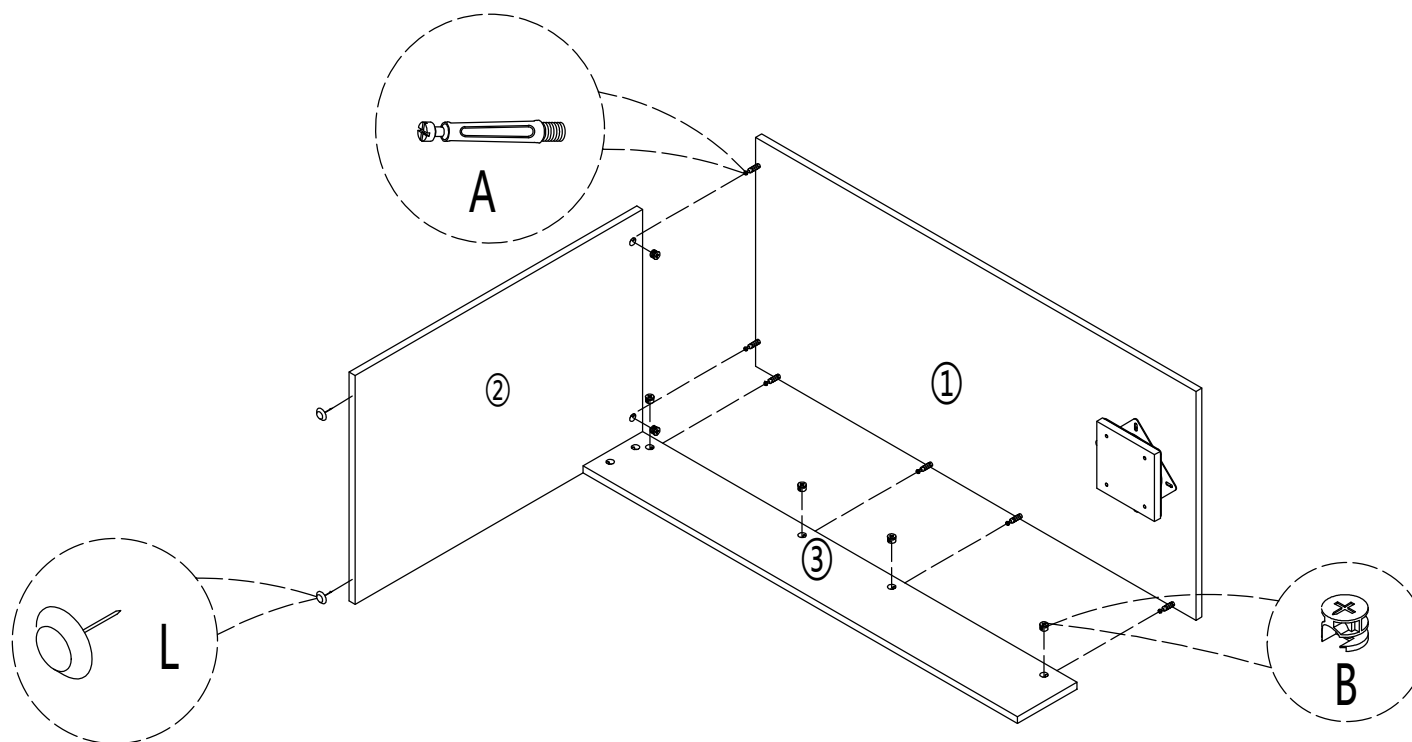

-Connect the screw (H) through the panel (7) to (13) as shown below

