


19" Round Tiered Rectangular Capiz Pendant Lamp EC1451

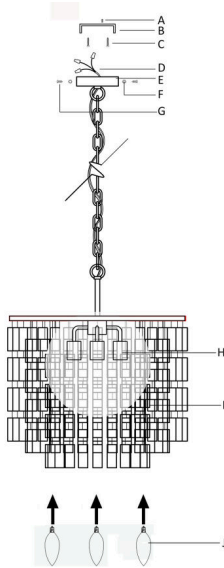

Parts required (all parts included inside package unless otherwise indicated. Please check packaging for parts.)

1 pc green ground screw (A)	2 pcs small washers (F)
1 pc crossbar (B)	2 pcs small screws (G)
2 pcs j-box mounting screws (C)	3 pcs sockets (H)
3 pcs plastic wire connectors (D)	1pc fixture (I)
1 pc canopy(E)	3 pcs bulbs (J) - not included

Tools Required: (not included)

1. Electrical Tape
2. Philips Screwdriver
3. Wire Cutters
4. Pliers
5. Step Ladder

Before installing fixture, make sure the power to the circuit is TURNED OFF at the main FUSE BOX / CIRCUIT BREAKER utility box.

IMPORTANT SAFETY INSTRUCTION

1. **THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.**
2. **PROFESSIONAL INSTALLATION RECOMMENDED**
3. The lighting fixture is meant for indoor use, dry location.
4. It must be connected only to 3-wire, single-phase electrical supply systems, with Ground Wire.
5. **This fixture has been rated for up to three (3) 60-watt maximum TYPE B standard incandescent light bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.**
6. To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.

PRE-ASSEMBLY:

- Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents from the packaging until after assembly is complete, to avoid accidentally discarding small parts or hardware.
- Carefully unpack all fixture parts and hardware and lay out on a clear workspace.

INSTALLATION INSTRUCTIONS:

1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
2. Separate Crossbar (B) from Canopy (E) by removing the two small screws (G) and two small washers (F). Do not discard small screws (G) and small washers (F) as these will be used later.
3. Gently pull existing wire down from the ceiling junction box and allow it to hang.
4. Attach the Crossbar (B) to the ceiling outlet box using the J-box Mounting Screws (C). Tighten screws with a screwdriver.
5. Carefully inspect the Fixture's wires. The **NEUTRAL FIXTURE WIRE** is copper color without marking. The **HOT FIXTURE WIRE** is copper color with marking, and the **GROUND WIRE** is Bare Copper. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
6. Attach the **GROUND WIRE** from the fixture to the GROUND JUNCTION BOX WIRE from the outlet junction box (J-box) (usually green insulation or bare wire). Fasten each together with a Plastic Wire Connector (D) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT have a GROUND WIRE, be sure to insert the Green Ground Screw (A) into the crossbar (B) marked as "GND", and wrap the fixture's bare ground wire around the Green Ground Screw (A). IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME IS PROPERLY GROUNDED!
7. Connect the **NEUTRAL FIXTURE WIRE** to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Plastic Wire Connector (D) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
8. Connect the **HOT FIXTURE WIRE** to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a Plastic Wire Connector (D) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS** OR SAFETY WILL BE COMPROMISED.
9. Gently tuck the wire connections neatly into the ceiling junction box.
10. Pull Canopy (E) over the Crossbar (B) aligning the holes in the Crossbar (B) with the two holes on the side of the Canopy (E).
11. Insert the two small screws (G) with small washers (F) and tighten with a screwdriver.
12. Insert three (3) 60-watt bulbs (not included).
13. Restore power to junction box and test fixture.
14. Installation is complete.

CARE INSTRUCTIONS:

- Always turn off power to fixture before cleaning.
- Wipe clean with a soft, dry cloth or static duster.
- Do not use harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.