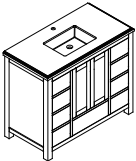








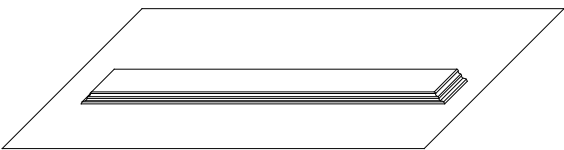
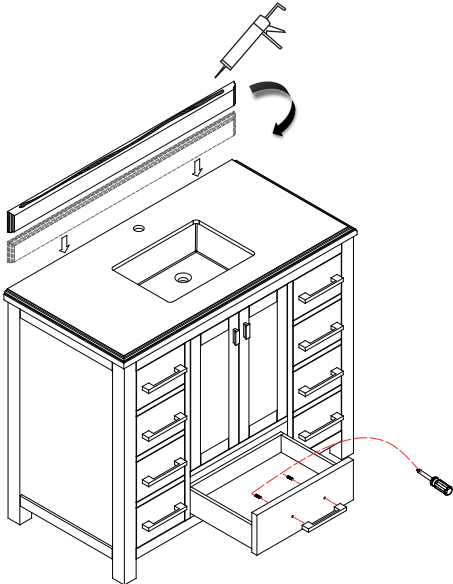
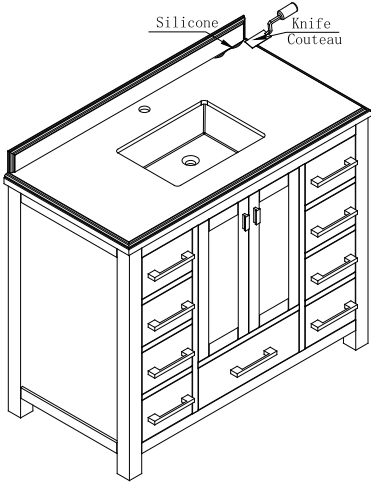
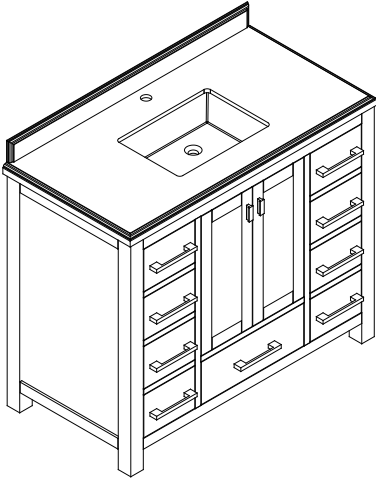



Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
The vanity should be installed by a professional plumber.
Drainer pipe and trap are not included.
If you experience any difficulties with this product, do not return to the point of purchase.

Part List	<div>A (cabinet)</div>  <div>x1</div>	<div>B (backsplash)</div>  <div>x1</div>	<div>C (screw)</div>  <div>x14</div>	<div>D (handle)</div>  <div>x2</div>	<div>D (handle)</div>  <div>x9</div>
Tools required	 <div>screwdriver(phillips)</div>	 <div>silicone</div>	 <div>level</div>	 <div>tape measure</div>	
Step 1 CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface. 		Step 2 			
Step 3 		Step 4  <div style="text-align: right;">  </div>			