
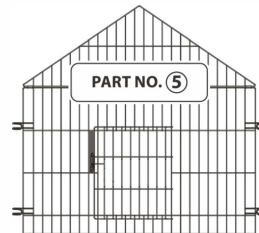
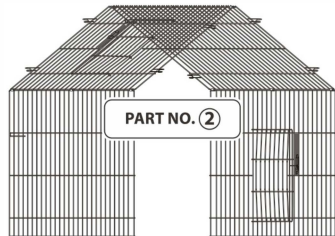
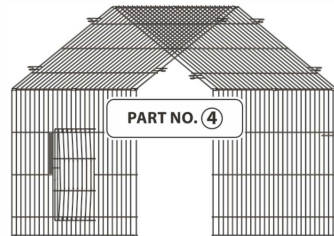



Metal chicken coop

BEFORE ASSEMBLY

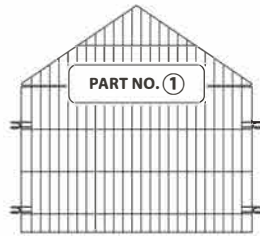




NOTE:

1. Please confirm that all doorlocks are facing outward before installation (No.2, No.4, No.5)
2. Recommended number of installers: 1-2

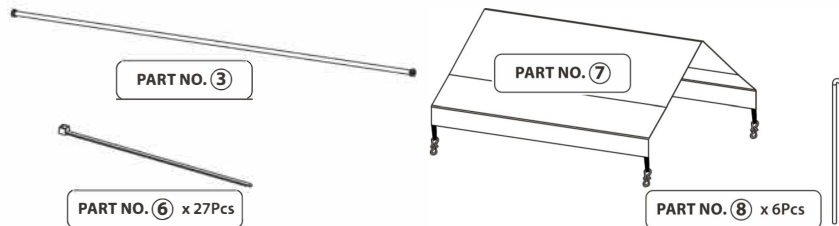


ASSEMBLING

STEP 1

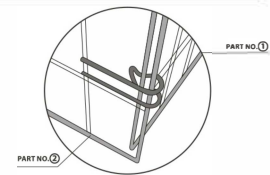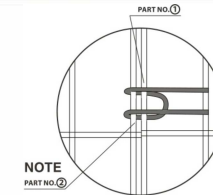
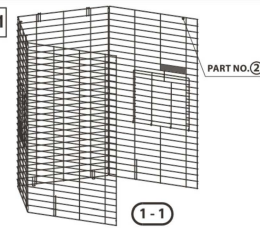


NOTE
PART NO. 2



Tips: Please make sure fix 8 hooks on the edge before fixing zip ties

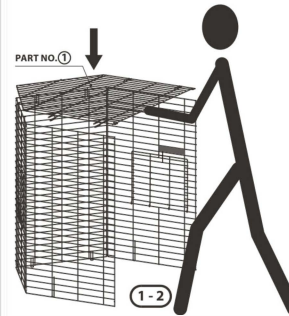

9 Pcs PART NO. 6
NOTE: Suggest location of zip tie

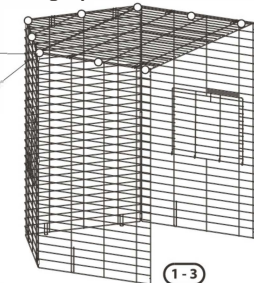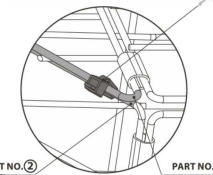

STEP 2

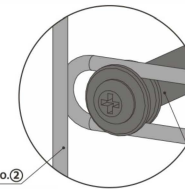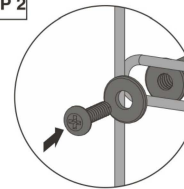


PART NO. 2

NOTE
PART NO. 3

PART NO. 3



NOTE: Aside from the included parts, you'll also need A Phillips head screwdriver.

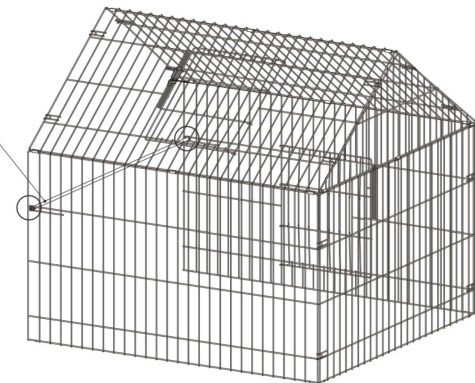


ASSEMBLING

STEP 3

3-1

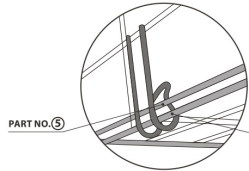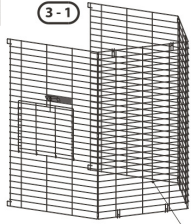


NOTE
PART NO. 4

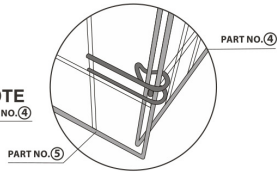


NOTE: Suggest location of zip tie

9 Pcs PART NO. 6


3-3

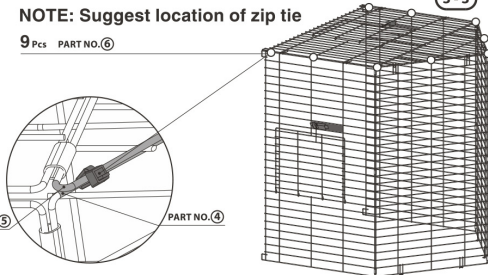

Confirm that two small houses don't shake, then install the two parts together

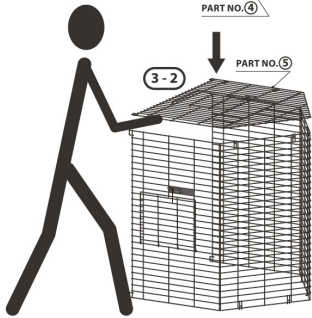

STEP 5

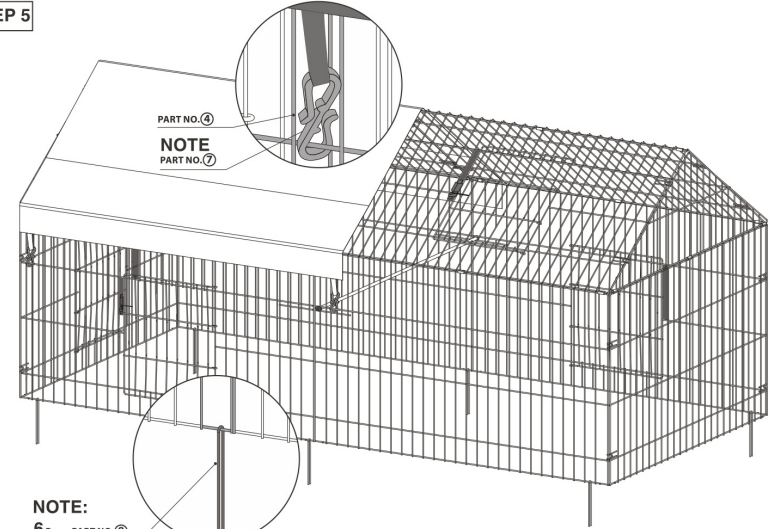


NOTE:

6 Pcs PART NO. 8

U type nails can be inserted into the under ground to hold the cage in place

STEP 4


Attention: Single side can be buckled, no need for two-way fixation

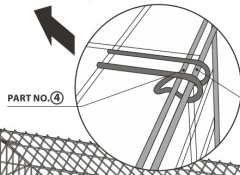


PART NO. 2

NOTE: Suggest location of zip tie
9 Pcs PART NO. 6

PART NO. 4

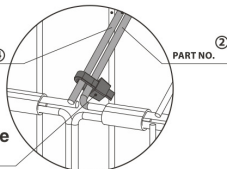


PART NO. 2

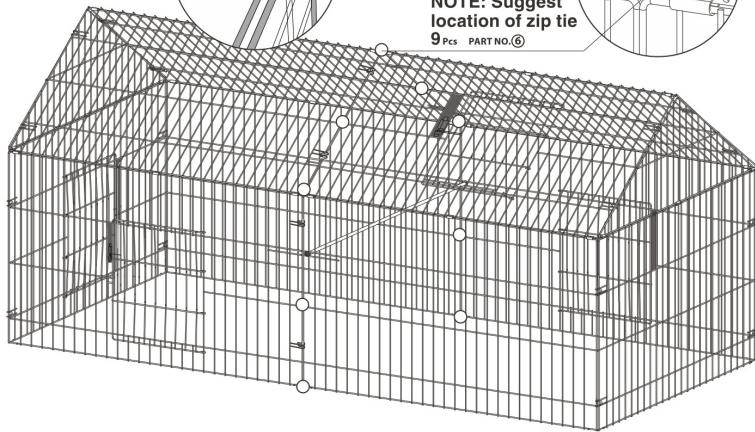

OPERATING THE DOOR

TO OPEN

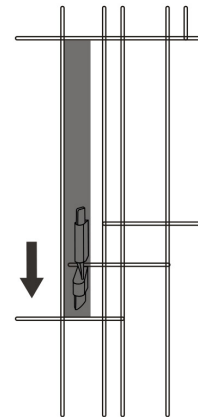

TO CLOSE

