



ASSEMBLY INSTRUCTIONS

QUEEN FLOOR BED WITH RAILINGS







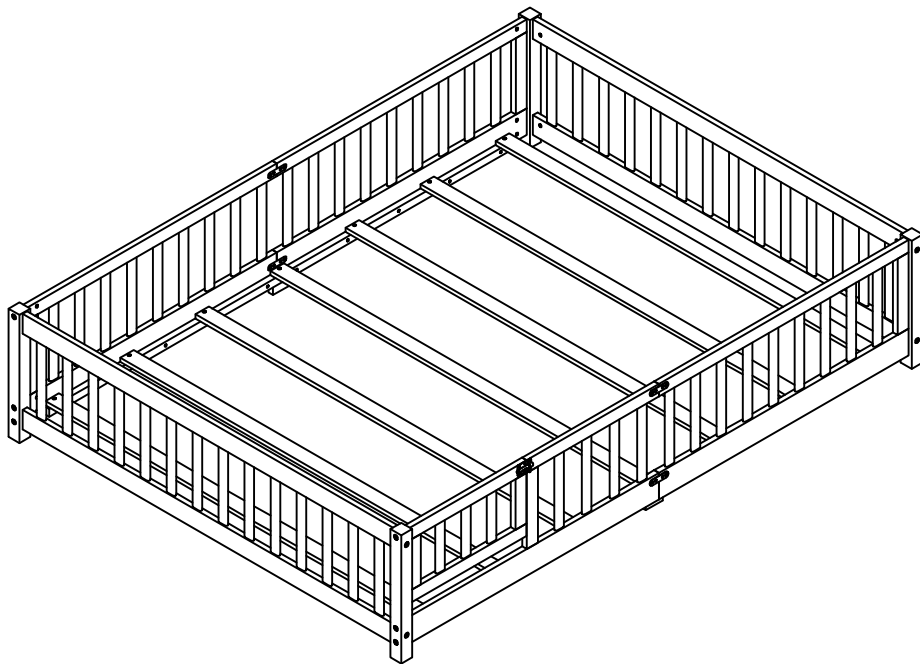


DN33763






Detail View

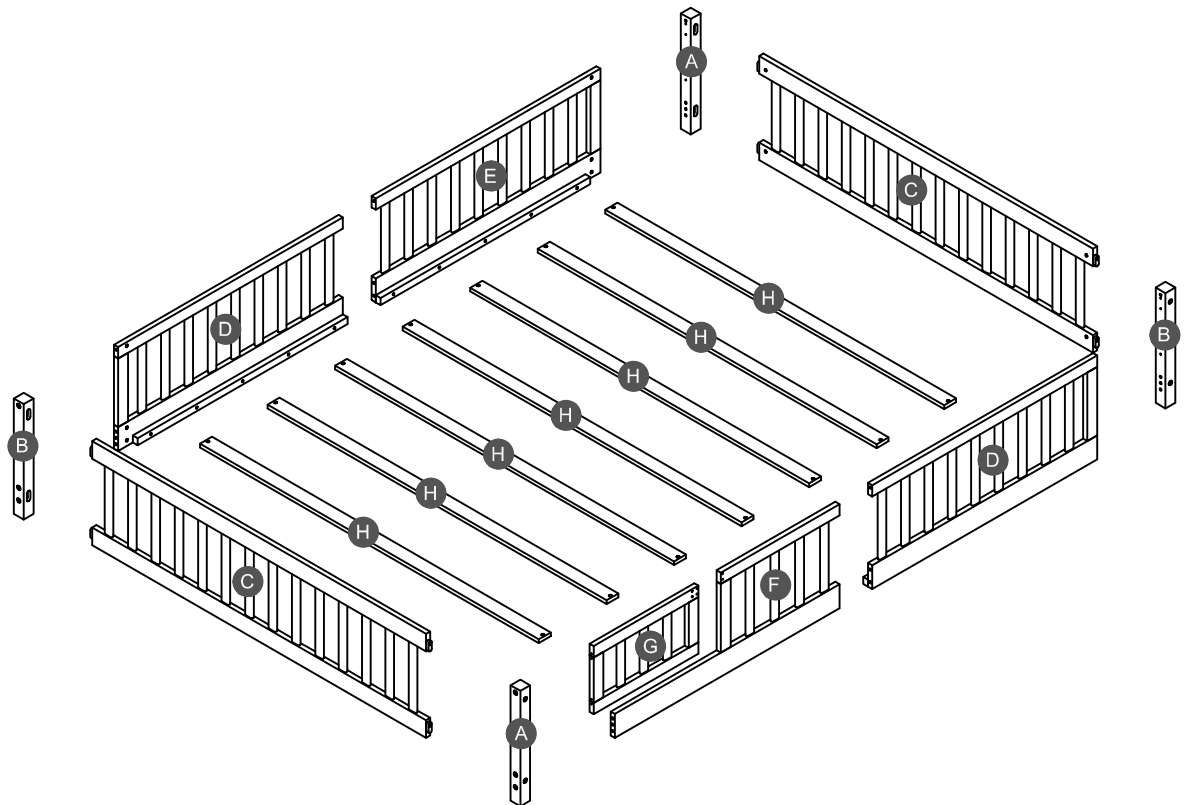


Part List

A		B		C	
Leg (Left Front/Right Back) - 2pcs		Leg (Right Front/Left Back) - 2pcs		Frame HB & FB - 2pcs	
D		E		F	
Side rail (Right Front/Left Back) - 2pcs		Side rail (Right Back) - 1pc		Side rail (Left Front) - 1pc	
G		H			
Door - 1pc		Slat - 7pcs			

Hardware List

1		2		3	
Ø8*30mm Wood dowel (10pcs)		(Ø15)1/4"*100mm Hex-Head bolts (11pcs)		(Ø15)1/4"*80mm Hex-Head bolts (8pcs)	
4		5		6	
1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)		Ø4*30mm Wood screws (18pcs)		55*24*6mm(135°) Hinges (2pcs)	
7		8		9	
60*40*10mm Lock (1pc)		Ø3.5*15mm Wood screws (46pcs)		75*20*2 mm Metal bracket (8pcs)	
10		11			
(1/4")4.5*58mm Allen key (1pc)		70*30*19 mm Drawer stopper (2pcs)			

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

1



3PCS

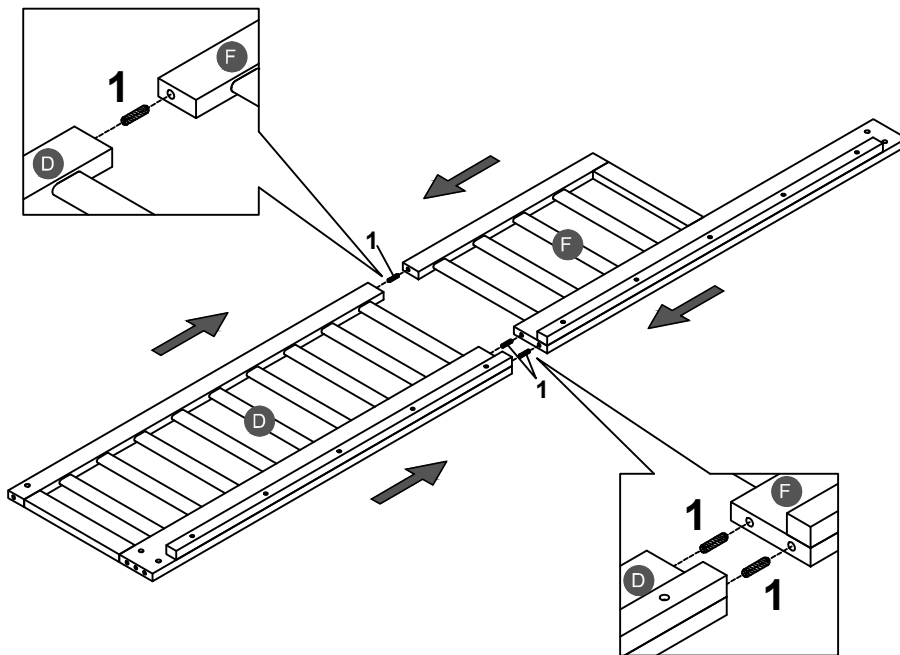

STEP 2:

5



2PCS

8



8PCS

9




2PCS

11




1PC

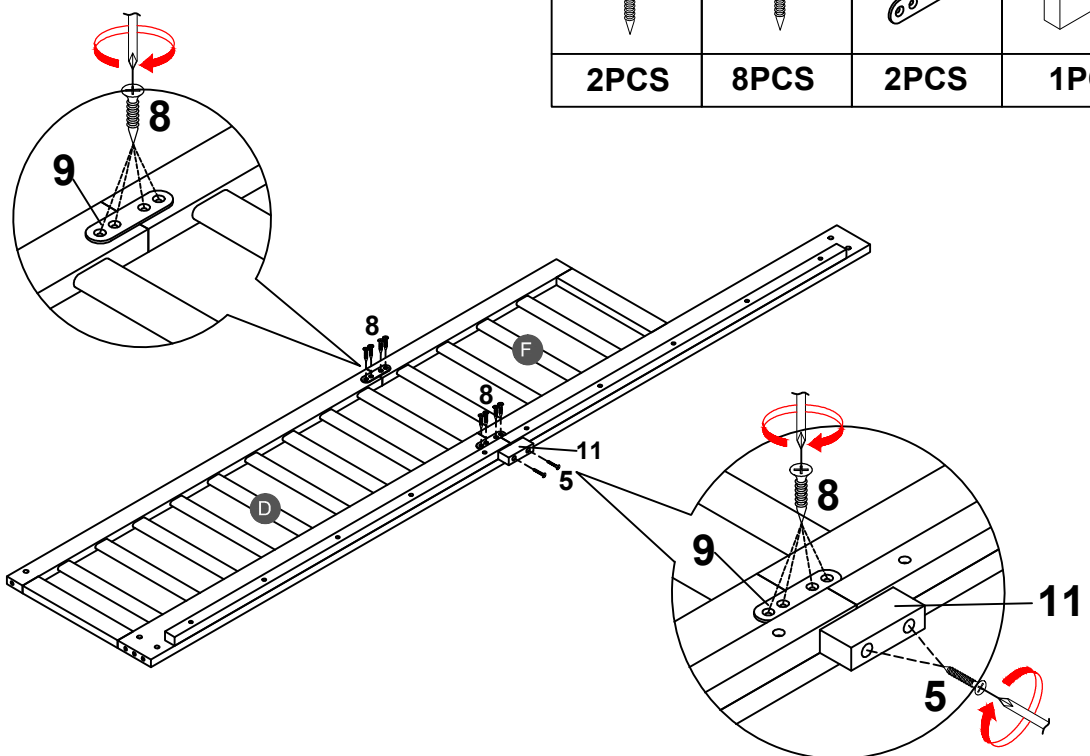


STEP 3:

8		9	
8PCS		2PCS	

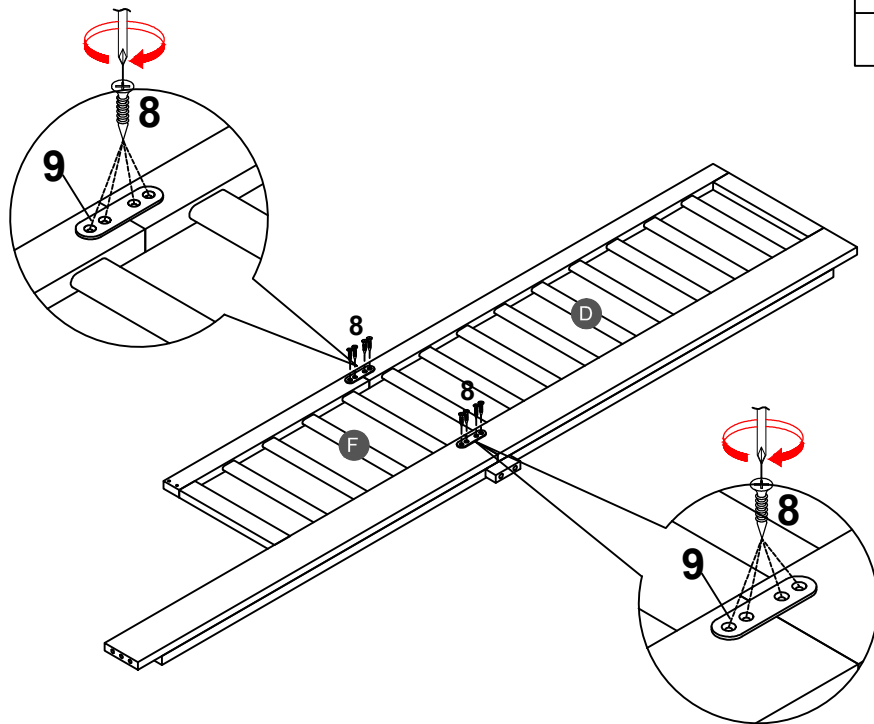


STEP 4:


1	
3PCS	

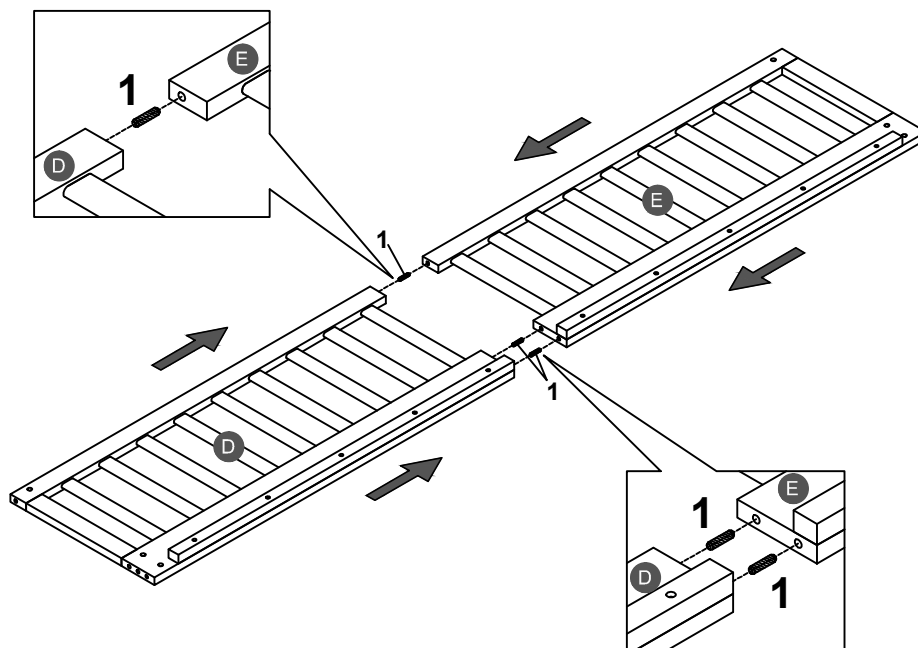


STEP 5:

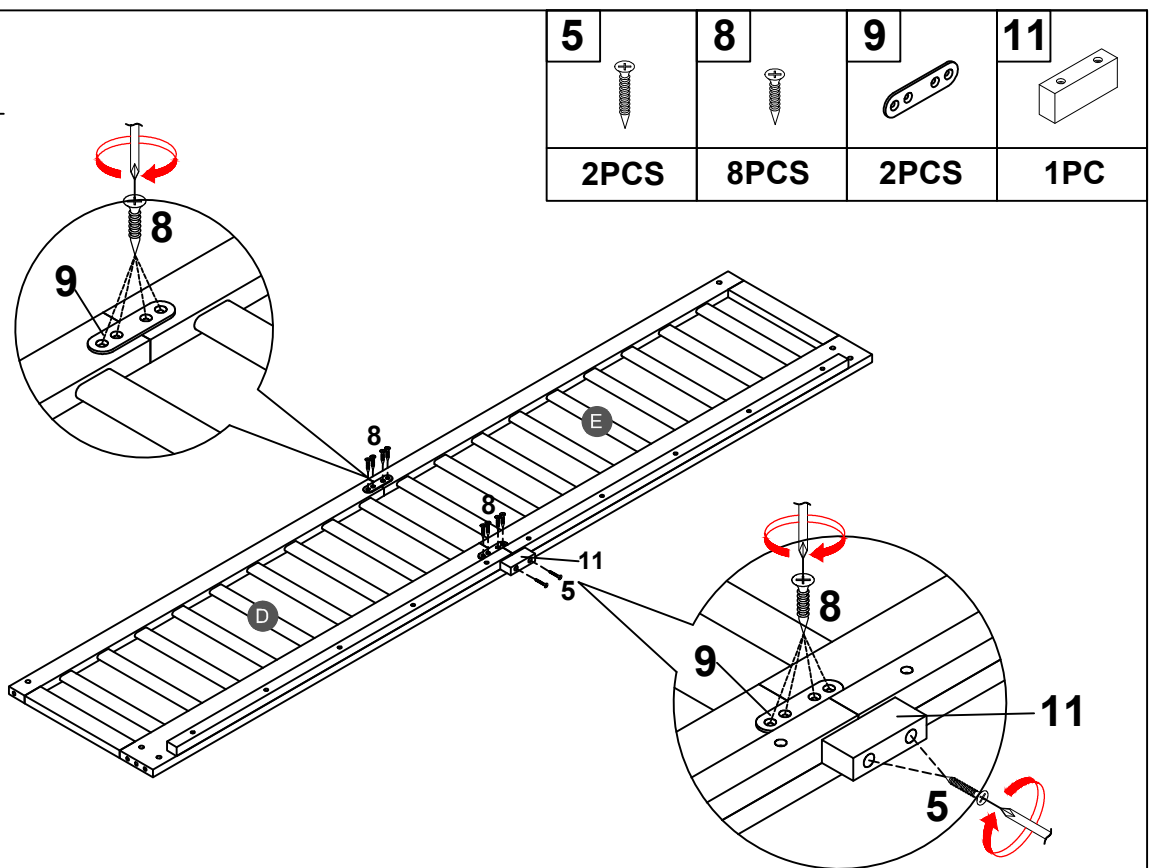

STEP 6:

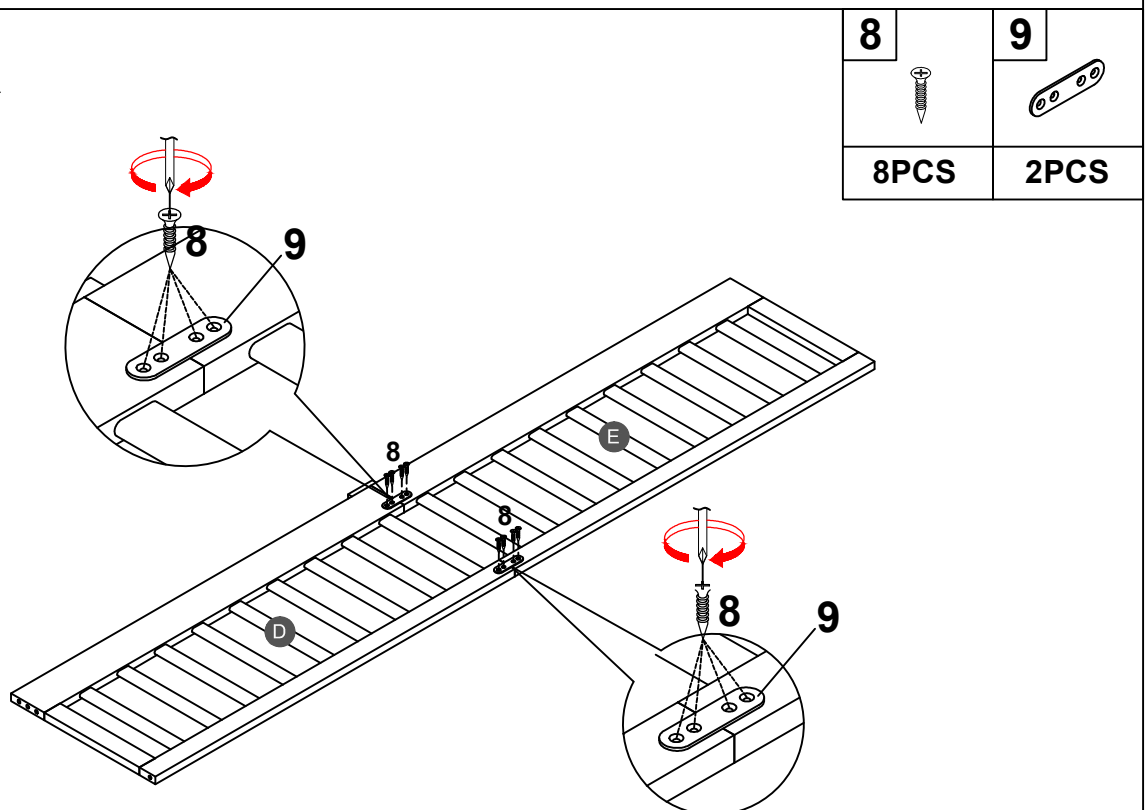


STEP 7:

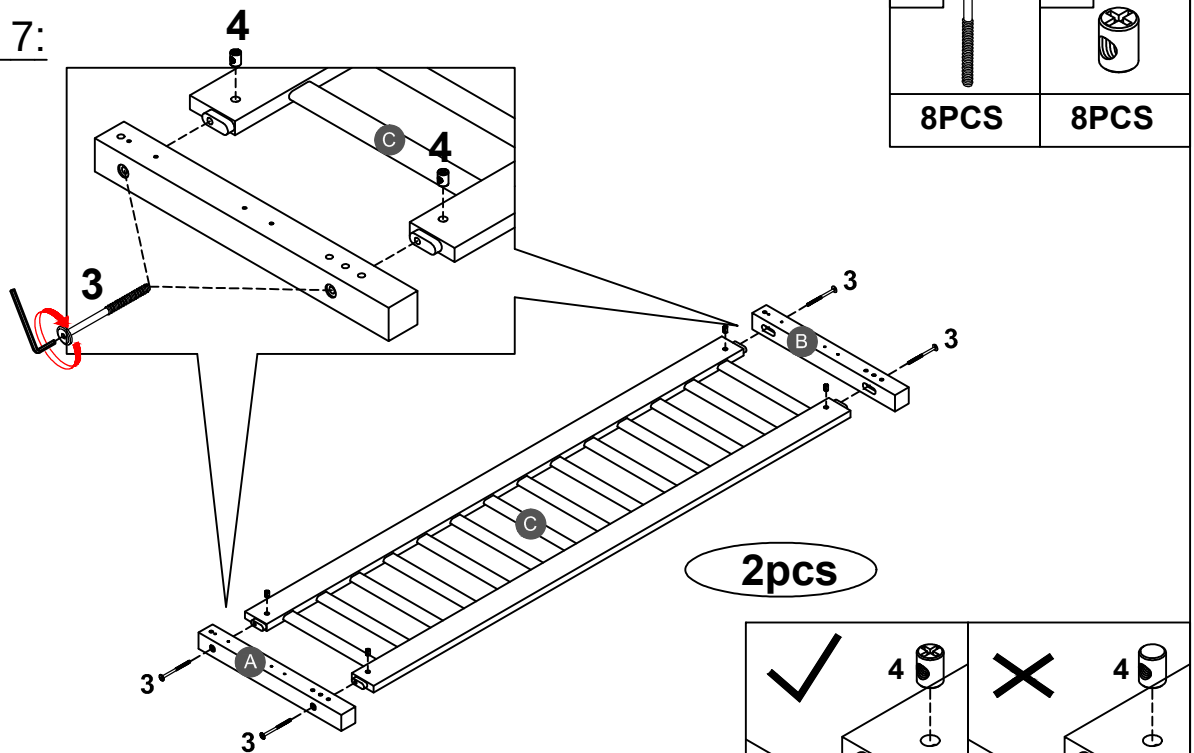



Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 8:

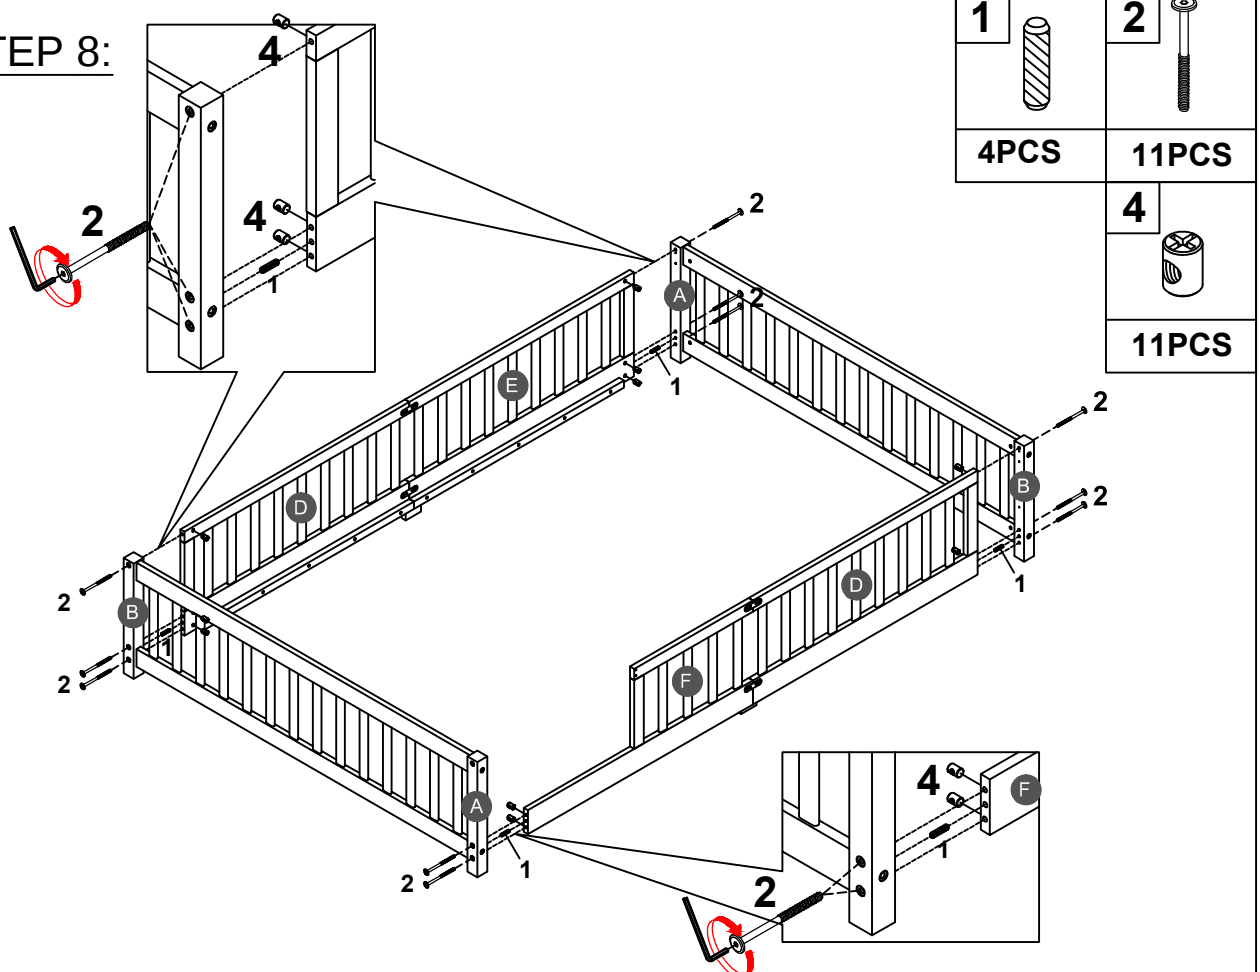

STEP 9:


6	8
	
2PCS	4PCS

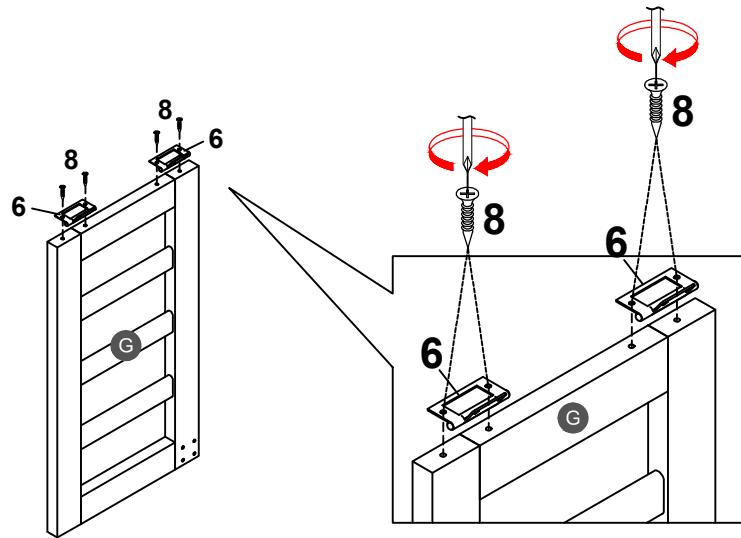


STEP 10:



8

4PCS

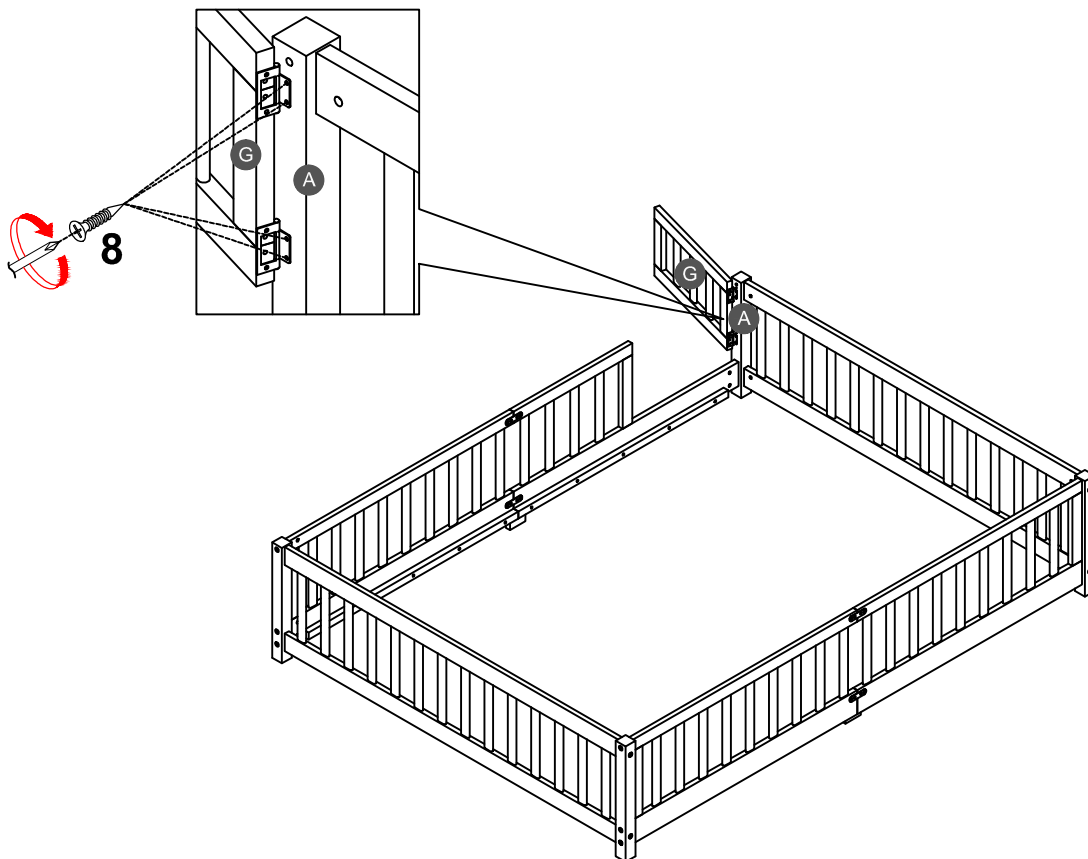

STEP 11:




7	8
	
1PC	6PCS

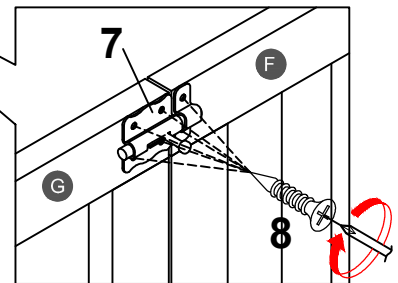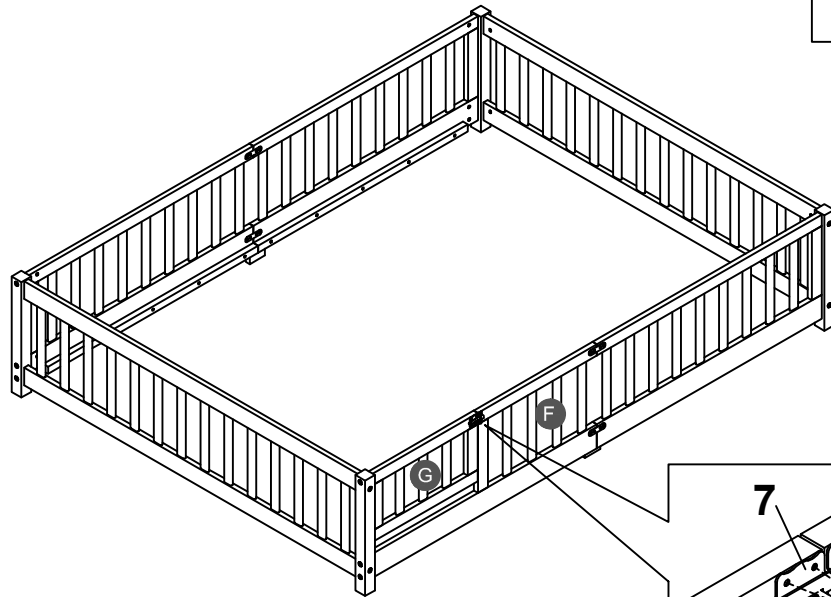

STEP 12:

5

14PCS

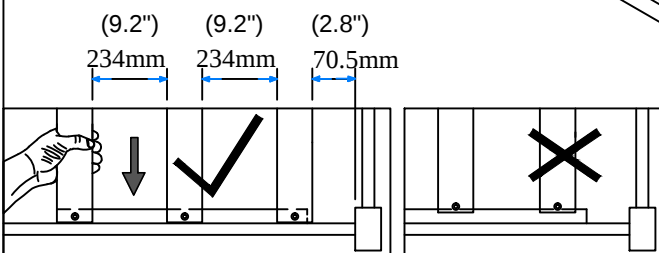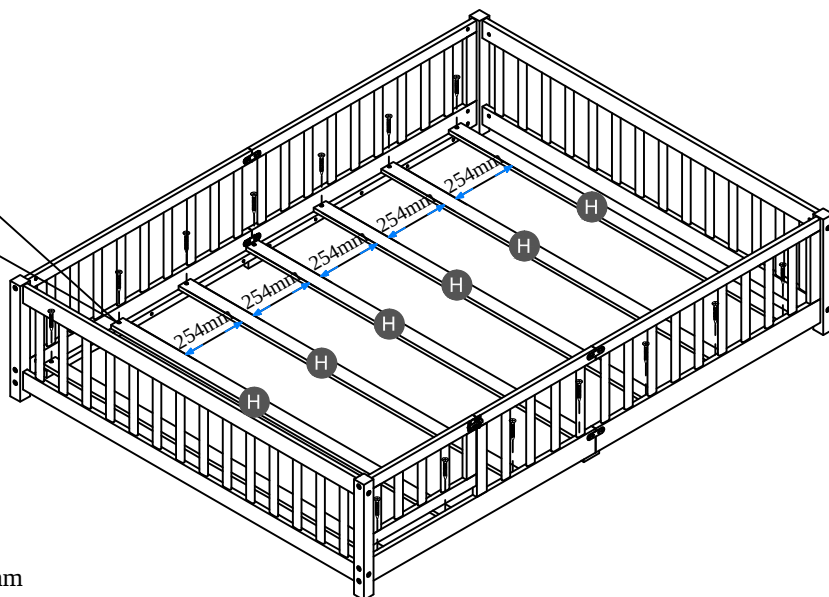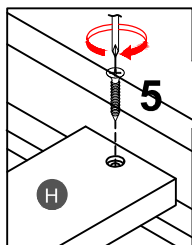

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.