


ISLiFe

K Style Sliding Barn Door


Instruction for assembling

Contact Us: info@islifeusa.com


Website: www.islifeusa.com

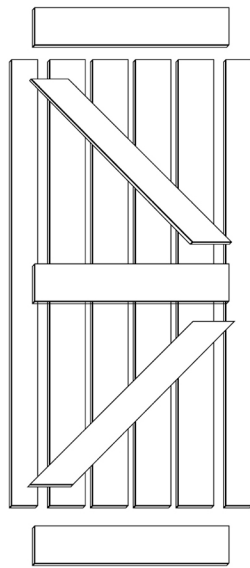

K Series

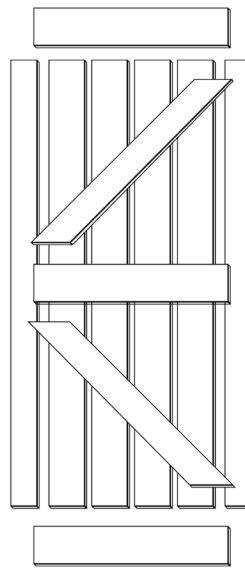

K Series

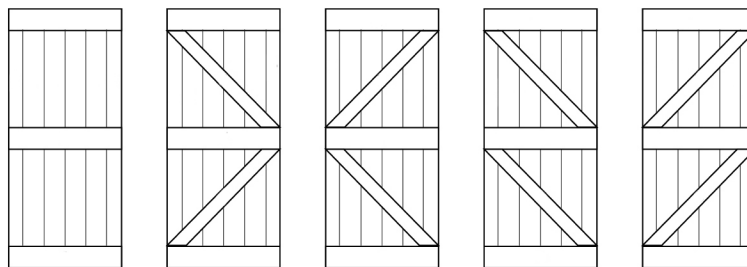

Avoid direct sunlight

Avoid moisture

Avoid rain









Tools Required



- Two-person assembly recommended
- Wear work gloves



Sliding Barn Door Includes:

Board number/Side View	size/pieces	size/pieces	size/pieces	size/pieces	size/pieces	size/pieces
	24in. Wx84in. H	28in. Wx84in. H	30in. Wx84in. H	36in. Wx84in. H	38in. Wx84in. H	42in. Wx84in. H
1# 	2	3	3	4	4	5
2# 	1	1	1	1	1	1
3# 	1	1	1	1	1	1
4# 	2	2	2	2	2	2
5# 	1	1	1	1	1	1
6# 	2	2	2	2	2	2
Hardware Track	5FTx1	5FTx1	5FTx1	6. 6FTx1	6. 6FTx1	8FTx1
Screws	48	58	58	68	68	78

Installation Tips:

- 1.To prevent cracking when driving screws into solid wood doors, it is recommended to first drill a pilot hole approximately 1/8 inch to 1/4 inch deep using a 7/64 inch drill bit before tightening the screw.
- 2.The quantity of (#1 middle board) will vary depending on the size of the product.
3. Ensure that the groove on panel#5 is facing inside.
4. For detailed steps on installing the hardware kit, prefer to the installation guide included in the hardware kit package.
5. Screws holes are not pre-drilled for the rail. When you install the track, you need to drill holes on the door.


K Series

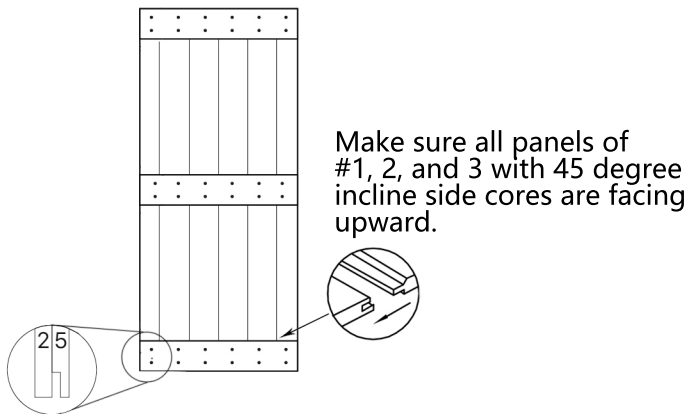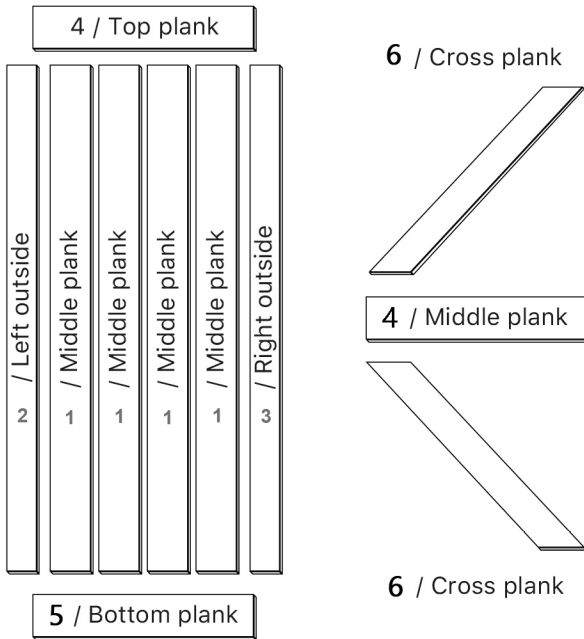


Side view:



Note: The quantity of (#1 middle board) will vary depending on the size of the product.

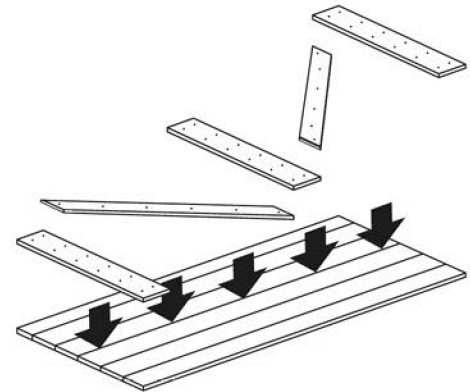

Step 1: Combine panels 1, 2, and 3.
Step 2: Align panels 4, 5, and 6 with the pre-drilled holes.

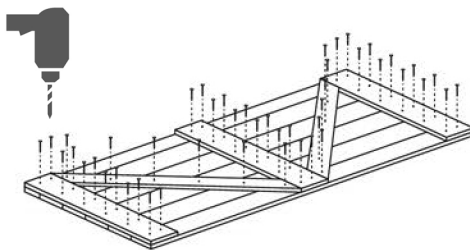

Step 3: Tighten all screws until snug.
Note : The quantity of screws holes will vary depending on the size of the products.