
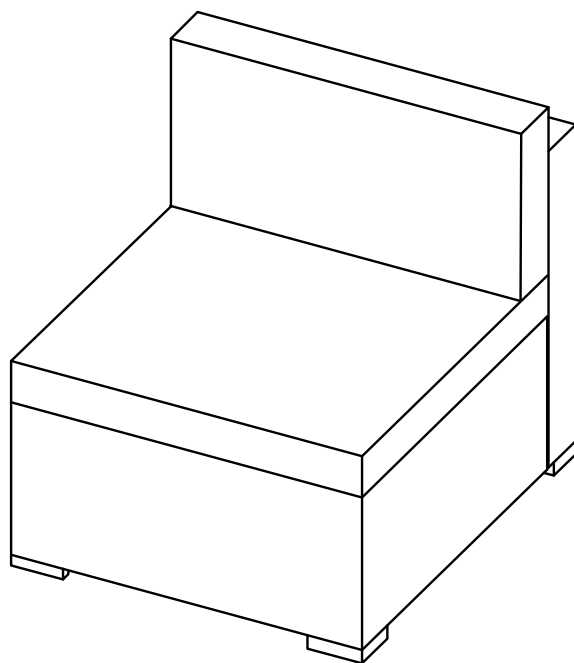
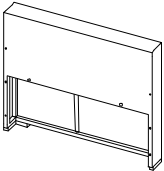
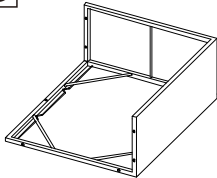
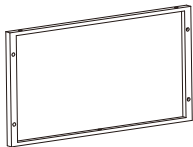








Outdoor Wicker Armless Chair






PART LIST

A 	B 	C 	E 	F 
Back Panel 1 PC	Seat Panel 1 PC	Side Panel 1 PC	Cover of Seat Cushion * 1 PC	Core of Seat Cushion 1 PC
G 	H 	*Please note cushion covers will ship separately.		
Cover of Back Cushion * 1 PC	Core of Back Cushion 1 PC			

HARDWARE LIST


#1		#2		#3		#4		#5	
M6*30mm		M6*35mm		M6*50mm		M6mm		D18 mm	
Short Bolt 3 PCS		Medium Bolt 4 PCS		Long Bolt 6 PCS		Nut 10 PCS		Washer 15 PCS	
#6		#7		#8		#9		#10	
D 12mm		M6mm		M6mm					
Small Washer 4 PCS		Wrench 1 PC		Allen Key 1 PC		L Foot 2 PCS		Plastic Clip 2 PCS	

EXTRA HARDWARE LIST

#1	 M6*30mm Short Bolt 1 PC	#2	 M6*35mm Medium Bolt 1 PC	#3	 M6*50mm Long Bolt 1 PC	#4	 M6mm Nut 1 PC	#5	 D 18mm Washer 1 PC
#6	 D 12mm Small Washer 1 PC								


Step 1. Lay back panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to back panel (part A) using long bolts(part #3),washers (part #5),nuts (part #4),wrench(part #7) and allen key (part #8).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

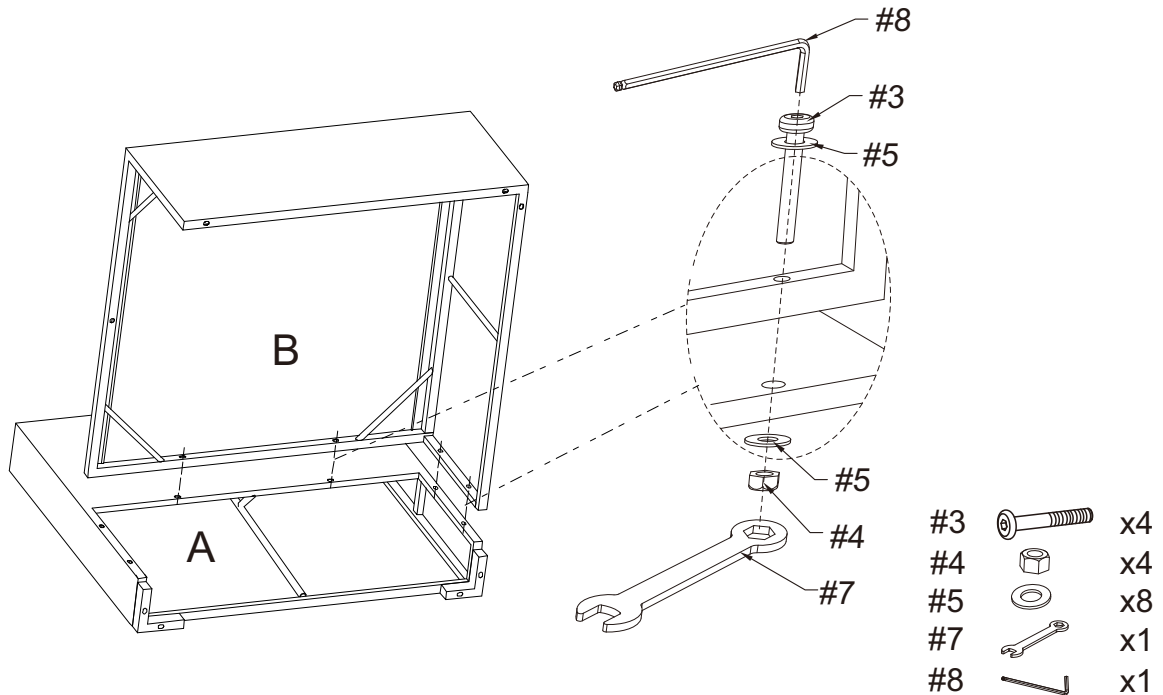


Step 2. Attach side panel (part C) to assembled unit (parts A&B) using short bolts (part #1) long bolts (part #3) ,washers (part #5) ,nuts (part #4),wrench (part #7) and allen key (part #8).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

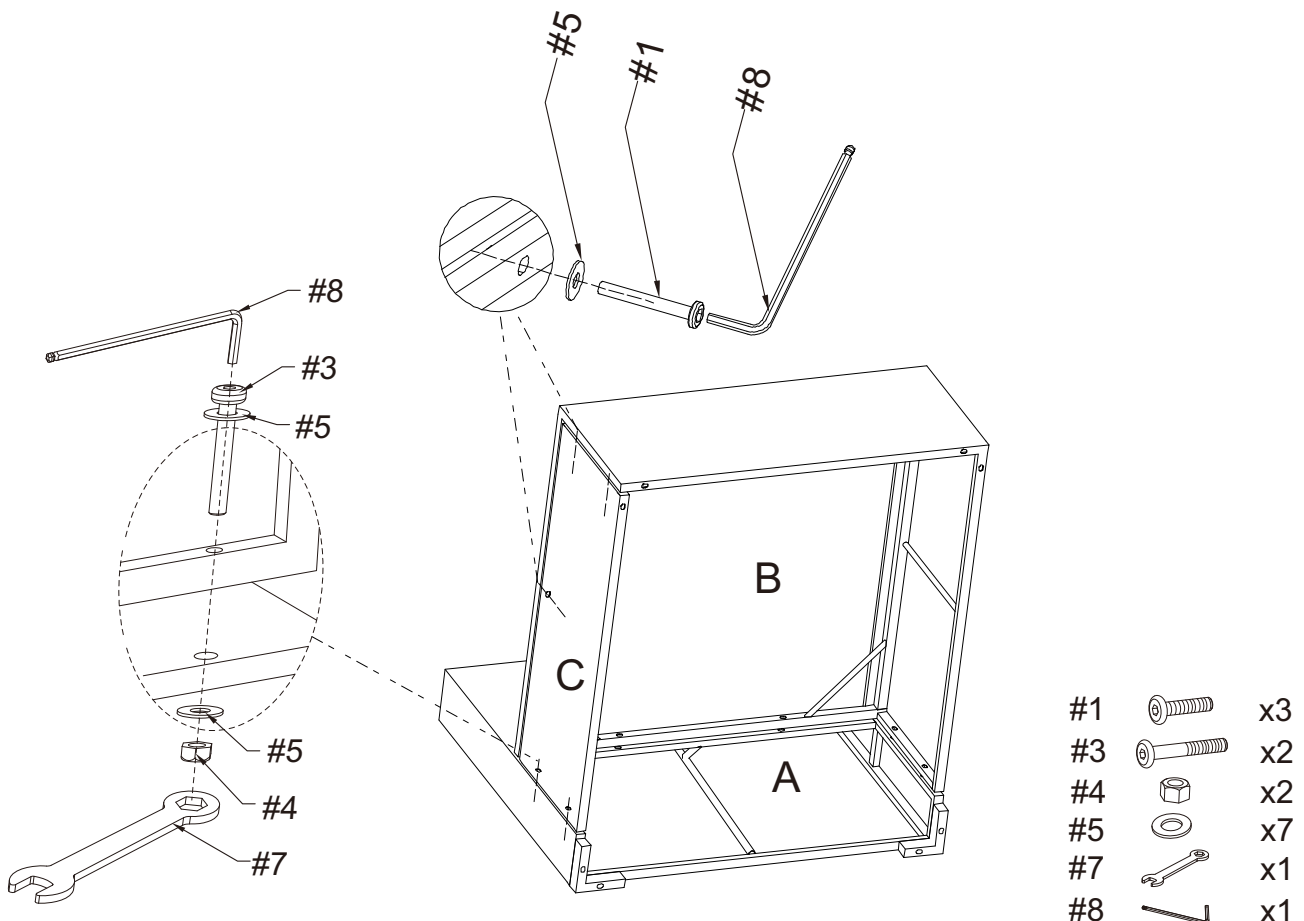


Step 3. Attach L feet (part #9) to assembled unit (parts B&C) using medium bolts (part #2), small washers (part #6), nuts (part #4), wrench (part #7) and allen key (part #8).


NOTE: Please fully tighten all bolts at this time.

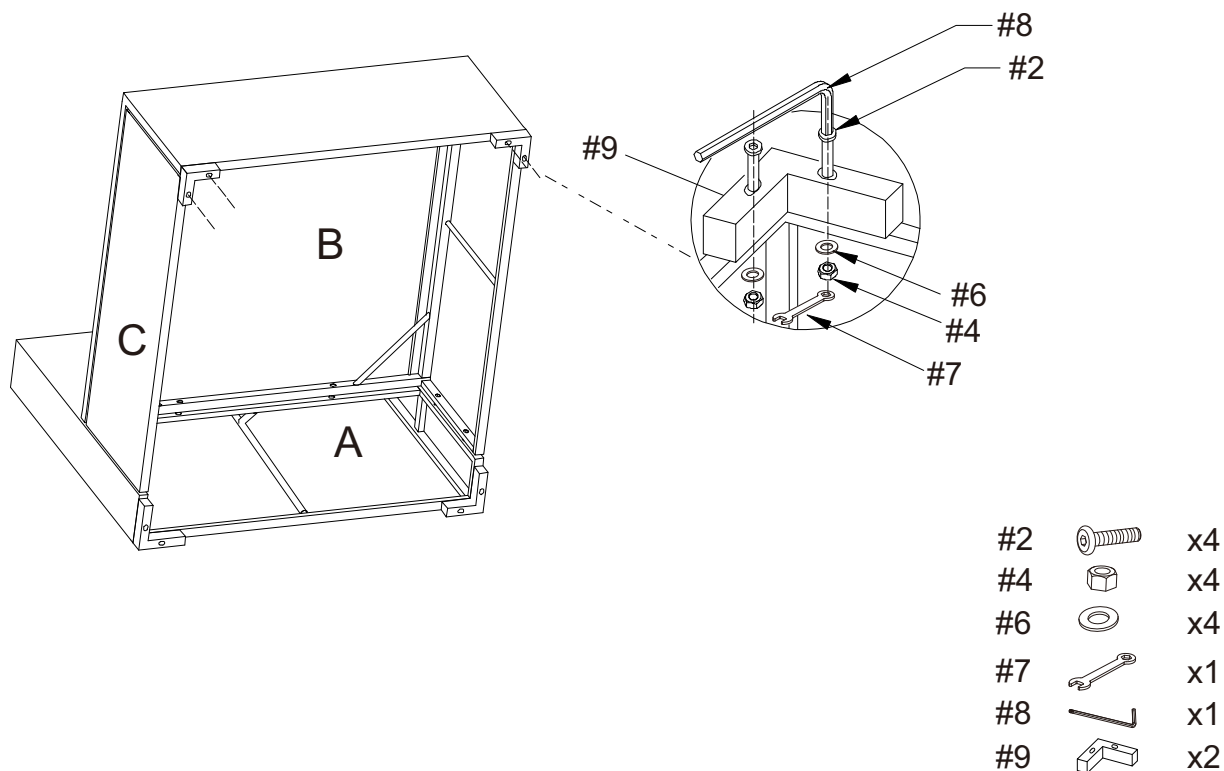

Step 4. Insert core of seat cushion (part F) into cover of seat cushion (part E).
Insert core of back cushion (part H) into cover of back cushion (part G).

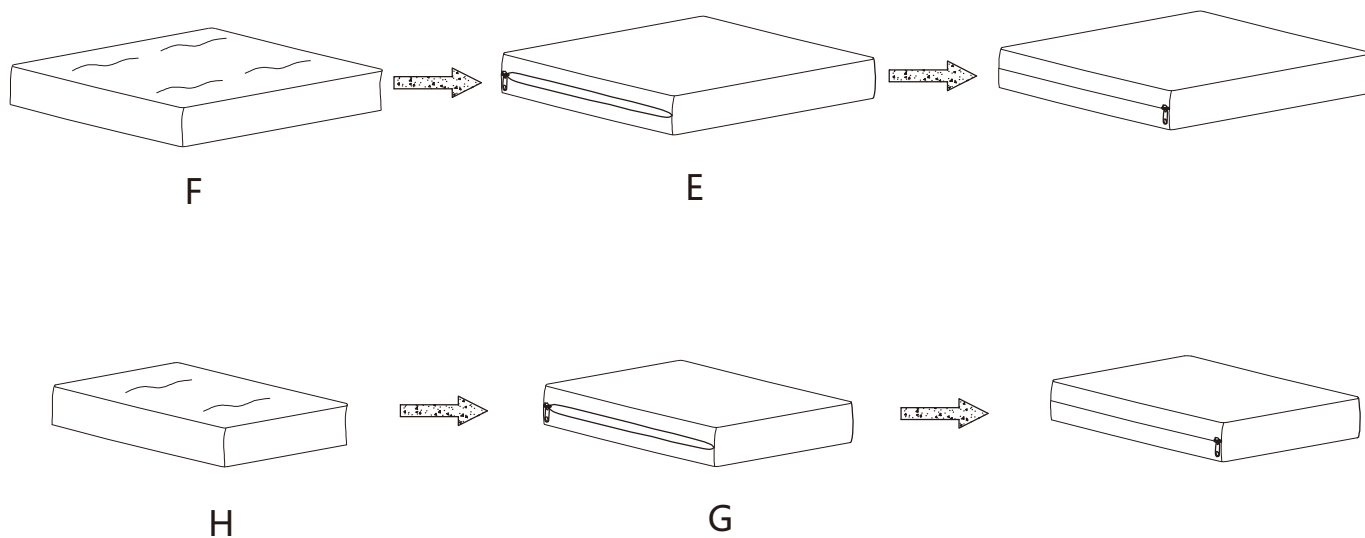

Step 5. Carefully turn the assembled chair upright and add cushions as shown below.

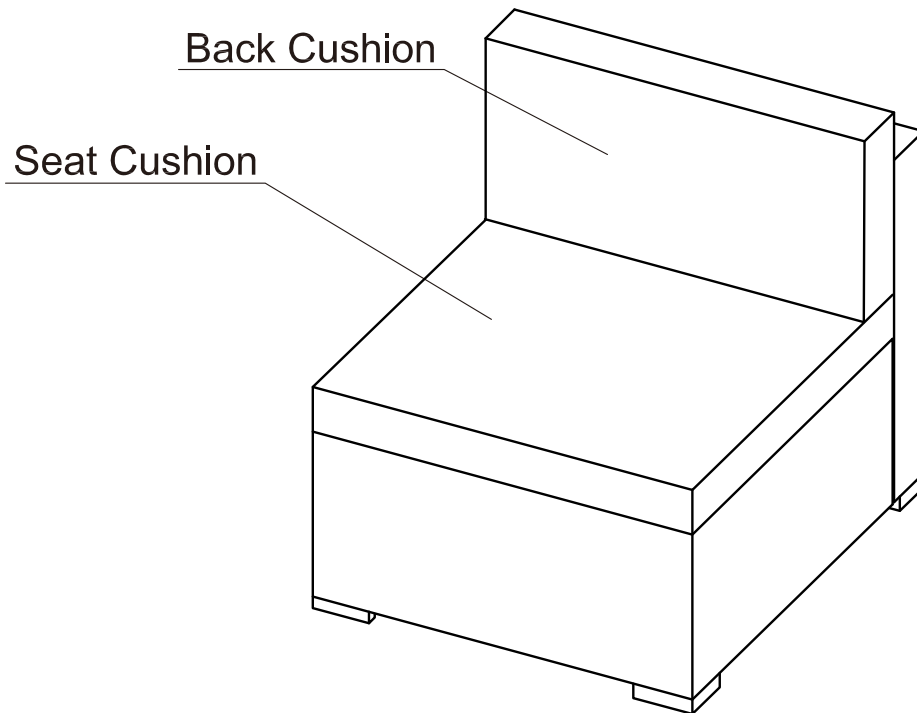

Step 6. Use plastic clips (part #10) to secure additional units together as shown.

