

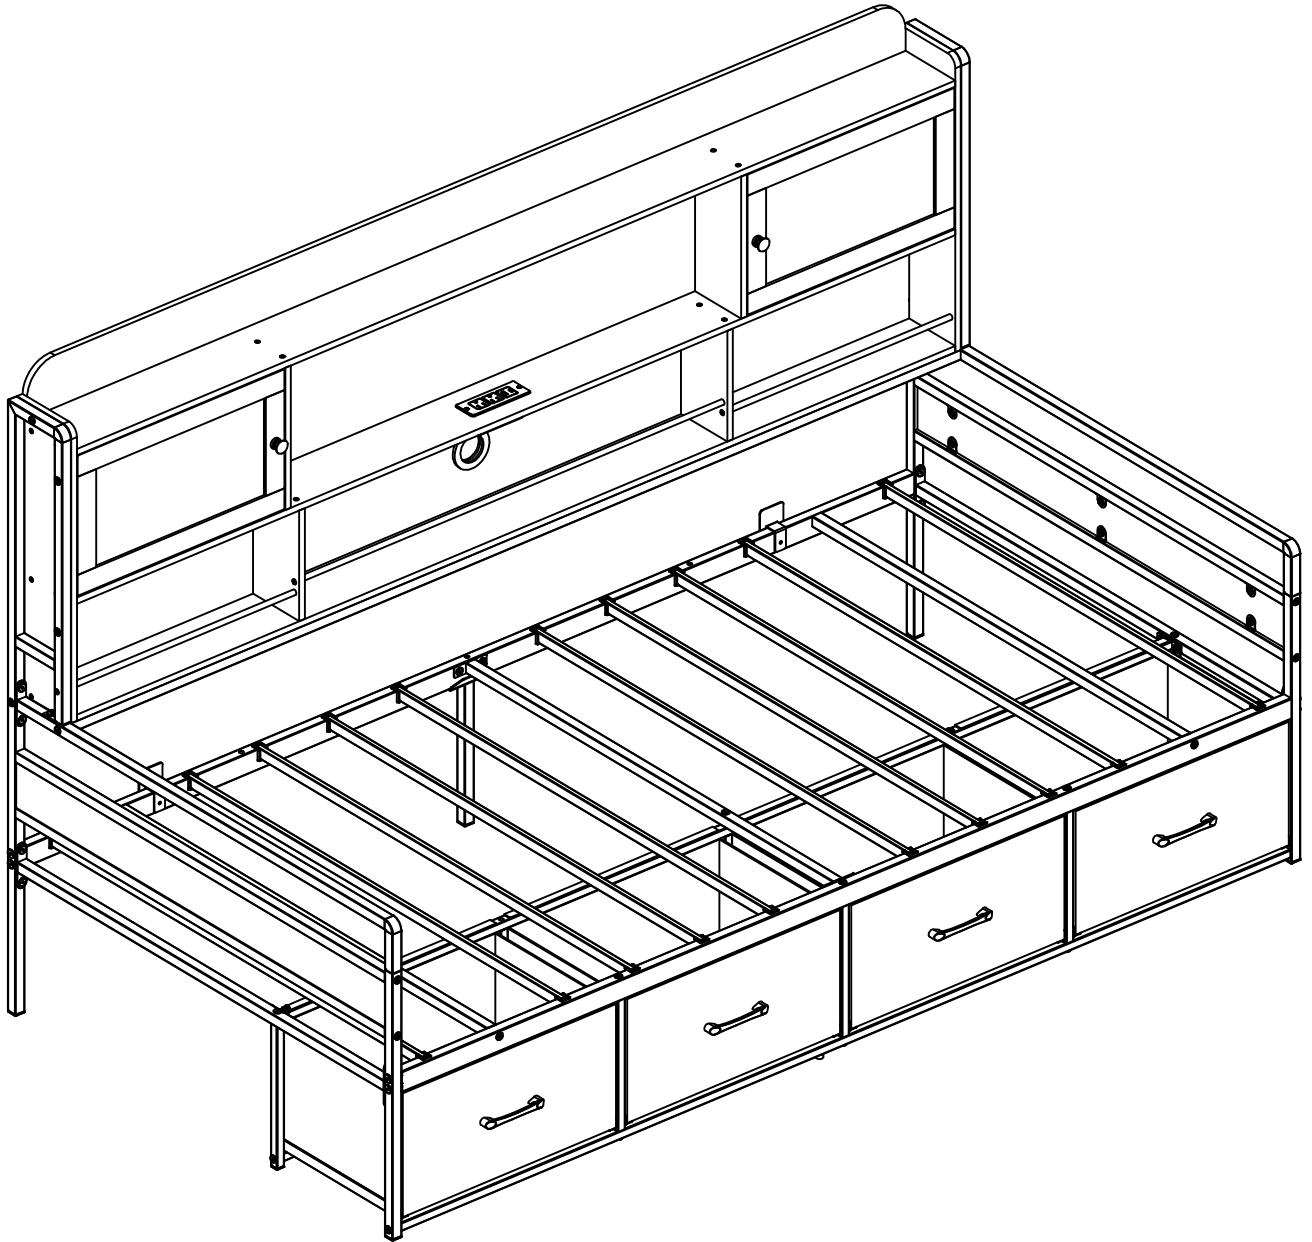
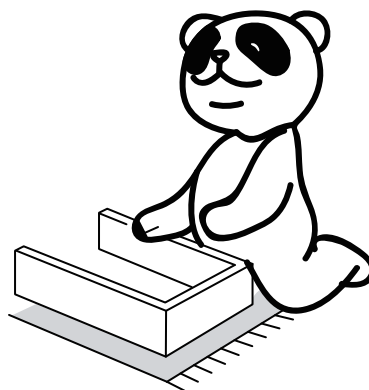


Accessory list


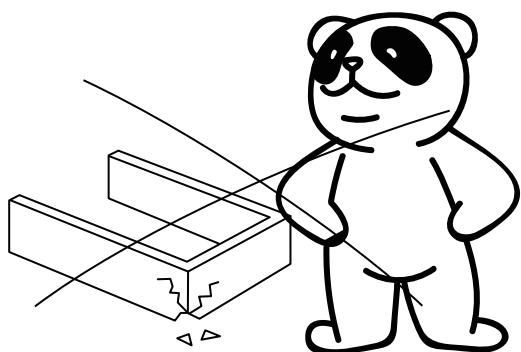


AJ-DJ505067



Version : 2.0

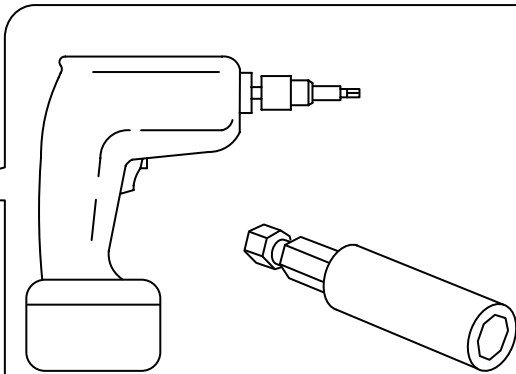

Violent installation is prohibited

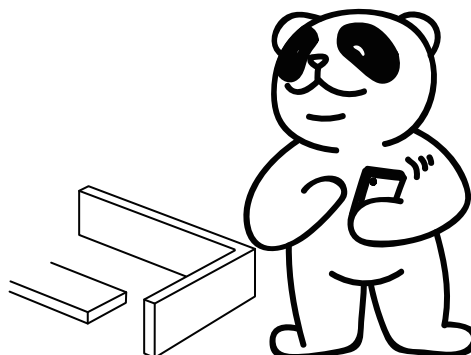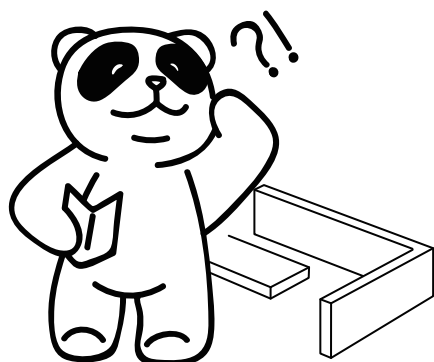

Please call if you need help

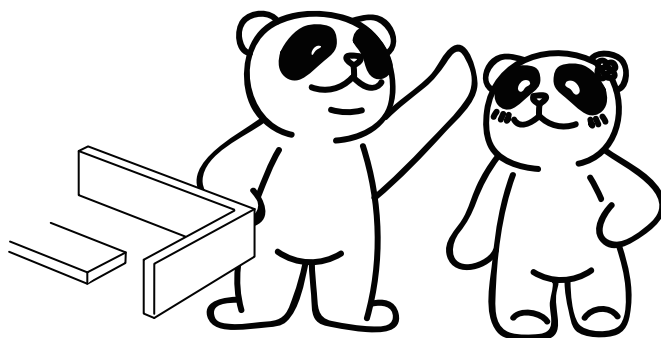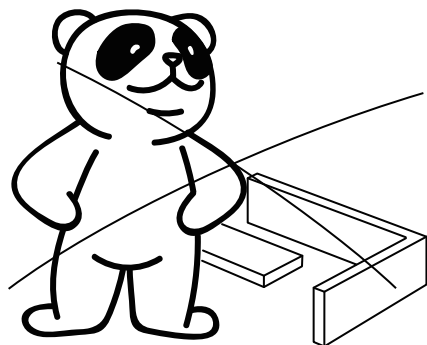


Multi-person cooperation is recommended

Assembly Instruction



1
x2

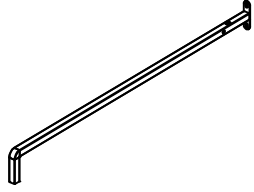


2
x2



3
x1




4
x1

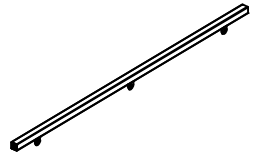


5
x4




6
x1

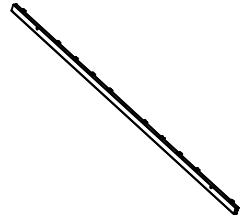


7
x2

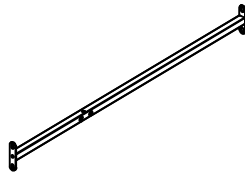


8
x1

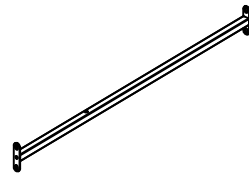


9
x1

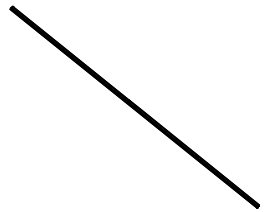


10
x2

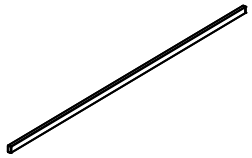

11
x10

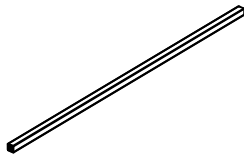

12
x2

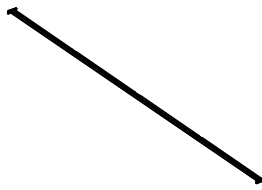


13
x1




14
x6




15
x2

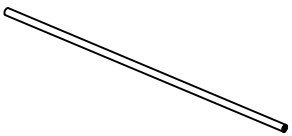


16
x2

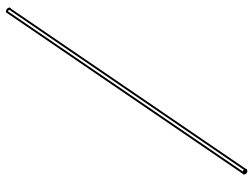

17
x1

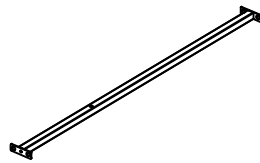

18
x1

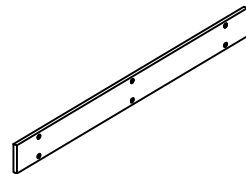


19
x2




20
x1




21
x1

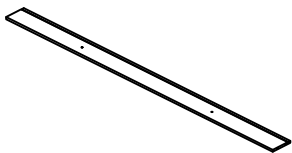


22
x1

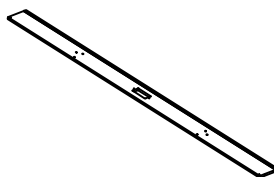

23
x1

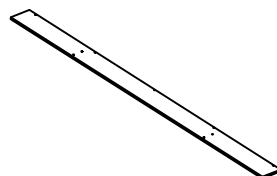


24
x1

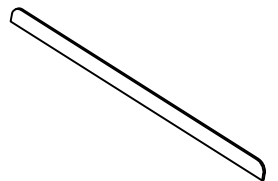


25
x1


Assembly Instruction




26
x2




27
x1




28
x1

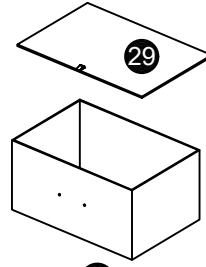


29
x4




30
x4

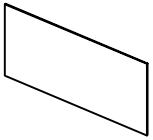


31
x2




32
x4




33
x4




34
x2

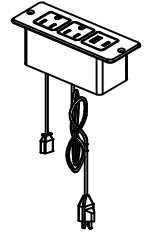


35
x1

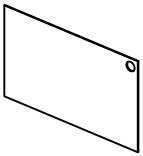


36
x2

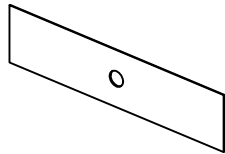


37
x1

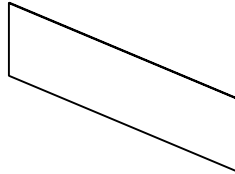


38
x1




39
x1

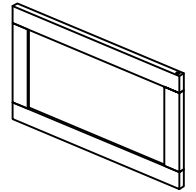


40
x2




41
x2

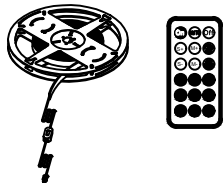


42
x1

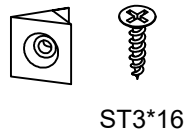

43
x8

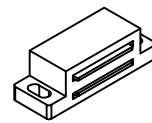


44
x2



45
x2



46
x2

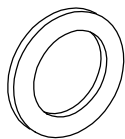


47
x1

Assembly Instruction


Hardware List




A
M6*10
x22+2




B
M8*15
x16+1



C
M6*40
x30+2




D
M6*60
x4



E
M8*40
x8



F
M4*22
x6



G
ST5*35
x29+2




H
ST3*15
x4



I
ST3*12
x6




J
Ø5*15
x4



K
M6*28
x12+1




L
S3
x1



M
x1



N
S5
x1



O
M4*40
x2





P
M4*12
x8


Assembly Instruction

Note:

- 1, should be assembled on flat ground to keep balance.
- 2, Before completing the installation, do not tighten the screws.

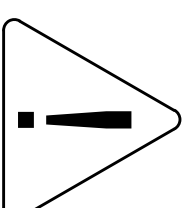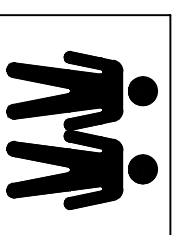


Before starting follow the the assembly. you must read the whole manual and instructions.

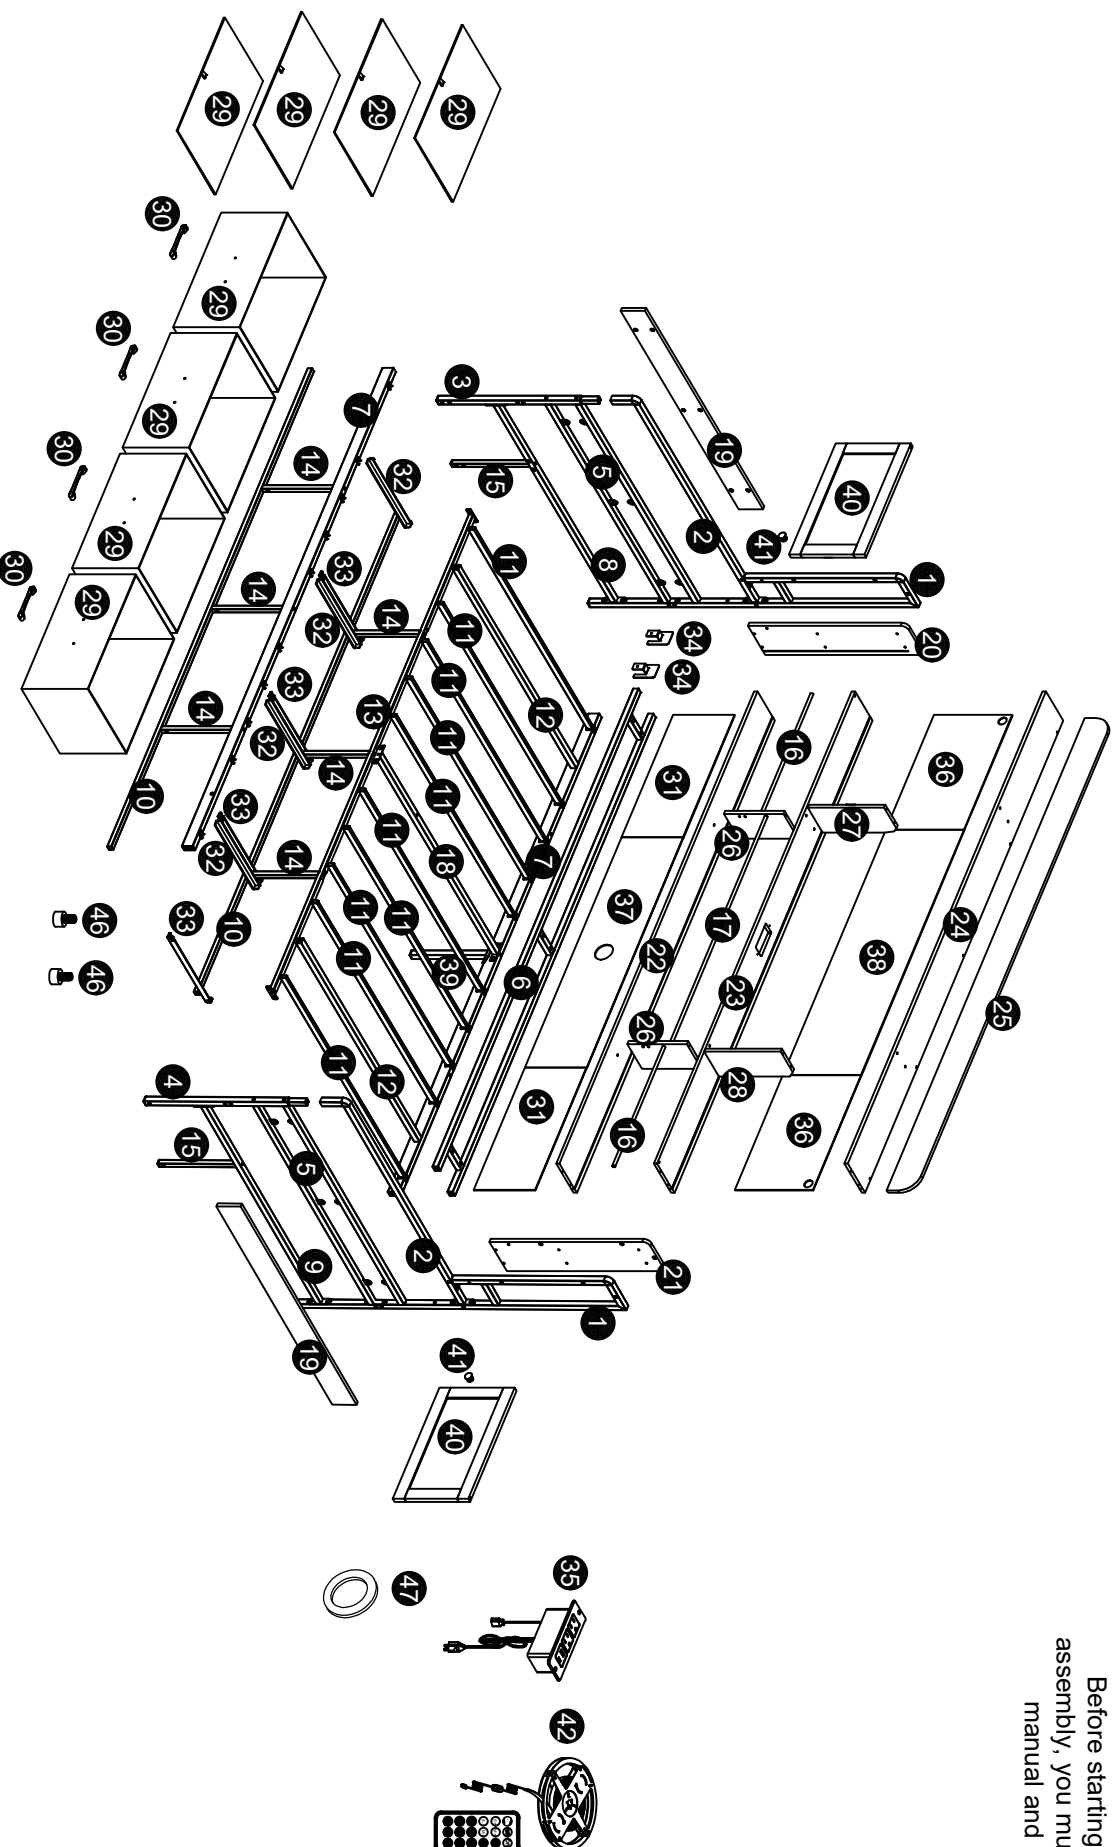


Assembly Instruction

1

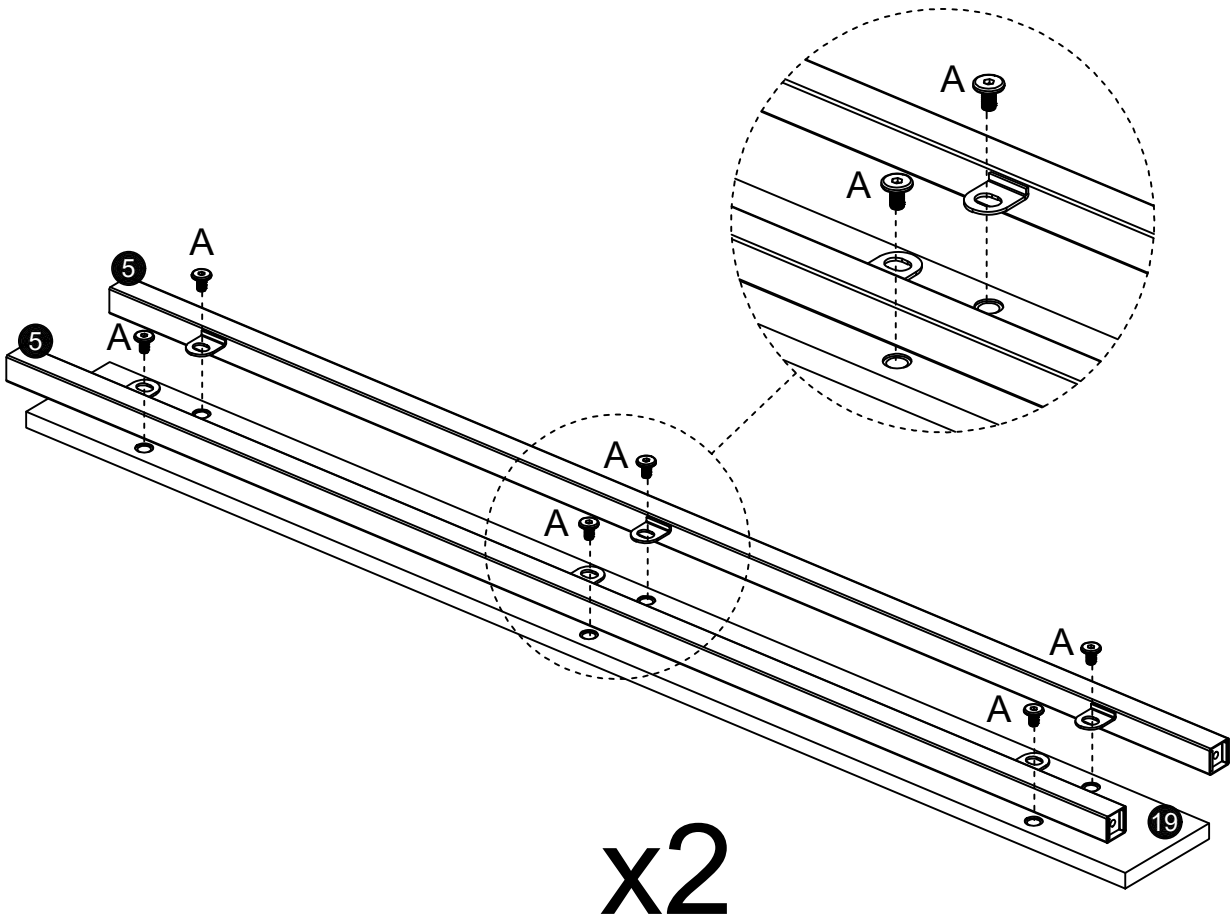

- A M6*10
x12
- N S5
x1



2

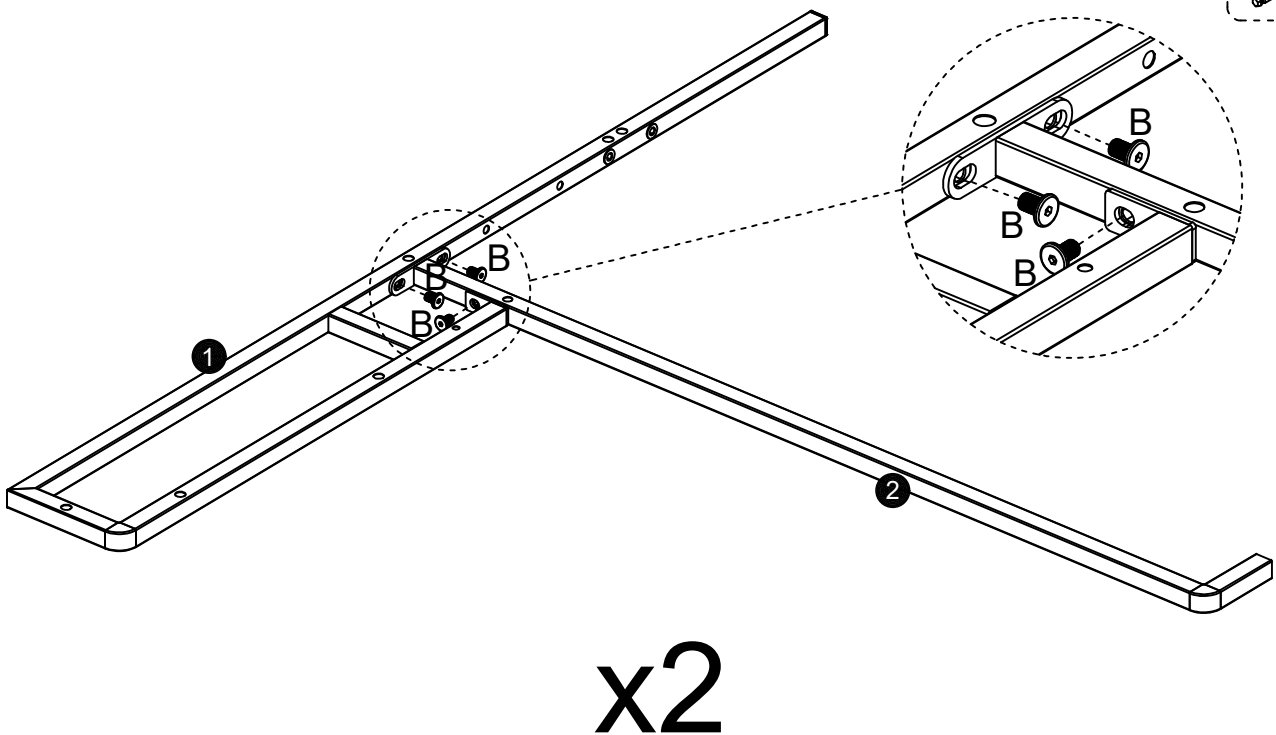



- B M8*15
x6
- N S5
x1

Assembly Instruction

3

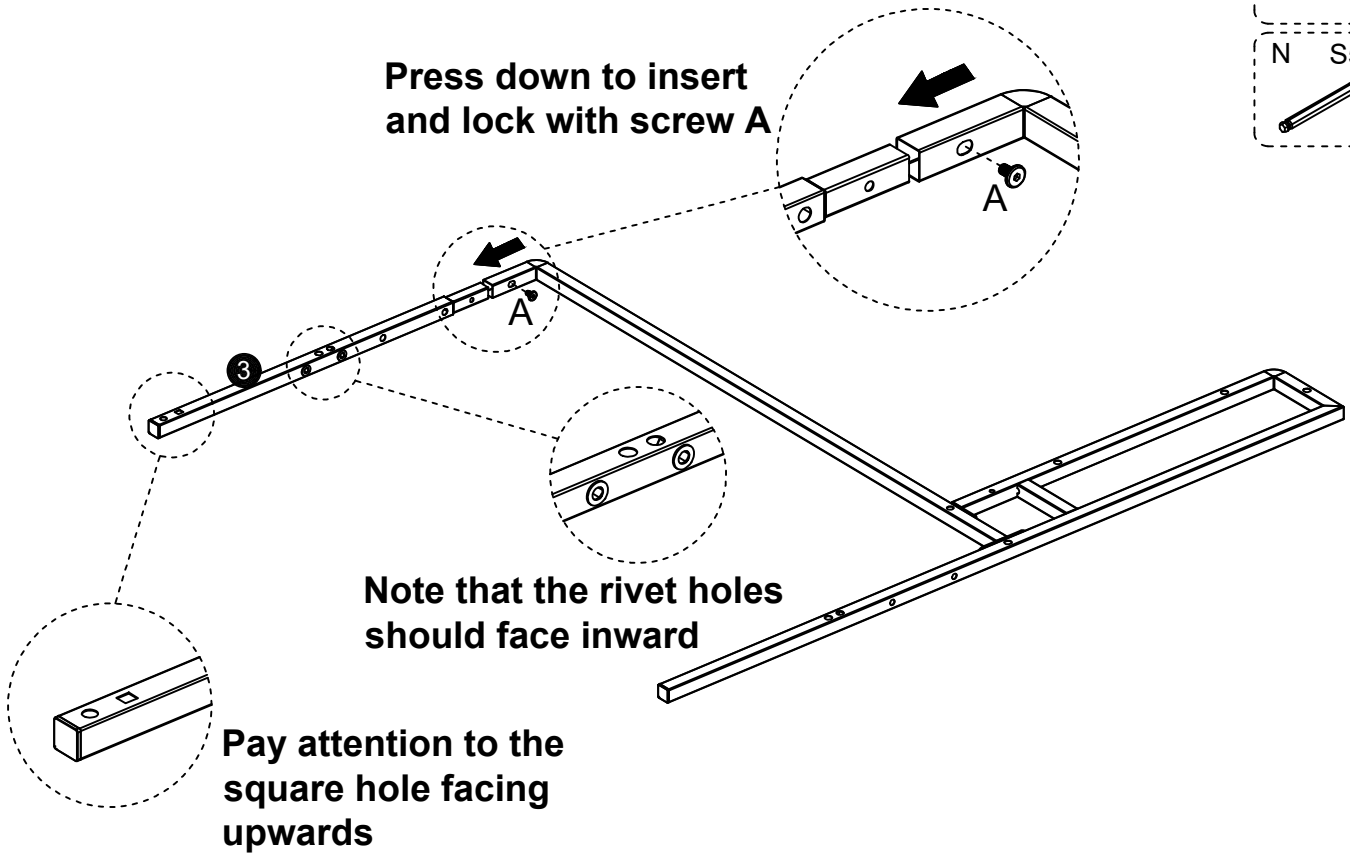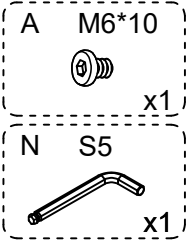


4

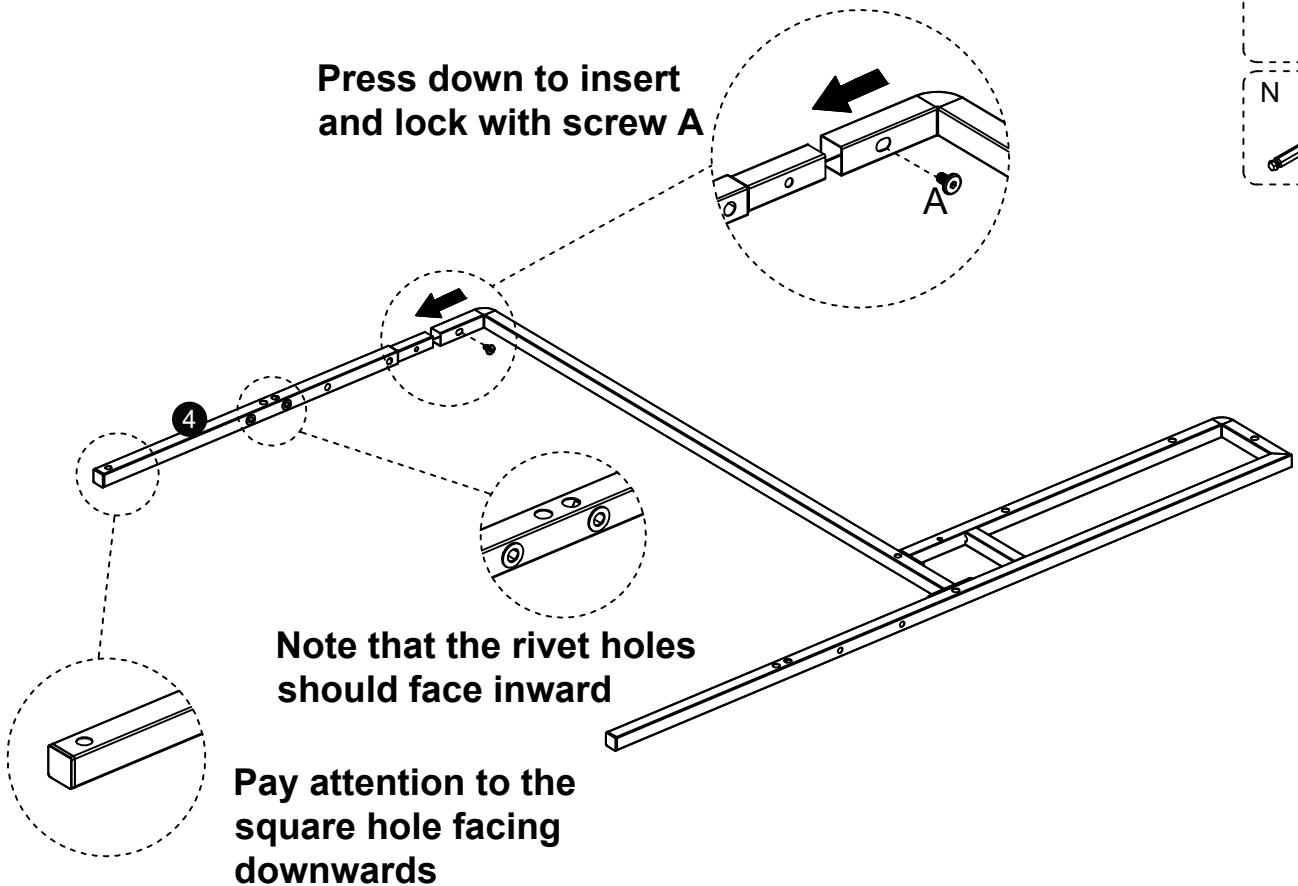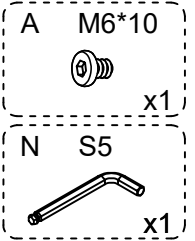

Assembly Instruction


5

Note that the rivet holes on part 8 and the screw holes on part 19 are facing in the same direction

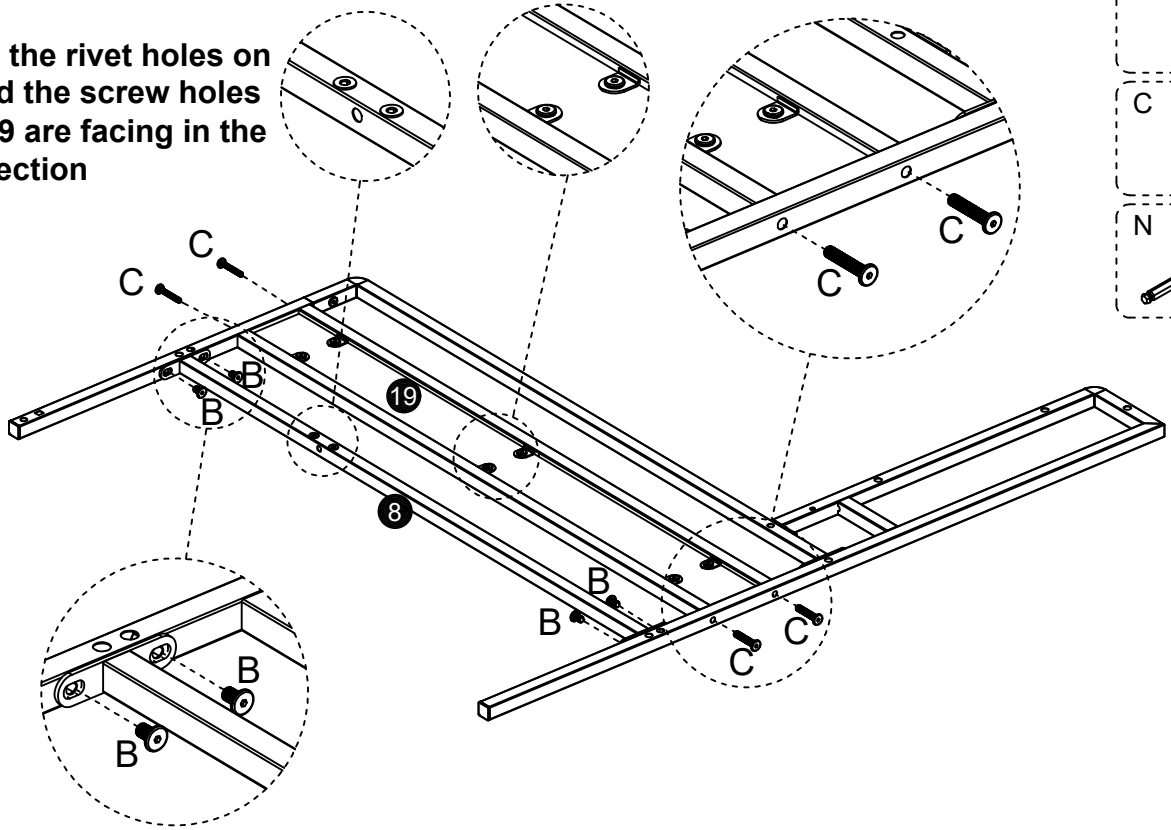



6

Note that the rivet holes on part 9 and the screw holes on part 19 are facing downwards


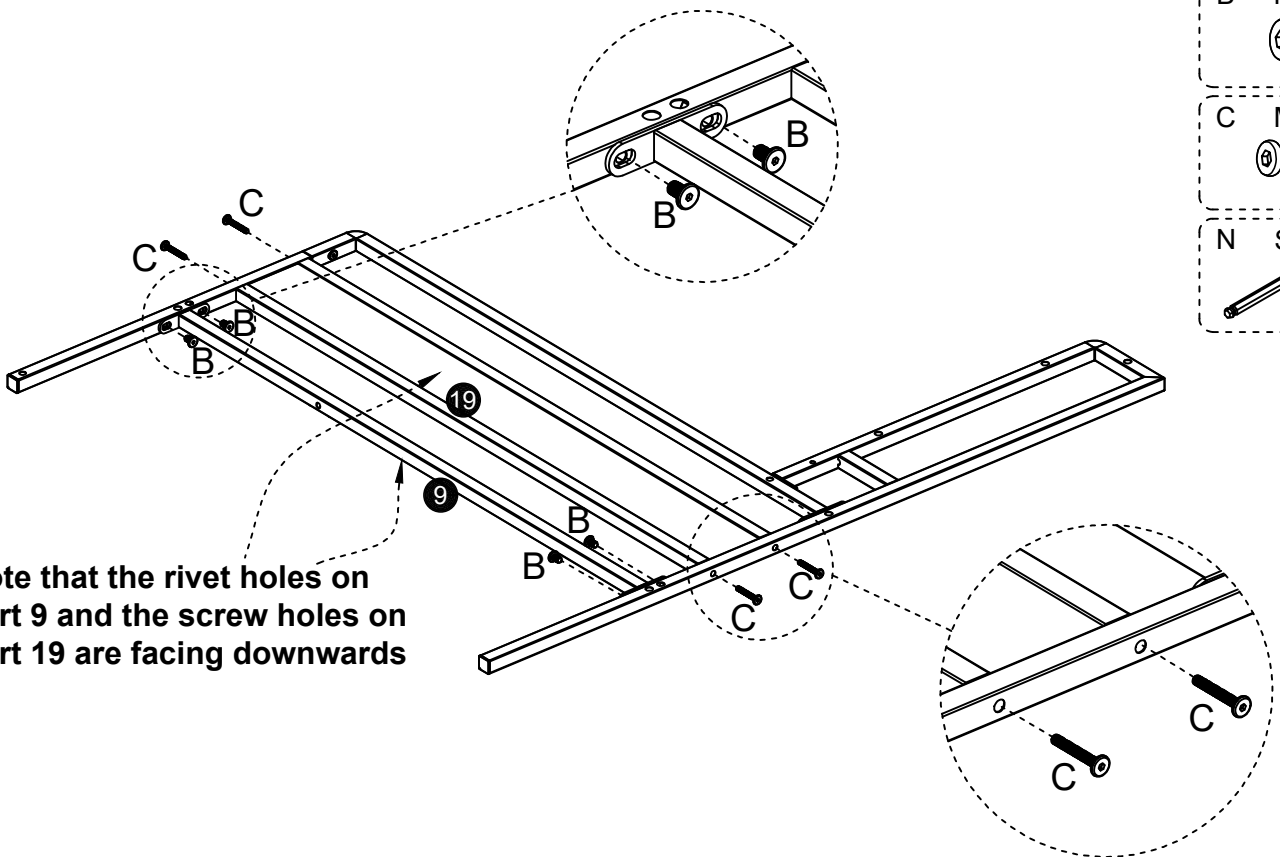


Assembly Instruction

7

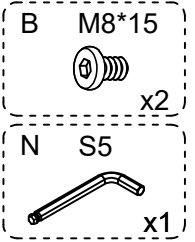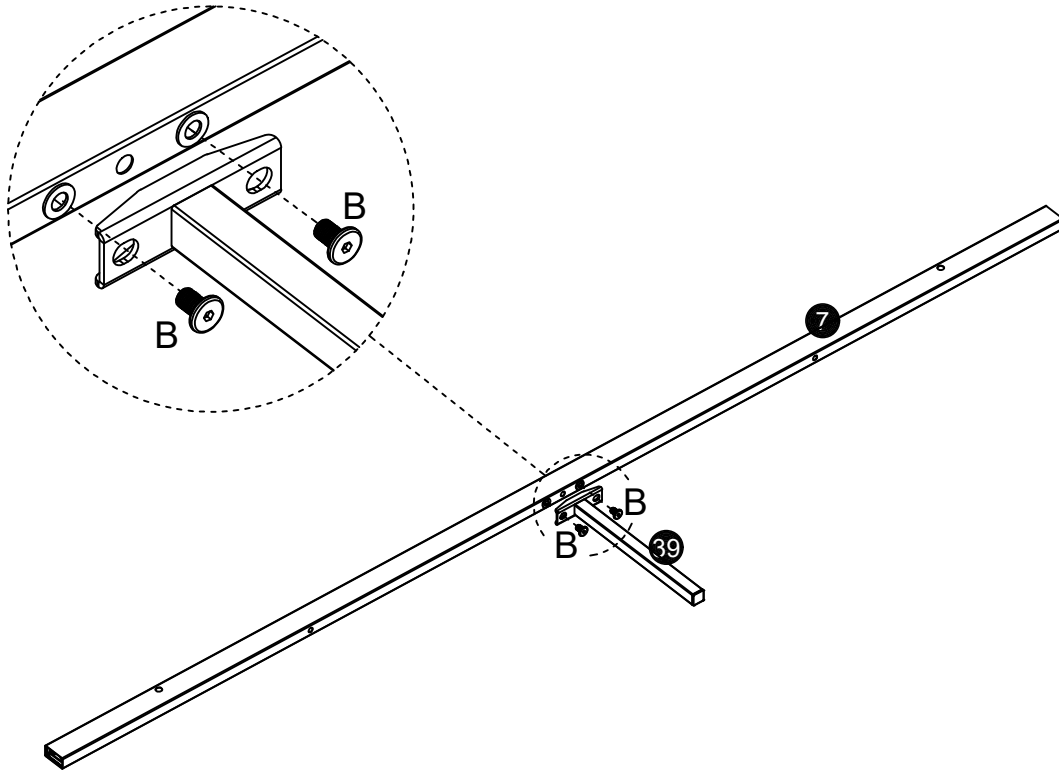

8

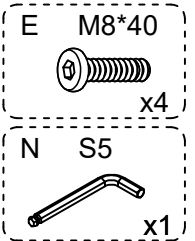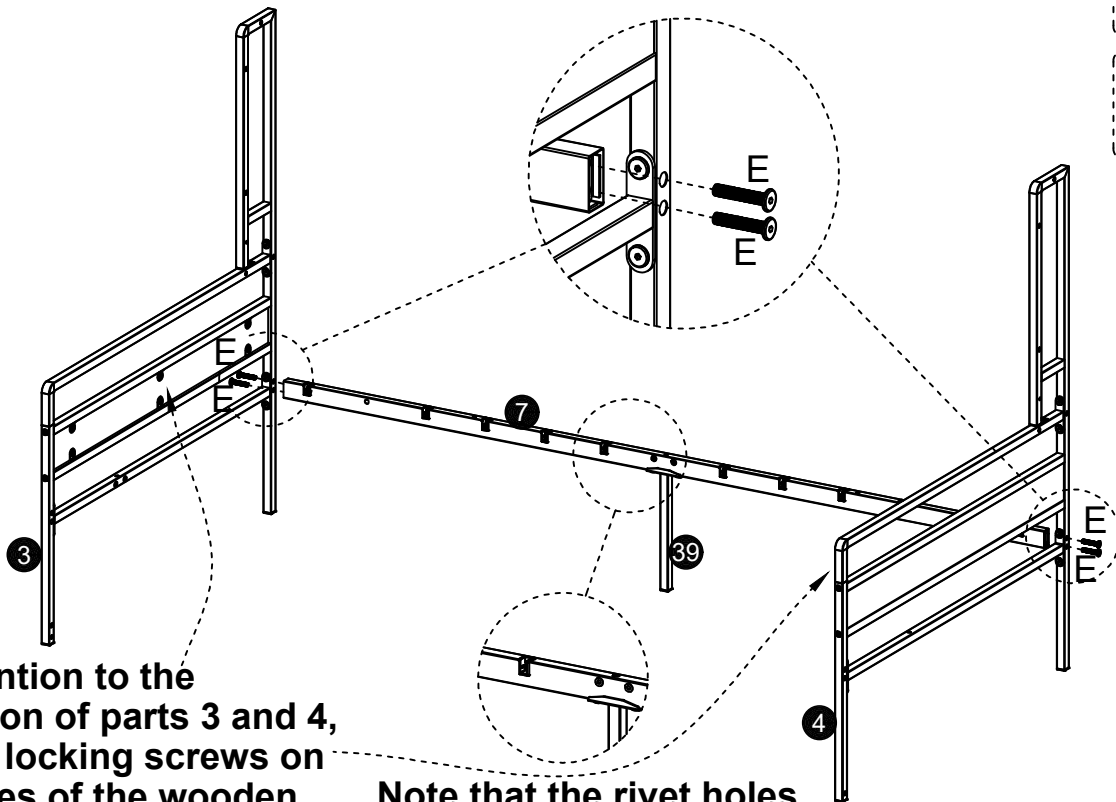


Pay attention to the orientation of parts 3 and 4, with the locking screws on both sides of the wooden board facing inward


Note that the rivet holes should face inward

Assembly Instruction

9

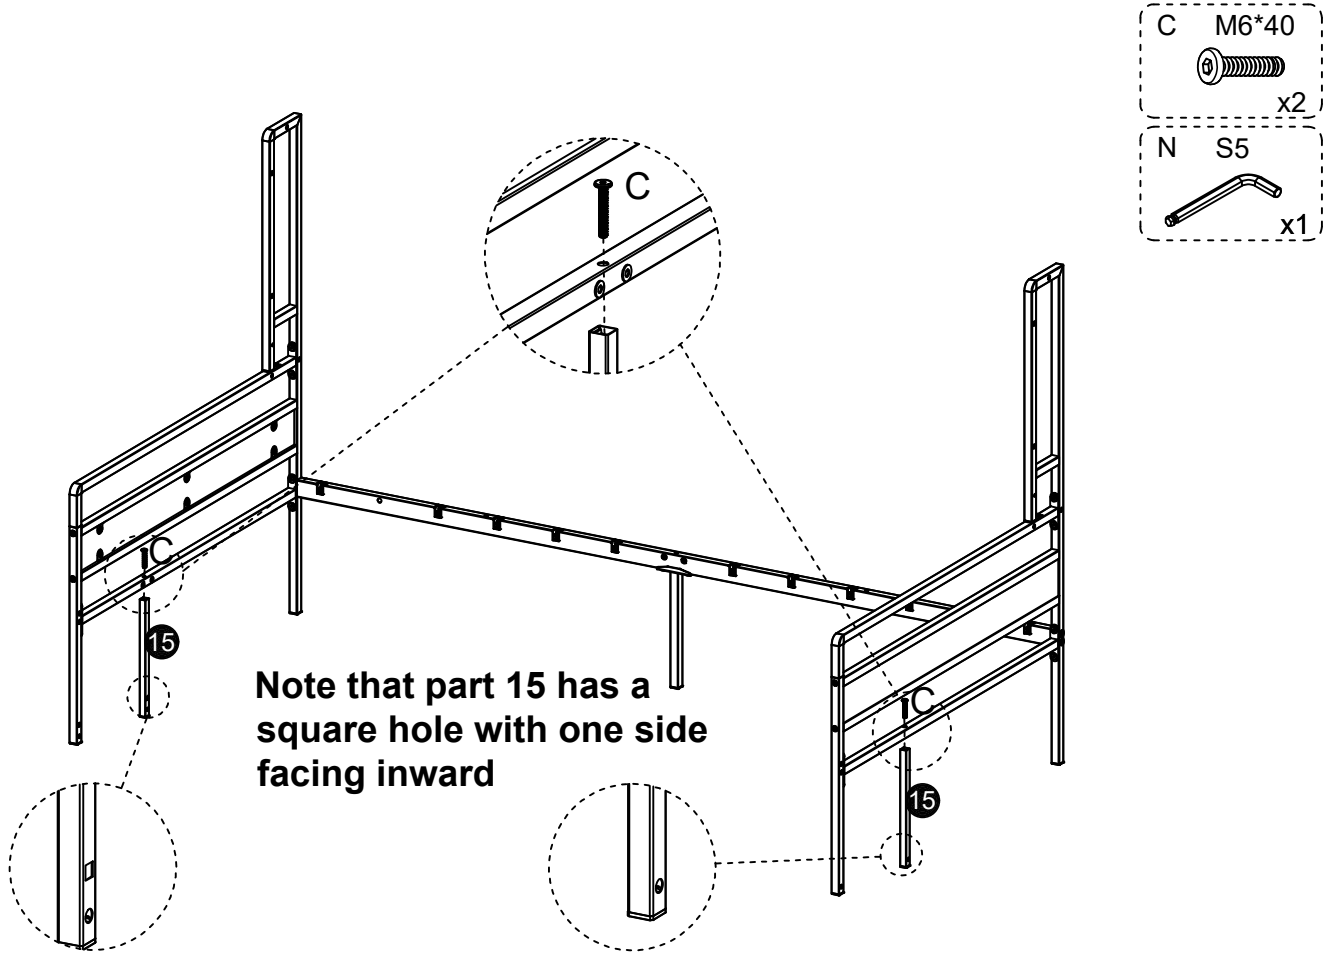

10

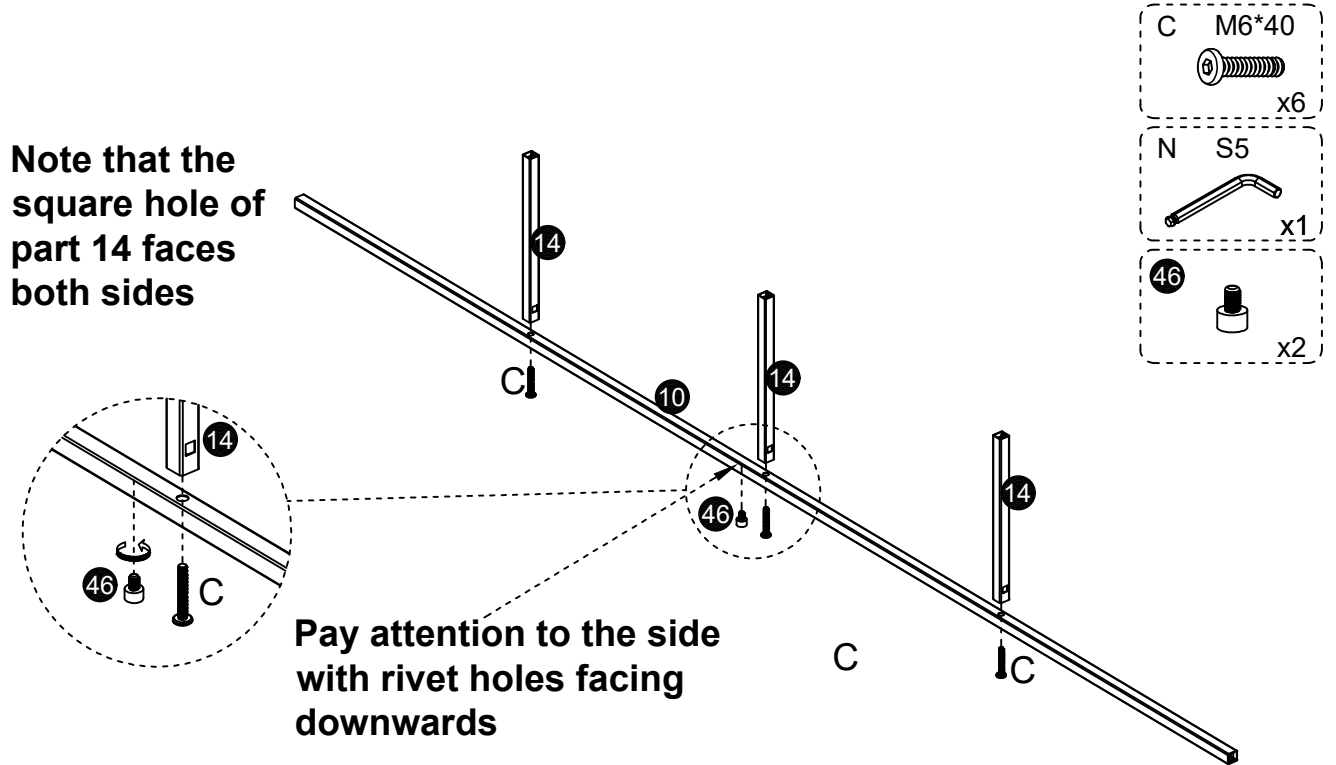


x2

Assembly Instruction


11

Note that the side with EVA is facing upwards

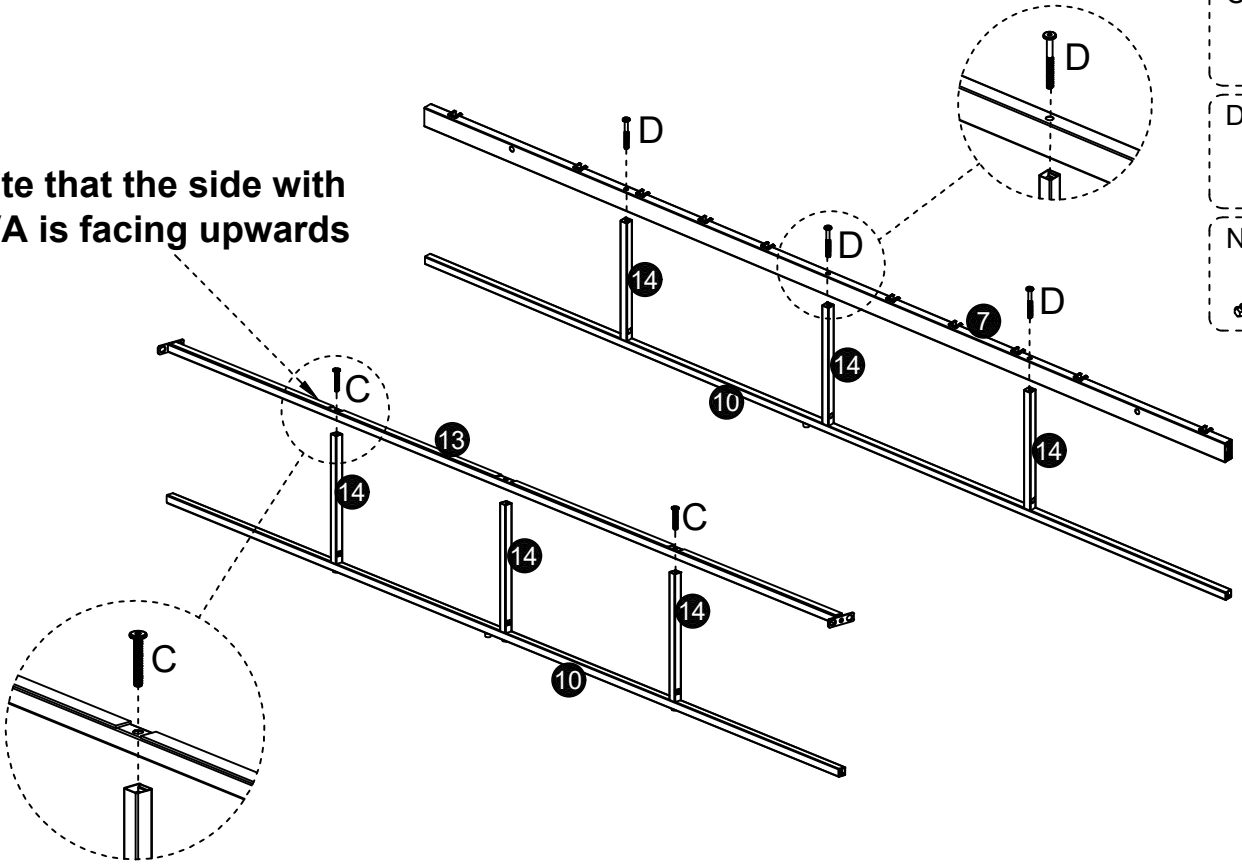

- C M6*40 x2
- D M6*60 x3
- N S5 x1


12

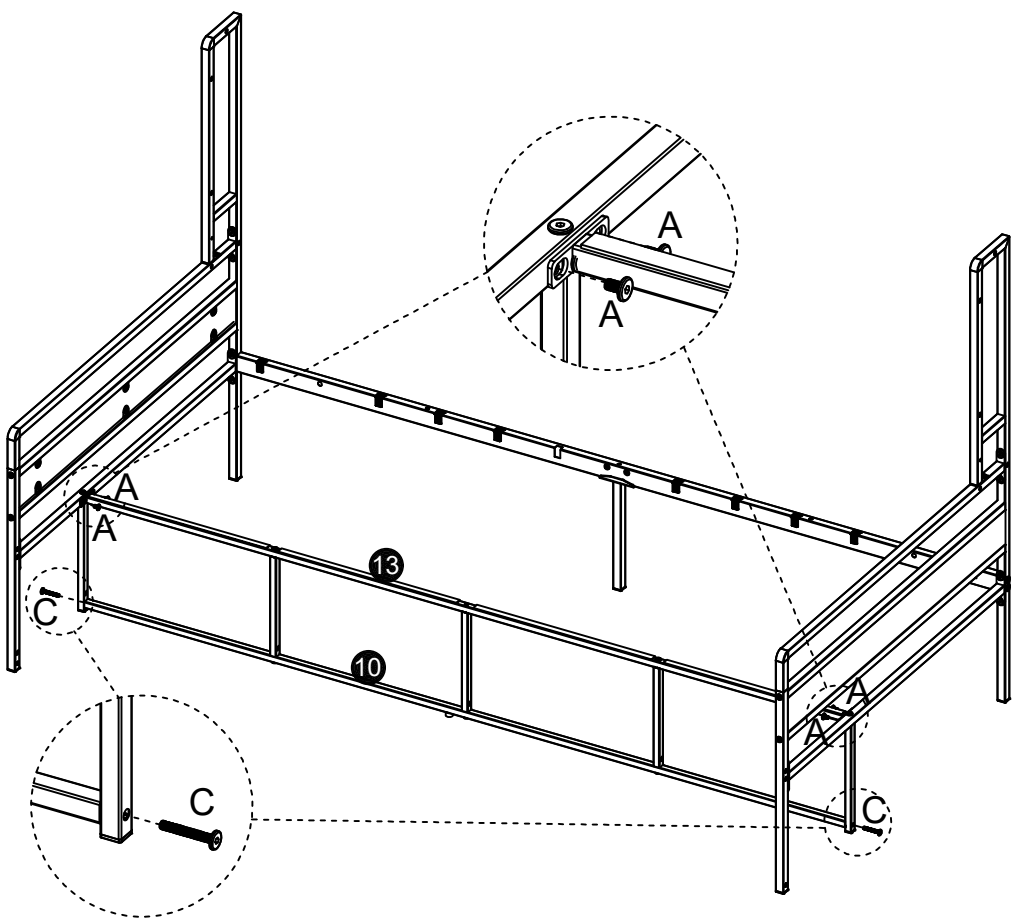

- A M6*10 x4
- C M6*40 x2
- N S5 x1


Assembly Instruction

13

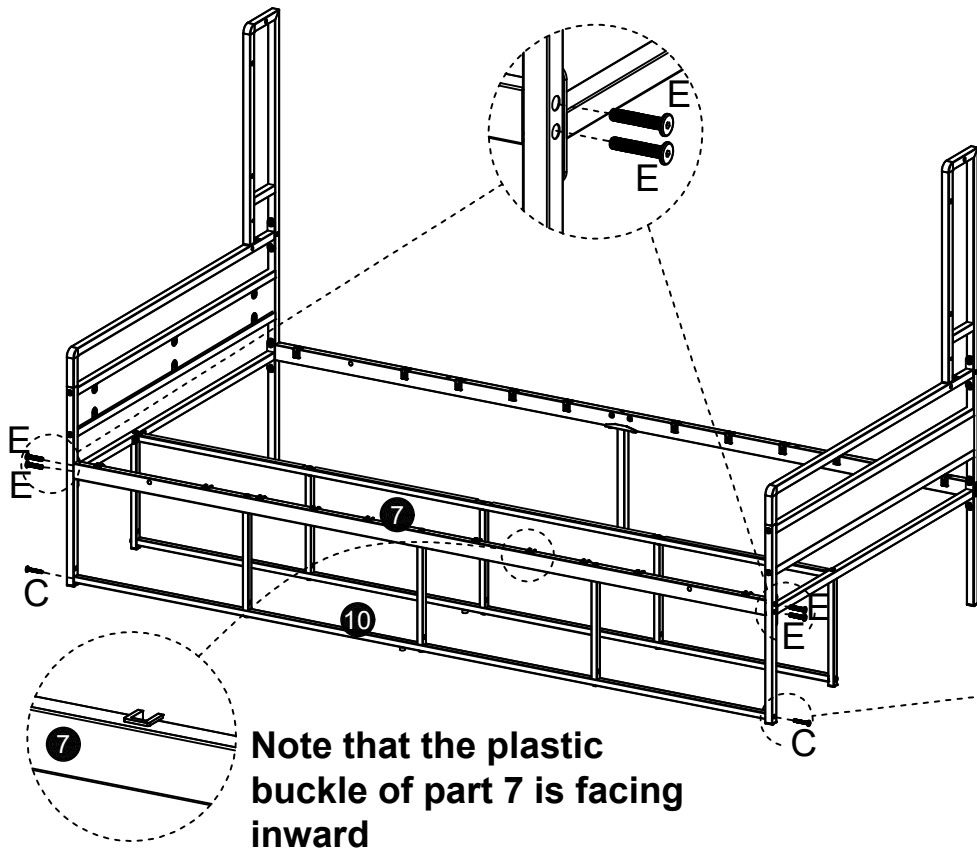

- C M6*40
x2
- E M8*40
x4
- N S5
x1


14

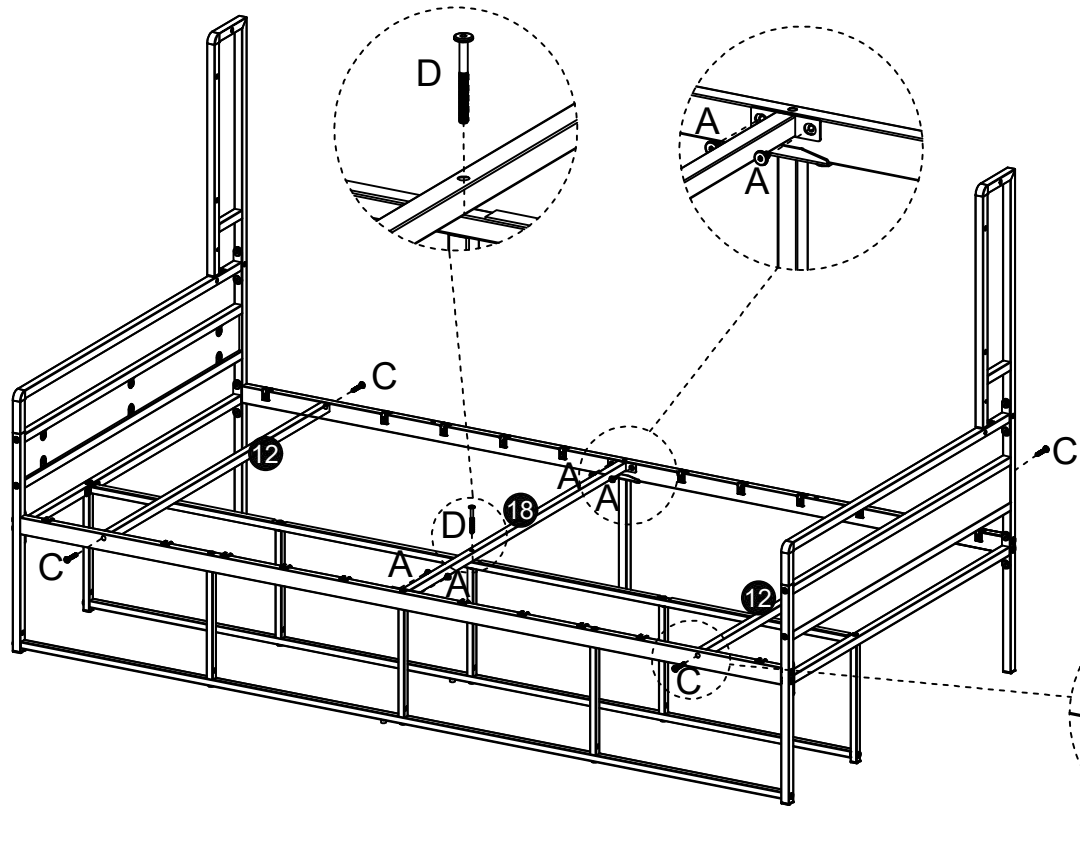



- A M6*10
x4
- C M6*40
x4
- D M6*60
x1
- N S5
x1

Assembly Instruction

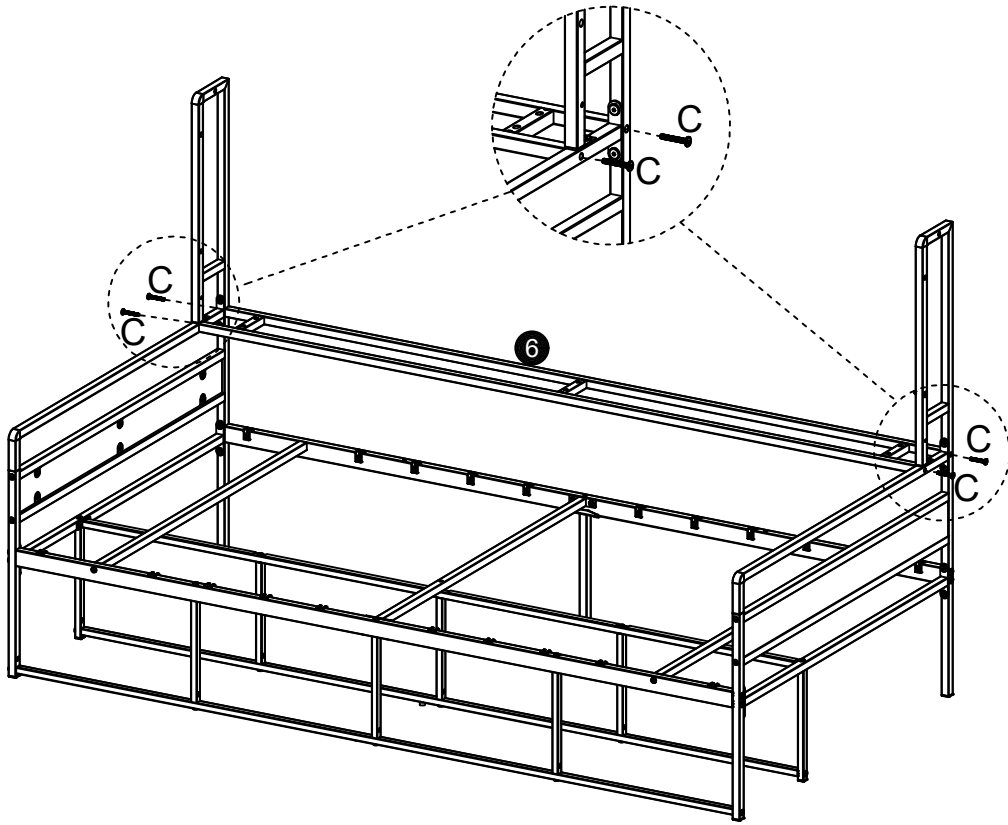
15





- C M6*40

x4
- N S5

x1

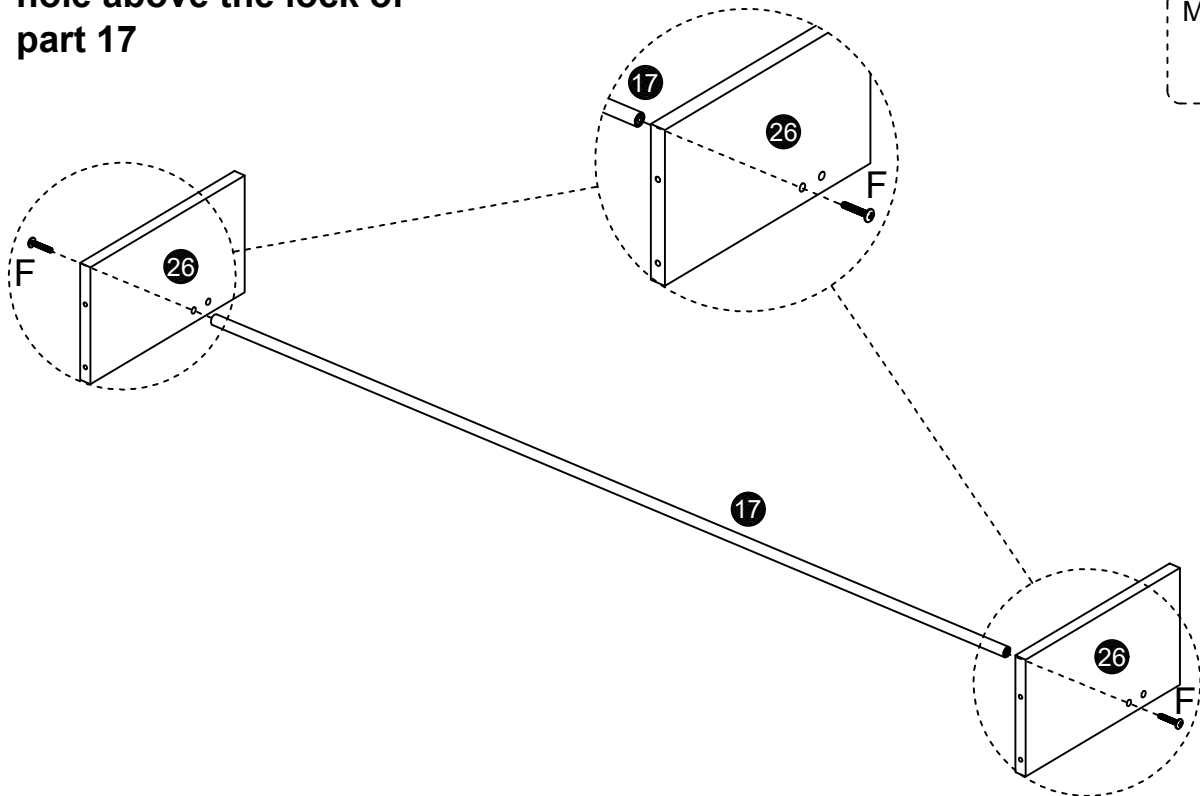16


Pay attention to the first hole above the lock of part 17



- F M4*22

x2
- M

x1



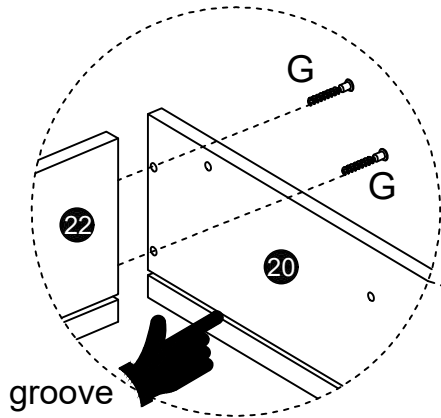
Assembly Instruction

17





groove



Note that the grooves of parts 20, 22 are facing the same direction

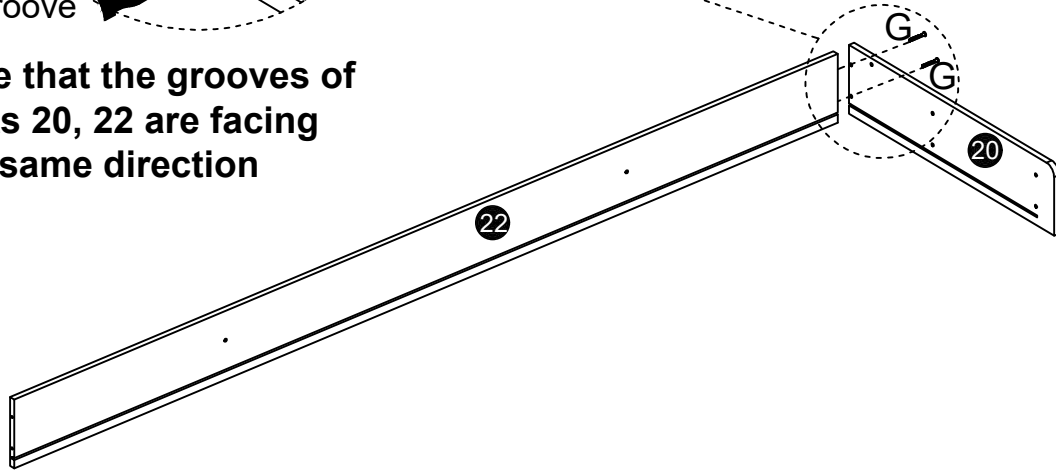

18

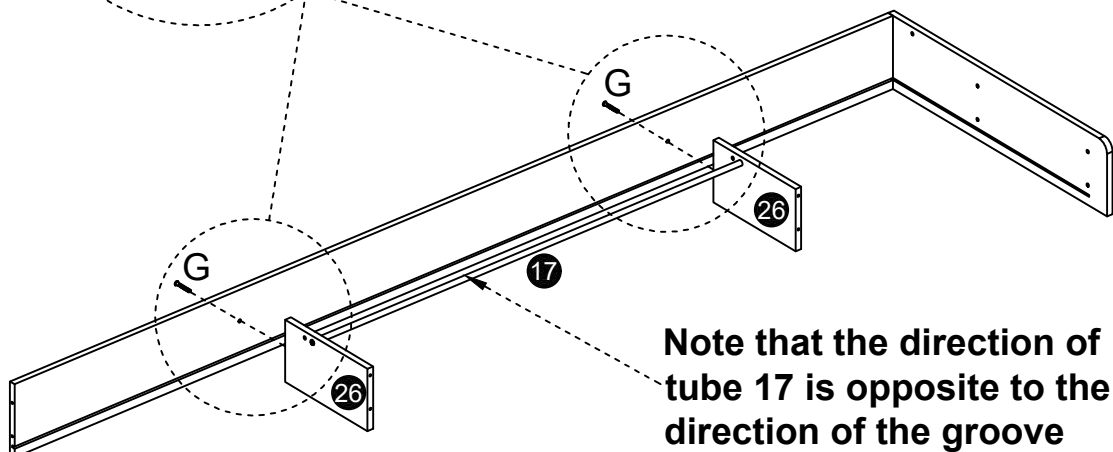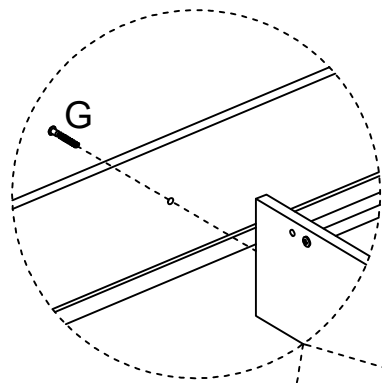


Note that the direction of tube 17 is opposite to the direction of the groove



Assembly Instruction

19

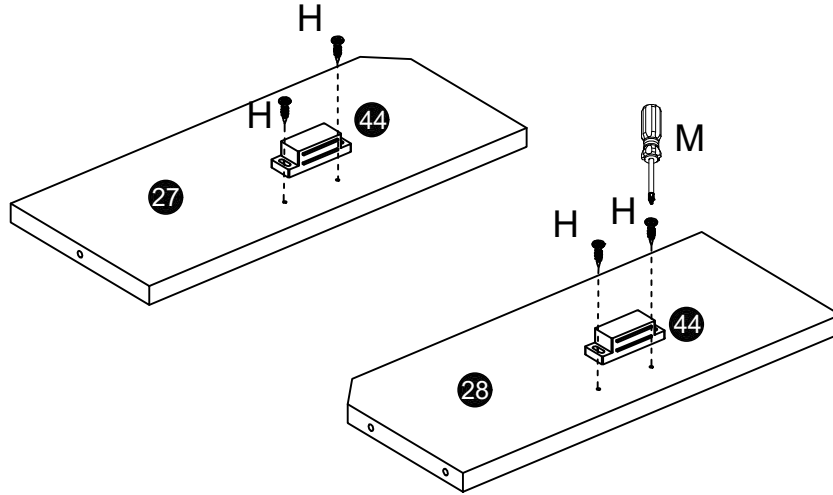


H ST3*15
x4

M
x1

44
x2

20

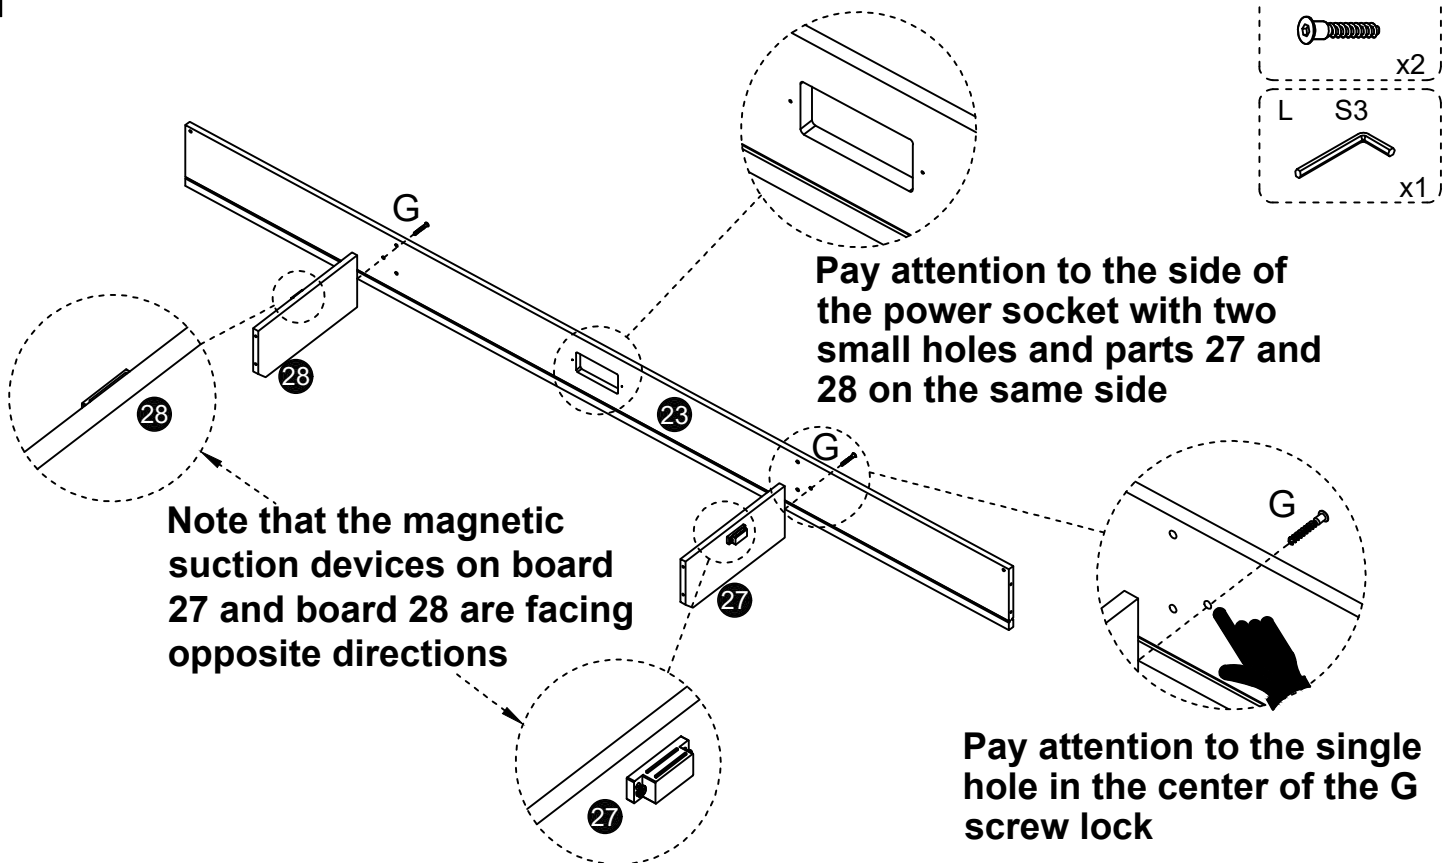


G ST5*35
x2

L S3
x1


Assembly Instruction

21

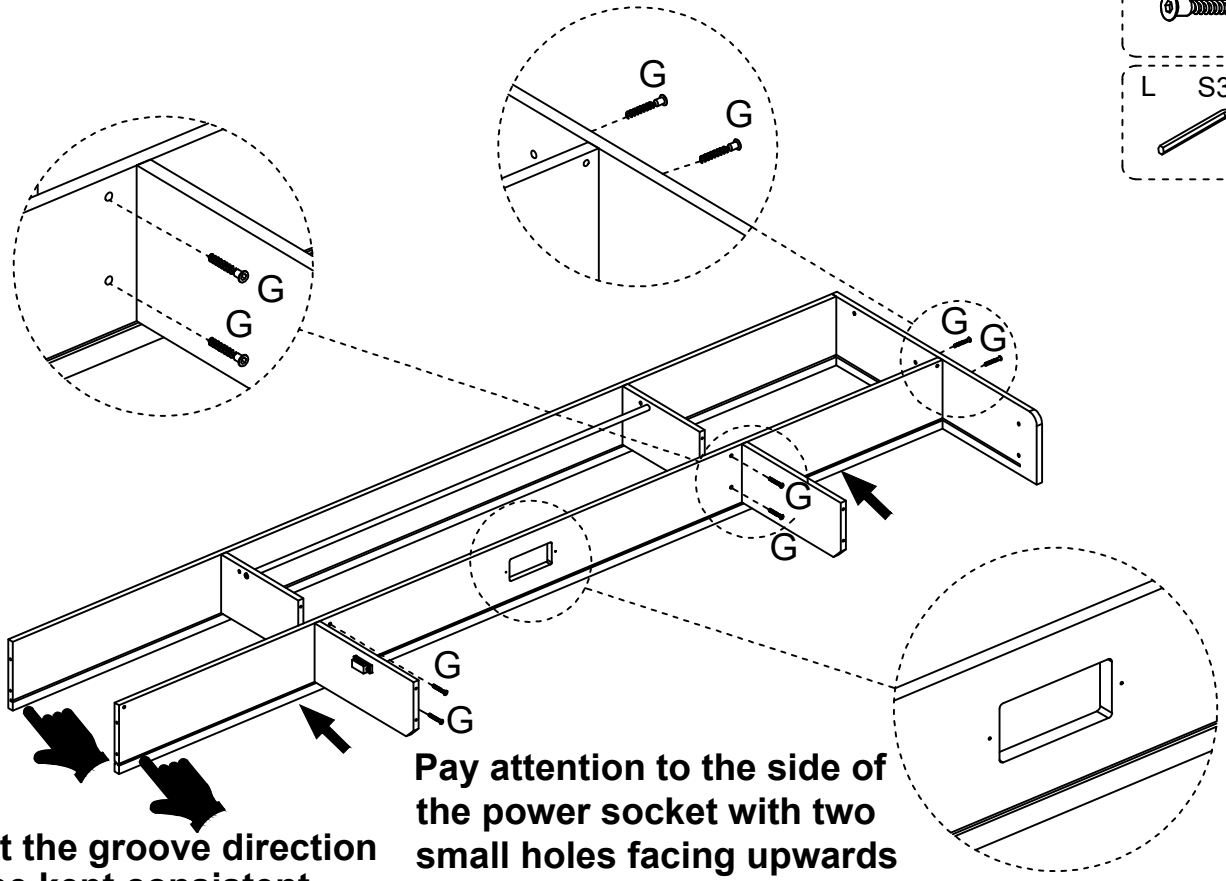

- G ST5*35 x6
- L S3 x1


22

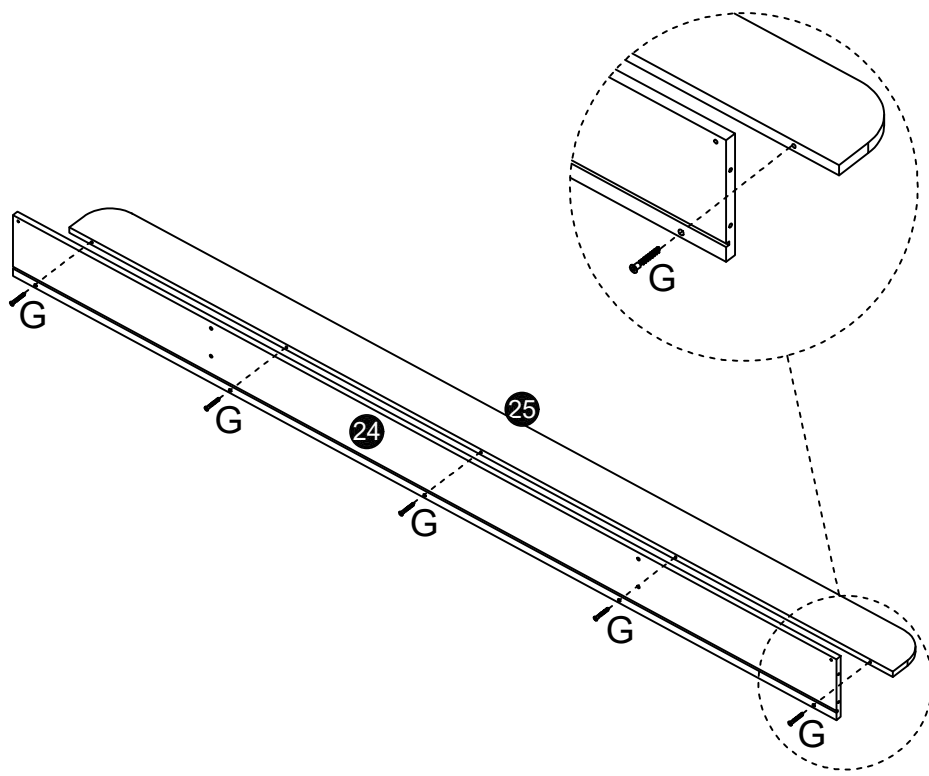


- G ST5*35 x5
- L S3 x1

Assembly Instruction

23

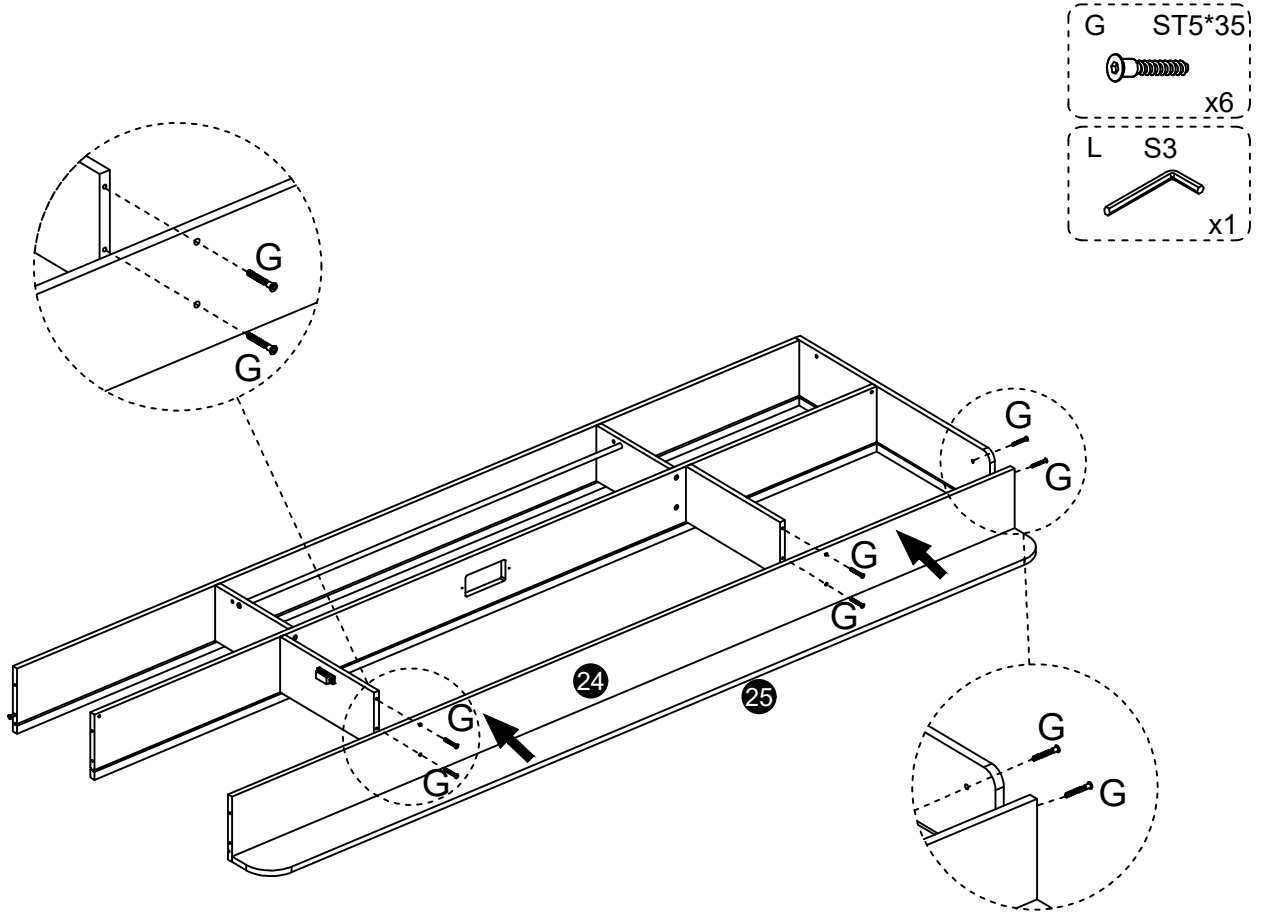


24

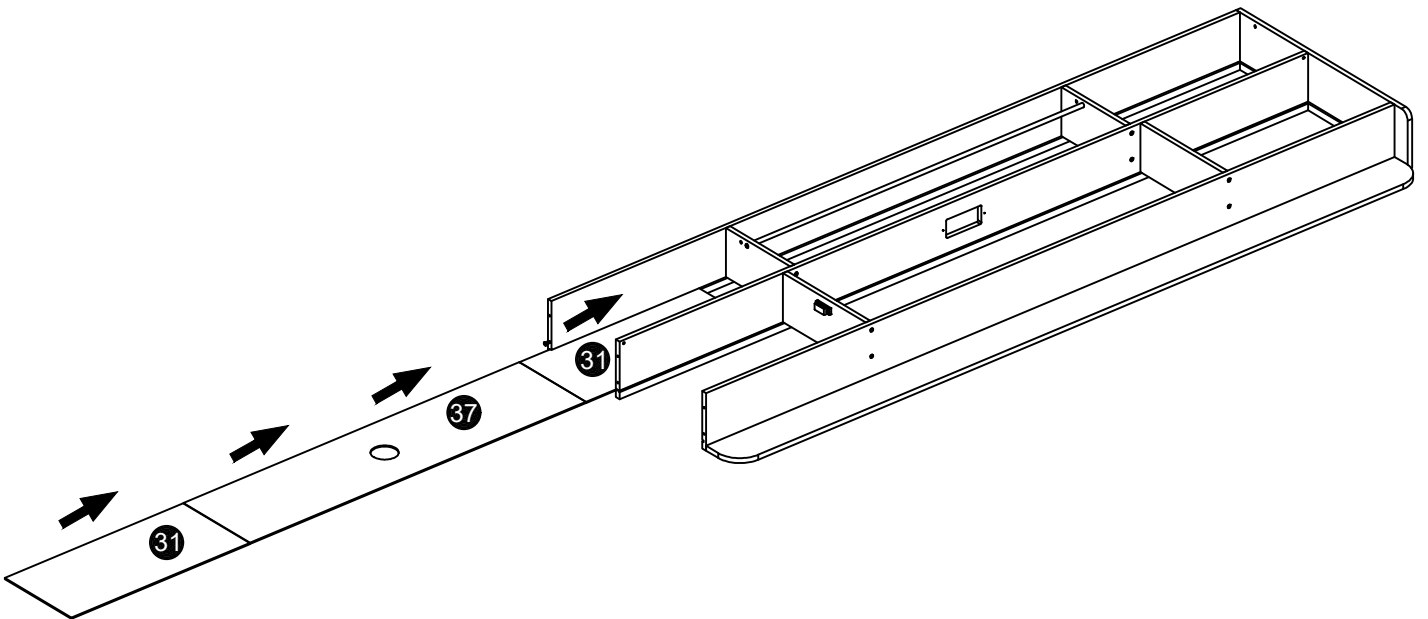


Assembly Instruction

25



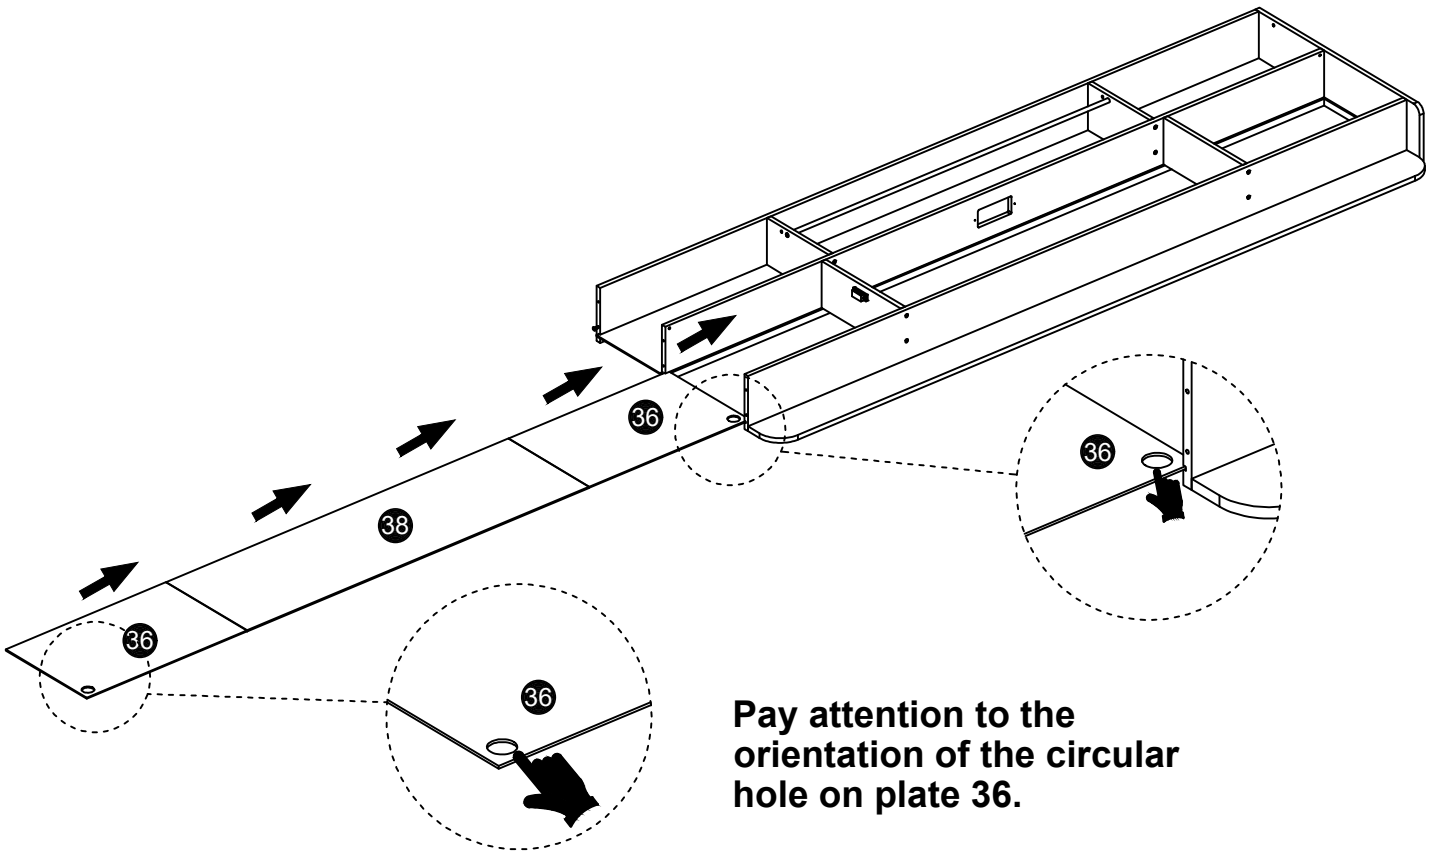


26






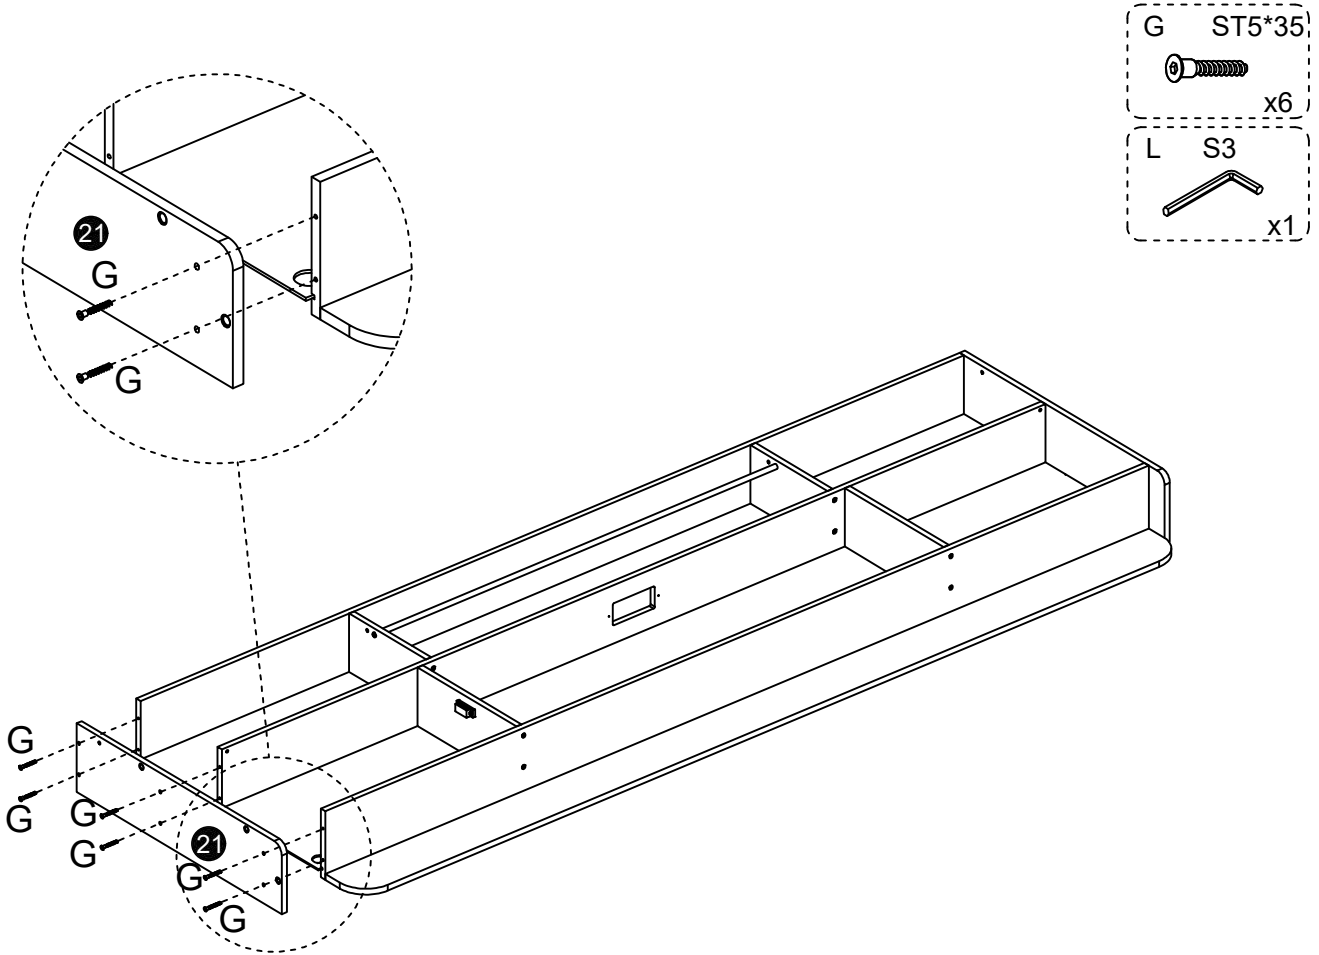


Assembly Instruction

27

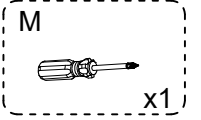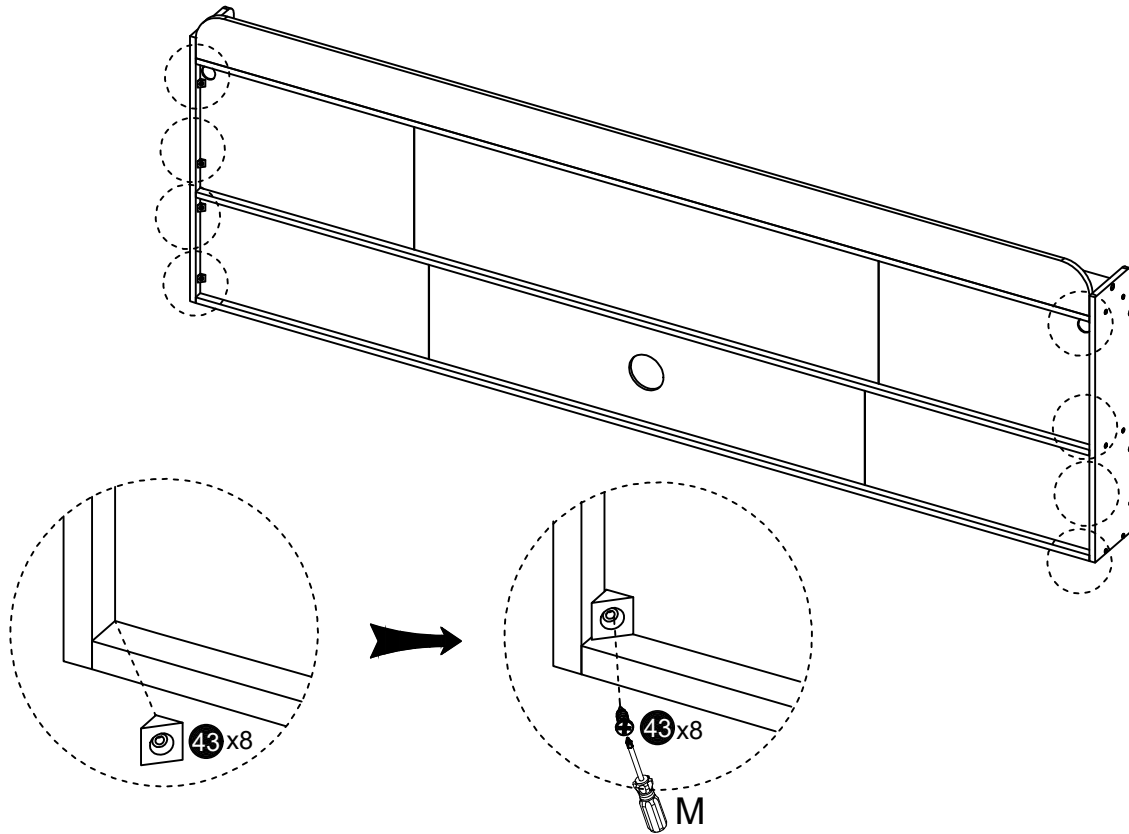



28

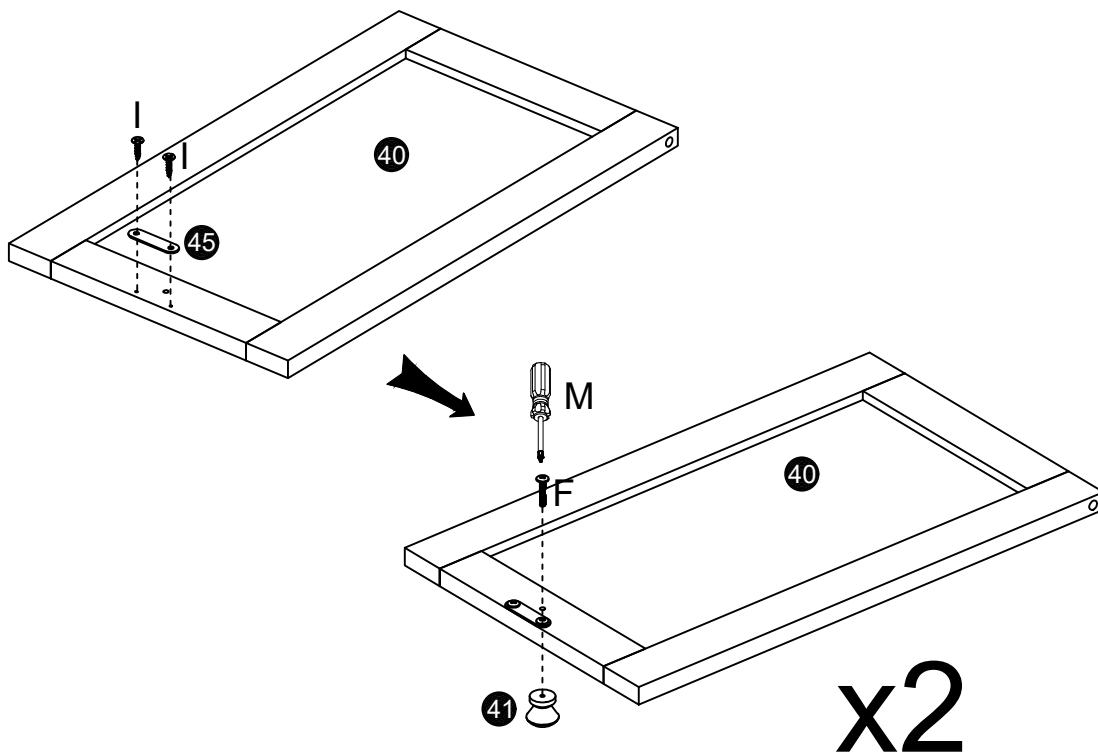


x2

Assembly Instruction

29

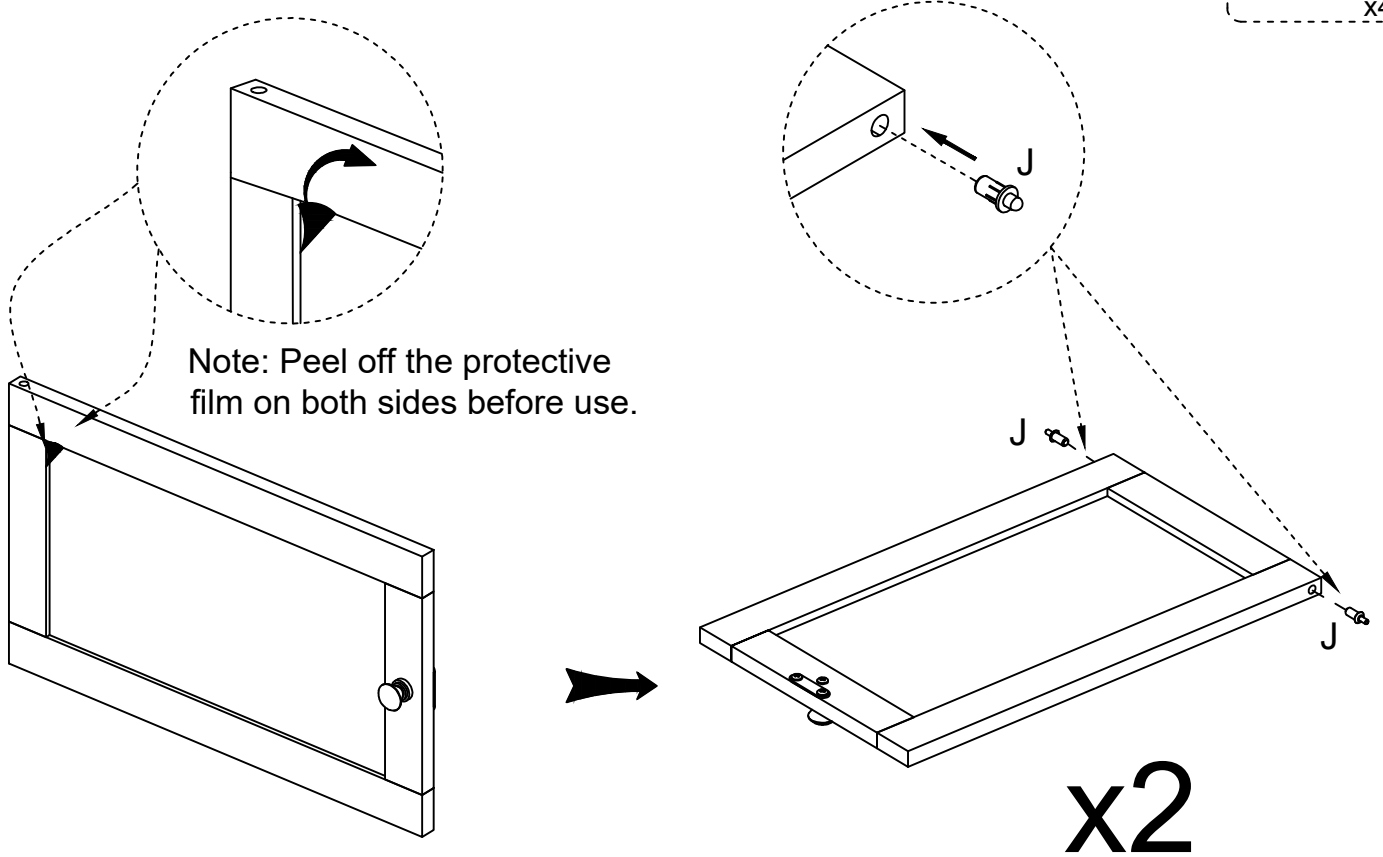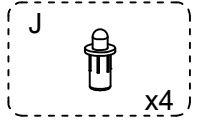



30

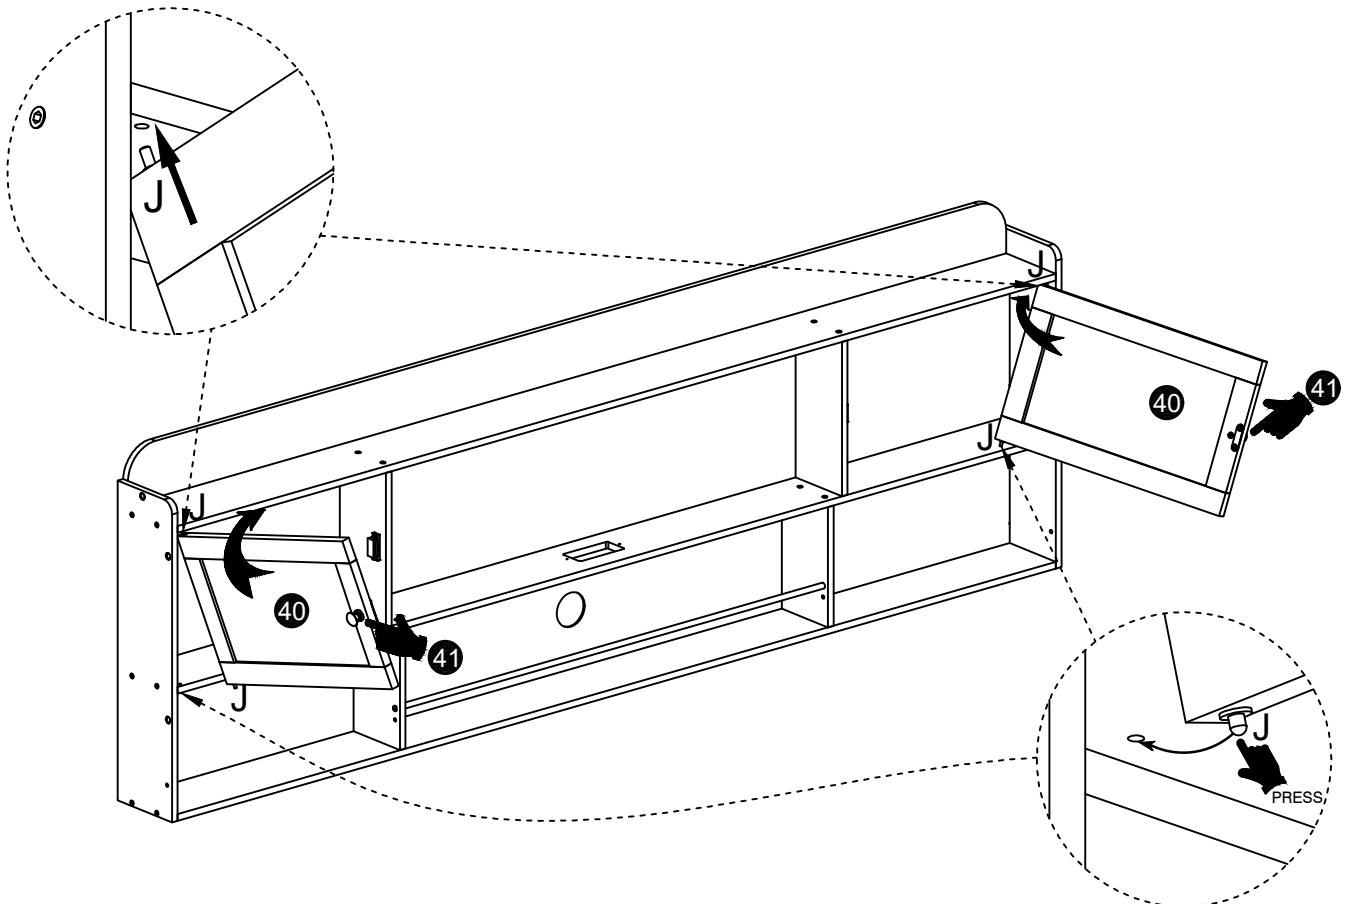

Assembly Instruction



31

NO.1 Open accessory(47)
NO.2 Place them separately on
the front and back of the(37)
hole and oress them tightly

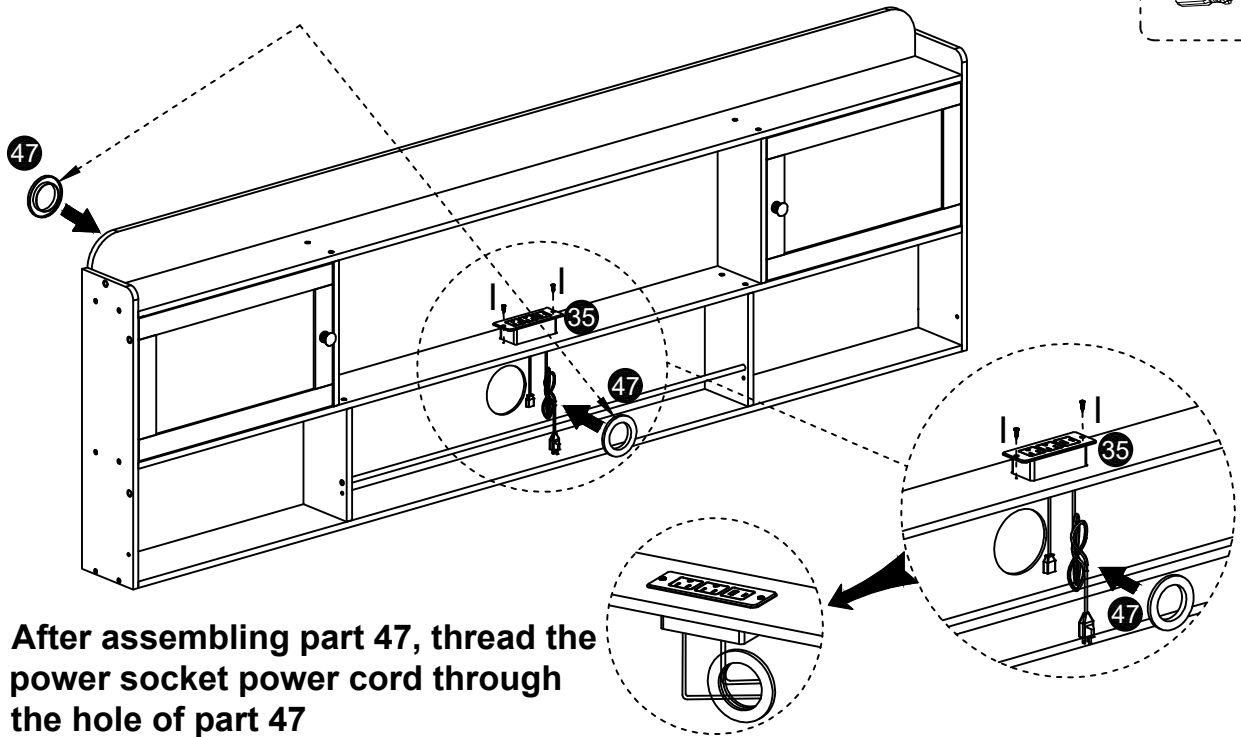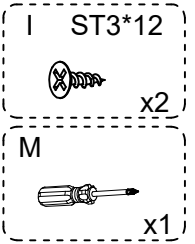

After assembling part 47, thread the
power socket power cord
through
the hole of part 47

32

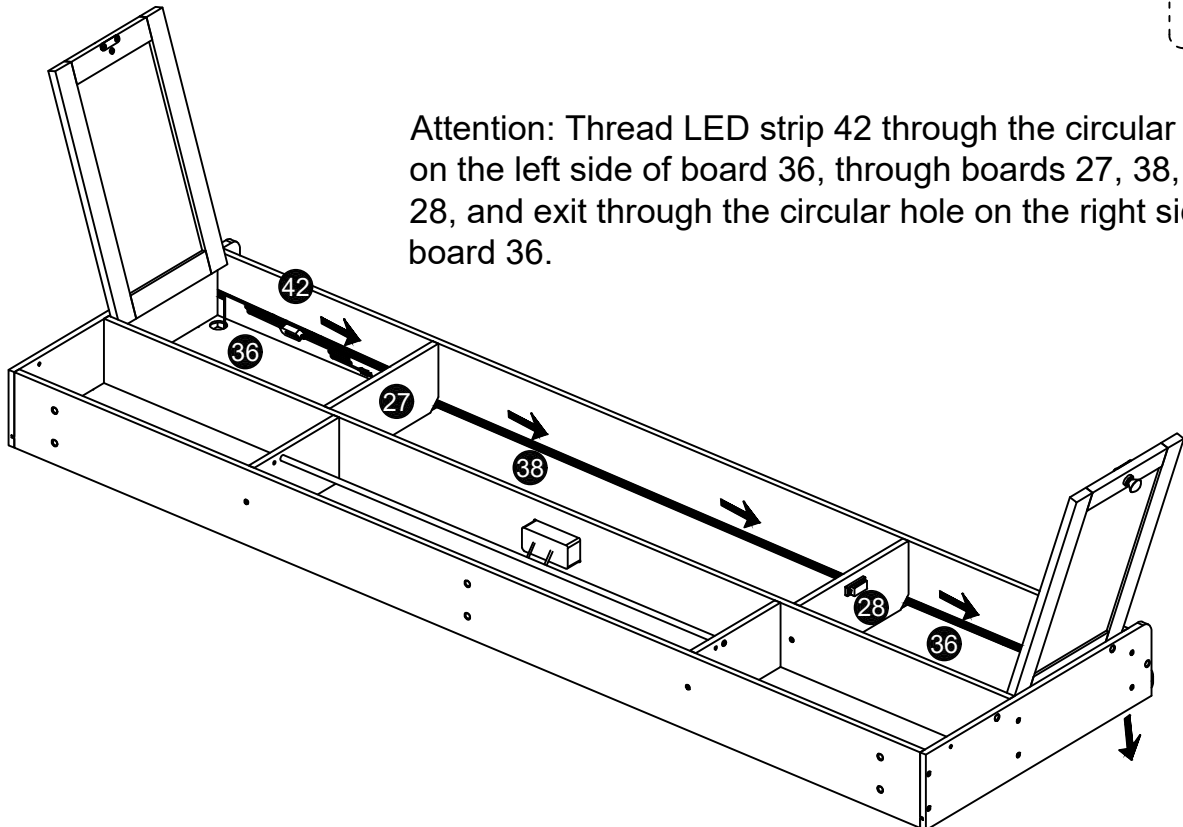


Attention: Thread LED strip 42 through the circular hole
on the left side of board 36, through boards 27, 38, and
28, and exit through the circular hole on the right side of
board 36.


Assembly Instruction

33

Loosen C screws on both sides by 50%.


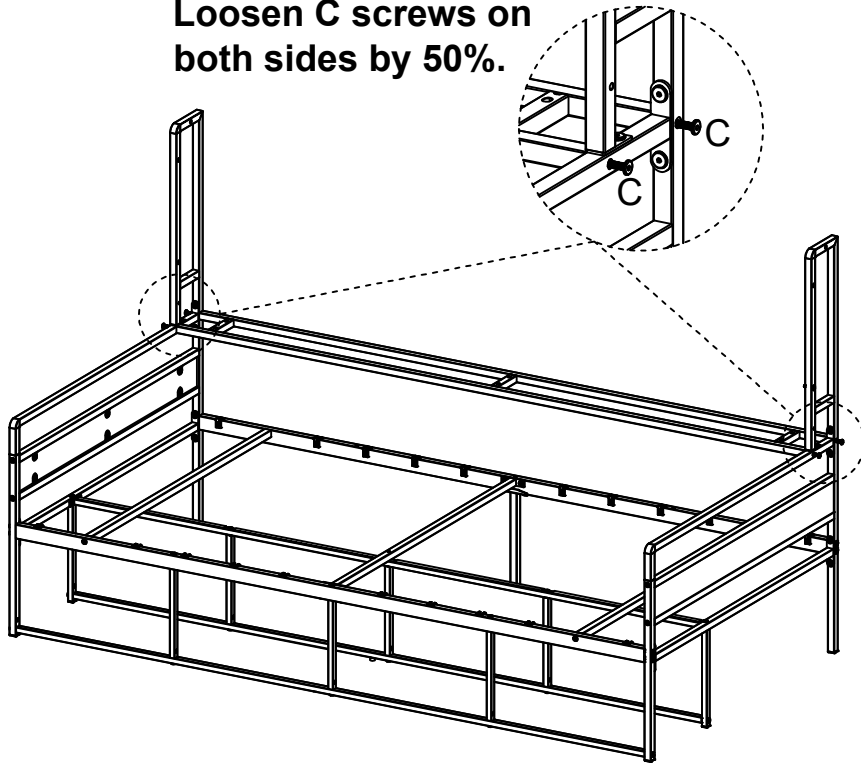


34

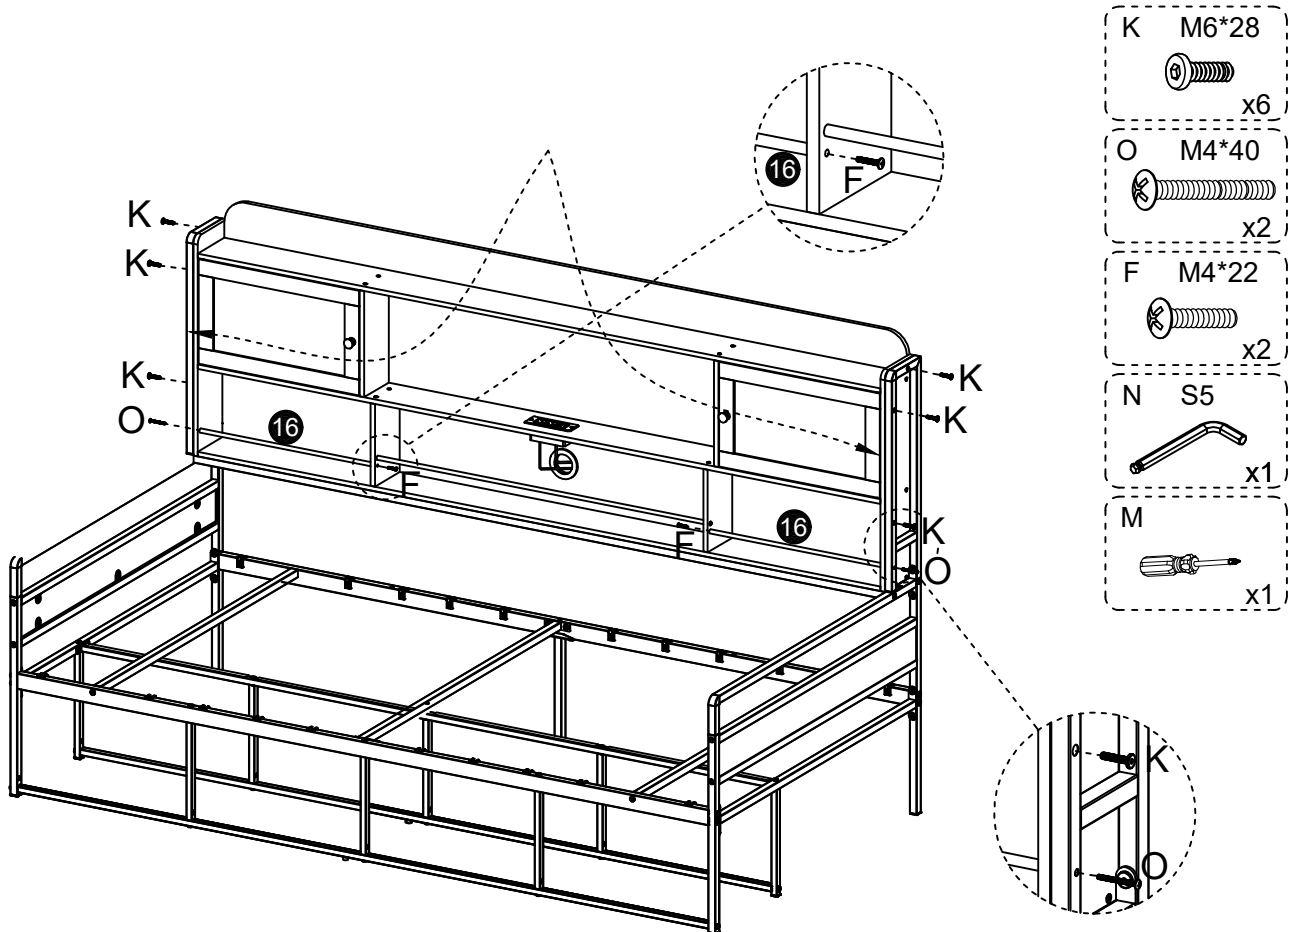


Assembly Instruction


35

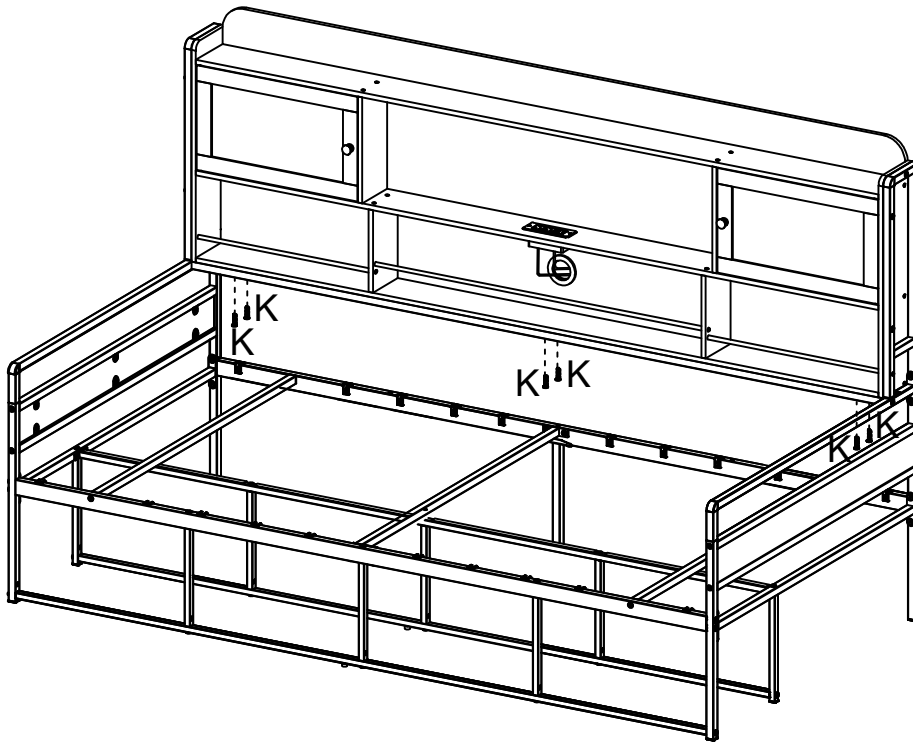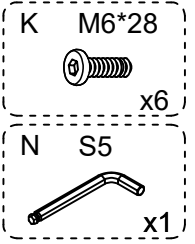

36

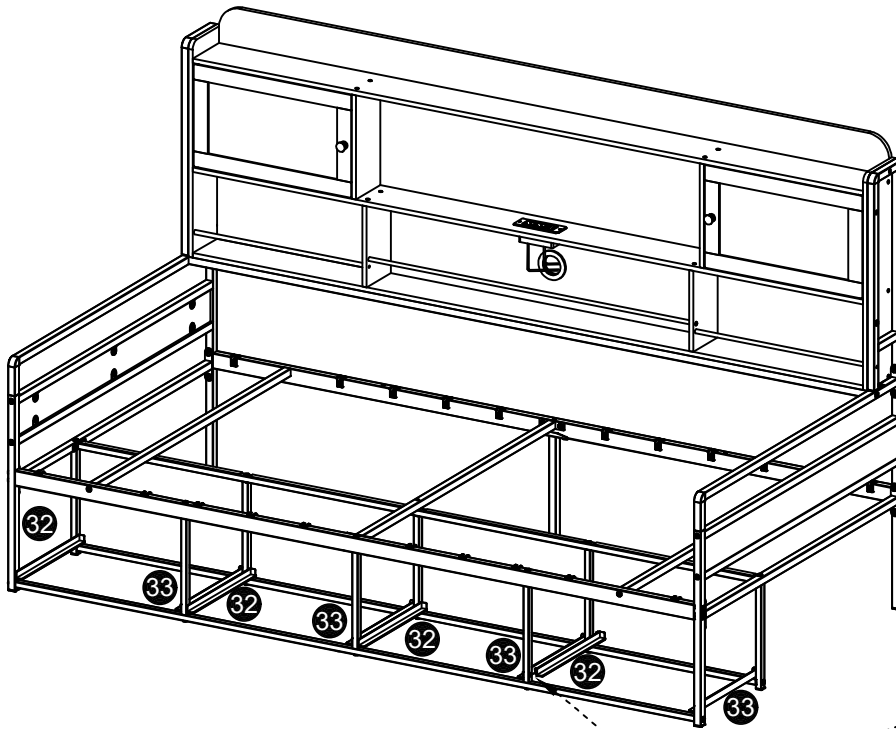


First, insert the left and right guide rails diagonally, then insert them and press down

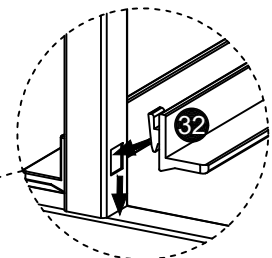

Assembly Instruction


37

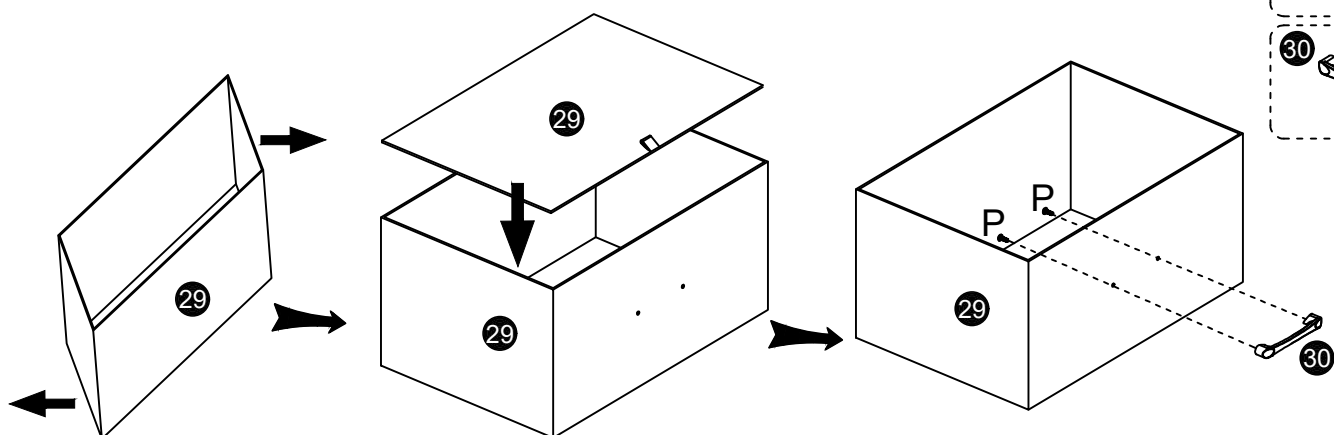

- P M4*12 x8
- M x1
- 30 x4



x4

38

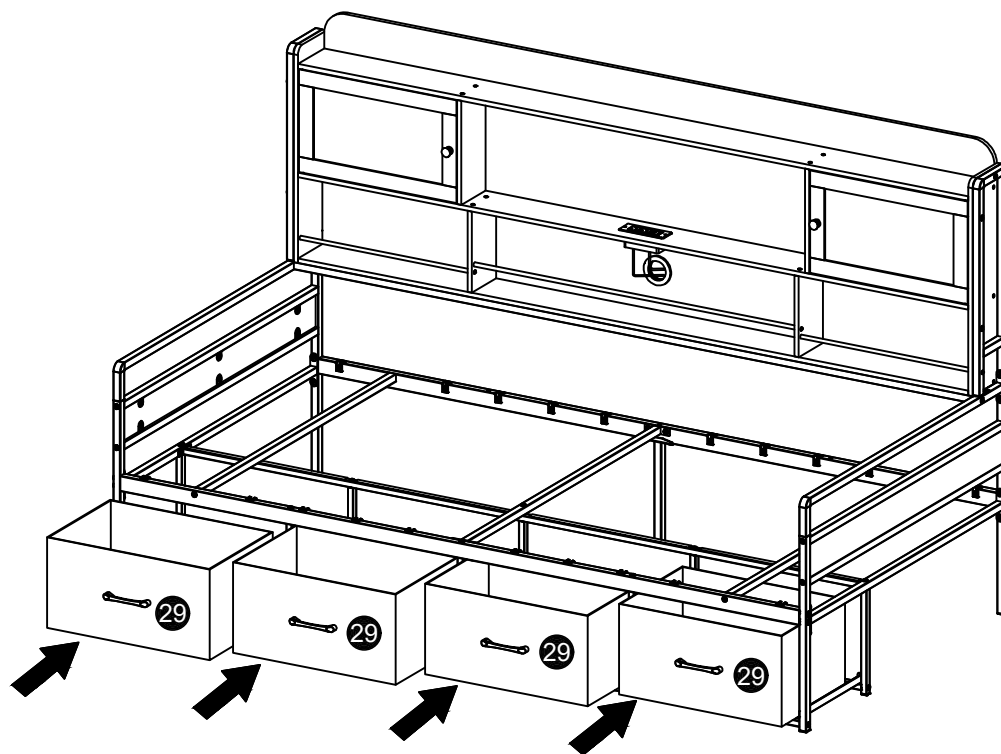


Assembly Instruction

39

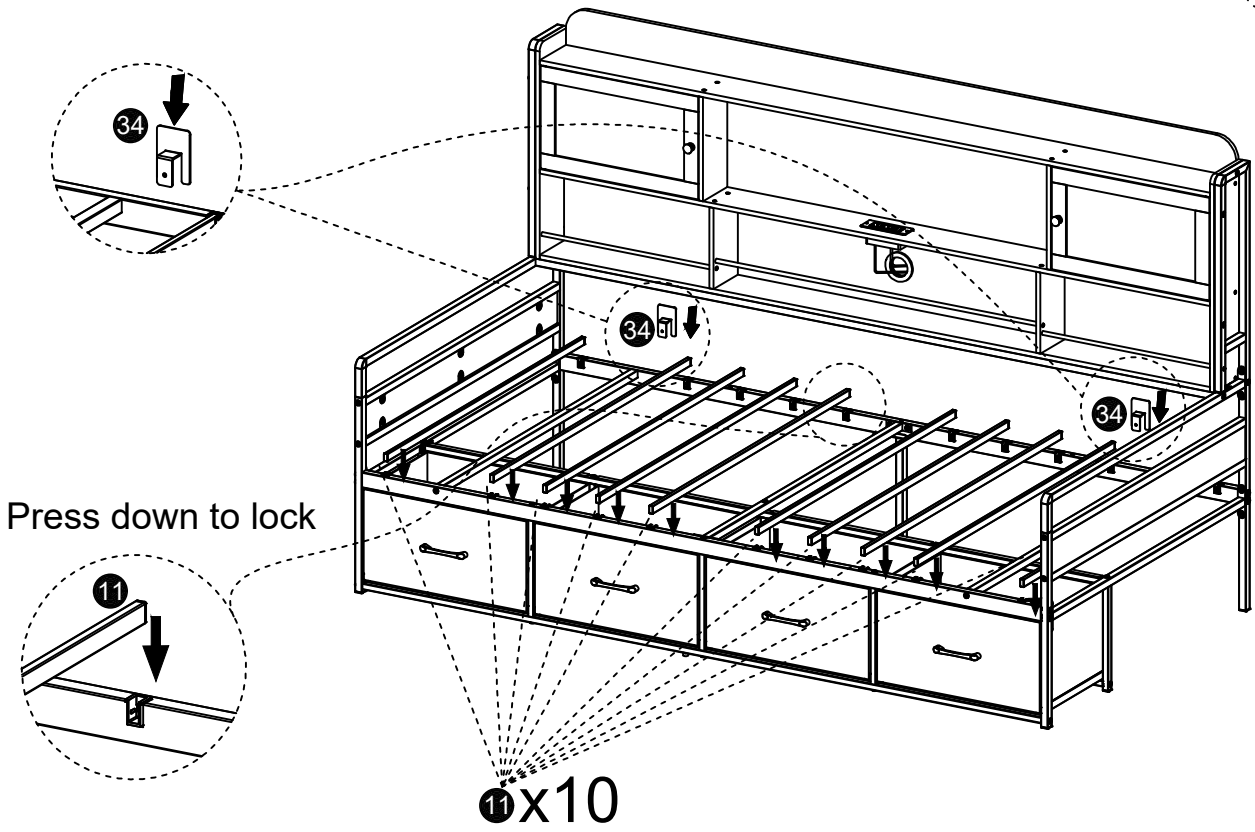

40

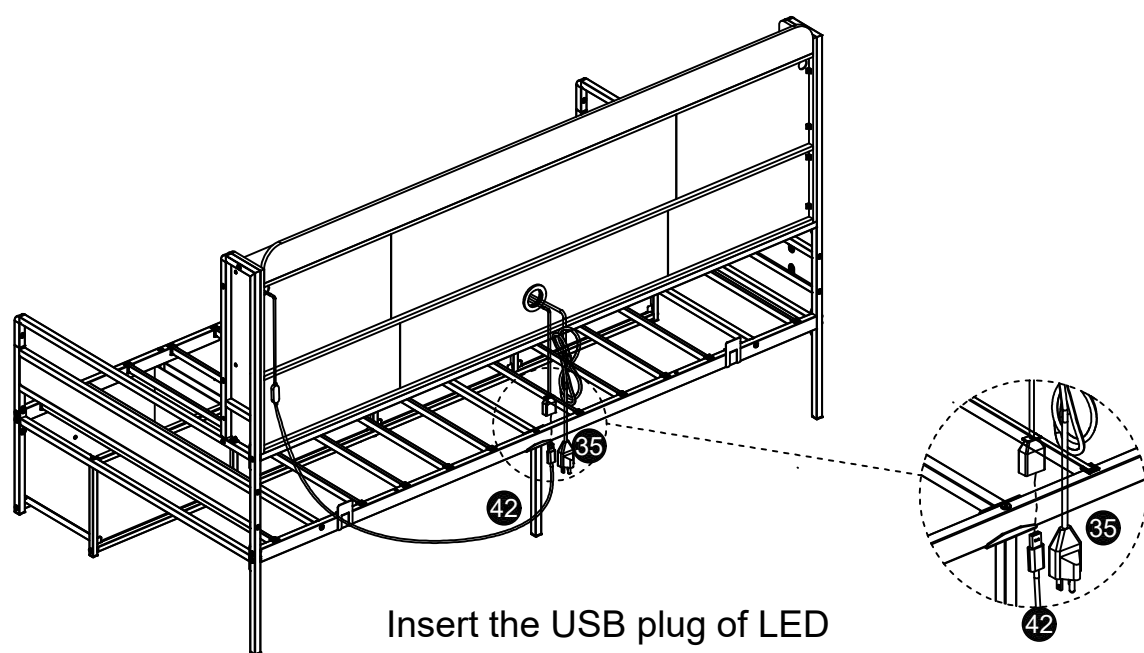

Insert the USB plug of LED light 42 into the expansion port of socket 35