



PACKING LIST


A Main Vanity
1 PC

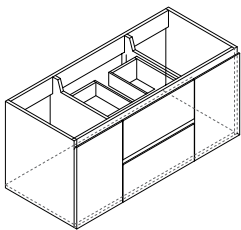


B Top And Basin
1 PC

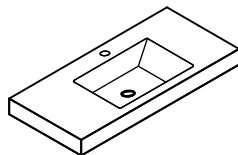


C Wood Cleat
1 PC

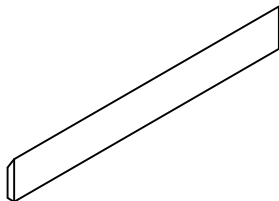

C1 Screw For Wood Cleat
3 PCS

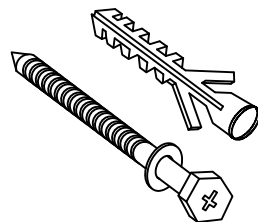


D Metal Bracket
2 PCS

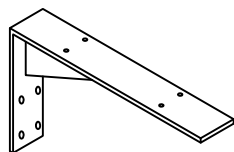

D1 Screw For Metal Bracket
8 PCS



D2 Screw For Metal Bracket
8 PCS

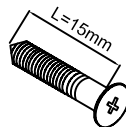

TOOLS REQUIRED

Drill Bits




Ø3/8" (8mm)dia.
HSS

Screw Driver




Drill



Level



Knife

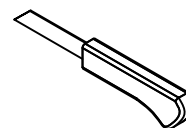

Glove




MASONRY DRILL BIT FOR
TILE Ø3/8" (8mm)



Safety Glasses



Silicone



Measuring Tape



Soft Head
Hammer



Pencil




- Use a wood stud finder to locate the wood studs behind the walls.
- Use a pencil to mark the installation location for the **Wood Cleat (B)**.
- Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.


NOTE

Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because


STEP 1

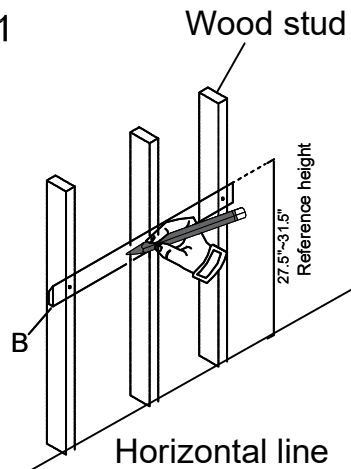

STEP 2

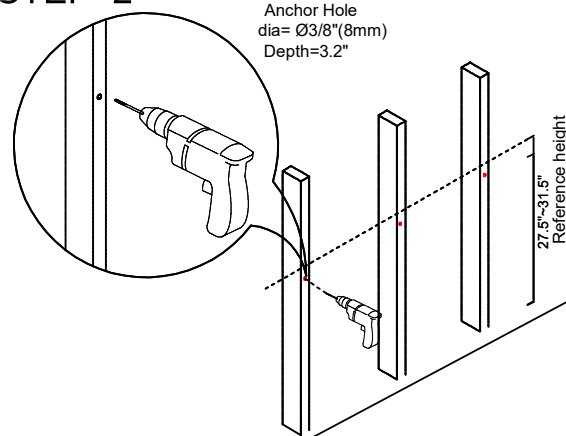

STEP 3

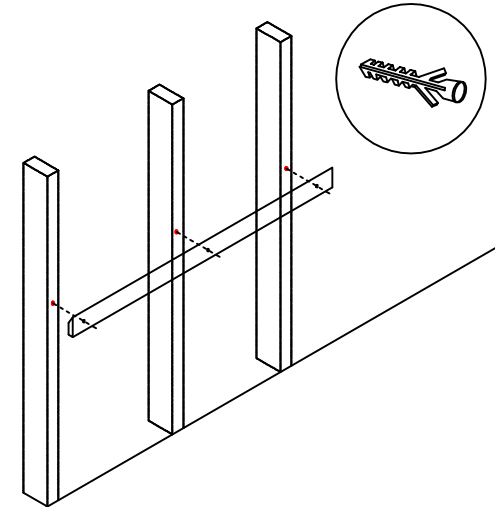


C1 x3




C1 x3



STEP 4

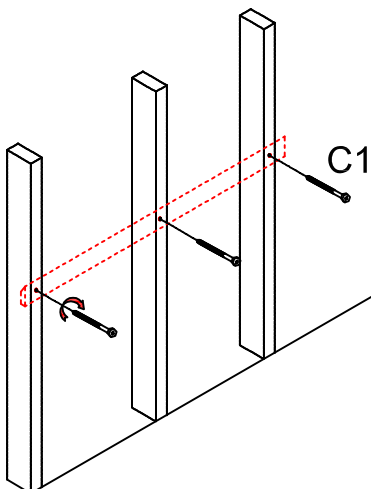


STEP 5

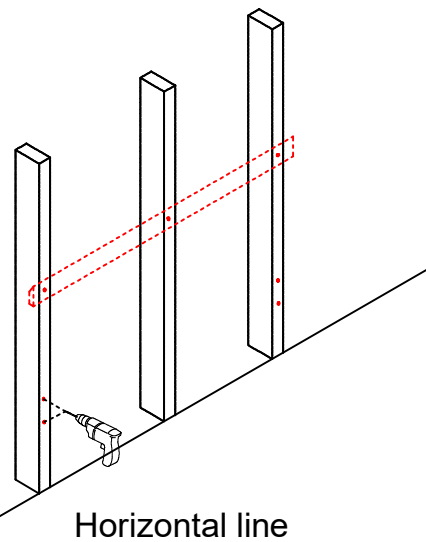

C X1



STEP 6

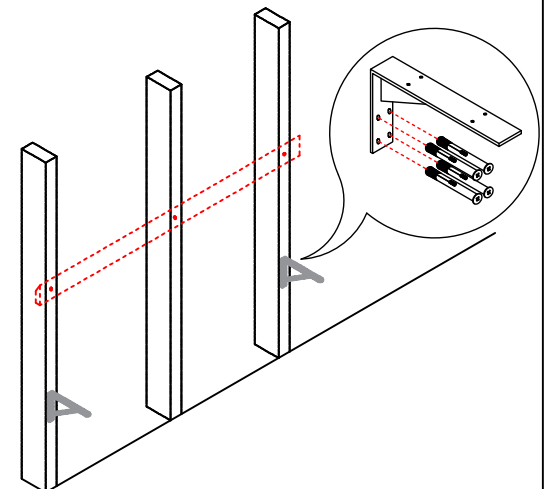


D X2





D1 X8




STEP 7

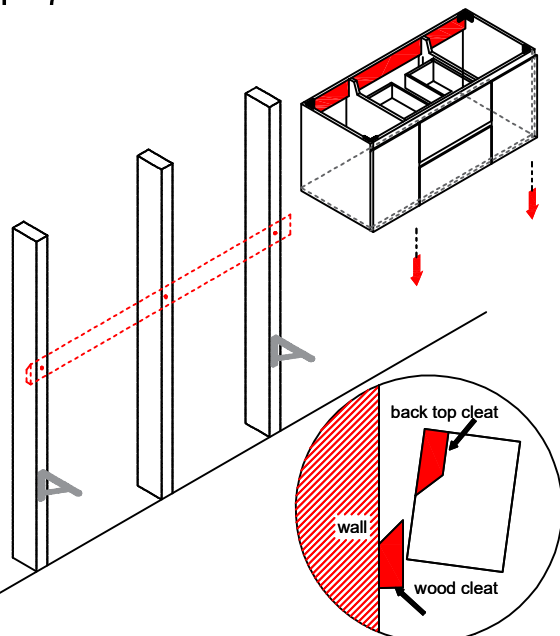


STEP 8

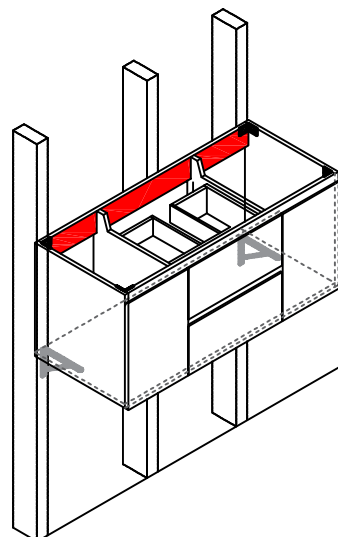


STEP 9

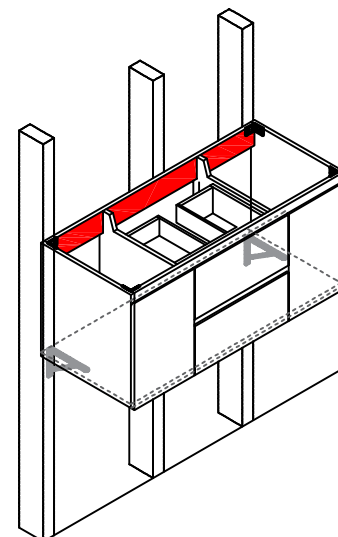


STEP 10

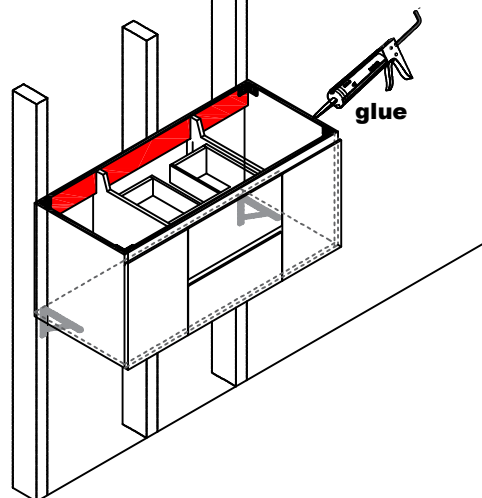

STEP 11

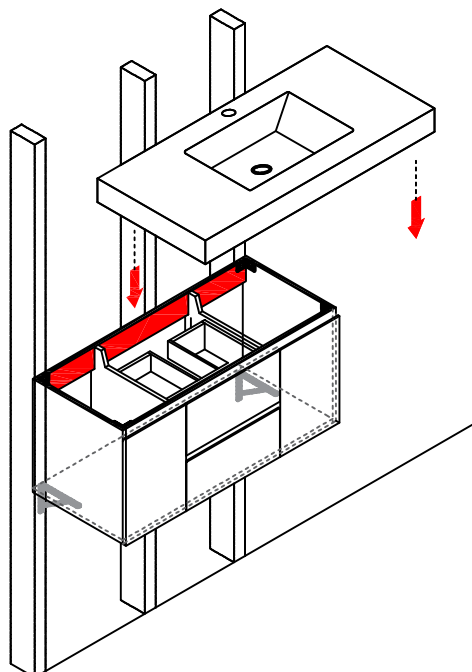

STEP 12

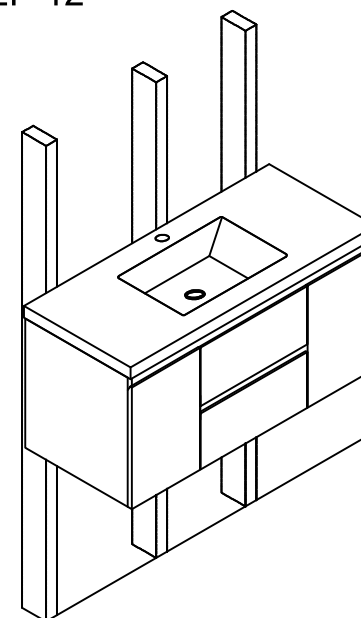

 **24H!**
Dry Time

Clean glue