


Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

	• Not for commercial use. For residential use only.
	• Do not put hot items directly on furniture surface.
	• Do not clean furniture with harsh cleansers or polish.
	• Do not place furniture under direct sunlight.
	• Do not place furniture near heating or cooling vents.
	• Do not write on furniture without a padded barrier to protect the surface.
	• Do not place furniture outside . For indoor use only.
	• Stains may be removed with mild soap solution and damp cloth.
	• Children should not climb or jump on the furniture.
	• Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Wooden Bed - Queen Size

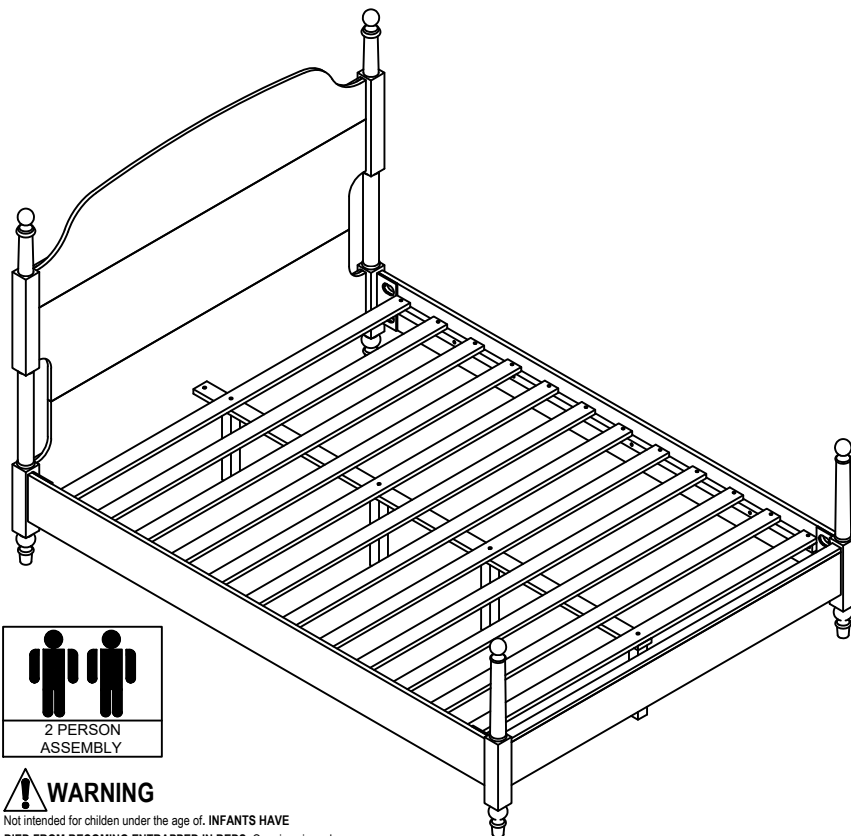

REQUIRED
ASSEMBLY TOOLS



NO POWER
TOOLS NEEDED

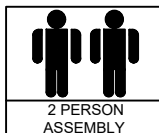

2 PERSON
ASSEMBLY

WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.

NEVER suspend strings over bed.

NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts. ALWAYS follow assembly instructions.

WARNING

Not intended for children under the age of. INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The Mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.




Note: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.






The BED is HEAVY.

To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.





Part List (N736P464071)

LABEL	PICTURE	DESCRIPTION	QTY
①		PANO HEADBOARD 1	1
②		PANO HEADBOARD 2	1
③		PANO HEADBOARD 3	1
⑩		SUPPORT HEADBOARD	2
⑧		FRAME FOOTBOARD	1
⑭		LEGS SUPPORT	4

Part List (N736P464072)

LABEL	PICTURE	DESCRIPTION	QTY
④		LEG HEADBOARD (LEFT)	1
⑤		LEG HEADBOARD (RIGHT)	1
⑦		LEG FOOTBOARD (LEFT)	1
⑥		LEG FOOTBOARD (RIGHT)	1
⑨		SIDE FRAME	2
⑪		SUPPORT SLATS	1
⑬		SLATS 1	4
⑫		SLATS 2	8

Hardware (N736P464071)

LABEL	PICTURE	DESCRIPTION	QTY
(A)		FULL-THREAD BOLT (M8x70mm)	24+1
(B)		BOLT (1/4x25mm)	20+1
(C)		BOLT (1/4x55mm)	5+1
(D)		WOODEN DOWEL (Ø8x30mm)	18+1
(E)		FLAT HEAD SCREW (Ø4x30mm)	24+1
(F)		ARC WASHER (M8x28mm)	24+1
(G)		NUT (M8x10mm)	24+1
(H)		BARREL NUT (1/4"x12x9.5mm)	1+1
(I)		ALLEN KEY (4MM)	1+1
(J)		WRENCH	1+1
(K)		SCREWDRIVER (NO PROVIDED)	1


IMPORTANT ! KEEP FOR FUTURE REFERENCE : READ CAREFULLY

- To be assembled by an adult. Assembly must be checked by an adult before use
- WARNING ! Keep all screws, small parts and plastic bags out of the reach of children
- Properly identify all parts before assembling
- Never use your item if any of its parts are broken or missing
- Should any problems arise, please contact our After Sales Service
- Manufacturer's instructions shall be followed at all times
- Care: Clean with a soft, dry cloth. In case of larger stains, carefully rub with a slightly damp, non-abrasive sponge
- Avoid the risk of fire by not placing furniture near sources of ignition or hot items



Assembly Preparation

Before Beginning Assembly:

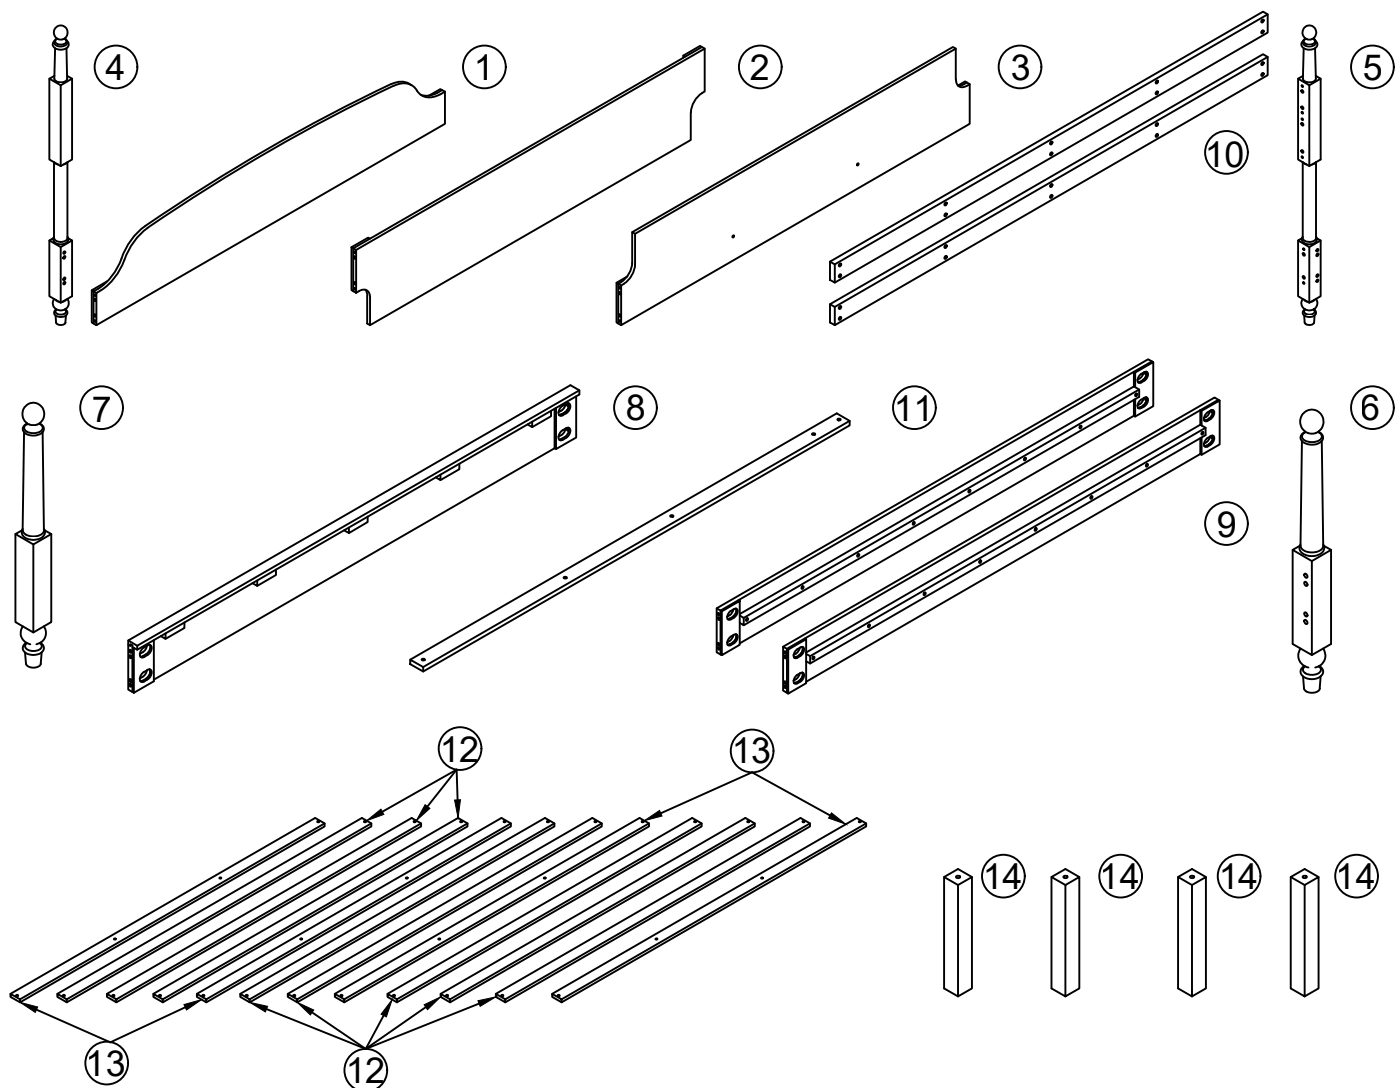

A		24+1
B		20+1
C		5+1
D		18+1
E		24+1

F		24+1
G		24+1
H		2+1
I		1+1
J		1+1



- Read instruction, cover to cover.



- Have 2 adults on hand for assembly.



- Do not assemble on flooring or carpet.




- Assemble on a clean non-marring surface (packing foam).



- Save all packaging until finished.


Assembly Steps

Overview

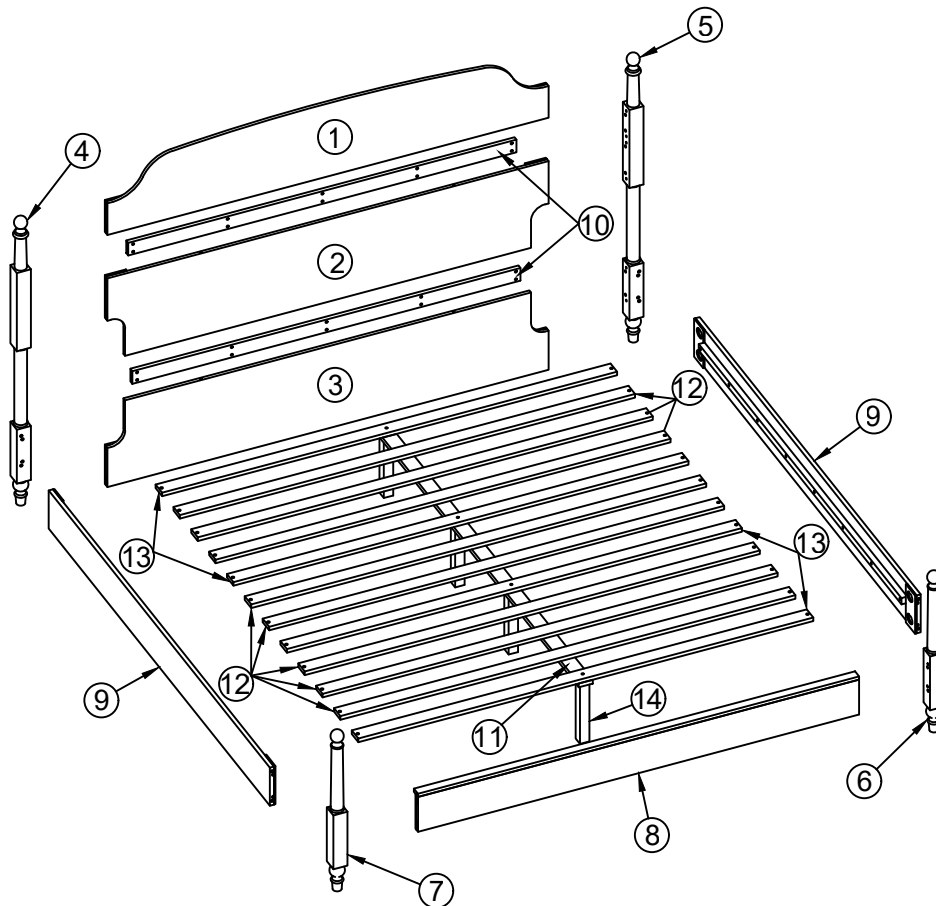

This Bed has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


STEP 1:

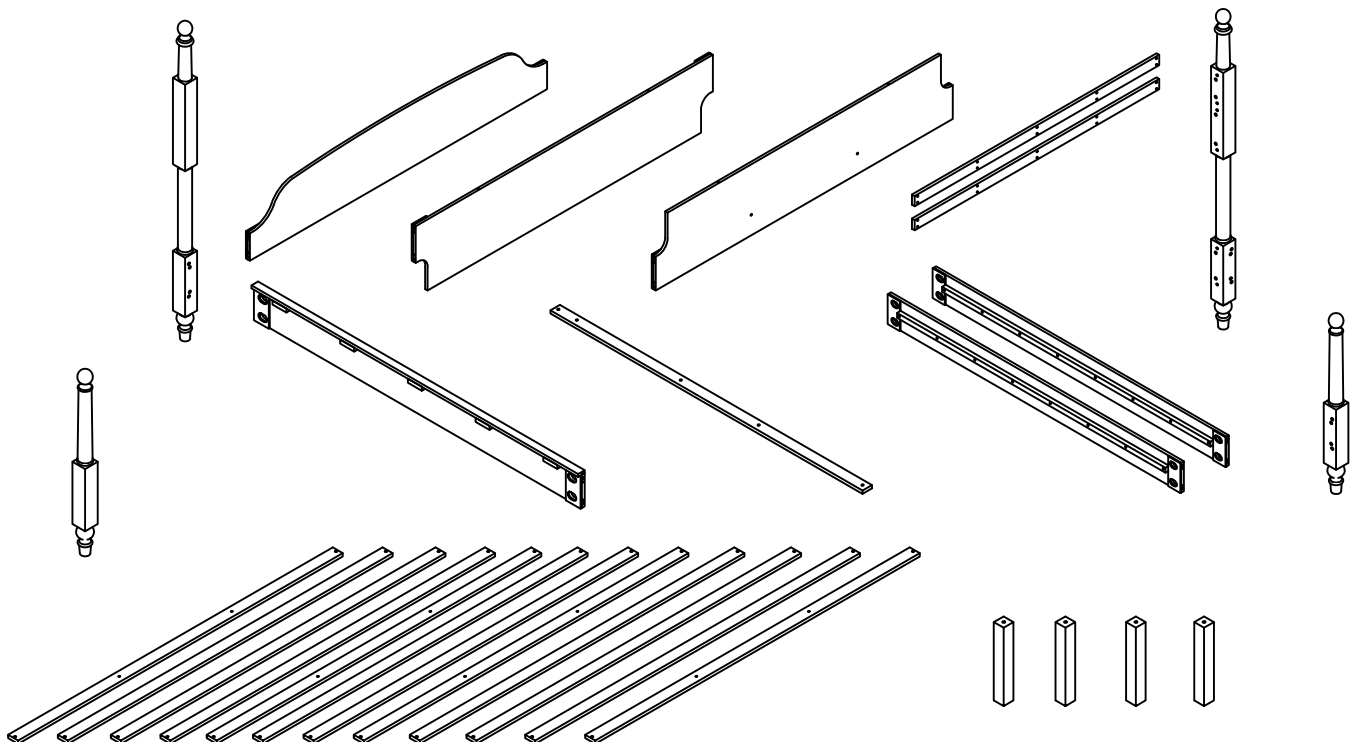

Unpack and place all part on a clean, non-marring surface.

STEP 2:



(A)	(B)	(D)	(I)
			
12PC	20PC	6PC	1PC

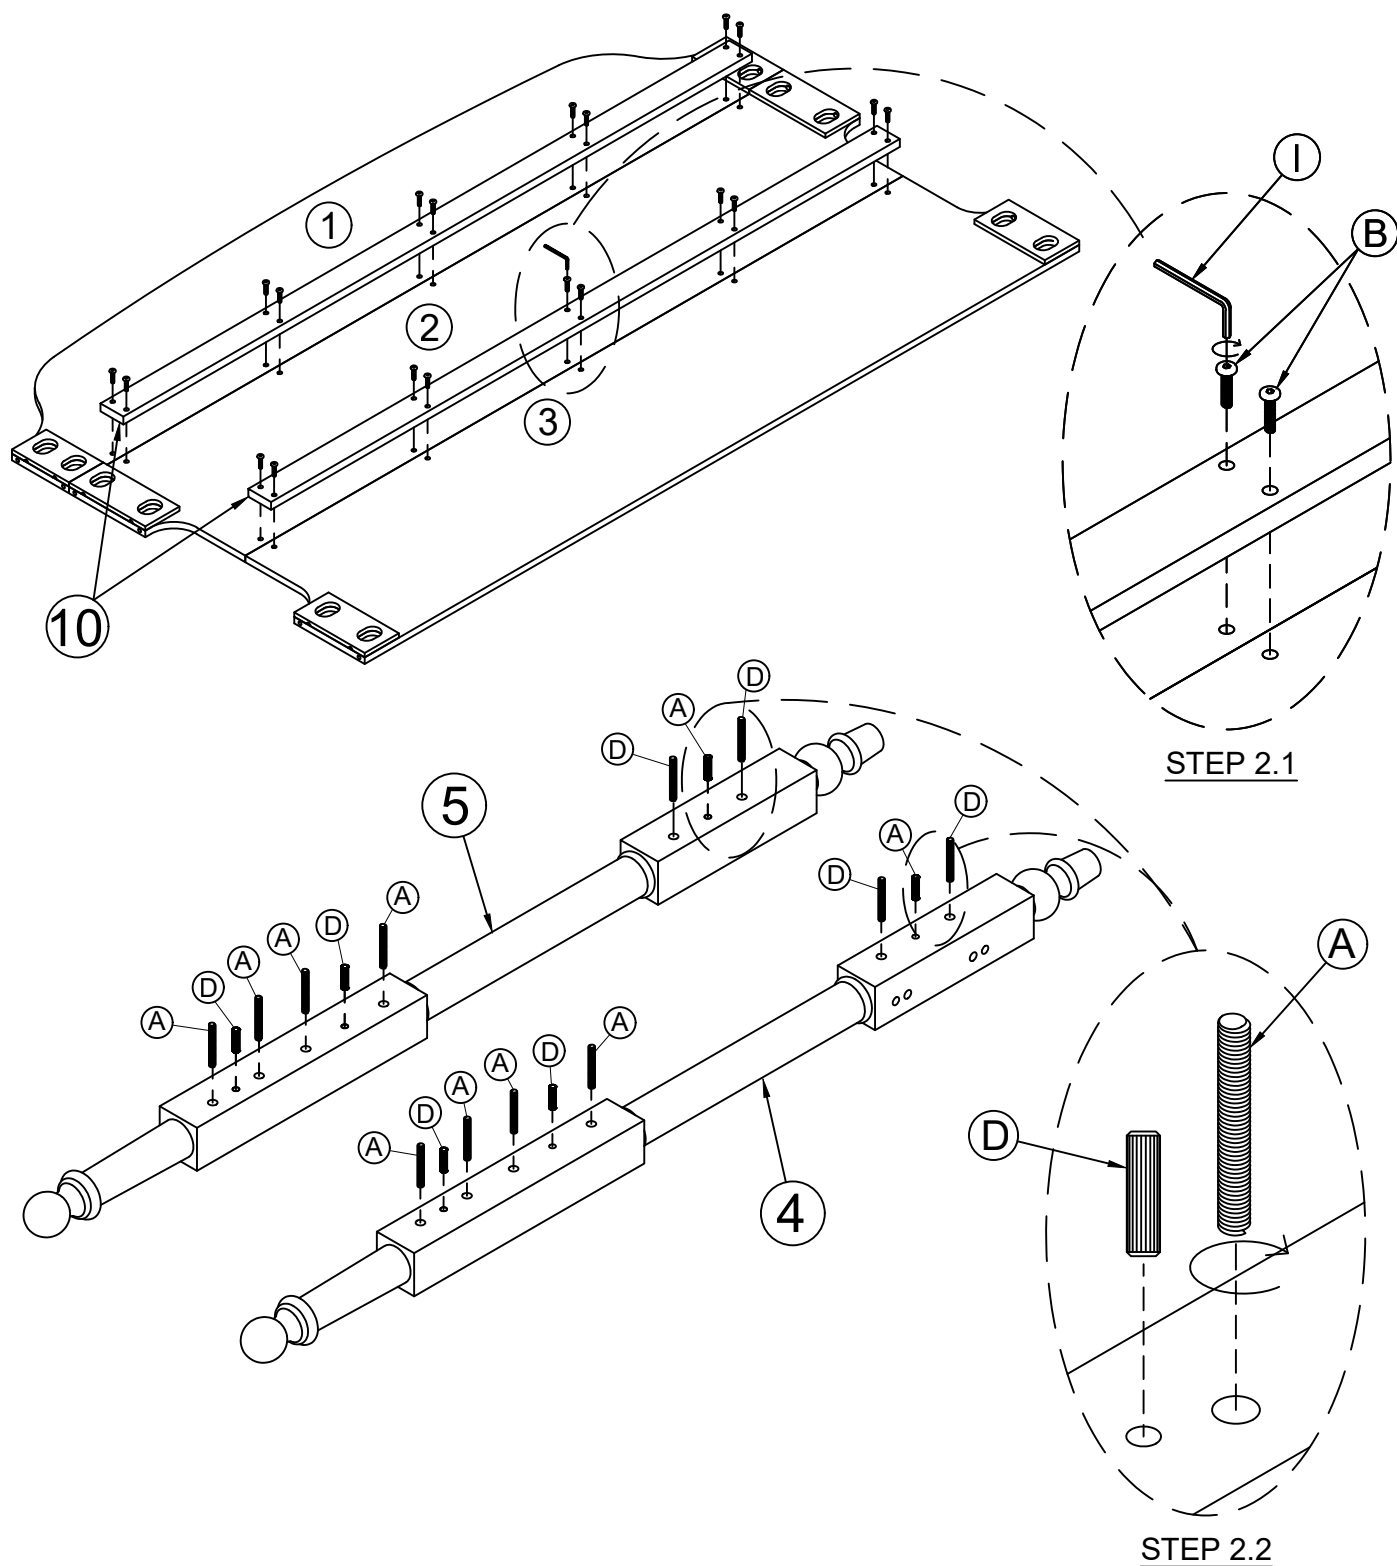


2.1: Attach the headboard support (10) to headboard panel (1) (2) (3) by using bolts (B) with allen key (I) . As shown above.

2.2: Attach wooden dowel (D) and full-thread bolt (A) to leg headboard (left) (4) and leg headboard (right) (5) . As shown above.

STEP 3:


(A)	(D)	(F)	(G)	(J)
				
4PC	4PC	12PC	12PC	1PC

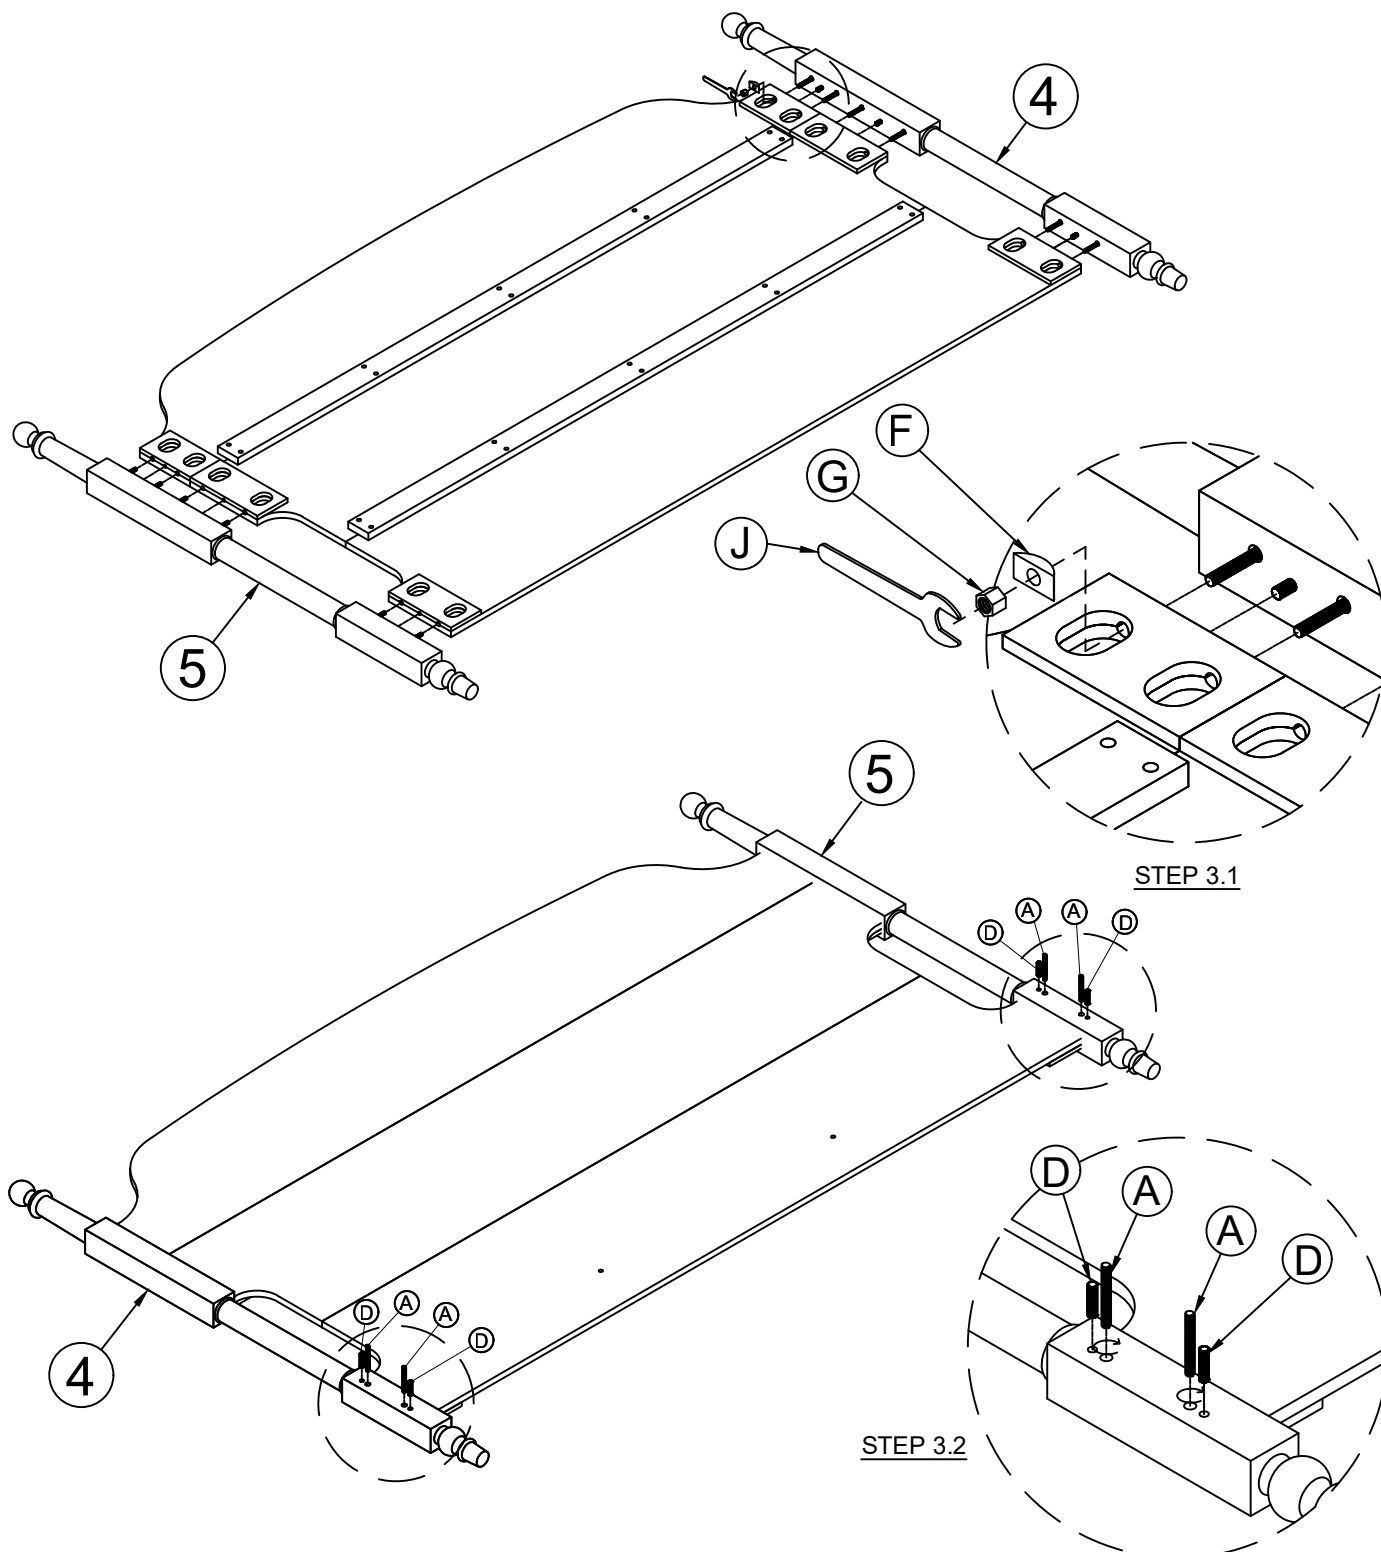


3.1: Attach step 2.1 to leg headboard (left) ④ and leg headboard (right) ⑤ by using arc washer (F) and nut (G) and wrench (J) . As shown above.

3.2: Attach wooden dowel (D) and full-thread bolt (A) to leg headboard (left) ④ and leg headboard (right) ⑤ . As shown above.

STEP 4:



(A) 	(D) 	(F) 	(G) 	(J) 
4PC	4PC	4PC	4PC	1PC

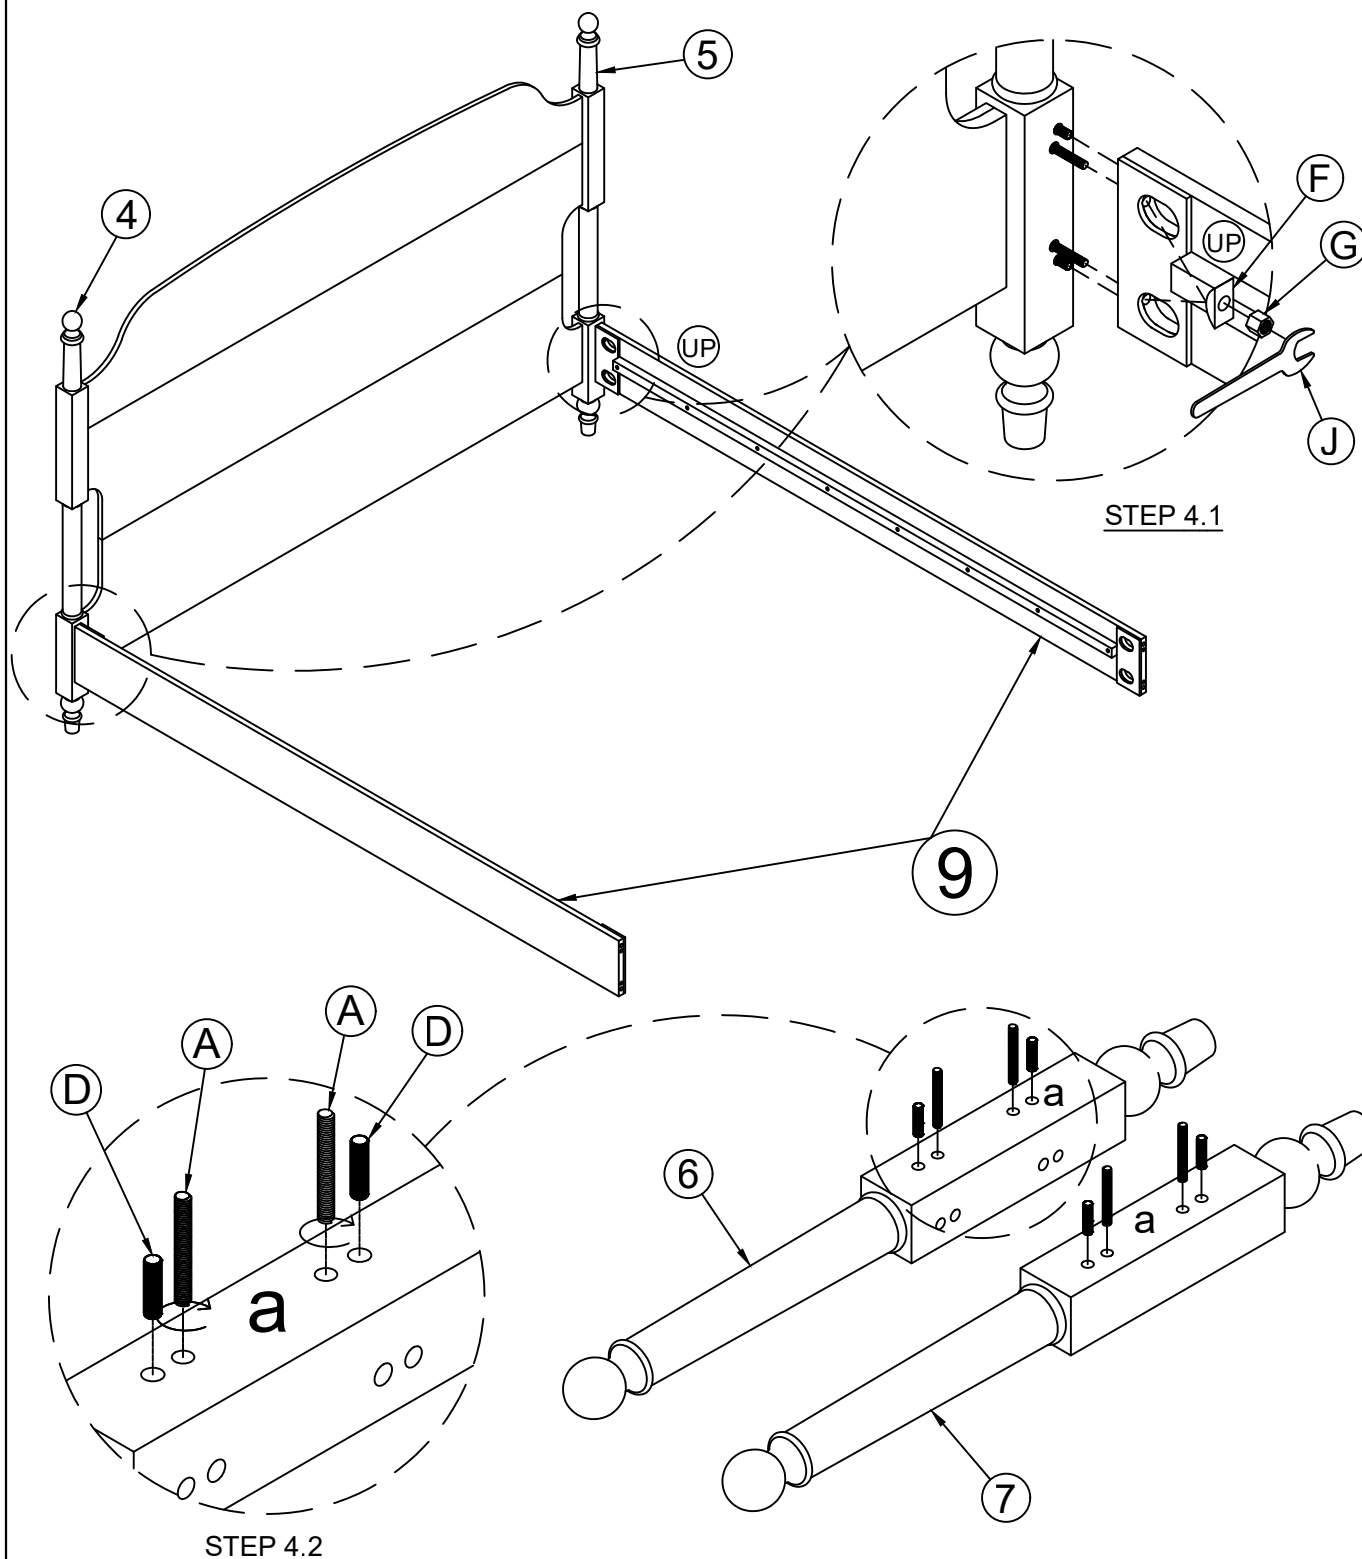


4.1: Attach side frame (9) in step 3.2 by using arc washer (F) and nut (G) and wrench (J) . As shown above.

4.2: Attach wooden dowel (D) and full-thread bolt (A) to leg footboard (left) (7) and leg footboard (right) (6) on side a . As shown above.

STEP 5:


(A)	(D)	(F)	(G)	(J)
				
4PC	4PC	4PC	4PC	1PC

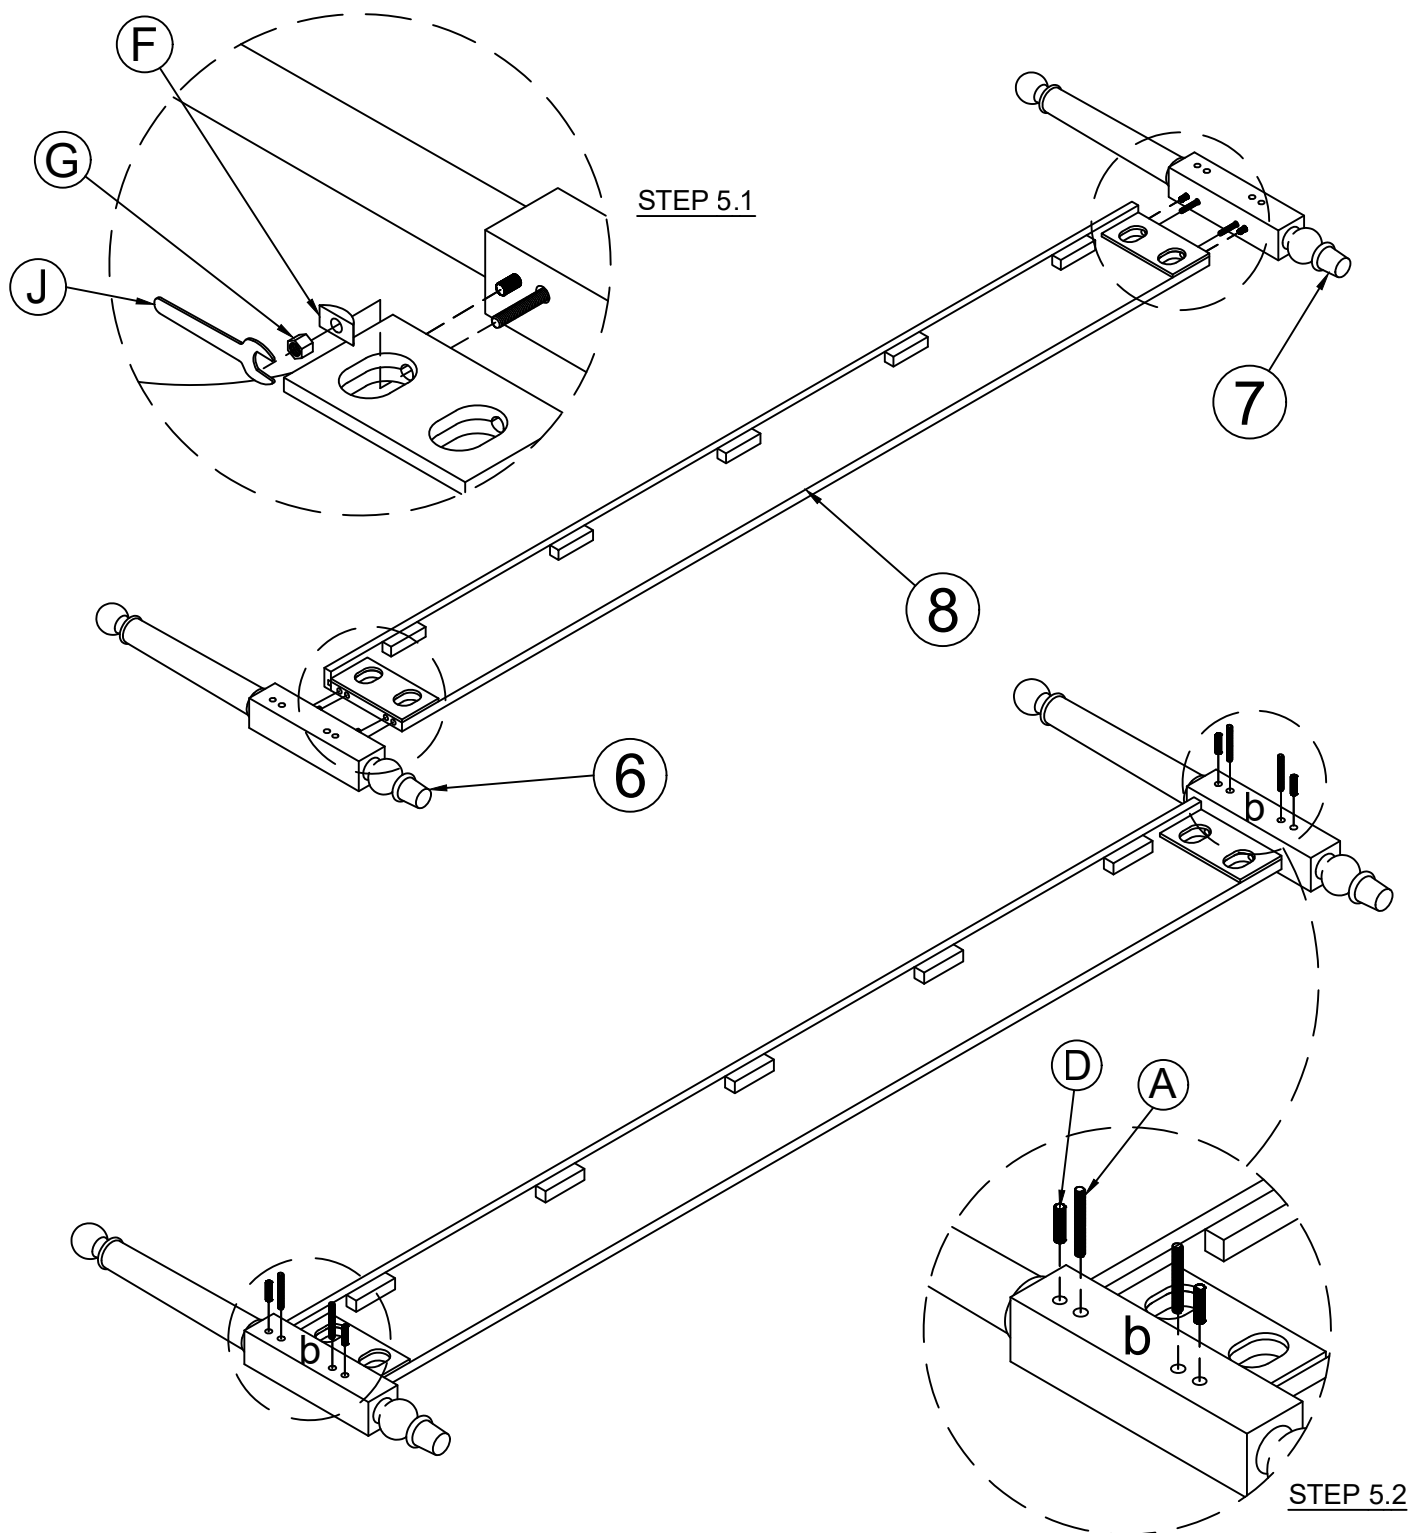


5.1: Attach frame footboard (8) to step 4.2 by using arc washer (F) and nut (G) and wrench (J). As shown above.

5.2: Attach wooden dowel (D) and full-thread bolt (A) to leg footboard (left) (7) and leg footboard (right) (6) on side b. As shown above.

STEP 6:



F 	G 	J 
4PC	4PC	1PC

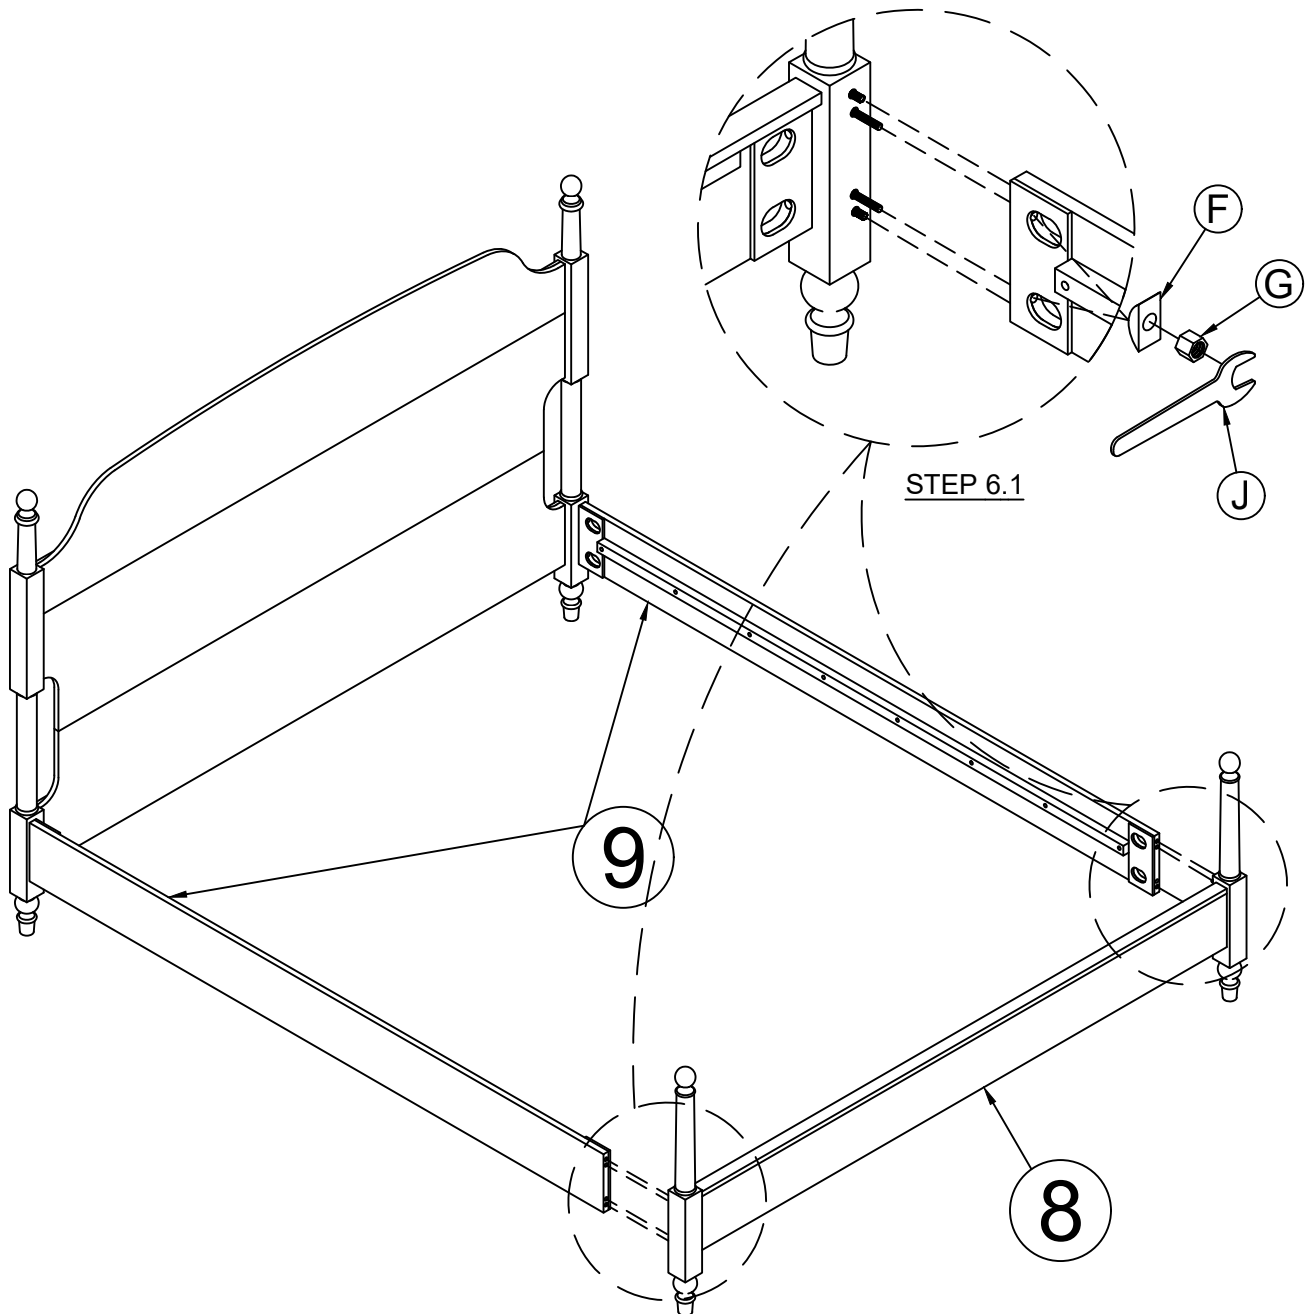

6.1: Attach step 5 to step 4 by using arc washer **F** and nut **G** and wrench **J**. As shown above.

STEP 7:


(C) 	(I)
4PC	1PC

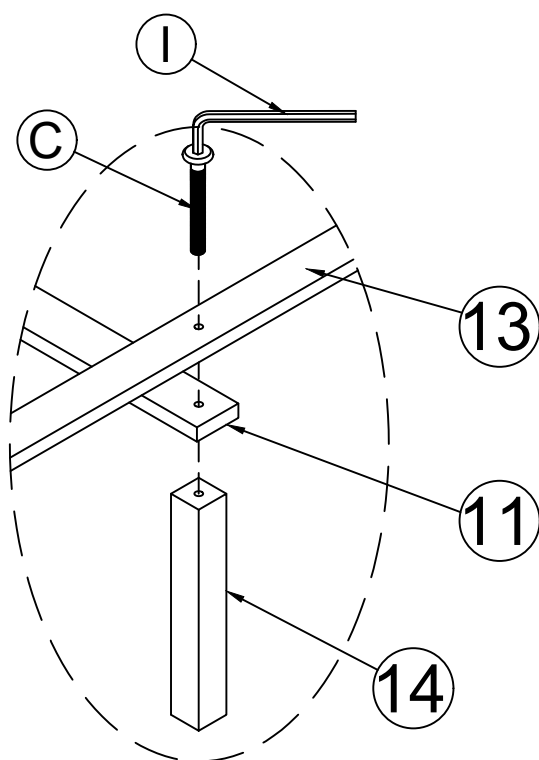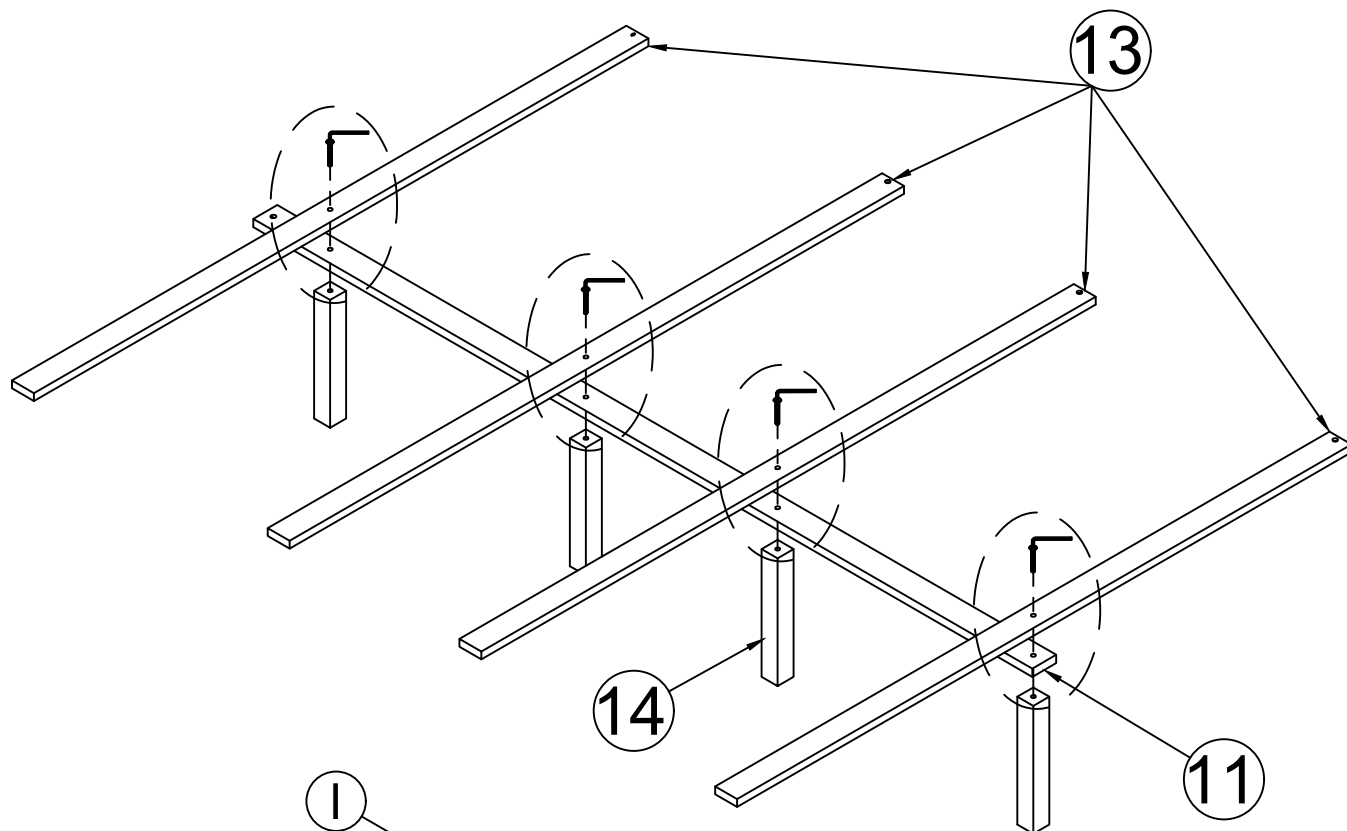


STEP 7.1


7.1: Attach slats (13) and support slats (11) and legs support (14) by using bolt (C) and allen key (I). As shown above.

STEP 8:



E	H
	
8PC	1PC

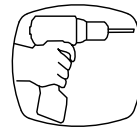


SHOULD USE A HAND DRILL FOR FASTER.

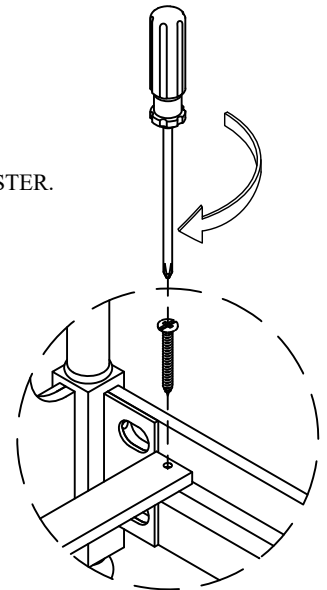

STEP 8.1

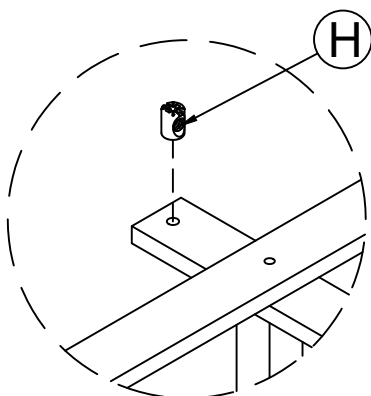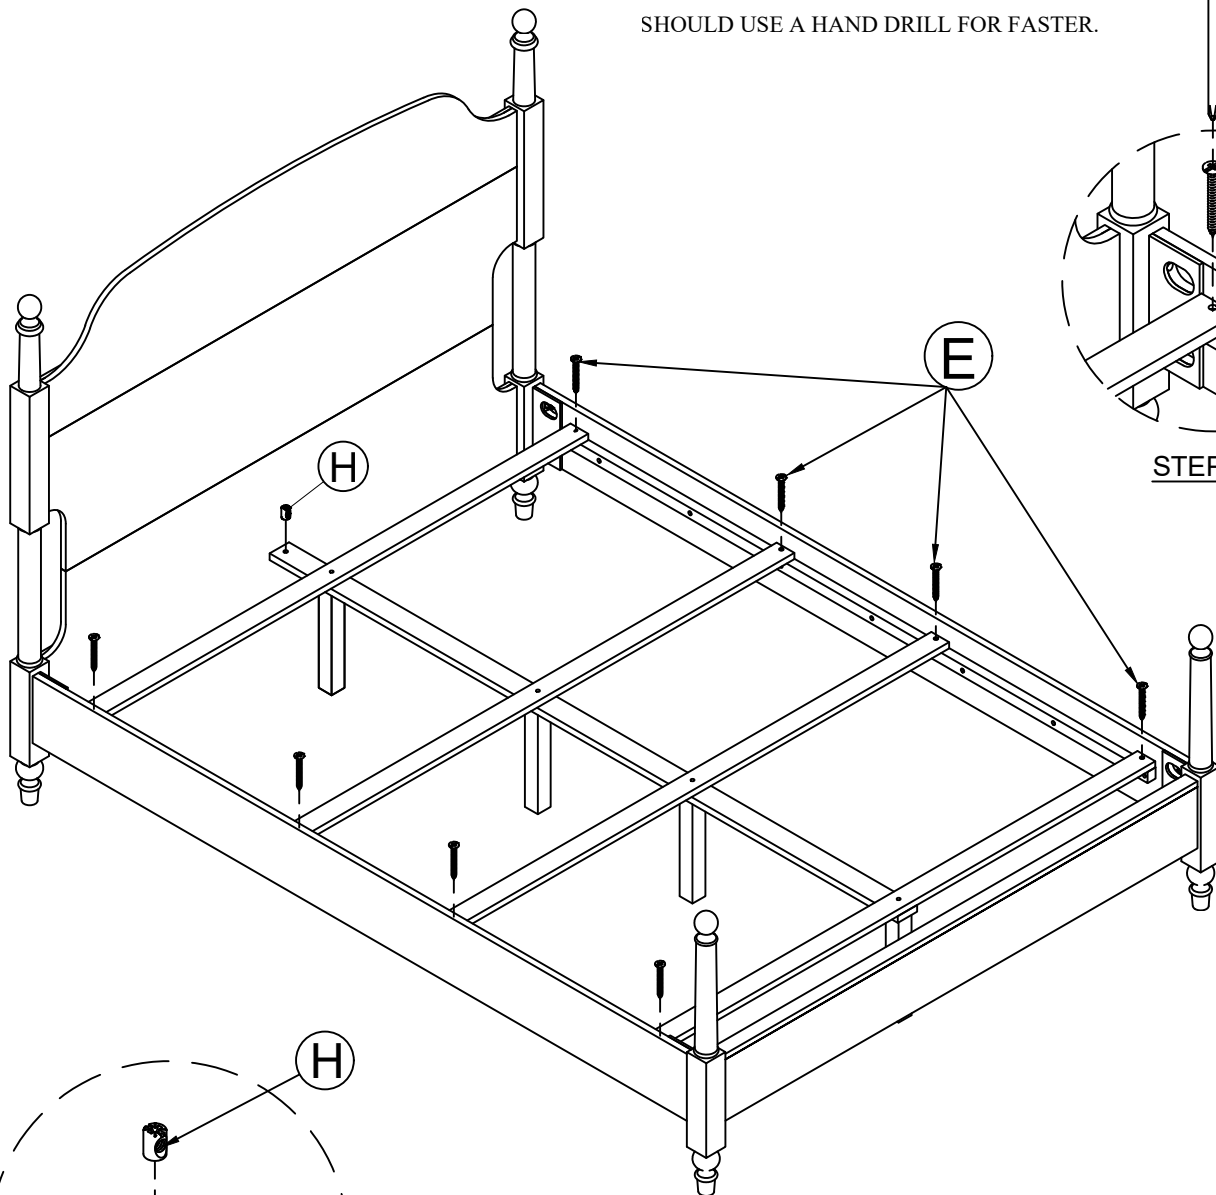

STEP 8.2

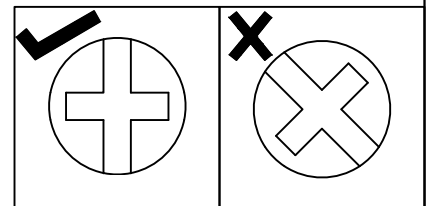


8.1: Attach step 7.1 to the side frame ⑨ by using screws **E** and screwdriver (Not provided). As shown above.


8.2: Attach barrel nut **H** to the slat support ⑪ . (Rotate the nut as illustrated in the lower right corner). As shown above.

STEP 9:

 ③	 ①
1PC	1PC

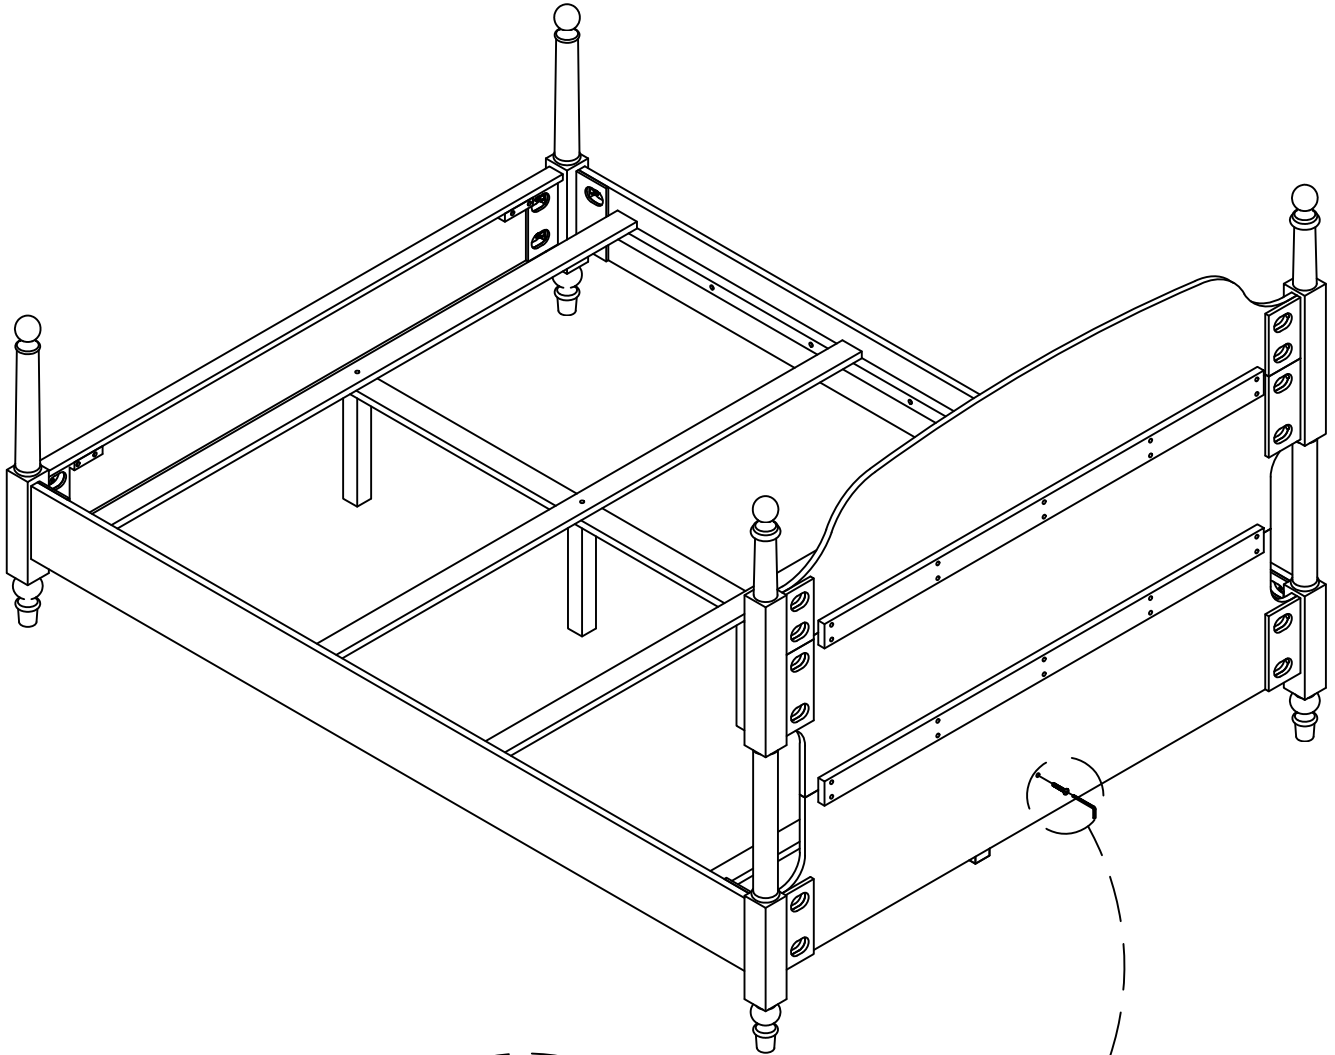


STEP 9.1

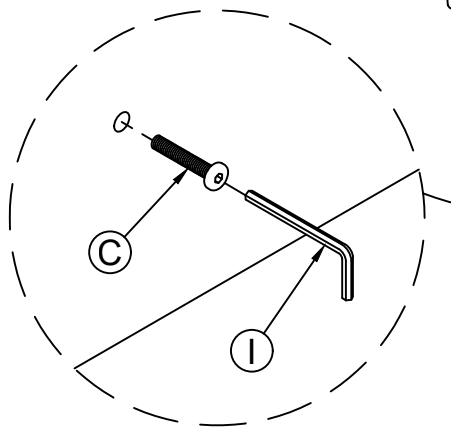

9.1: Attach the bolts ③ to the two holes on pano headboard ③ . by using allen keys ① . As shown above.

STEP 10:


(E)




16 PC



SHOULD USE A HAND DRILL FOR FASTER.




STEP 10.1

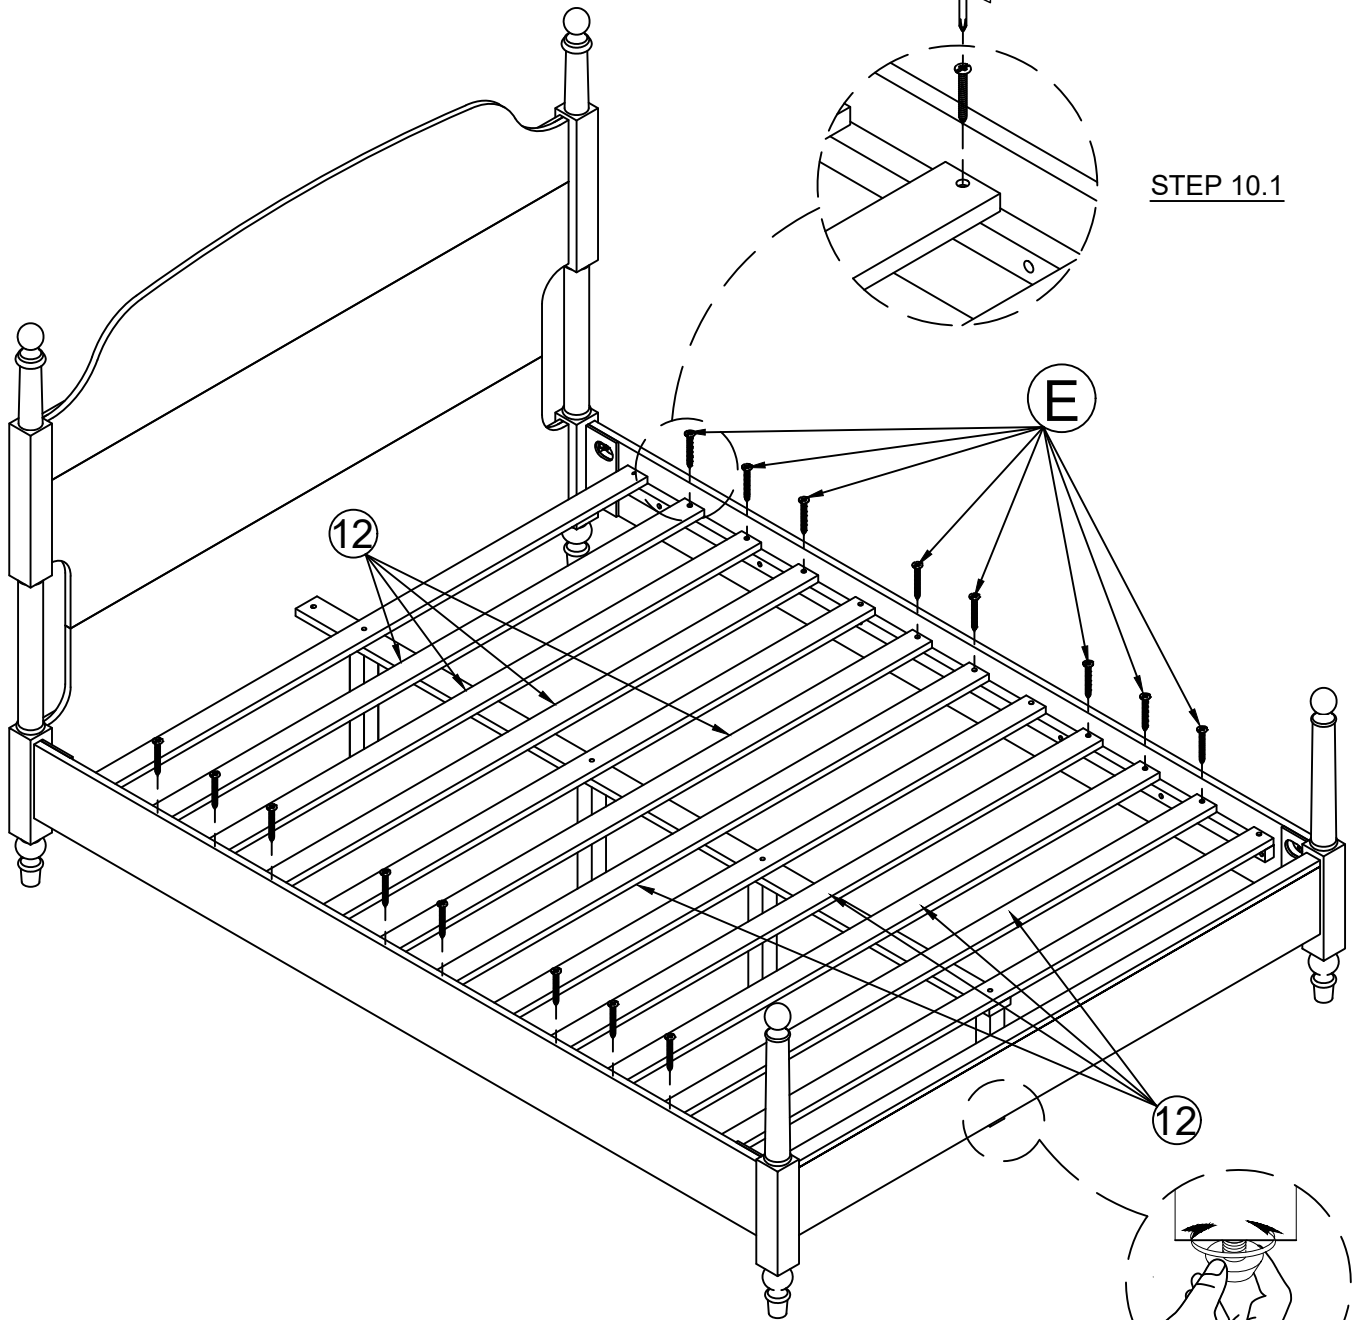

12



STEP 10.2

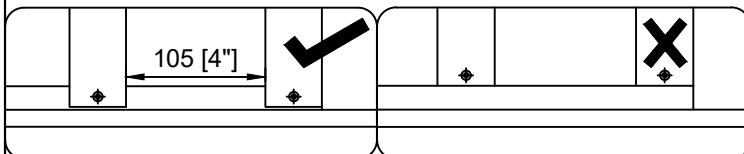


10.1: Attach slat (12) to the side frame (9) by using screws (E) and screwdriver (Not provided). As shown above.

10.2: Rotate counterclockwise to increase the length of floor leveler, rotate clockwise to lower that corner.

FULLY TIGHTEN SCREWS.

STEP 11:

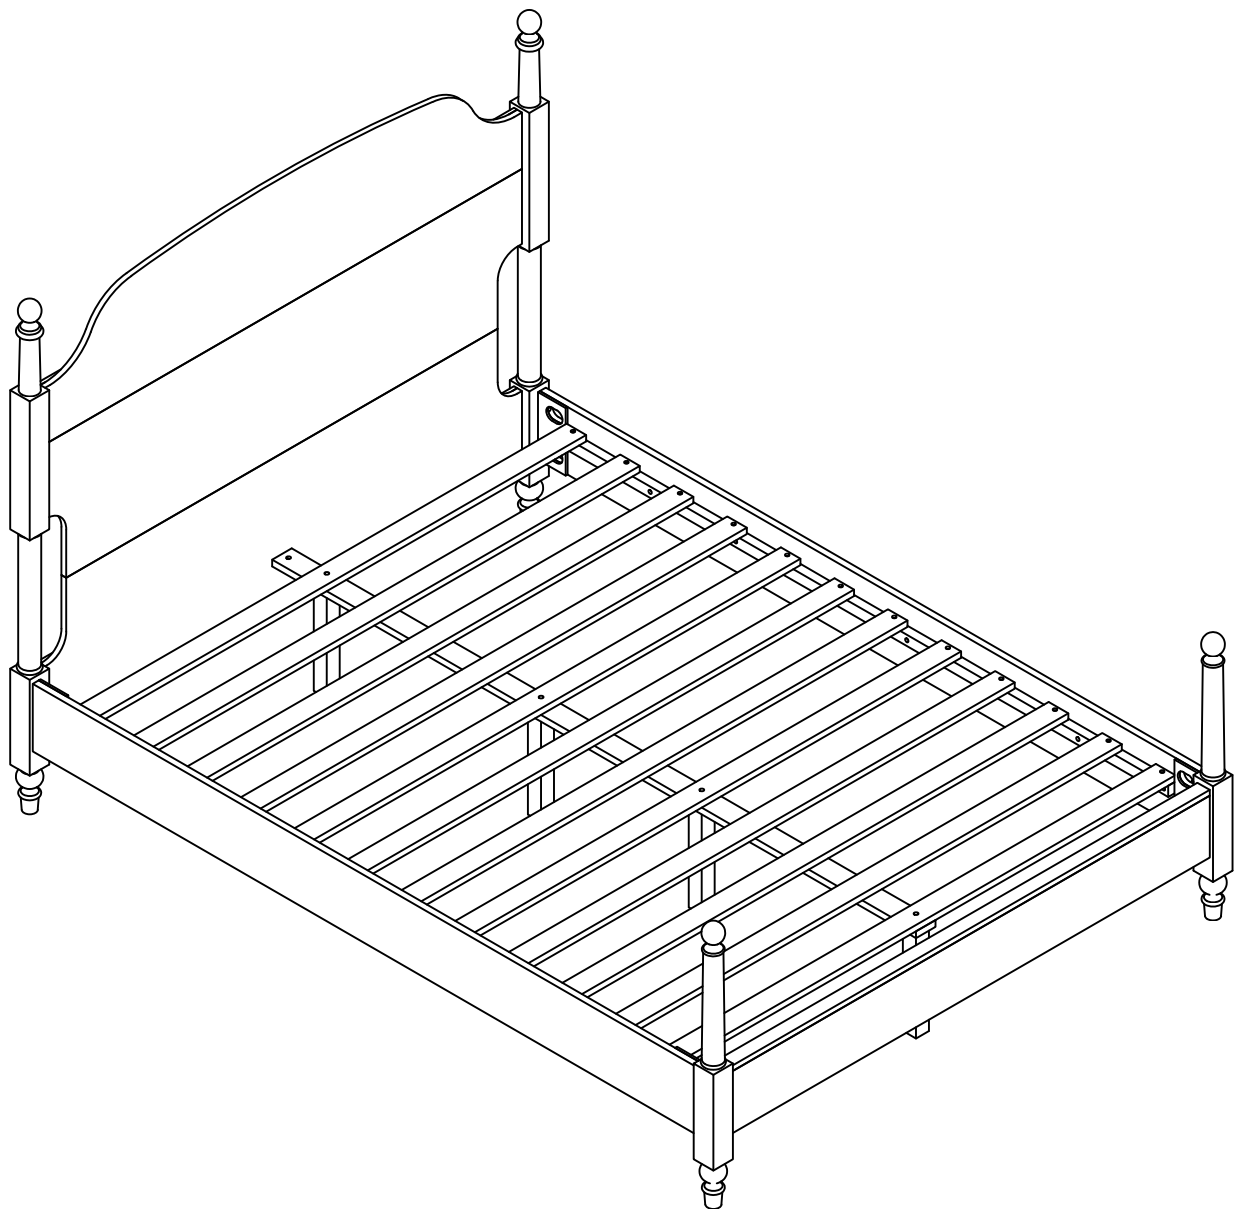

Place the bed a **LEVEL SURFACE**.
inspect it and make sure all parts are adequately connected.
Don't push too align all the parts at all the joint areas.

CAUTION 1 : When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process. **DO NOT**
tighten any screw fully and then towards the next one.
WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.
The bed is ready to be used.
Caution 2: This bed can only be used on a flat, level surface.