

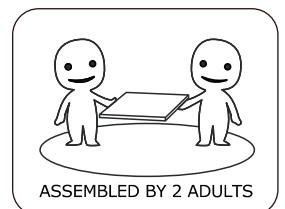


MANUAL INSTRUCTION



6 Door Wardrobe Armoire Closet with 2 Drawers

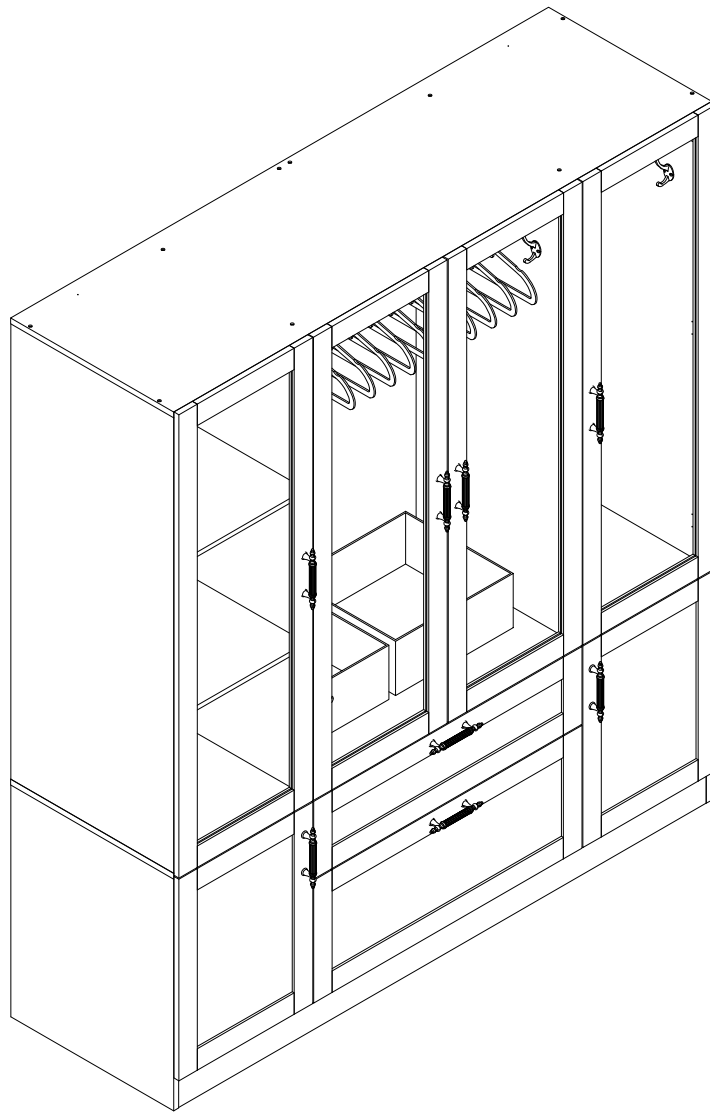

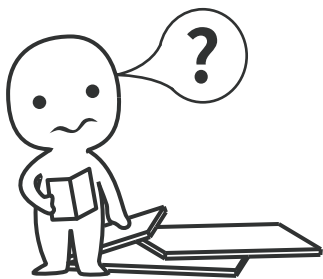


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

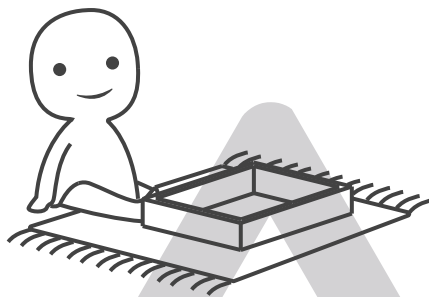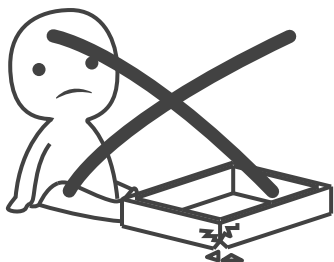



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

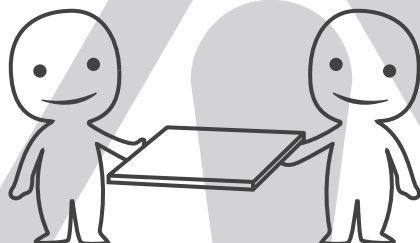

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

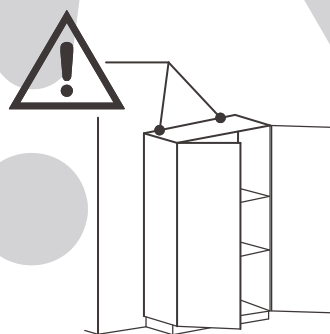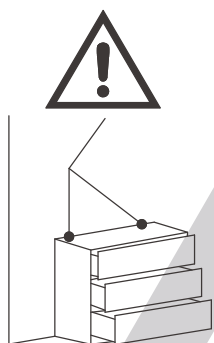

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


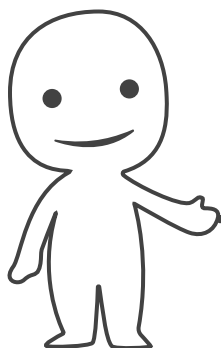


Please prepare the following tools

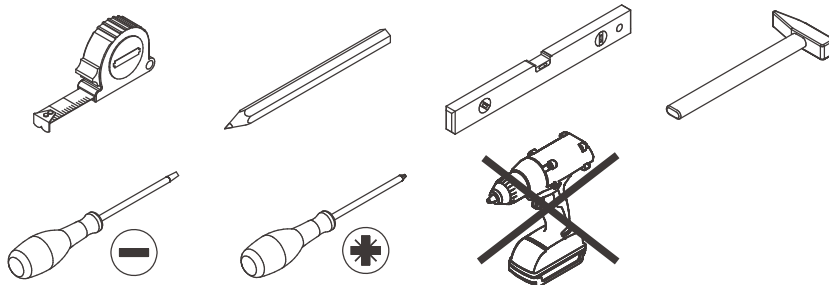


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size.

I HARDWARE


 Ax46	 Bx46	 Cx44 6x 30mm	 Dx32 4x 40mm	 Ex32 3x 12mm
 Fx50 3x 14mm	 Gx4	 Hx2	 Ix8	 Jx16 4x18mm
 Kx2 4x 12mm	 Lx12 3x 12mm	 Mx2 4x 35mm	 Nx6	 Ox96 4x14mm
 Px10	 Qx6	 Rx50	 Sx2	 Tx 5
 (CL)x2	 (CR)x2	 (DL)x2	 (DR)x2	

PARTS

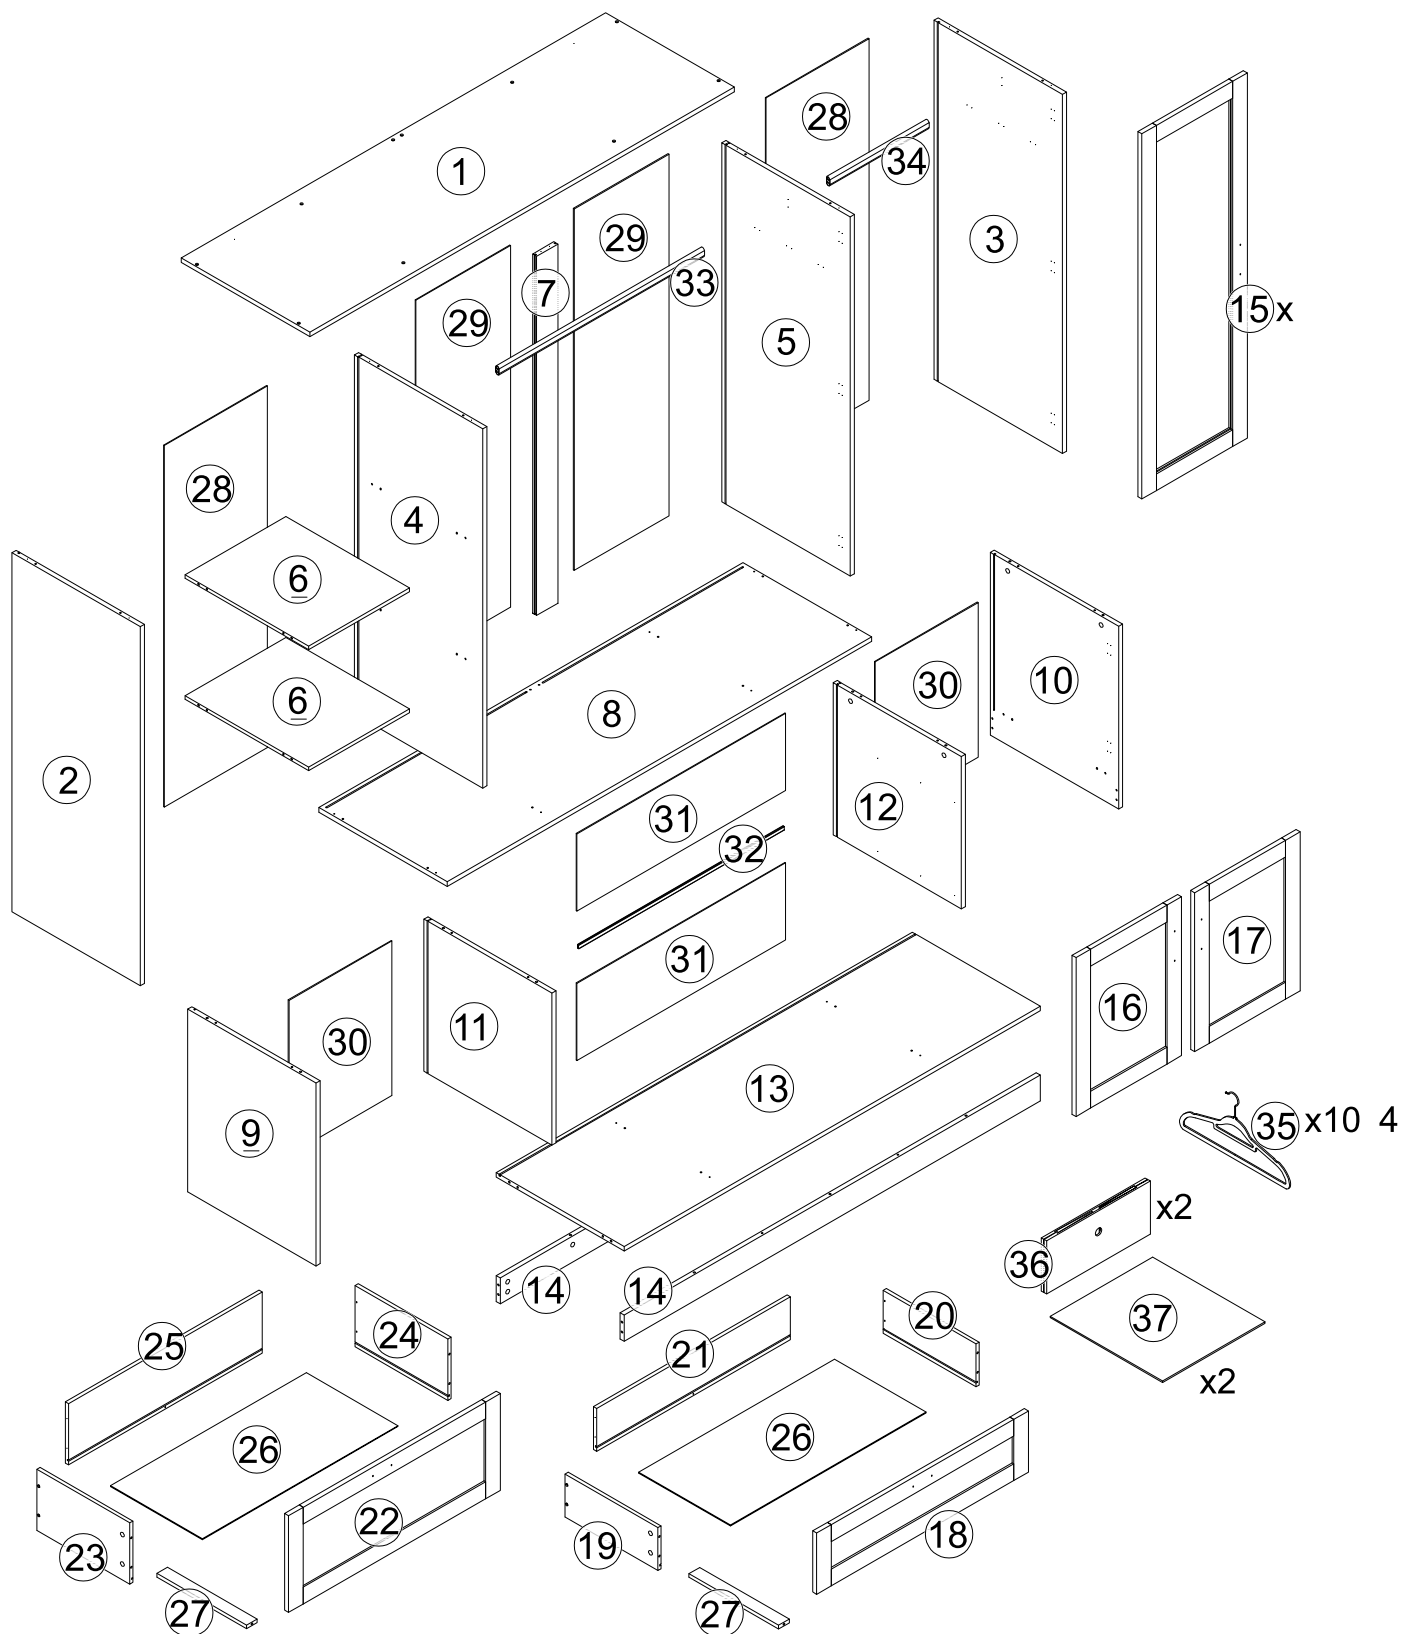


I PRODUCT ASSEMBLY

1

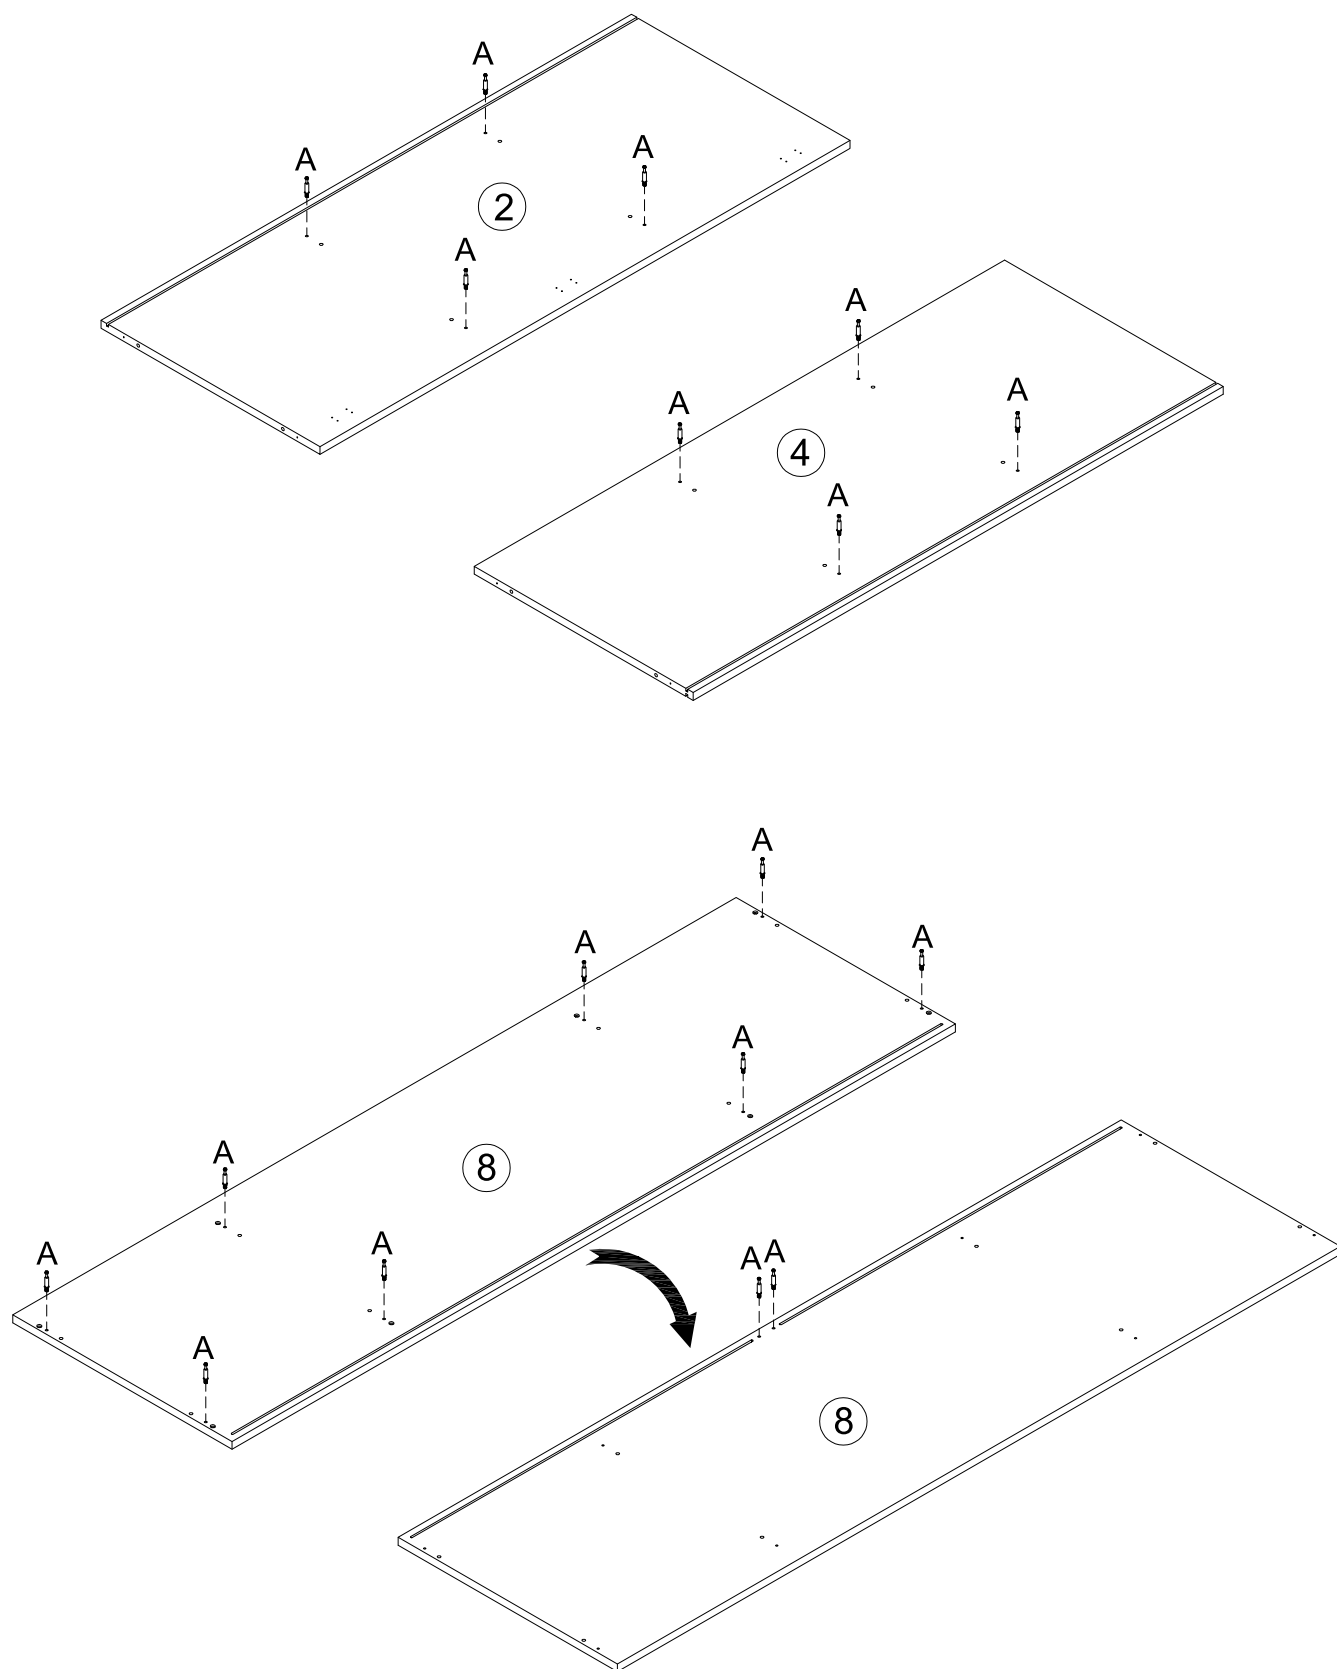

I PRODUCT ASSEMBLY



2

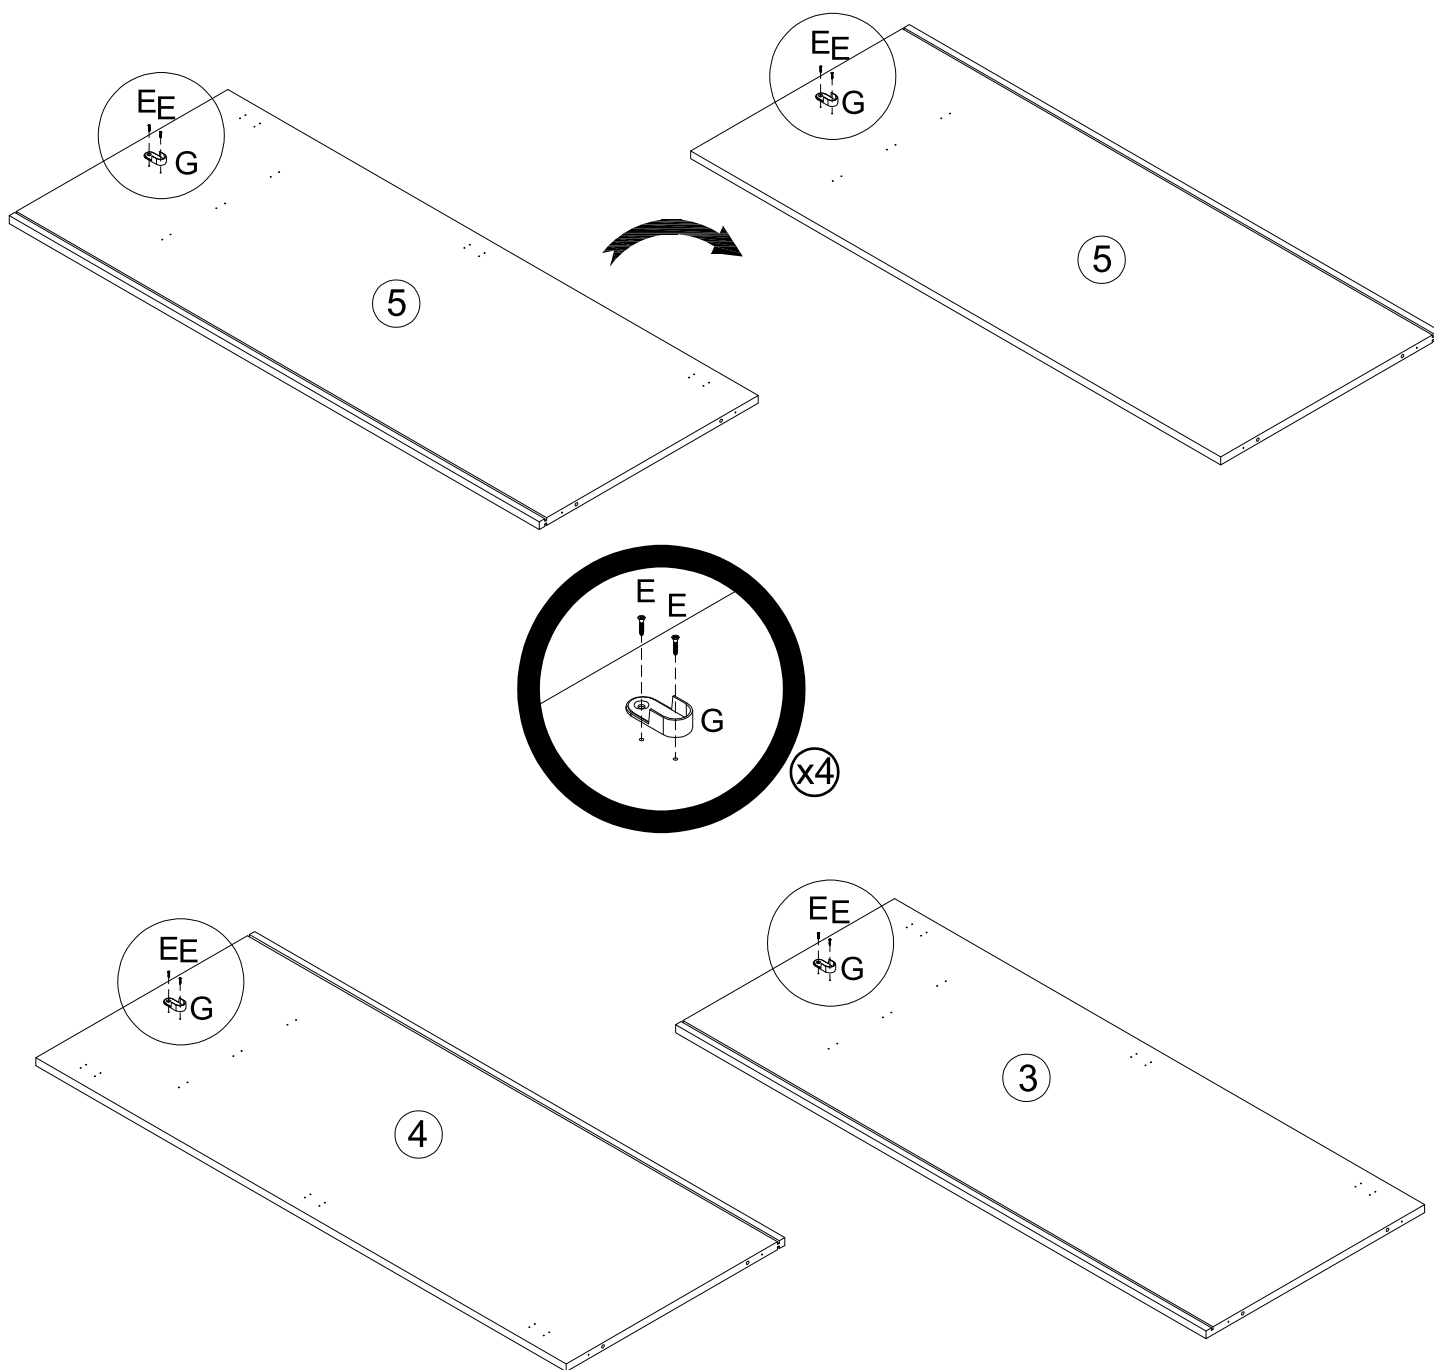



 Ex8 3x12mm	 Gx4
---	---

I PRODUCT ASSEMBLY

3


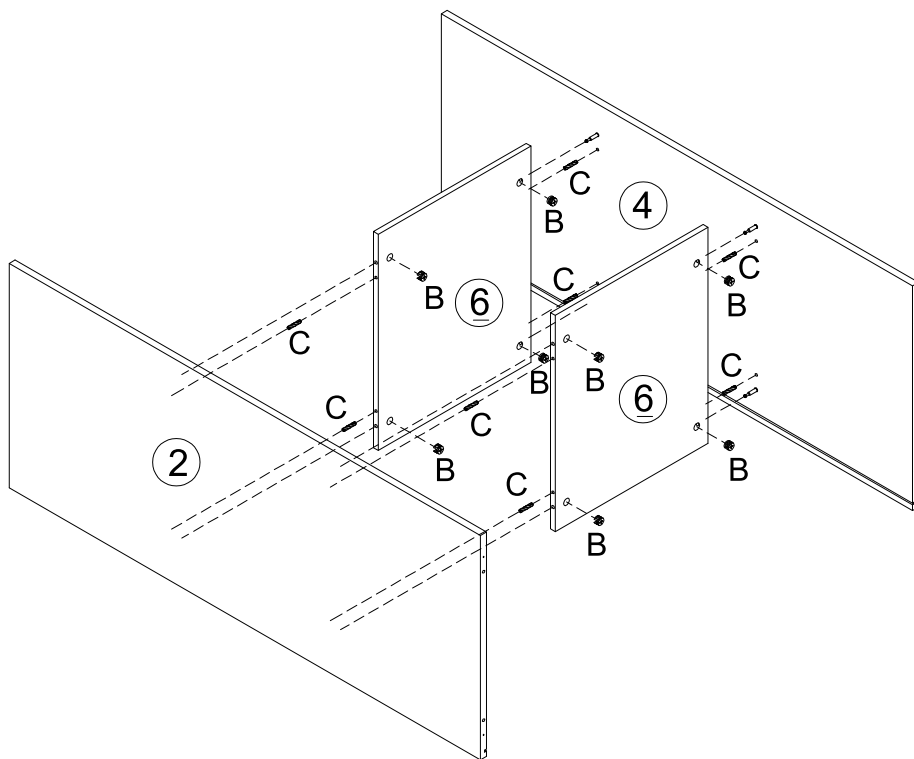


4

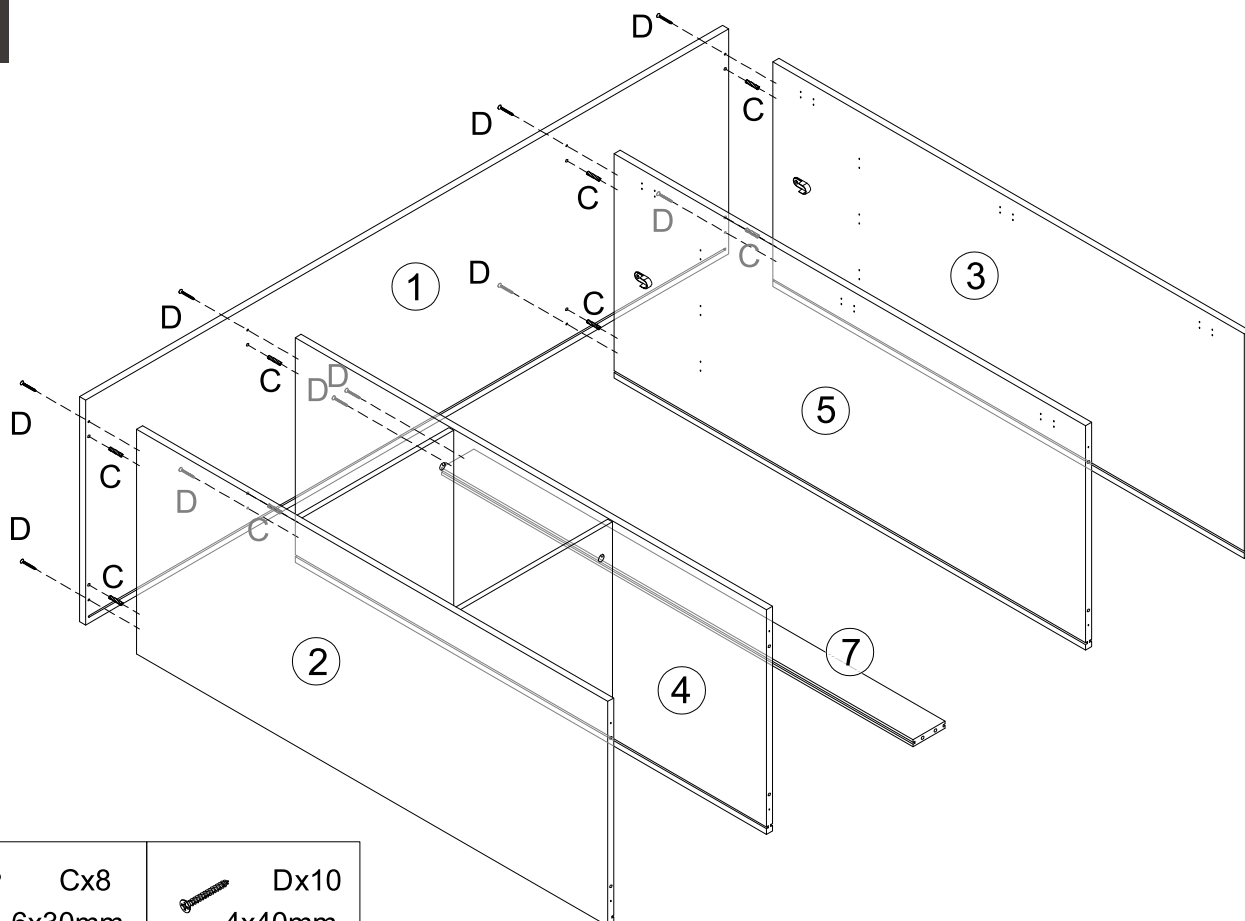


I PRODUCT ASSEMBLY

5

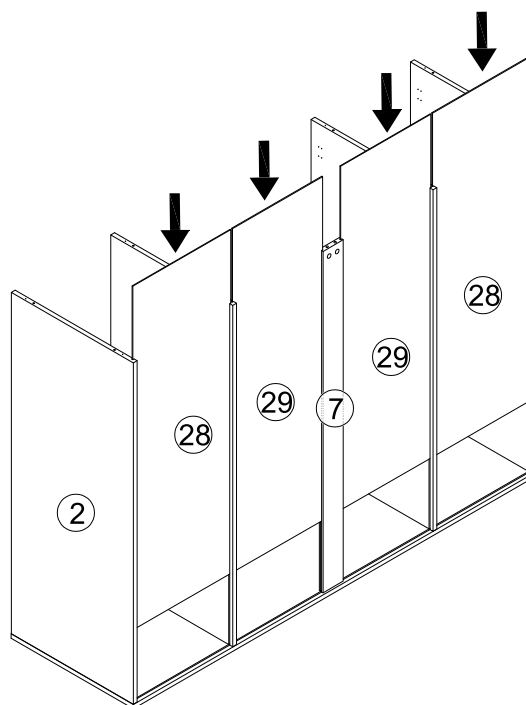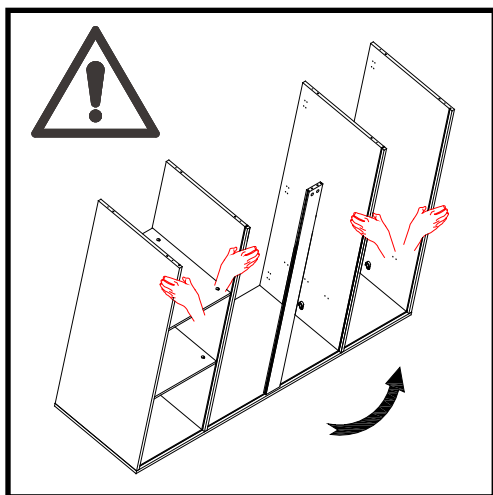

When the cabinet is turned onto its side, please hold Board 2, Board 3, and Board 5 until the installation in Step 6 is completed, as shown.


6

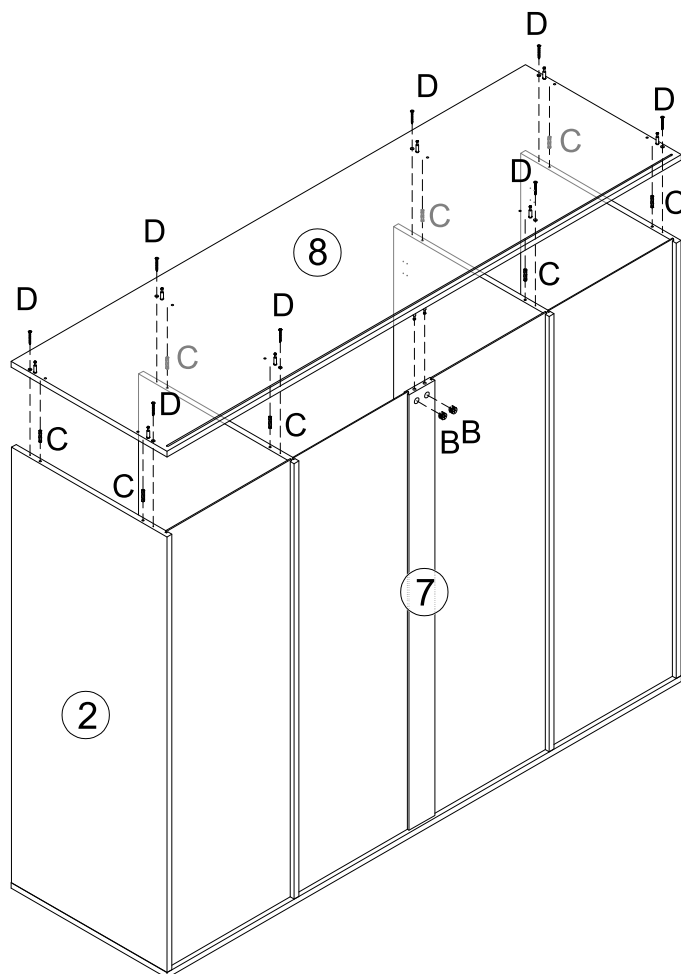


	Bx2		Cx8 6x30mm		Dx8 4x40mm
---	-----	---	---------------	---	---------------

I PRODUCT ASSEMBLY

7

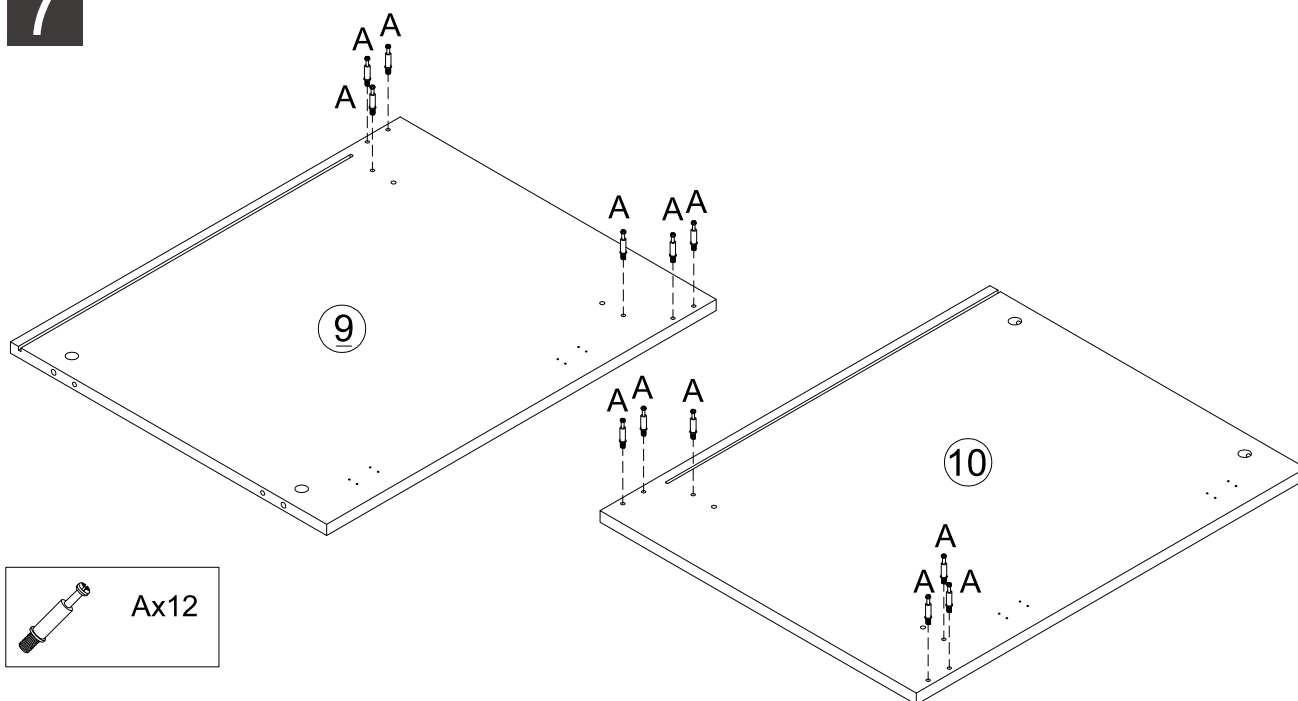


8


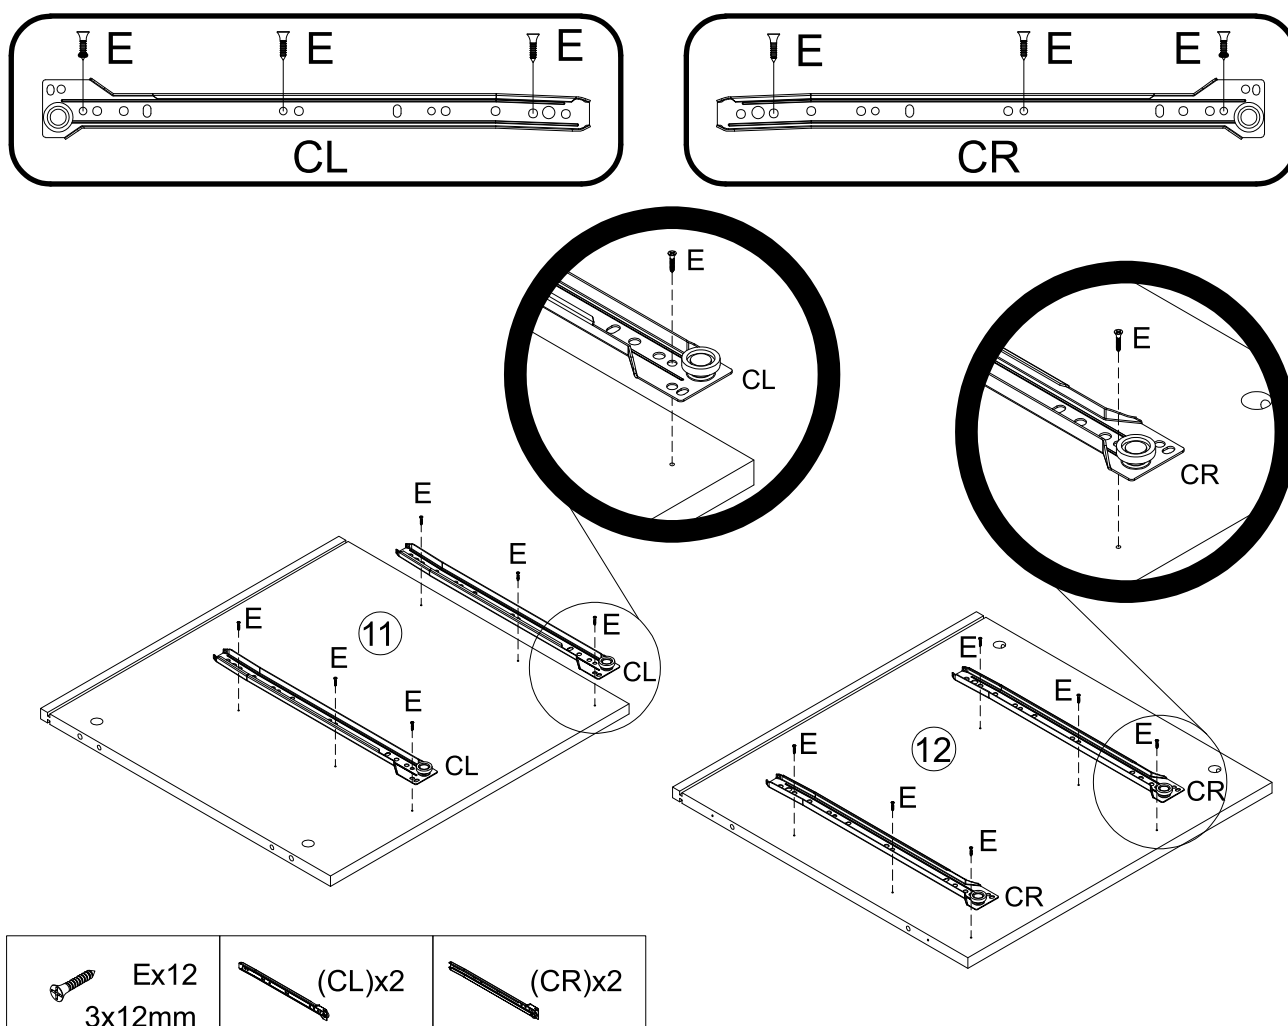


I PRODUCT ASSEMBLY

9

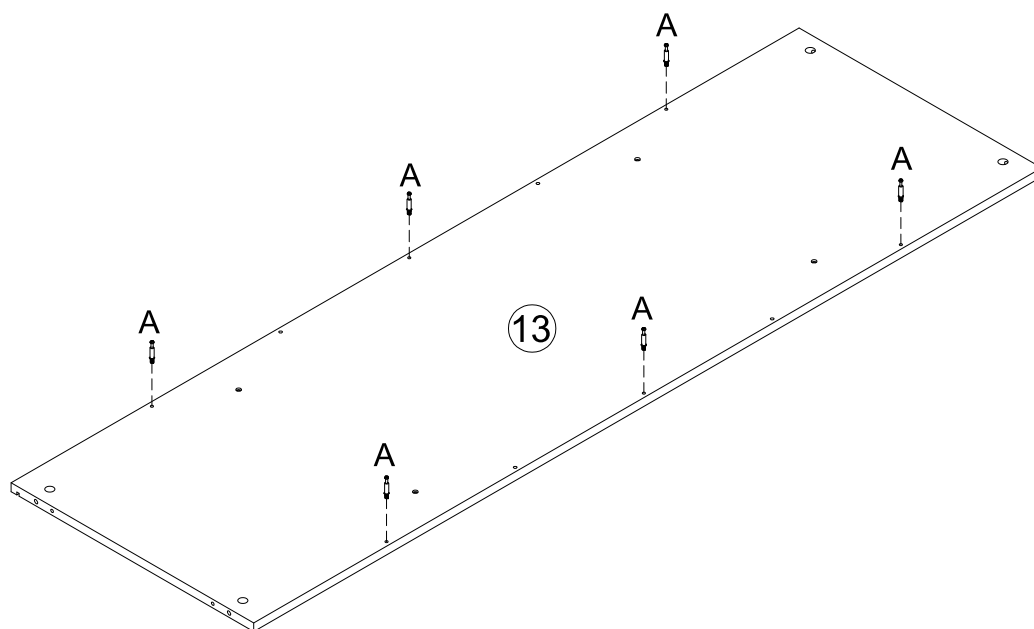


10

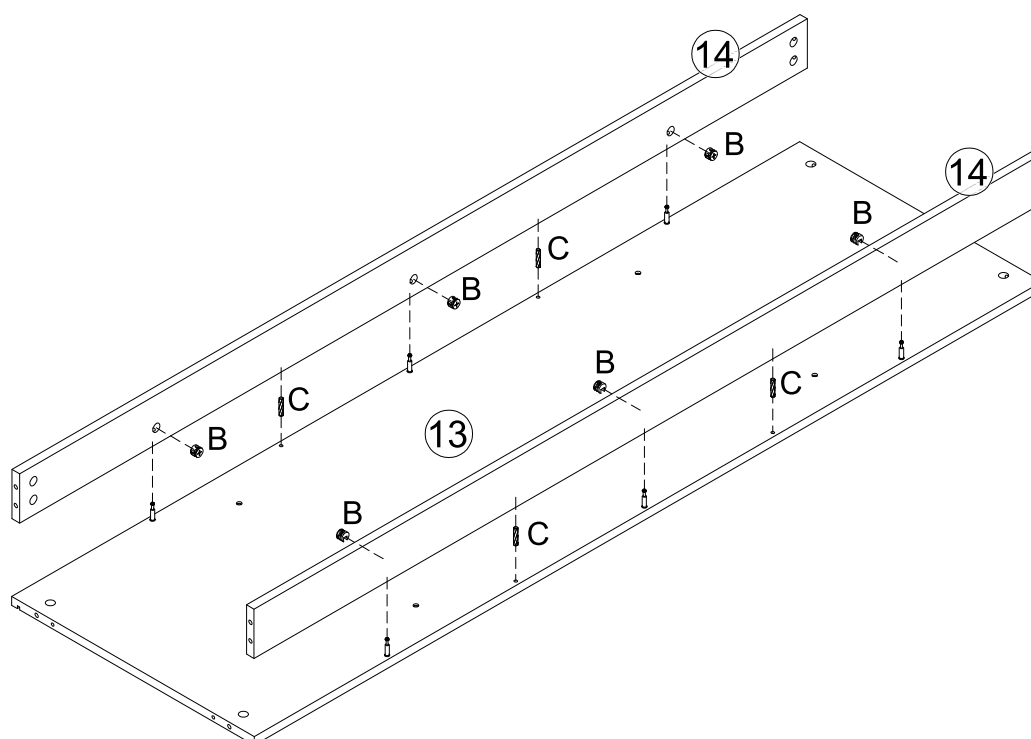


I PRODUCT ASSEMBLY

11

	Bx12		Cx8 6x30mm		Dx4 4x40mm
---	------	---	---------------	---	---------------


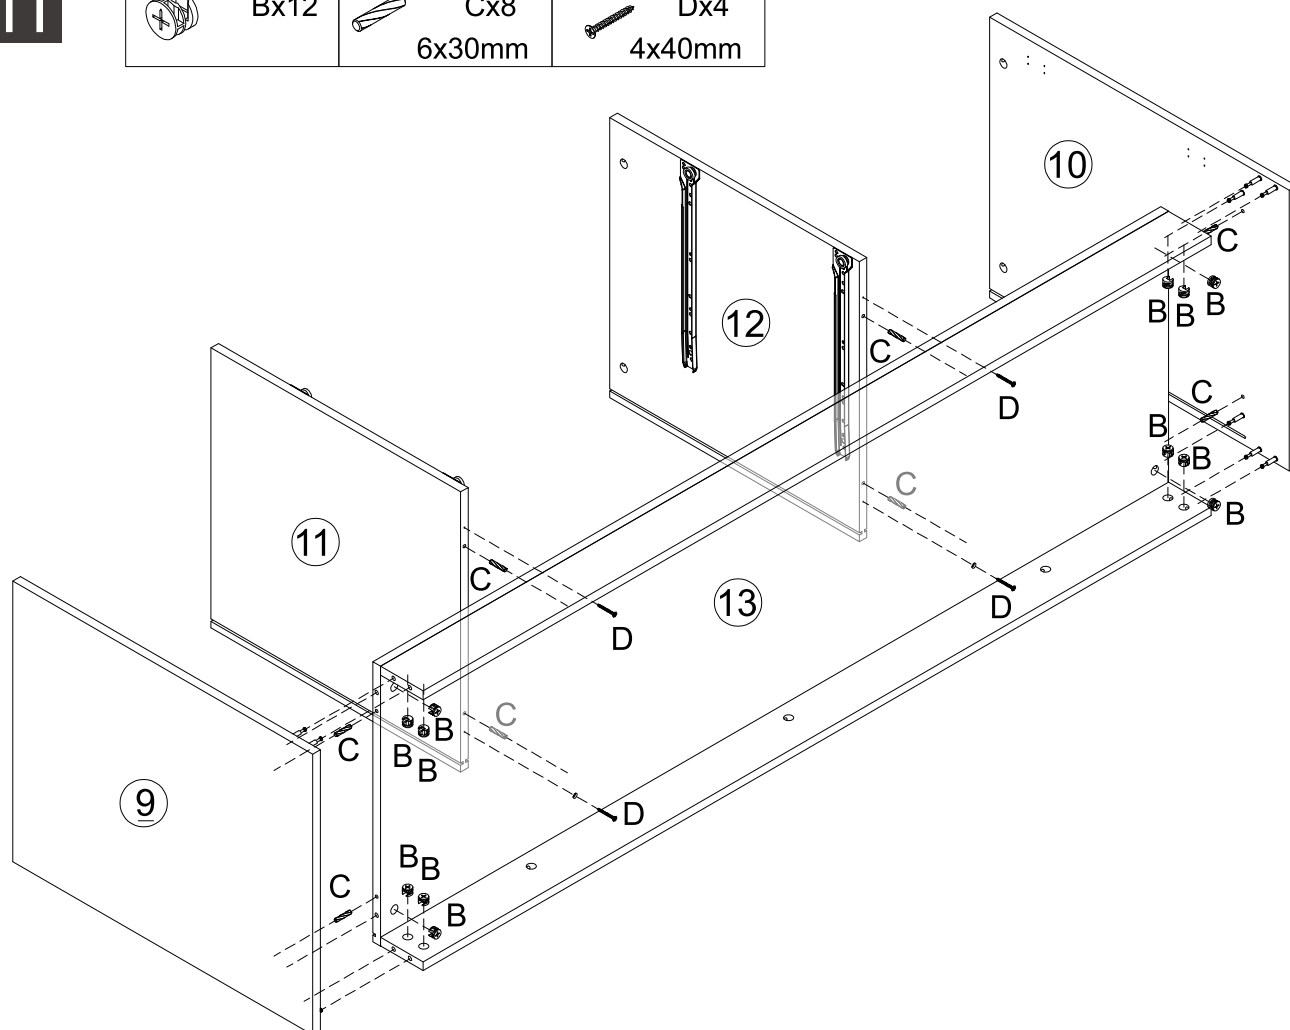


12

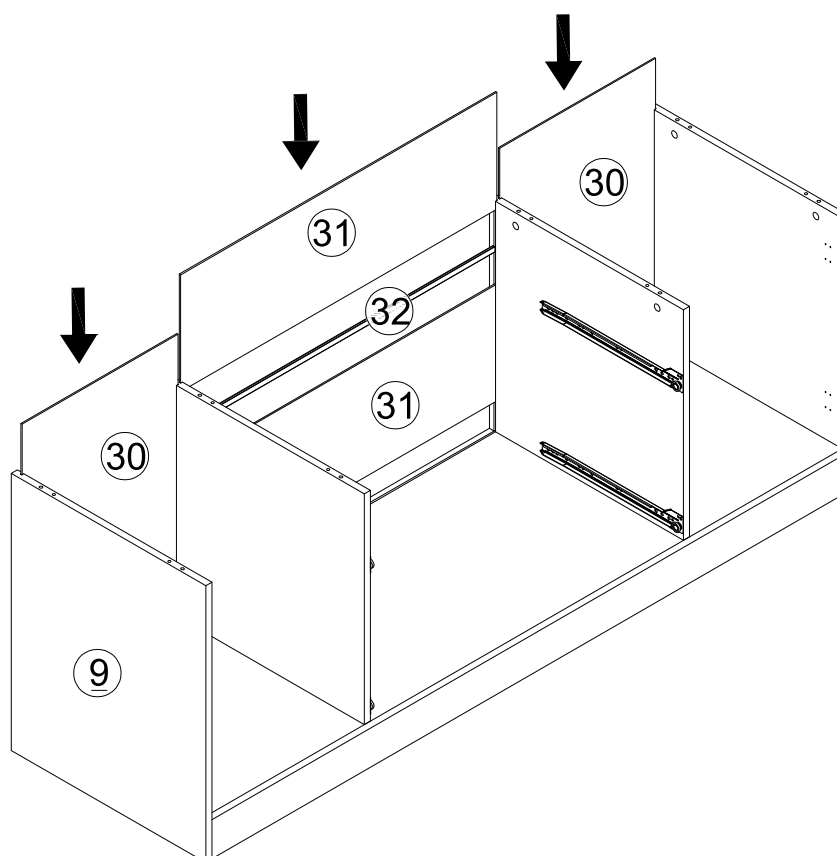


PRODUCT ASSEMBLY


13

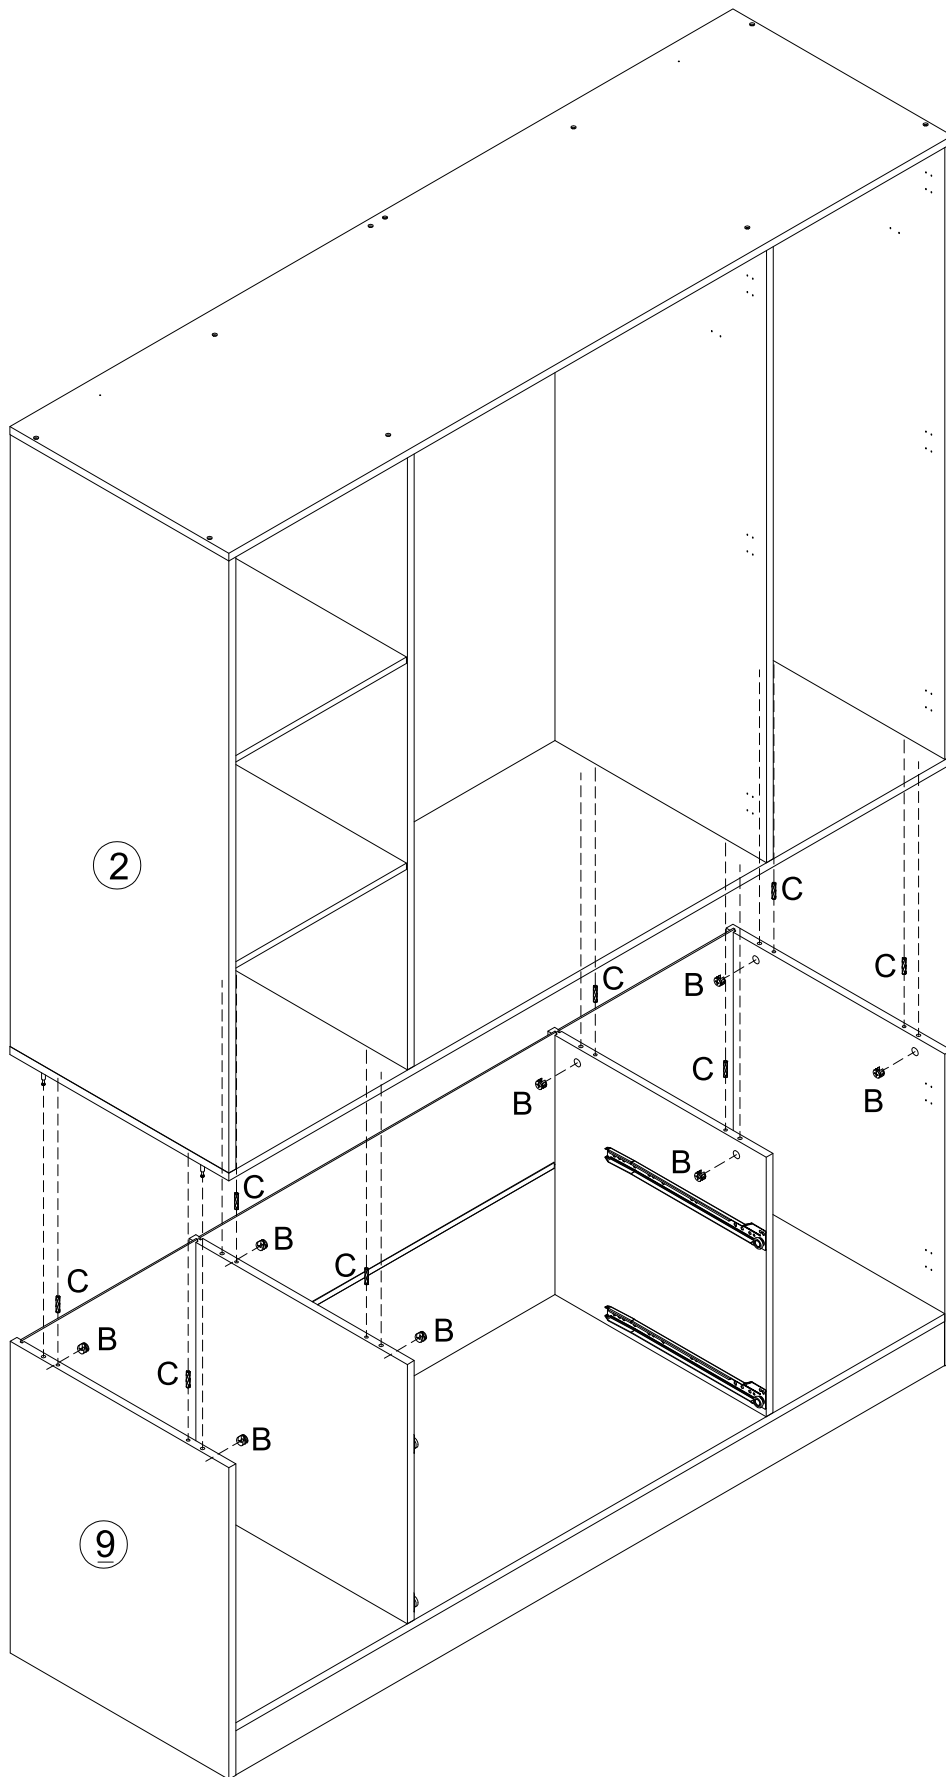

I PRODUCT ASSEMBLY



14

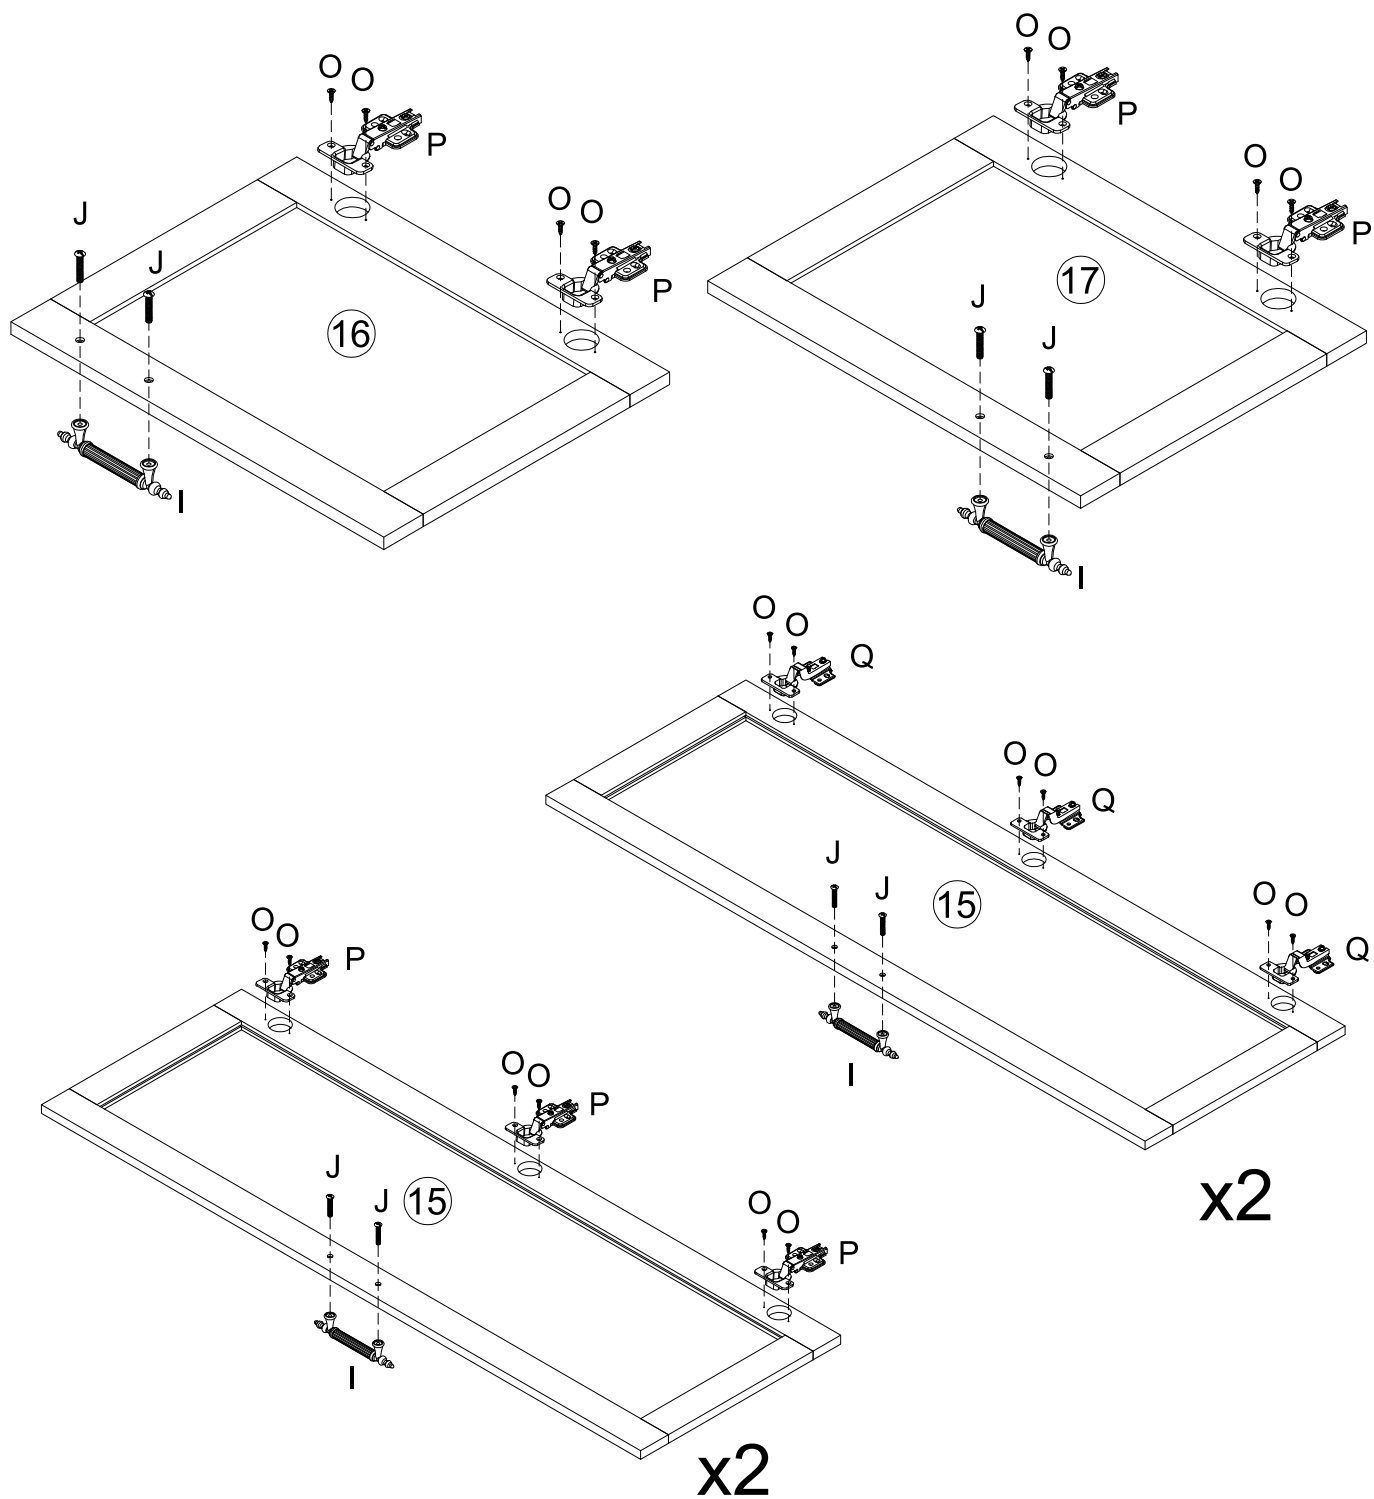

 Ix6	 Jx12 4x18mm	 Ox32 4x14mm	 Px10	 Qx6
---	--	--	--	---



I PRODUCT ASSEMBLY

15

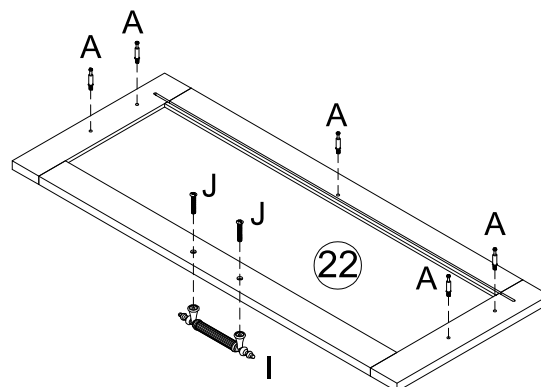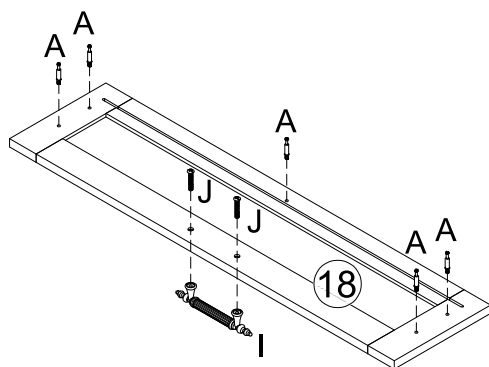

 Ax10	 Jx2	 Jx4 4x18mm
--	---	---



16

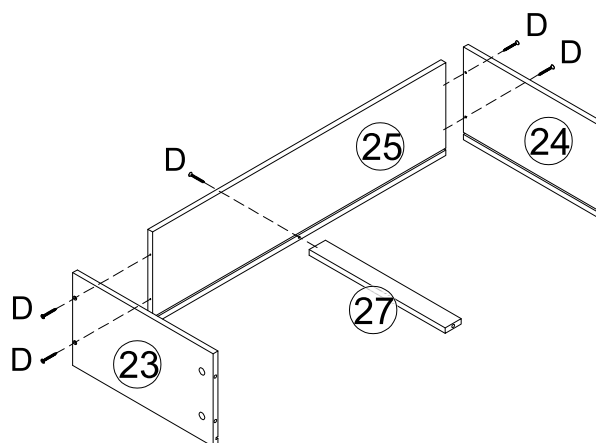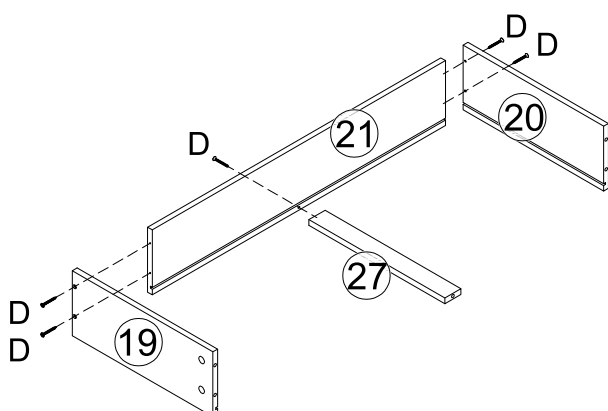



 Dx10 4x40mm
--

I PRODUCT ASSEMBLY

17




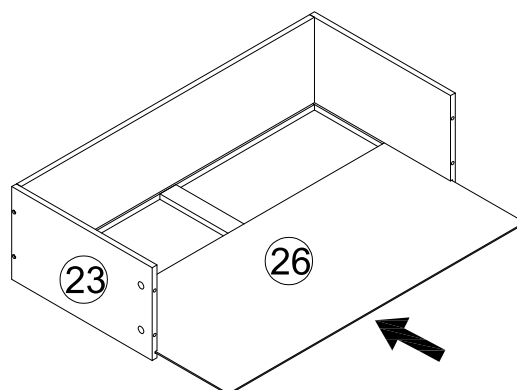
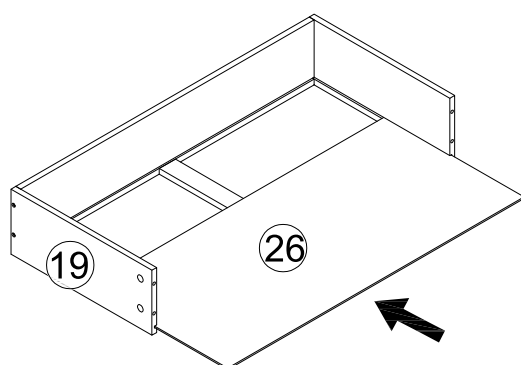


18

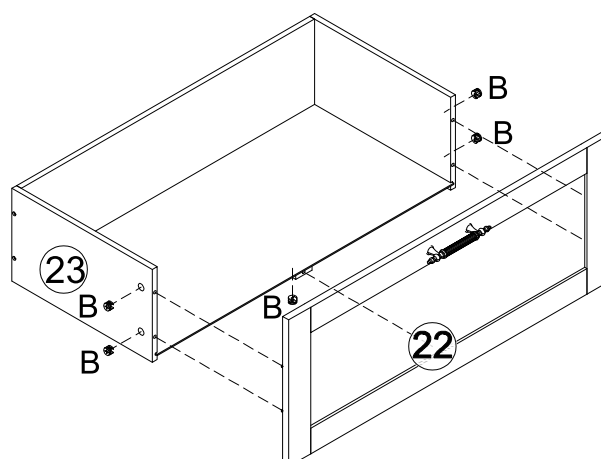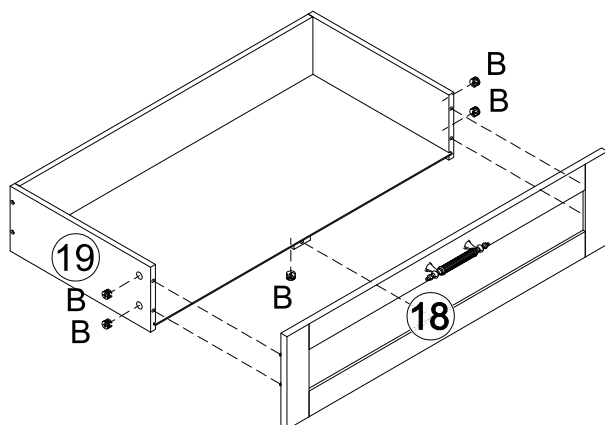

I PRODUCT ASSEMBLY



19

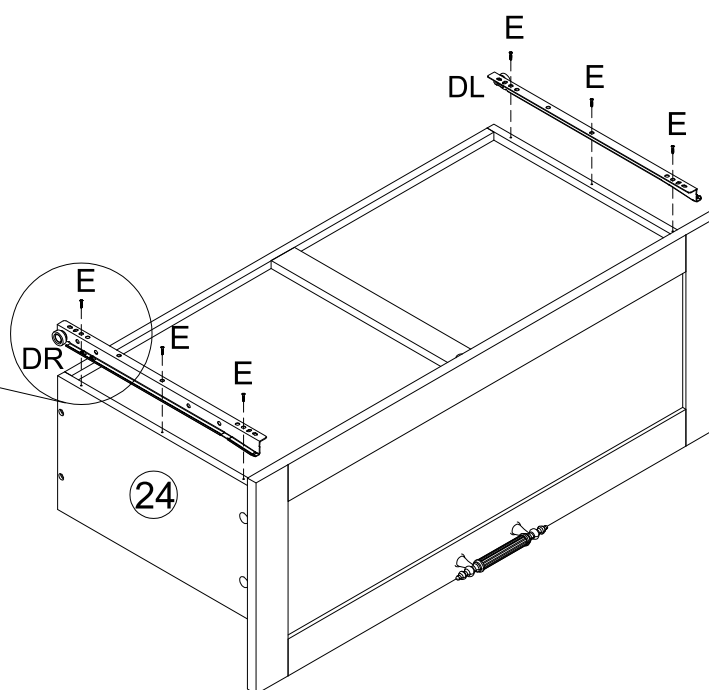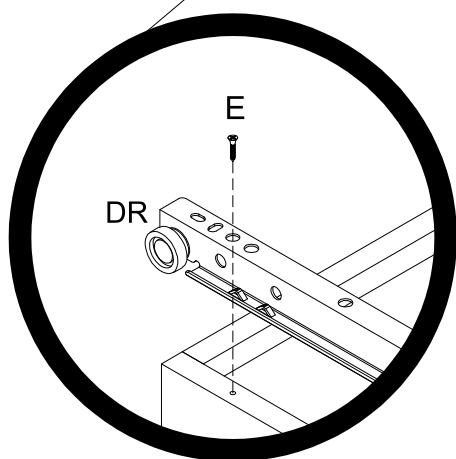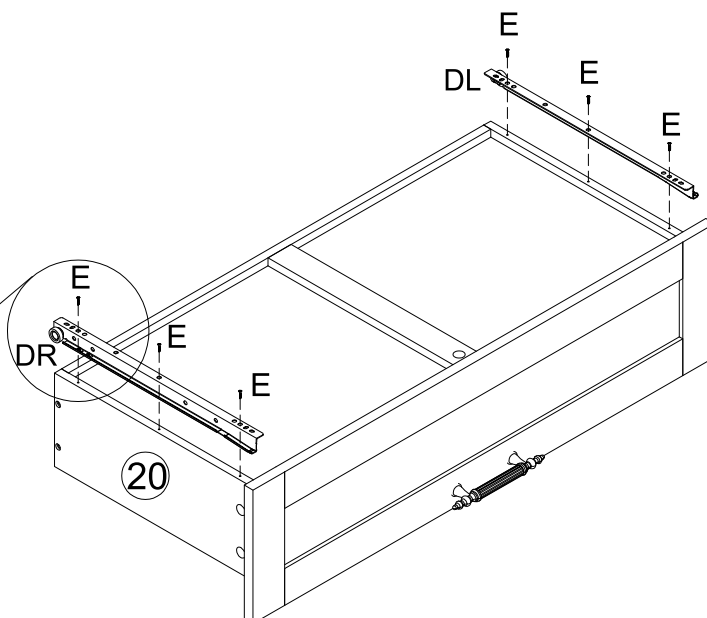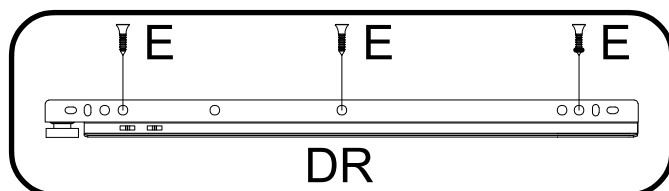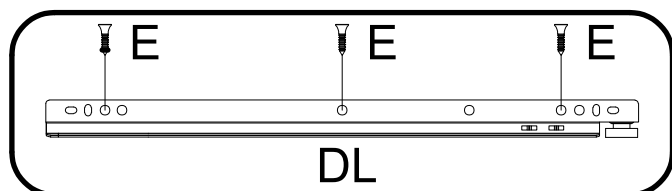


 Ex12 3x12mm	 (DL)x2	 (DR)x2
--	--	--

I PRODUCT ASSEMBLY

20

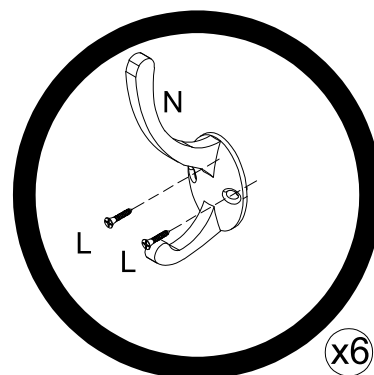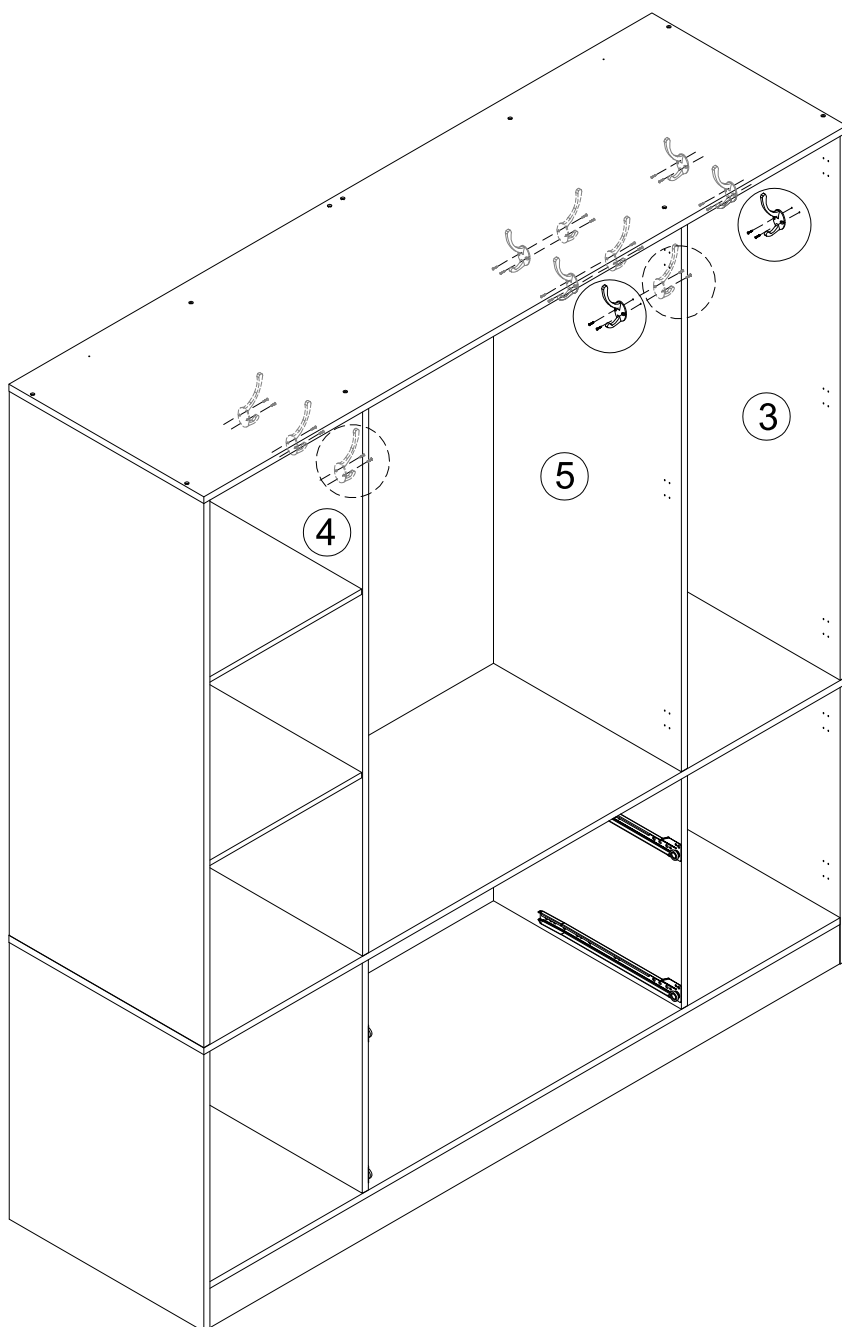



OR

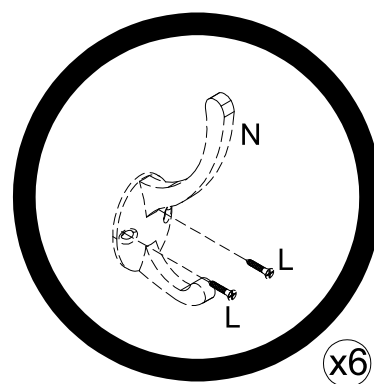


 Lx12 3x12mm	 Nx6
--	---

I PRODUCT ASSEMBLY

21

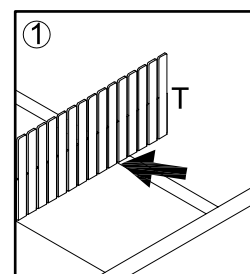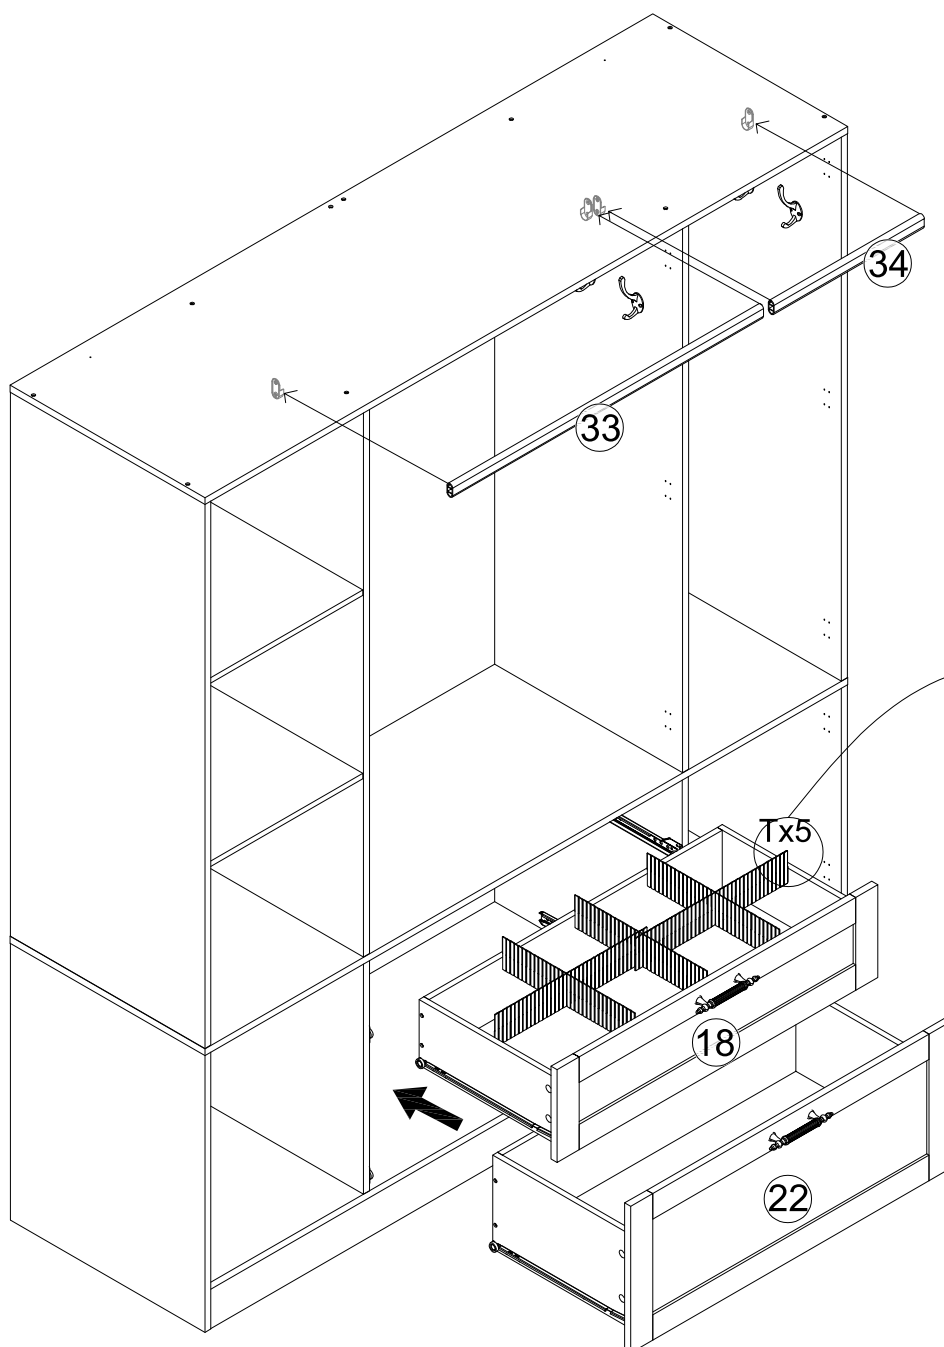

Orient yourself in the desired direction and find out where it's too long.



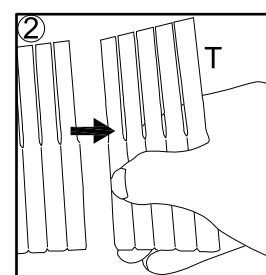


Breakit off







I PRODUCT ASSEMBLY

22

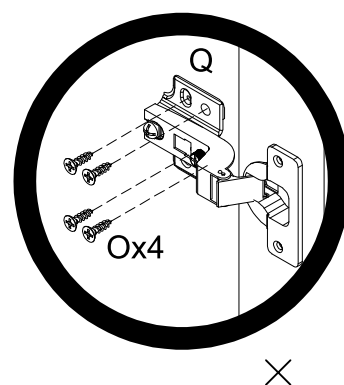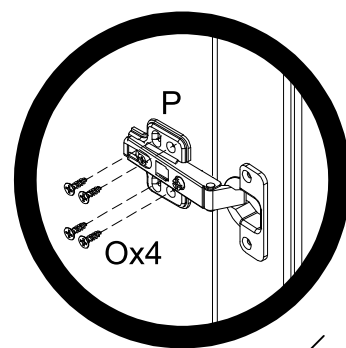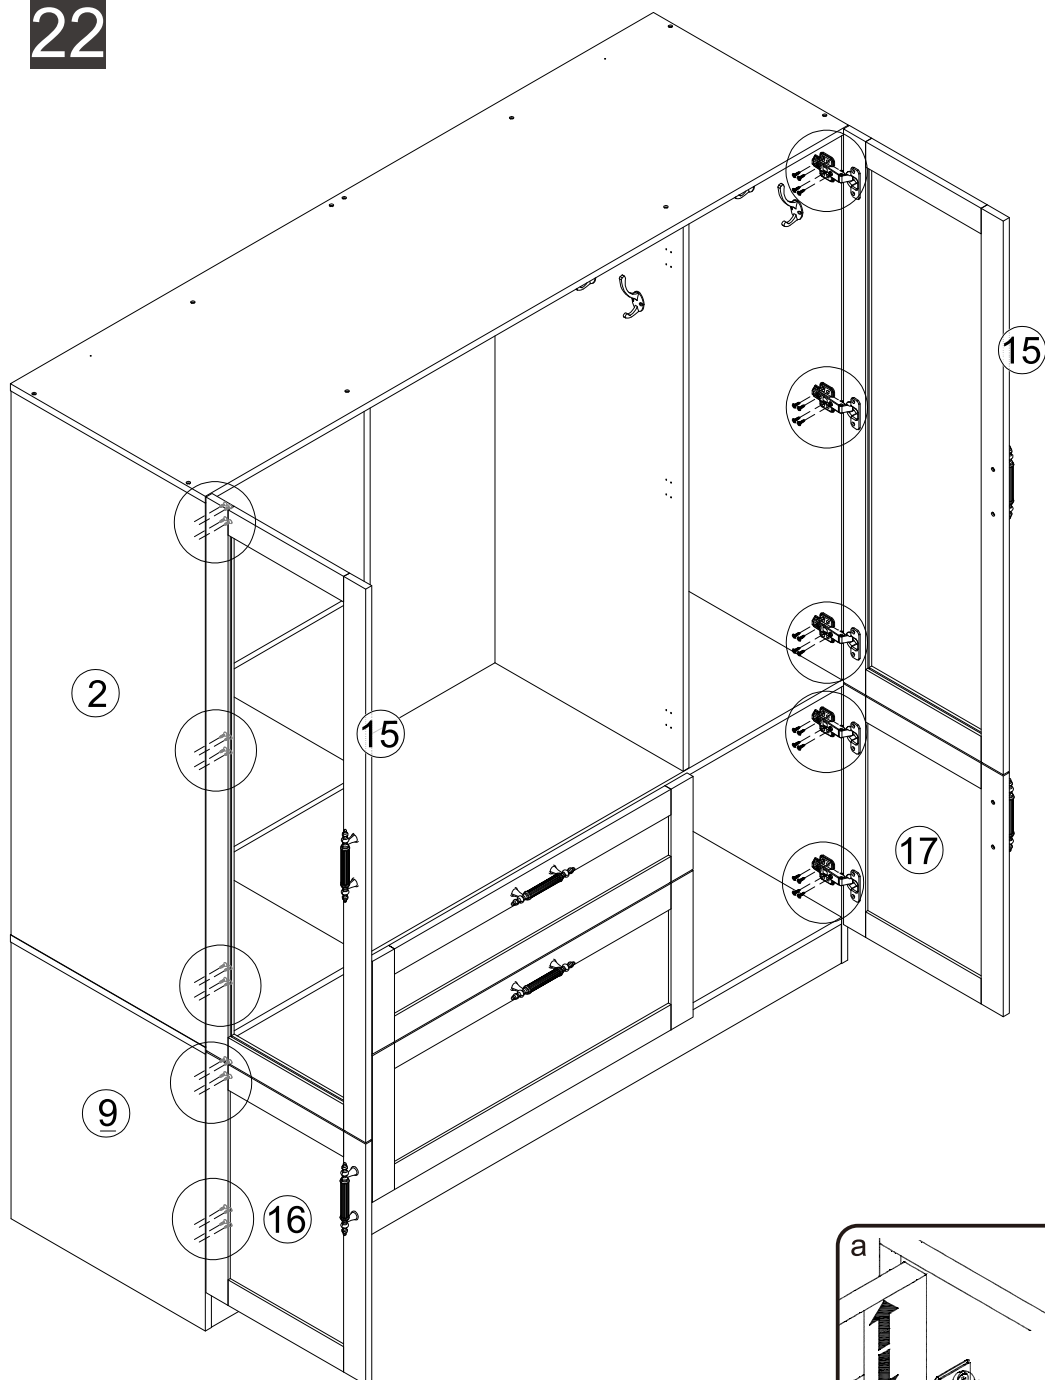



If there is misalignment after installation,
adjust the screws to achieve the best alignment

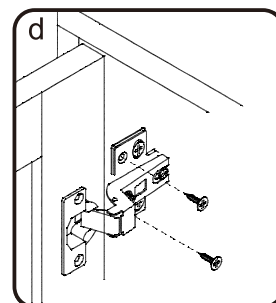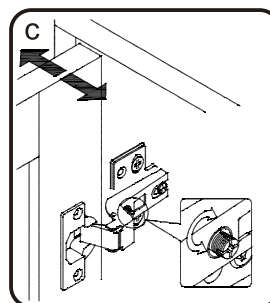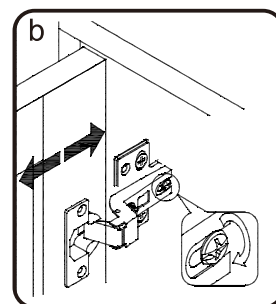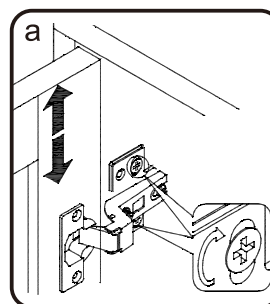






Ox40
4x14mm

I PRODUCT ASSEMBLY

23

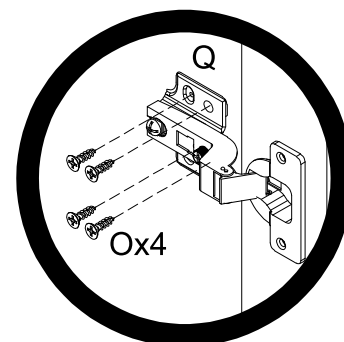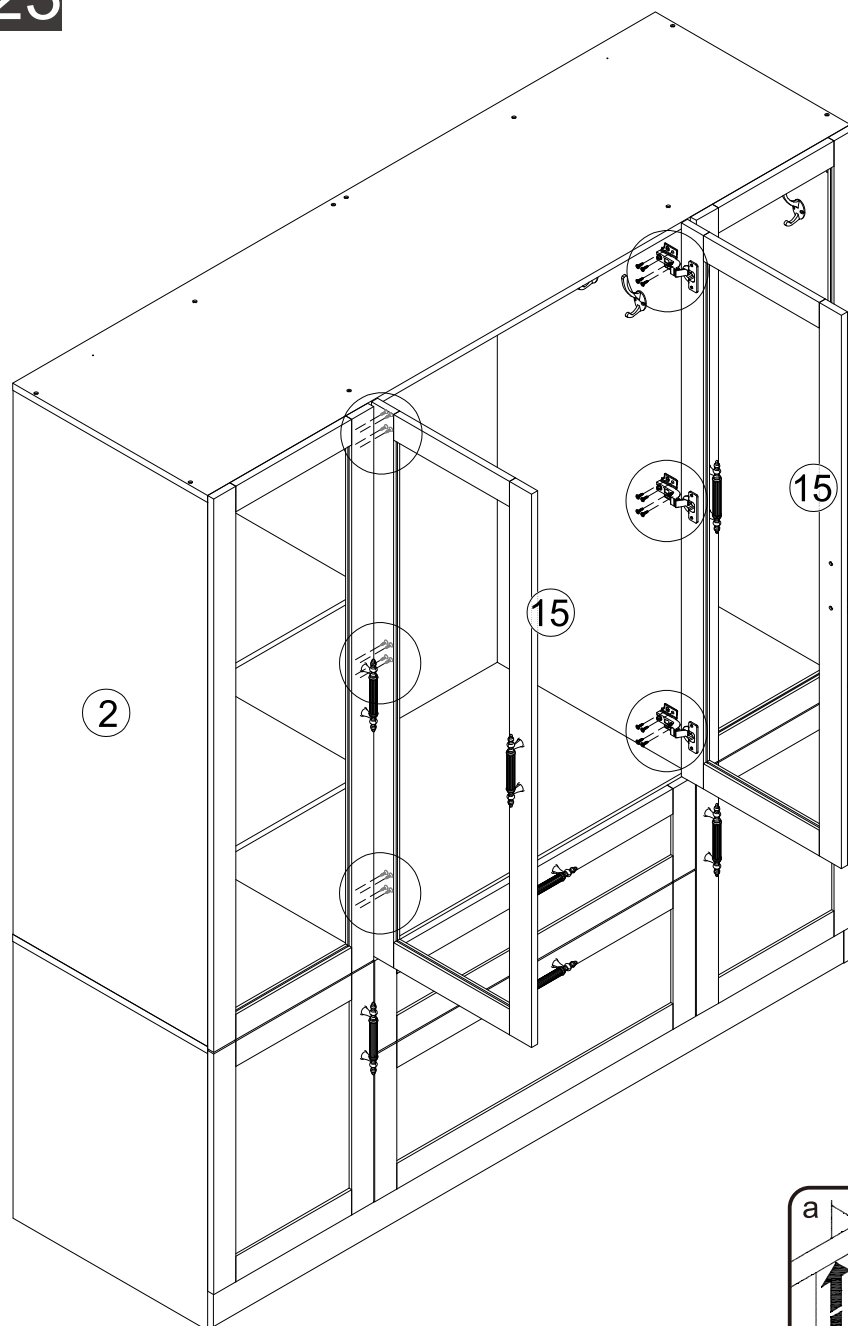


If there is misalignment after installation,
adjust the screws to achieve the best alignment

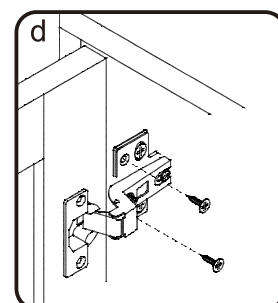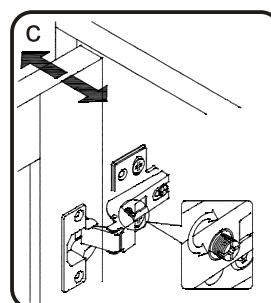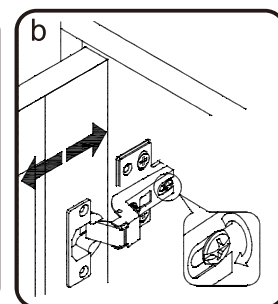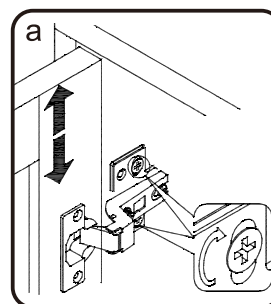



I PRODUCT ASSEMBLY

24

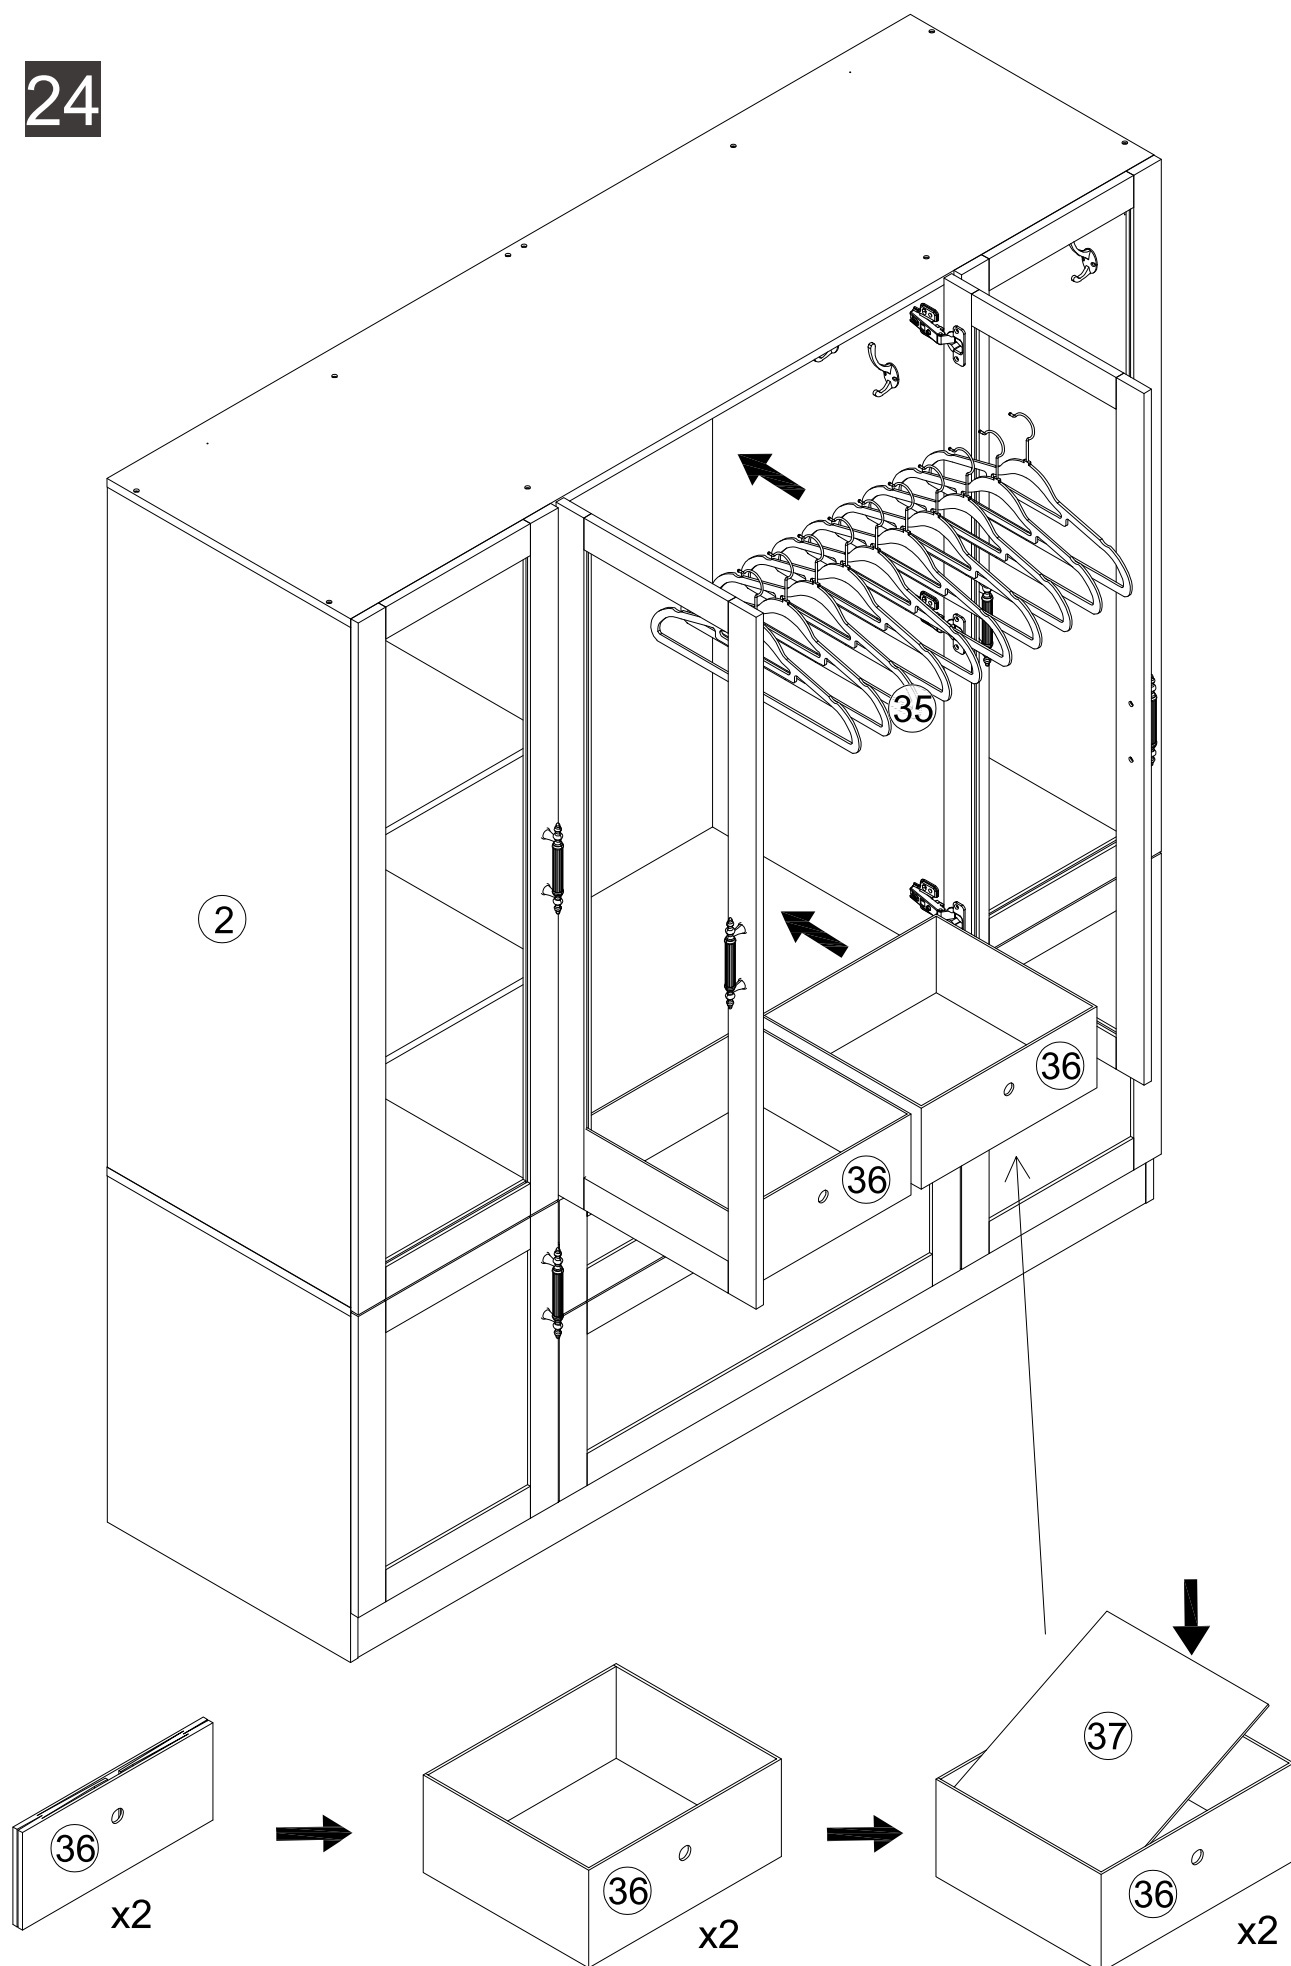

I PRODUCT ASSEMBLY


25

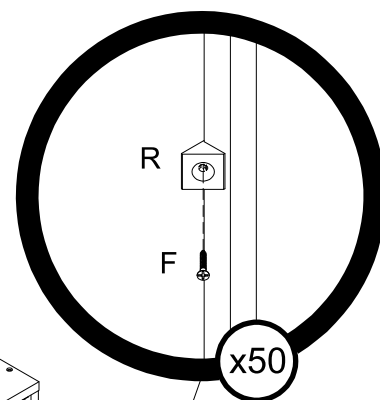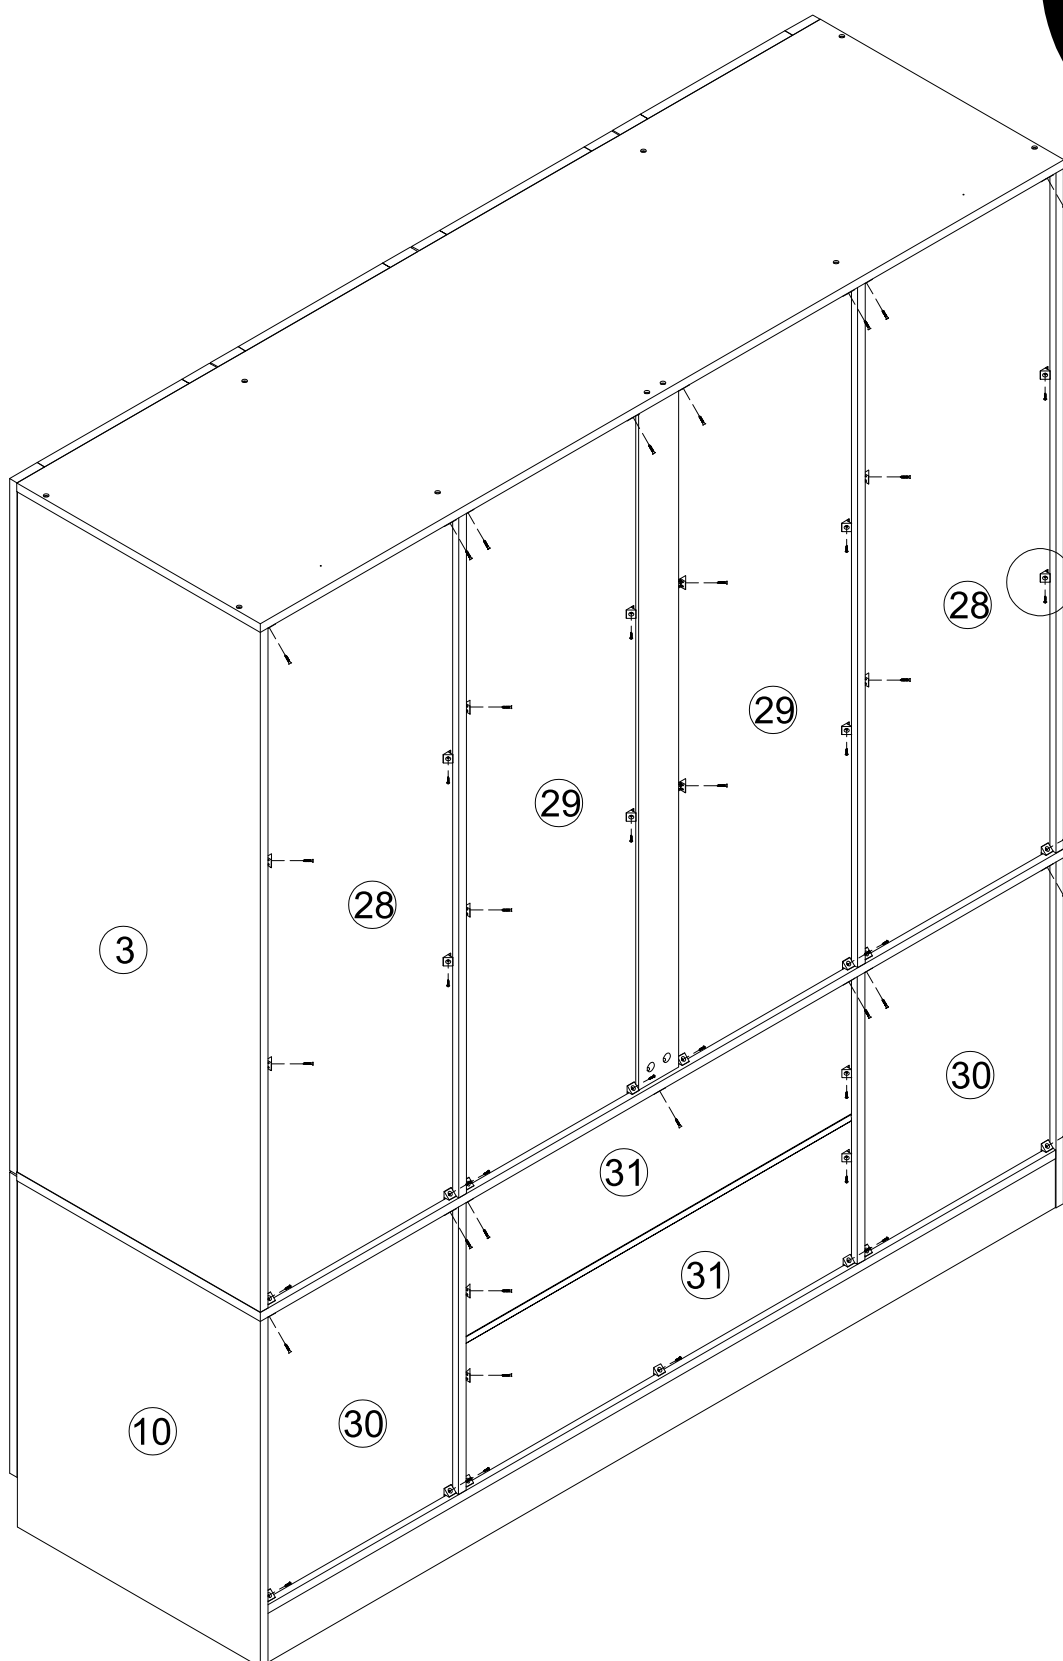

 Fx50 3x14mm	 Rx50
--	--

I PRODUCT ASSEMBLY

26

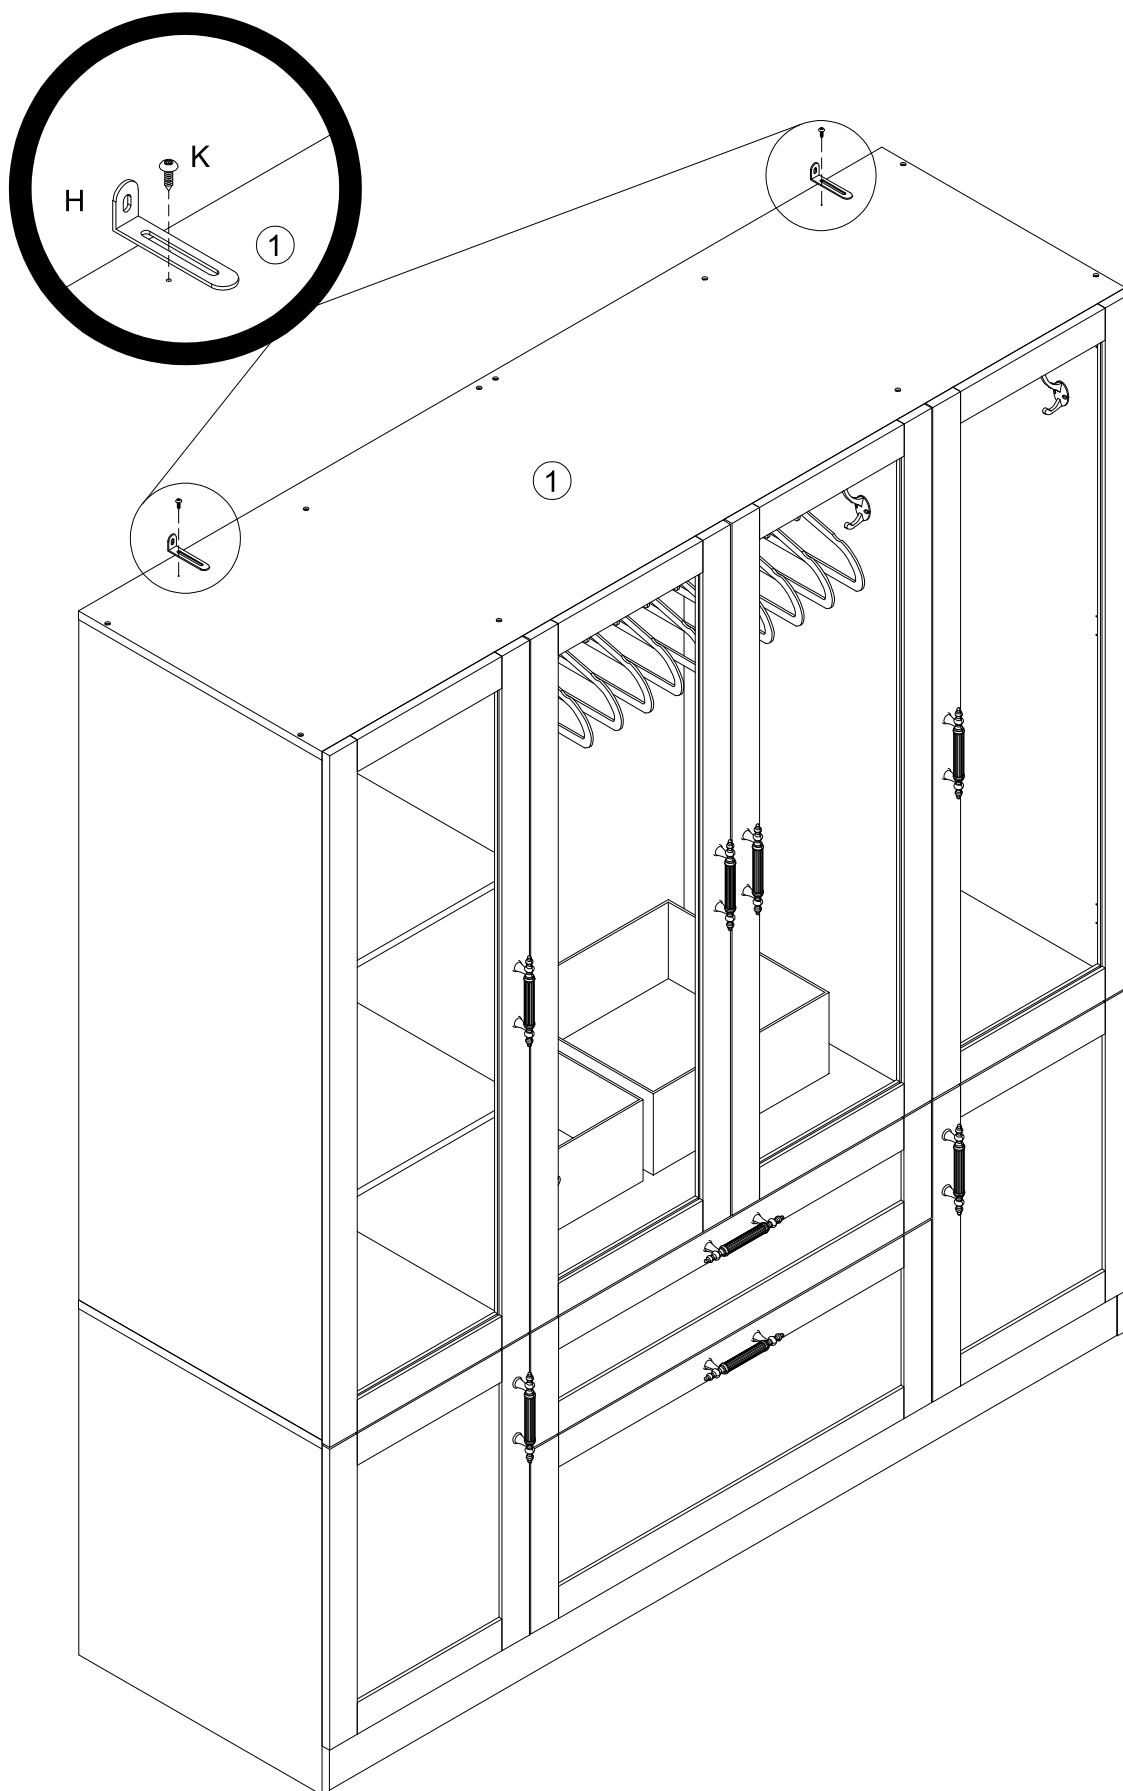


 Kx2
4x12mm

 Hx2

I PRODUCT ASSEMBLY

27

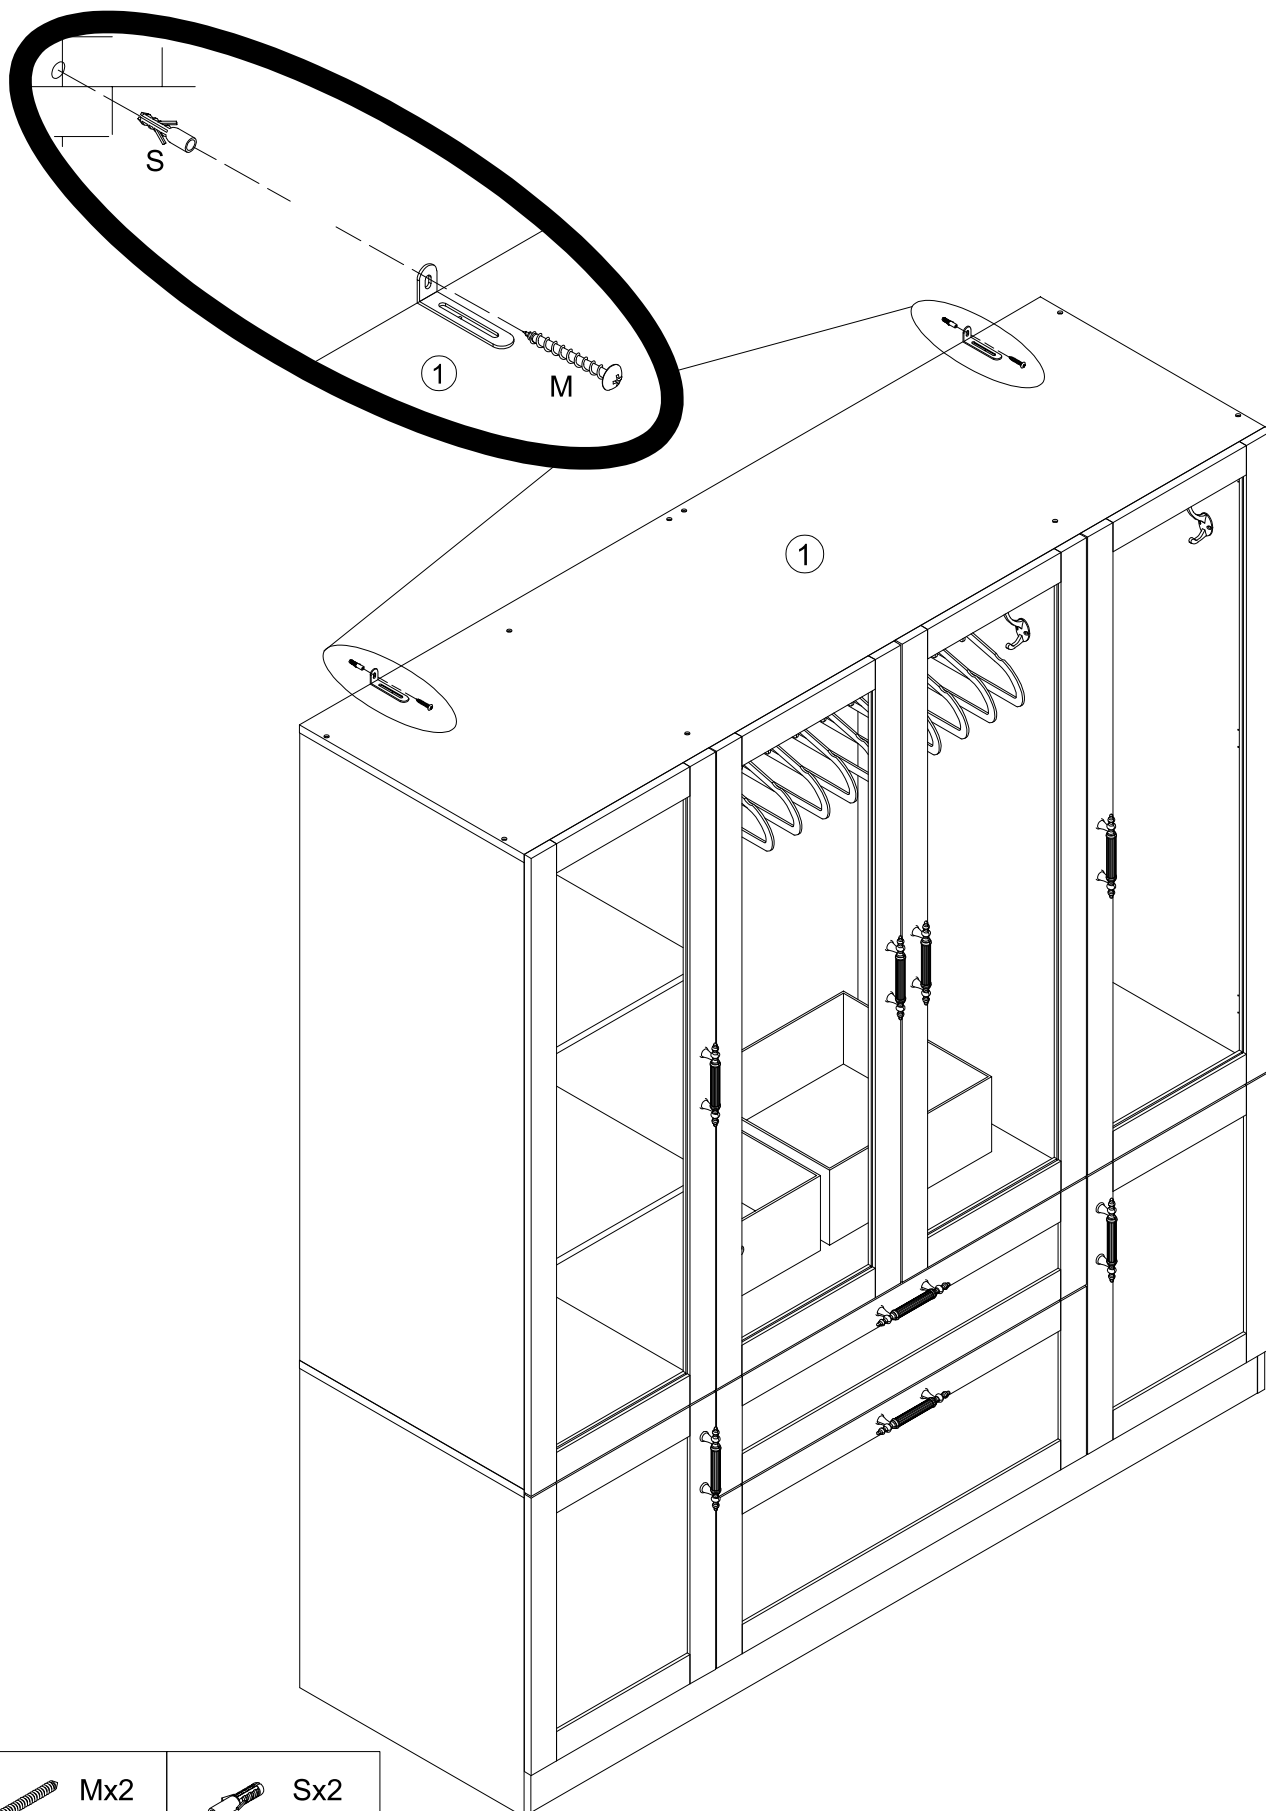


Mx2
4x35mm

Sx2

I PRODUCT ASSEMBLY


28

If there are top cabinets, please assemble them according to the following steps: Step 29 - Step 31.

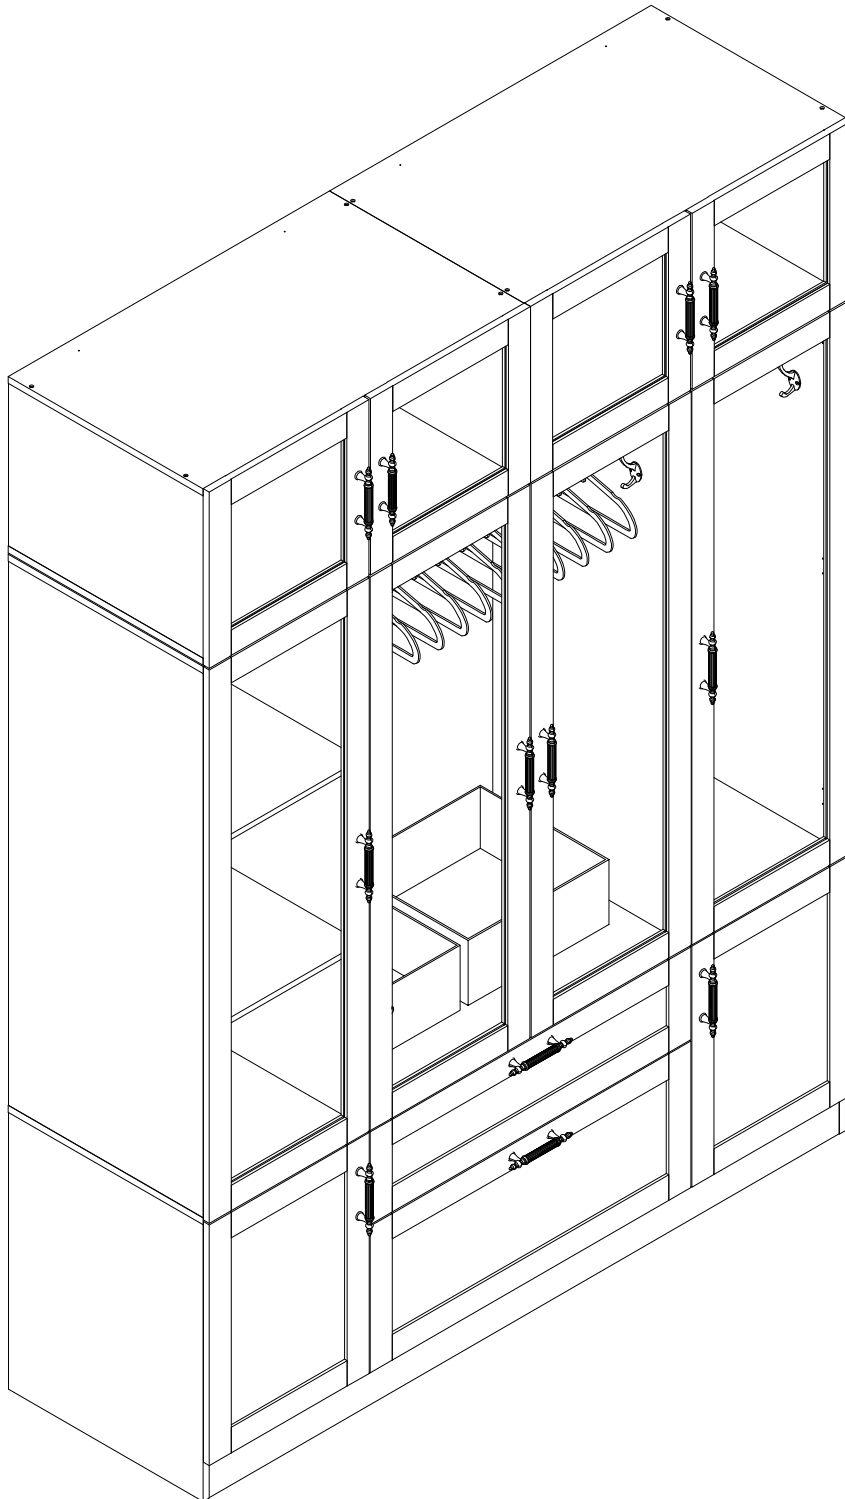


I PRODUCT ASSEMBLY

29

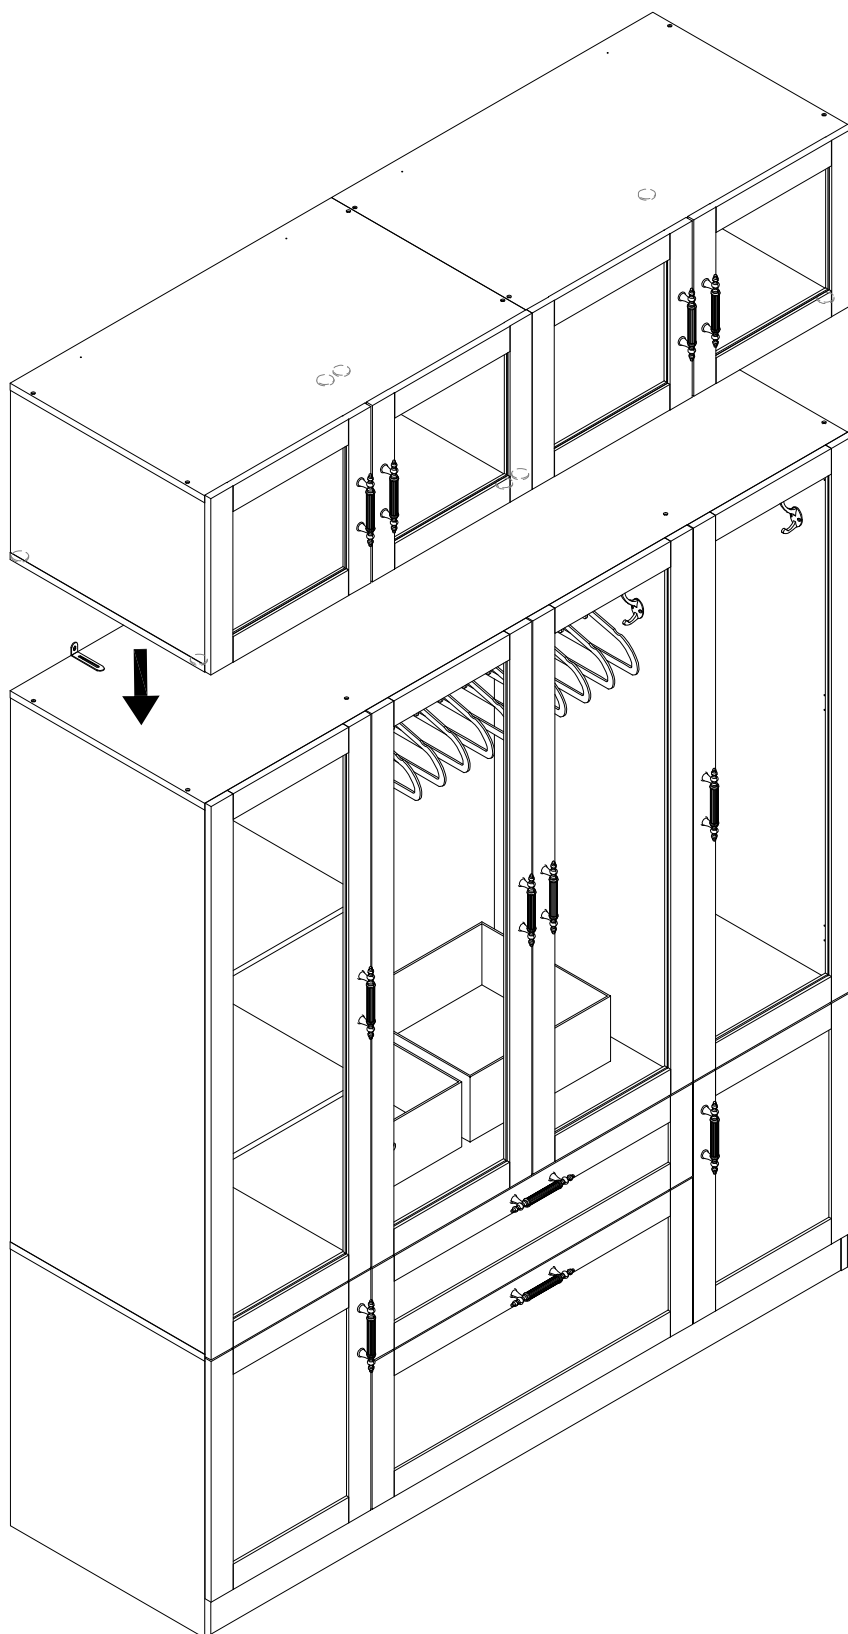

I PRODUCT ASSEMBLY

30

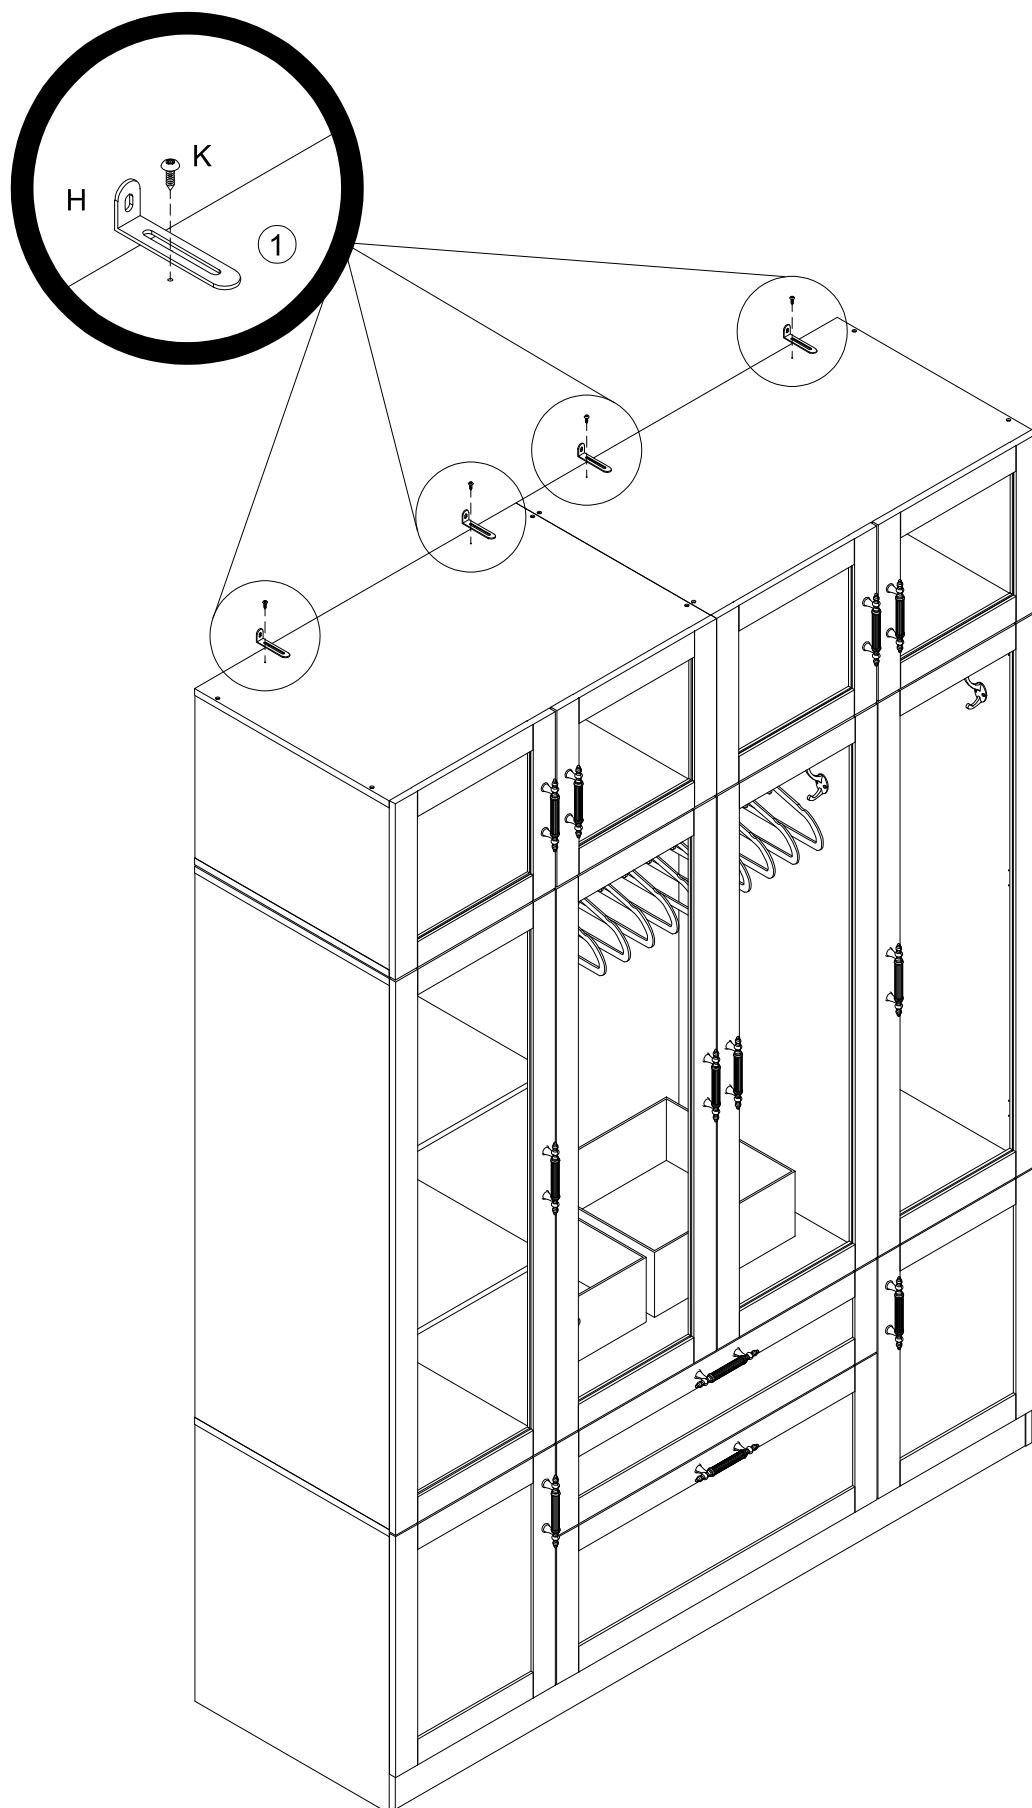

 Kx2 4x12mm	 Hx2
---	---

I PRODUCT ASSEMBLY

31

