


# Assembly Instructions

IMPORTANT NOTE: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE

SUCH AS A RUG OR CARPET TO AVOID THE PARTS  
FROM BEING SCRATCHED.

KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP  
BY STEP.

DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY  
SET-UP.

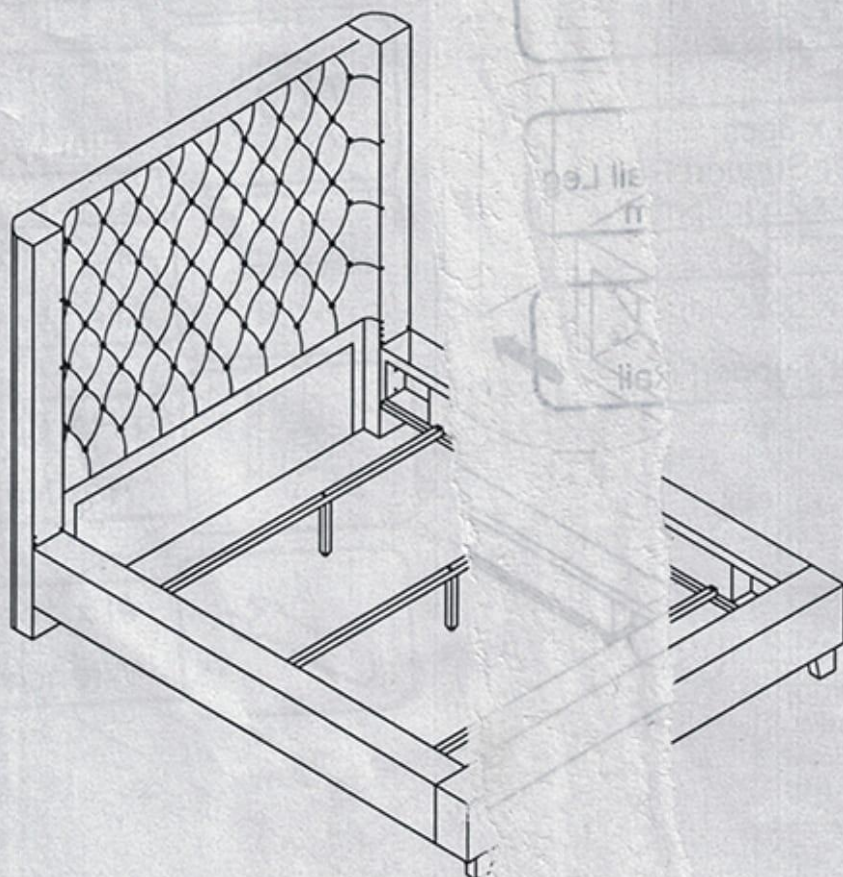



### Parts List



#1 x 1pc  
Headboard



#2 x 2pcs  
Side Rail



#3 x 1pc  
Foot Board



#4 x 2pcs  
FB Leg




#5 x 3pcs  
Center Support Rail Leg  
130 x 25 x 25mm




#6 x 3pcs  
Center Support Rail

### Hardware List



#A x 8pcs  
Bolt 5/16" x 2-1/2"



#B x 8pcs  
Bolt 5/16" x 2"



#C x 3pcs  
Bolt 5/16" x 1-1/2"



#D x 19pcs  
Lock Washer



#E x 11pcs  
Flat Washer Ø19



#F x 8pcs  
Flat Washer Ø22



#G x 1pc  
Allen Wrench M5




#H x 6pcs  
Hex Nut




#I x 1pc  
Wrench



#A x 2pcs  
#D x 2pcs  
#E x 2pcs

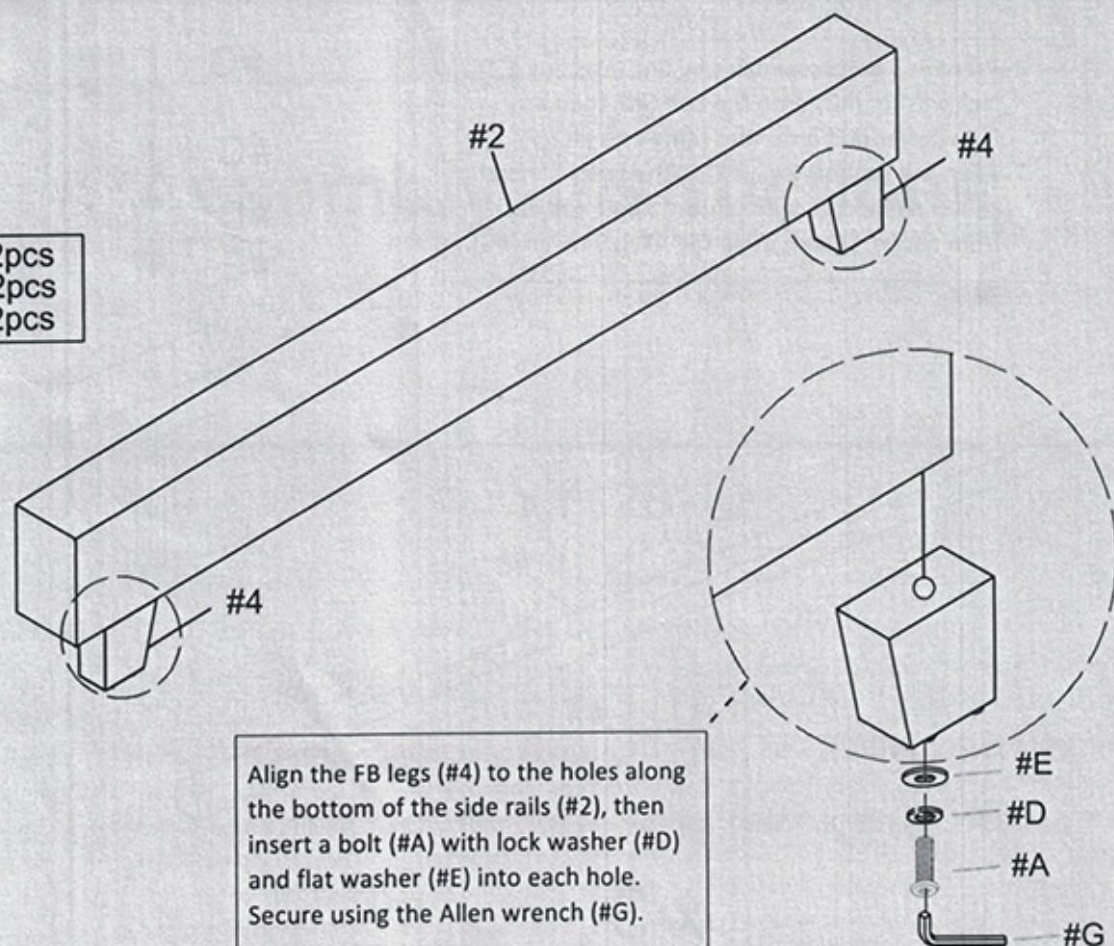

#B x 8pcs  
#D x 8pcs  
#F x 8pcs

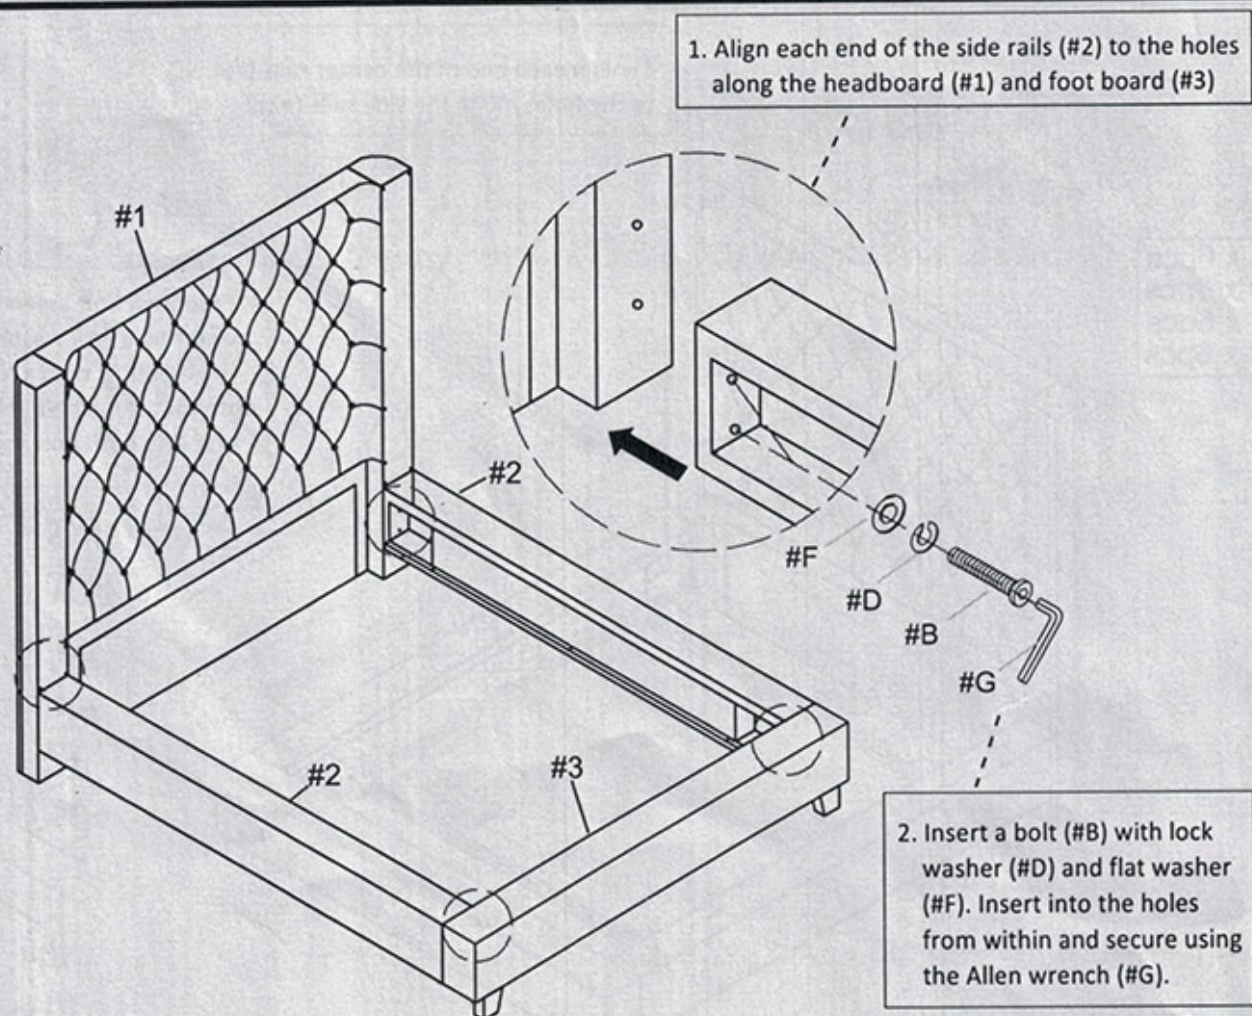




1. Prepare 3 bolt assemblies by first inserting a lock washer (#D) onto the bolt (#C) then a flat washer (#E) onto that same bolt (#C).
2. Align the support legs (#5) to the holes along the center support rail (#6). Insert a bolt into each hole from above. Secure using the Allen wrench (#G).

#C x 3pcs  
#D x 3pcs  
#E x 3pcs

#G  
#C  
#D  
#E

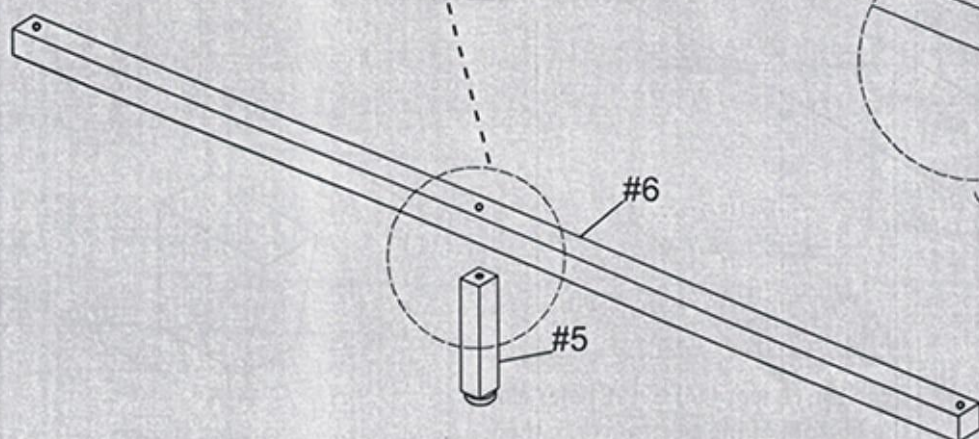


x 3

1. Align each end of the center rails (#6) to the holes along the side rails (#2).

#A x 6pcs  
#D x 6pcs  
#E x 6pcs  
#H x 6pcs

2. Prepare 8 bolt assemblies by first inserting a lock washer (#D) onto the bolt (#A) then a flat washer (#E) onto that same bolt (#A). Insert a bolt into each end and secure.

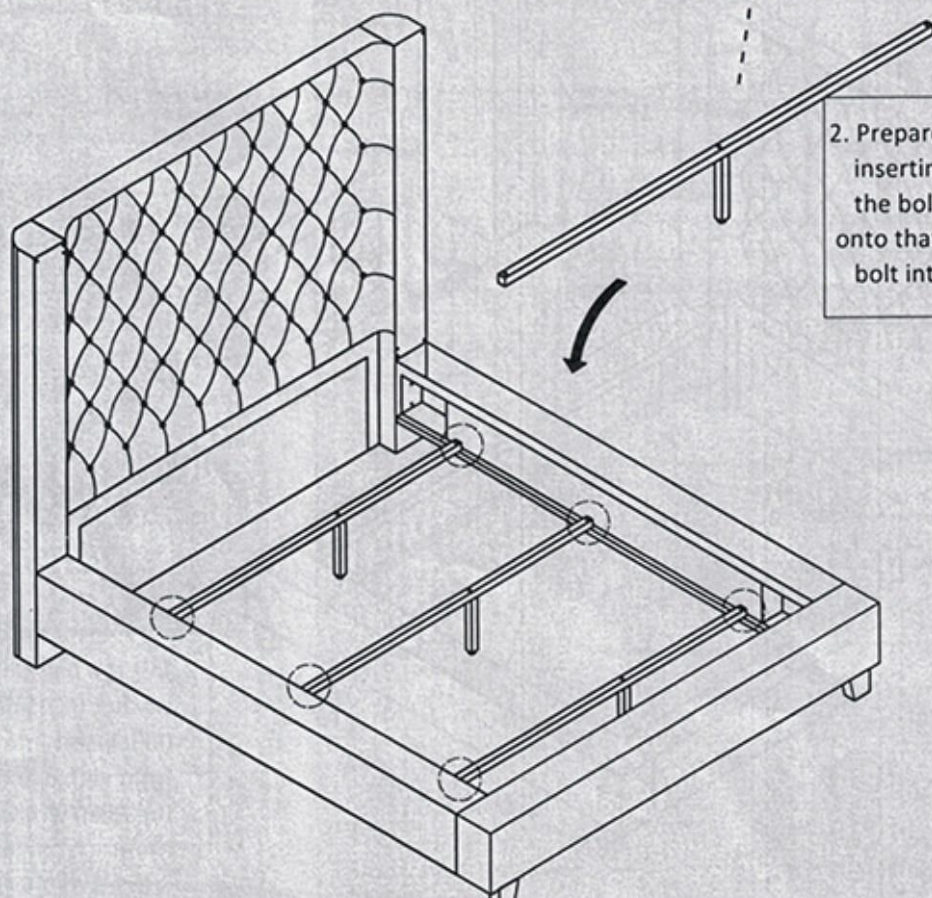

#G  
#A  
#D  
#E  
#H  
#I