



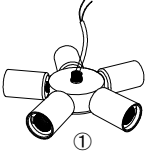


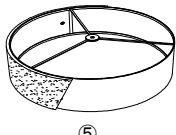

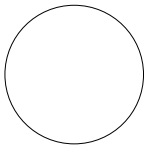



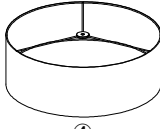


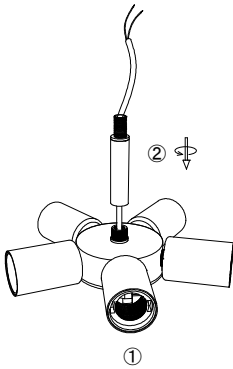
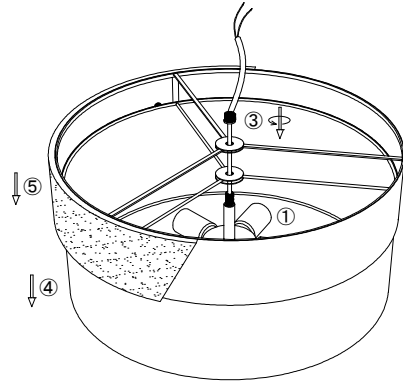


<p>①</p>  <p>light fixture 1pcs</p>	<p>④</p>  <p>fabric lampshade 1pcs</p>	<p>⑦ threaded rod</p> 	<p>⑧</p>  <p>short tube 1pcs</p>	<p>⑩ canopy 1pcs</p> 	 X 1PCS	
<p>②</p>  <p>hanging tube 1pcs</p>	<p>⑤</p>  <p>metal lampshade 1pcs</p>	<p>⑥ long tube 4pcs</p> 	<p>⑨</p>  <p>bottom plate 1pcs</p>	<p>⑪ cap nut 2pcs</p> 	 X 1PCS	
						 X 3PCS
						 X 3PCS
						 X 3PCS
						 X 3PCS




1. Rotate to install the tube ② to the fixture ①.




Please operate with gloves to avoid leaving stains on the lampshade.

2. Let the wire of the fixture ① go through the fabric lampshade ④ and metal lampshade ⑤ and threaded rod ③, rotate rod ③ to fasten all parts together.

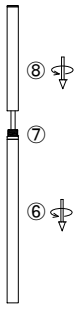


can connect more tubes to get the height you need


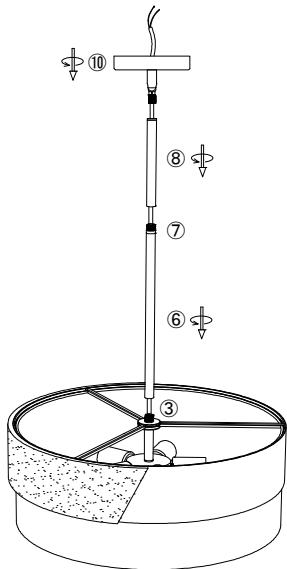


3. Let the wire go through the tube ⑥ and tube ⑧, rotate to fix all parts together. (can connect more tubes to get the height you need)

4. Let the wire go through the canopy ⑩, rotate to fix the canopy ⑩ to the fixture.

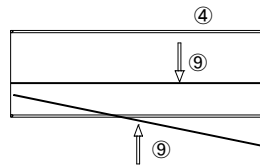

Put the bottom plate ⑨ at an angle into the fabric lampshade ④, then adjust it to level.!

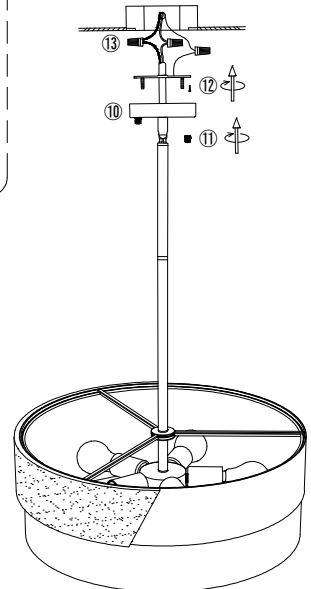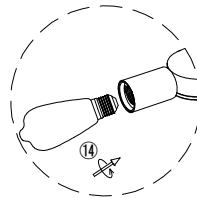

5. Install the bracket to the ceiling junction box with screw ⑫.
 6. Connect the wire to the home line with cap connector ⑬.
 7. Install the fixture to the bracket with cap nut ⑪.
 8. Install the bulb ⑭ and bottom plate ⑨.

D9081M-5

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !