


MONTEREY DEEP SEATING 3-SEATER SOFA (MT65)

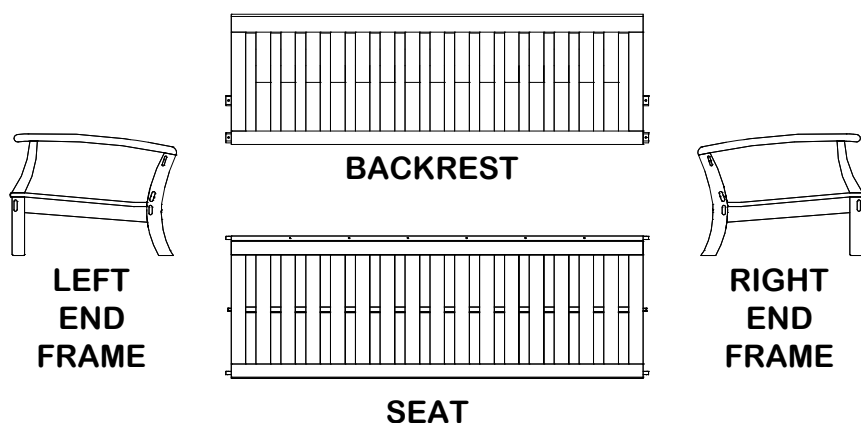

Hardware Pack:

- Dowel A - 30 mm length (4 + 1 spare)
- Dowel B - 45 mm length (2 + 1 spare)
- Dowel C - 58 mm length (2 + 1 spare)
- Dowel D - 58 mm length (4 + 1 spare)
- Stainless Steel Screws (6 pcs)
- 2 Bottles of Wood Glue
- Stick for Glue Application
- Wooden Block
- Sandpaper

Required Tools :

- Hammer
- Rubber Hammer
- Screwdriver


Note: Two people are recommended for the safe assembly of the Monterey Deep Seating 3-Seater Sofa

Step 1:

Unpack and place components on a clean, soft, flat surface to avoid scratching or marring the surface during assembly. Identify and match the components and hardware pack.

Step 2:


Before assembling the components in each of the steps below, please apply a thin coat of wood glue on each tenon (male) and the surface area around the tenon. Take care not to apply glue to exposed wood surface. Wipe off excess glue with a damp cloth.

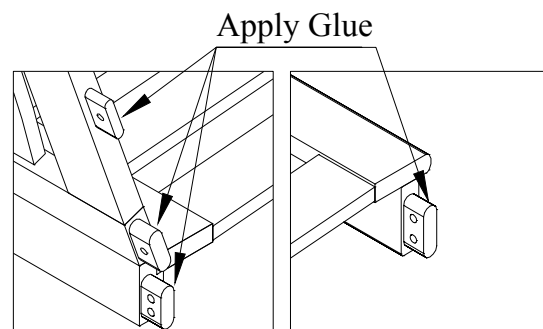

(Two people are recommended for the safe assembly of Steps 3 and 4)

Step 3:


- Place the seat on top of the table.
- Gently insert the metal dowels on the bottom of the backrest into the holes on top of the seat (label E with corresponding label E).
- Gently insert the tenons of the backrest and seat into the mortises of the corresponding end frame.
- Assemble the components so that matching letters are aligned (i.e. label A with corresponding label A).

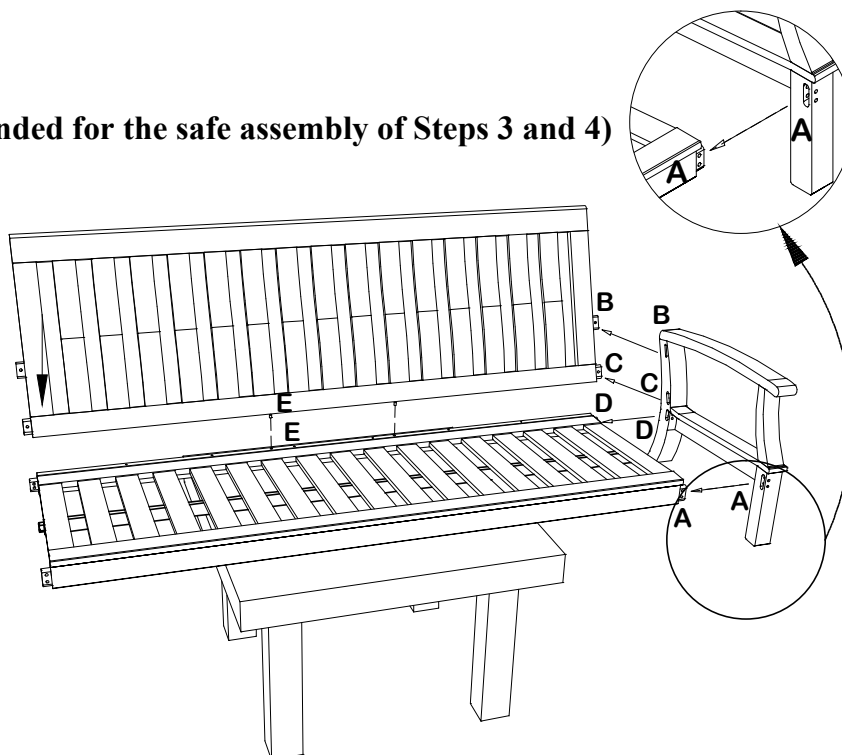

MONTEREY DEEP SEATING 3-SEATER SOFA (MT65)


Step 4:

- Insert the tenons of the connected pieces into the mortises of the other end frame.
- Use a rubber hammer to drive the mortises and tenons together until all joints fit snugly.

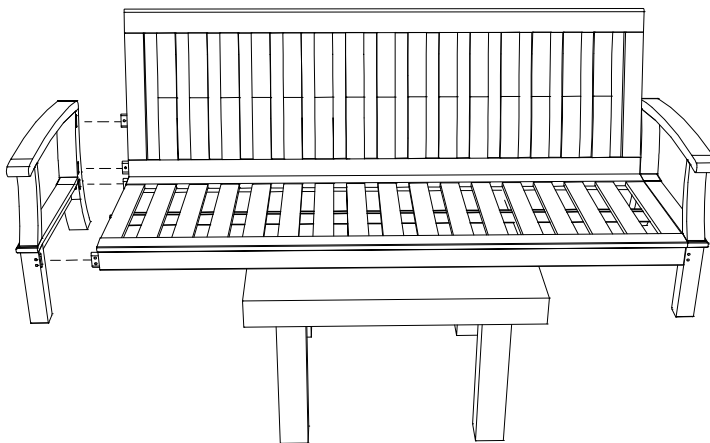

Step 5:

- Make sure all joints are tight before inserting the dowels.
- Locate dowels A, B, C and D from the hardware pack and match them to components A, B, C and D of the chair.
- Apply glue around the tapered ends of the dowels and insert using a metal-head hammer.
- Drive the dowels into the tenons until they are flush with the wood surface, taking care not to mar or dent the surface (you may consider placing the enclosed wooden block between the dowel head and hammer to prevent marring the wood).
- If dowels still protrude after hammering simply saw off the ends and use the enclosed sandpaper to smooth the top.
- Wipe off excess glue with a damp cloth.

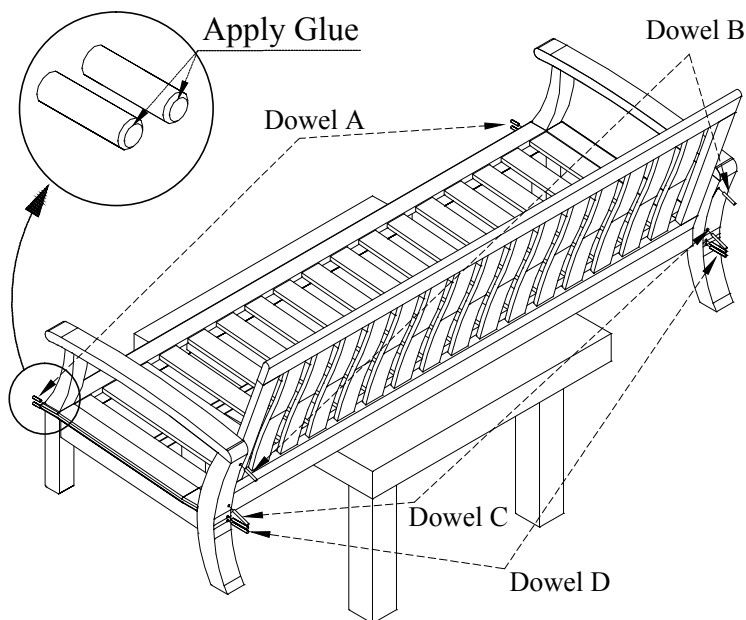

Step 6:

- Turn the sofa over and place on the table as shown here.
- Using a proper screwdriver, attach the backrest to the seat with the enclosed screws.

