


ASSEMBLY INSTRUCTIONS

266-306 266-307/308

TOOLS REQUIRED:

Allen wrench (supplied, part # D,H)
Phillips Screwdriver (Not Provided)

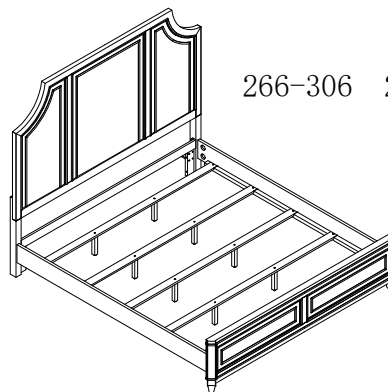

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach stretcher to the side panel with Allen bolt (E), Lock Washer (F) and Flat Washer (G). Tighten all bolts with Allen Wrench (H) as shown in Figure 1

2. Attach the headboard to the headboard base, with Allen bolt (E), Lock Washer (F) and Flat Washer (G). Tighten all bolts with Allen Wrench (H) as shown in Figure 2

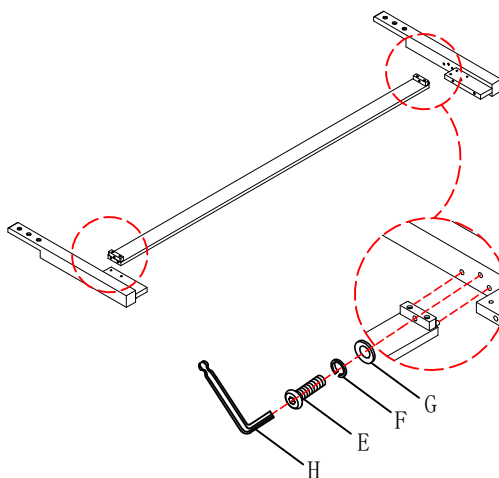


Figure 1

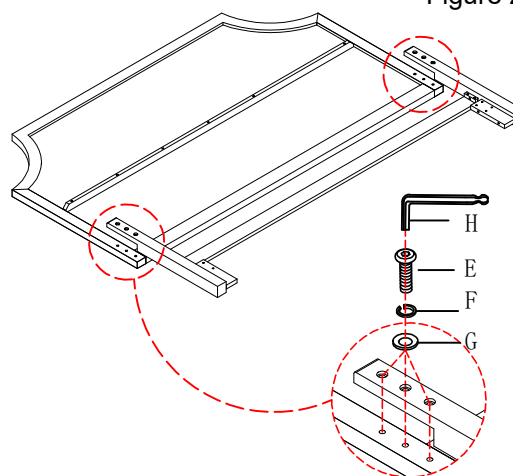


Figure 2

No.	Hardware List 2		Q' ty
A		Screw (#8*1")	10pcs
B		Thread Bolt (Ø5/16"*3 ")	8pcs
C		Curved Slotted Washer (Ø5/16"*12mm)	8pcs
D		Spanner Wrench (Ø12mm*160mmL)	1pc

No.	Hardware List 1		Q' ty
E		Bolt (Ø5/16"x1-3/4")	8pcs
F		Lock Washer (Ø5/16")	8pcs
G		Flat Washer (Ø5/16"*19*1.5mm)	8pcs
H		Allen Wrench (110*60*4mm)	1pc

Thank you for purchasing furniture
from american drew!

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS:

3. Attach the side rail into head panel and foot panel with Thread Bolt (B), tighten the Curved Slotted Washer (C) with Spanner wrench(D).As shown in Figure 3
4. Tighten the center feet on each slat as shown in Figure 4
5. Attach slats to side rails with Screws (A) as shown in Figure 5



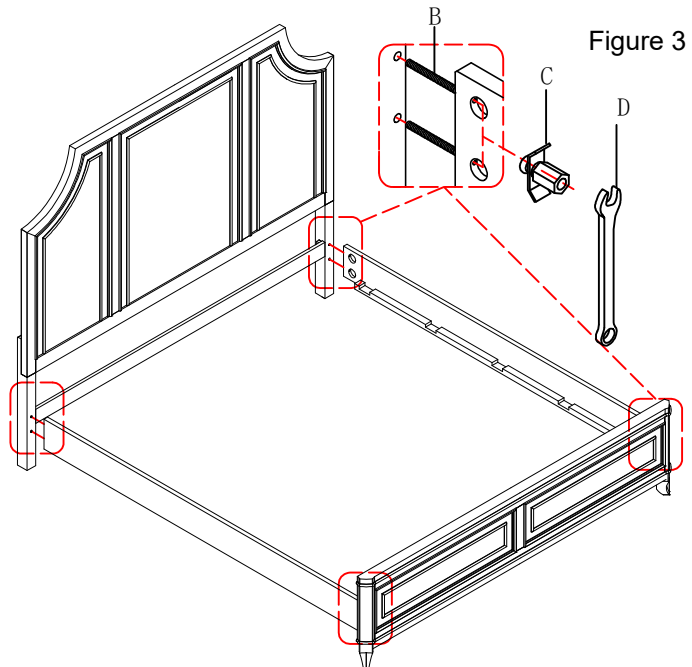


Figure 4

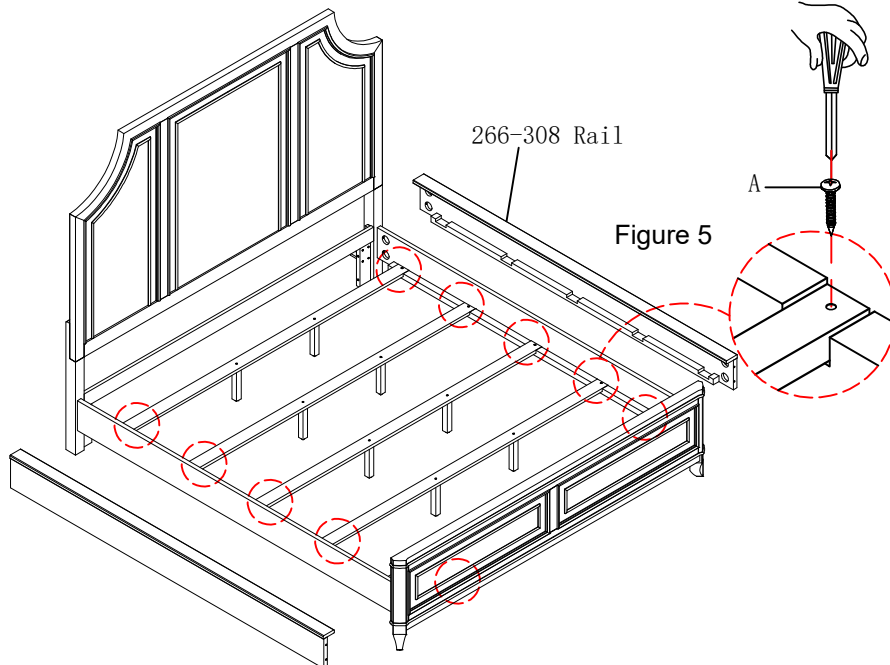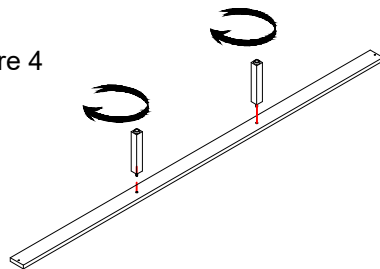

Thank you for purchasing furniture
from american drew!